













Assembly Manual

Accent Chair

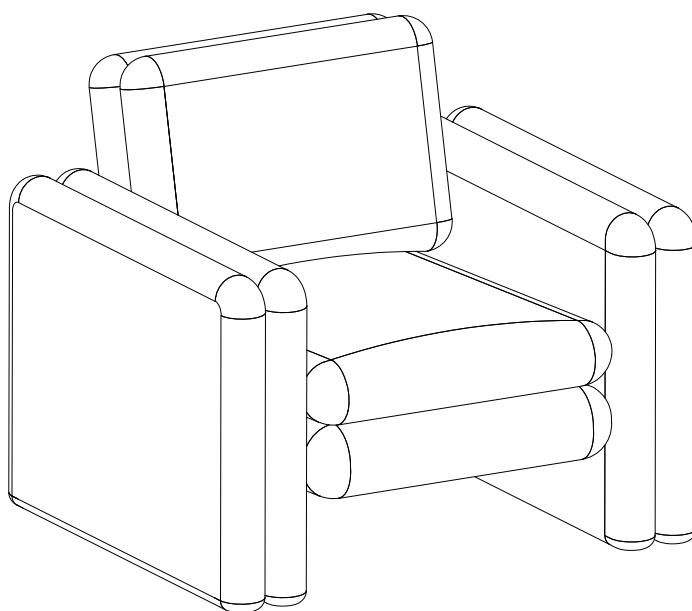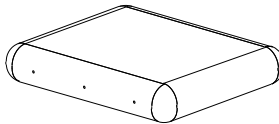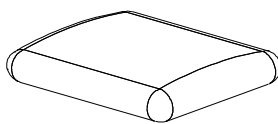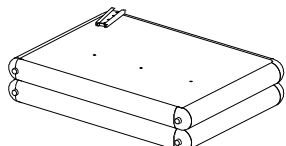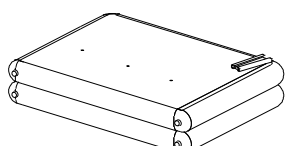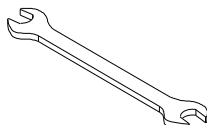

CAUTION

THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.


Ax1  Back	Bx1  Back Cushion	Cx1  Seat	Dx1  Seat Cushion
Ex1  Right Arm	Fx1  Left Arm	Gx6  M8 x 55mm Screw	Hx6  M8 Flat Washer
Ix6  M8 Locknut	Jx1  M12x14mm Wrench		
Extra Hardware   			

Please read through the instructions below to familiarize yourself with the parts and steps before assembly.


Note: Do NOT use power tools for assembly.

ASSEMBLY INSTRUCTIONS


- 1 Attach the Screws (G) to the holes on the Left Arm (F) and Right Arm (E).
Fully tighten.

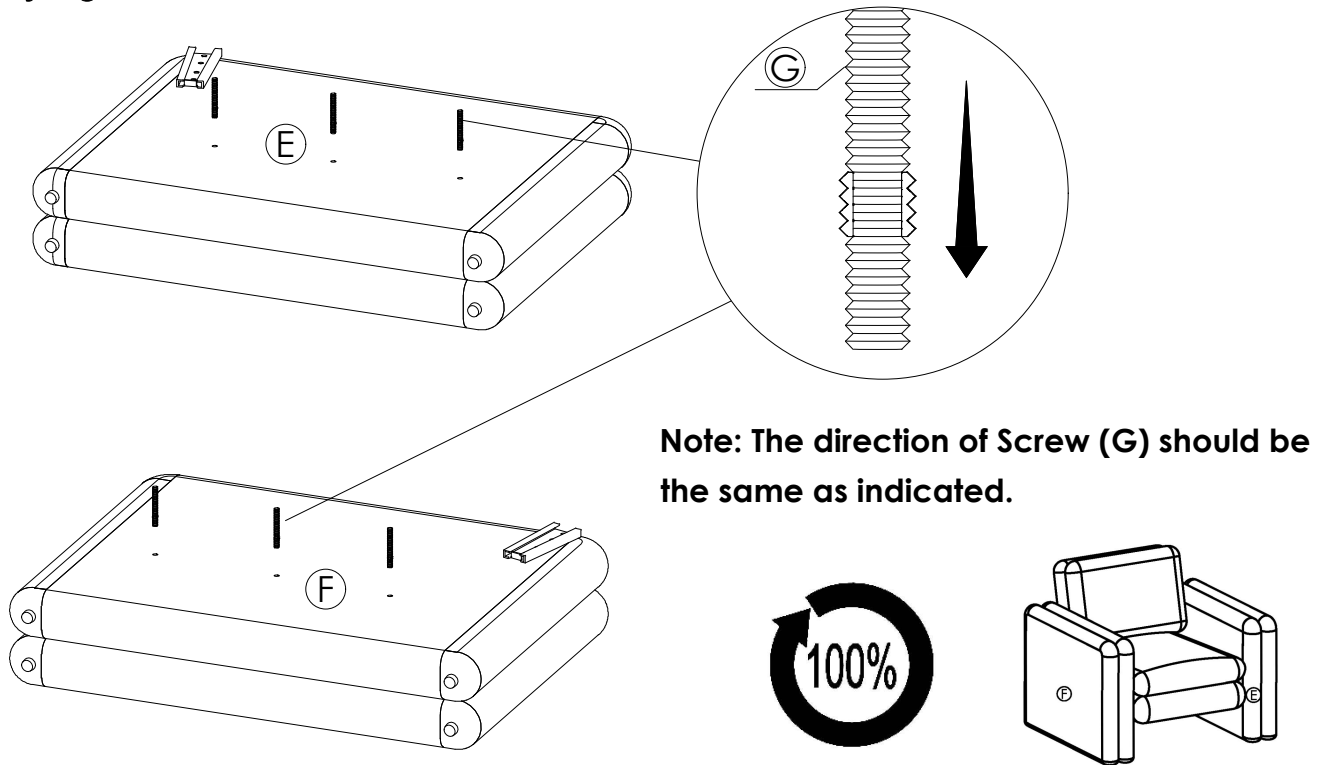


- 2 Slide the Seat (C) into the Screws (G) on the Right Arm (E).

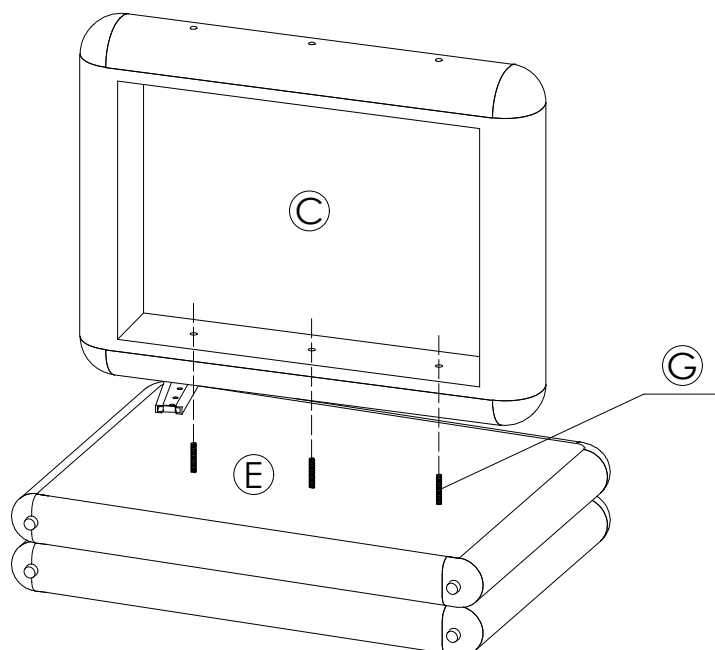


- 3** Attach the Seat (C) to the Right Arm (E), using Flat Washers (H), Locknuts (I), and Wrench (J). **Do not fully tighten yet.**

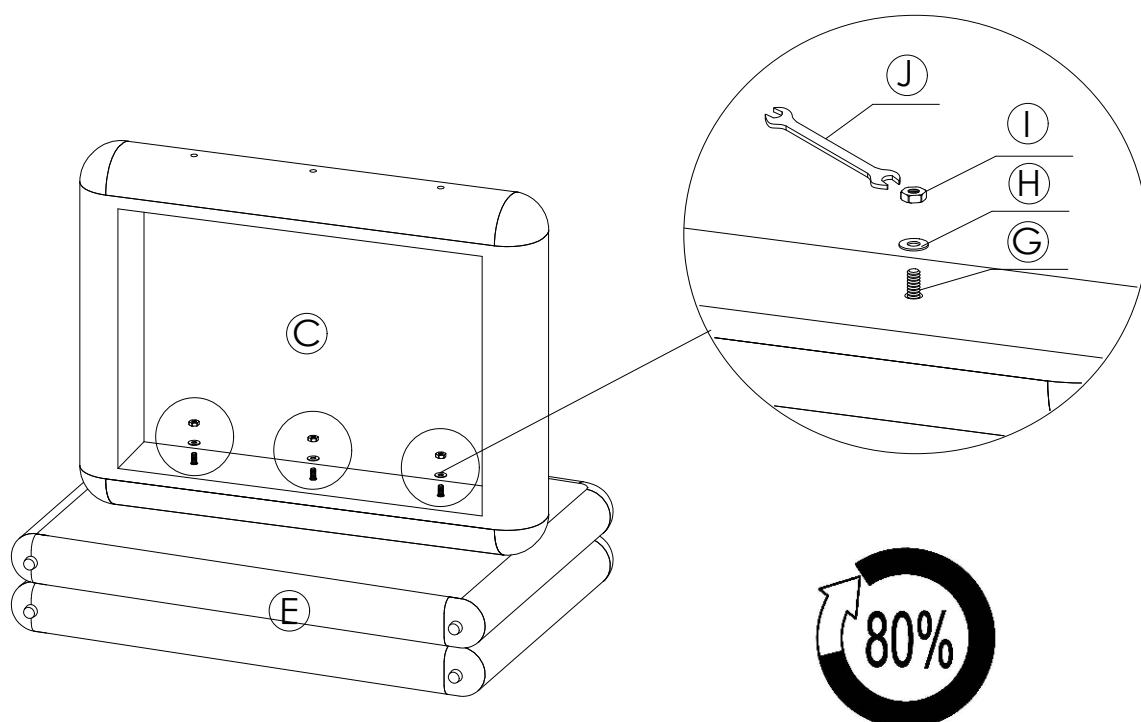


- 4** Slide the assembled part from Step 3 into the Screws (G) on the Left Arm (F).

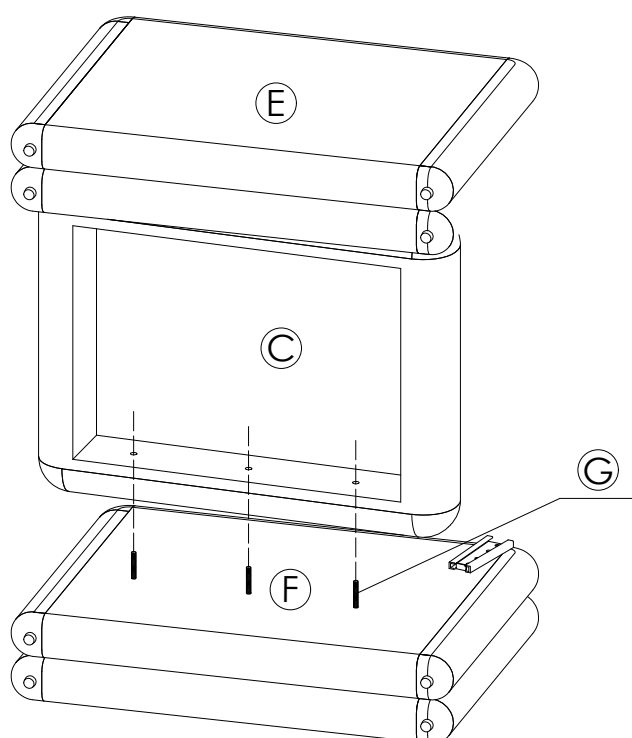


- 5** Attach the Seat (C) to the Left Arm (F), using Flat Washers (H), Locknuts (I), and Wrench (J). **Do not fully tighten yet.**

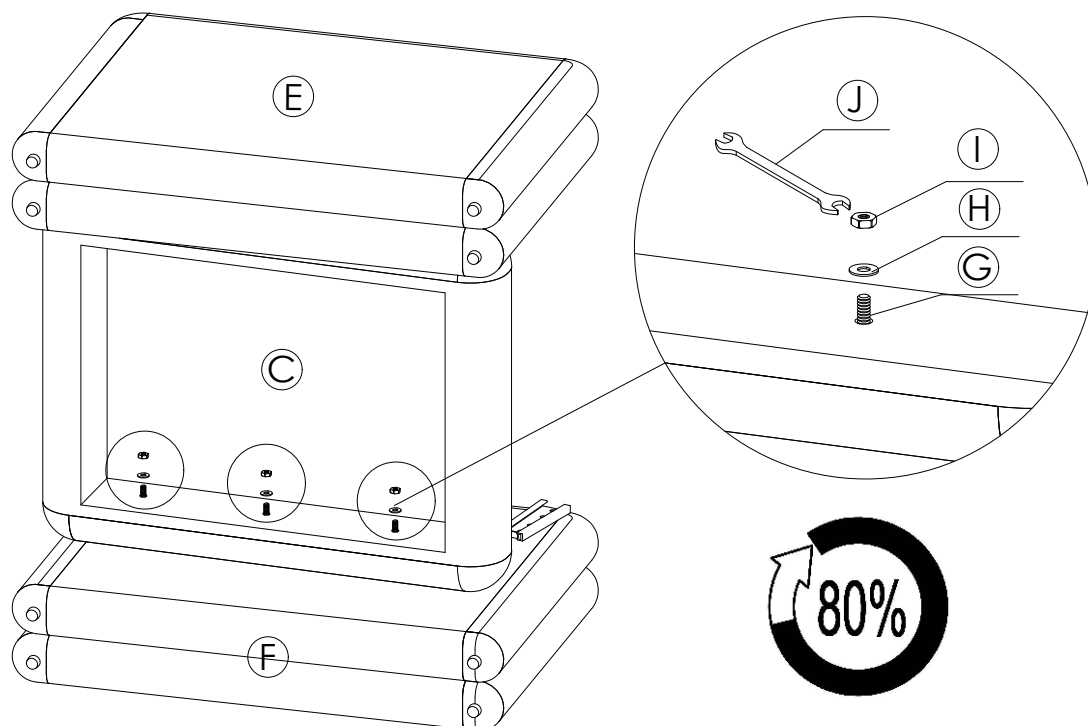


- 6** Put the Seat Cushion (D) on the assembled chair frame from Step 5. Note: The side with the zipper is the back side.

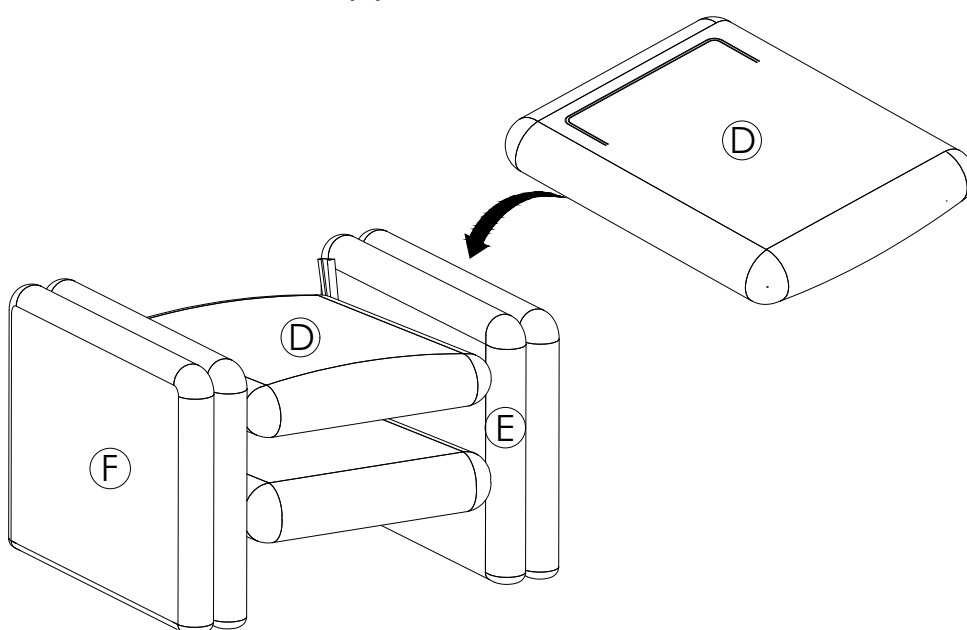


- 7** Slide the Back (A) into the metal connectors on the Left Arm (F) and the Right Arm (E). Push down the back firmly until each side is locked into place.

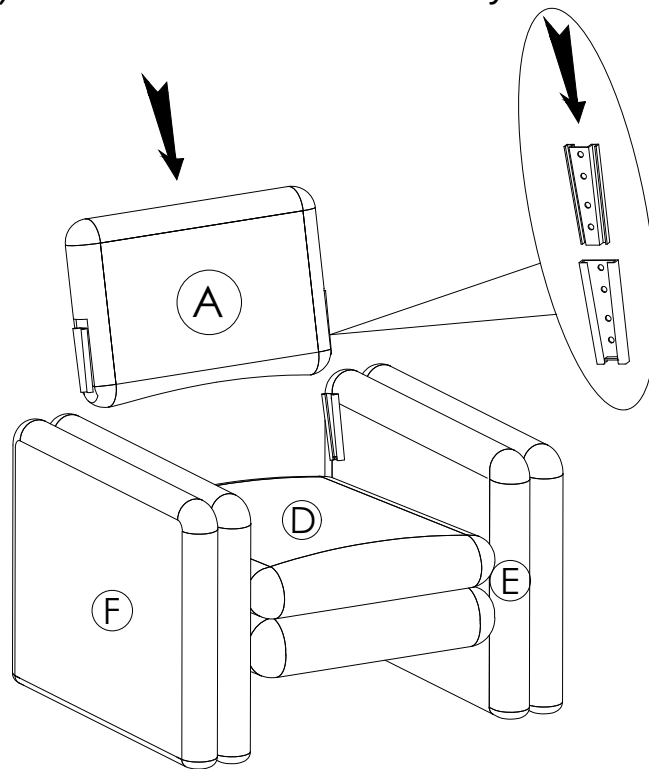

- 8** Fully tighten all six Locknuts (I), using Wrench (J).

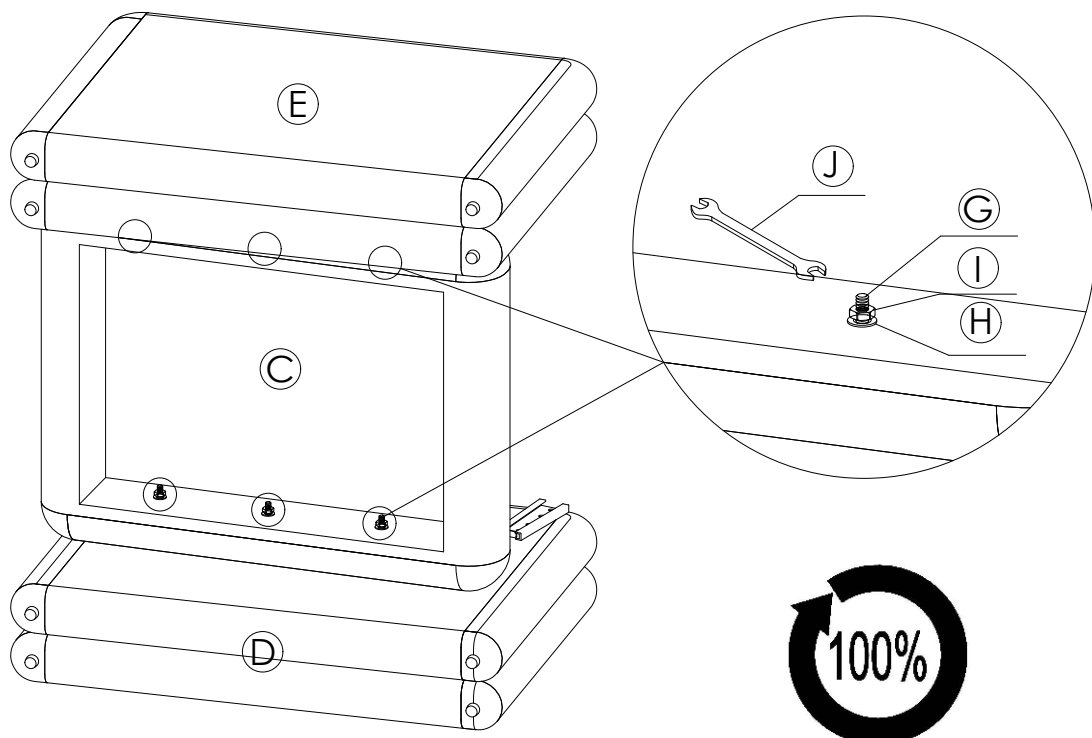

- 9** Put the Back Cushion (B) on the Seat Cushion (D).

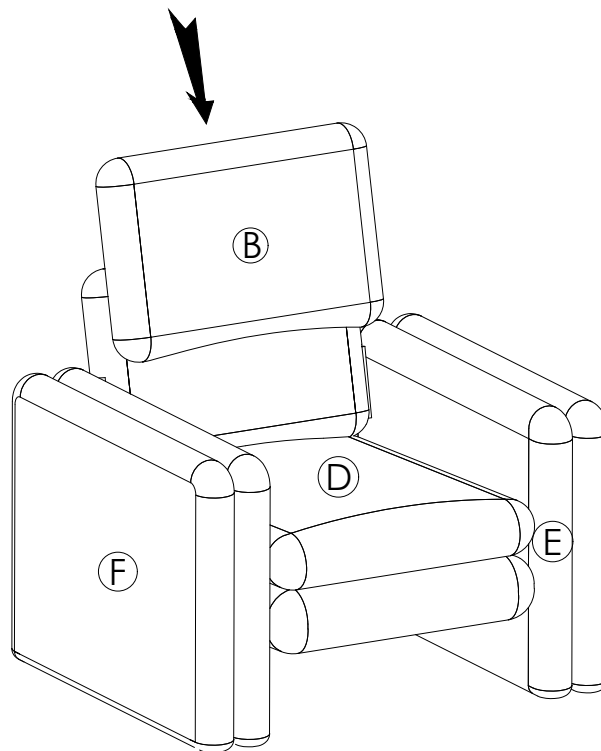

- 10** Assembly complete. Enjoy.

