


# ASSEMBLY GUIDE & CARE INFORMATION

FOR YOUR FULL SIZE BED

70700-F

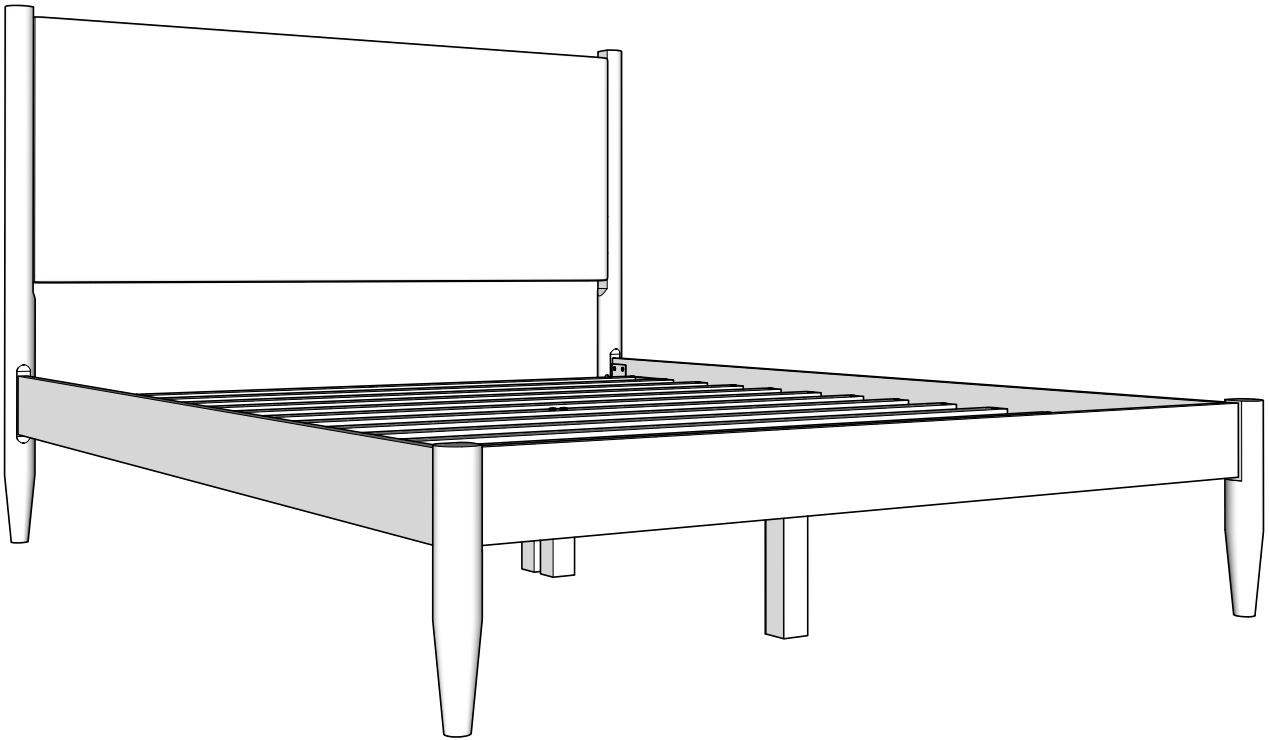

For the most up-to-date assembly instructions, scan the QR code below.

*We continuously improve our guides based on customer feedback!*



**Most customers  
assemble under  
60 minutes**



**Assembly is  
easiest with 2  
people**



**Required tool  
(not provided)  
#2 Phillips Screwdriver**

# Important Assembly & Safety Notes

1. **Do not assemble or use this product if any parts are missing, damaged, or broken.**  
Contact customer support for factory replacement parts before proceeding.
2. **Carefully check all packing materials before discarding the carton.**  
Small hardware may have come loose during shipment.
3. **Identify and count all parts and hardware before starting.**  
Compare each item with the parts and hardware list in the instructions.
4. **Follow the assembly steps exactly as shown.**  
Improper assembly may result in personal injury or property damage.
5. **Some parts may be heavy or have sharp edges.**  
Use caution when handling components.
6. **Secure all bolts firmly before use.**  
Do not use the bed until all fasteners are fully tightened.
7. **Recheck and tighten all bolts every 90 days.**  
This helps maintain long-term stability and prevents loosening over time.
8. **Do not drag or push the bed frame.**  
Always use two people to lift and reposition the bed. Dragging may damage the legs, slats, or center support.
9. **Use floor protection on non-carpeted surfaces.**  
An area rug or furniture pads are recommended (not included).
10. **Do not use or store this product near open flames or flammable chemicals.**
11. **Keep these instructions for future reference and maintenance.**

---


## Need a replacement part?

Please contact us through the website used for your purchase.  
To help us resolve your request quickly, include:

- Clear photos of the issue
- The part number and quantity needed

**IMPORTANT:** Seller and Manufacturer disclaim all and any liability for property damage, personal injury, or loss, direct, indirect, or incidental, resulting from the incorrect assembly, inadequate maintenance, improper use, or neglect of this product.


# Bed Parts Check List

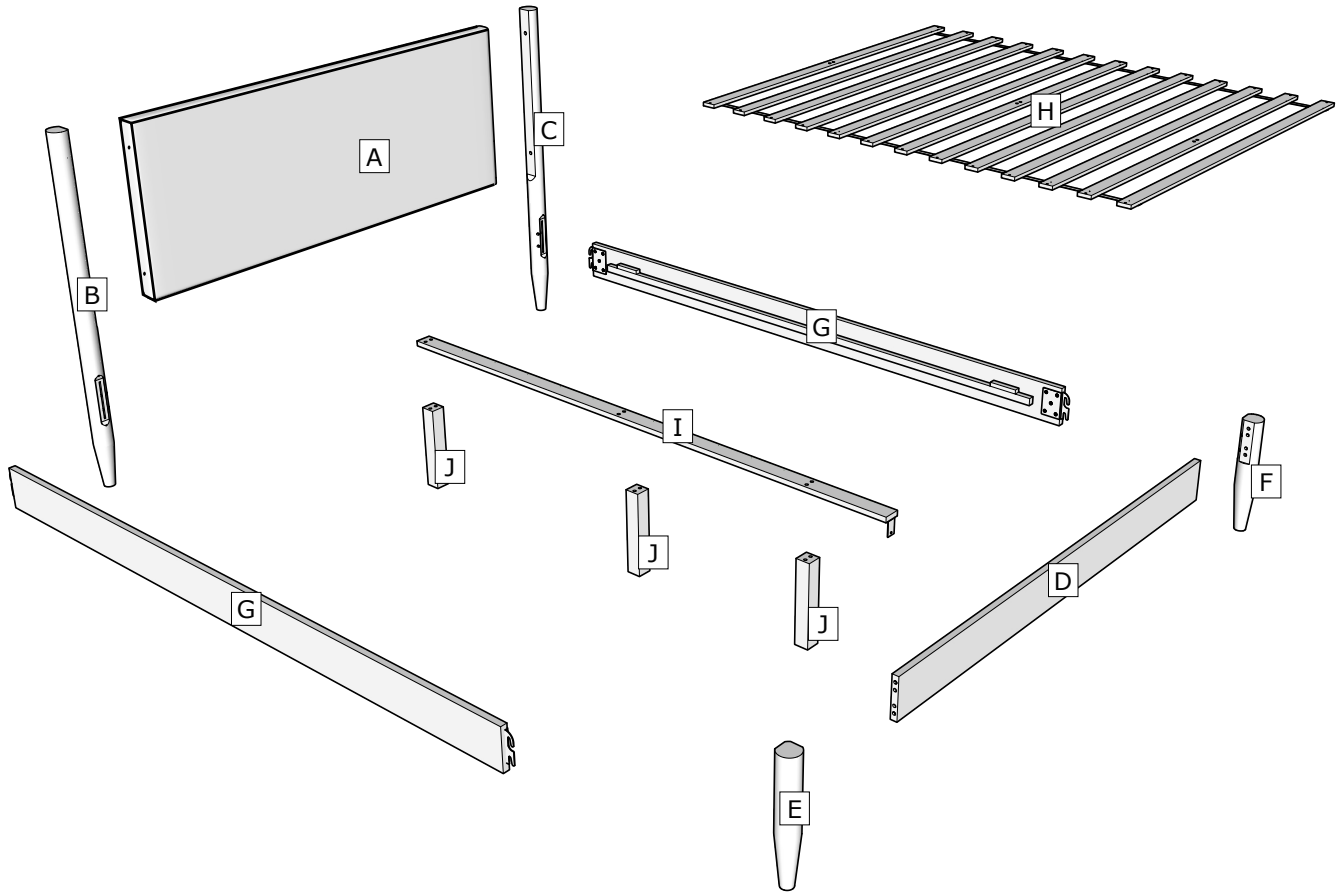


|   |                      |     |
|---|----------------------|-----|
| A | Headboard            | x1  |
| B | Headboard Post Left  | x1  |
| C | Headboard Post Right | x1  |
| D | Footboard            | x1  |
| E | Footboard Leg Left   | x1  |
| F | Footboard Leg Right  | x1  |
| G | Side Rail            | x2  |
| H | Bed Slat             | x13 |
| I | Center Rail          | x1  |
| J | Center Support Leg   | x3  |

**Need a replacement screw?**



Refer to the Hardware Check List below for size specifications.


|   |                         |     |             |                                                                                       |
|---|-------------------------|-----|-------------|---------------------------------------------------------------------------------------|
| K | Bolt                    | x4  | M6 x 40mm   |    |
| L | Bolt                    | x6  | M6 x 60mm   |    |
| M | Bolt                    | x4  | M6 x 50mm   |    |
| N | Spring Washer           | x8  | M6          |    |
| O | Flat Washer             | x4  | M6          |    |
| P | Screw                   | x1  | M3.5 x 16mm |    |
| Q | Screw                   | x26 | M4 x 32mm   |   |
| R | Plastic Dowel           | x4  | 25mm        |  |
| S | Ball End Hex Key Wrench | x1  | M4          |  |

Required Tool  
**( Not Provided )**  
 #2 Phillips Screwdriver




# Bed Assembly Step 1


|                                                                                                                         |                                                                                                                         |                                                                                                                                    |                                                                                                                         |
|-------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|
| <b>A</b> Headboard<br>x1<br>           | <b>B</b> Headboard Post Left<br>x1<br> | <b>C</b> Headboard Post Right<br>x1<br>          | <b>M</b> Bolt<br>x4<br><br>M6 x 50mm |
| <b>N</b> Spring Washer<br>x4<br><br>M6 | <b>O</b> Flat Washer<br>x4<br><br>M6   | <b>S</b> Ball End Hex Key Wrench<br>x1<br><br>M4 |                                                                                                                         |

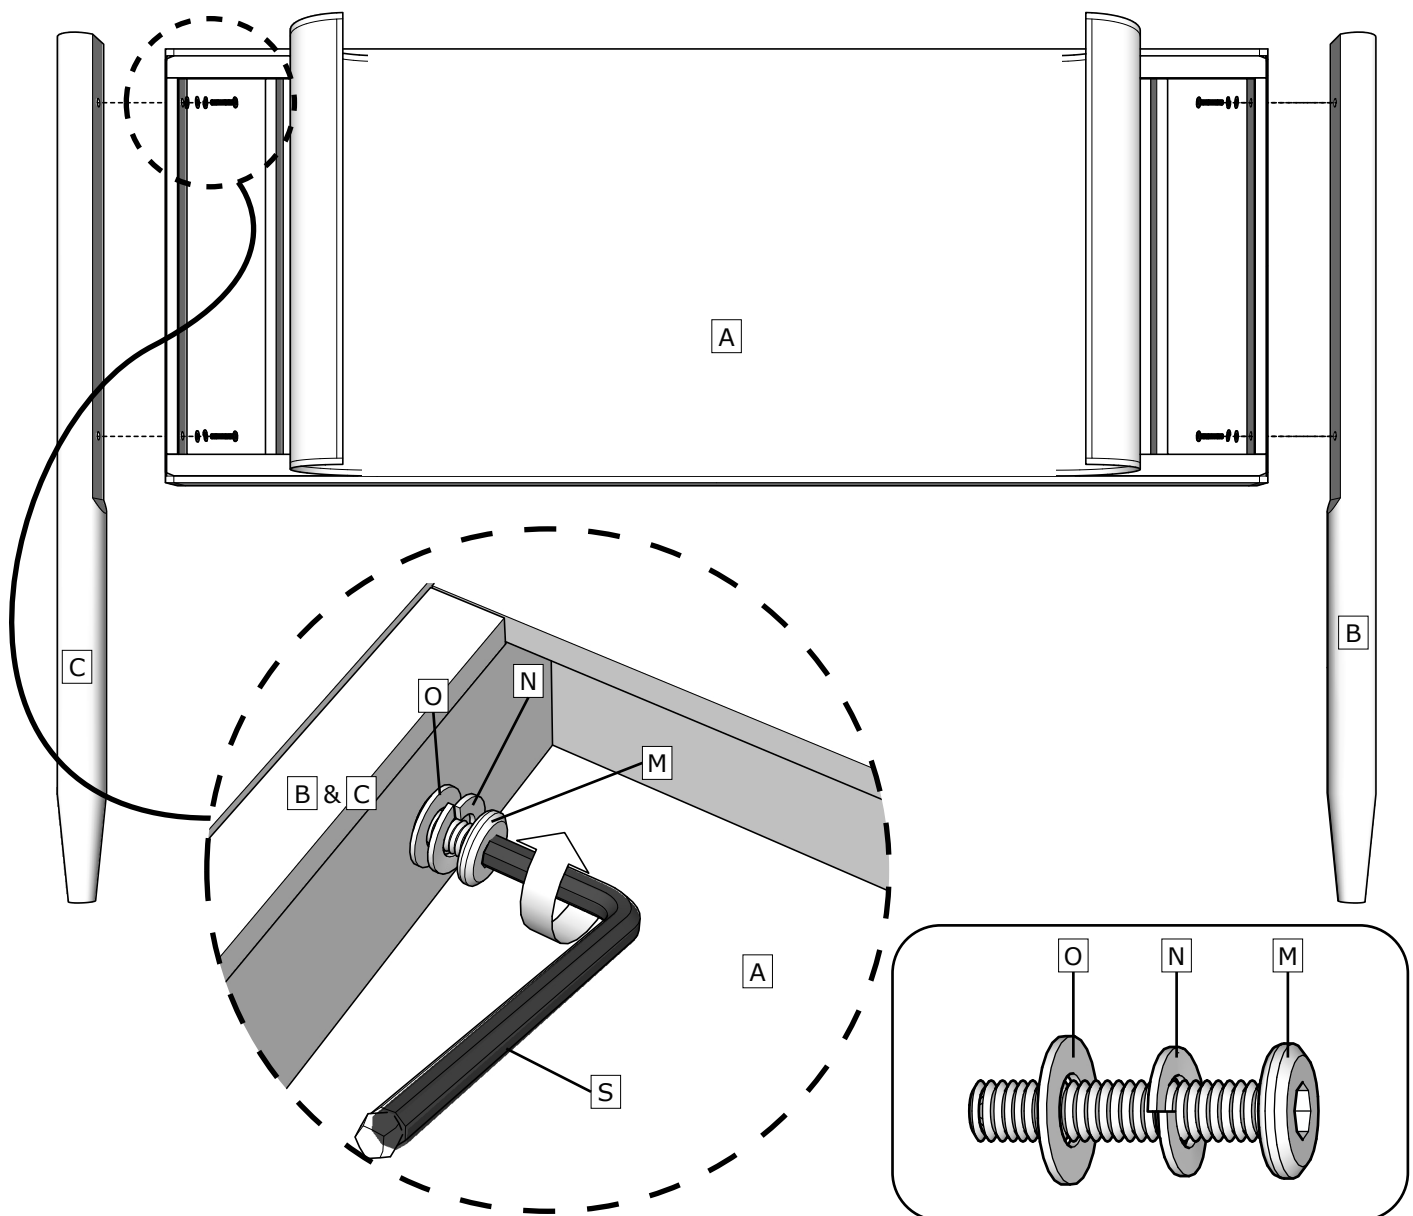

- Pull the fabric from the back of the headboard toward the inside on both the left and right sides.
- Attach **A** to **B** and **C** with **M** , **N** , and **O** using a Ball End Hex Key Wrench **S** as shown.



# Bed Assembly Step 2


|                                                                                                               |                                                                                                                        |                                                                                                                          |                                                                                                                             |
|---------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| <b>D</b> Footboard<br>x1<br> | <b>E</b> Footboard Leg Left<br>x1<br> | <b>F</b> Footboard Leg Right<br>x1<br> | <b>R</b> Plastic Dowel<br>x4<br>25mm<br> |
|---------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|

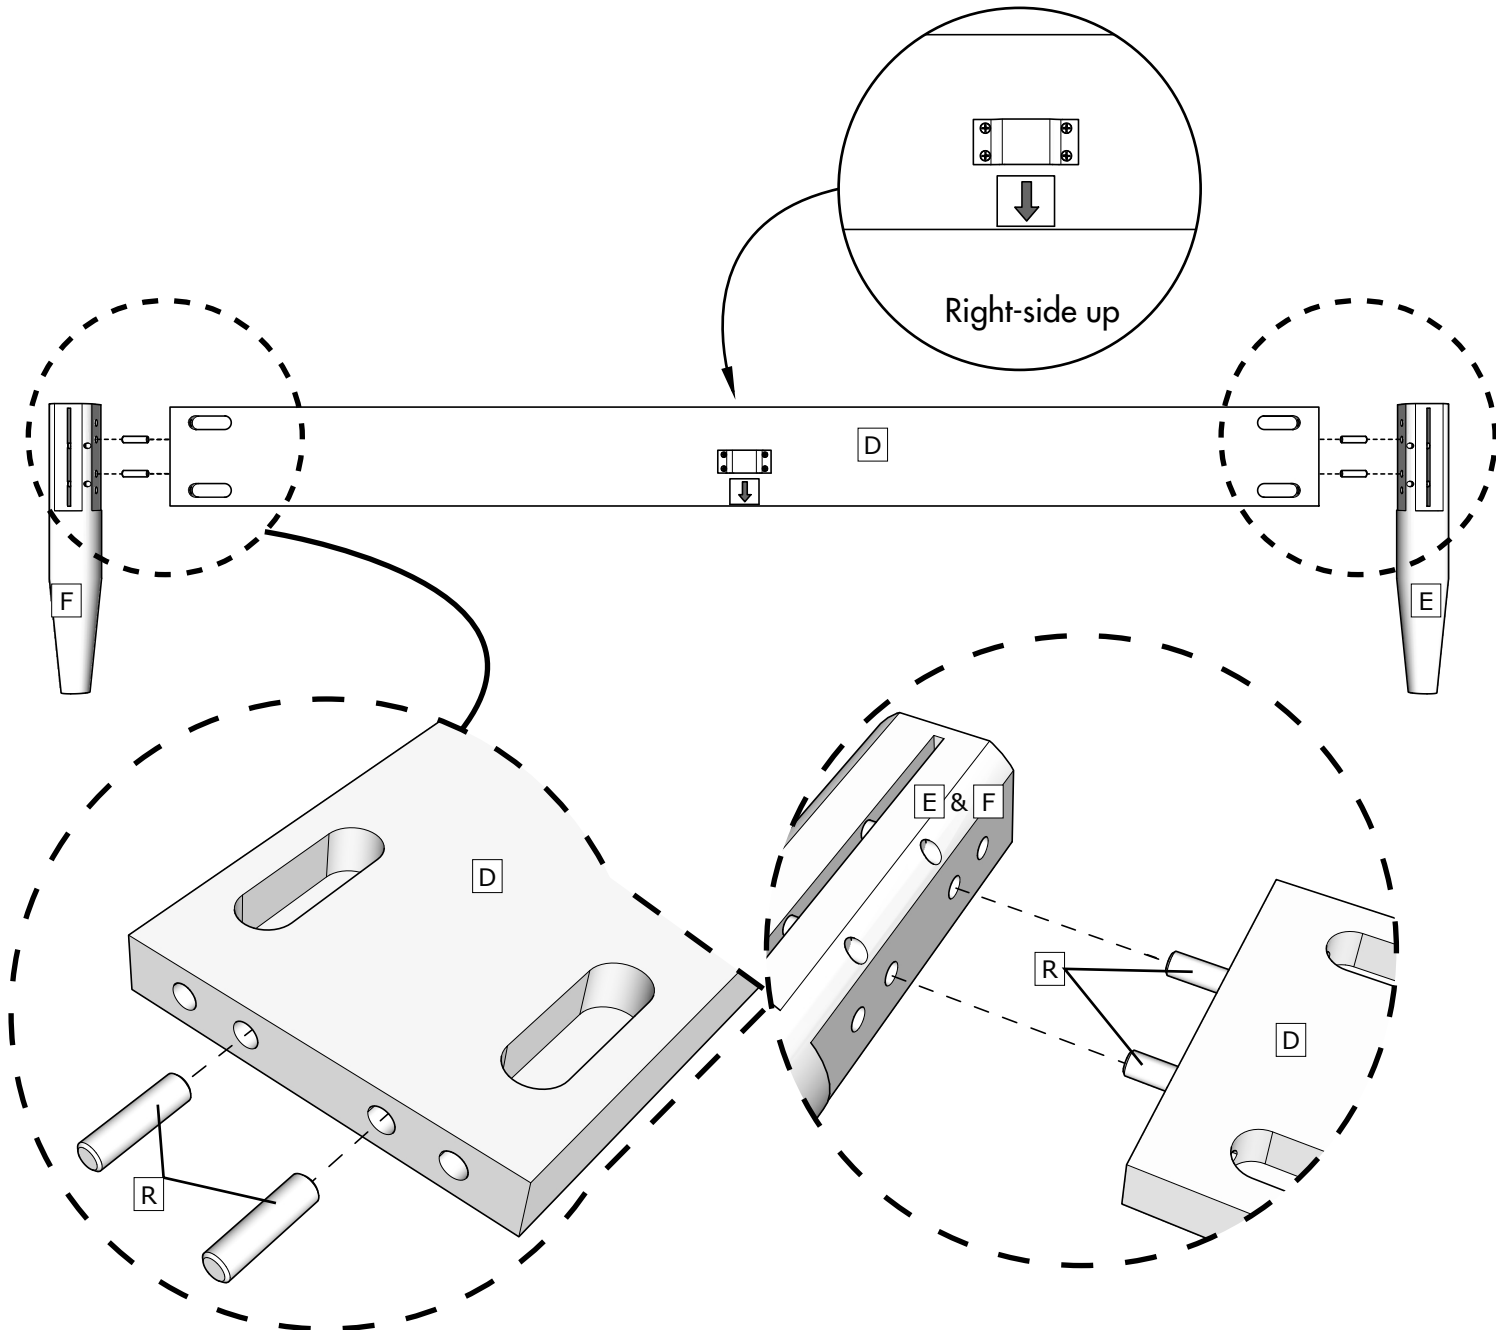

- Insert **R** into **D** as shown.
- Attach **E** and **F** to **D** as shown.



# Bed Assembly Step 3

|          |                                                                                   |          |                                                                                   |          |                                                                                     |
|----------|-----------------------------------------------------------------------------------|----------|-----------------------------------------------------------------------------------|----------|-------------------------------------------------------------------------------------|
| <b>N</b> | Spring Washer                                                                     | <b>K</b> | Bolt                                                                              | <b>S</b> | Ball End Hex Key Wrench                                                             |
| x4       |  | x4       |  | x1       |  |
|          | M6                                                                                |          | M6 x 40mm                                                                         |          | M4                                                                                  |

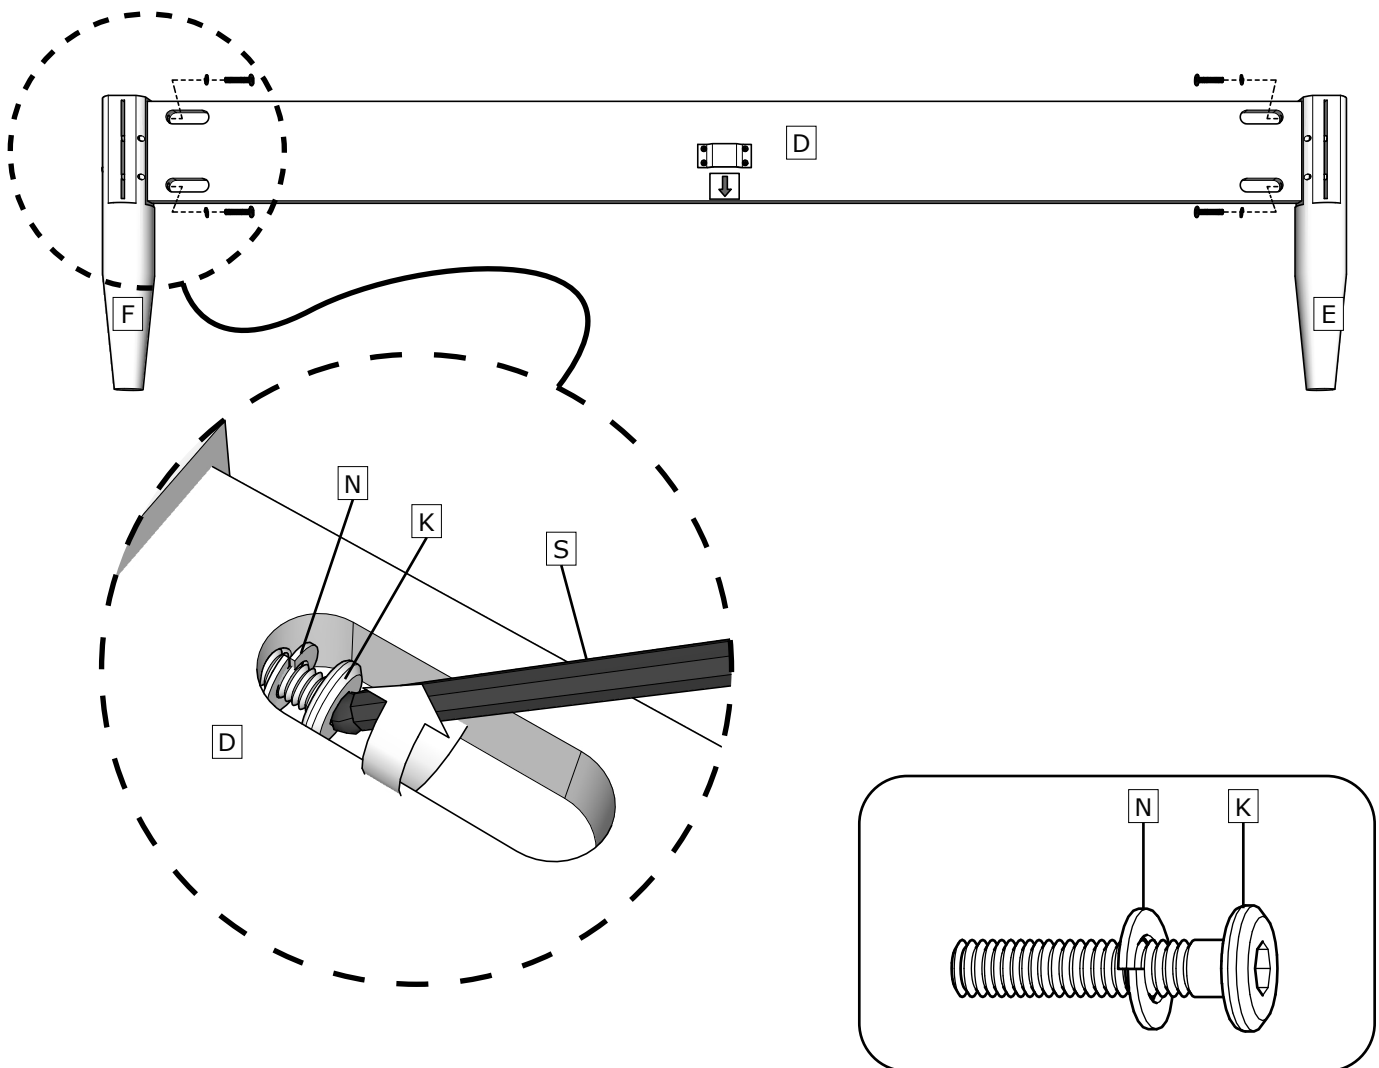



- Affix **K** and **N** to Assembled Footboard using a Ball End Hex Key Wrench **S** as shown.

# Bed Assembly Step 4

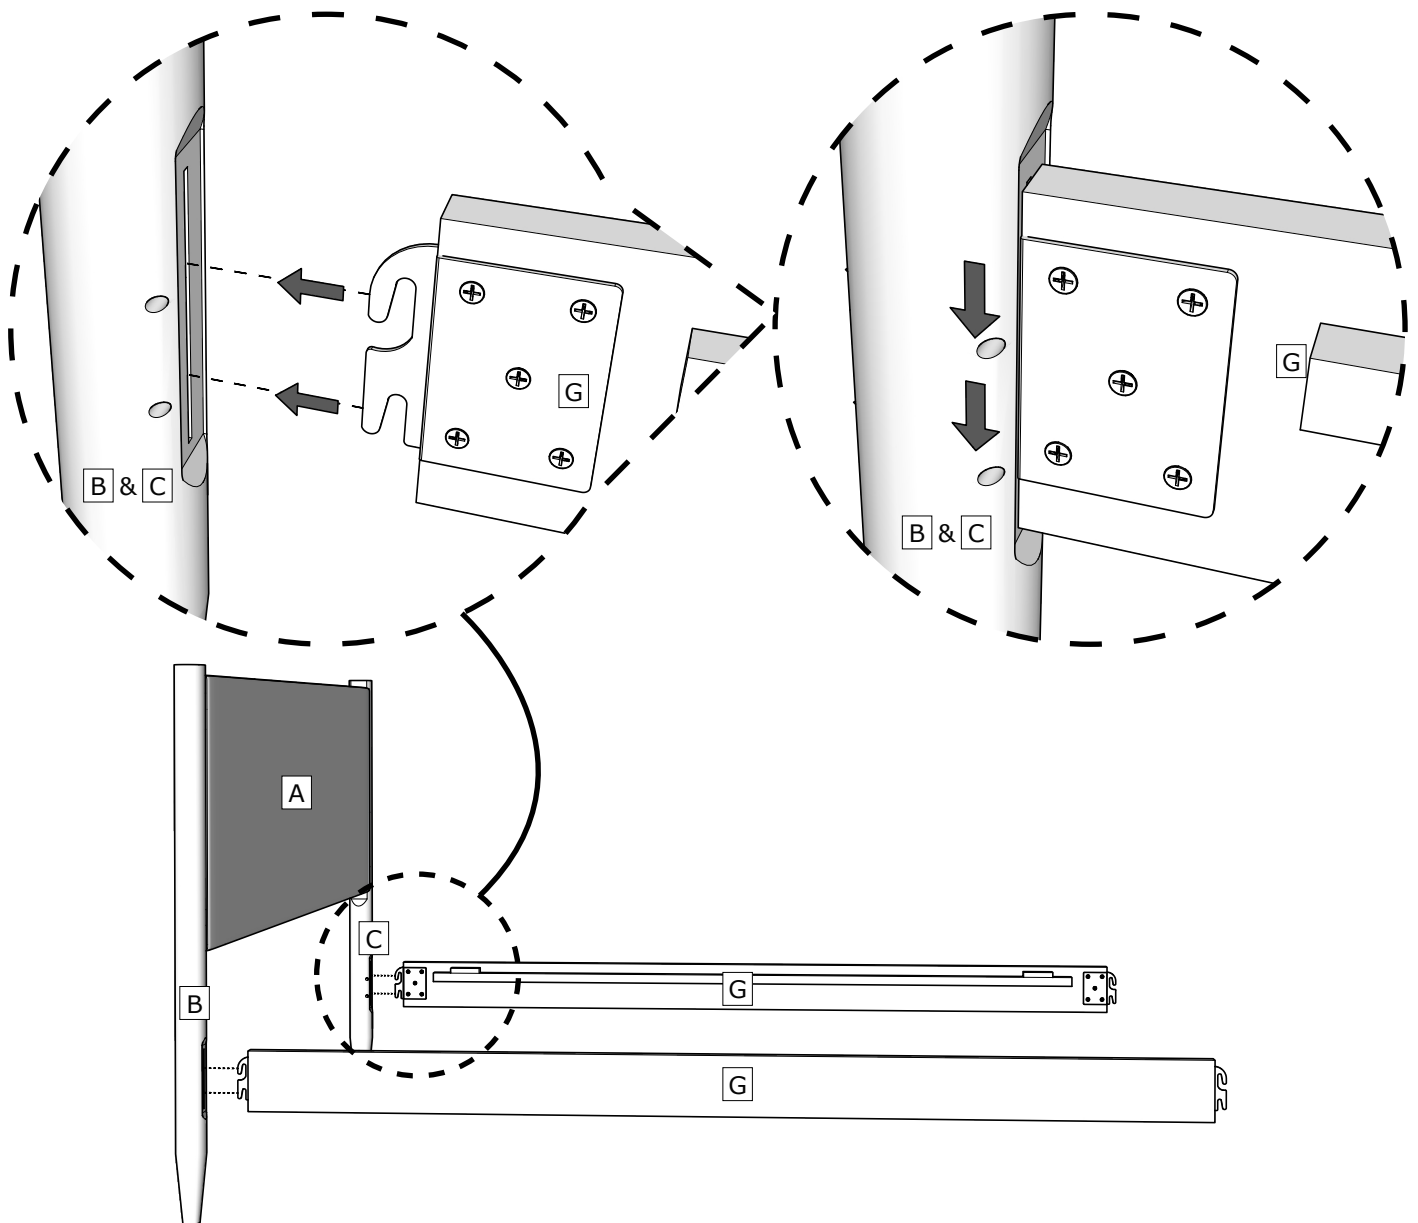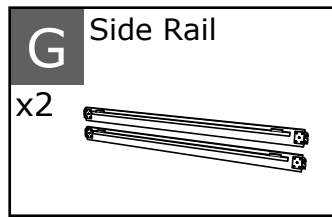




- Insert **G** into cut out slots on Assembled Headboard and push down.


# Bed Assembly Step 5

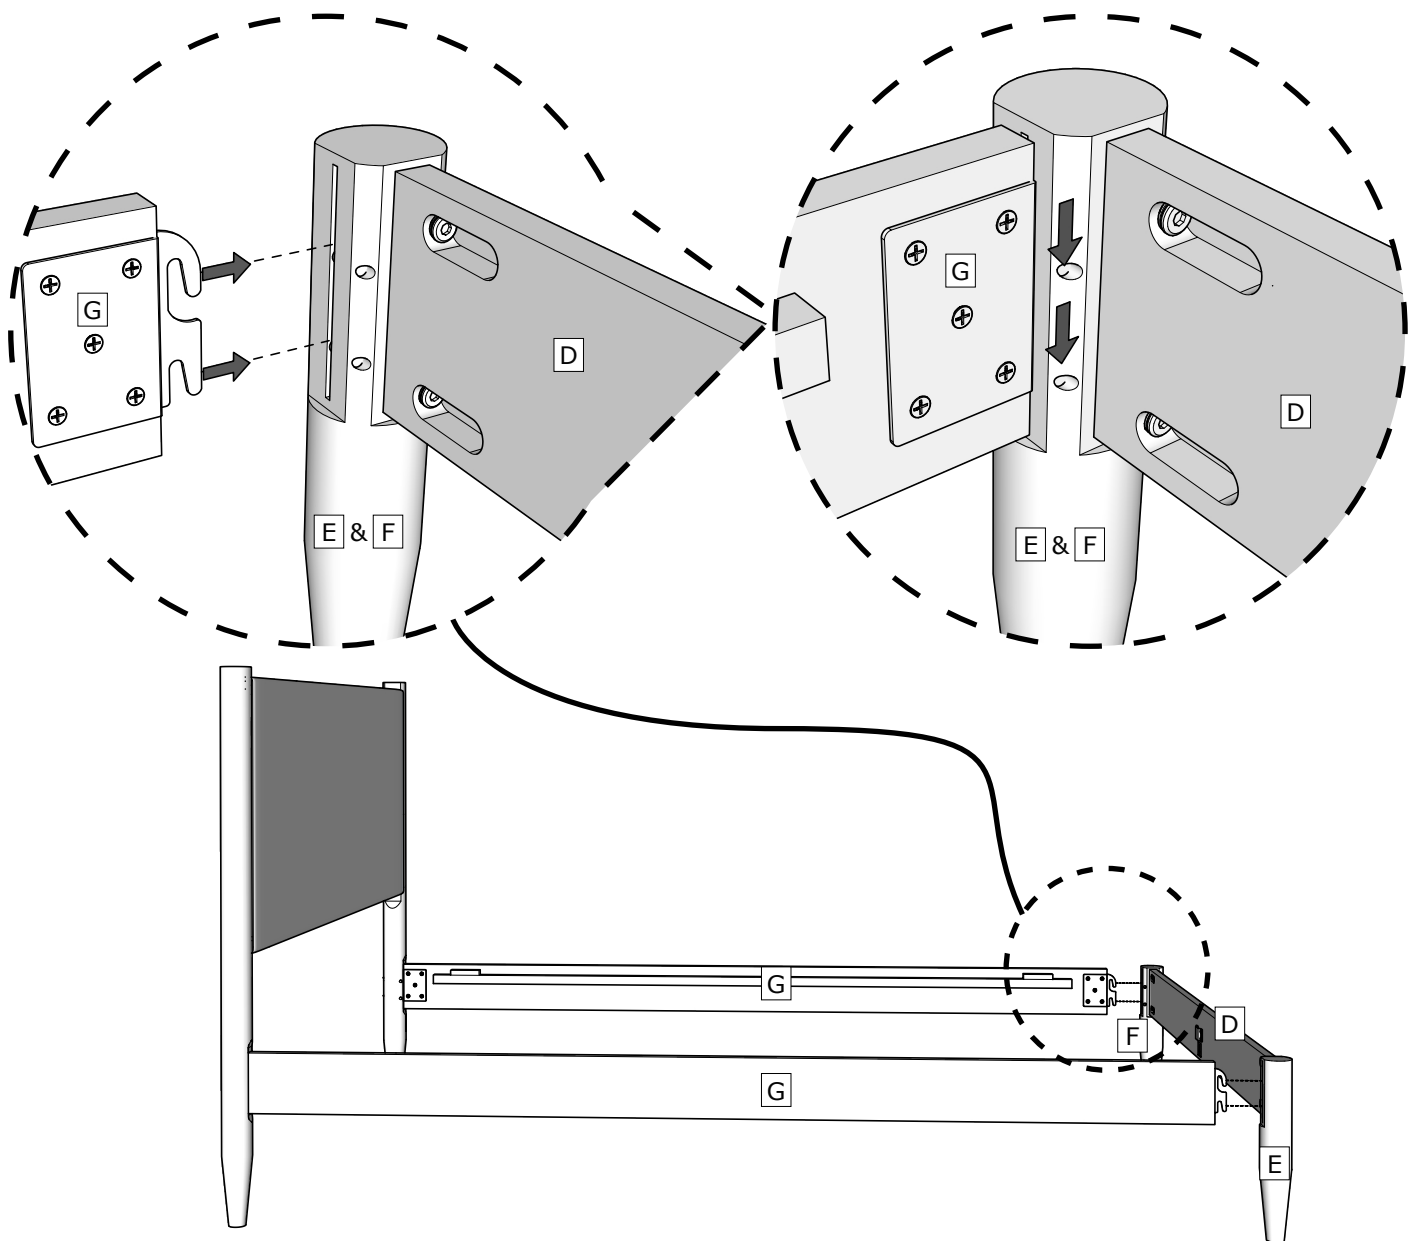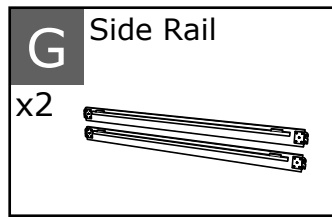

- Insert **G** into cut out slots on Assembled Footboard and push down.

# Bed Assembly Step 6


|                                                                                                                                      |                                                                                                                    |                                                                                                                            |                                                                                                                            |
|--------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|
| <b>H</b><br>Bed Slat<br>x13<br>                     | <b>I</b><br>Center Rail<br>x1<br> | <b>J</b><br>Center Support Leg<br>x3<br> | <b>L</b><br>Bolt<br>x6<br><br>M6 x 60mm |
| <b>S</b><br>Ball End Hex Key Wrench<br>x1<br><br>M4 |                                                                                                                    |                                                                                                                            |                                                                                                                            |

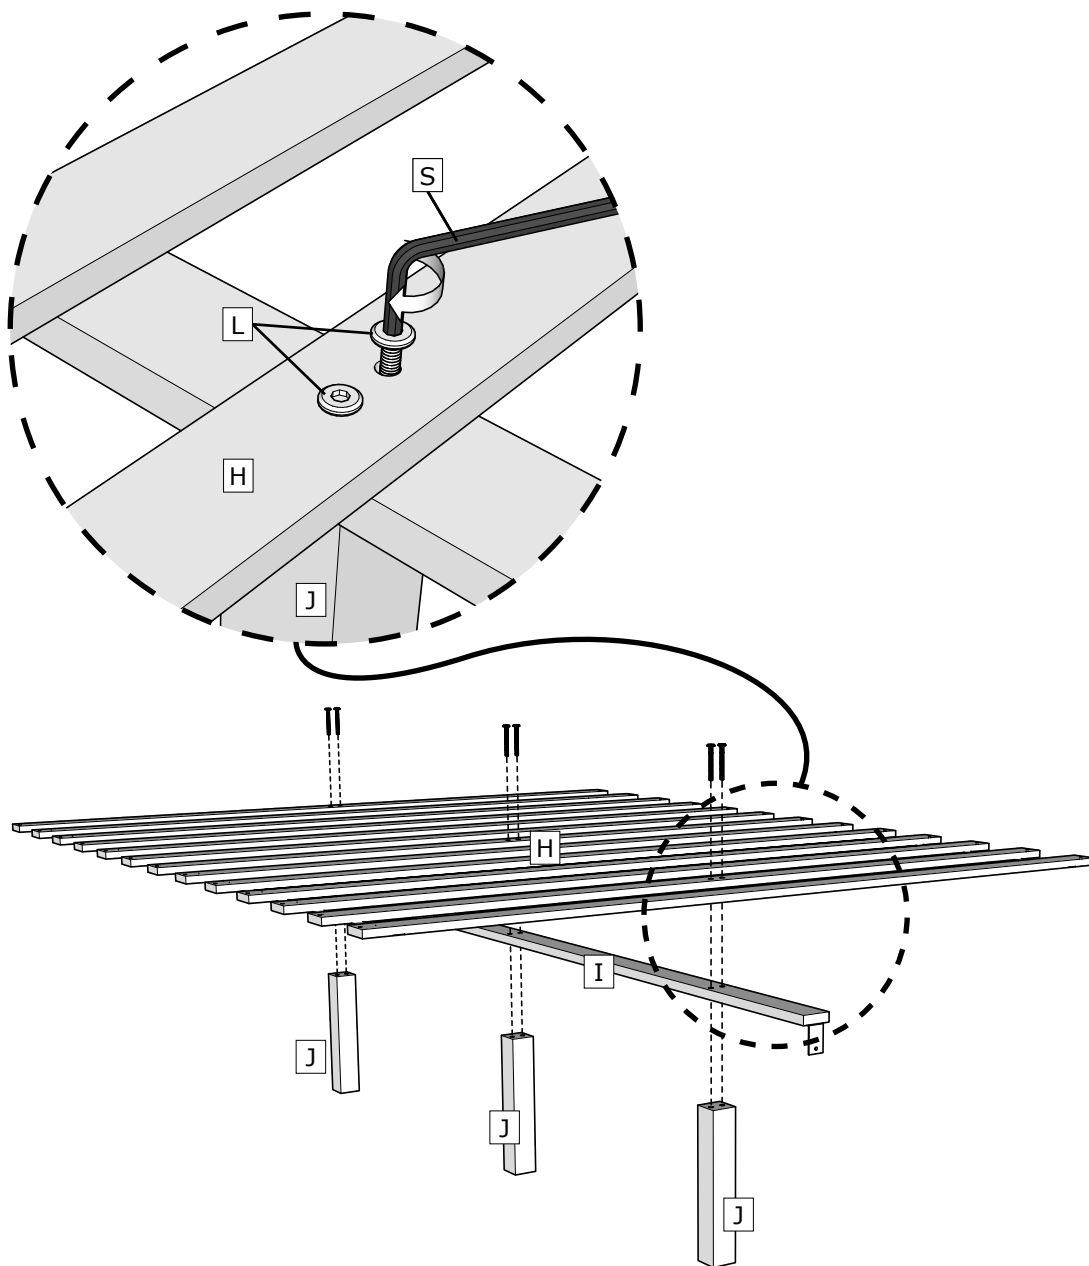

- Attach **H** and **J** to **I** with **L** using a Ball End Hex Key Wrench **S** as shown.


# Bed Assembly Step 7


|          |                                                                                   |                                                                                    |
|----------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| <b>P</b> | Screw                                                                             | Phillips Screwdriver                                                               |
| x1       |  |  |
|          | M3.5 x 16mm                                                                       | Not provided                                                                       |

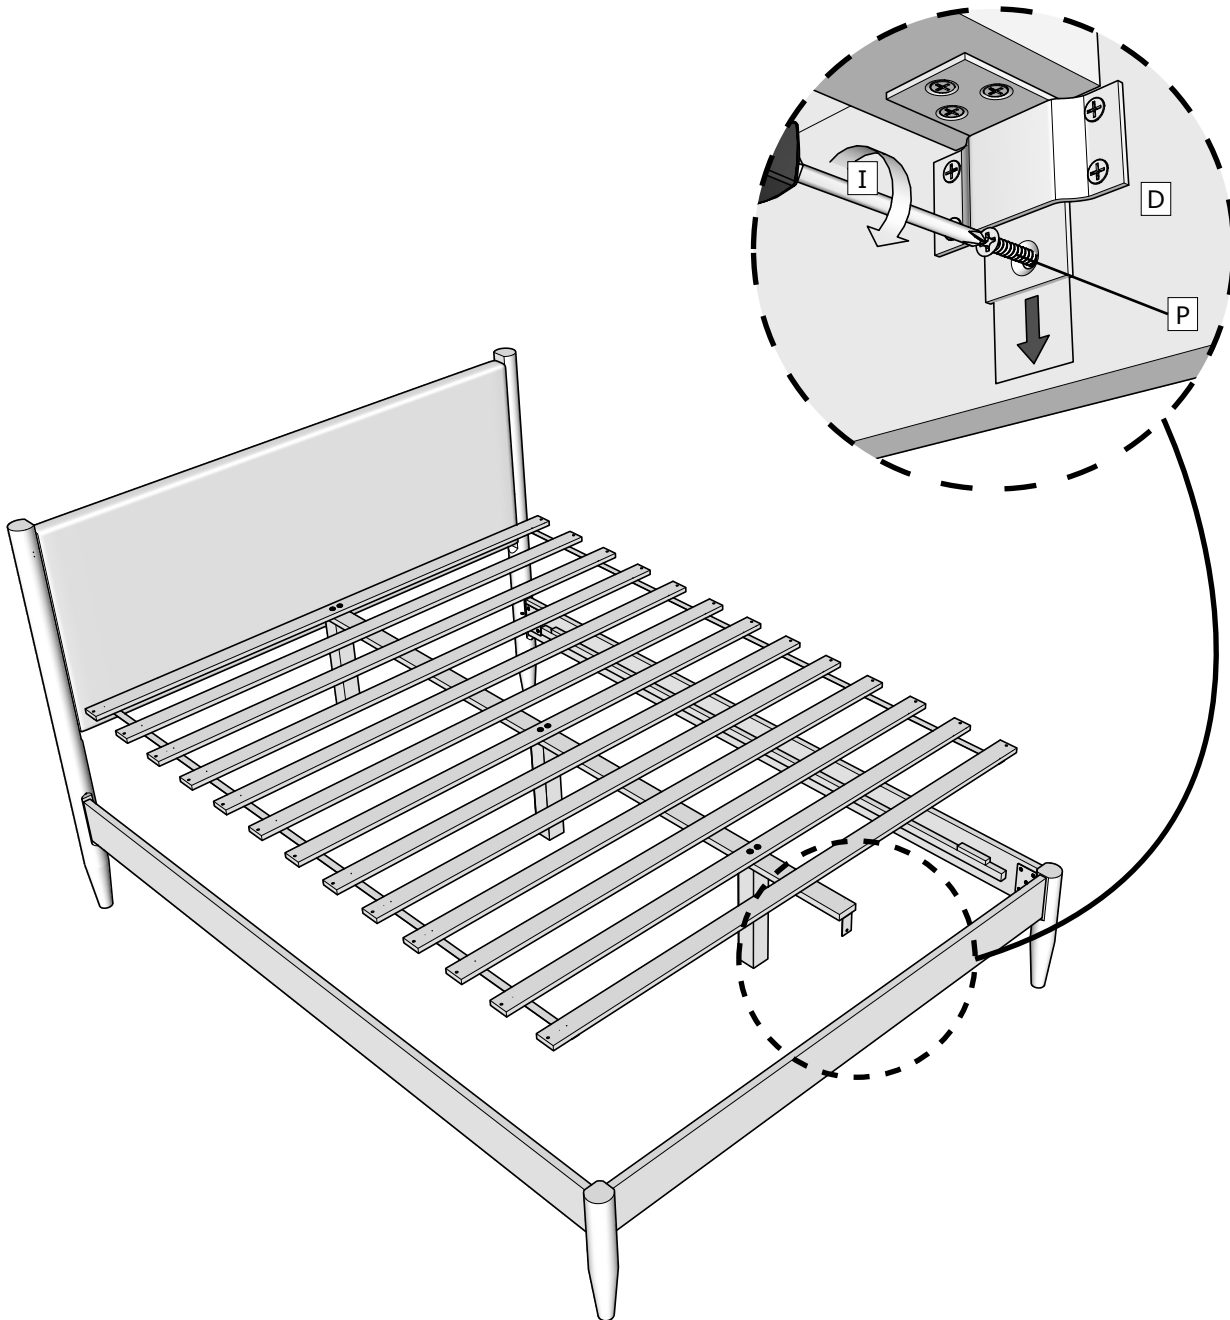

- Insert the Center Rail of the Assembled Bed Slats into the metal bracket on the footboard, then secure it with screw **P** using a Phillips Screwdriver.

# Bed Assembly Step 8

|                                                                                                                   |                                                                                                                                                           |
|-------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Q</b><br>x26<br><br>M4 x 32mm | <b>Screw</b><br><br><b>Phillips Screwdriver</b><br><br><br>Not provided |
|-------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|

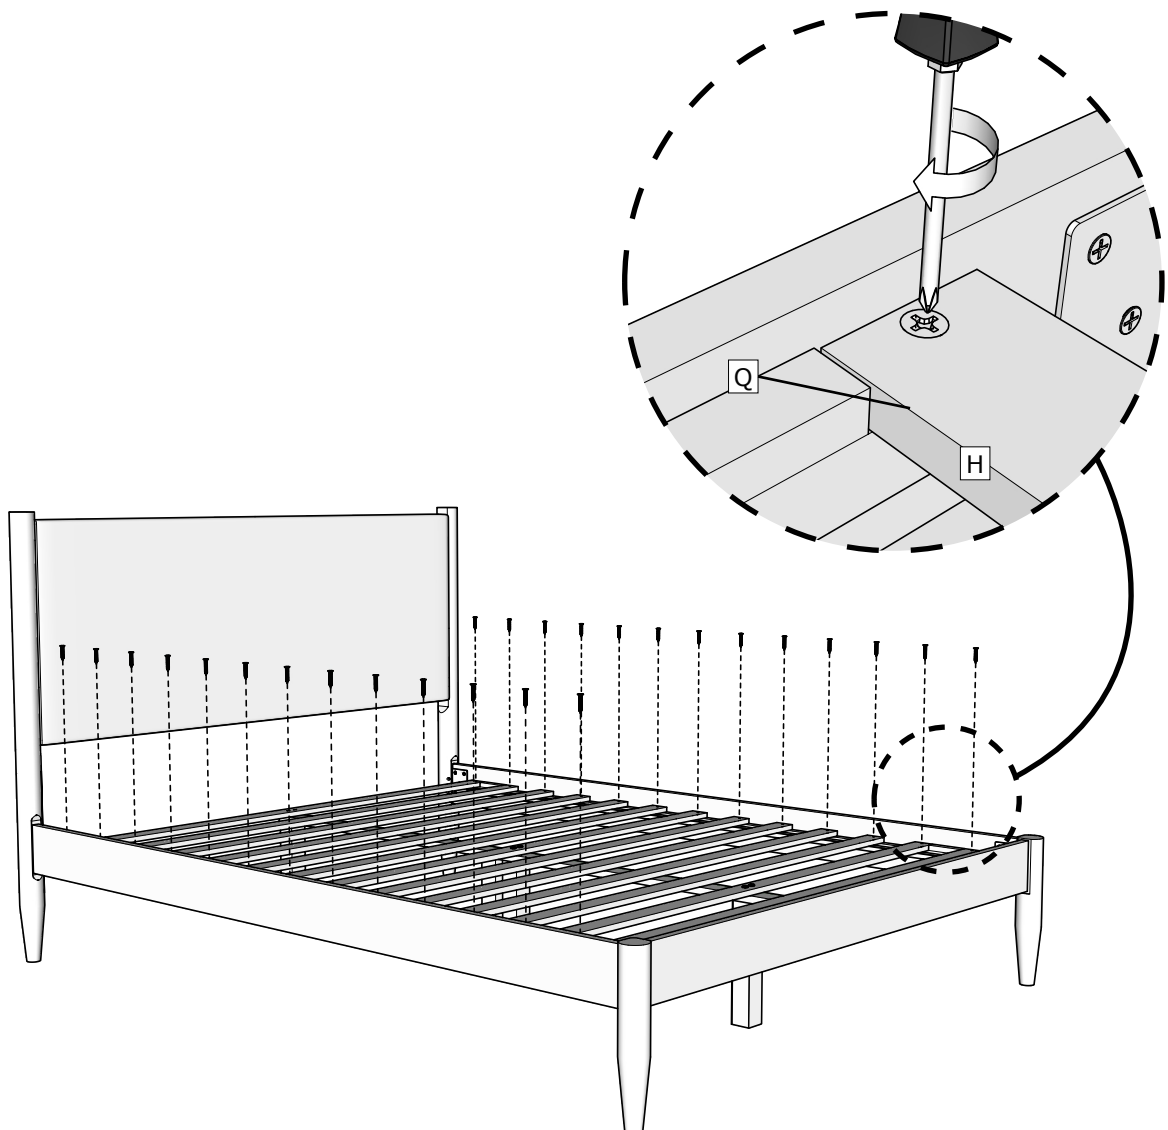

- Affix **Q** to Assembled Bed using a Phillips Screwdriver as shown.

**WARNING:** Do not drag or push the bed frame. To ensure safe moving, always use two people to lift and re-position the bed frame. Avoid dragging or pushing it across the floor to prevent damage to the legs, slats, and center support legs.

# FAQS

## FREQUENTLY ASKED QUESTIONS


---

**WE ARE OPEN MONDAY TO FRIDAY TO ASSIST YOU AND WILL REPLY TO ANY OF YOUR MESSAGES WITHIN 24-48 HOURS. THE AVERAGE RESPONSE TIME IS WITHIN 24 HOURS. IF YOU ENCOUNTER AN ISSUE THAT IS NOT MENTIONED BELOW, PLEASE MESSAGE US IN OUR CONTACT PAGE BY VISITING [WWW.DGCASA.COM](http://WWW.DGCASA.COM)**

---


**WHERE IS THE REST OF MY ORDER? THE PACKAGE I RECEIVED SAYS CARTON NO. 1 OF 3, CARTON NO. 3 OF 5, OR CARTON NO. 5 OF 6 ETC.**

THE MARKETPLACE ONLY ALLOWS 1 TRACKING NUMBER TO BE UPLOADED IN THE SYSTEM. HOWEVER, THE PRODUCT IS SHIPPED IN MULTIPLE PACKAGES. YOU CAN CONFIRM THE NUMBER OF PACKAGES TO RECEIVE BY REFERRING TO THE CARTON NO. PRINTED ON THE PACKAGE THAT WAS DELIVERED TO YOU. FOR EXAMPLE, YOU RECEIVED 1 PACKAGE AND THE PACKAGE SHOWS CARTON NO. 1 OF 3, THEN CARTON NO. 2 OF 3 AND CARTON NO. 3 OF 3 IS IN TRANSIT TO YOU. THE REST OF THE PACKAGES CAN BE DELIVERED WITHIN THE SAME DAY AS THE FIRST PACKAGE OR WITHIN A FEW DAYS. ONCE THE ORDER IS SHIPPED CONFIRMED, OUR TEAM WILL SEND YOU A MESSAGE TO PROVIDE YOU WITH ALL THE TRACKING NUMBER THAT COMPLETES YOUR ORDER. IF YOU DID NOT RECEIVE THIS MESSAGE, PLEASE CHECK YOUR EMAIL'S SPAM FOLDER, OR LOG INTO THE MARKETPLACE ACCOUNT AND SEND US A MESSAGE.

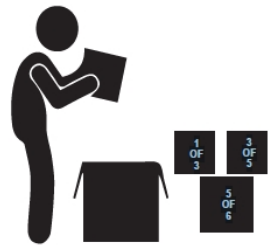

**MY ORDER IS DAMAGED, WHAT DO I DO?**

CONTACT US ON OUR WEBSITE [WWW.DGCASA.COM](http://WWW.DGCASA.COM) INCLUDE THE ORDER NUMBER AND ATTACH APPLICABLE IMAGES TO EXPEDITE THE CLAIM AND ENSURE OUR TEAM WILL PROVIDE THE APPROPRIATE RESOLUTION

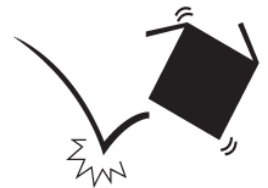

**I TRACKED THE PACKAGE AND IT SHOWS MY PACKAGE WAS DELIVERED, BUT I NEVER RECEIVED THE PACKAGE. I DOUBLE CHECKED WITH MY FAMILY MEMBER AND NEIGHBOR; THEY DO NOT HAVE THE PACKAGE. WHAT DO I DO?**

CONTACT US ON OUR WEBSITE [WWW.DGCASA.COM](http://WWW.DGCASA.COM) INCLUDE THE ORDER NUMBER AND LET US KNOW WHICH CARTON NUMBER OR TRACKING NUMBER YOU DID NOT RECEIVE, AND A TEAM MEMBER WILL REPLY TO YOUR MESSAGE ACCORDINGLY.



**LOVE THE PRODUCT?**

LOG INTO THE MARKETPLACE YOU MADE THE ORDER AND SHARE YOUR EXPERIENCE WITH THE PRODUCT AND WHAT YOU LIKE MOST ABOUT IT. ELEVATE THE PRODUCT REVIEW BY INCLUDING IMAGES OF THE PRODUCT TO SHARE WITH EVERYONE.

