



Assembly instructions for the TV cabinet

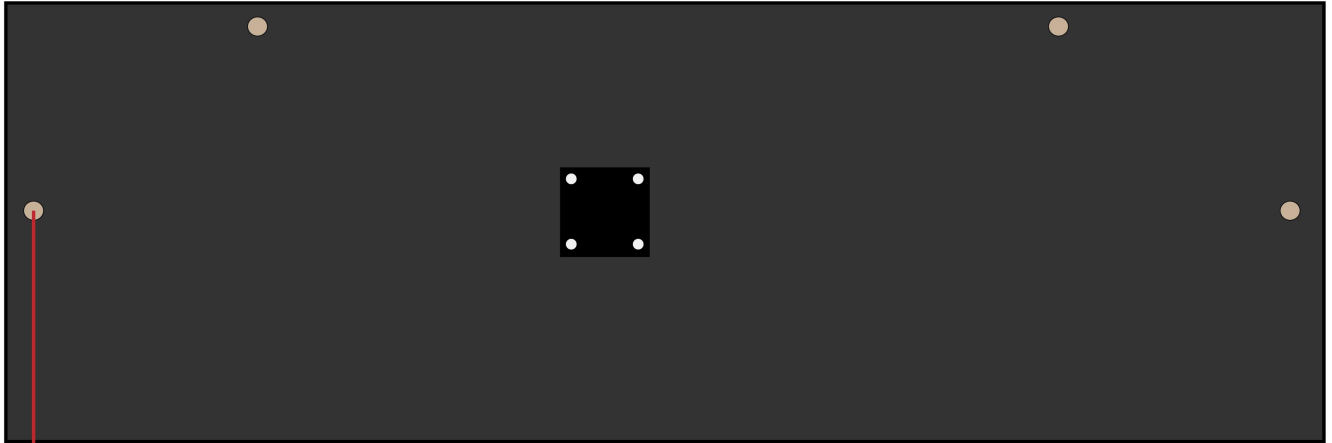


Step 1: Turn the cabinet upside down. For the four screw holes at the bottom of the coffee table, install four purple three-in-one screws first.

Step 2: Pass the left and right bottom side panels and the front wooden board through the screw holes on the wooden board and fix them with circular snap fasteners.

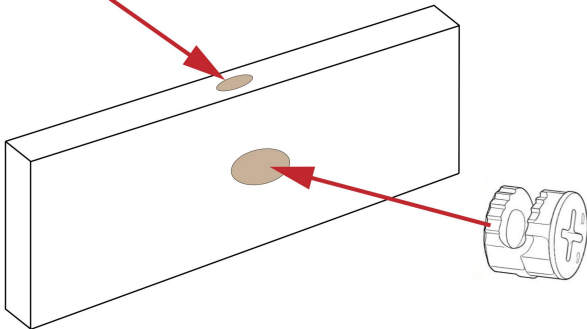

Step 3: Use the pointed-head screws to fix the middle support legs.

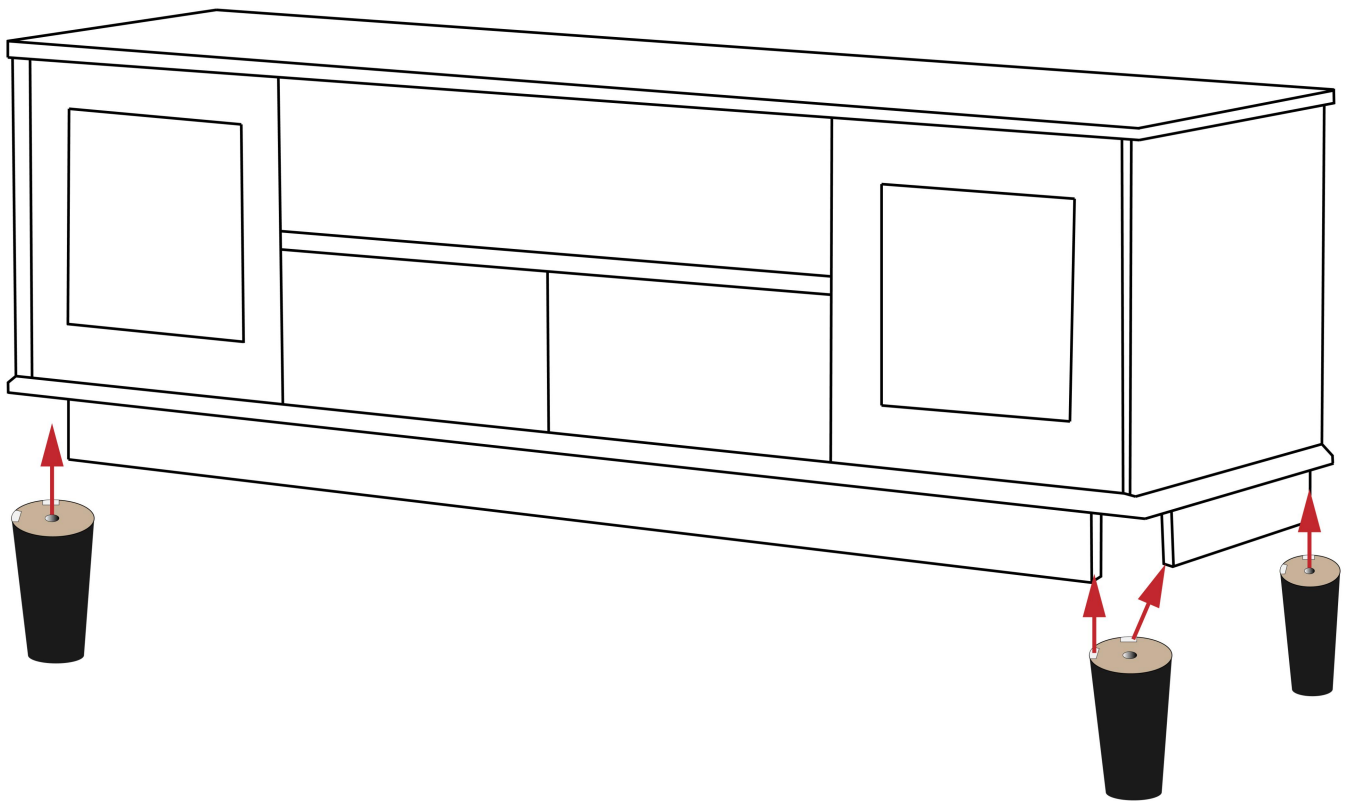

Step 4: Install the solid wood feet. Place the wooden board over the solid wood cabinet feet and secure it. Finally, fix it using coarse screws through the screw holes at the four corners.

Step 5: Fix the internal layer board with white rubber screws to the layer board. Install the handles.