

# *ASSEMBLY INSTRUCTIONS*



***Mirror***

---



# ASSEMBLY INSTRUCTIONS


## ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

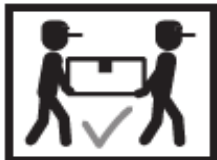


ASSEMBLY TIME

5 MINUTES

## PARTS IDENTIFICATION

A

MIRROR

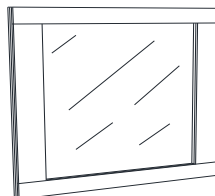

1PC

B


DRESSER  
FROM BOX ITEM # 203503



1PC

C

MIRROR SUPPORT  
(PACK WITH DRESSER)



2PCS

## HARDWARE IDENTIFICATION

1

FLAT HEAD SCREW  
(M4 x 32mm - RBW)




10PCS

### NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

# ASSEMBLY INSTRUCTIONS

## STEP 1

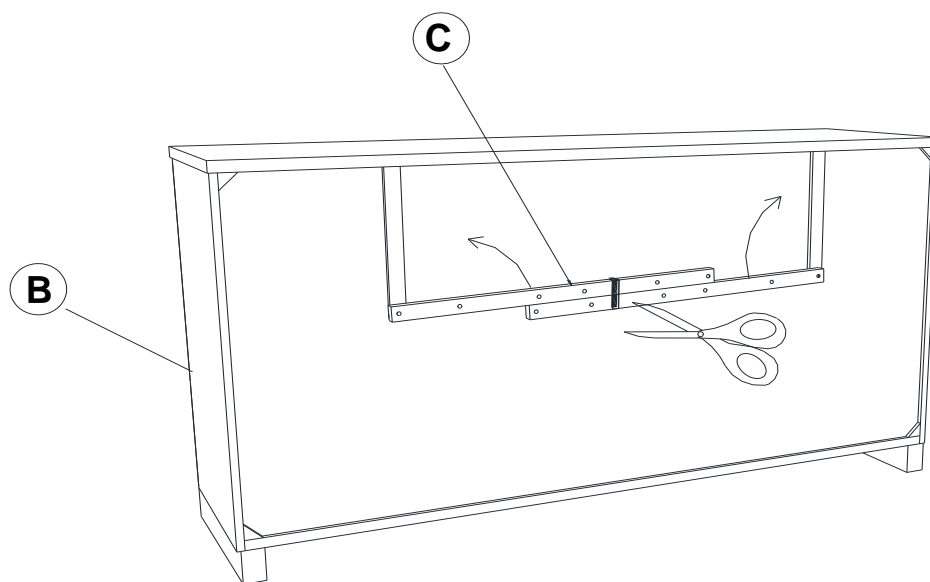


## STEP 2

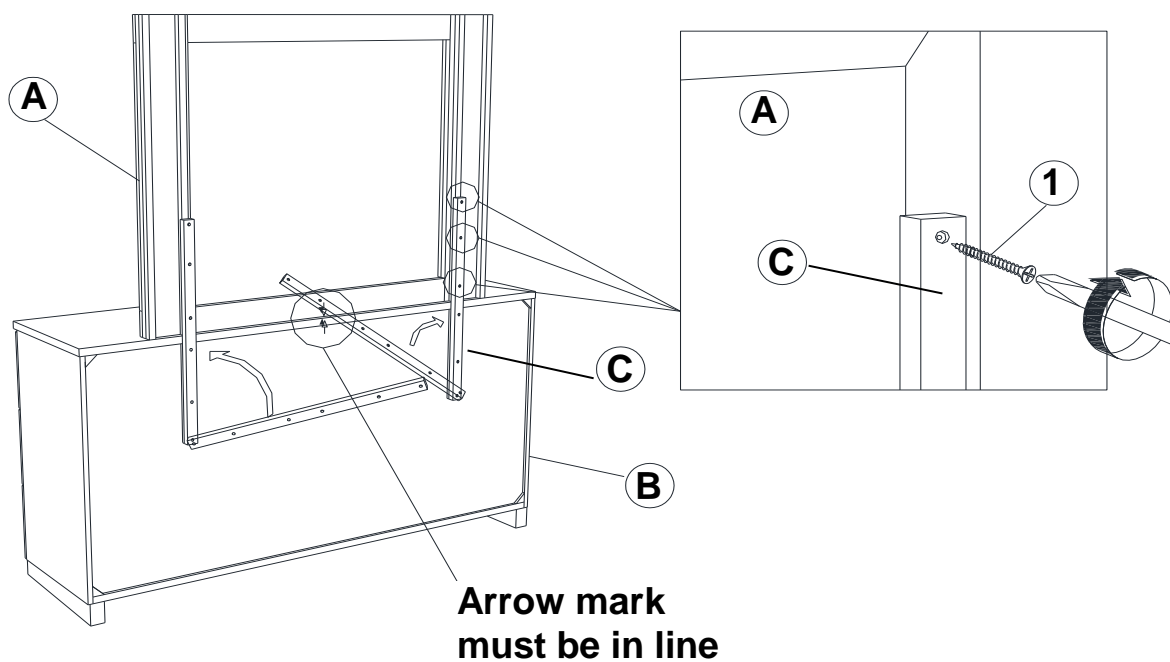

**\*\*BACK VIEW**

## ASSEMBLY INSTRUCTIONS


### STEP 3

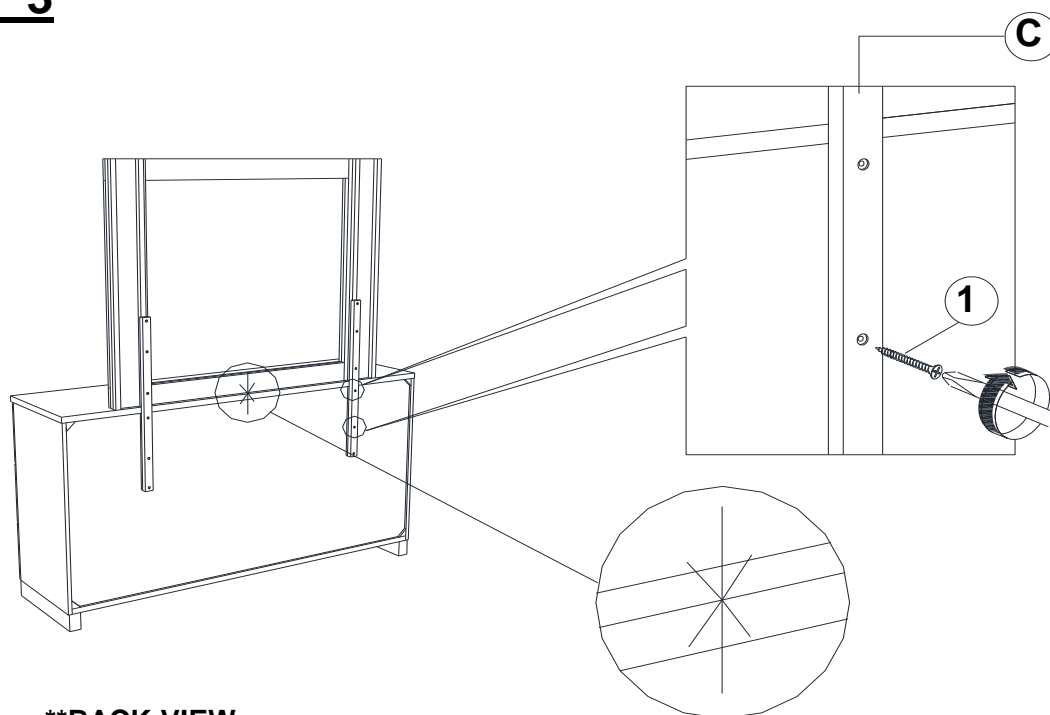

**Arrow Marking Must Be Aligned**


### STEP 4

### **COMPLETE**

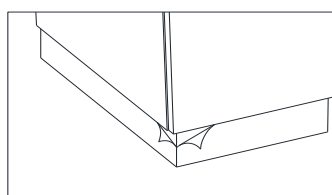

**PLEASE REMOVE THE  
PROTECTIVE FILM  
BEFORE USE**



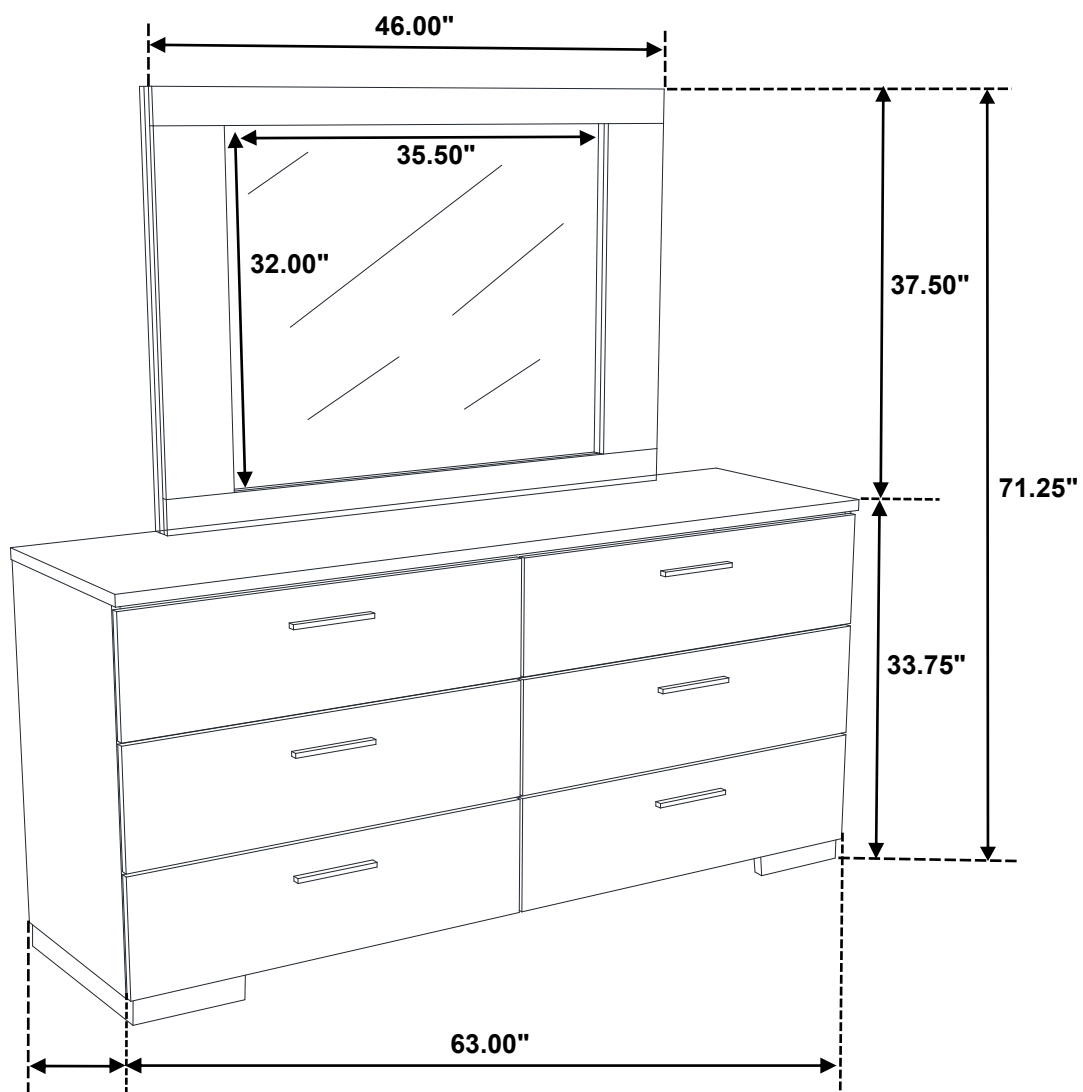

**Note : Dimension tolerance  $\pm 5\%$**