


Easy installation in 3 Steps

1



Mark the spots for drilling on the wall, punch holes and apply wall anchors.

2

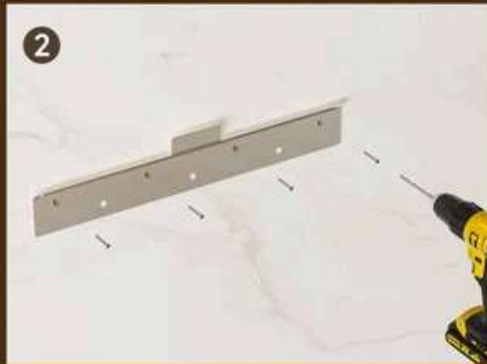

Secure the bracket to the wall with screws.

3



Expansion
Drywall Anchors

Thickness of Wall:
>5/8" (16mm)

Slot the mirror into the brackets.