

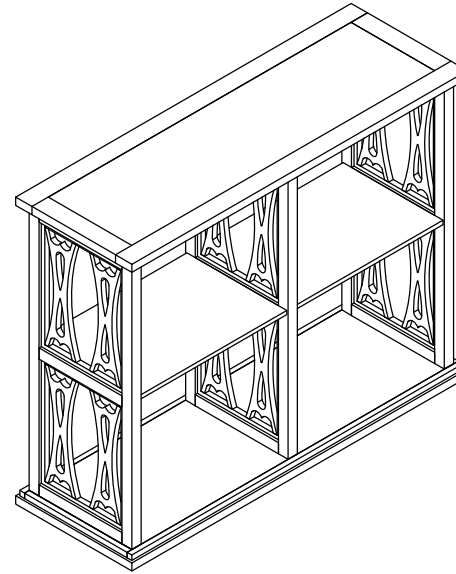



ASSEMBLY INSTRUCTION

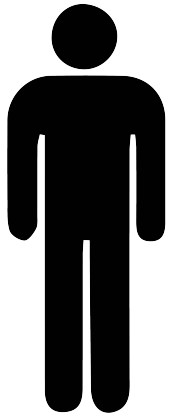


MH
MADE4HOME

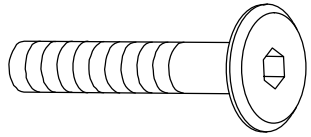


① x20
(Bolt M6x40)




② x20
(Washer 6)

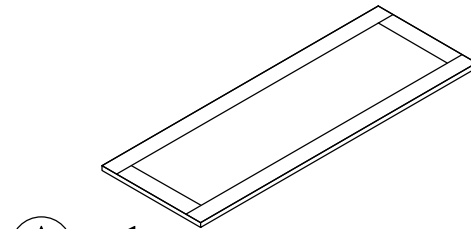


① A x1

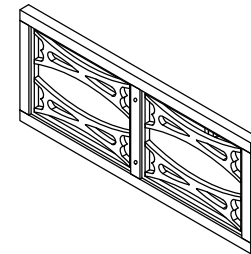


① B x1

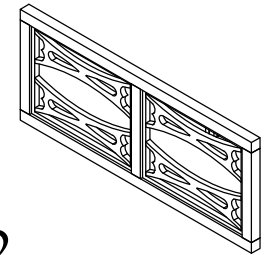


② C x2

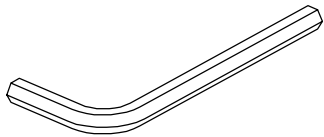

③ x1

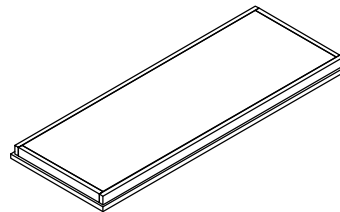


① D x1

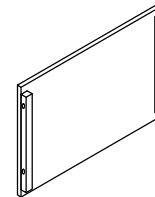


② E x2

ASSEMBLY INSTRUCTION





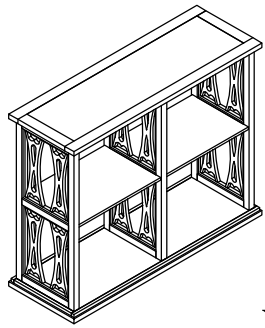


x1


Step 1

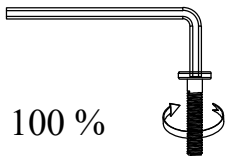

Step 2

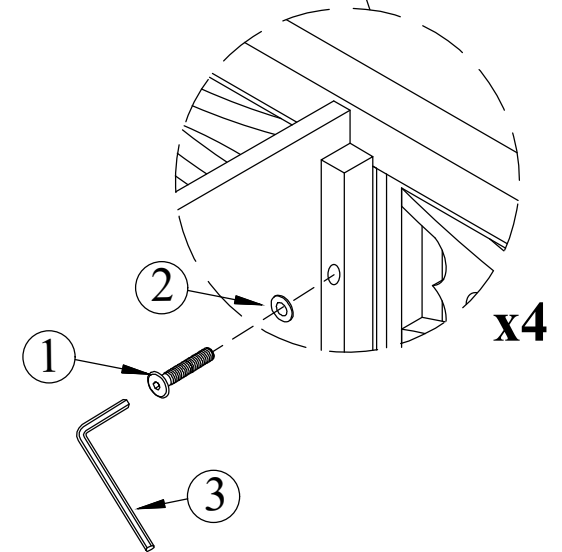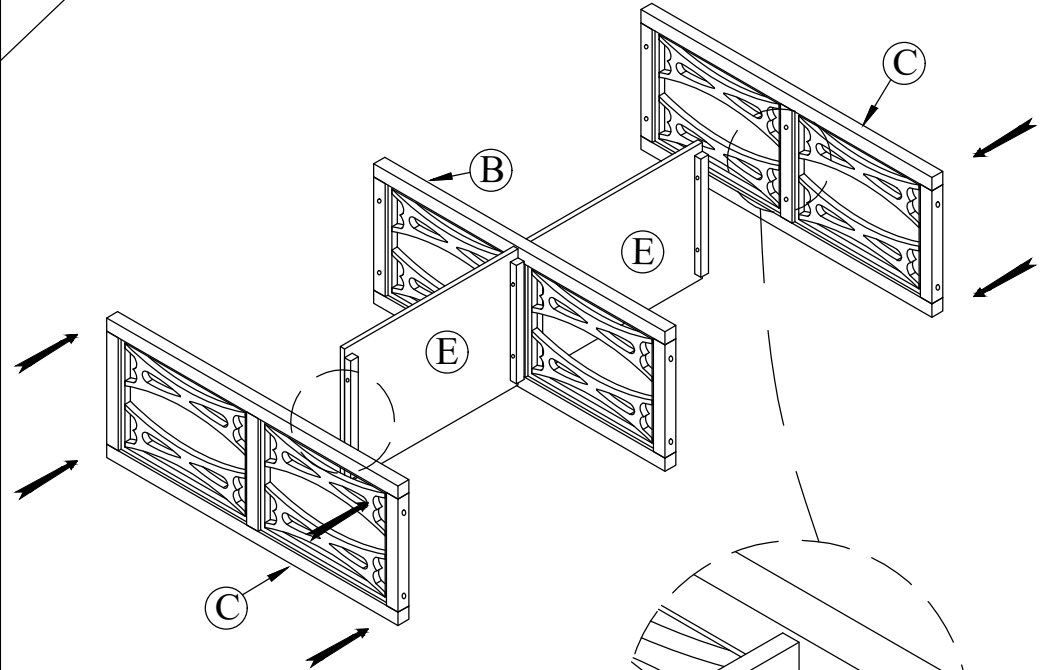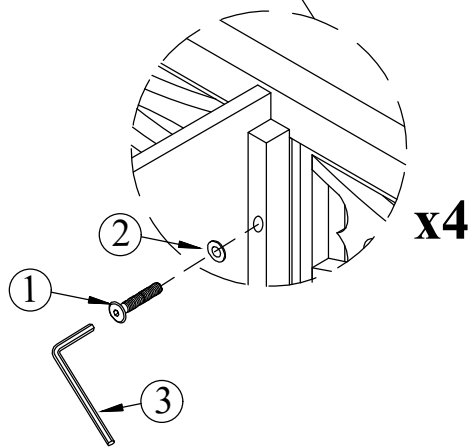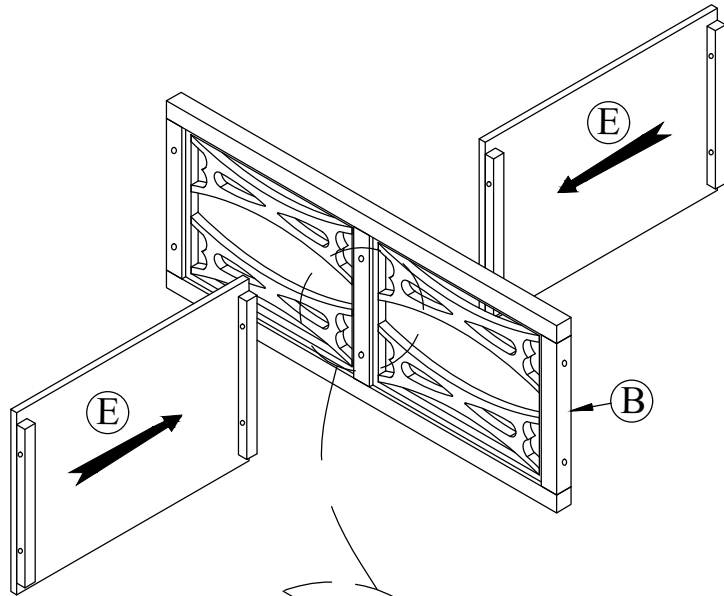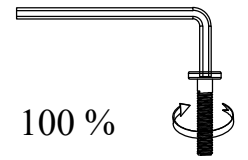


ASSEMBLY INSTRUCTION

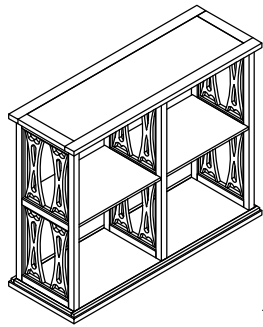

x1


Step 3

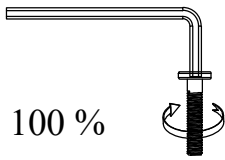



100 %




Step 4

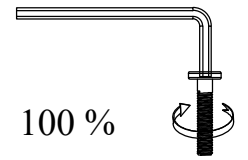

100 %

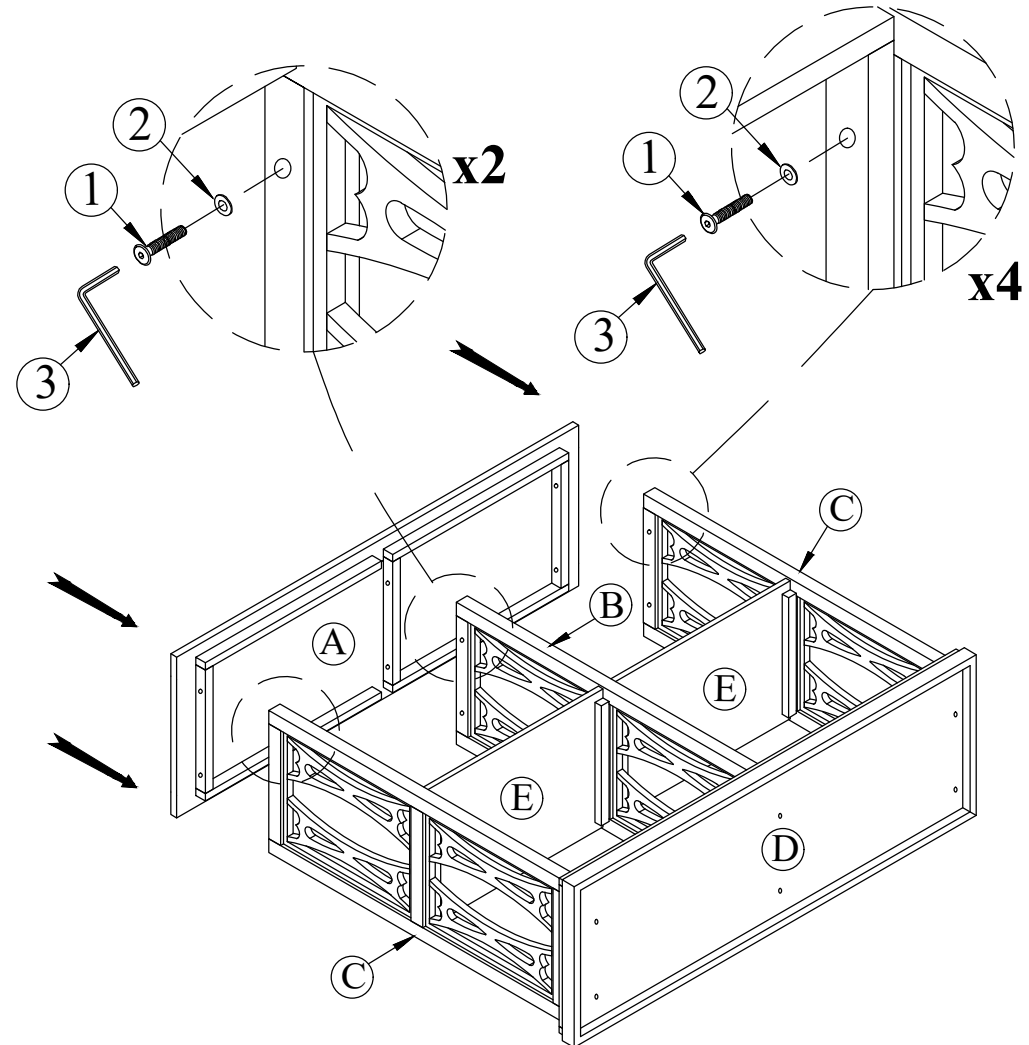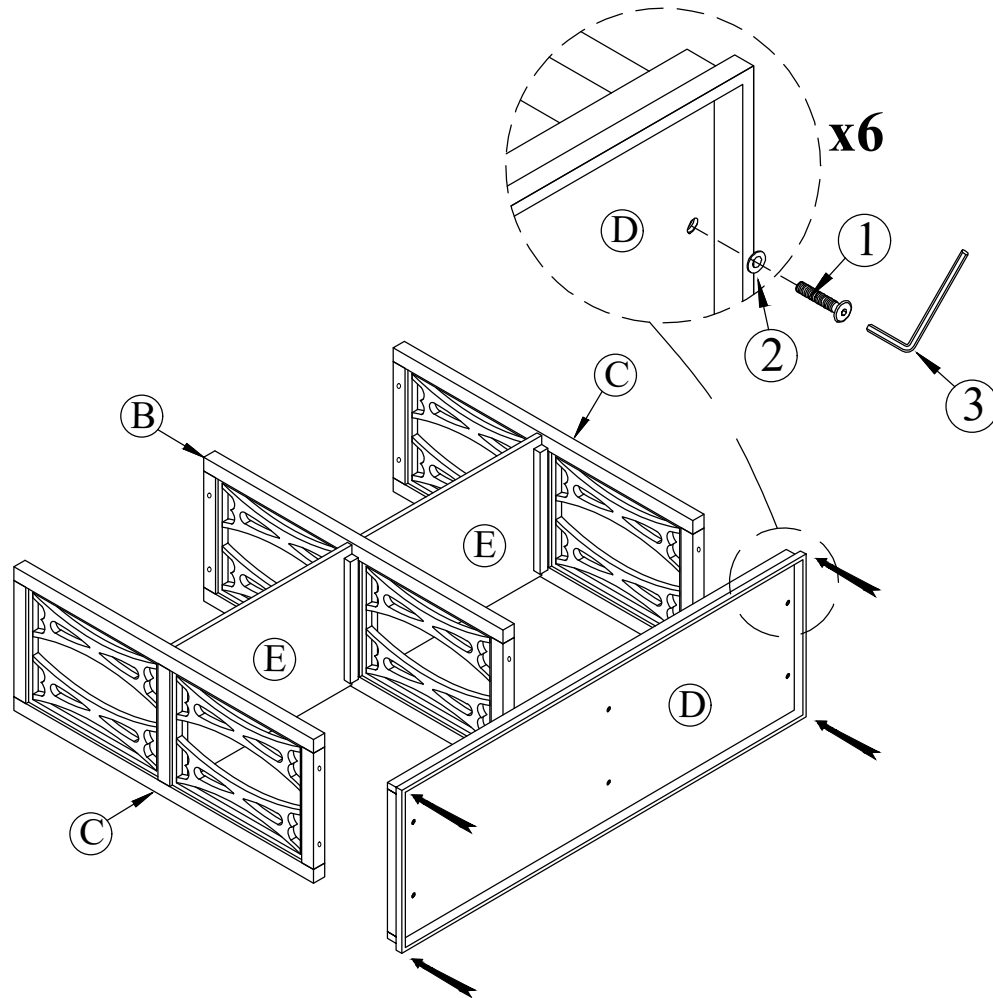

ASSEMBLY INSTRUCTION

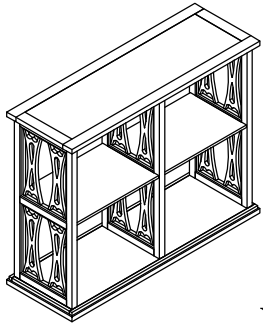

x1

Step 5

