




INSTALLATION GUIDE

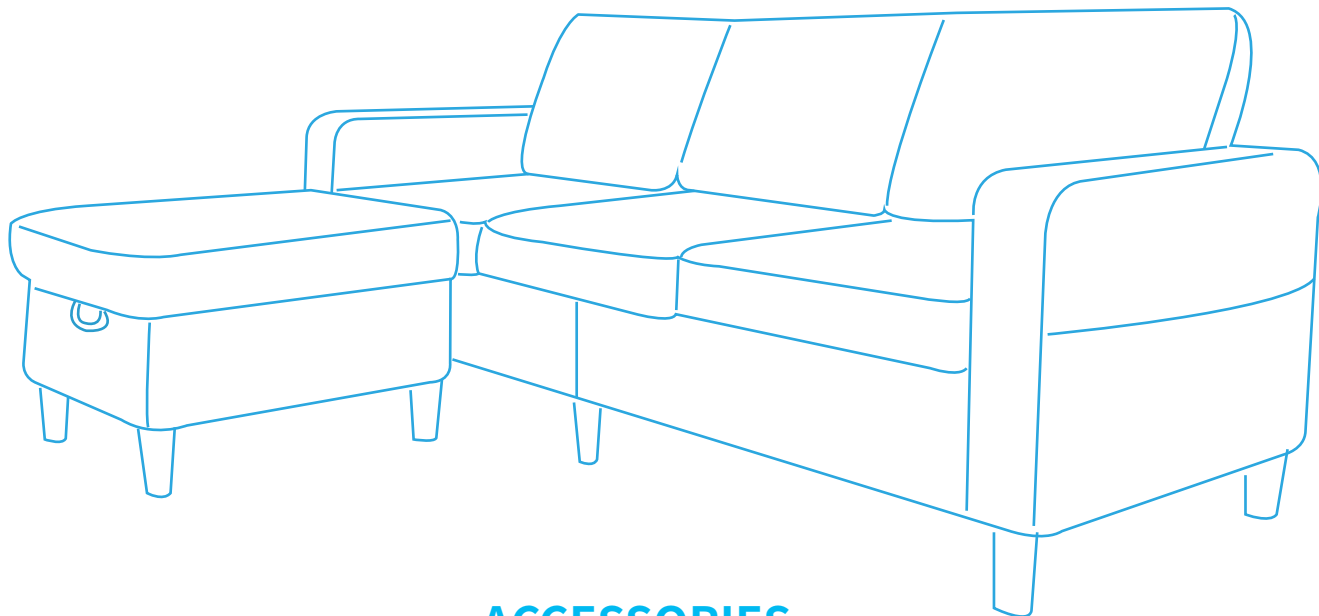


ACCESSORIES

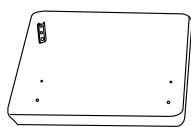

A | 1PC

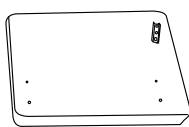

A1 | 1PC

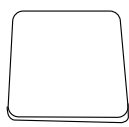

R | 4PCS



C | 3PCS




D | 2PCS




D1 | 2PCS



B | 2PC

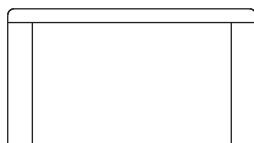

E | 1PC

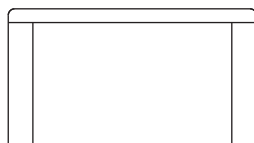


E1 | 1PC



K | 1PCS




G | 1PC



F | 4PCS



Q | 2PCS

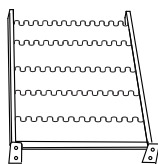


M | 2PCS




N | 4PCS



V | 1PC



O | 1PC



S | 1PC



M8x22x2mm

T | 8PCS



M6x16x2mm

U | 8PCS



Y | 8PCS



X | 8PCS



M6x30mm

V1 | 8PCS



M6x16mm

V3 | 18PCS




M6x35mm



V4 | 6PCS





Z | 1PC

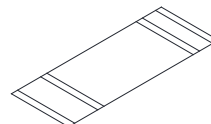

Z1 | 1PC

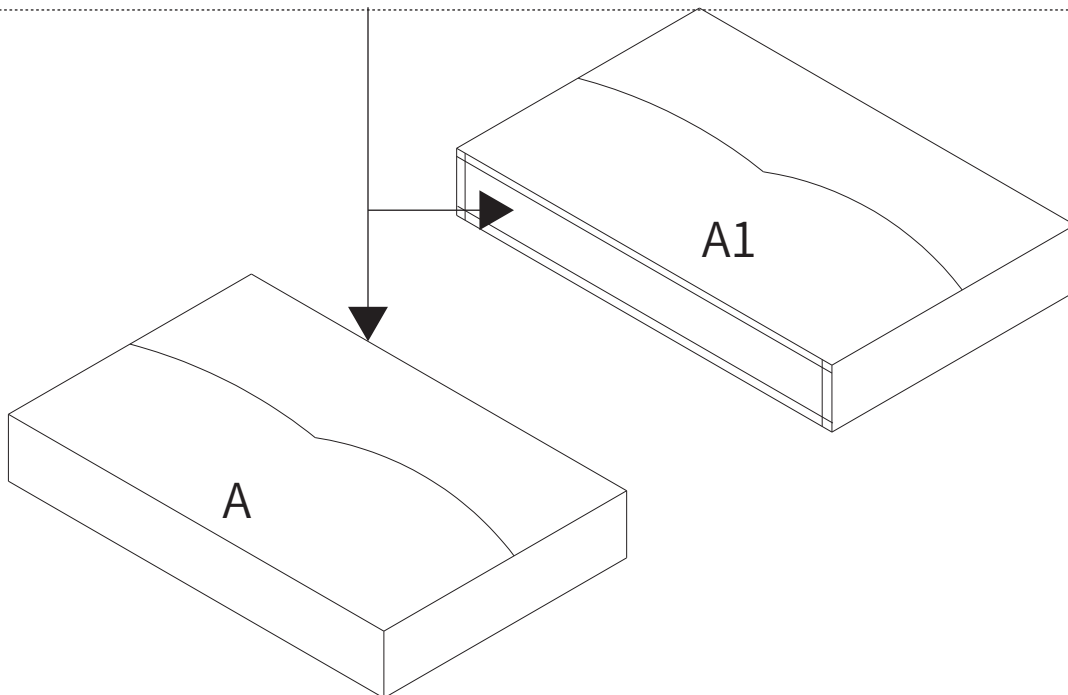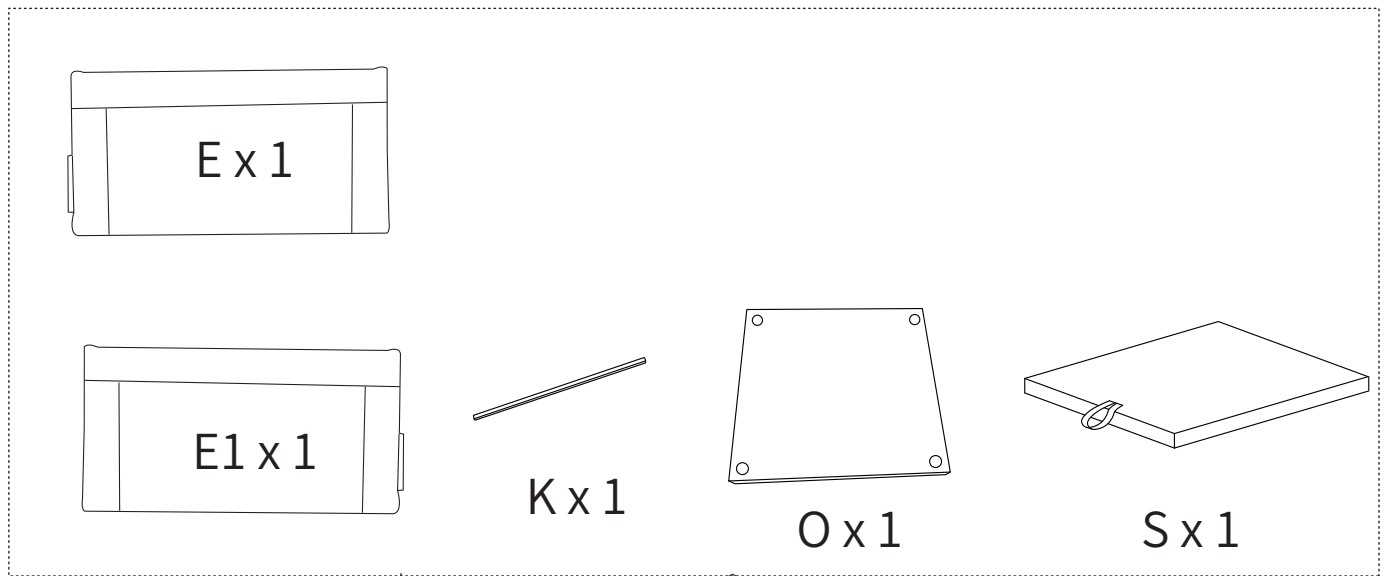


Open the vacuum bag and take the cushions(R/C)
To restore the original shape, follow the steps bellow.

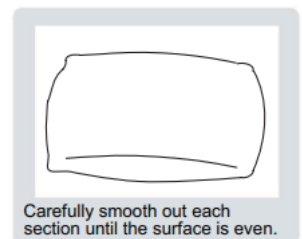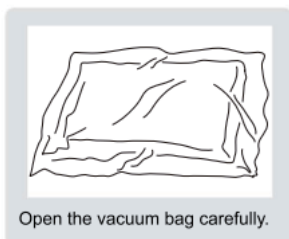


After packing up, place them in somewhere dry and ventilated. After about 72-96 hours. It can be restored to the best use condition.

1

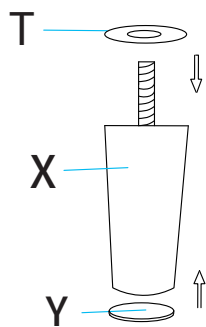


Stick Y on the X

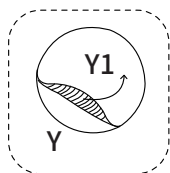


T=8PCS
X=8PCS
Y=8PCS

2

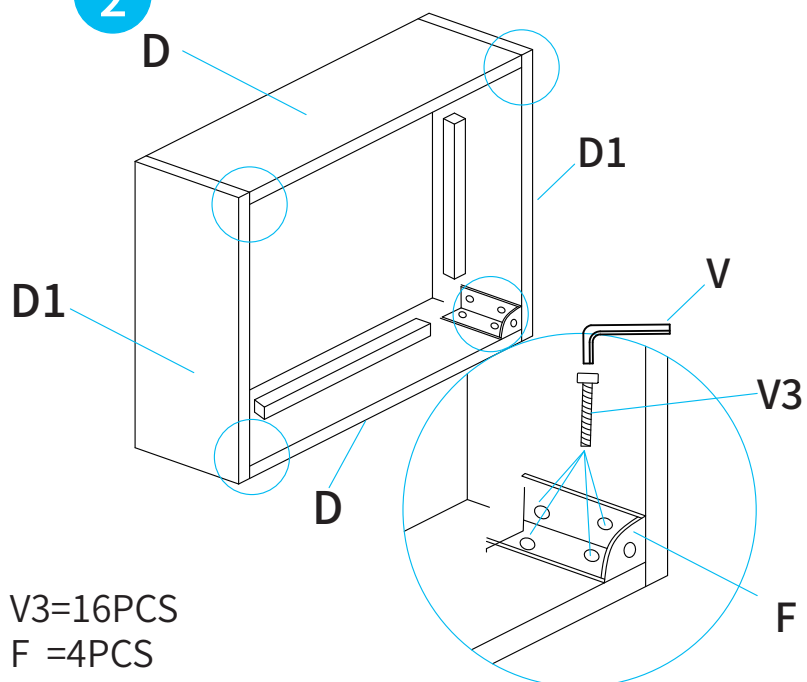

V3=16PCS
F =4PCS


3

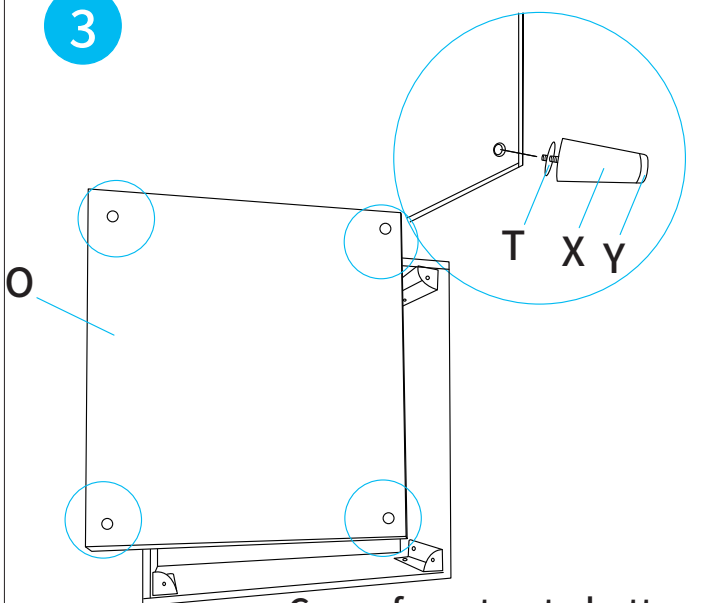

Cover from top to bottom
and align the screw holes


T=4PCS
X=4PCS
Y=4PCS

4

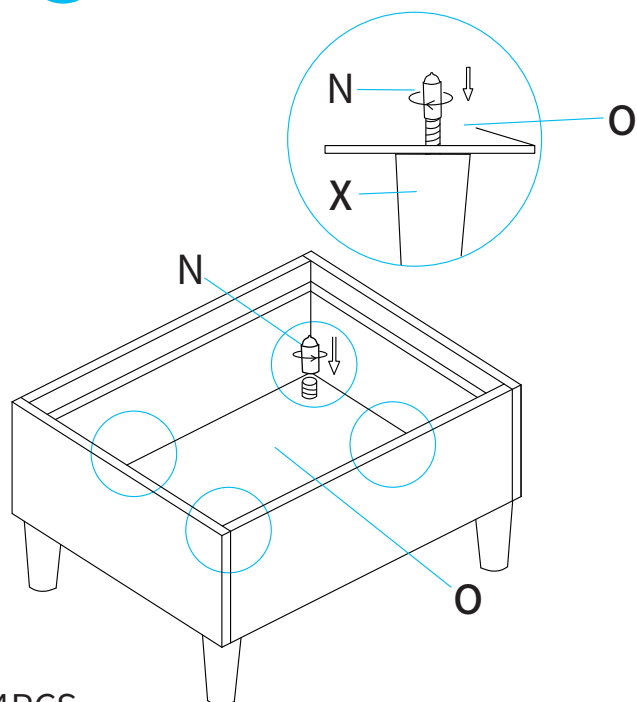


N=4PCS


5

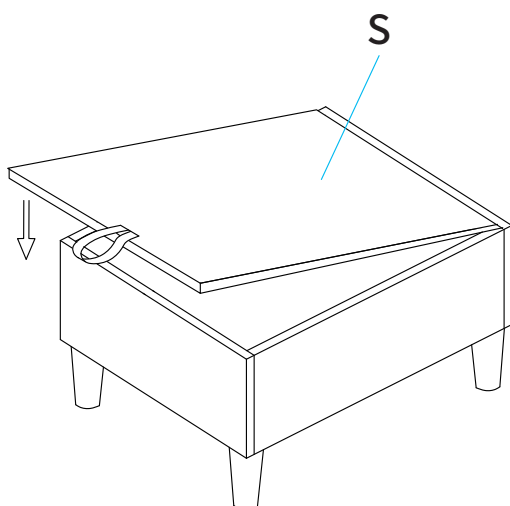

6

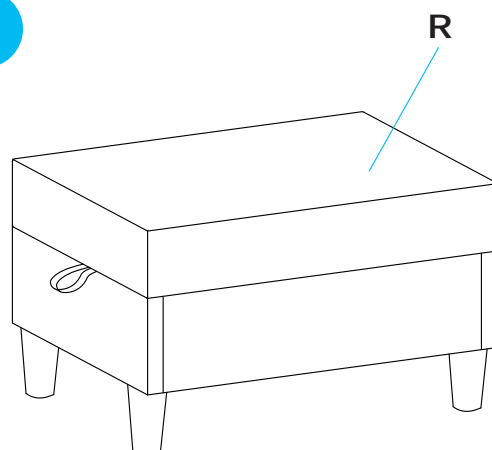


7

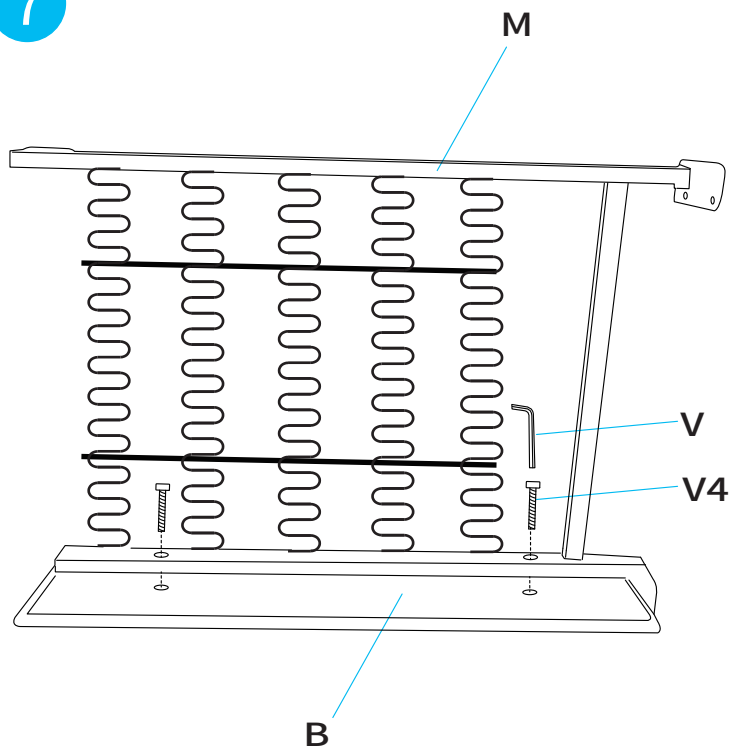


V4=2PCS

8

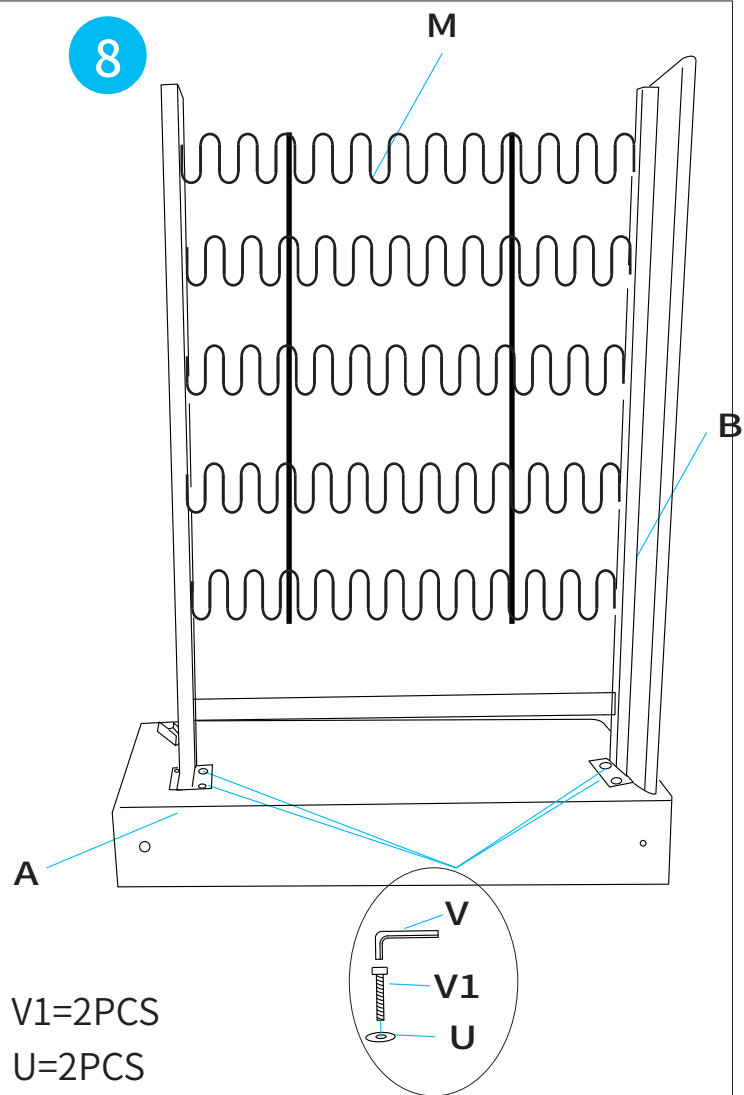


V1=2PCS
U=2PCS


9

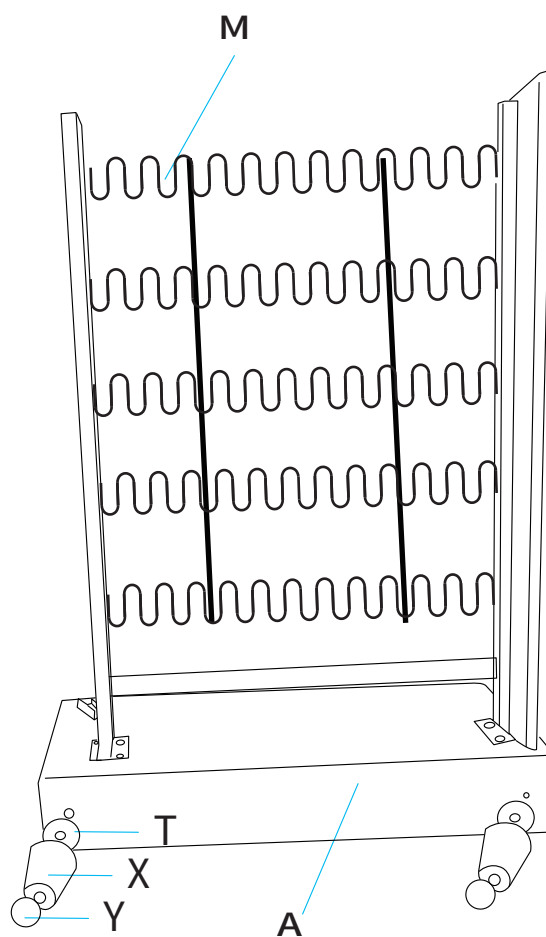


T=2PCS
X=2PCS
Y=2PCS

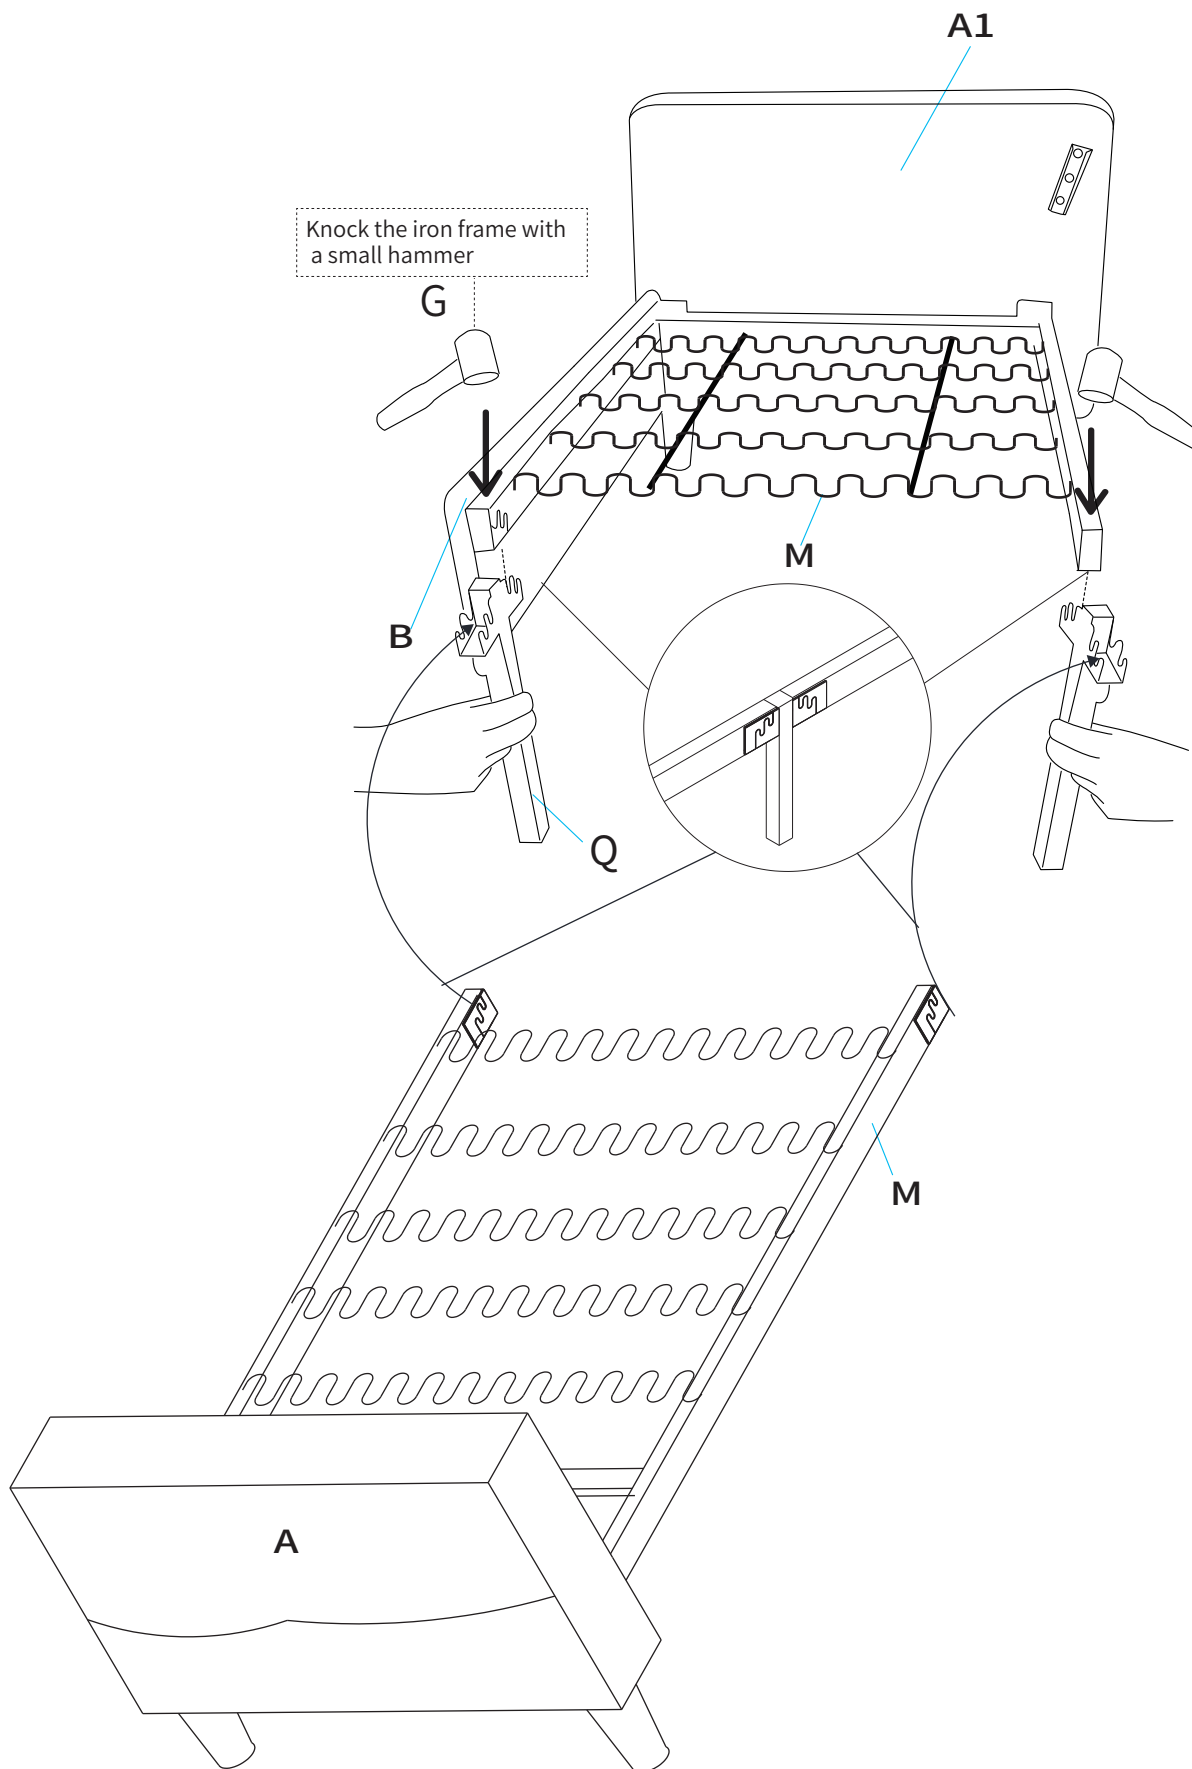


11

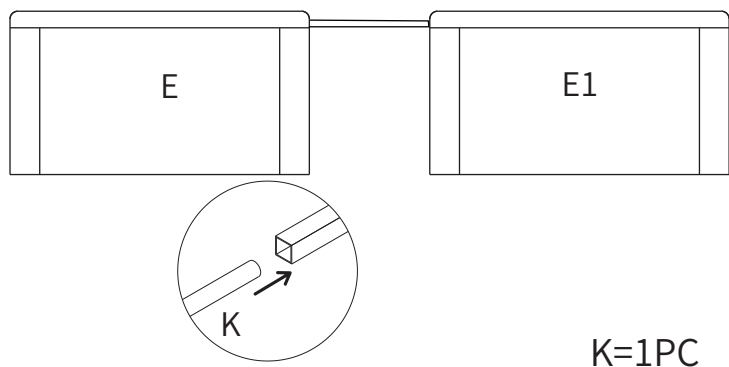


12

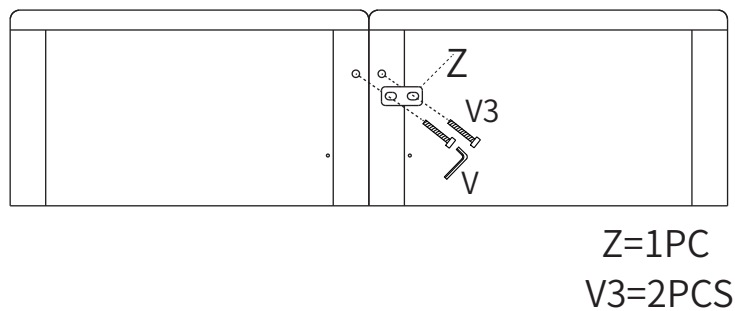

13

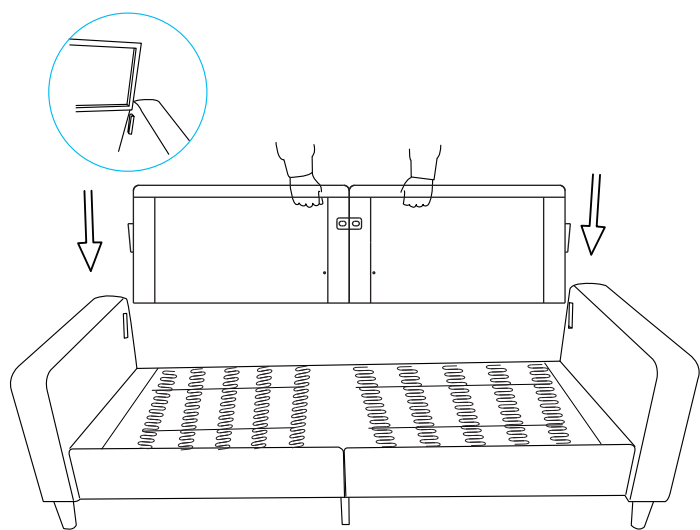

14

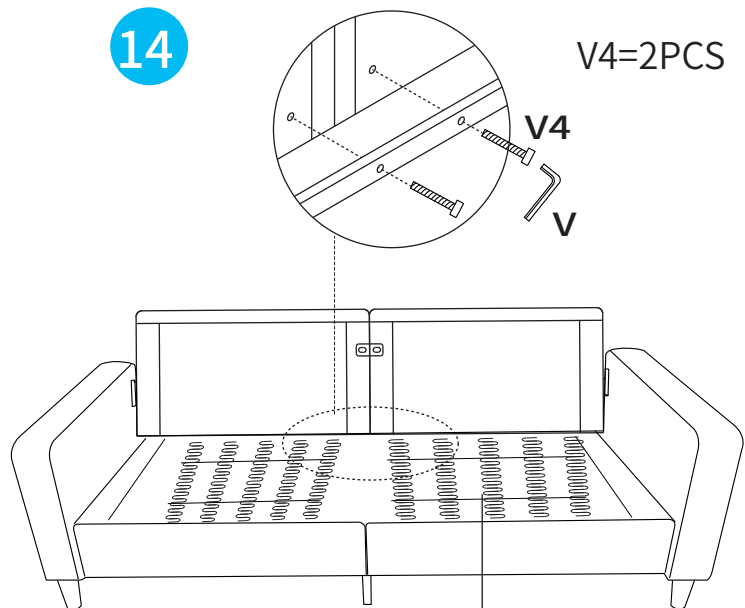

Put the cloth on the spring, and fold and stick the Velcro from the edge of the spring down.

15

