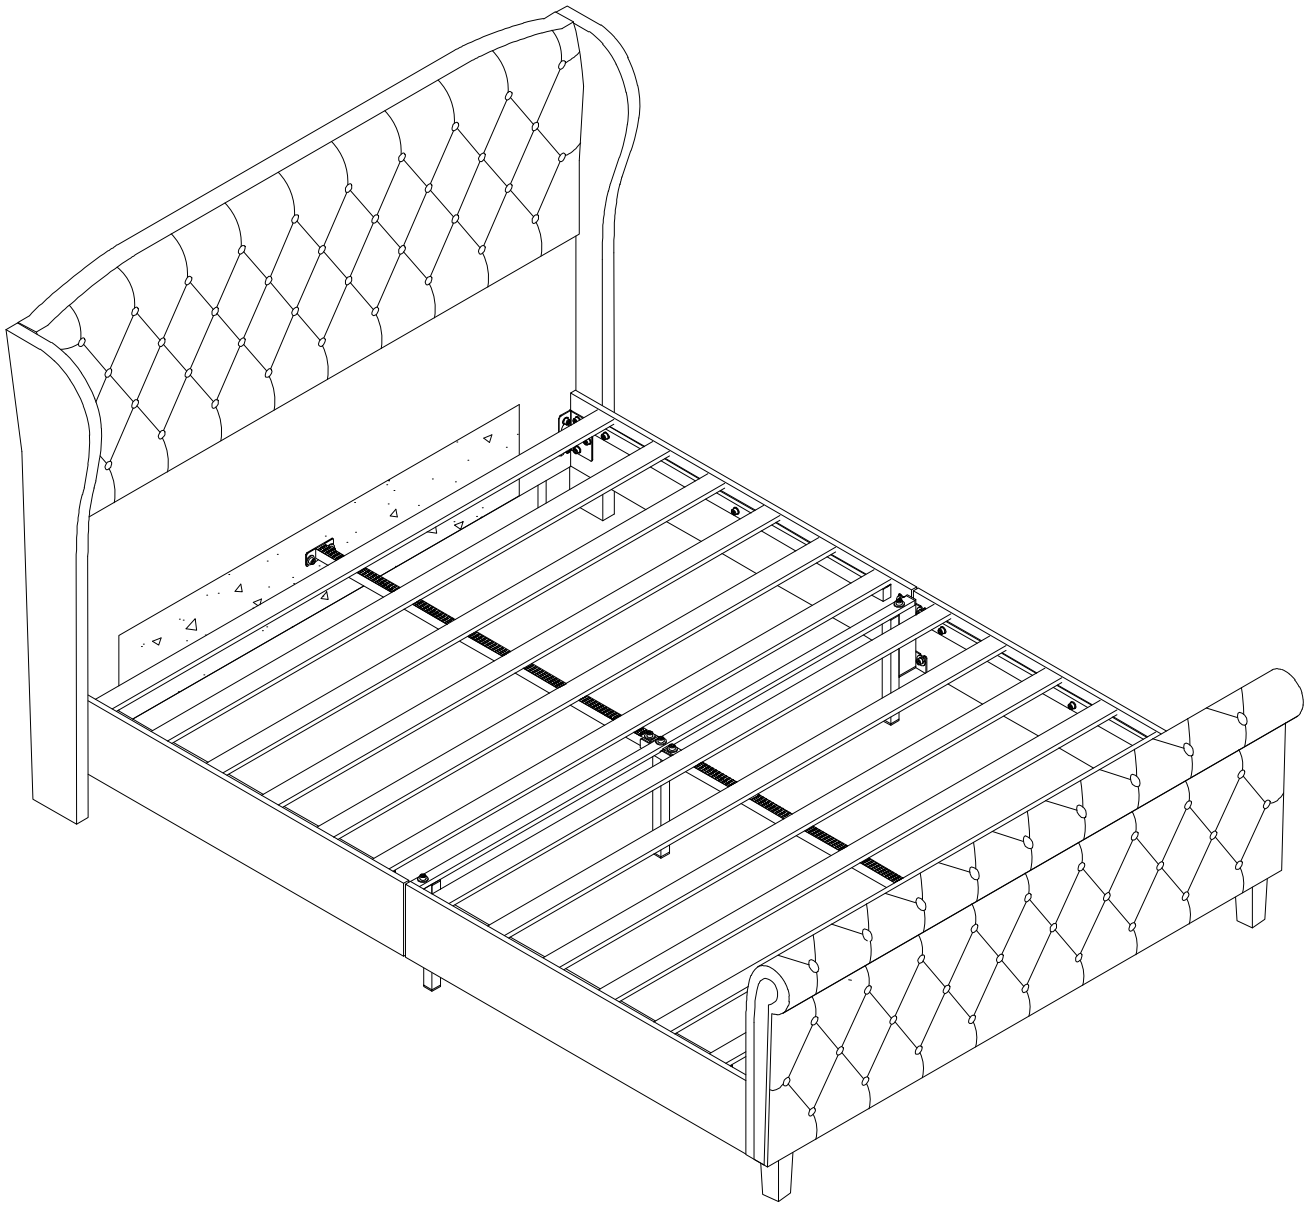
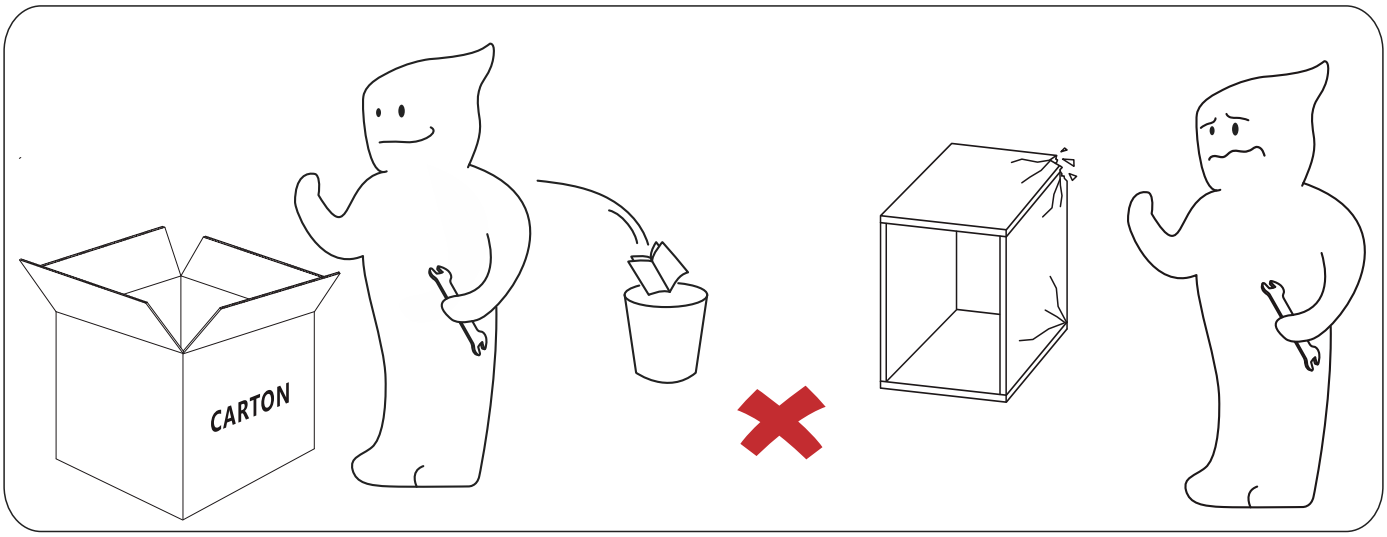
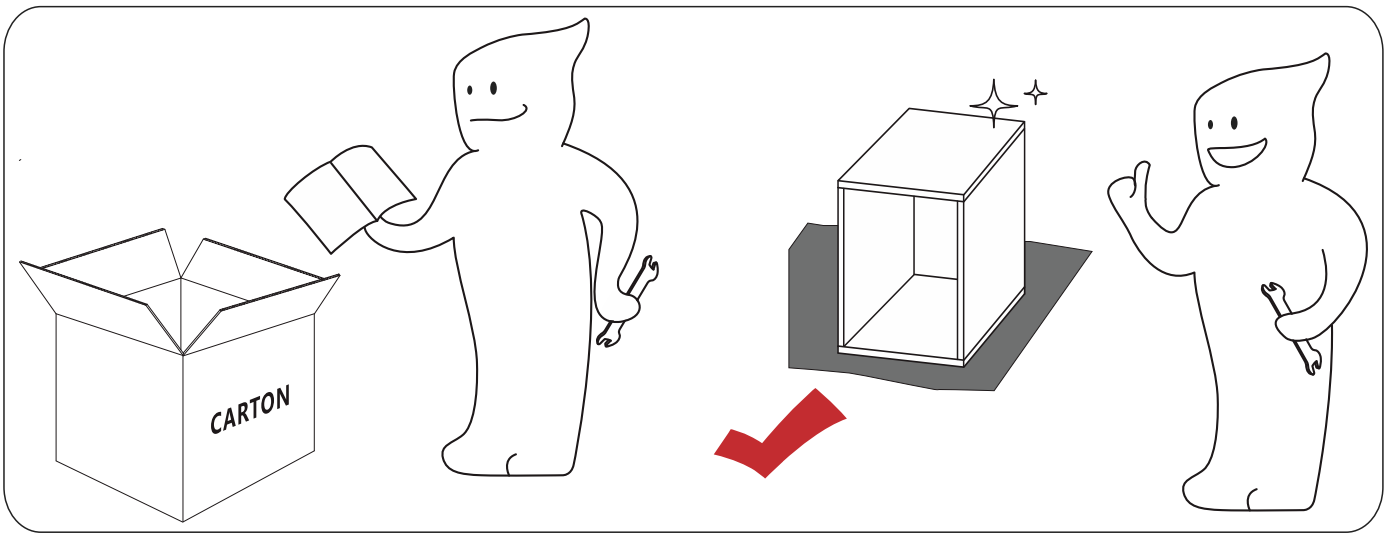
Upholstered Platform Bed with Tufted Wingback Headboard



IMPORTANT

Please follow the instruction manuals and use a pad to protect the product during your assembly.

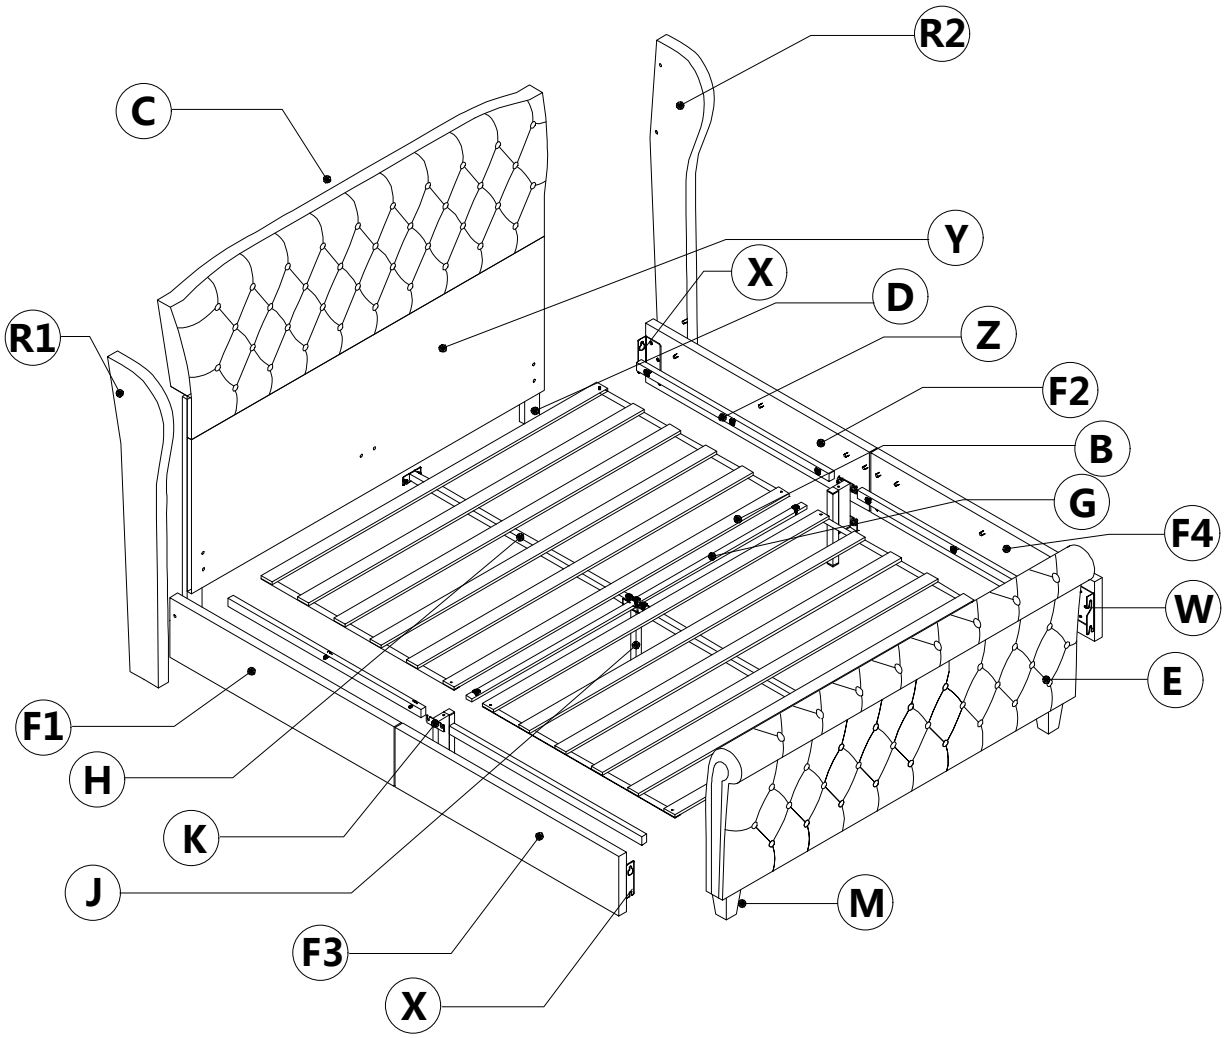


















Note:
1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.














For easier and better assembly, **2** or more adults are required.


R2
C
Y
X
D
R1
Z
F2
B
G
F4
W
E
F1
H
K
J
M
F3
X

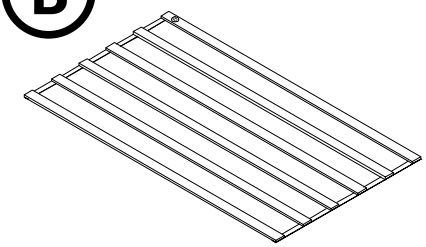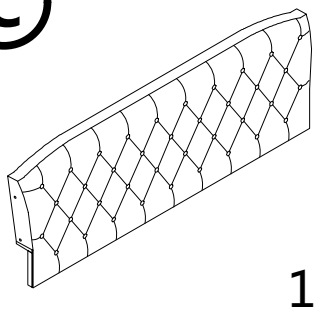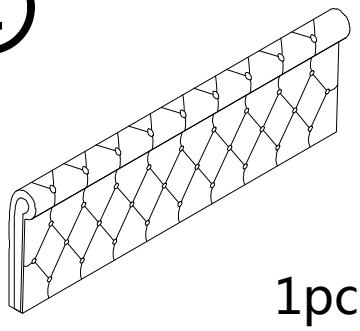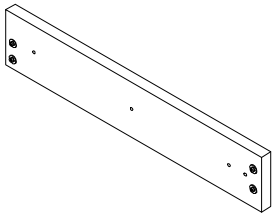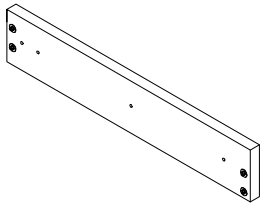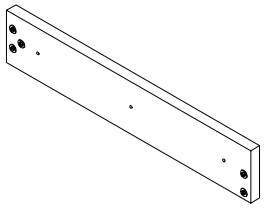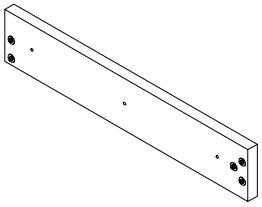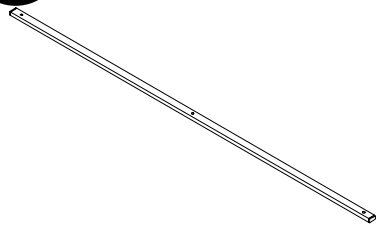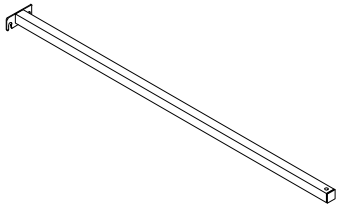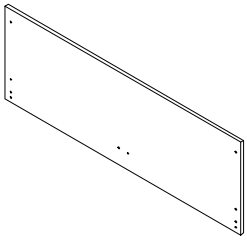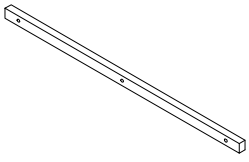BED FRAME PARTS LIST


B  2pcs	C  1pc	D  2pcs
E  1pc	F1  1pc	F2  1pc
F3  1pc	F4  1pc	G  1pc
H  2pcs	R1  1pc	R2  1pc
Y  1pc	Z  4pcs	

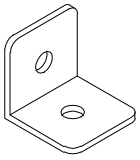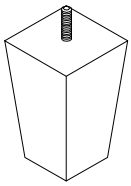FITTING PARTS LIST

Ⓘ  1pc	Ⓙ  1pc	Ⓚ  2pcs
Ⓜ  2pcs	Ⓝ  M8 X40mm 25pcs+1pc	Ⓟ  M8 Spanner 1pc
Ⓠ  M8 X50mm 2pcs	Ⓠ1  M8 X45mm 2pcs	Ⓠ2  M8 X80mm 2pcs
Ⓦ  2pcs	Ⓧ  2pcs	


STEP 1

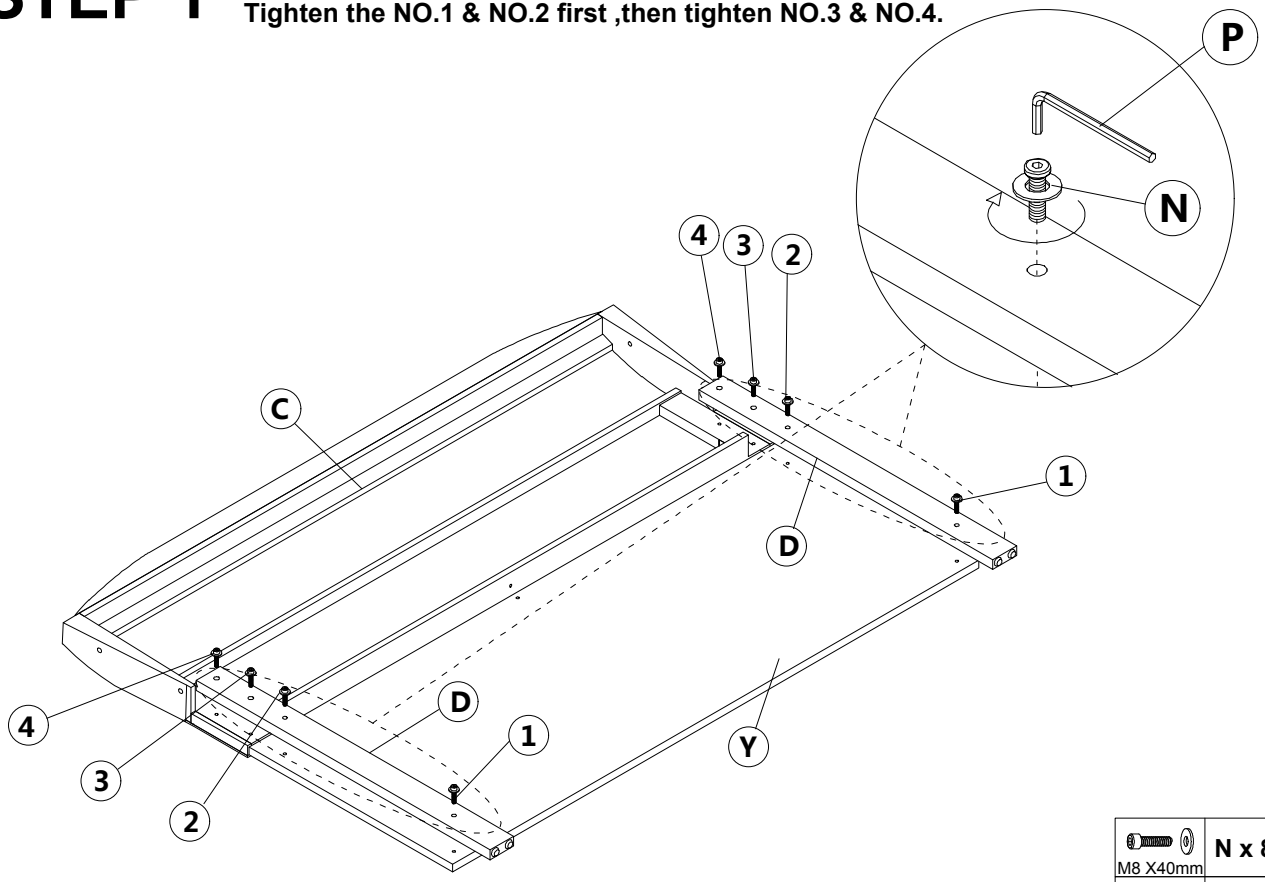Tighten the NO.1 & NO.2 first ,then tighten NO.3 & NO.4.




M8 X40mm	N x 8pcs
	P x 1pc

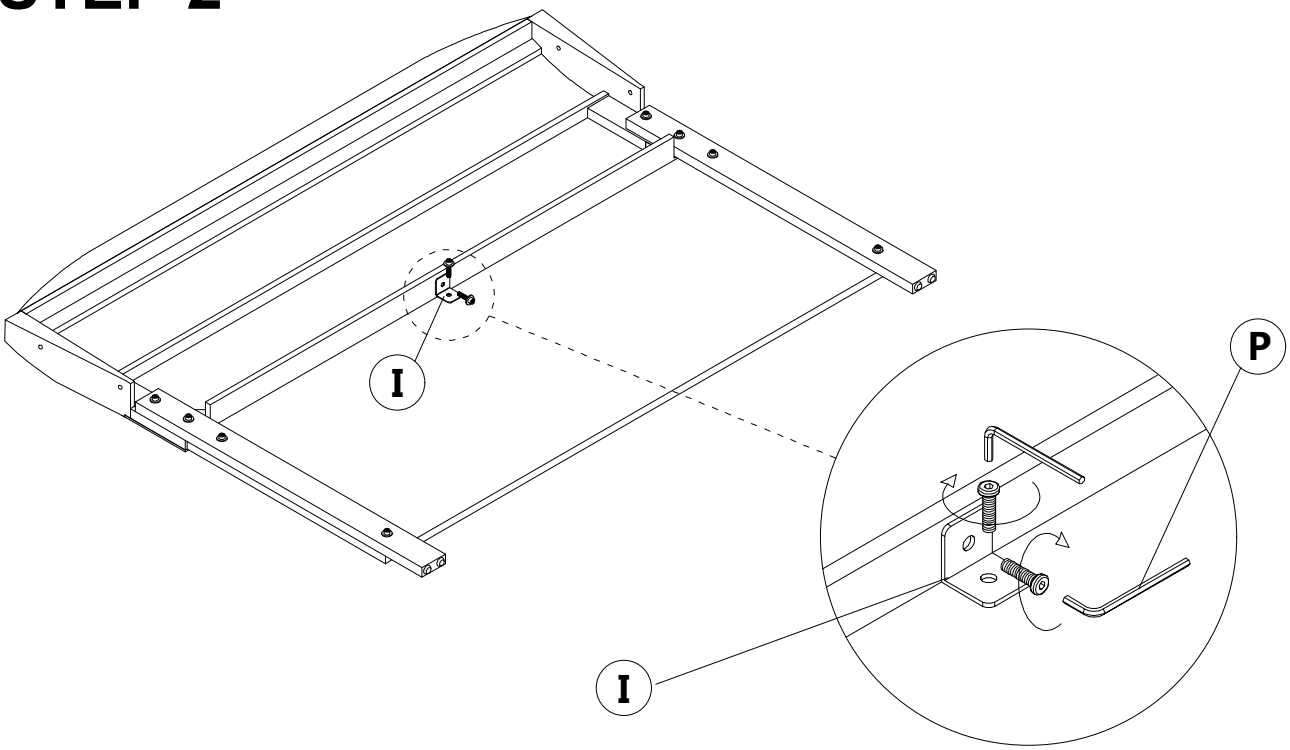STEP 2




	I x 1pc
	P x 1pc

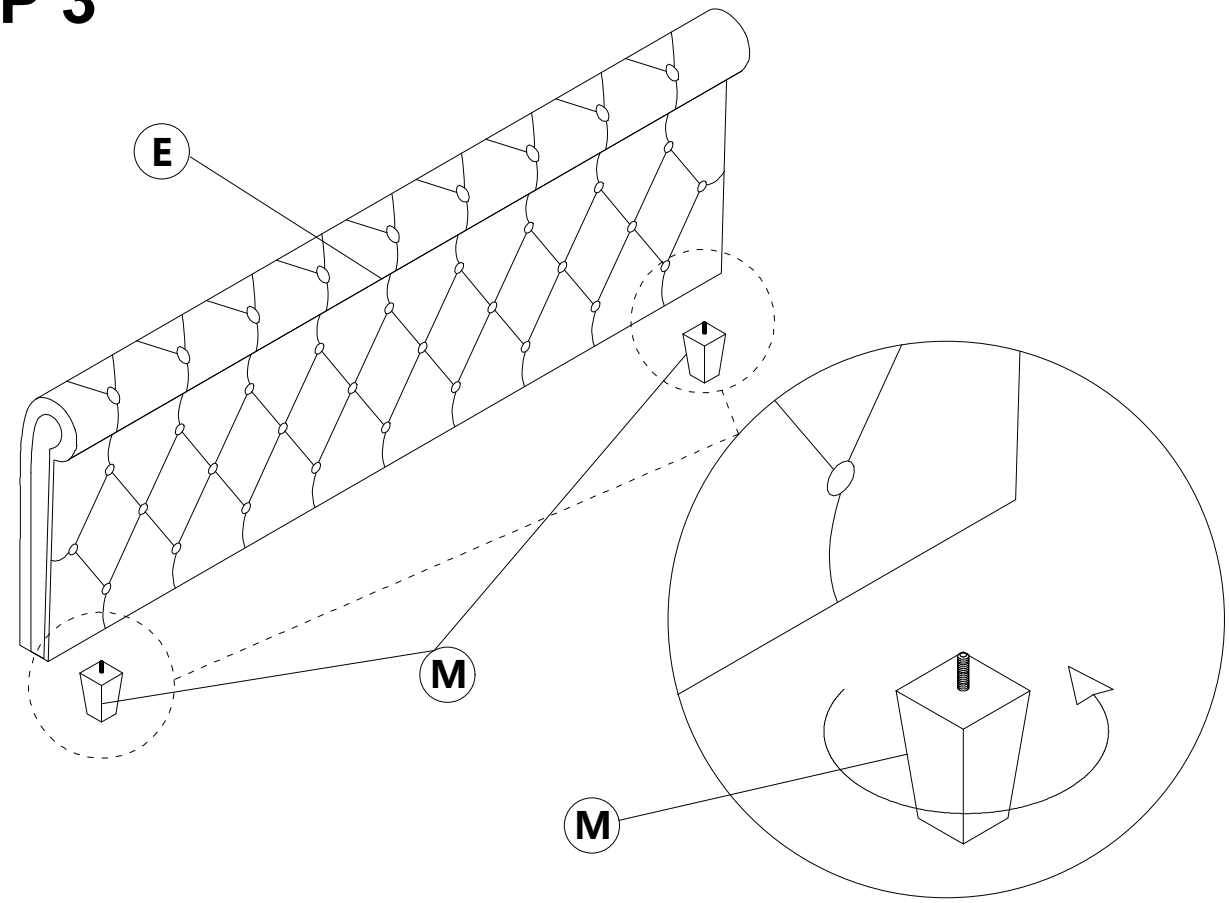STEP 3



STEP 4

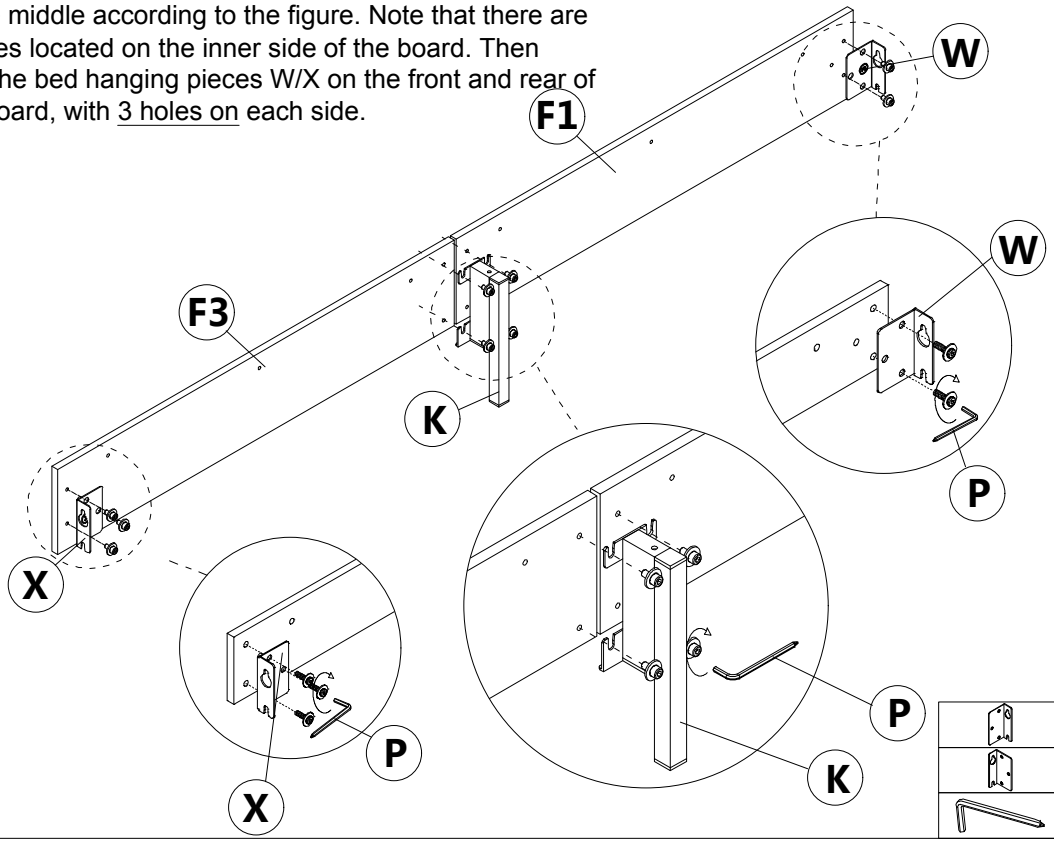
Take out parts F1 and F3, and lock the iron frame foot K in the middle according to the figure. Note that there are 2 holes located on the inner side of the board. Then lock the bed hanging pieces W/X on the front and rear of the board, with 3 holes on each side.



	W x 1PC
	X x 1PC
	P x 1PC

STEP 5

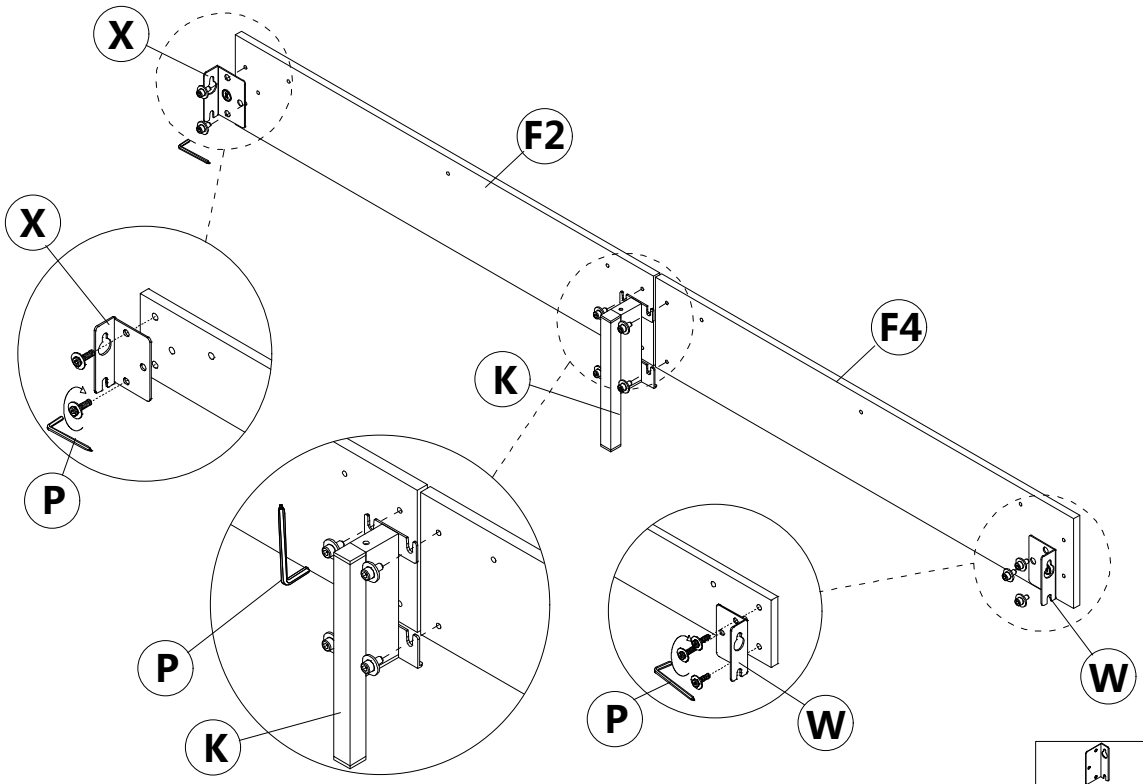
Same as Step 4



	W x 1PC
	X x 1PC
	P x 1PC

STEP 6

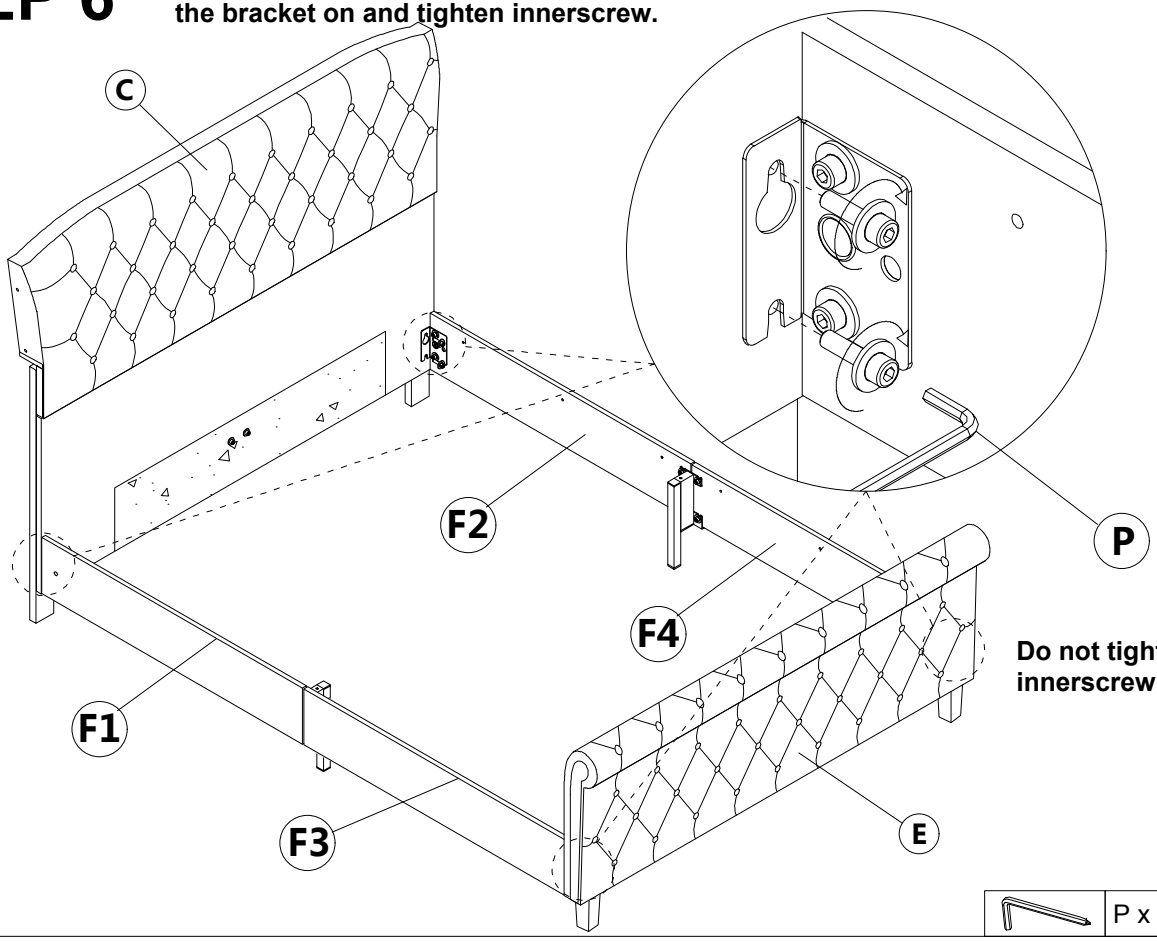
Loosen the screw of headboard side leg and both sides of footboard,then hang the bracket on and tighten innerscrew.



Do not tighten the innerscrew

	P x 1PC

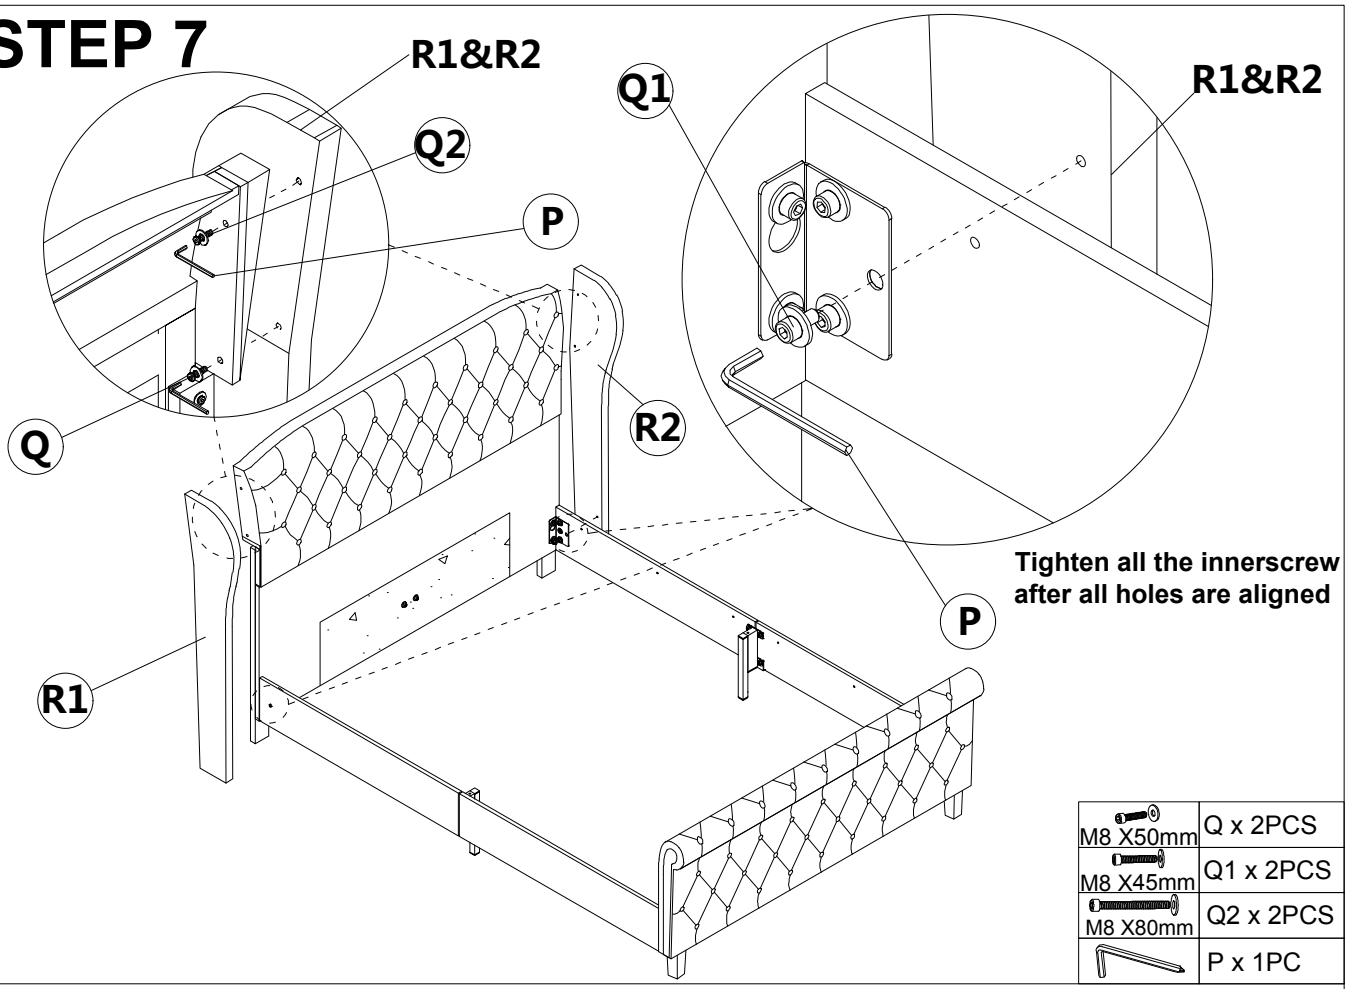
STEP 7



Tighten all the innerscrew after all holes are aligned

M8 X50mm	Q x 2PCS
M8 X45mm	Q1 x 2PCS
M8 X80mm	Q2 x 2PCS
	P x 1PC

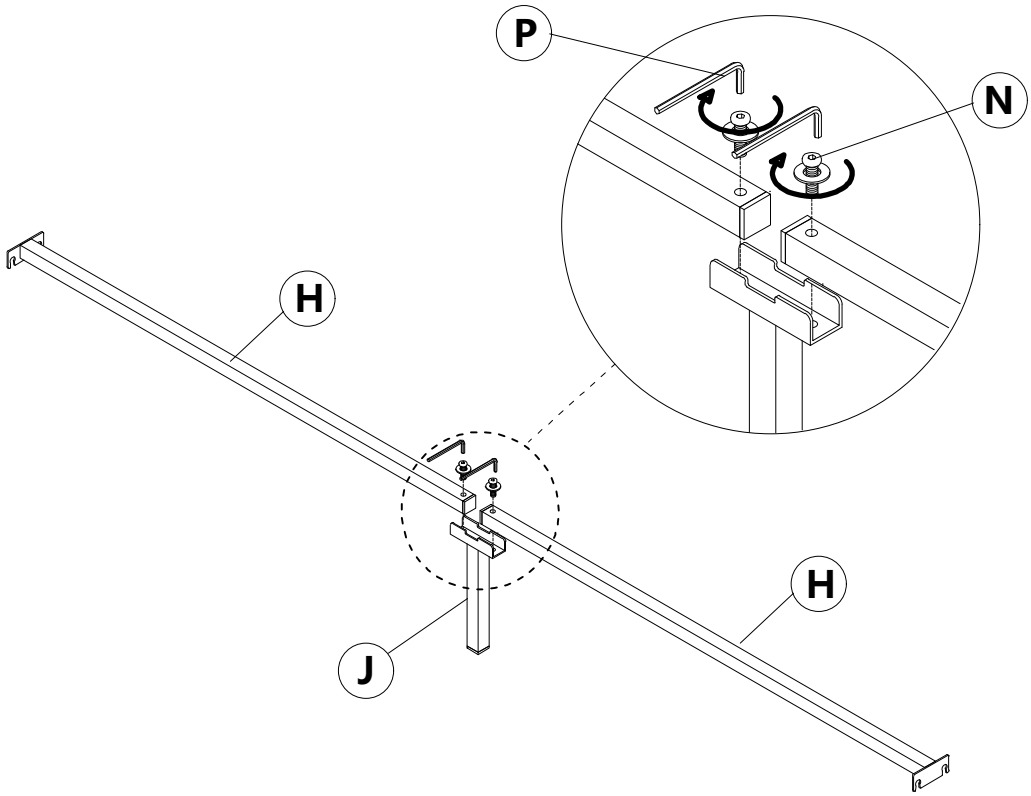
STEP 8



M8 X40mm	**N x 2pcs**
	P x 1pc


STEP 9

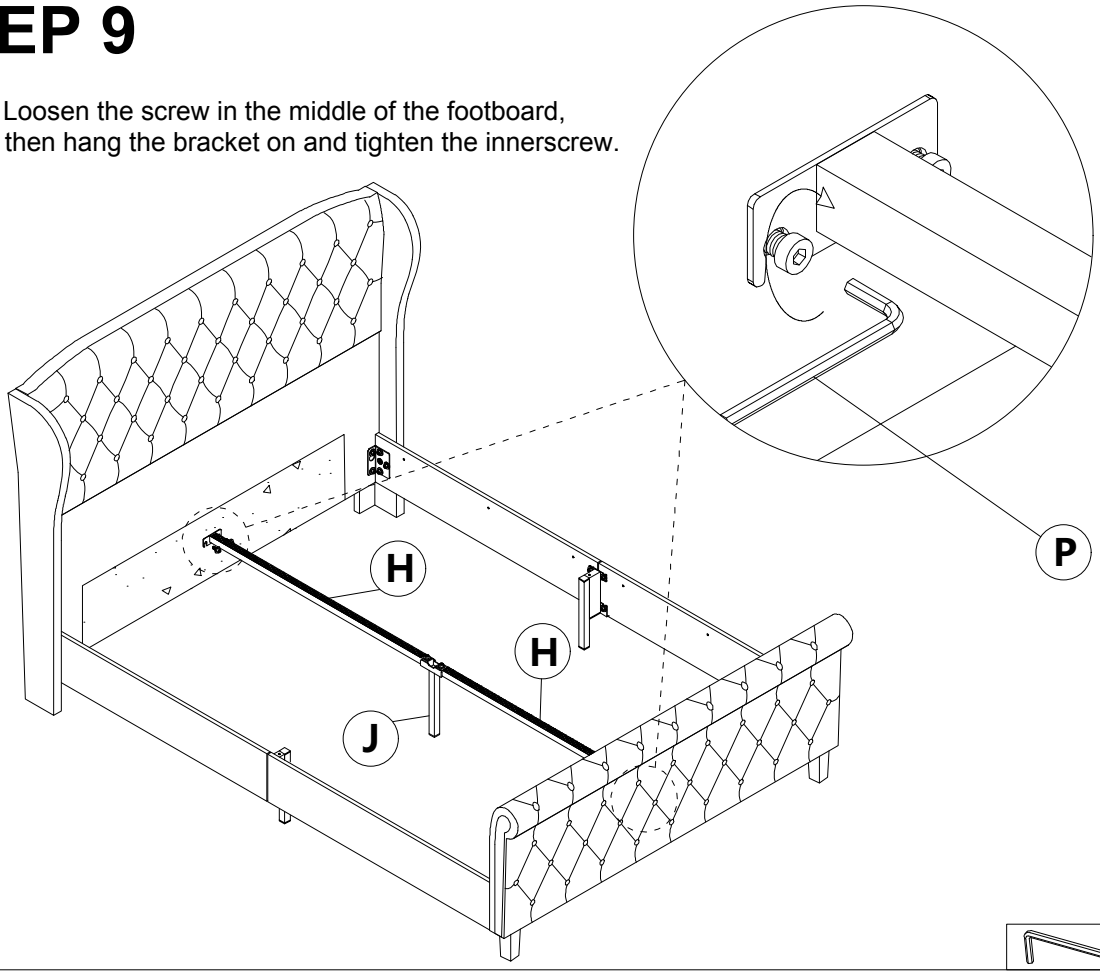Loosen the screw in the middle of the footboard,
then hang the bracket on and tighten the innerscrew.




	P x 1PC

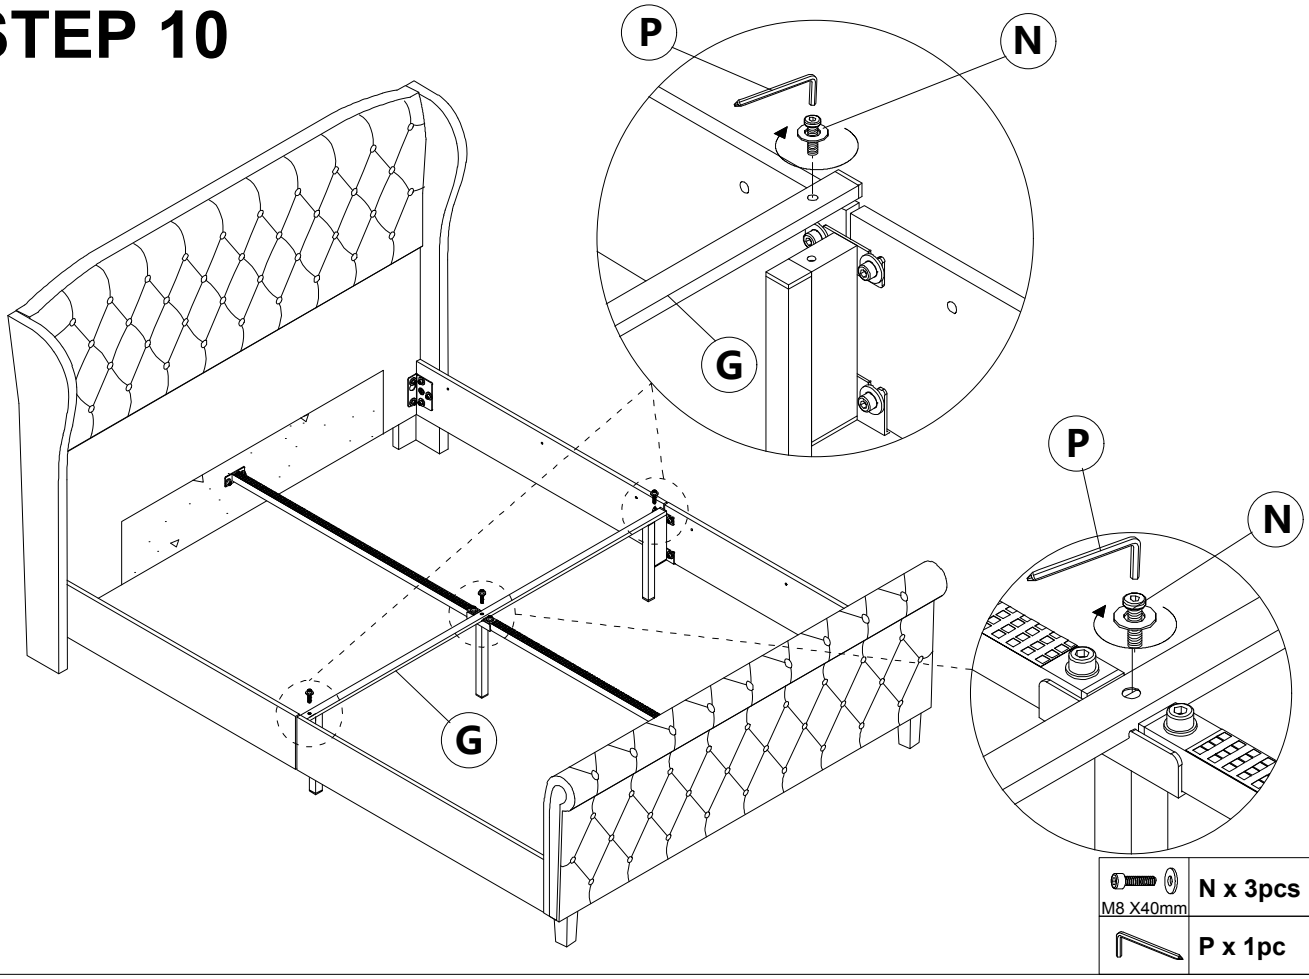STEP 10




M8 X40mm	N x 3pcs
	P x 1pc

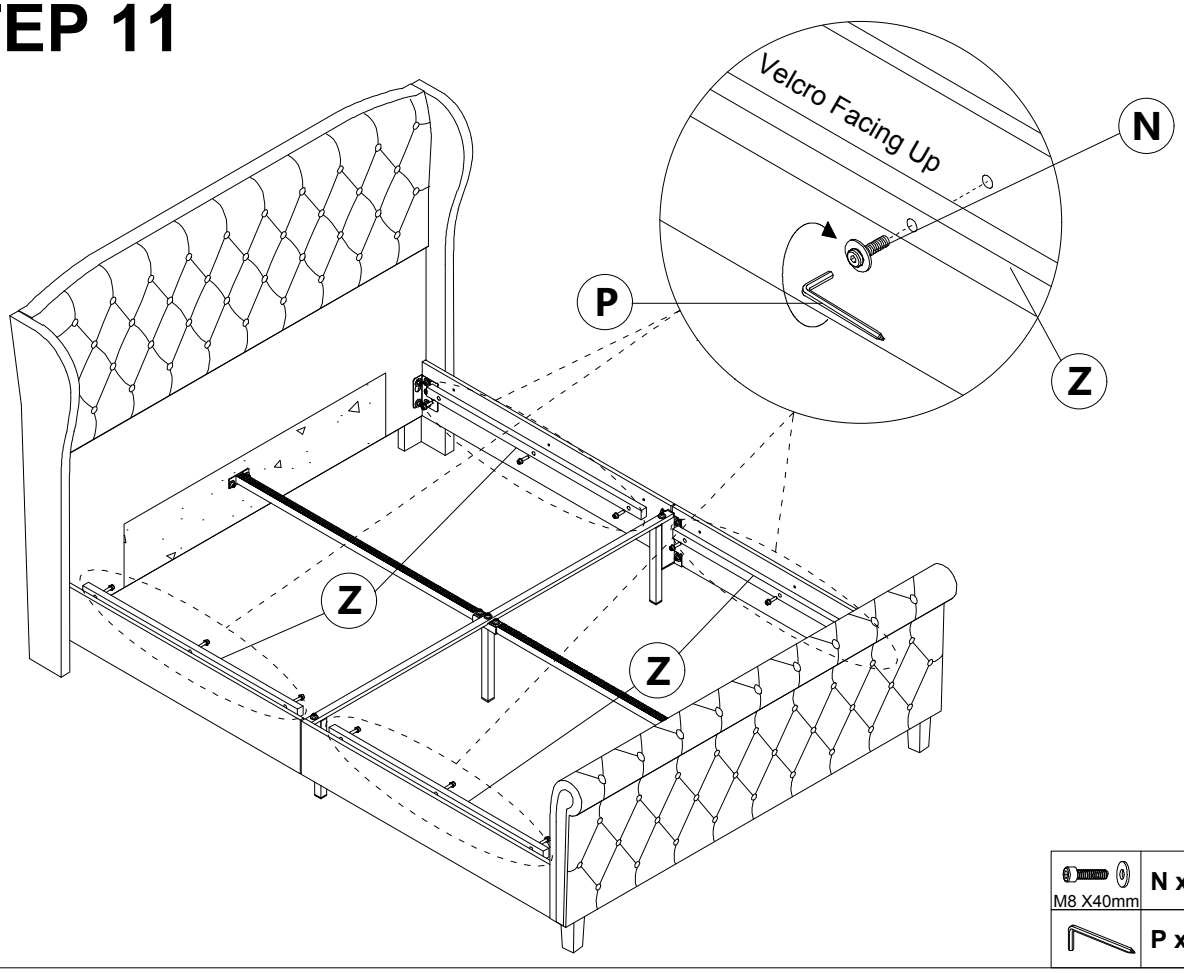STEP 11




M8 X40mm	N x 12pcs
	P x 1pc

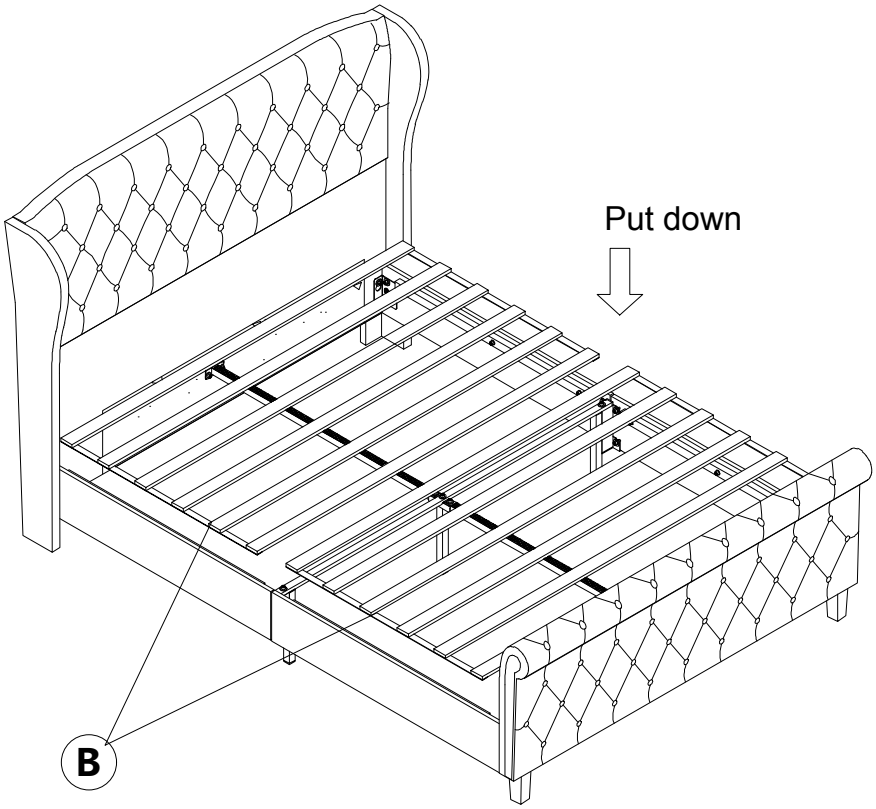STEP 12



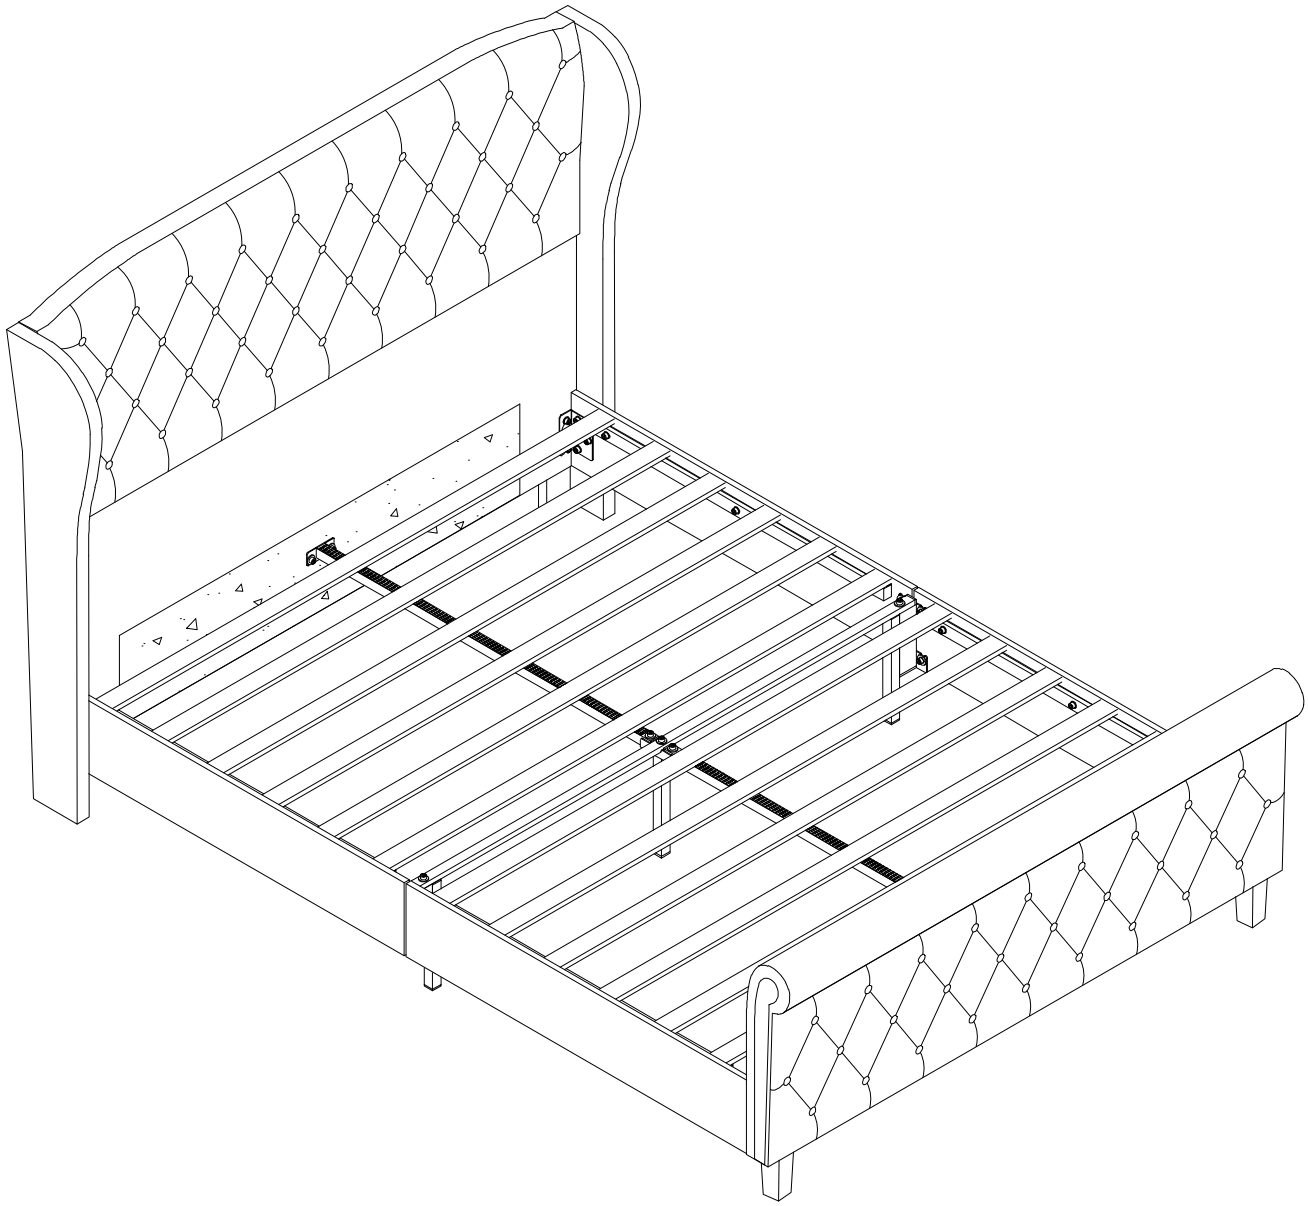STEP 13



Installation Complete