ASSEMBLY INSTRUCTIONS FOR ACME FURNITURE
MODEL#96455&96456


Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Seperate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed

*** Do not fully tighten screws untill fully assembled ***

PARTS LIST

NO	DESCRIPTION	SRETCH	QTY
Ⓐ	Chair Back		1 Pc
Ⓑ	Seat Frame		1 Pc
Ⓒ	Cushion Seat		1 Pc
Ⓓ	Chair Leg		4 Pcs
Ⓔ	Foot Rest		1 Pc


HARDWARE LIST

NO	DESCRIPTION	SRETCH	QTY
①	Bolt 1/4 * 40mm		18 Pcs
②	Spring Washer Ø5/16 * 13mm		18 Pcs
③	Flat Washer Ø5/16 * 19mm		18 Pcs
④	Screw Ø3 * 15mm		4 Pcs
⑤	Allen Key M4		1 Pc


Attention

***Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.


STEP 1

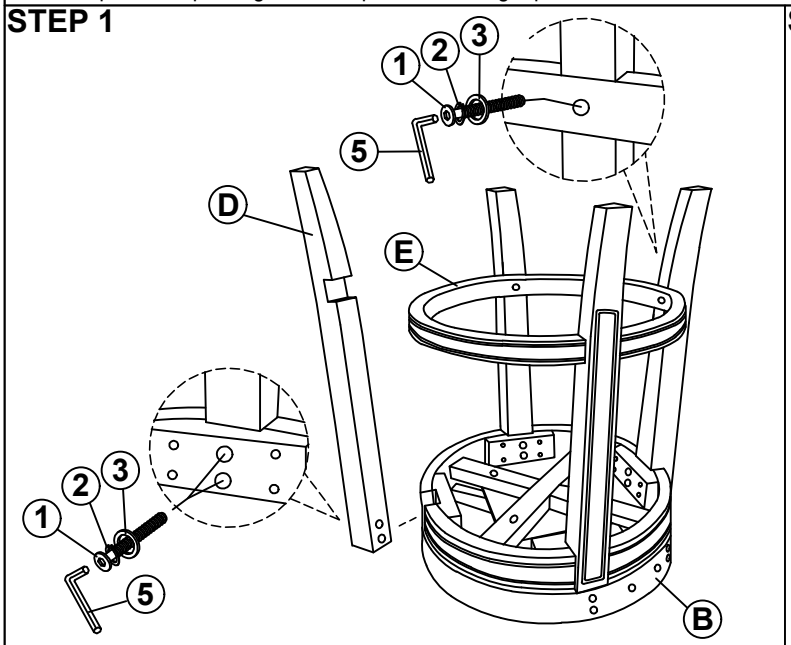


STEP 2

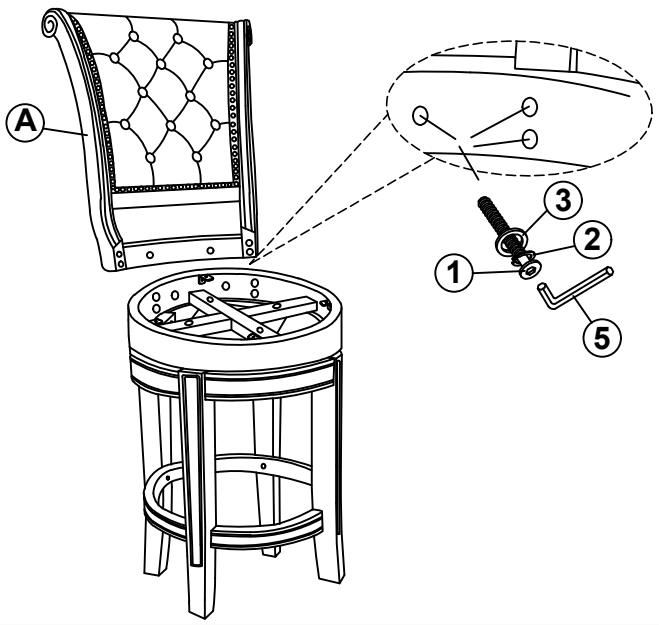

STEP 3

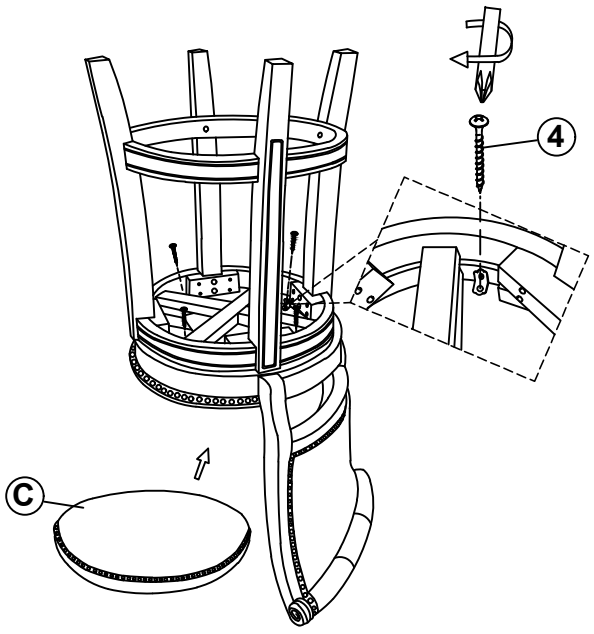

STEP 4 **Complete**

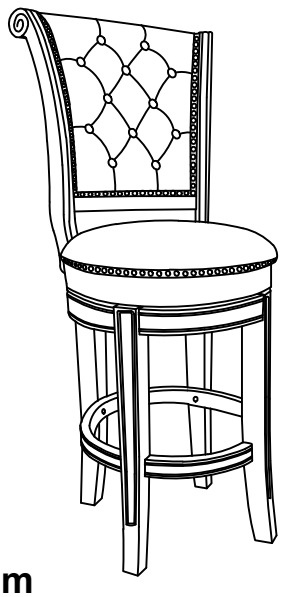

Made in Vietnam