
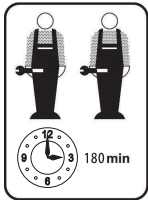


Assembly Instruction


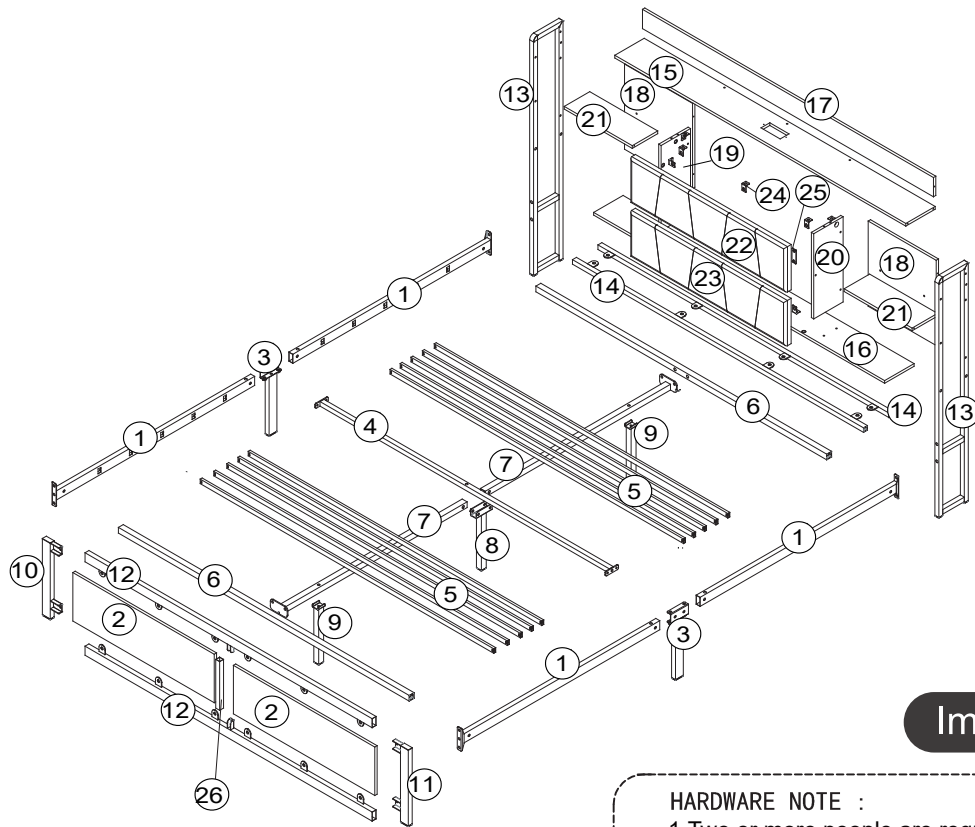






Important Note

HARDWARE NOTE :


1. Two or more people are required for assembly
2. Do not screw on the bolts too tight unless the installation is done. Make sure all bolts are tightly screwed before you use it.

Components

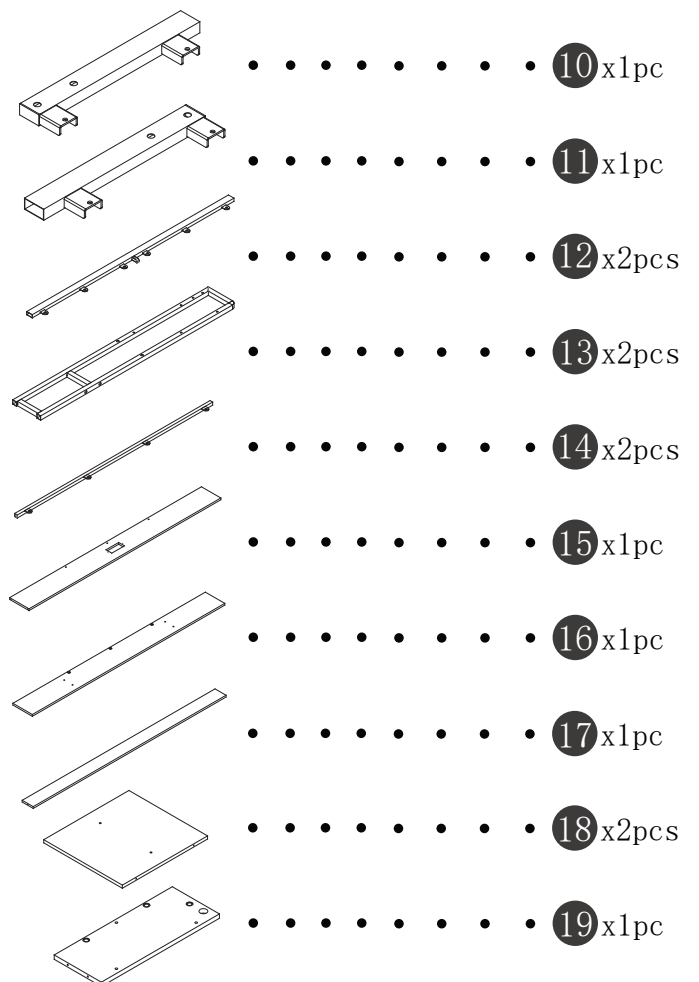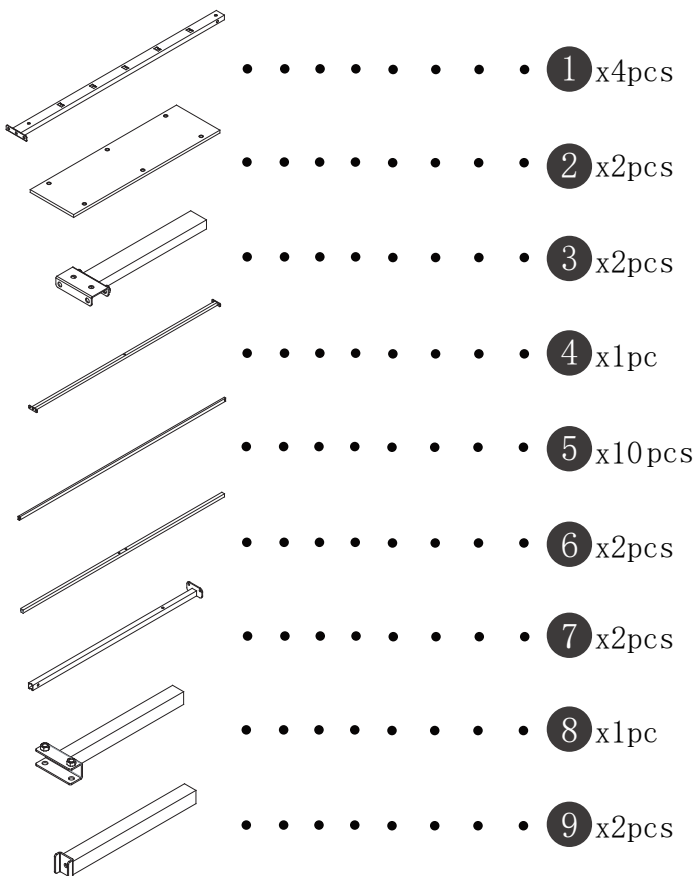

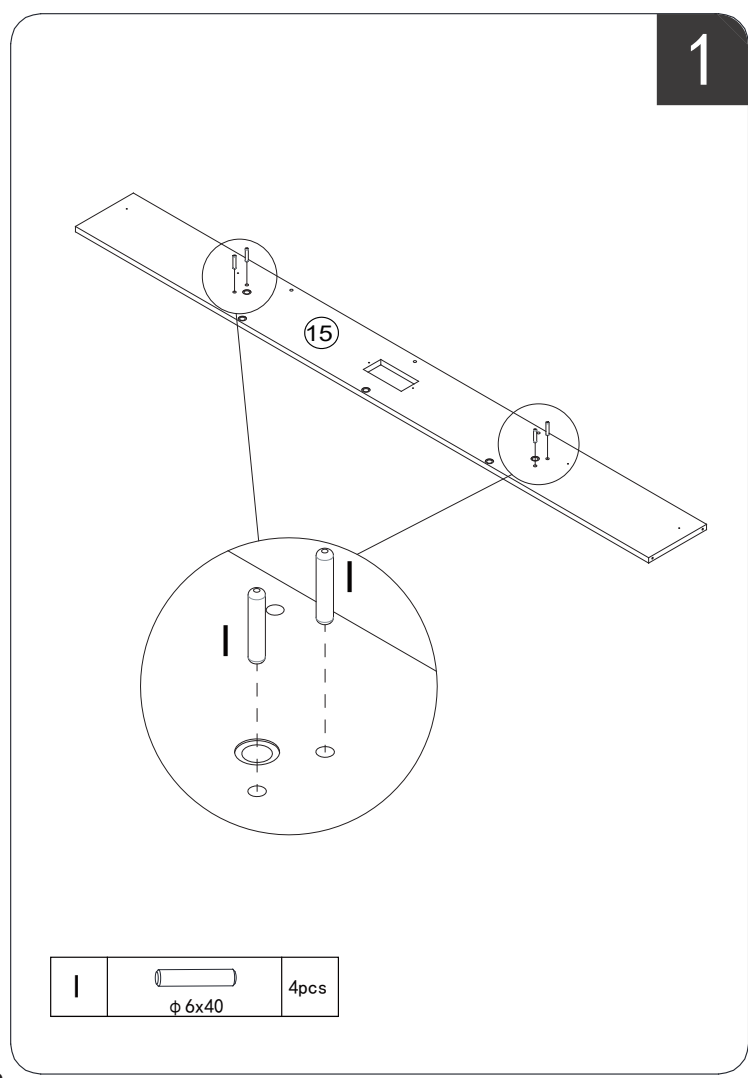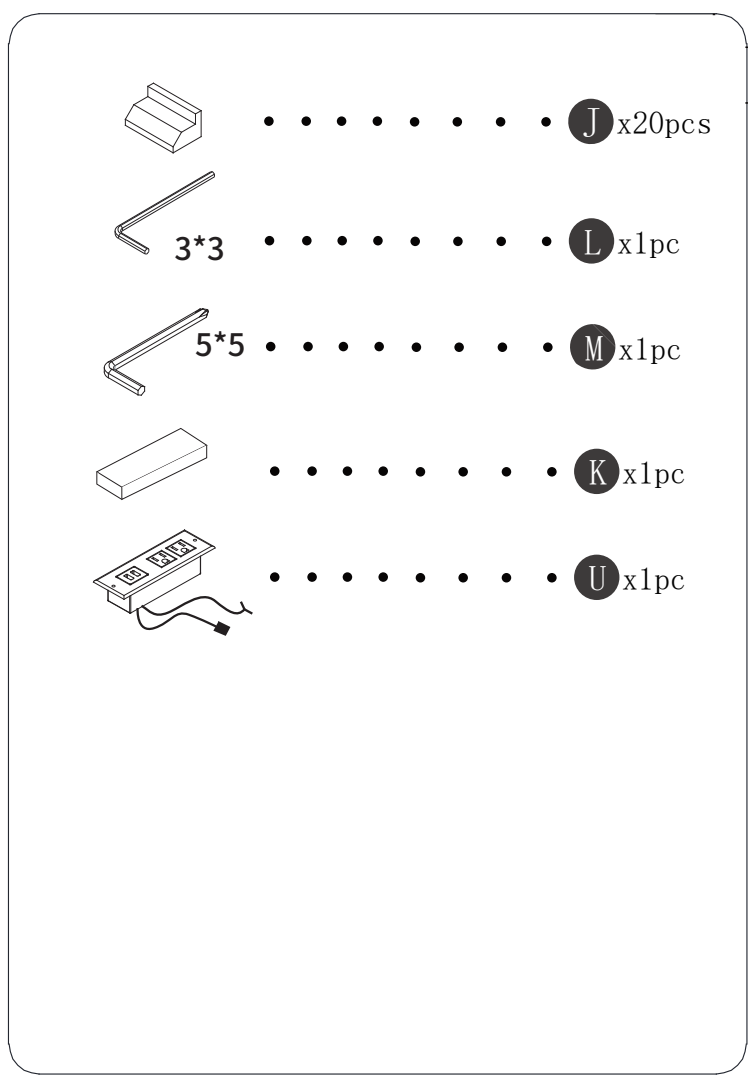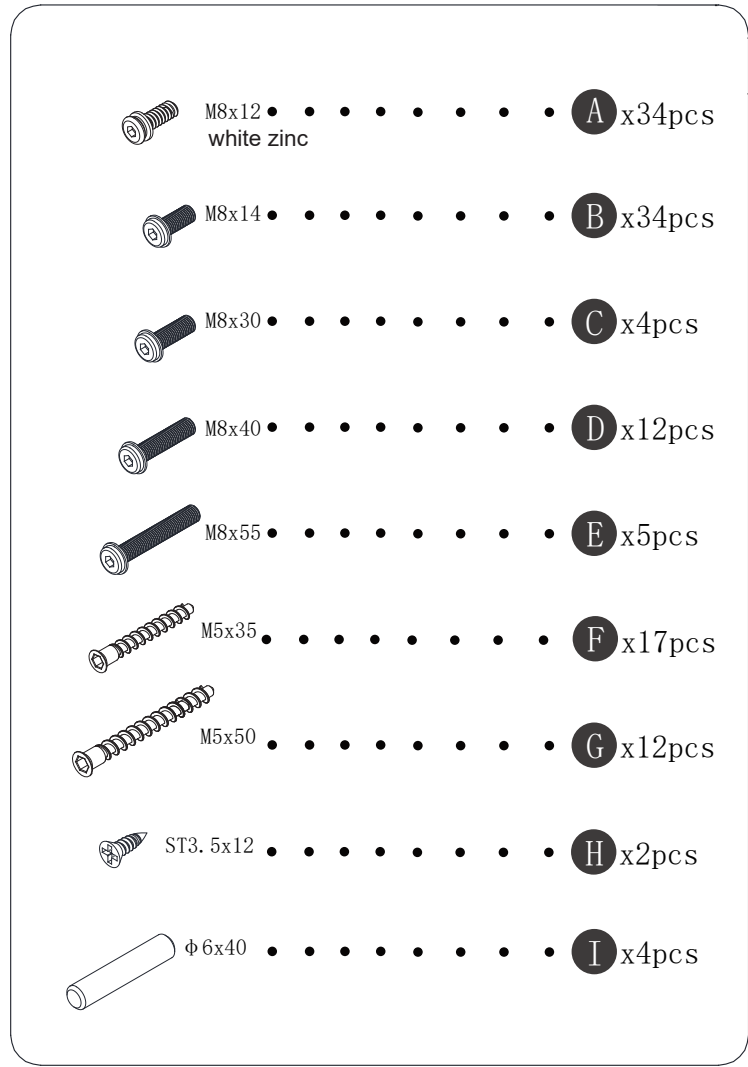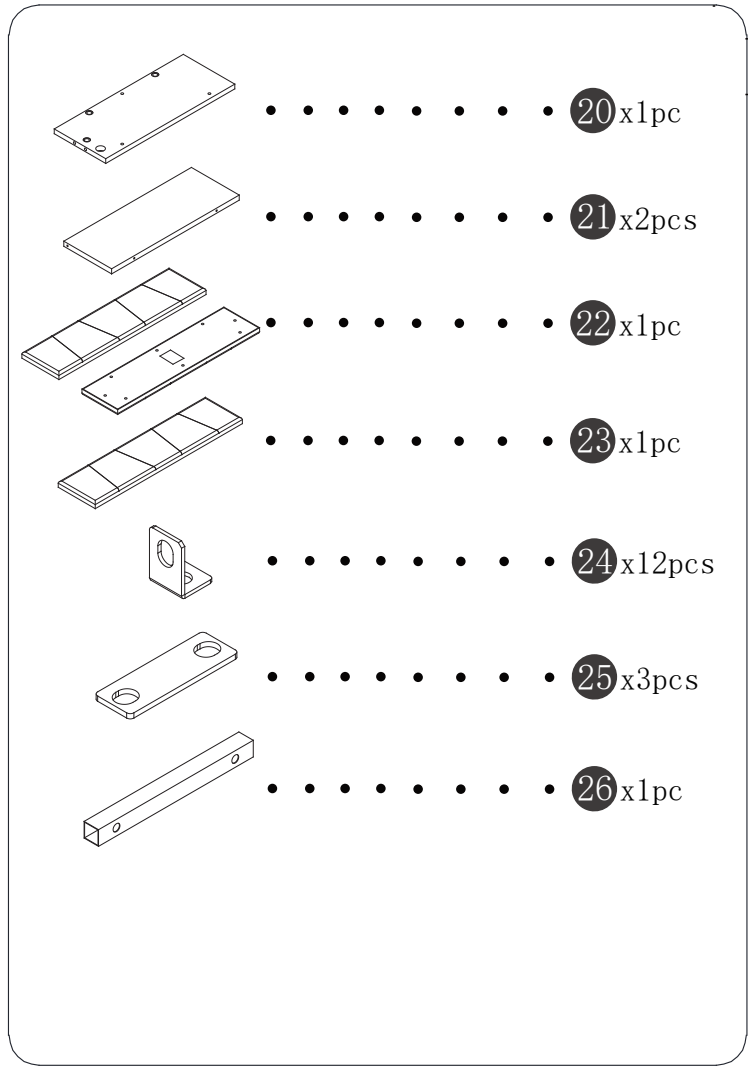


2

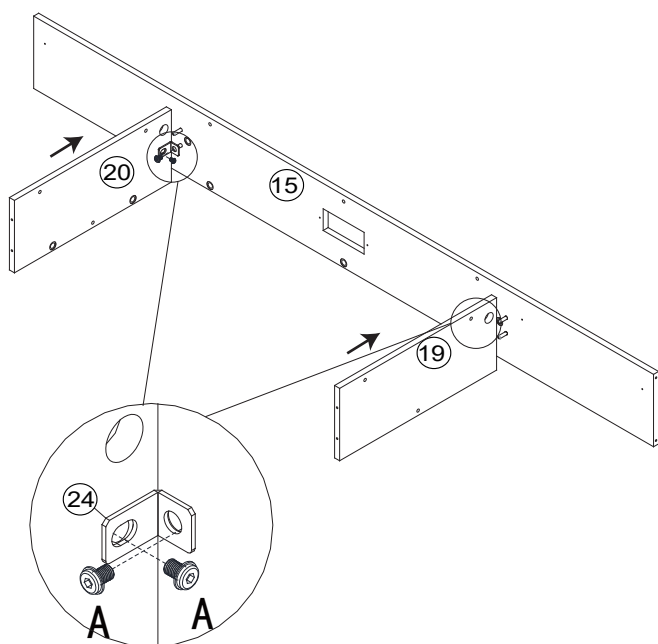

A		4pcs	white zinc
---	--	------	------------

M8x12


3

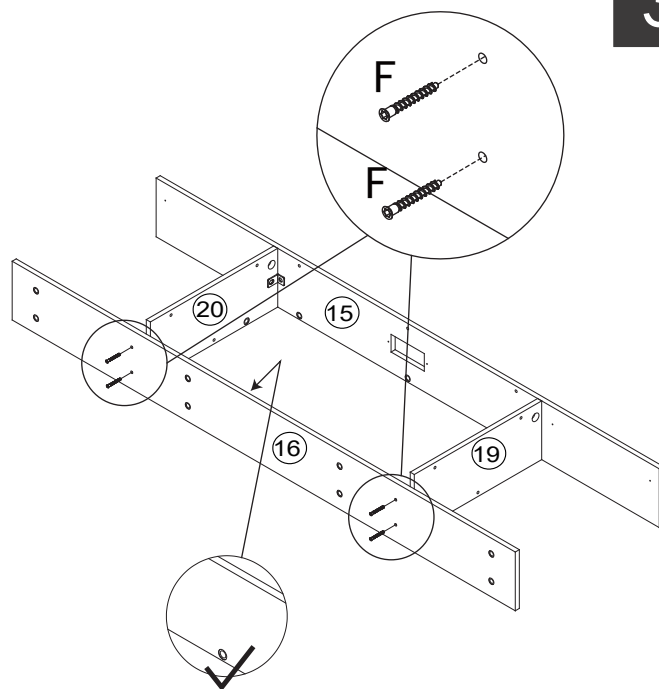

F		4pcs	
---	--	------	--

M5*35


4

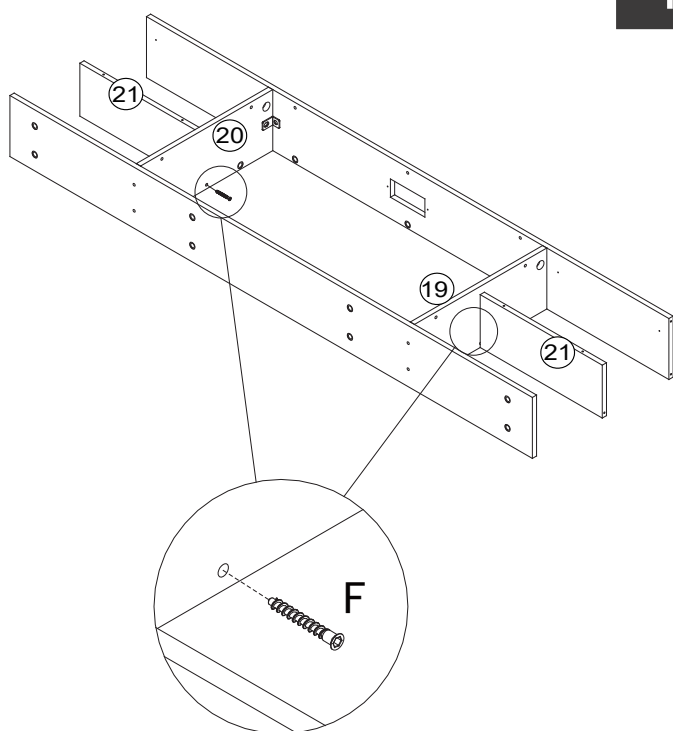


F		2pcs	
---	---	------	--

M5*35

5

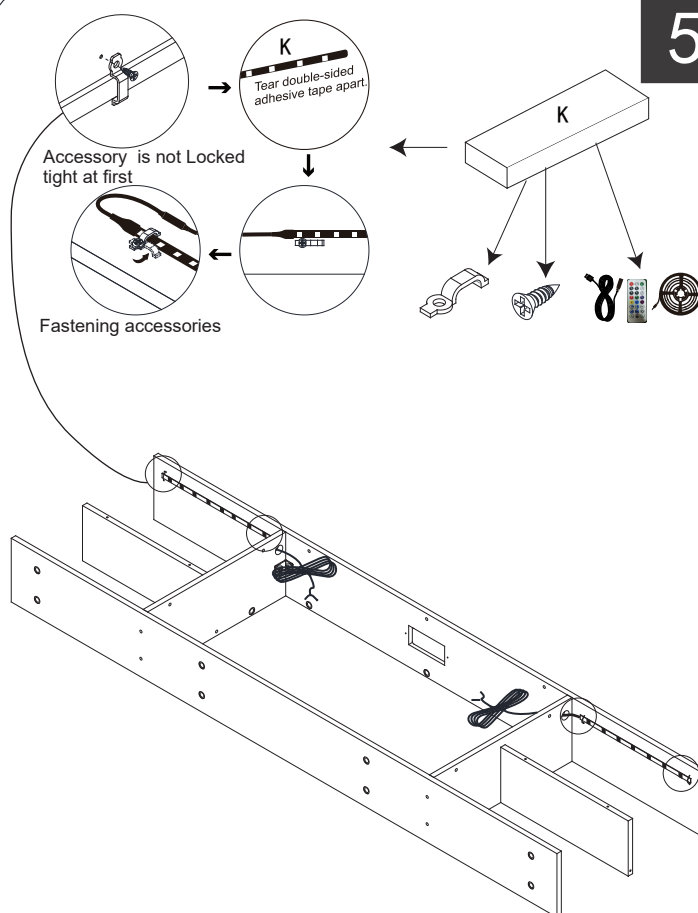


6

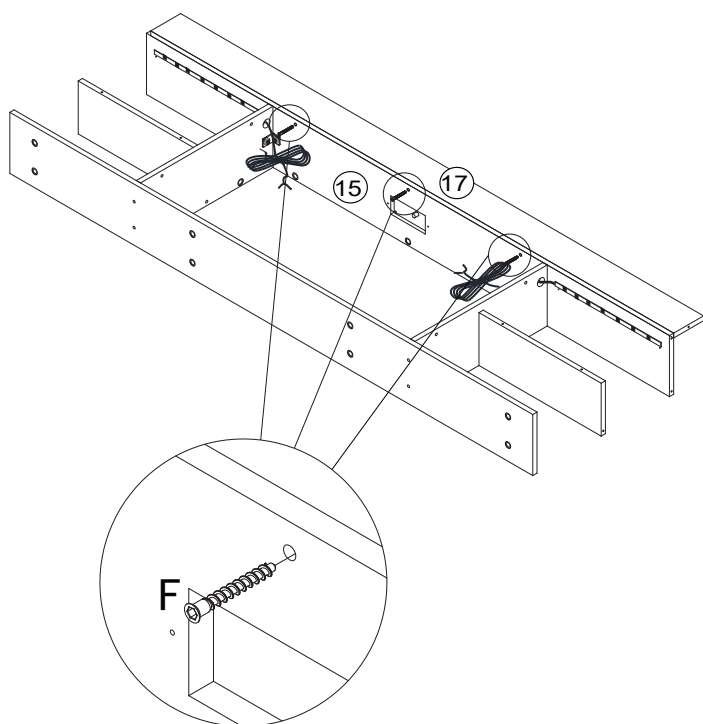


F		3pcs
M5*35		

7

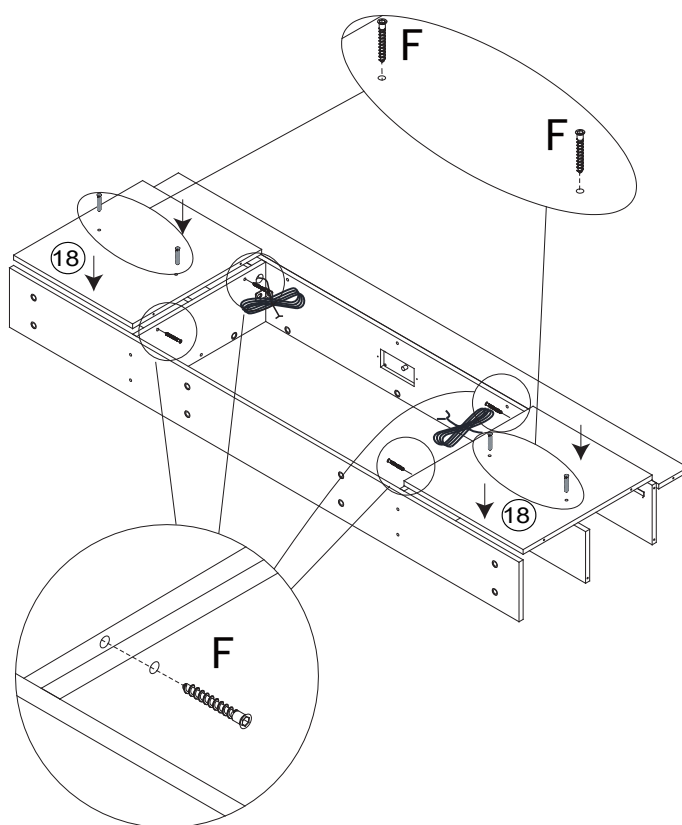


F		8pcs
M5*35		

8

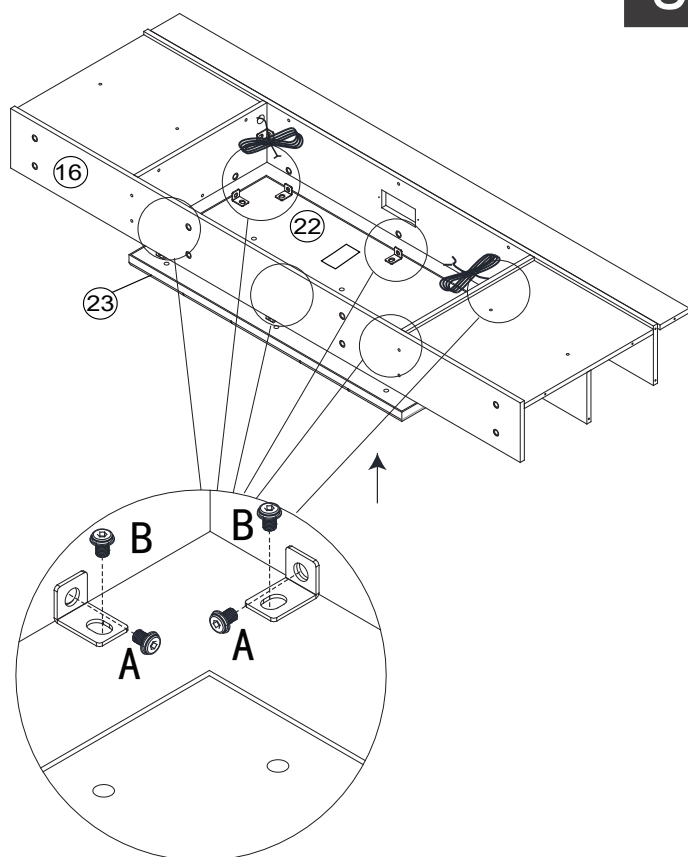


A		10pcs	white zinc
B		10pcs	
M8x12			
M8x14			

9

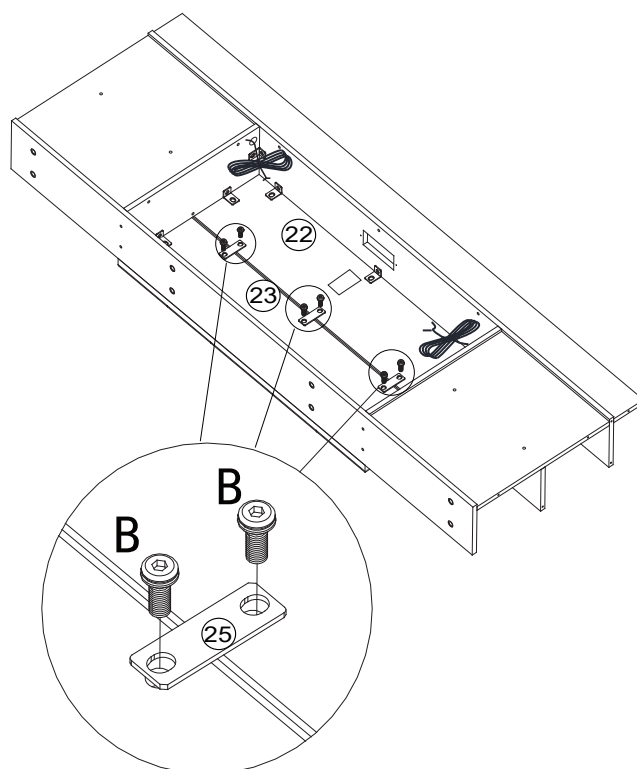


B		6pcs
M8x14		

10

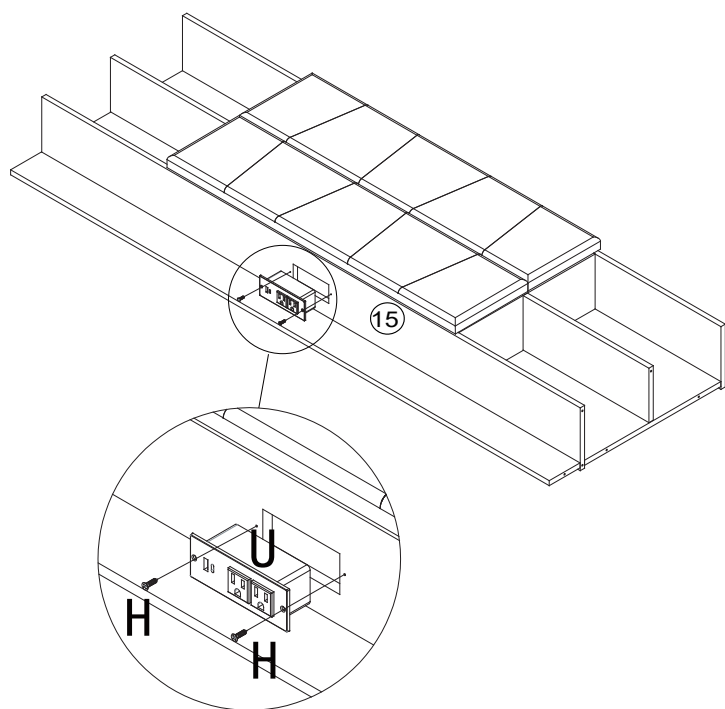

H	 ST3. 5x12	2pcs
---	--	------


11

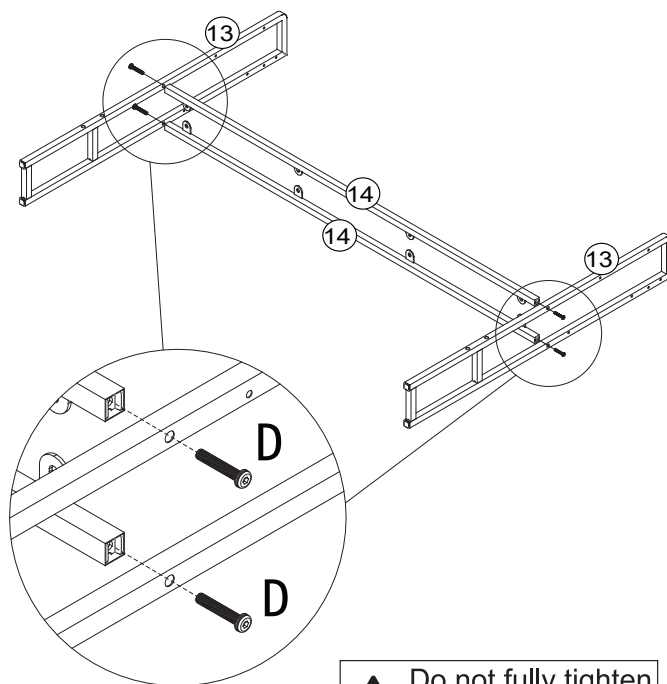

! Do not fully tighten the screws yet.

D	 M8x40	4pcs
---	--	------


12

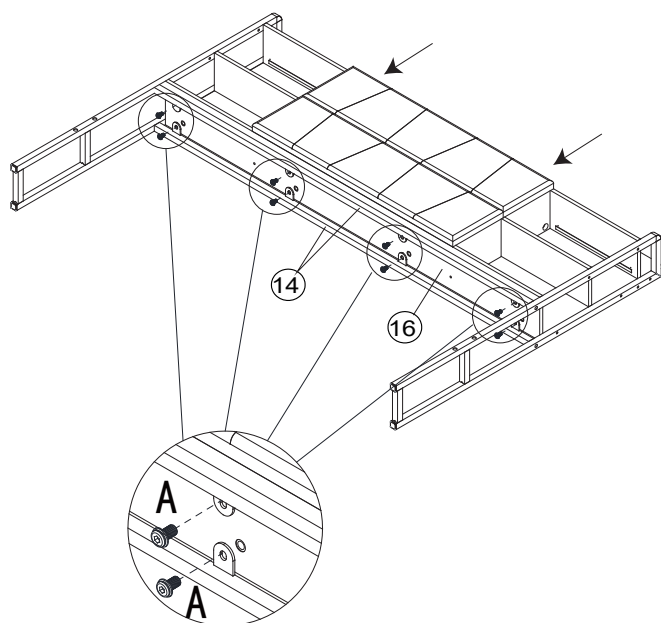

A	 M8x12	8pcs white zinc
---	---	-----------------

! Do not fully tighten the screws yet.

13

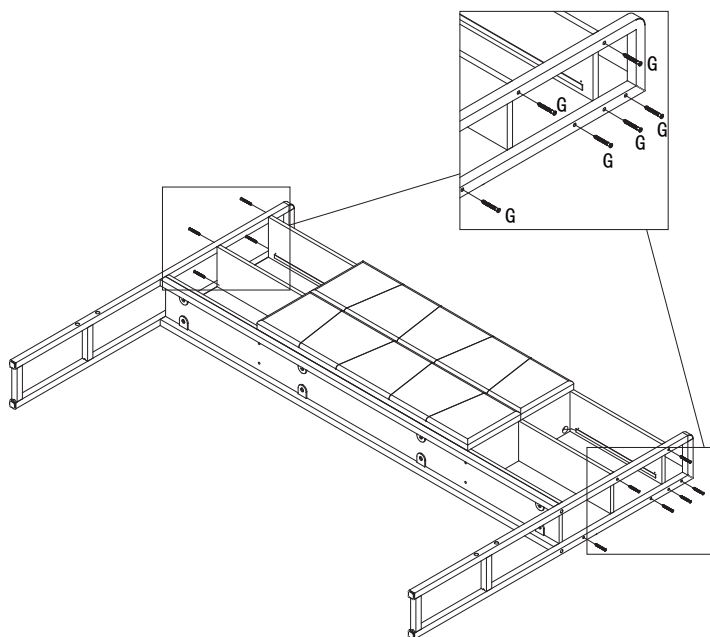


G	 M5*50	12pcs
---	---	-------

! Fully tighten all the screws.


X2

14

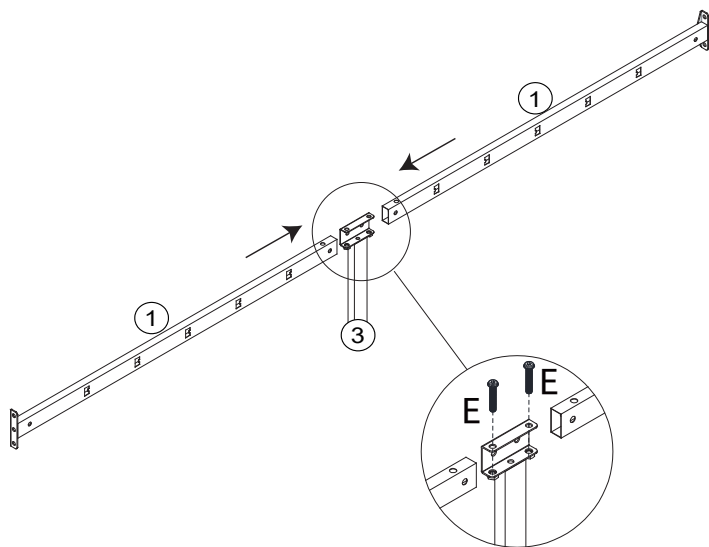


E		4pcs
---	---	------

15

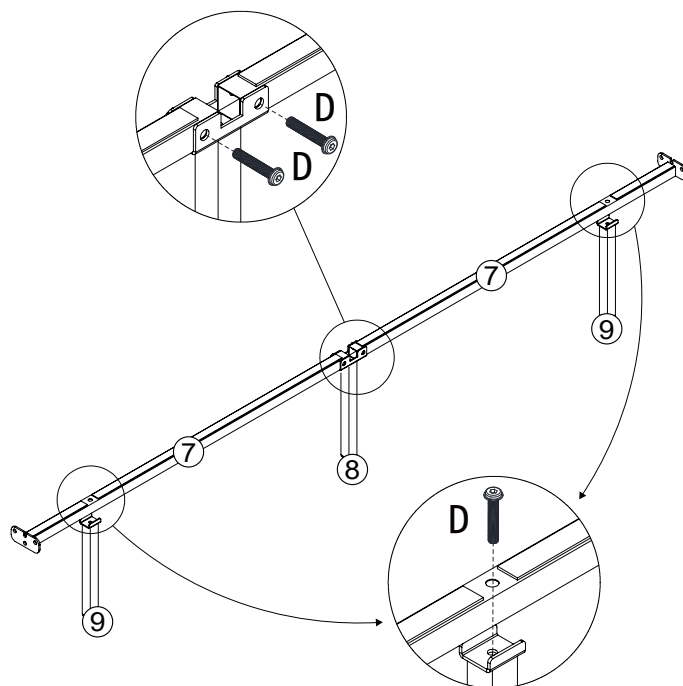


D		4pcs
---	--	------

16

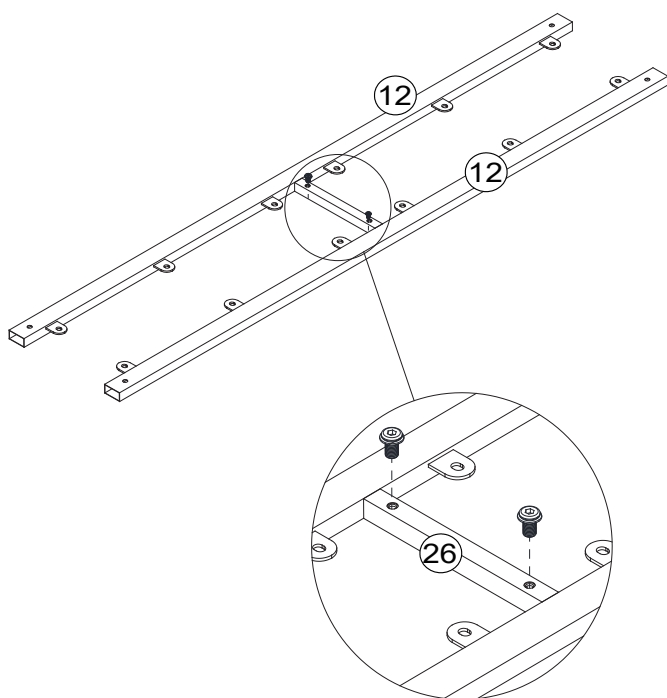

B		2pcs
---	---	------


17

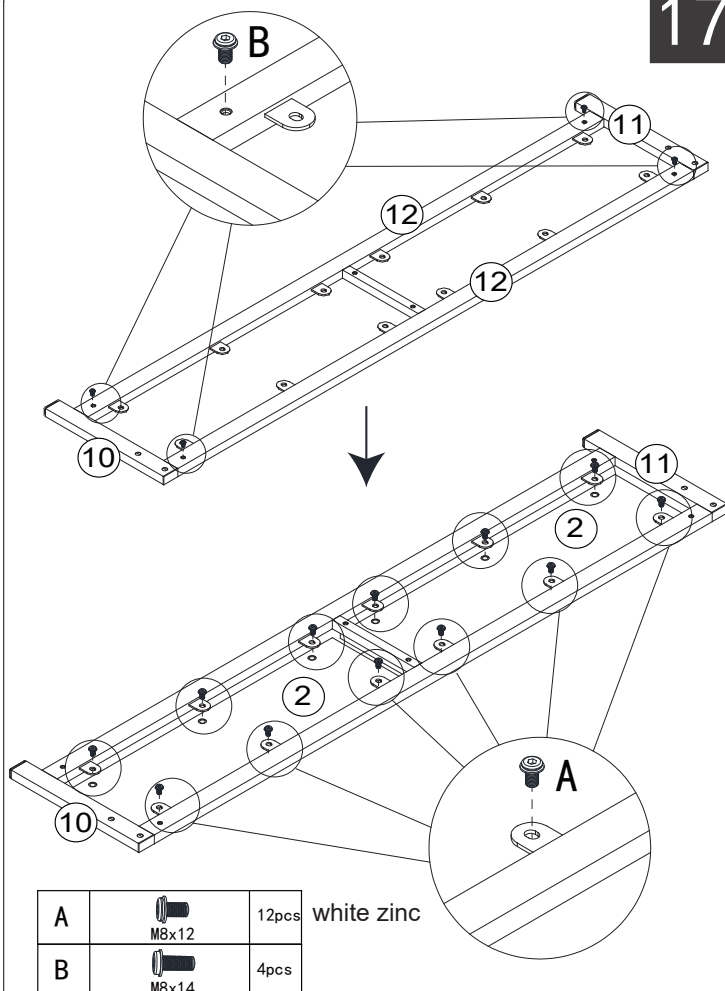

A		12pcs
B		4pcs


white zinc

18

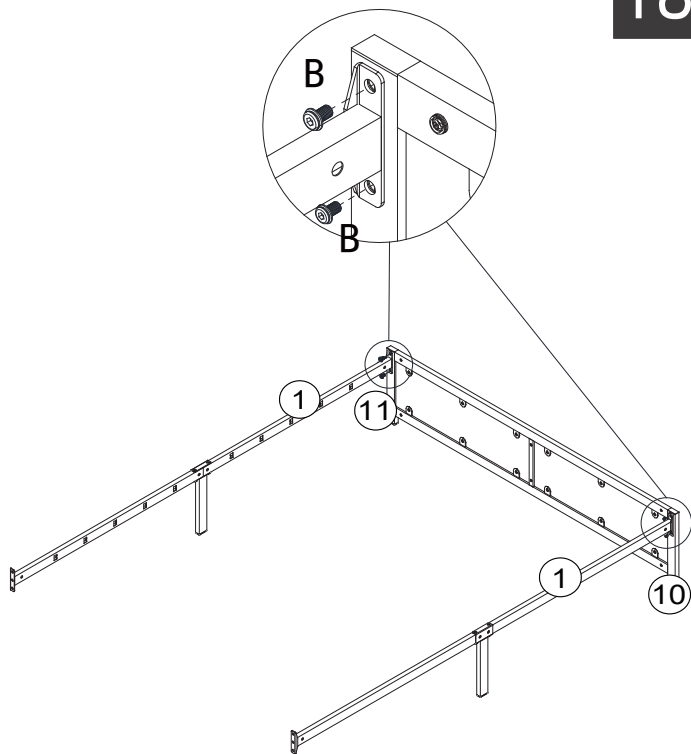


B		4pcs
	M8x14	

19

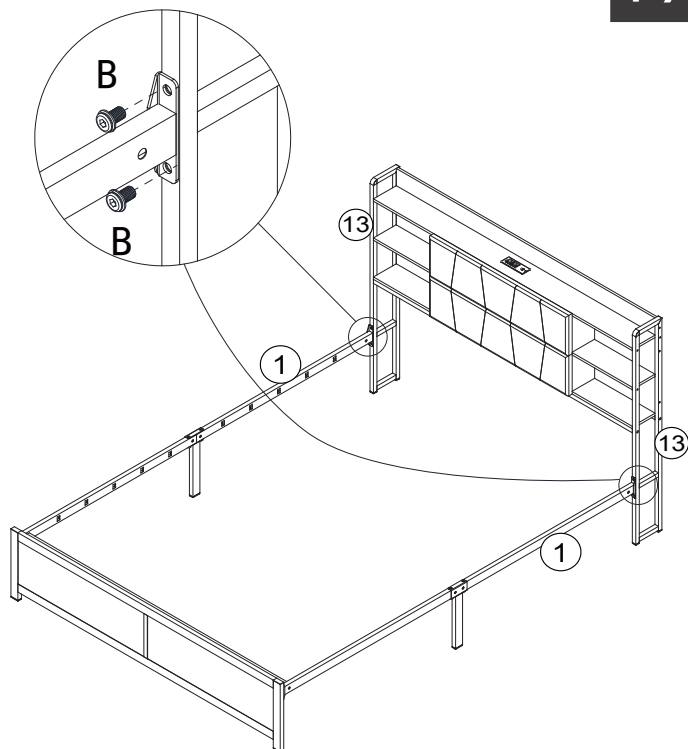


B		4pcs
	M8x14	

20

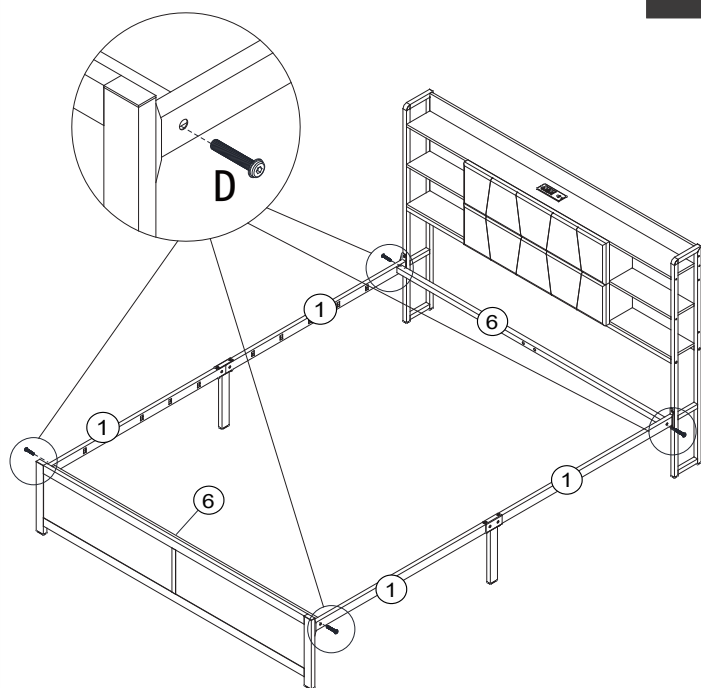


D		4pcs
	M8x40	

21

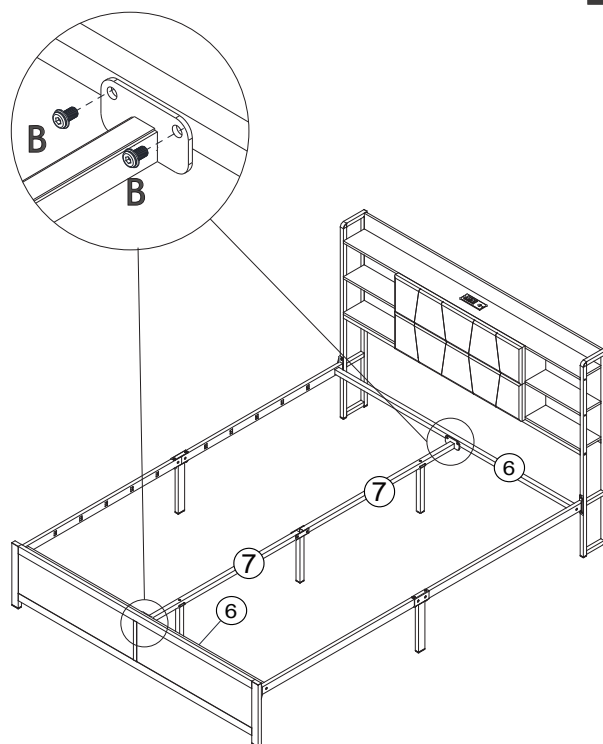


B		4pcs
	M8x14	


22

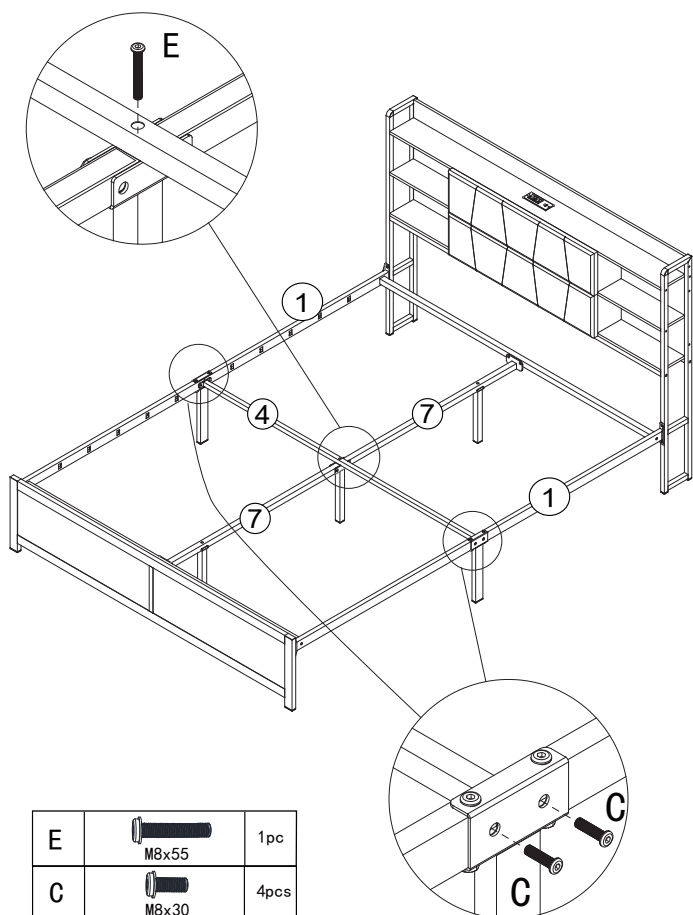


23

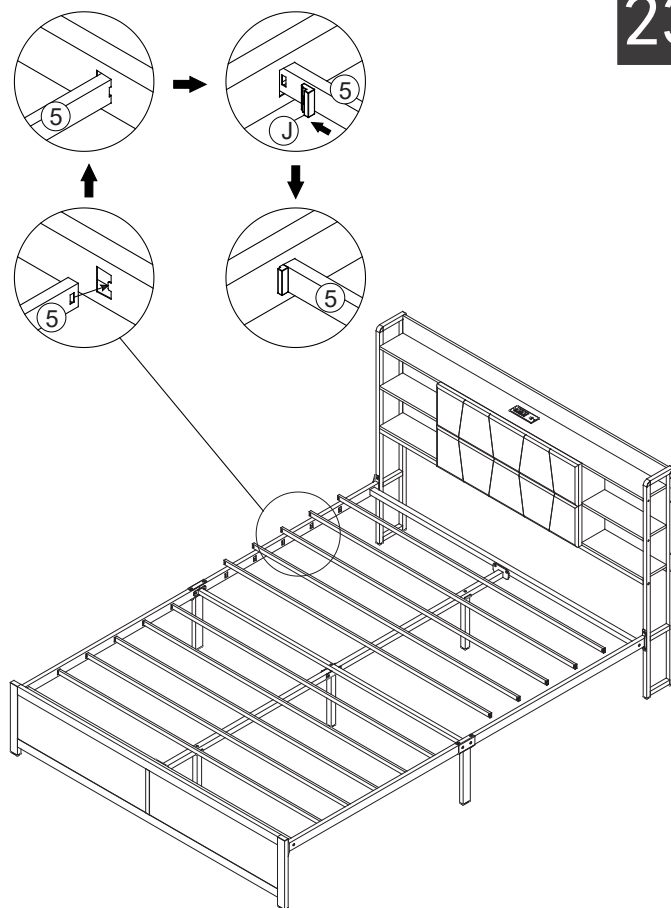

24

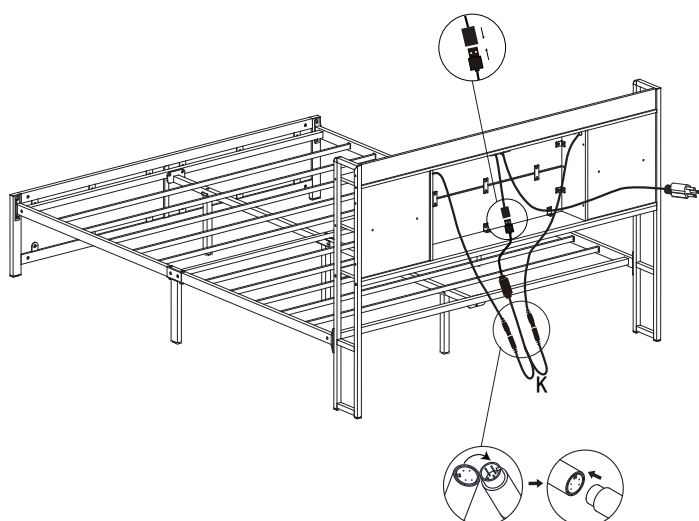

25

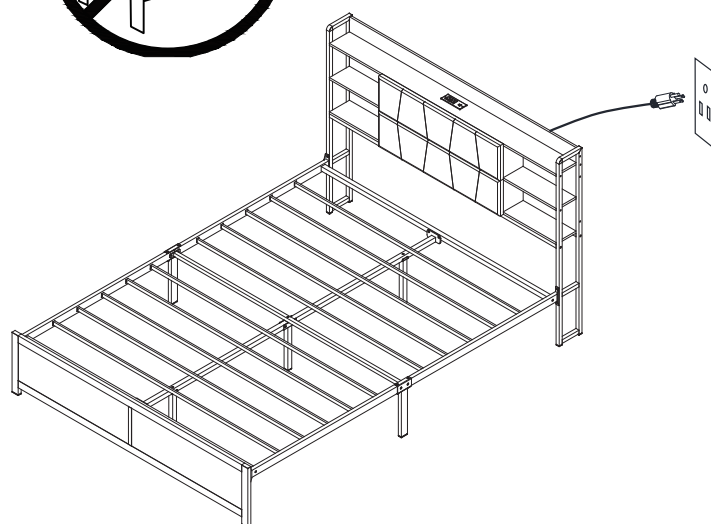

Finish