



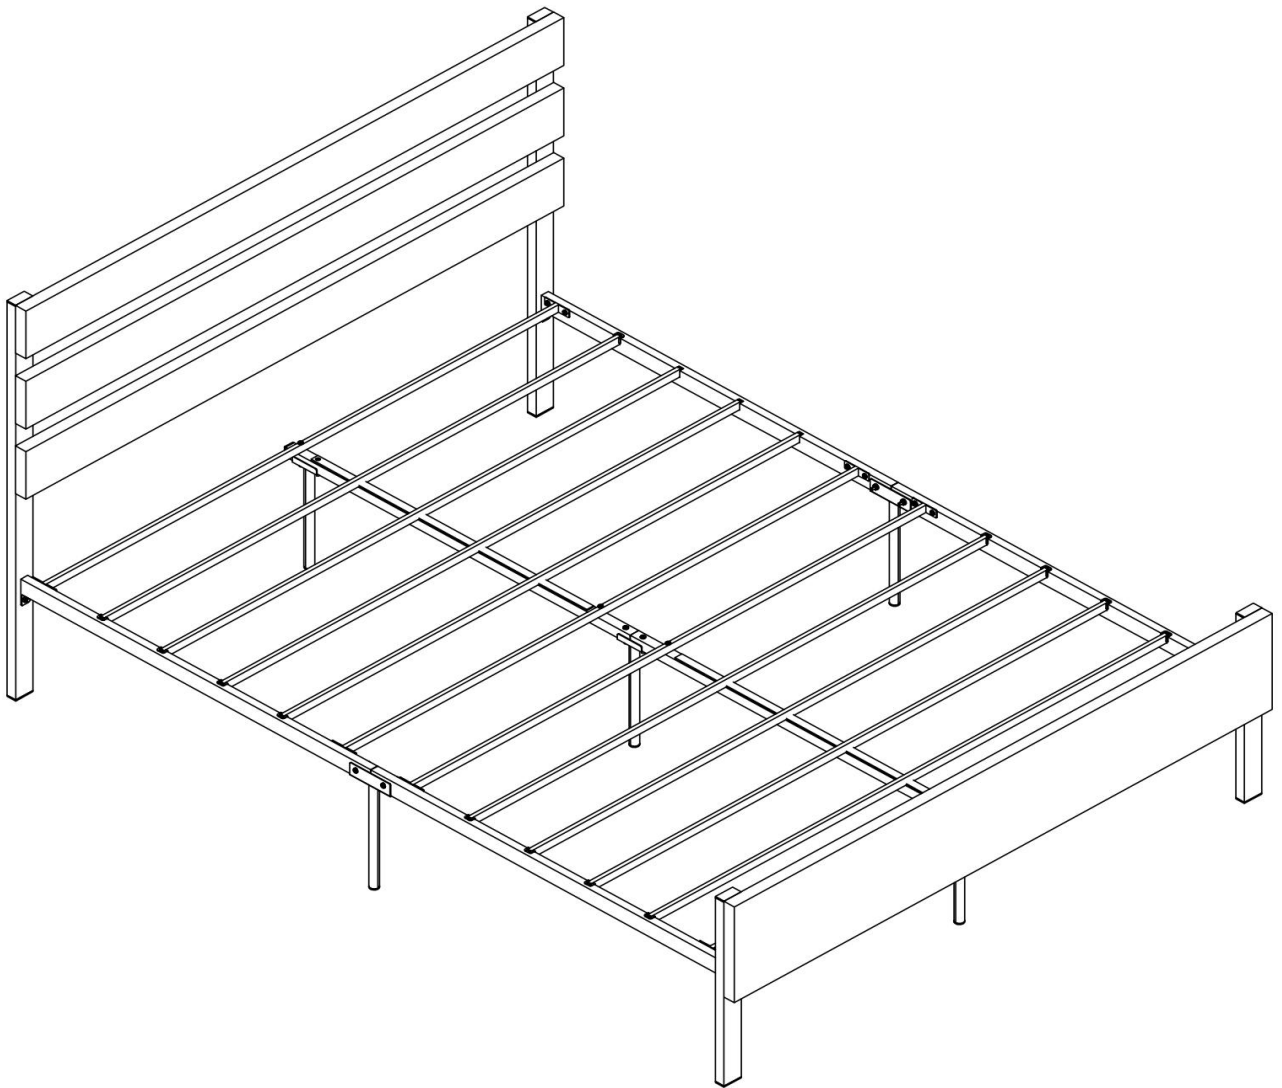


Assembly Instruction

ITEM: Bed Platform (Queen)

Do not tighten the screws until assembly is completed.
Align all screws with the corresponding pre-drilled holes first and then tighten them one by one

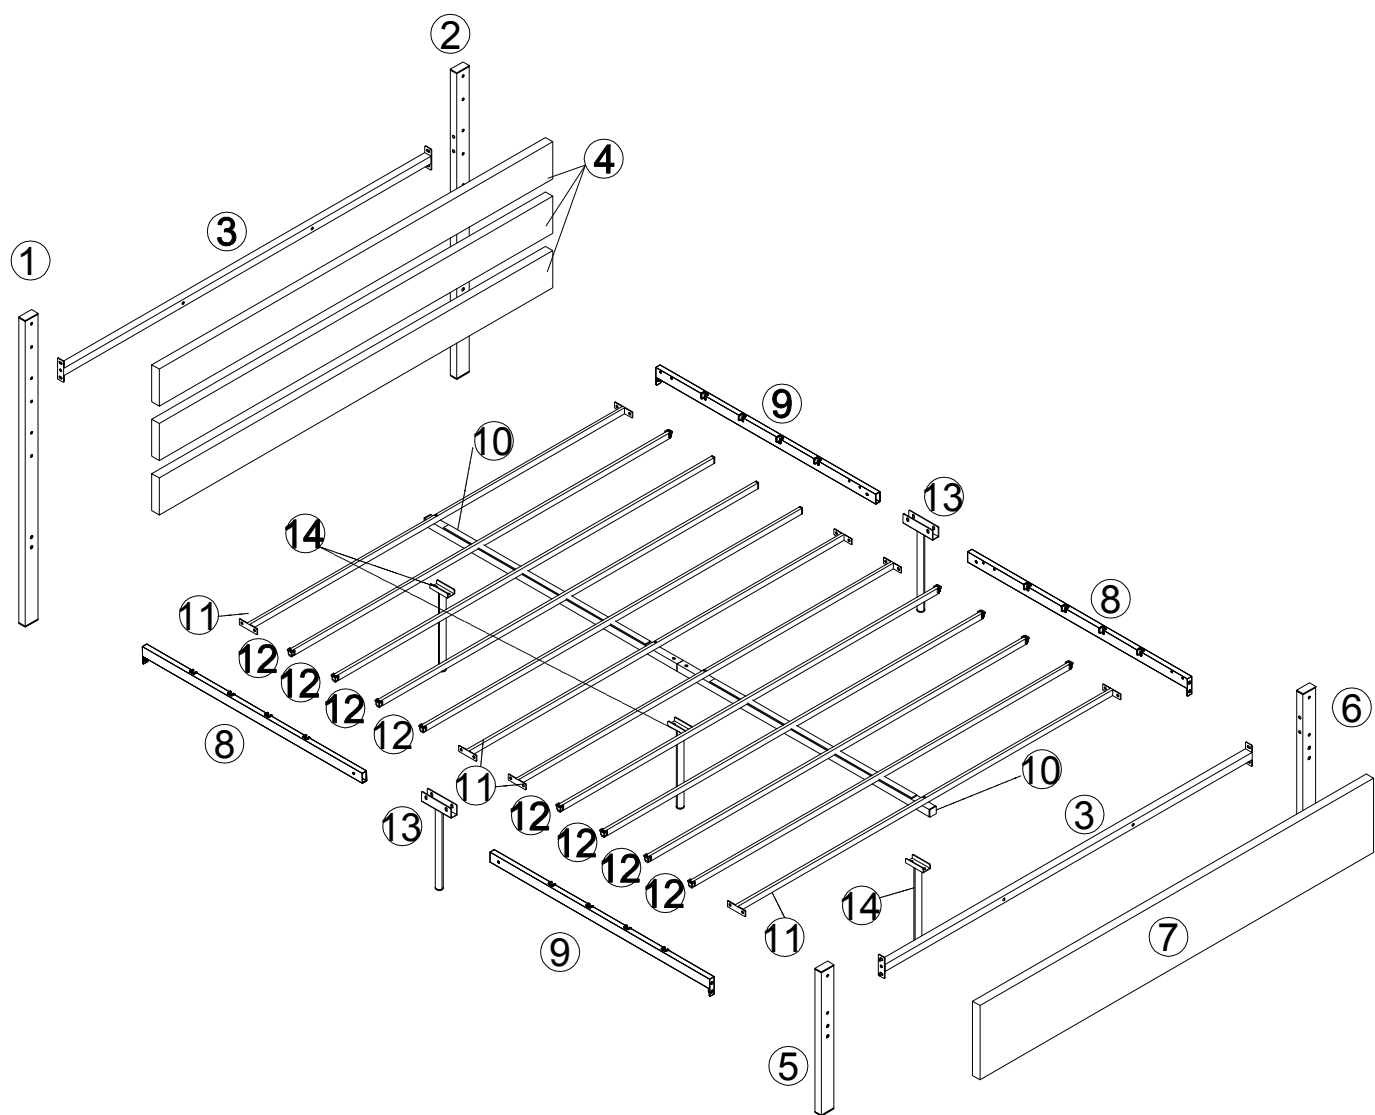

A  1PC	B  8PCS	C M6*12  28PCS	D M6*35  30PCS
E M6*60  2PCS	F M8*40  8PCS	G  18PCS	H M8  4PCS
I M6  10PCS	J 4MM  2PCS		
1			

Step 1:

C M6*12


8PCS

J



4MM


1PC

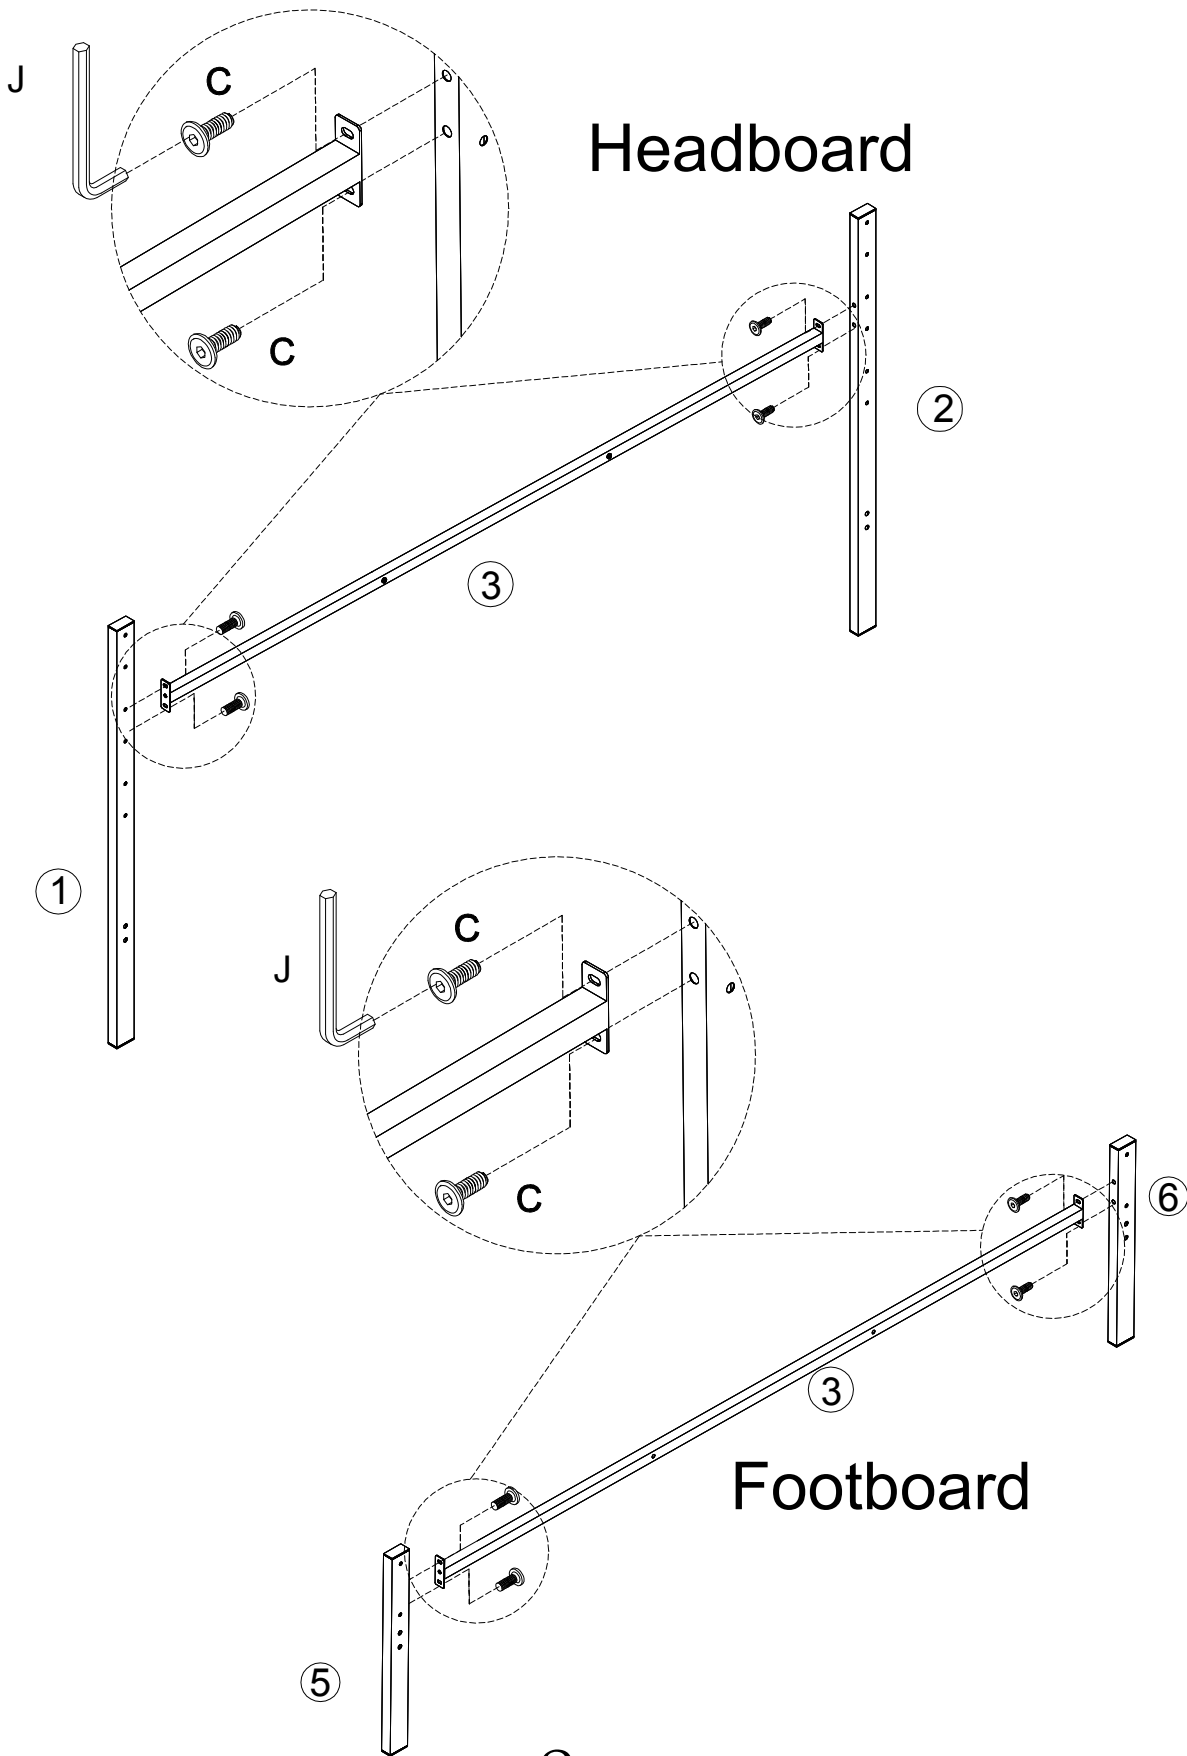


Headboard


Footboard

Step 2:

A 	1PC
C M6*12	4PCS
D M6*35	4PCS
I  M6	4PCS
G  Ø6	4PCS
J  4MM	1PC

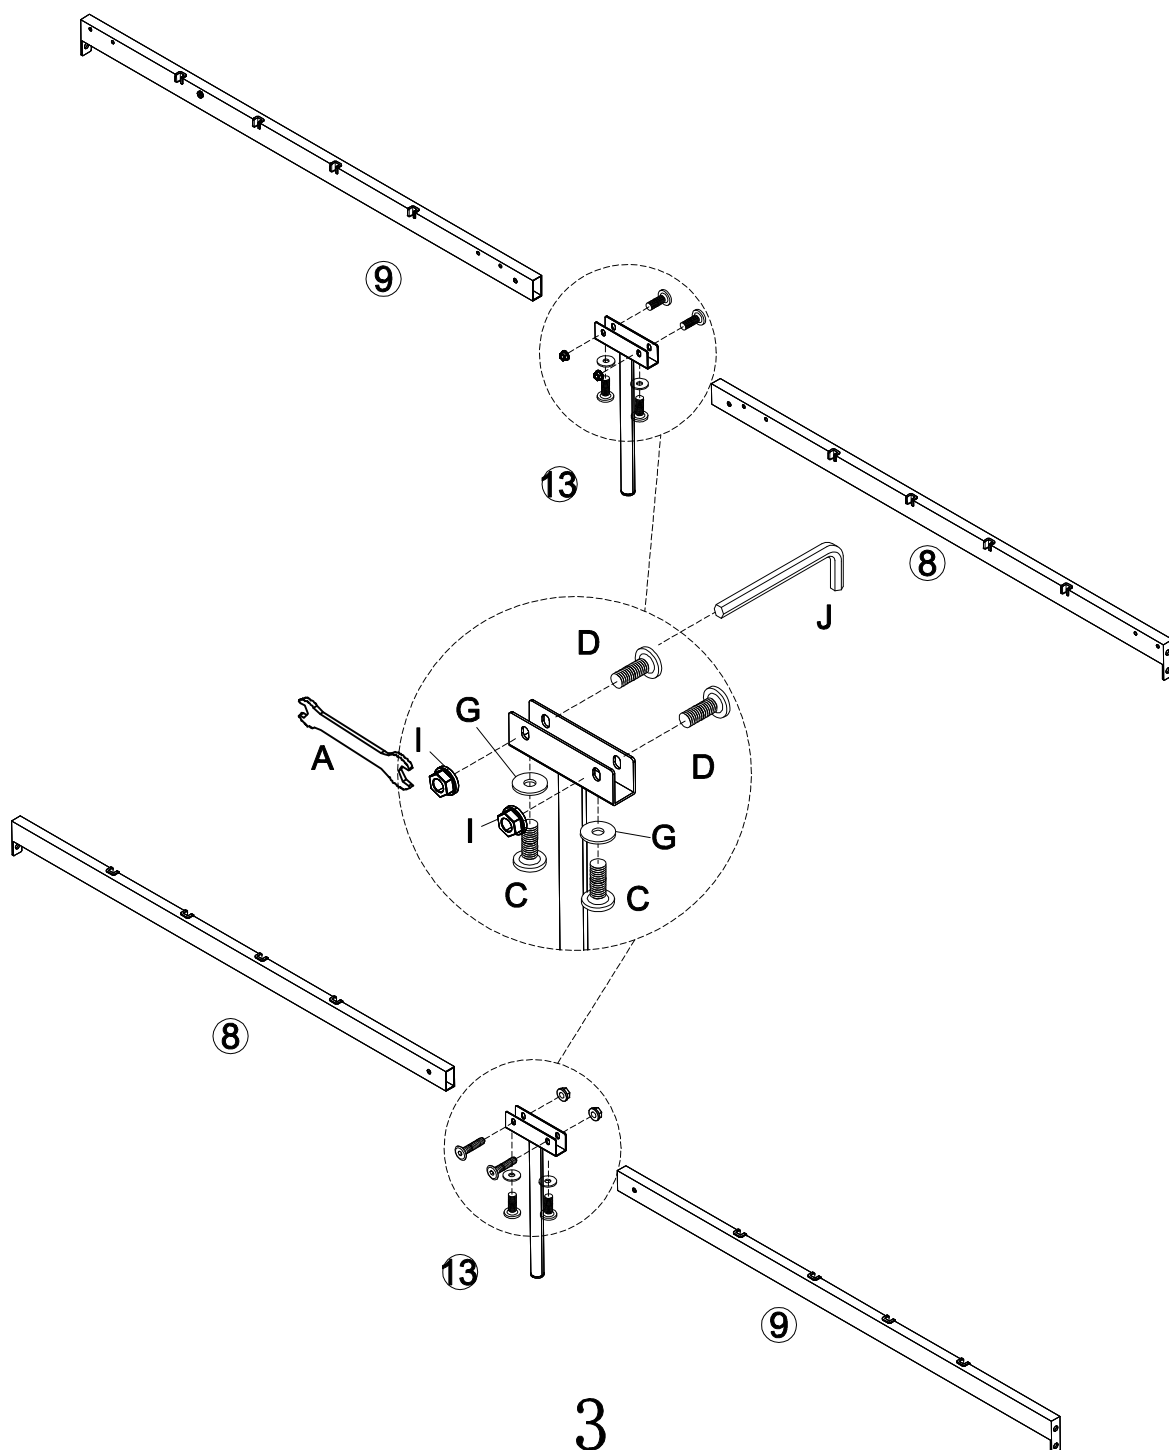

Step 3:

A 

1PC

F M8*40

8PCS

B  Ø8


8PCS

H  M8

4PCS

J  4MM

1PC

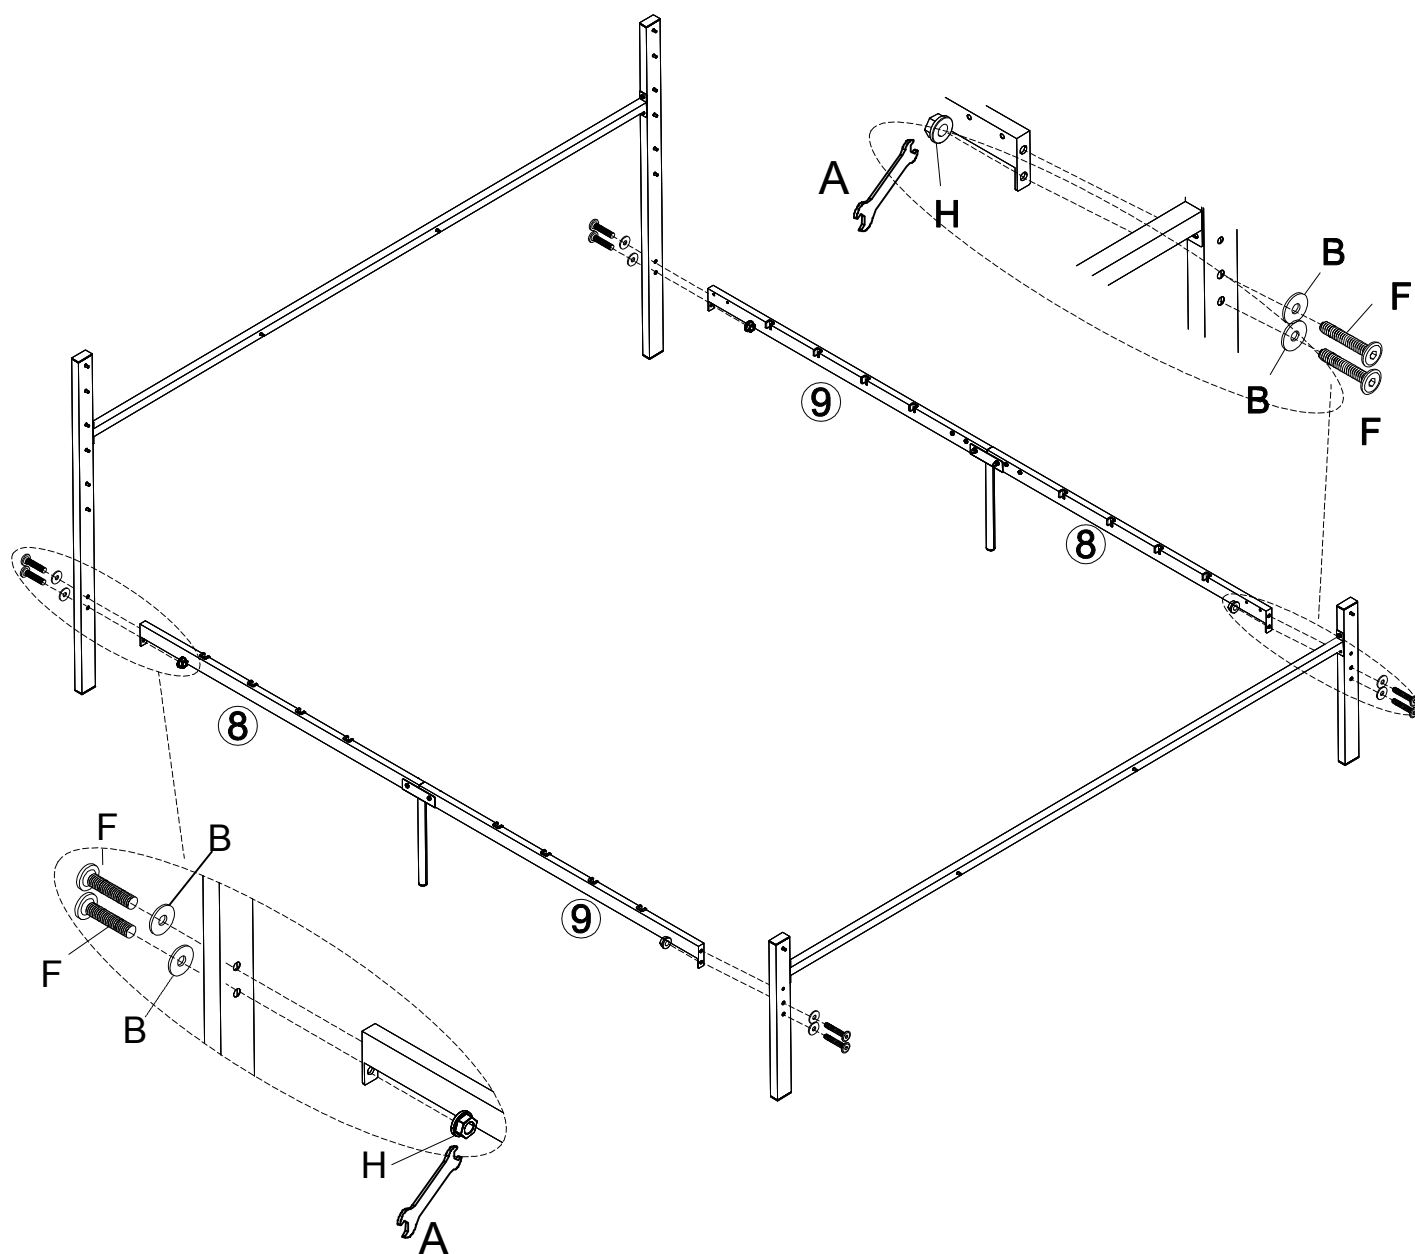

Step4:

D M6*35

14PCS


J  4MM

1PC

G  Ø6

14PCS

After all the screws are screwed into the headboard, then tighten them

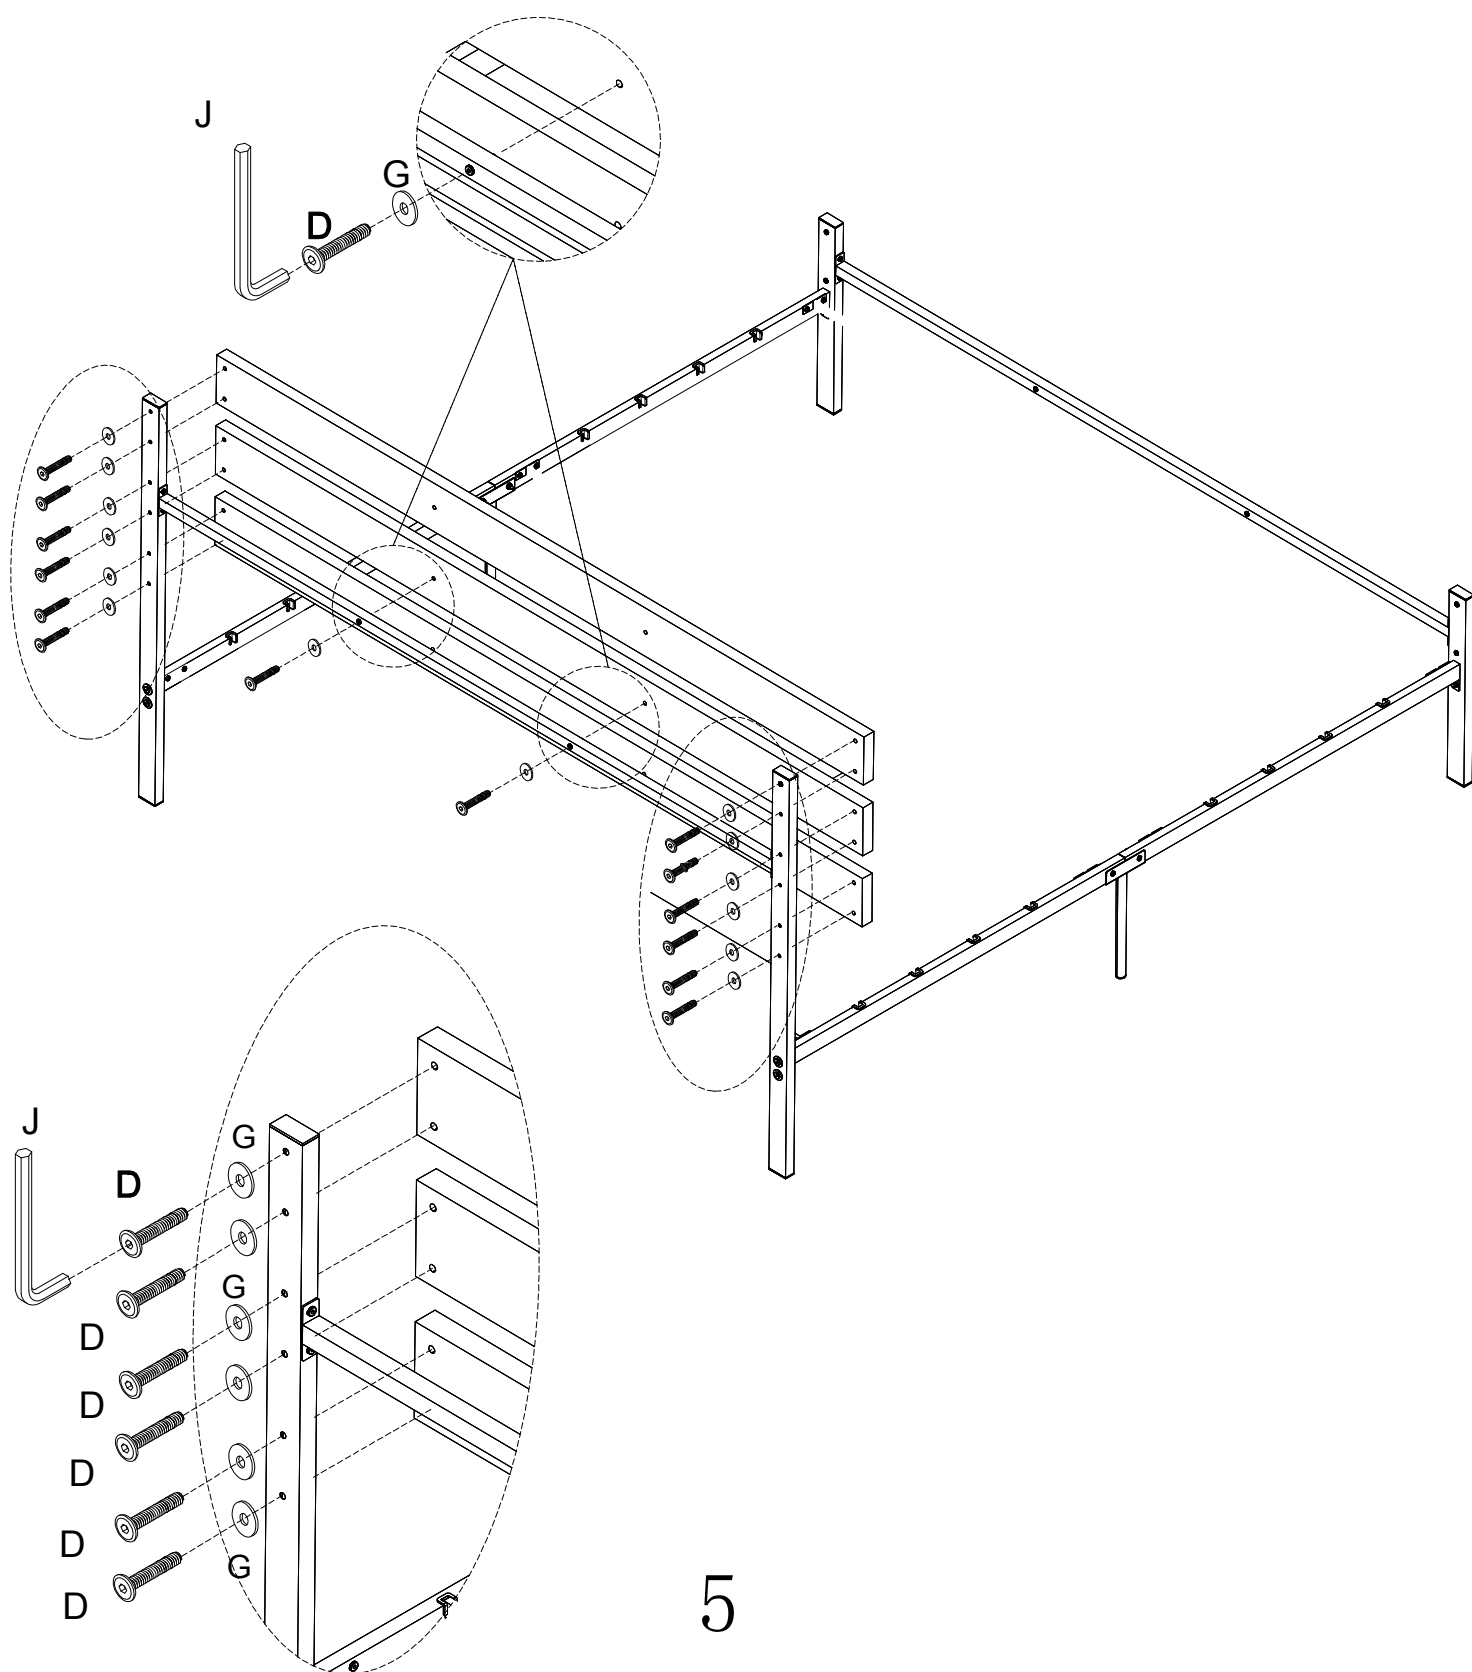

Step5 :

D M6*35


6PCS

J

4MM


1PC

After all the screws are screwed into the footboard, then tighten them

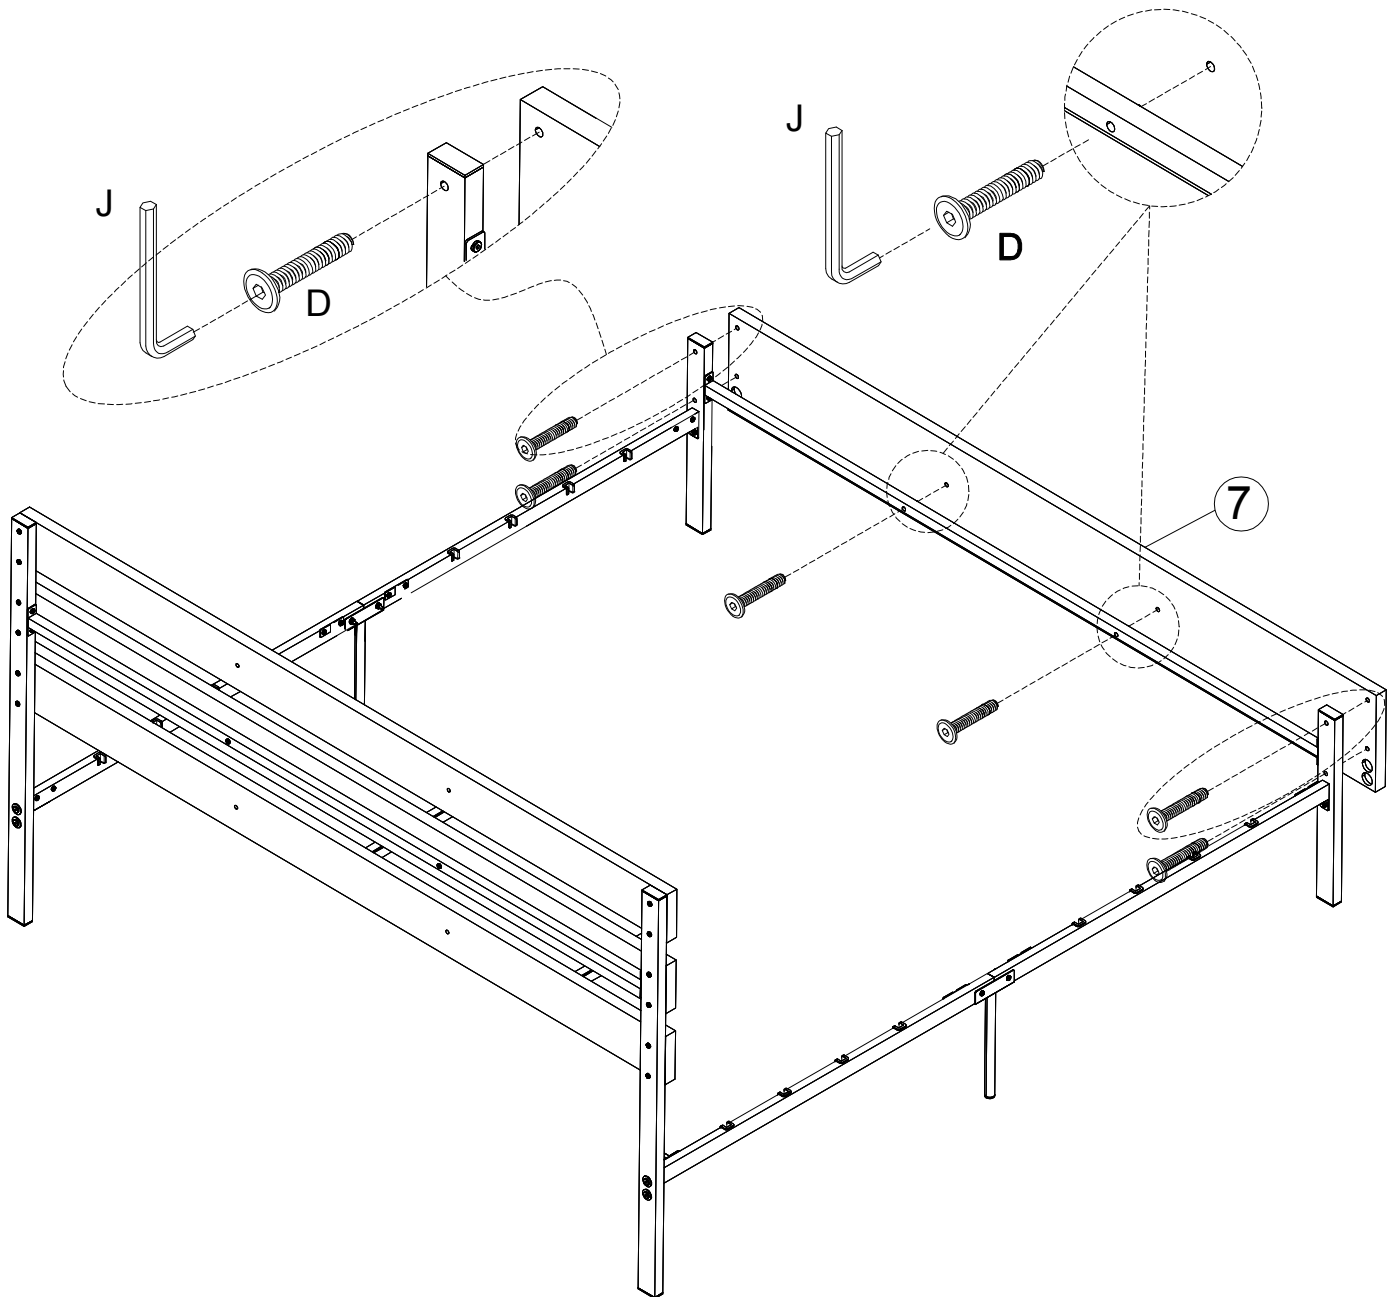



Step 6:

A 	1PC
D M6*35	4PCS
I  M6	4PCS
J  4MM	1PC

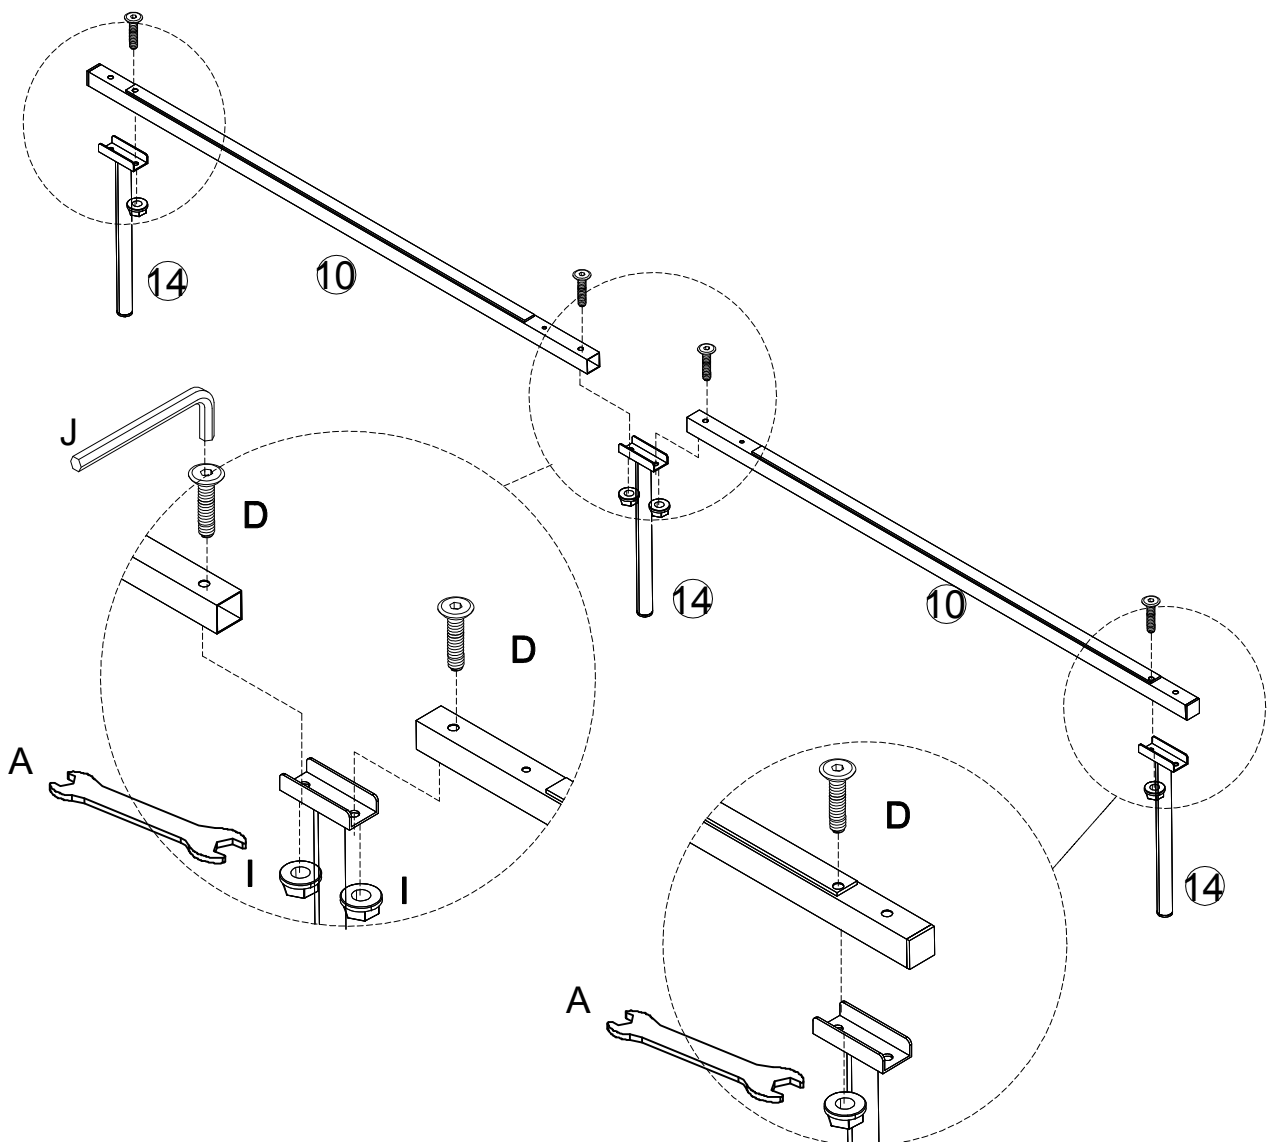

Step 7:

A		1PC
E	M6*60	2PCS
I	 M6	2PCS
D	M6*35	2PCS
J	 4MM	1PC

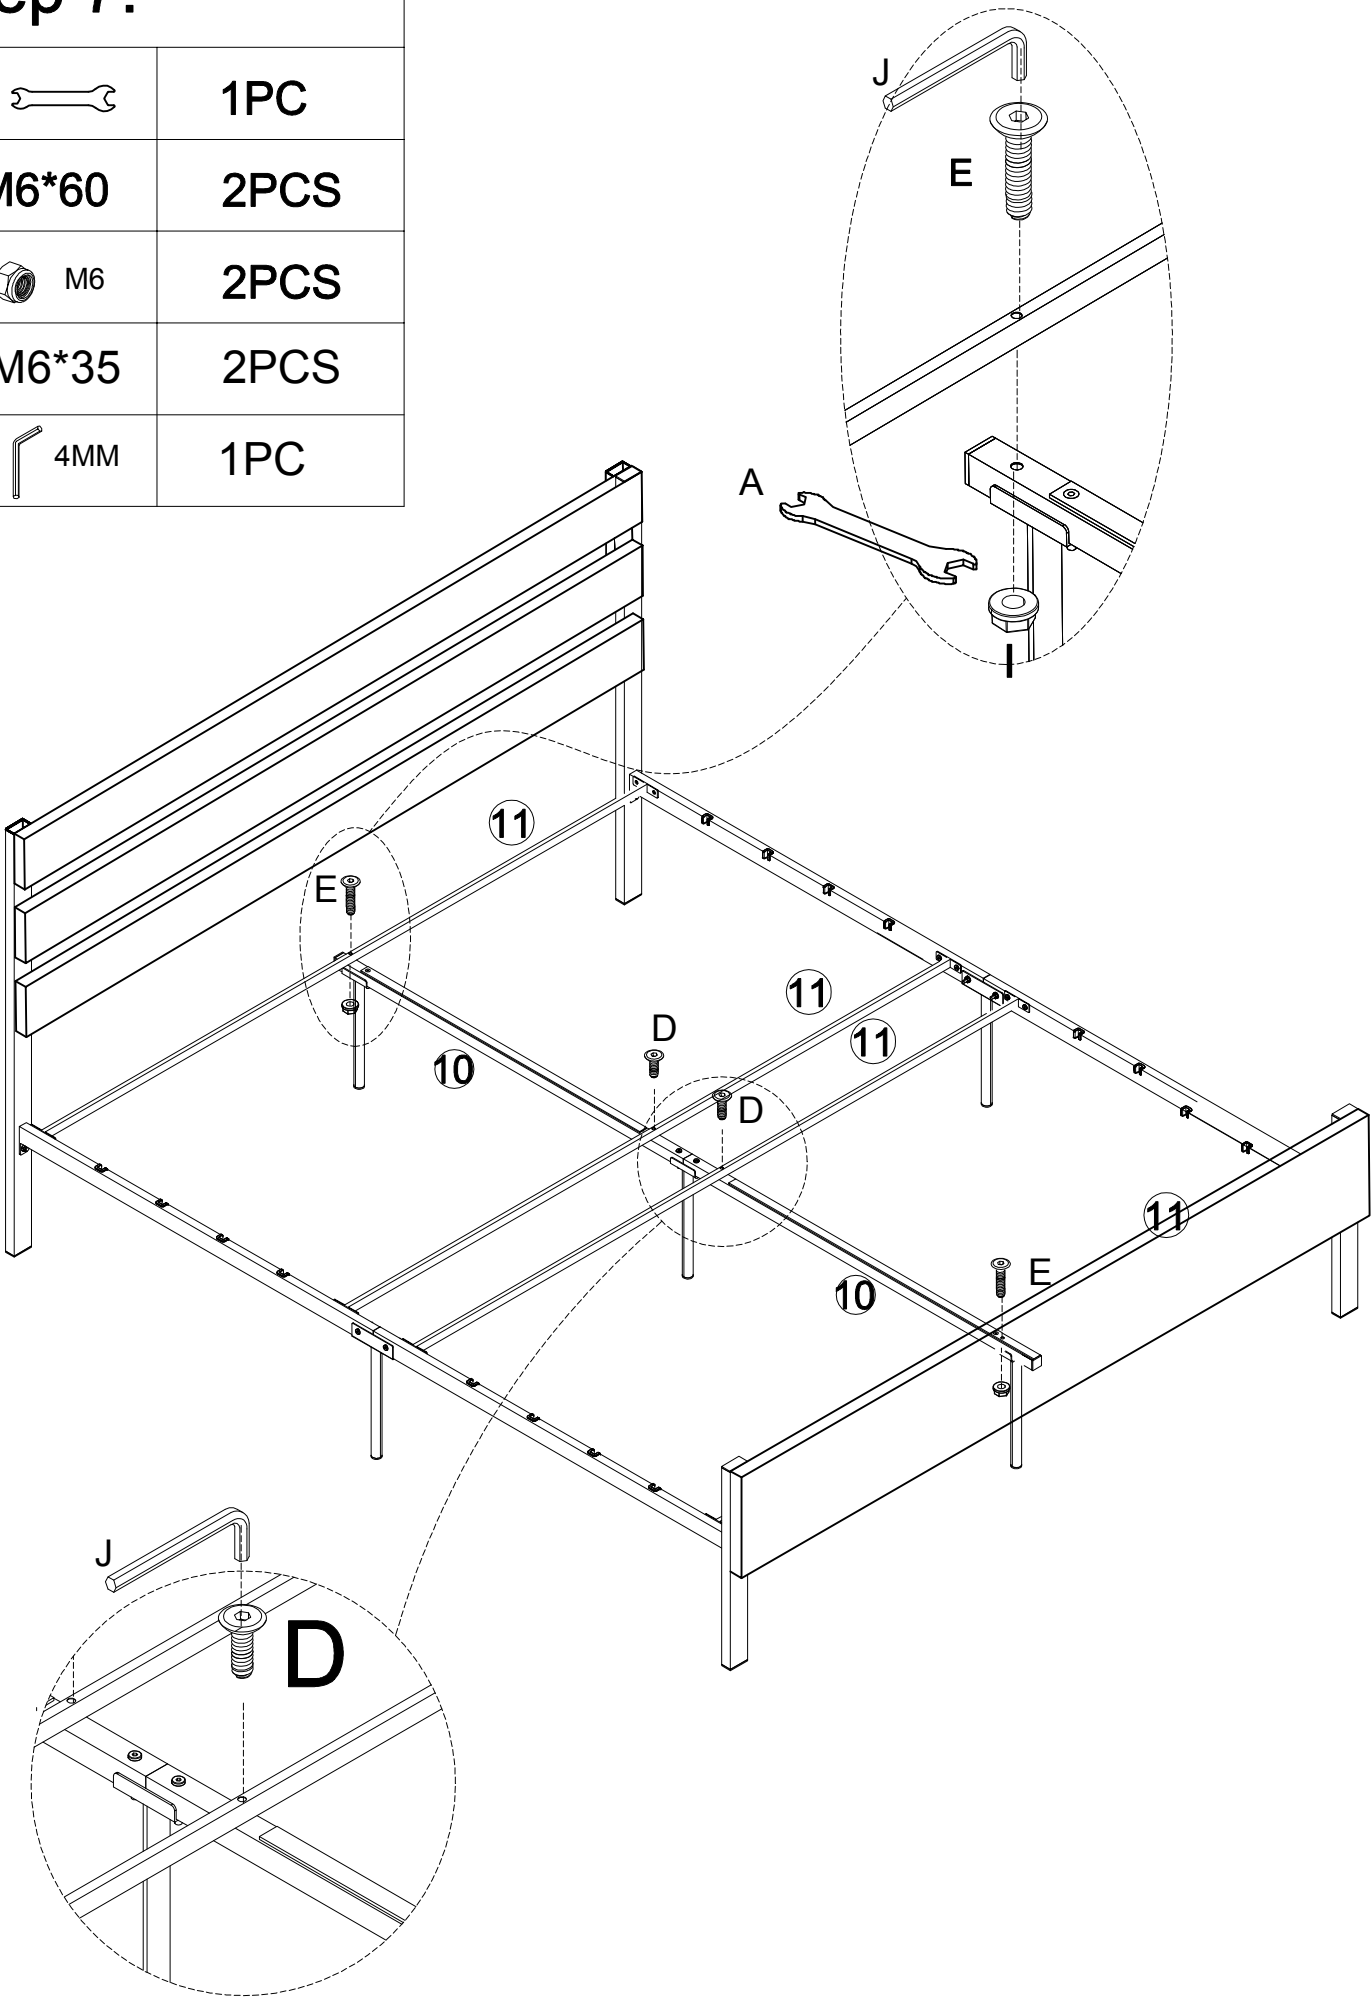


Step 8:

C M6*12

16PCS

J  4MM

1PC

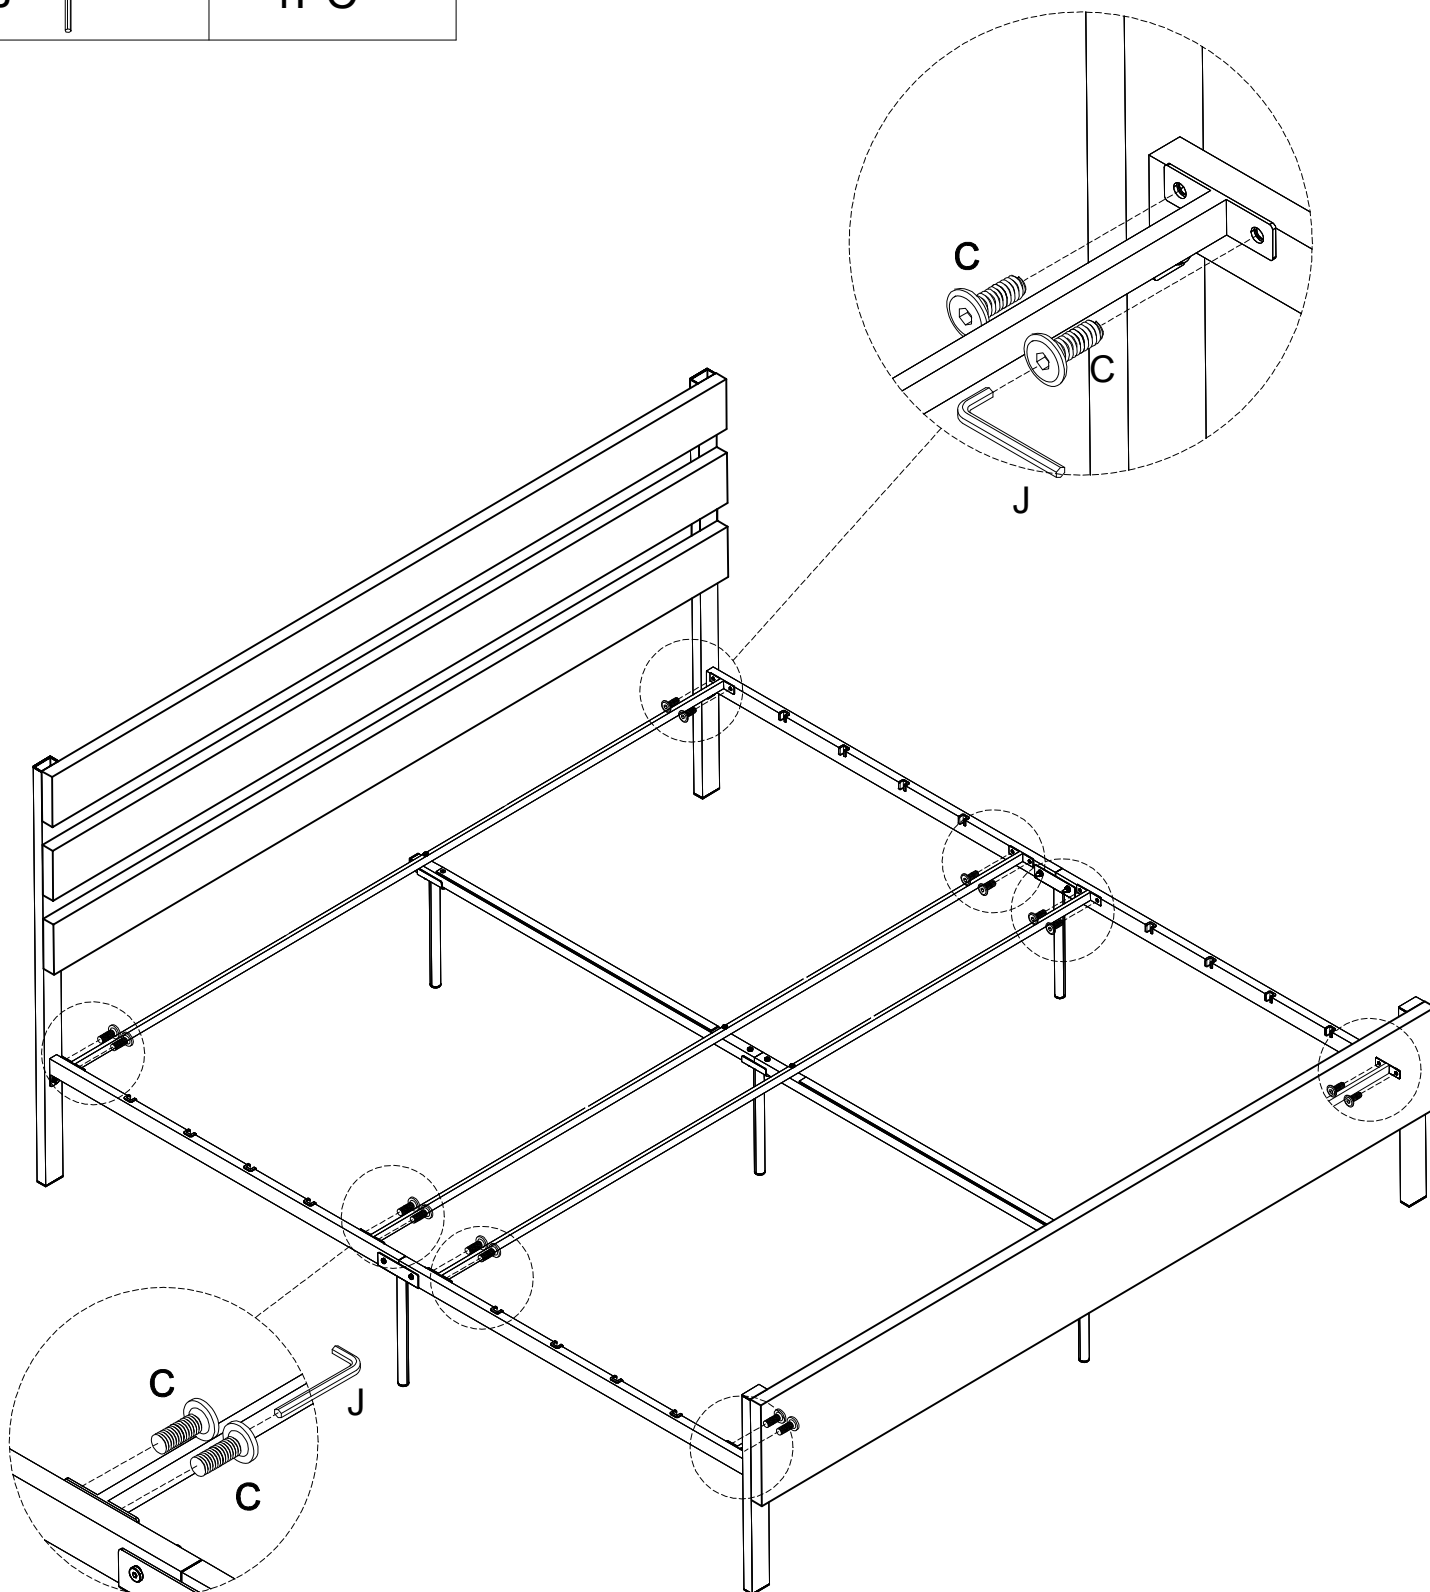

Step 9:

