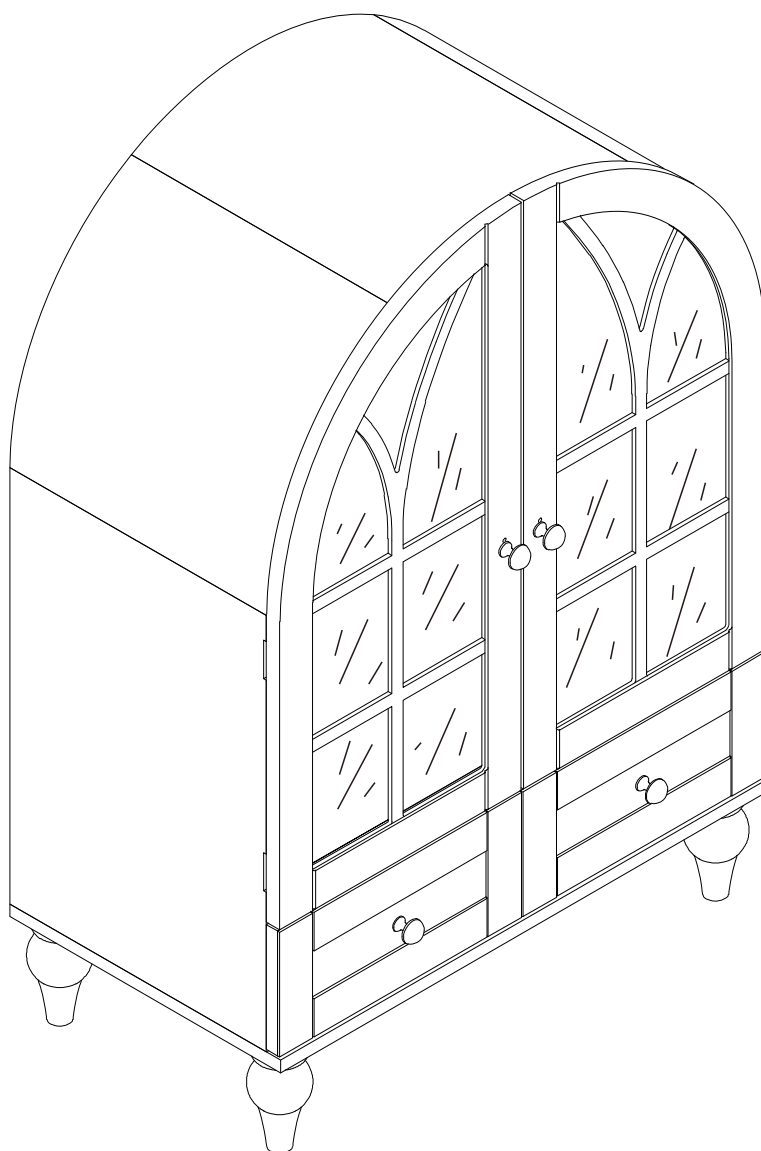


ASSEMBLY INSTRUCTION

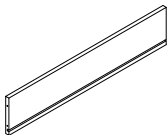
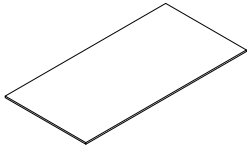
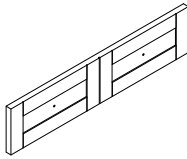
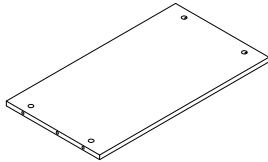
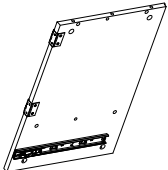
Page 1 of 12



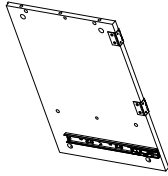
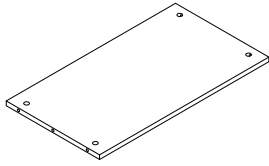
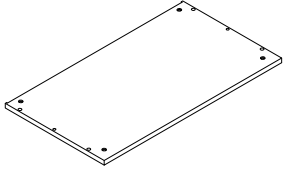
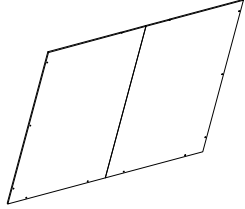
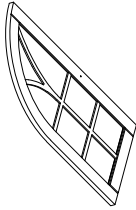
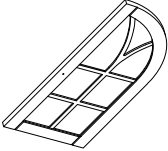

MADE IN CHINA

ASSEMBLY INSTRUCTION

Parts List:

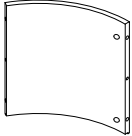

ITEM	DESCRIPTION	PART	QTY
1	Drawer left side		1
2	Drawer right side		1
3	Drawer back		1
4	Drawer bottom		1
5	Drawer front		1
6	Upper shelf		1
7	Left side		1

Parts List:

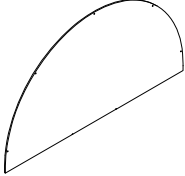
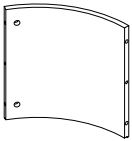
ITEM	DESCRIPTION	PART	QTY
8	Right side		1
9	Lower shelf		1
10	Bottom panel		1
11	Lower back panel		1
12	Left door		1
13	Right door		1
14	Leg		4

ASSEMBLY INSTRUCTION

Parts List:

ITEM	DESCRIPTION	PART	QTY
15	Side top left		2
16	Middle top		1



Parts List:

ITEM	DESCRIPTION	PART	QTY
17	Upper back panel		1
18	Side top right		1


ASSEMBLY INSTRUCTION

Page 4 of 12

Hardware List:

ITEM	DESCRIPTION	PART	QTY
A	Camlock bolt		20
B	Camlock		20
C	Wooden dowel	 Φ8*30mm	10
D	Bolt	 Φ1/4"*1 1/4"	4
E	Allen wrench		1
F	Flat head screw	 Φ4*25mm	8
G	Knob		4
H	Machine screw	 Φ5/32*3/4"	4

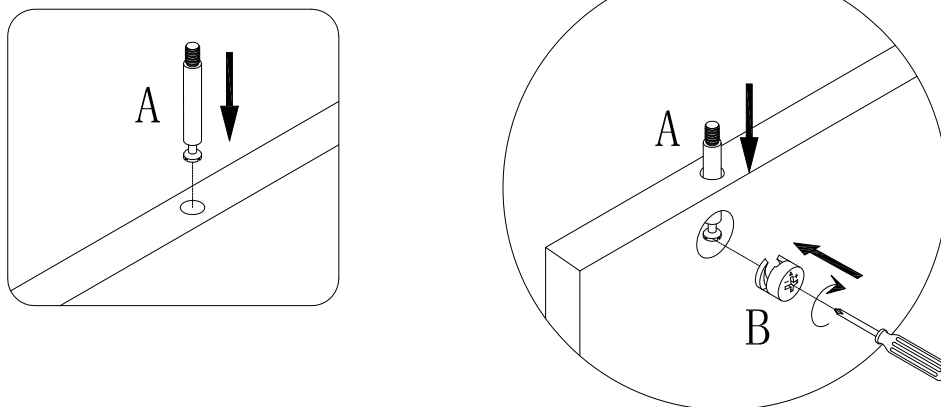
Hardware List:

ITEM	DESCRIPTION	PART	QTY
I	Magnet		1
J	Round head screw	 Φ3*15mm	2
K	Wood screw	 Φ3*12mm	8
L	Back screw	 Φ3*10mm	17
M	Plastic anchor		1
N	Mounting screw	 Φ4*38mm	1
O	Washer		1
P	Safety wall strap		1

MADE IN CHINA

- * Required screwdriver & mallet, not included.
- * Before discarding packing materials, please check to make sure that all parts and hardware is present.
- * Two people needed for assembly.
- * Please follow the instructions closely; do not over tighten screws or bolts unless instructed.
- * After a few days from initial assembly, the product may have acclimated to the new environment. Please retighten the hardware.

Guideline For Assembling of Cam Lock(A & B)



Screw camlock bolt (A) to wood part.

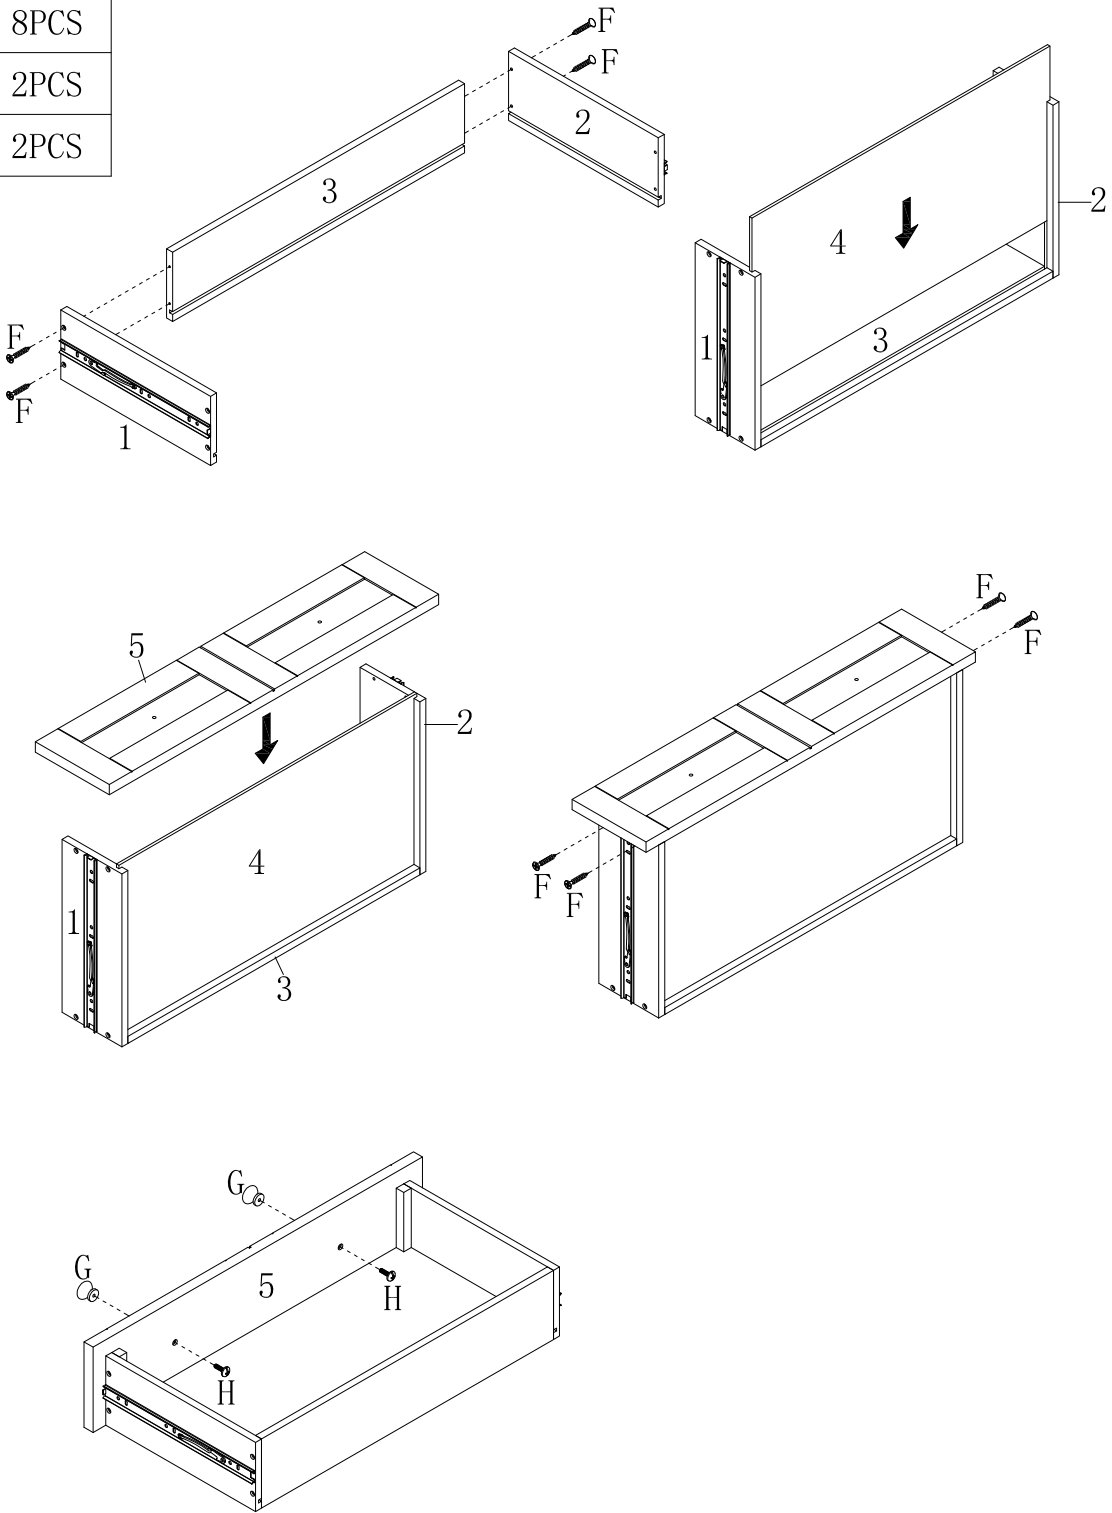
Do not assemble camlock (B) unless instructed.

To assemble camlock (B), ensure long side of the + is facing the bolt (A) before inserting into hole.



ASSEMBLY INSTRUCTION

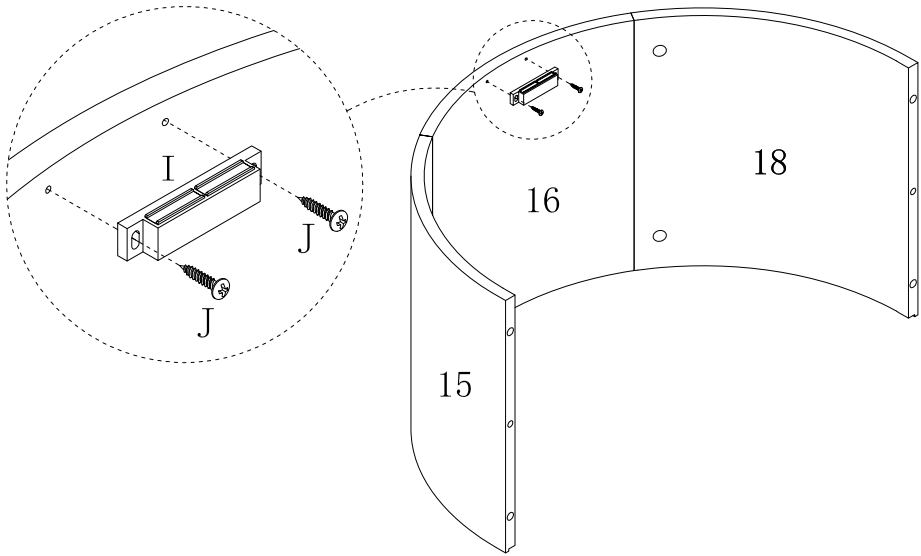
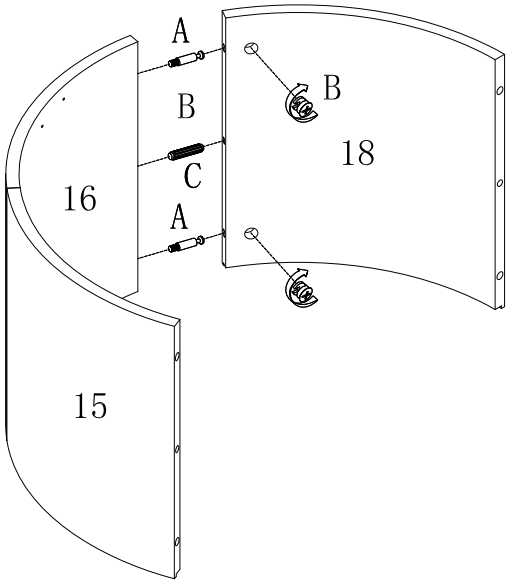
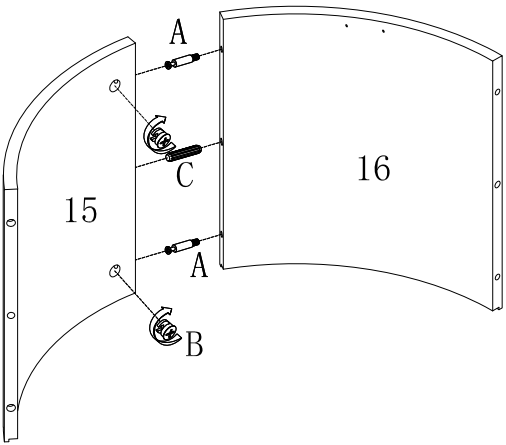
STEP 1

F:		8PCS
G:		2PCS
H:		2PCS





STEP 2

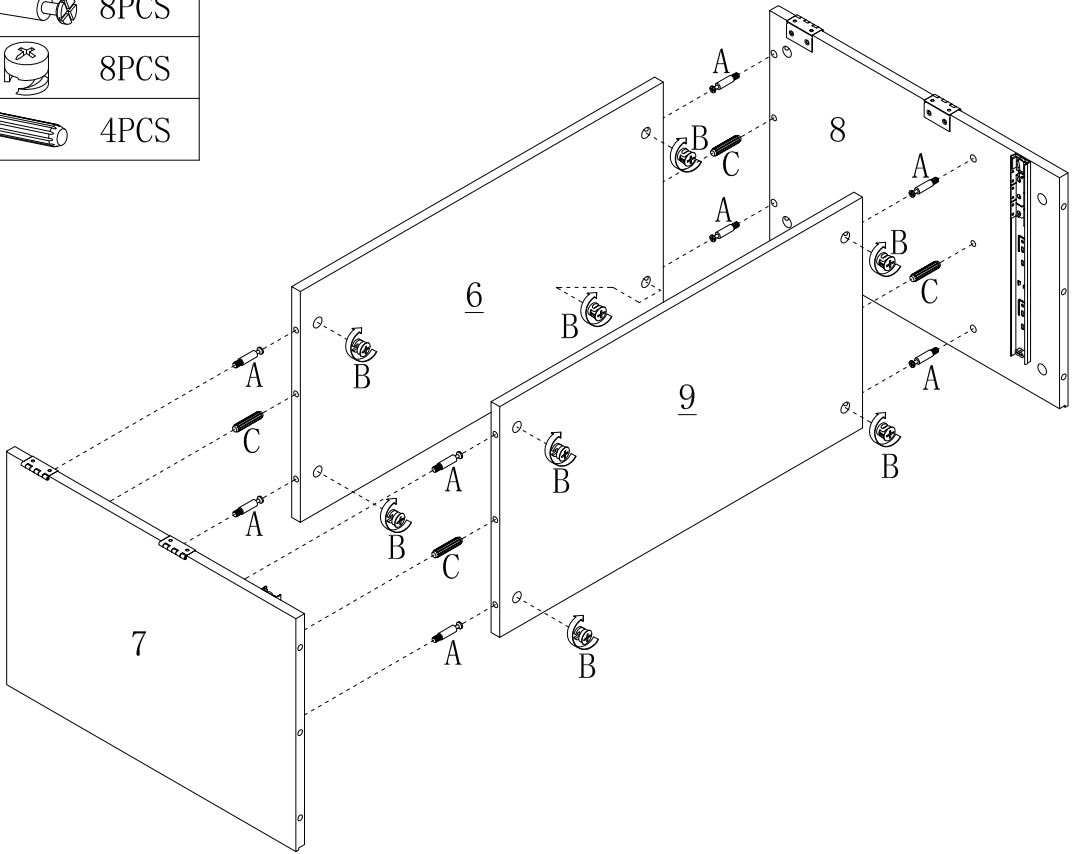
A:		4PCS
B:		4PCS
C:		2PCS
I:		1PC
J:		2PCS



ASSEMBLY INSTRUCTION

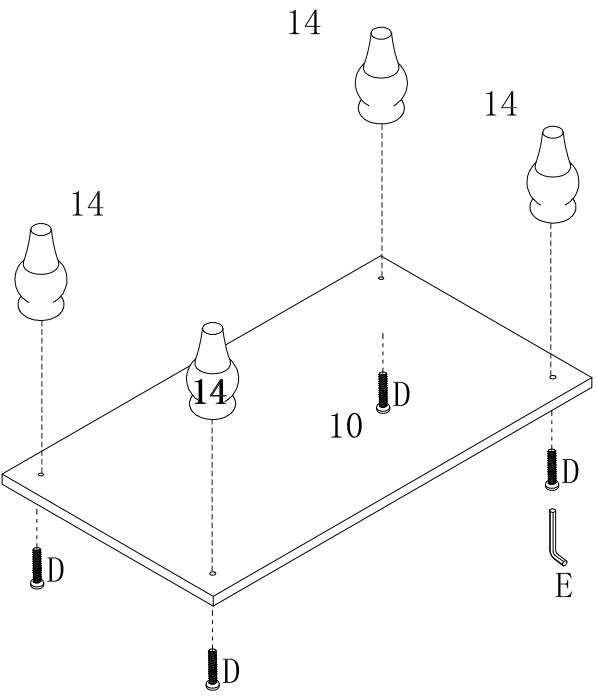
STEP 3

A:		8PCS
B:		8PCS
C:		4PCS




STEP 4

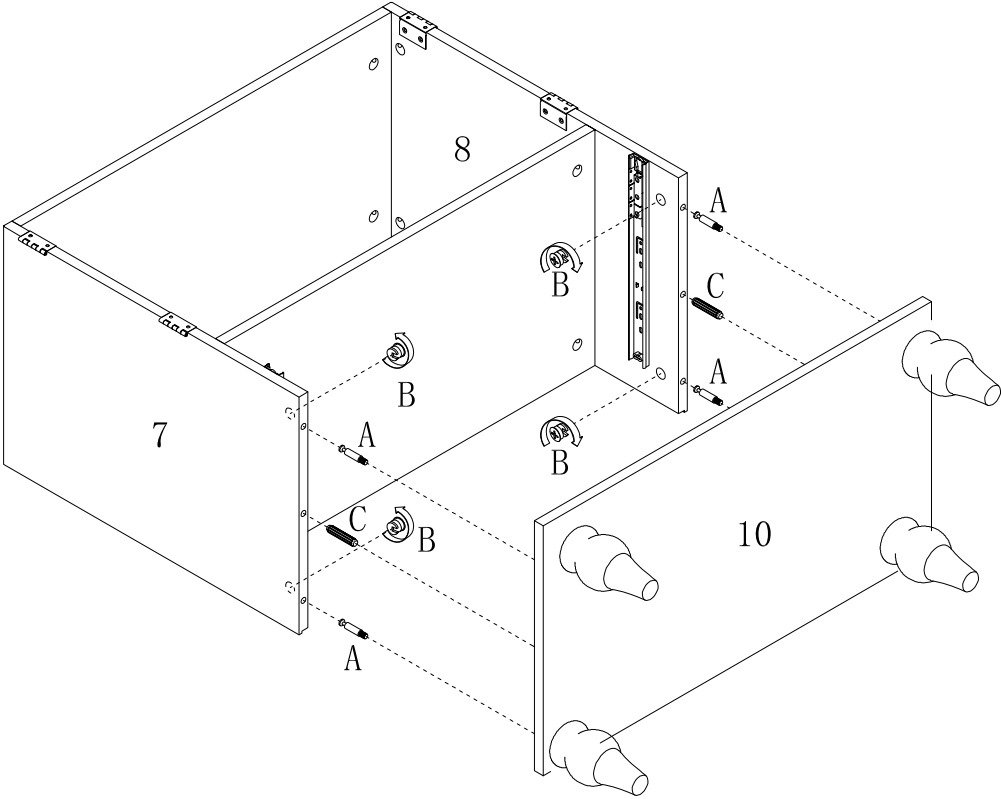
D:		4PCS
E:		1PC




ASSEMBLY INSTRUCTION

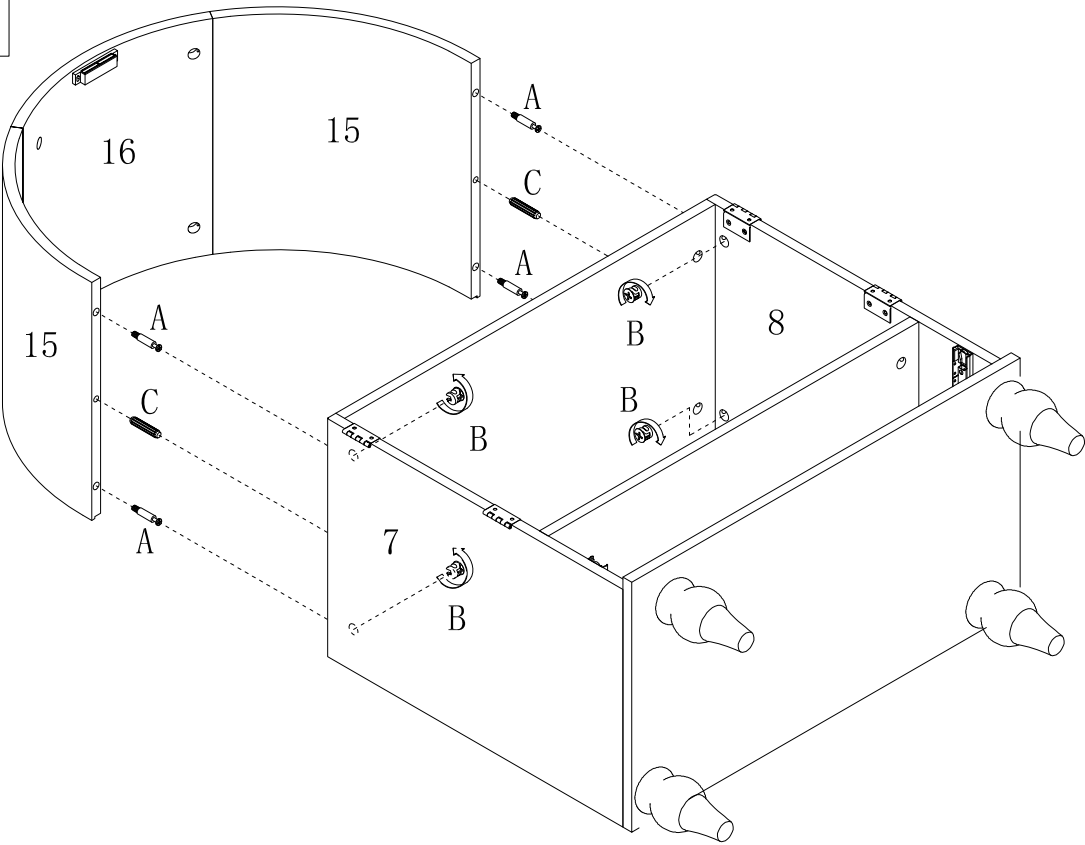
STEP 5

A:		4PCS
B:		4PCS
C:		2PCS



STEP 6

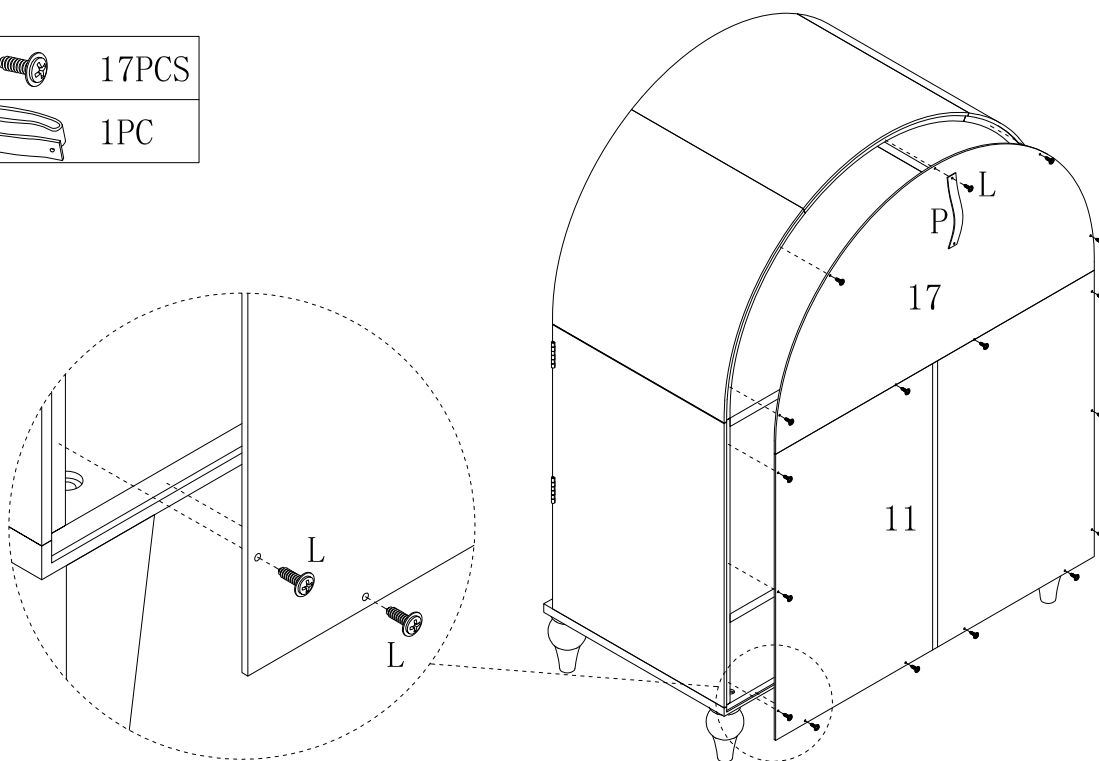
A:		4PCS
B:		4PCS
C:		2PCS



ASSEMBLY INSTRUCTION

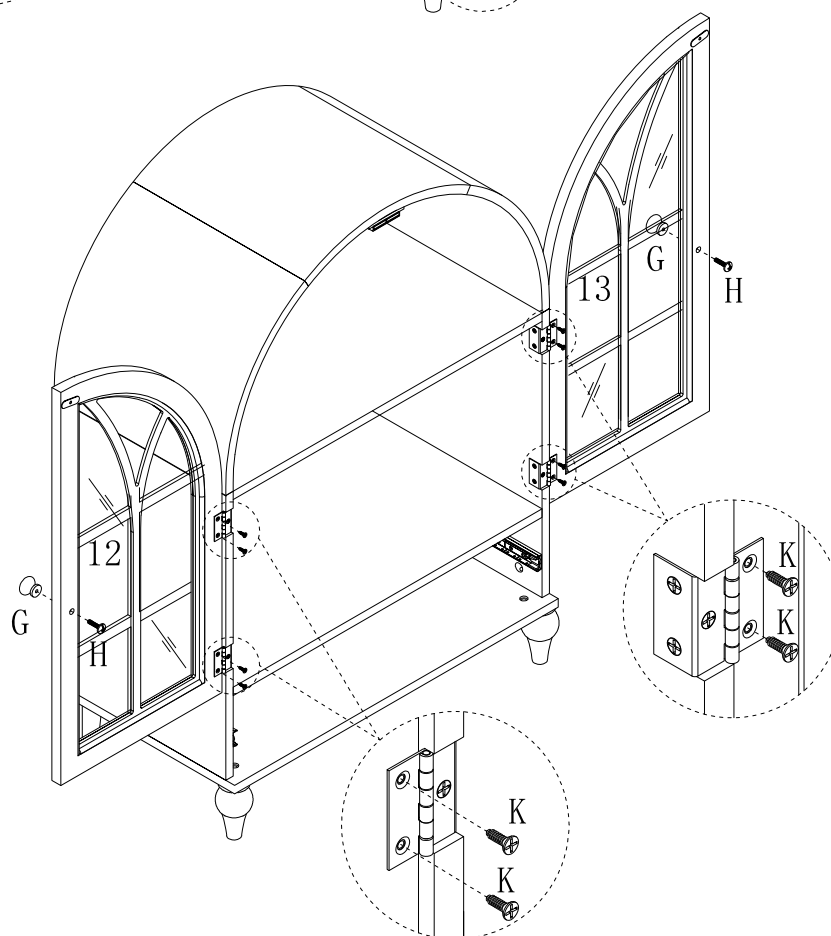
STEP 7

L:		17PCS
P:		1PC



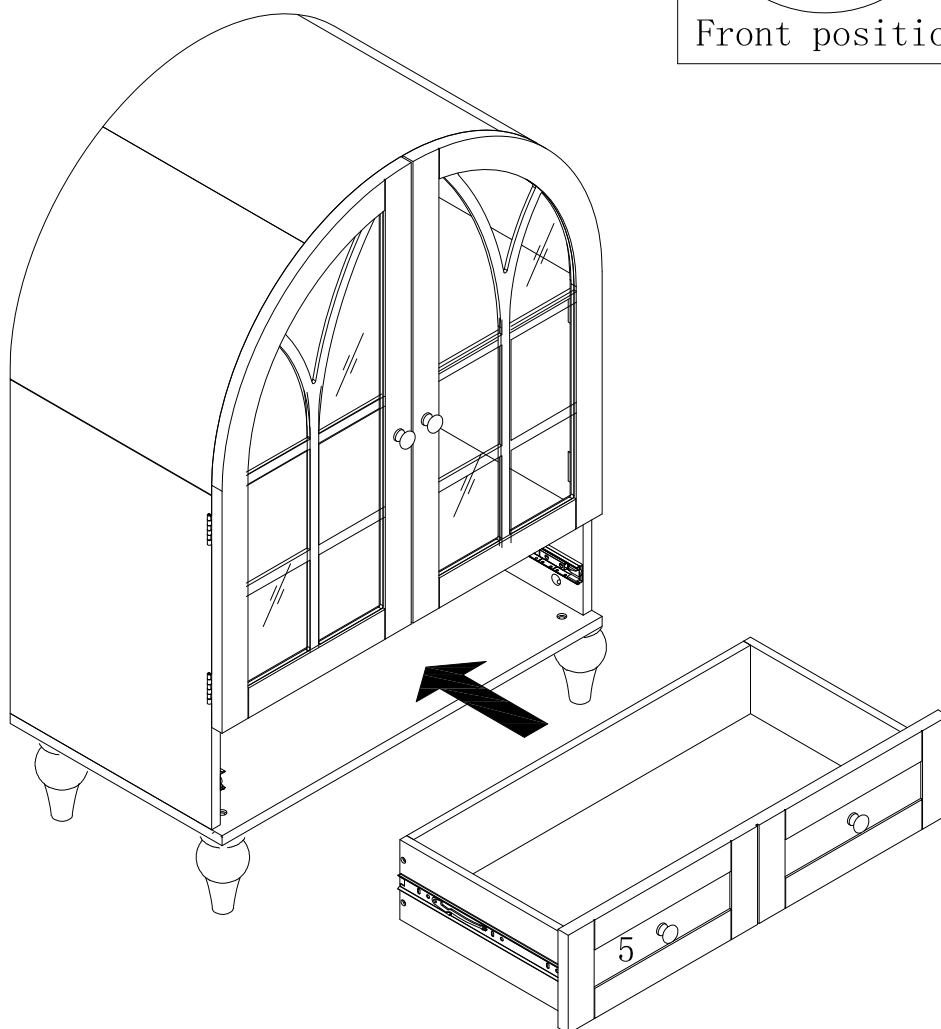
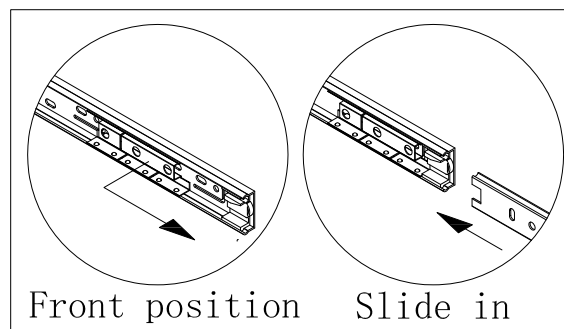
STEP 8

G:		2PCS
H:		2PCS
K:		8PCS



STEP 9

Note: Place the slidable part to the front position before sliding in.



STEP 10

M:		1PC
N:		1PC
O:		1PC

