
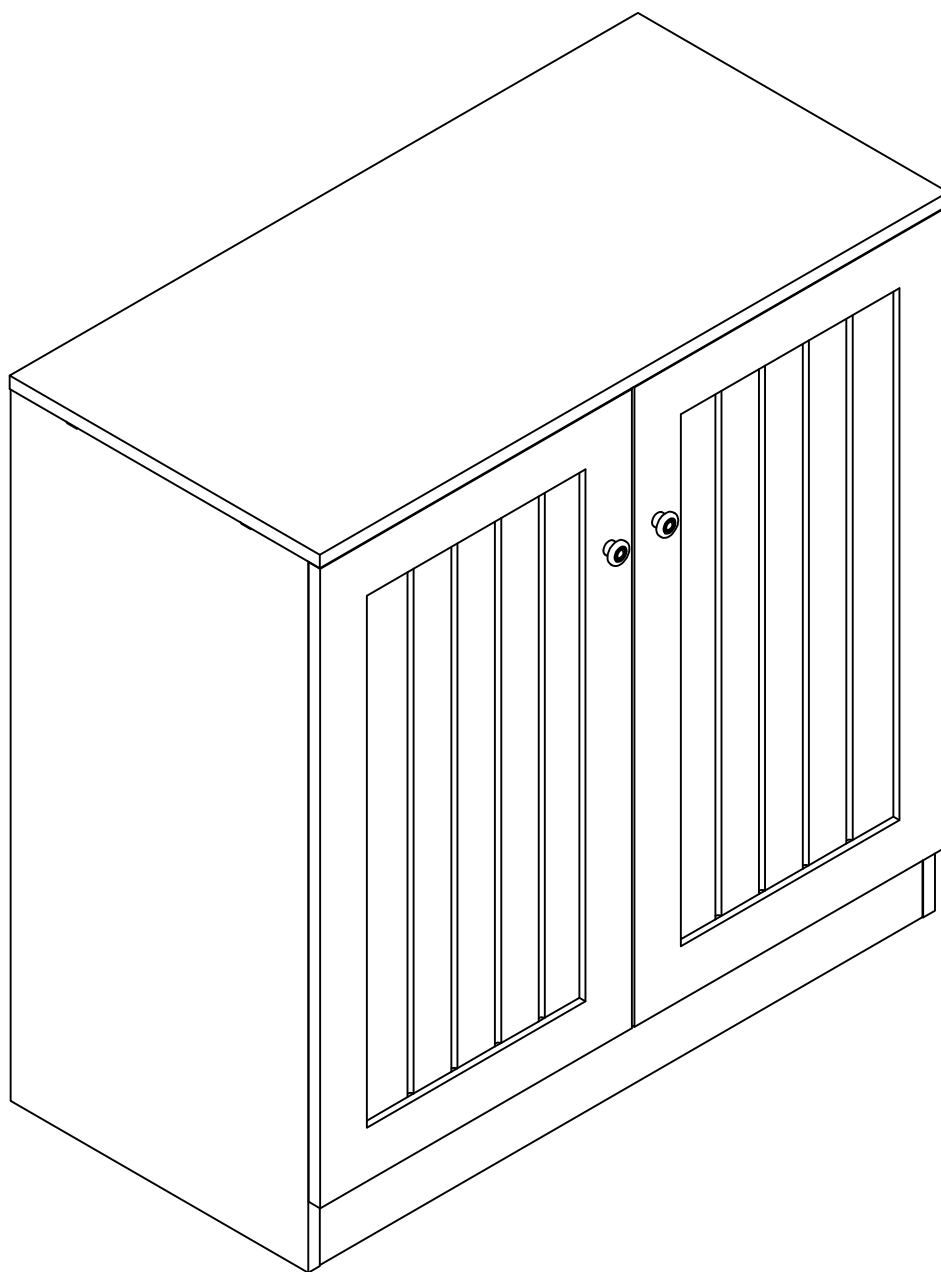
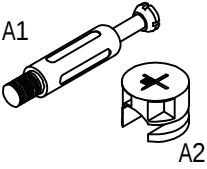

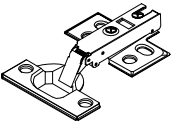


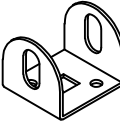
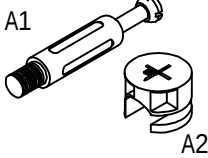






Hardware


 A1 A2	 Φ 8*30	 Φ 3*14	 Φ 3.5*14	 E
A × 15	B × 10	C × 8	D × 30	E × 8
 F	 G	 H	 4*20	 J1 J2 J3 J4 J5
F × 4	G × 4	H × 2	I × 2	J × 2
 K	 Φ 20	 M	 T	 U
K × 1	L × 15	M × 6	T × 2	U × 2
 V				
V × 4				

Spare hardware

 A1 A2	 Φ 8*30	 Φ 3*14
A × 2	B × 2	C × 2
 Φ 3.5*14	 E	 Φ 20
D × 2	E × 2	L × 2

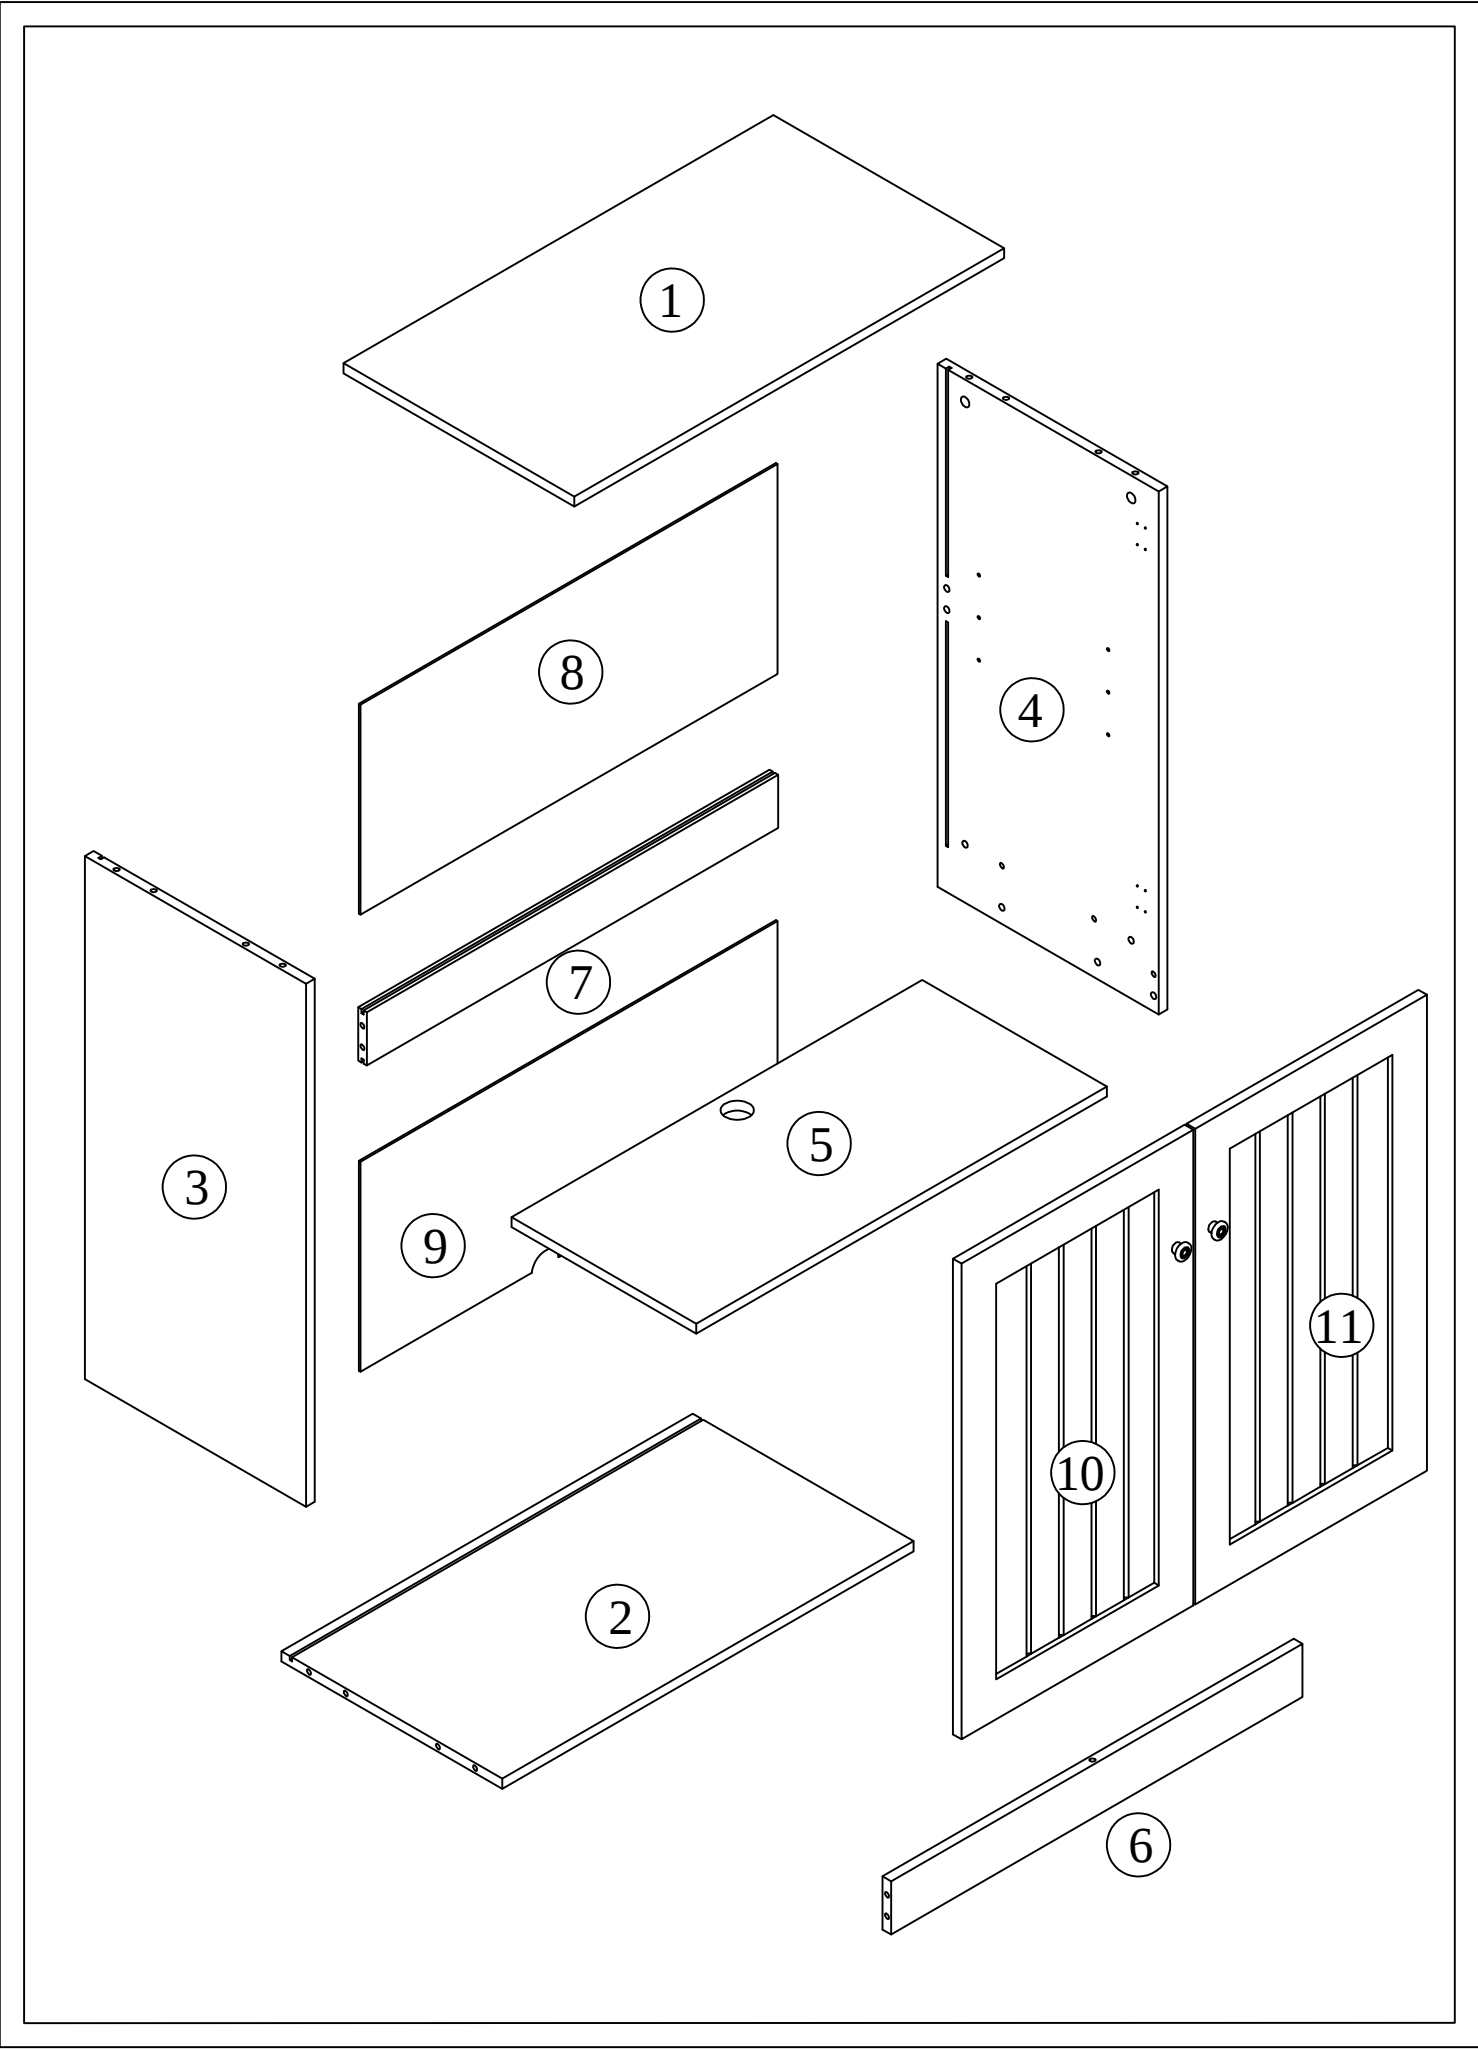


1

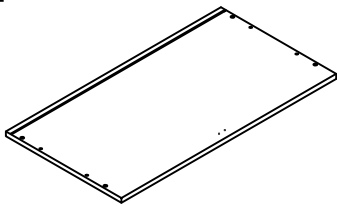


x1

2

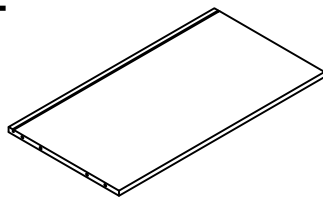


x1

3

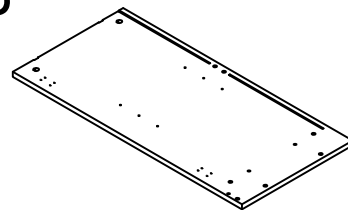


x1

4

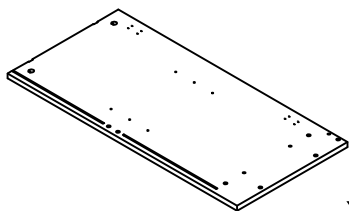


x1

5

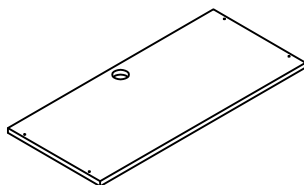


x1

6

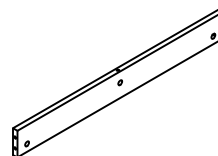


x1

7

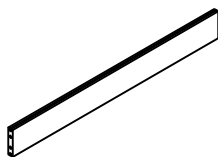


x1

8

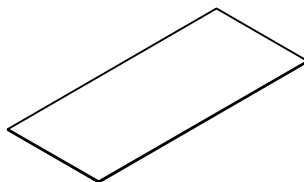


x1

9

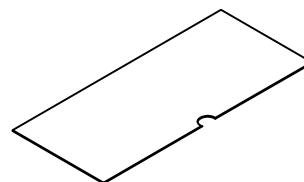


x1

10

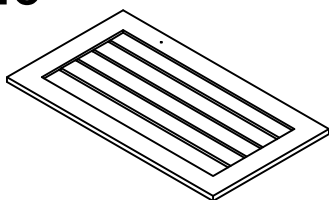



x1

11



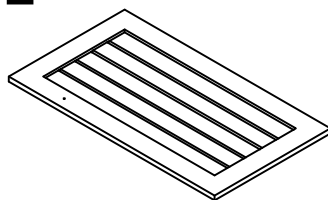


x1


1

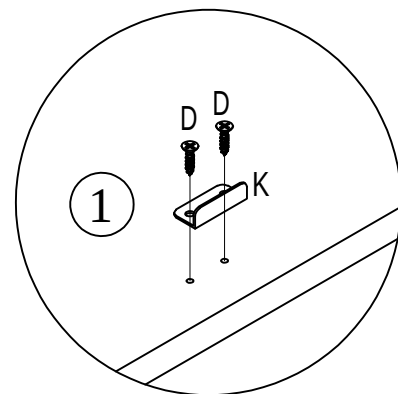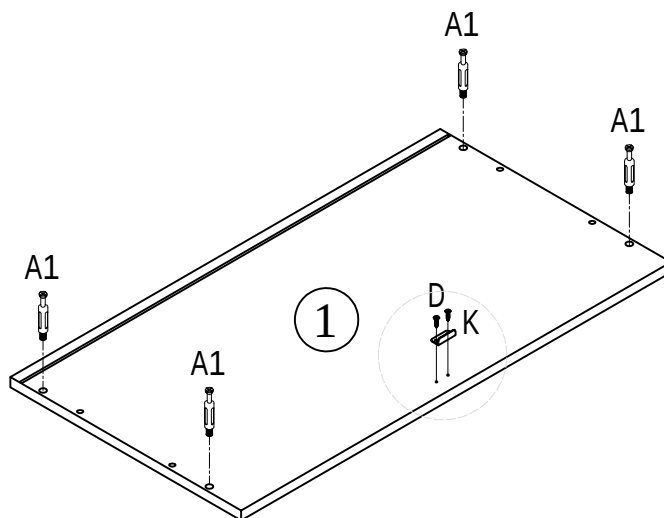

A1  4pcs	D  $\Phi 3.5 \times 14$ 2pcs	K  1pcs
--	--	---

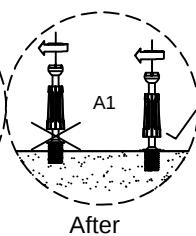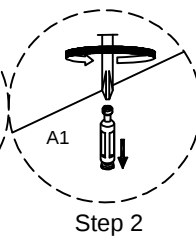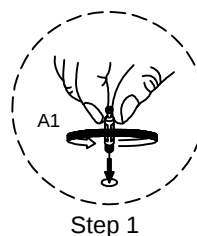


2

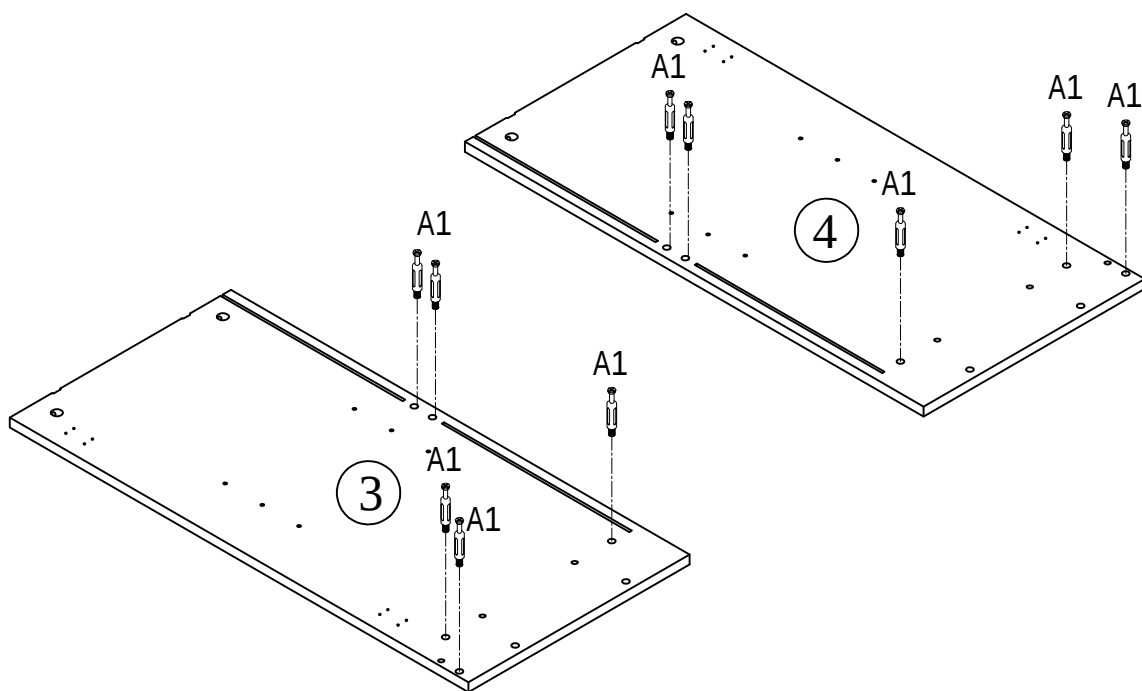

A1  10pcs
--

3

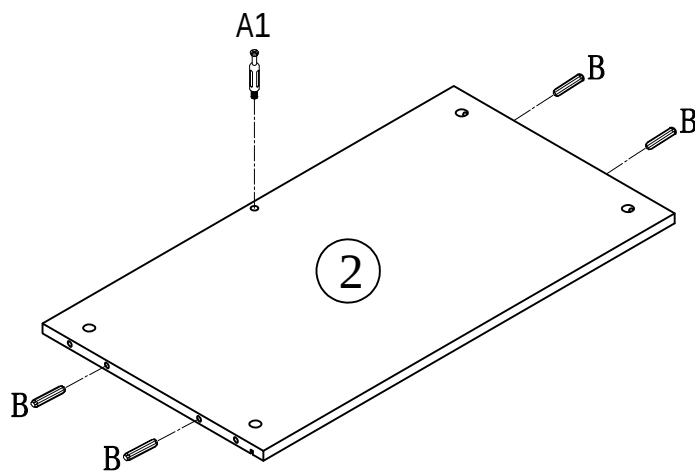


A1



1pcs


B



Φ 8*30

4pcs

4

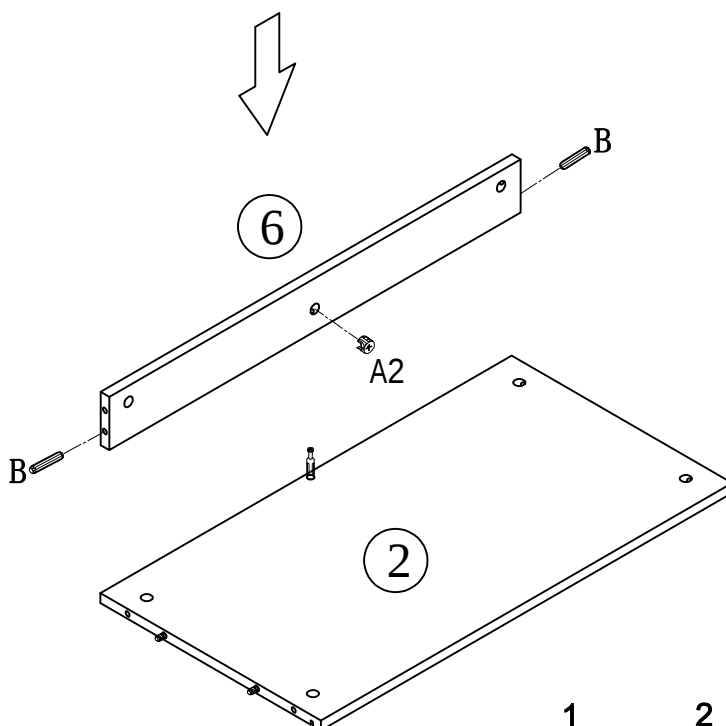


A2



1pcs


B



Φ 8*30


2pcs

L




Φ 20


1pcs

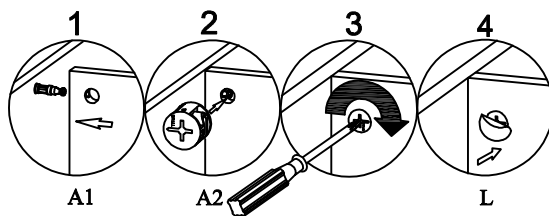


5

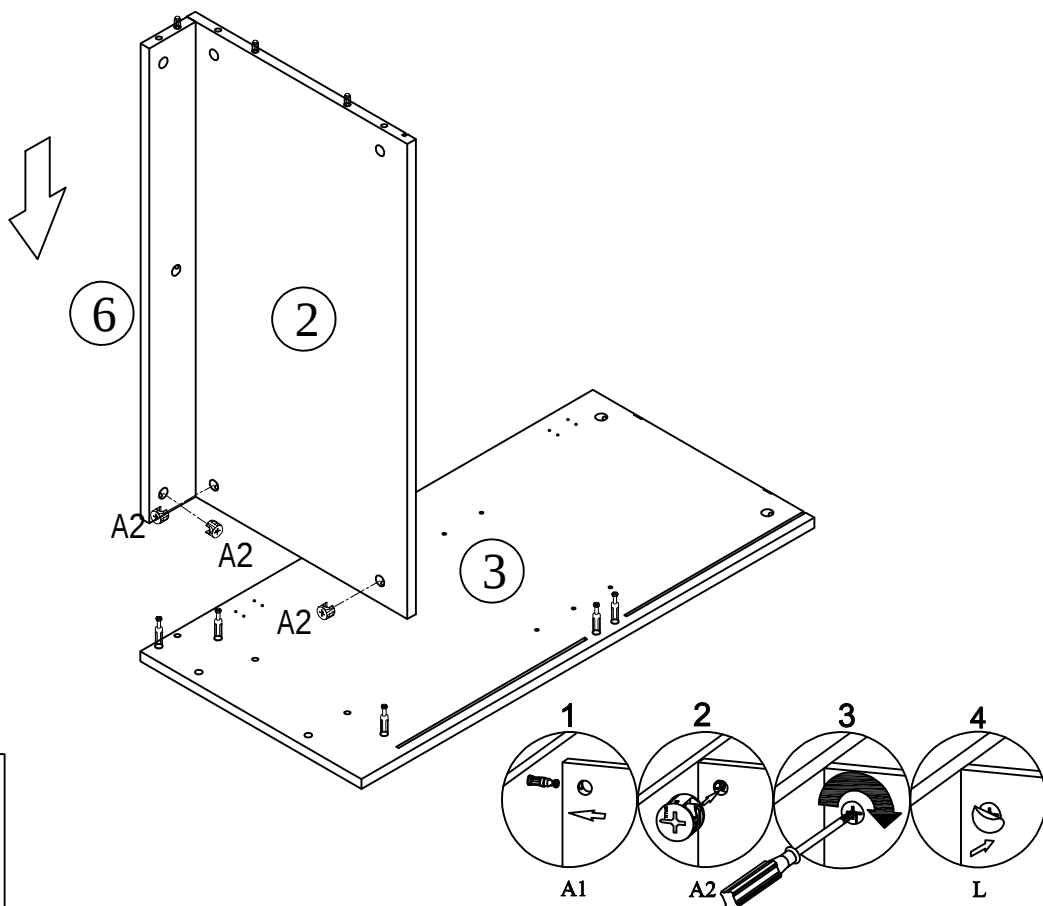




6

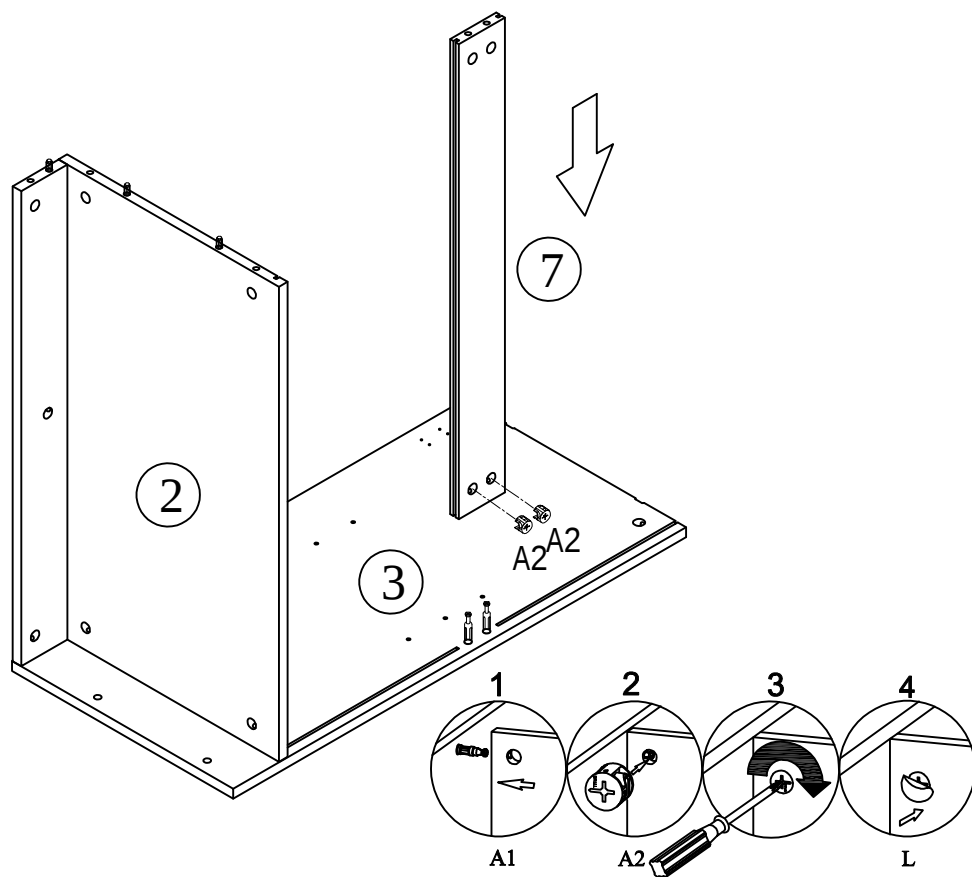



7

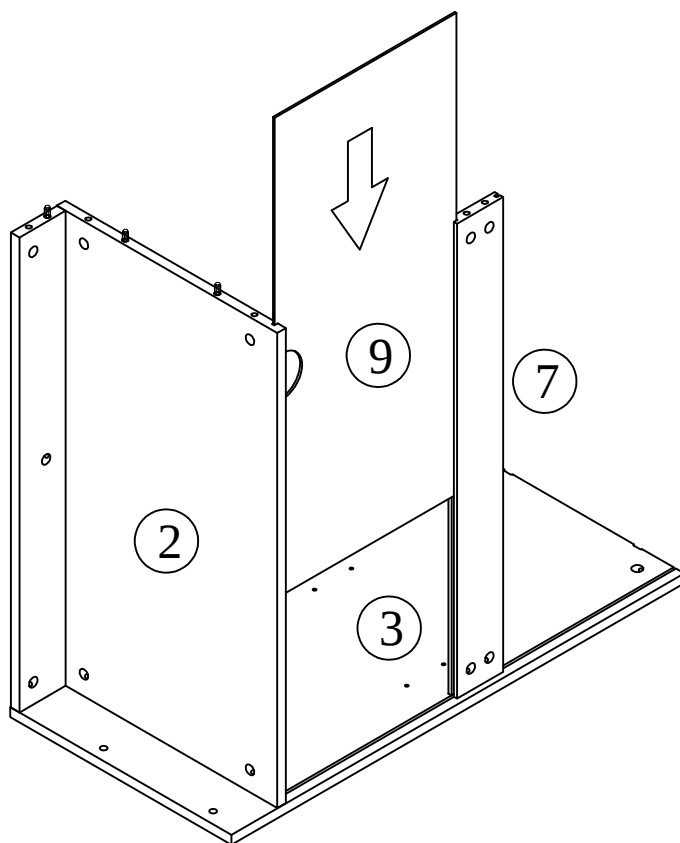




8

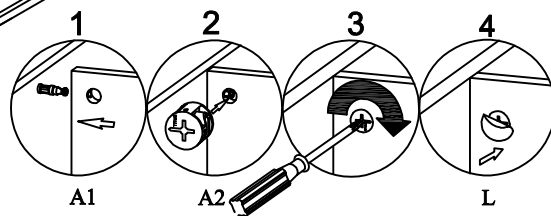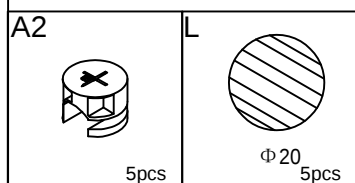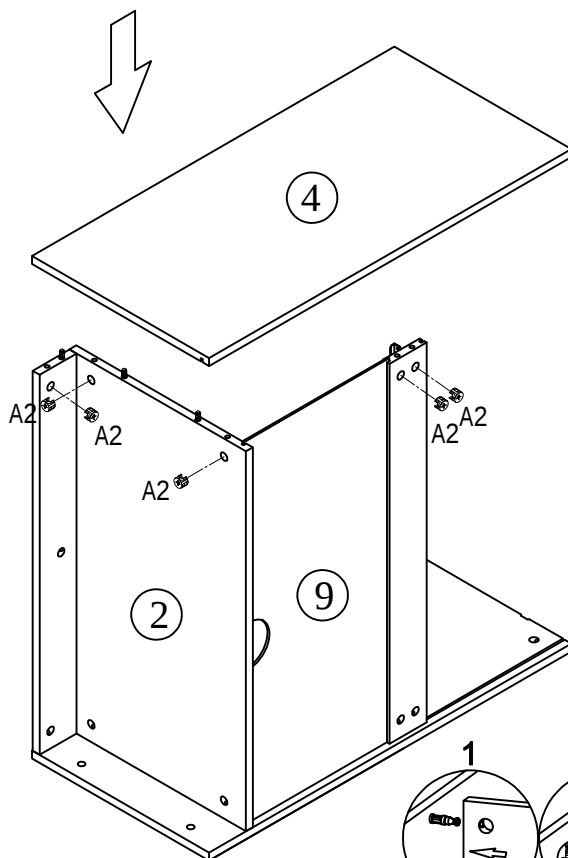





9

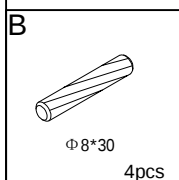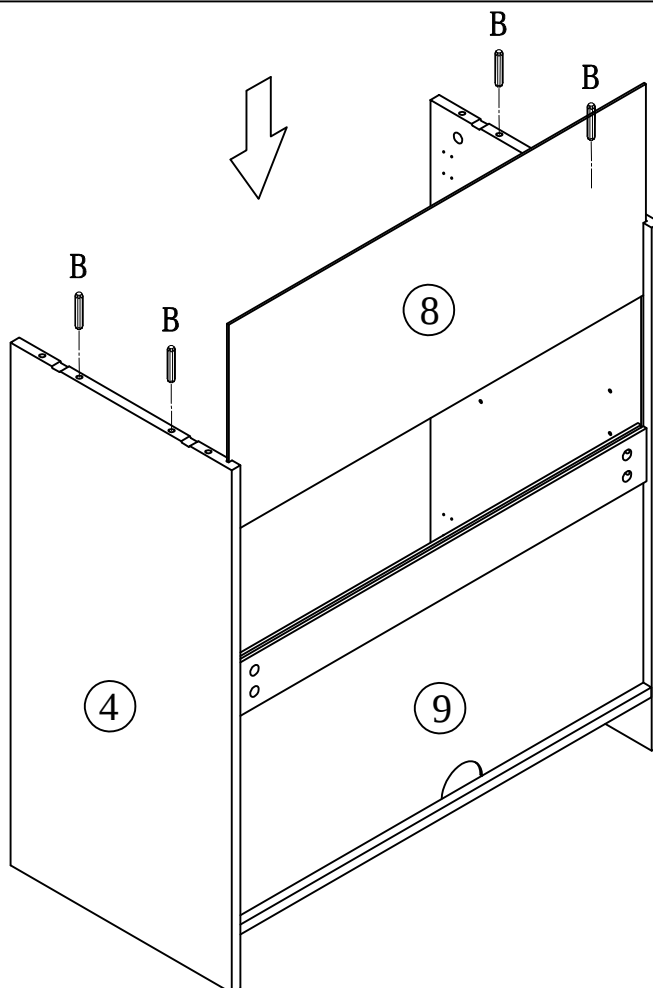

10

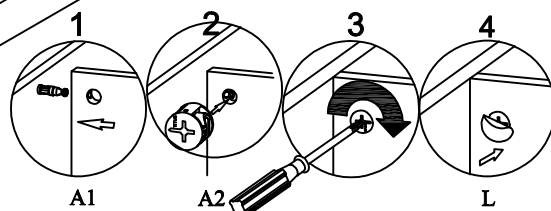
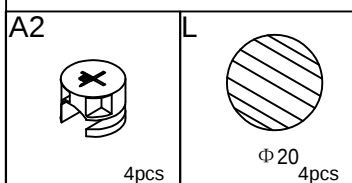
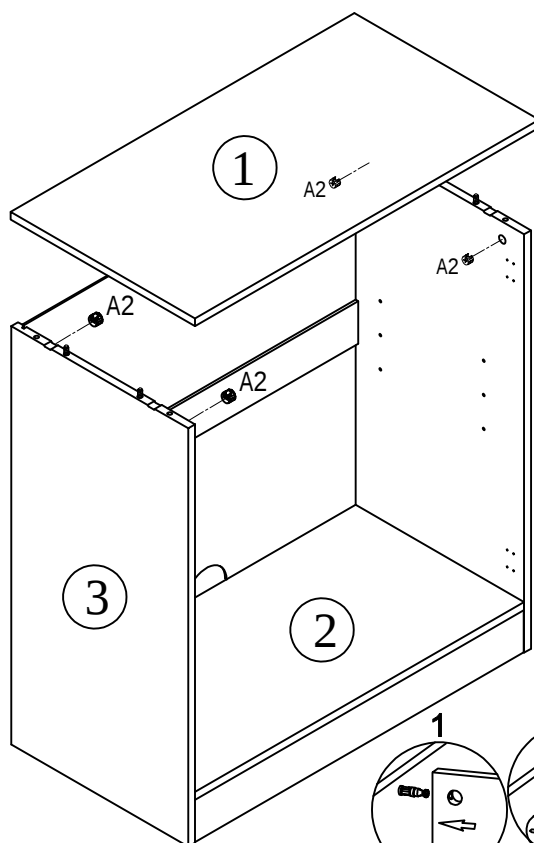




11-1

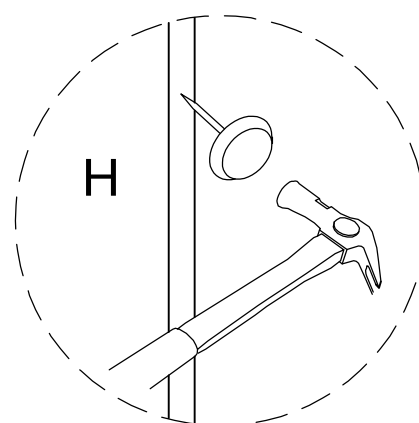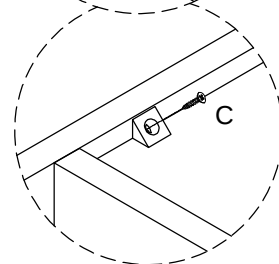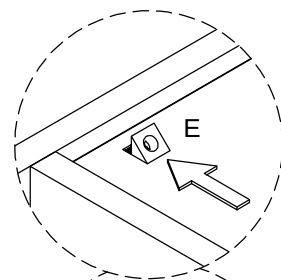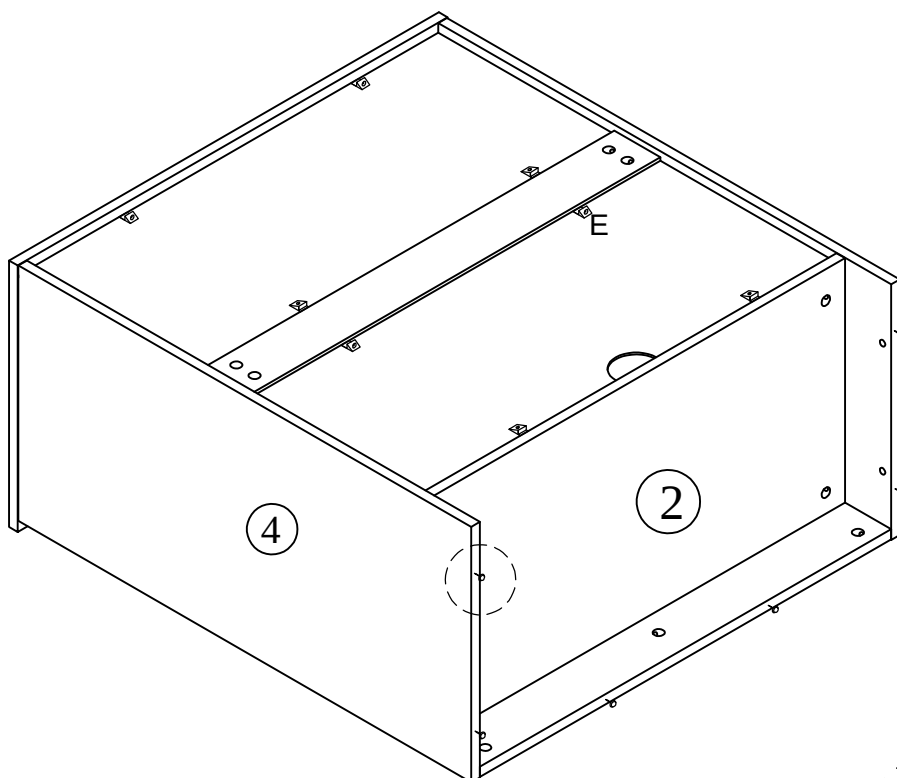


E	C	M
		
8pcs	8pcs	4pcs

11-2

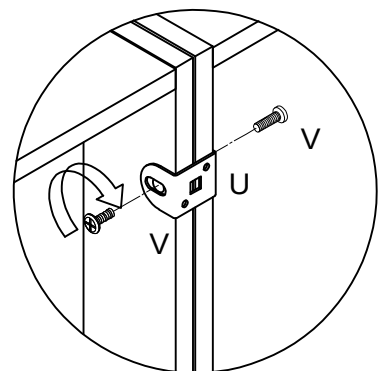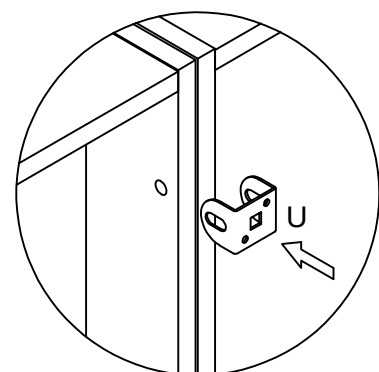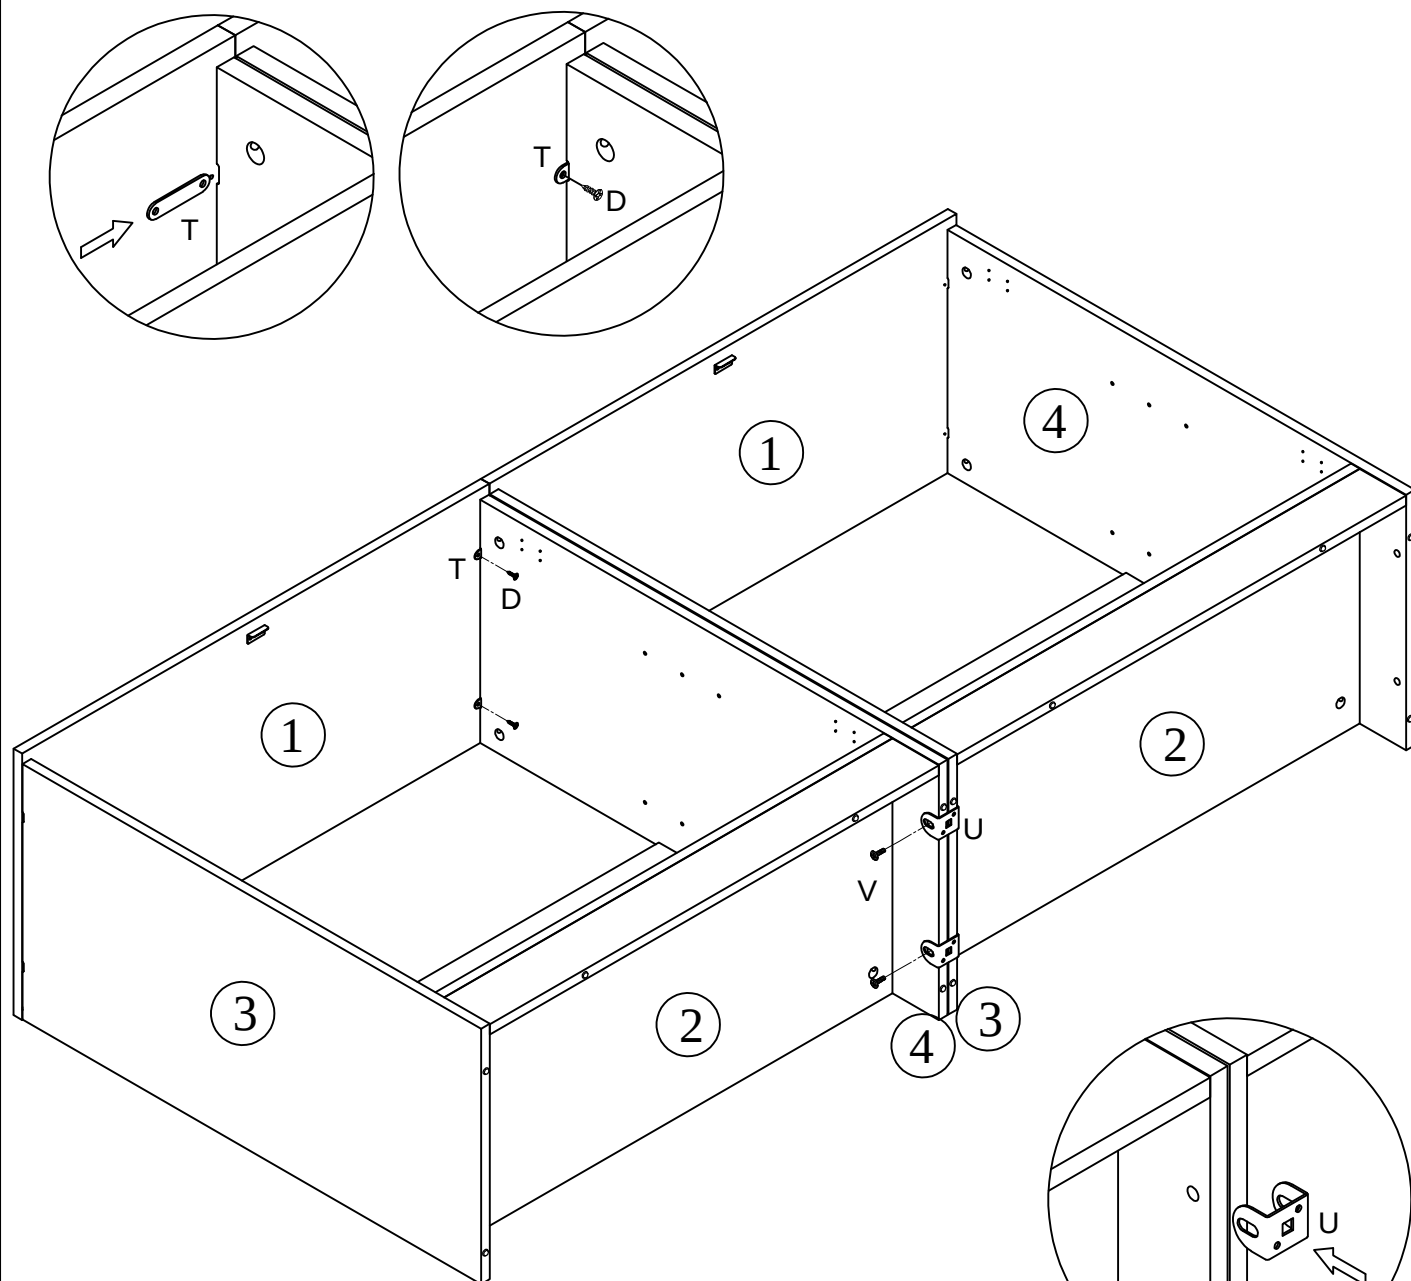

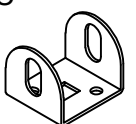U  2pcs	D  Φ3.5*14 4pcs	V  4pcs	T  2pcs
---	--	--	--

12


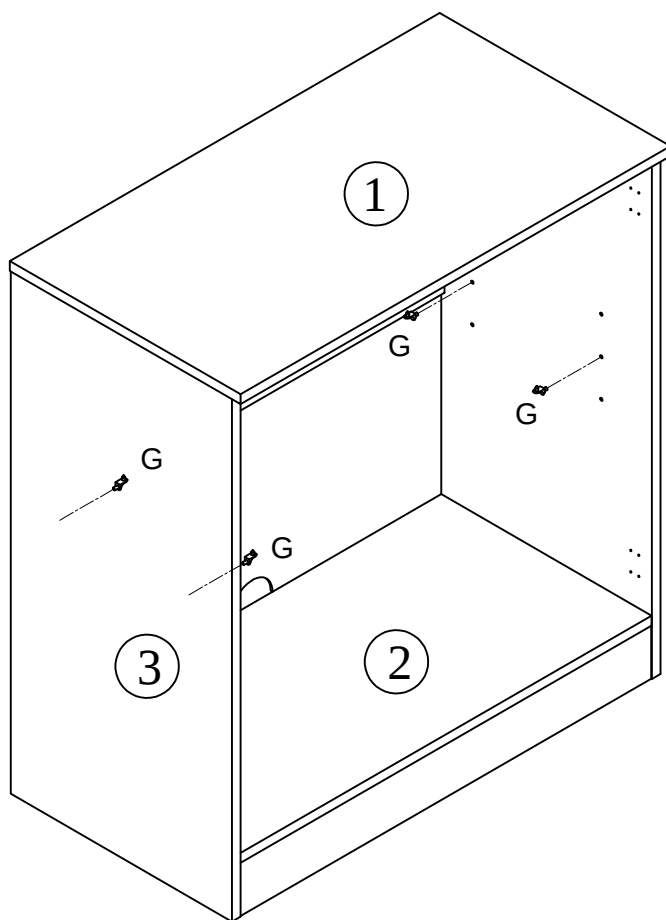


G





4pcs

13

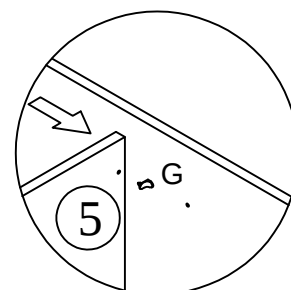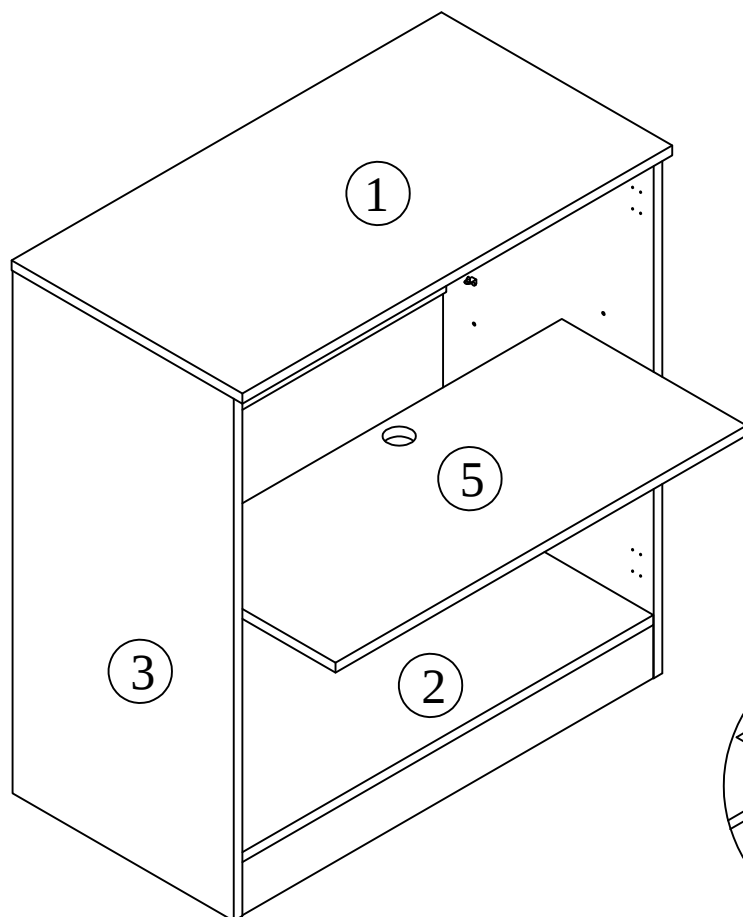

14


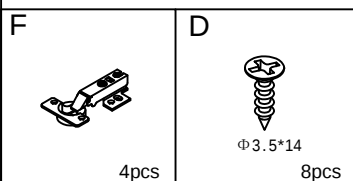
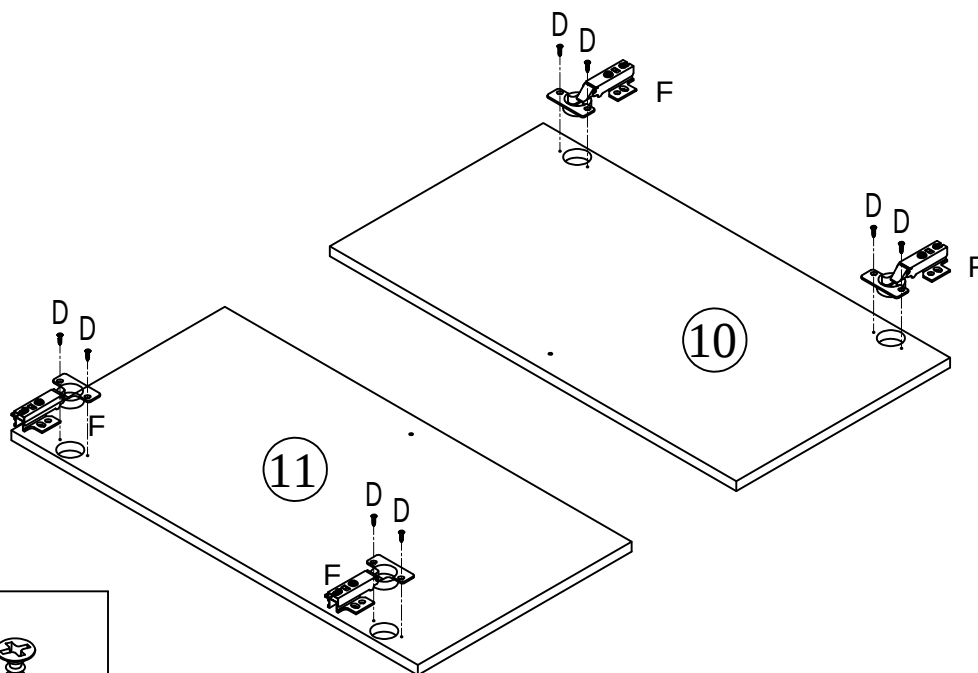


15

Hinge Installation Instructions

1. Attach the hinge using the two pre-drilled round holes and align the door.
2. Tighten the two screws to secure.

- △ Two holes are pre-drilled by design.
- △ The door works properly with these two screws.
- △ Additional screws are optional after alignment.

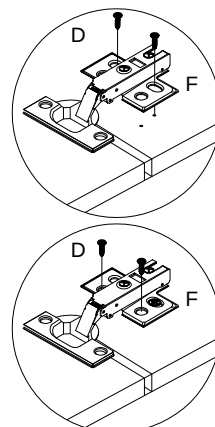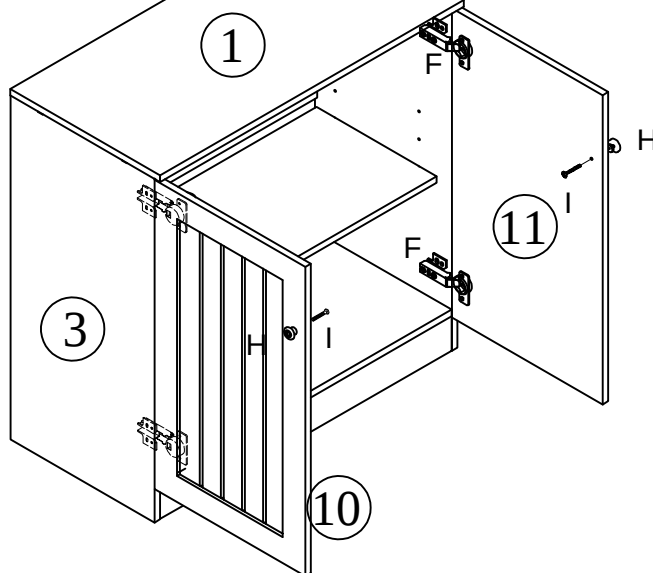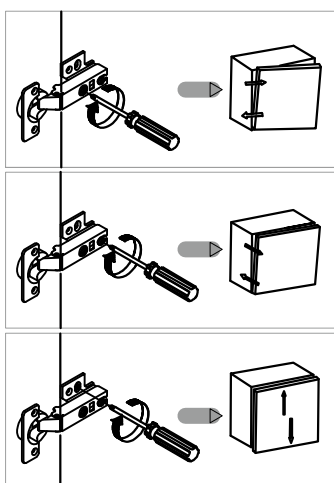

Hinges Adjustment Video:

If the gap between the door and frame is too large or too small after installation, adjust the hinges to achieve the desired spacing.

