


Assembly Instructions

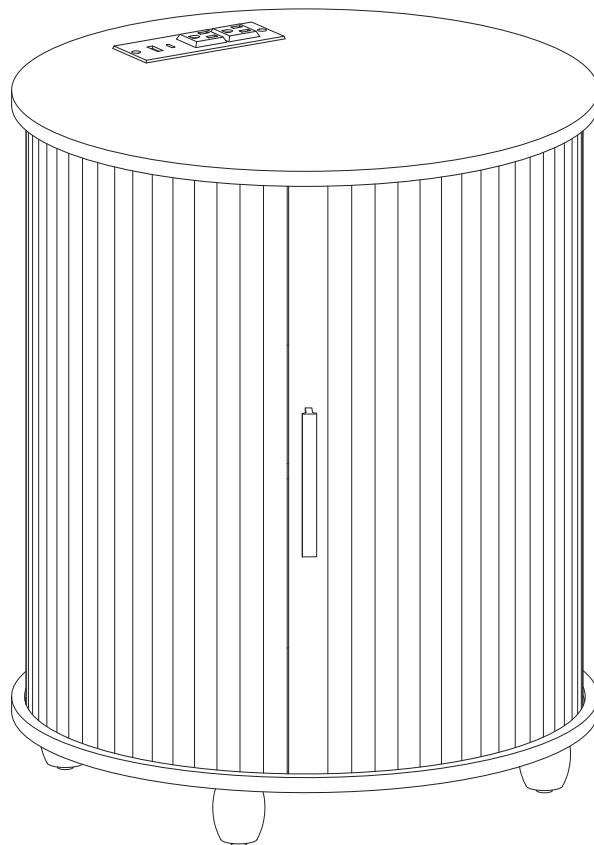


Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

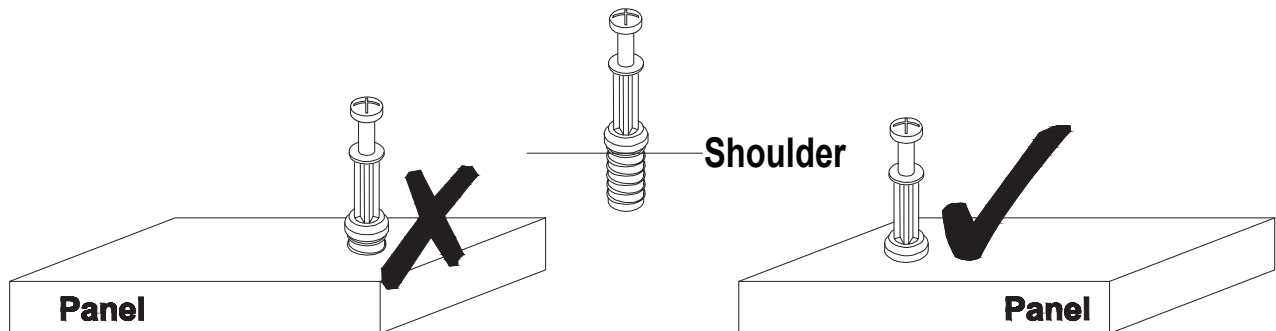

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

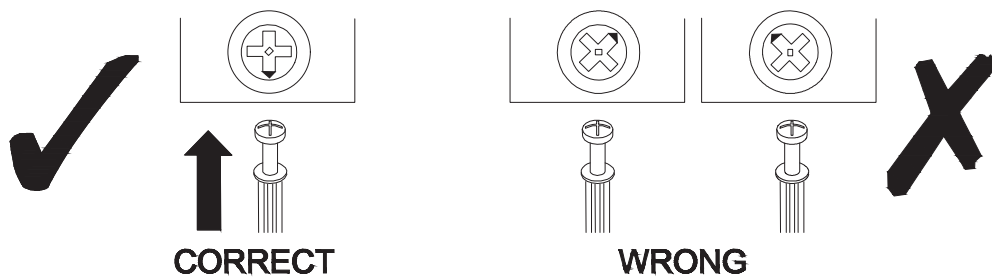

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT









Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

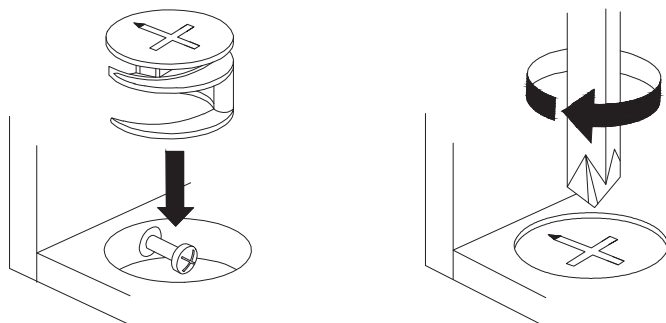


Turn cam lock clockwise to tighten.

Part List

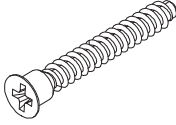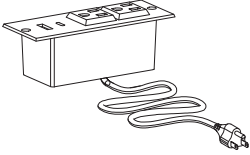


No. A Quantity: 8+1 PCS Cam Bolt ø6x33.5mm 	No. B Quantity: 8+1 PCS Cam ø15x9.5mm 	No. C Quantity: 8+1 PCS Sticker ø20mm 	No. D Quantity: 12+1 PCS Dowel ø6x30mm 
No. E Quantity: 4+1 PCS Screw ø5x48mm 	No. F Quantity: 2 PCS Screw ø3.5x12mm 	No. G Quantity: 1 PCS 	No. H Quantity: 1 PCS Handle 
No. I Quantity: 2 PCS Screw M4x8mm 	No. J Quantity: 4 PCS Bolt M6x25mm 	No. K Quantity: 6+1 PCS Screw ø3x14mm 	No. L Quantity: 1 PCS Hex Key 4mm 

If your order is double pcs package,the hardwares above will be double qty as well.


Product structure

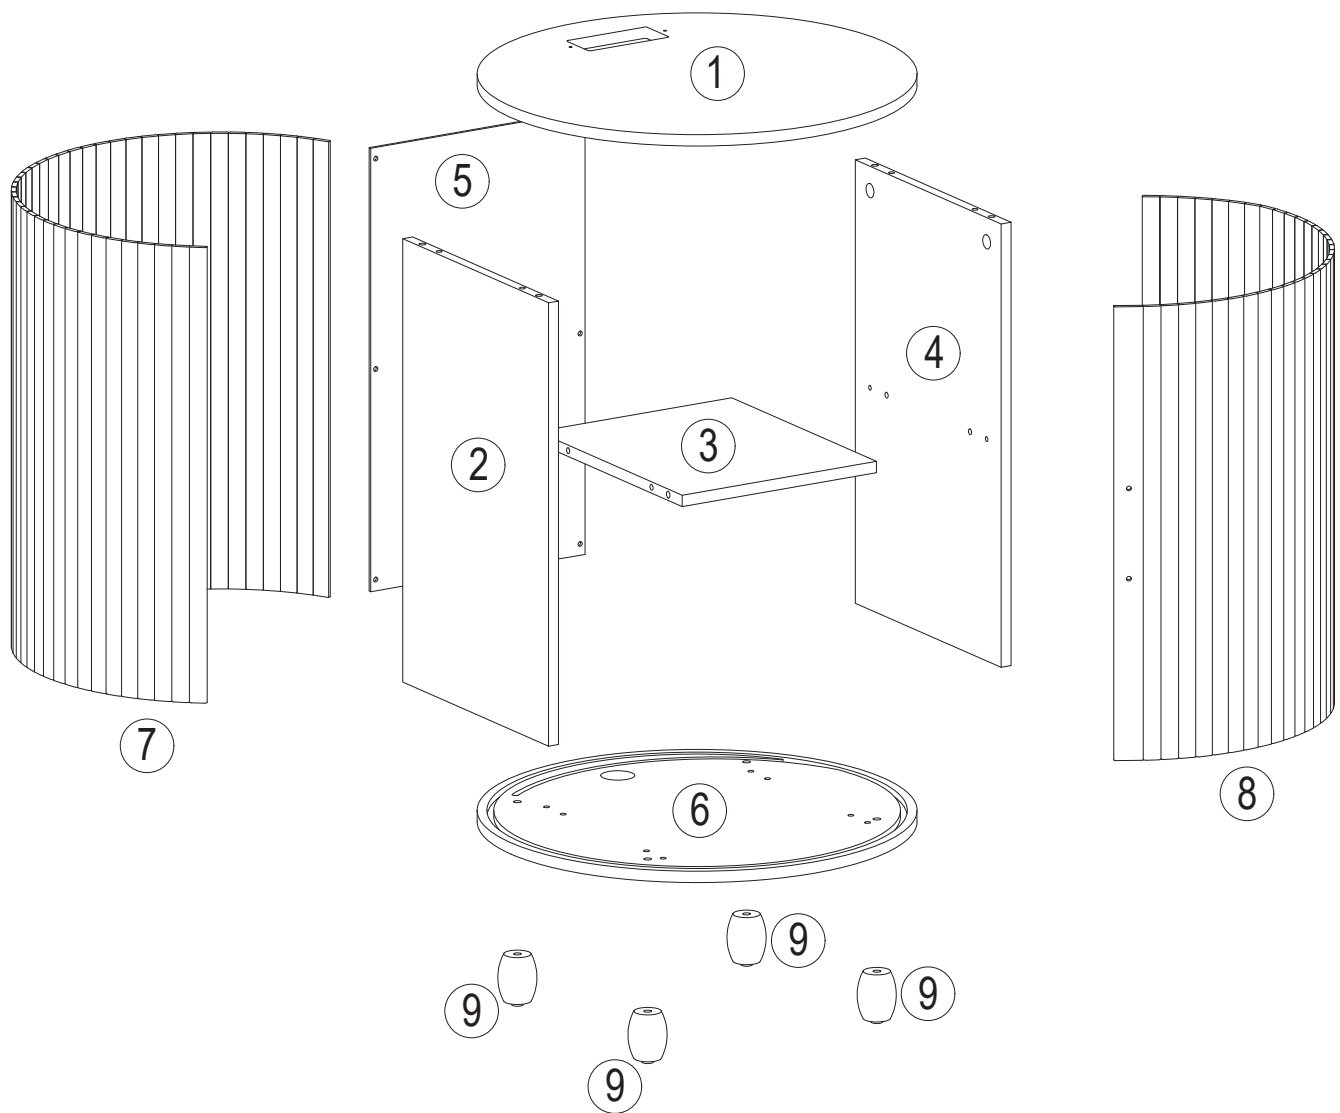



STEP 1

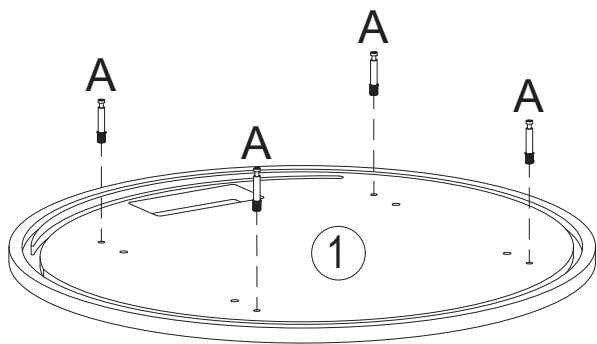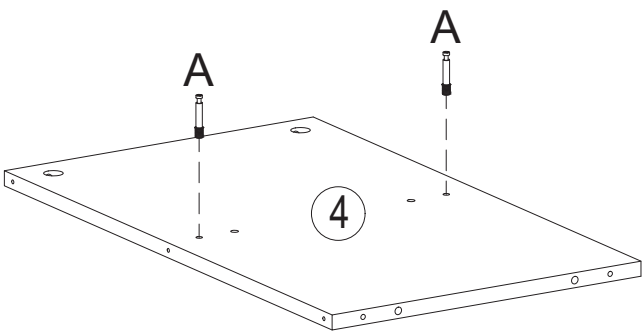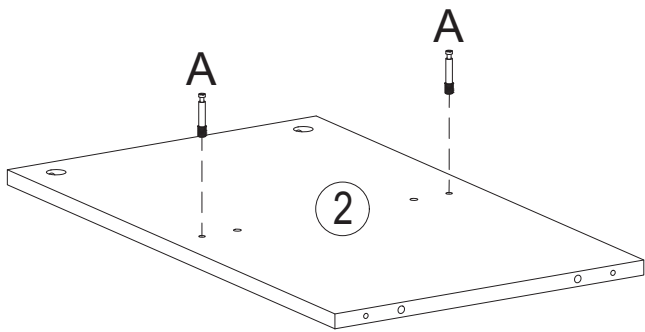


No. A
Quantity: 8 PCS
Cam Bolt
ø6x33.5mm

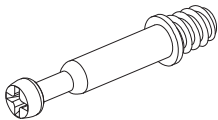



STEP 2

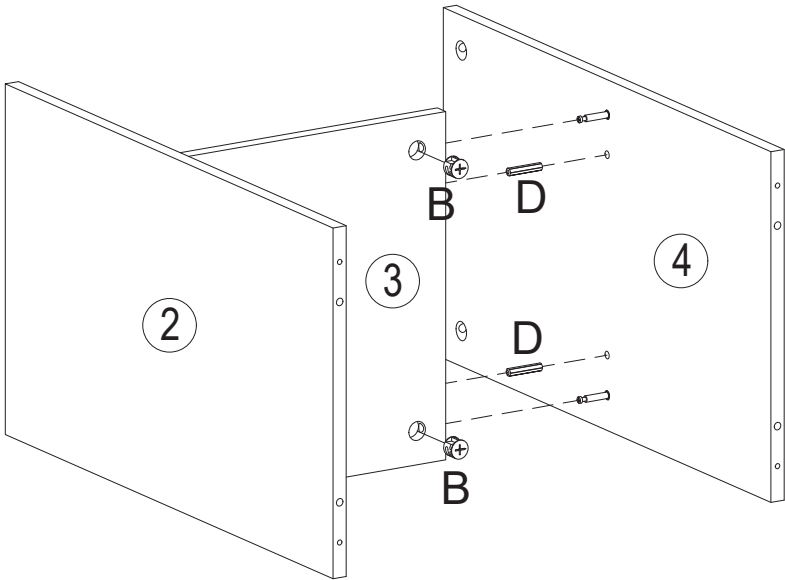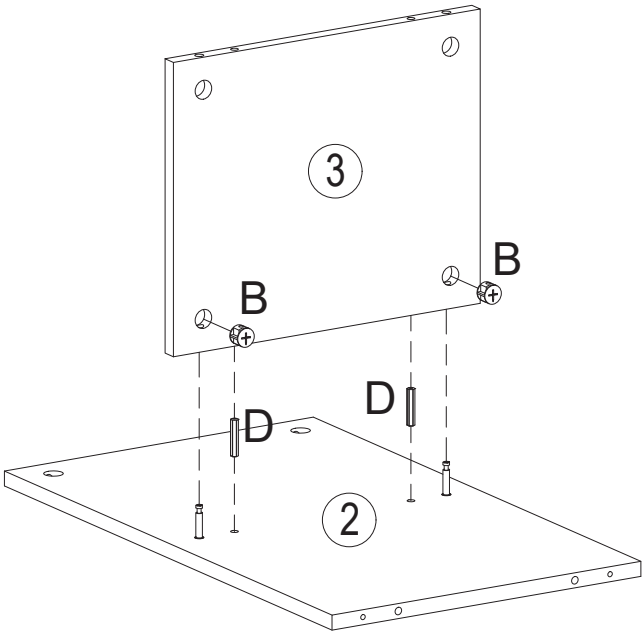



No. B
Quantity: 4 PCS
Cam
ø15x9.5mm




No. D
Quantity: 4 PCS
Dowel
ø6x30mm

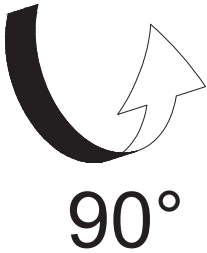


STEP 3

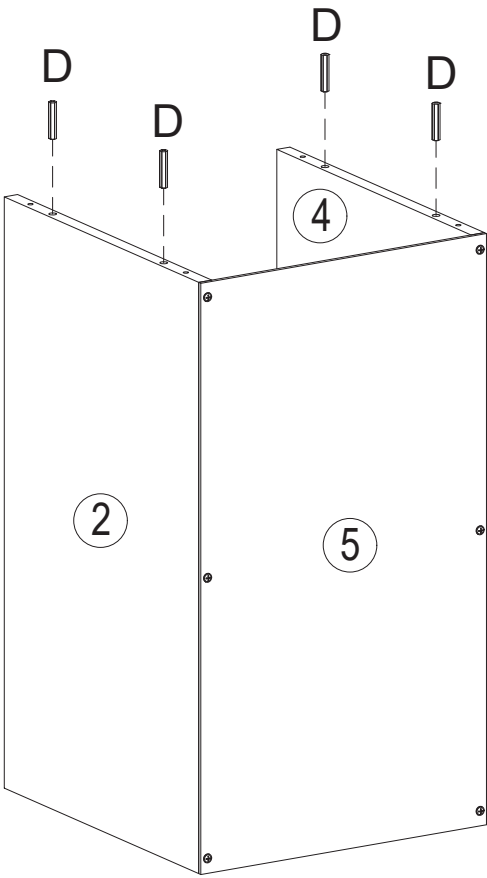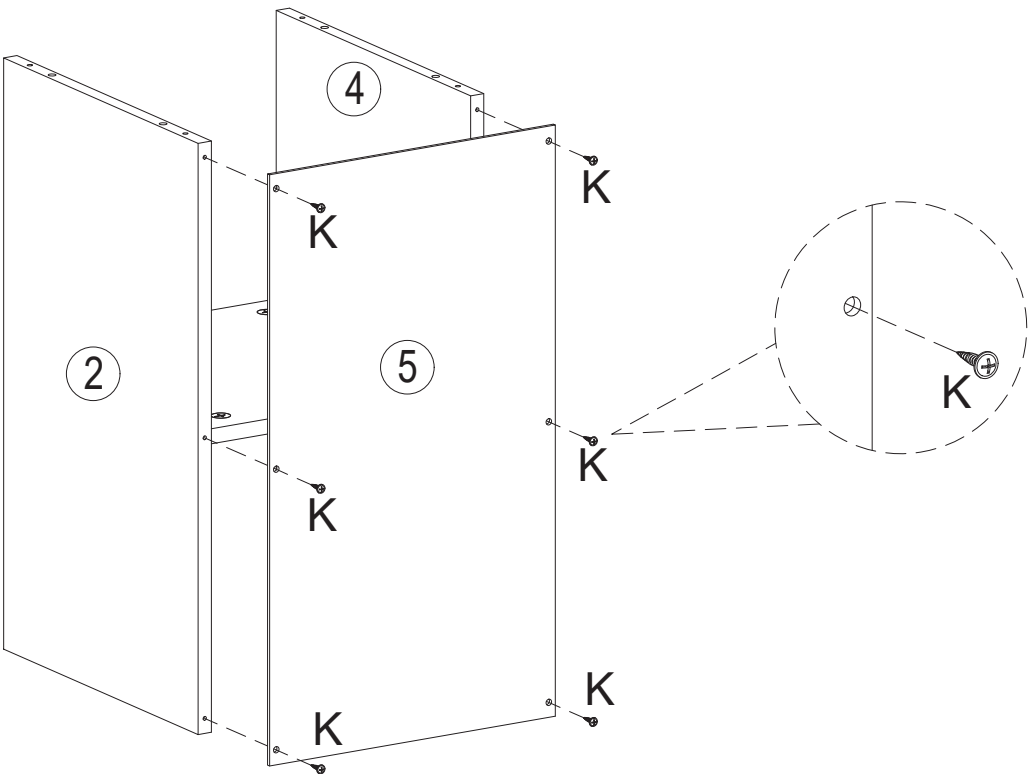


No. K
Quantity: 6 PCS
Screw
ø3x14mm




No. D
Quantity: 4 PCS
Dowel
ø6x30mm





STEP 4

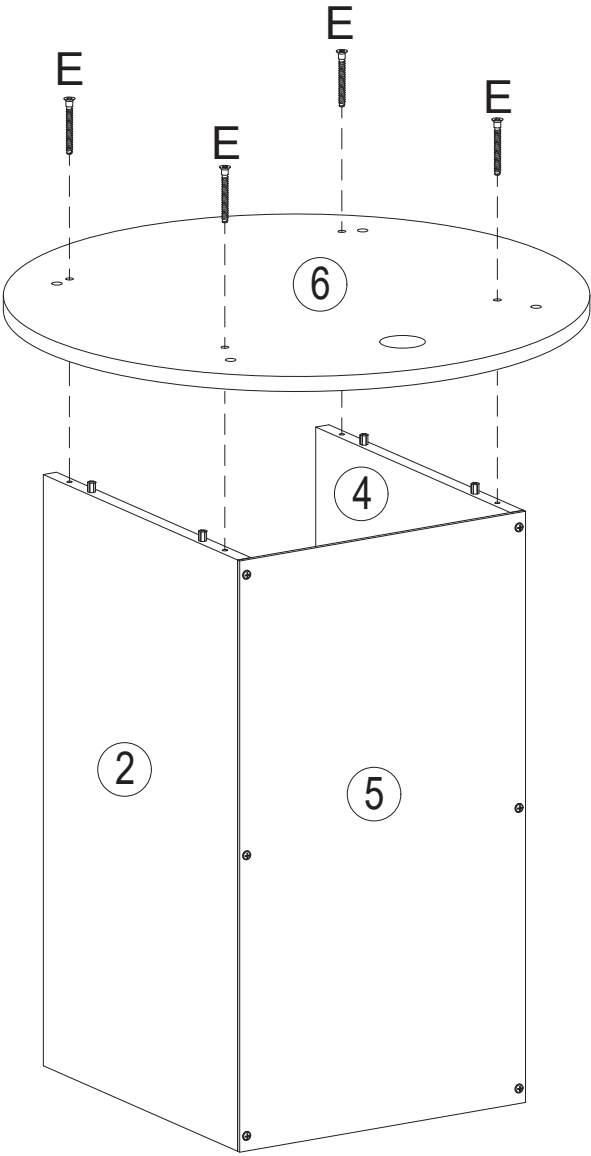


No. E
Quantity: 4 PCS
Screw
ø5x48mm

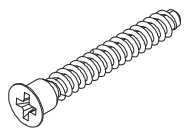

STEP 5

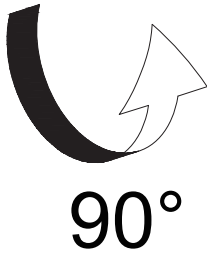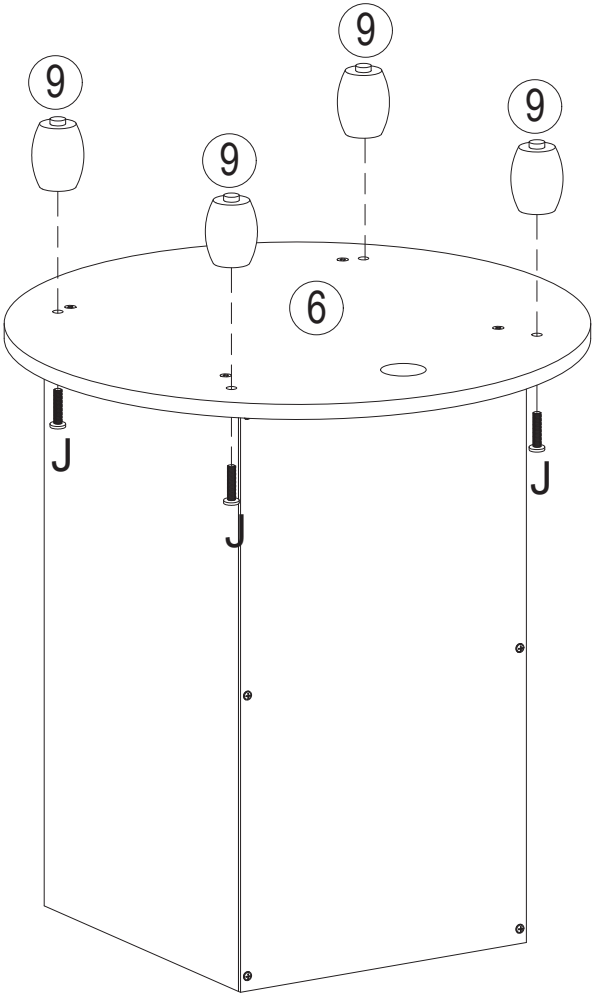


No. J
Quantity: 4 PCS
Bolt
M6x25mm




No. L
Quantity: 1 PCS
Hex Key
4mm




STEP 6

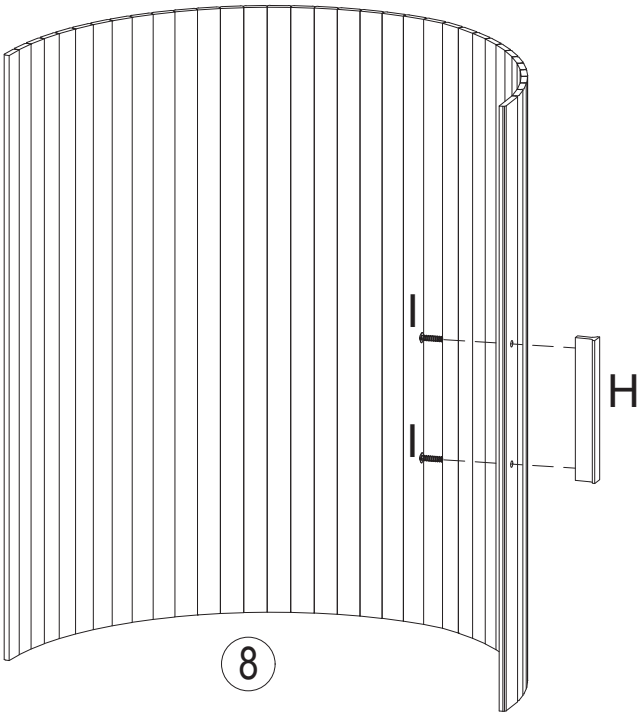



No. H
Quantity: 1 PCS
Handle




No. I
Quantity: 2 PCS
Screw
M4x8mm




STEP 7

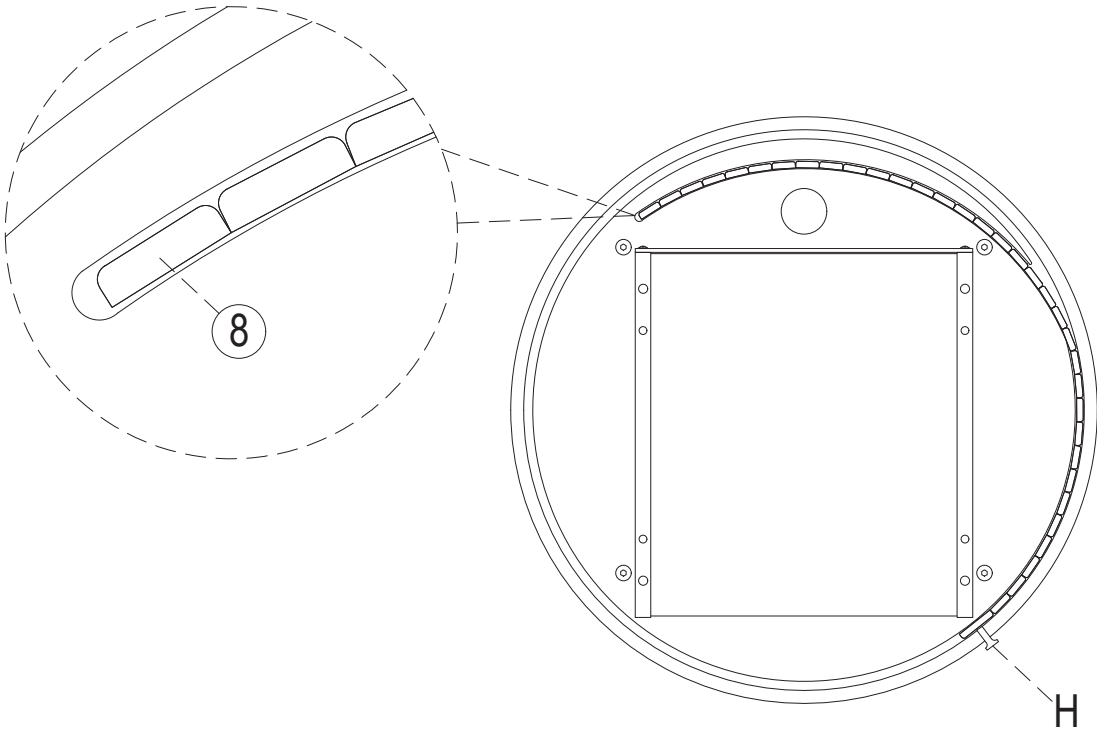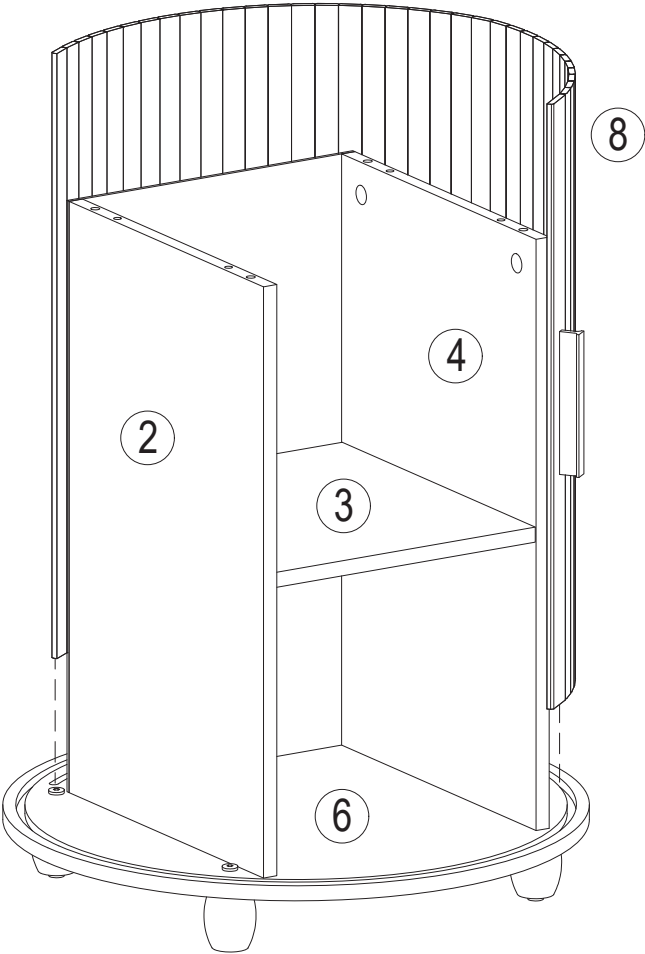


STEP 8

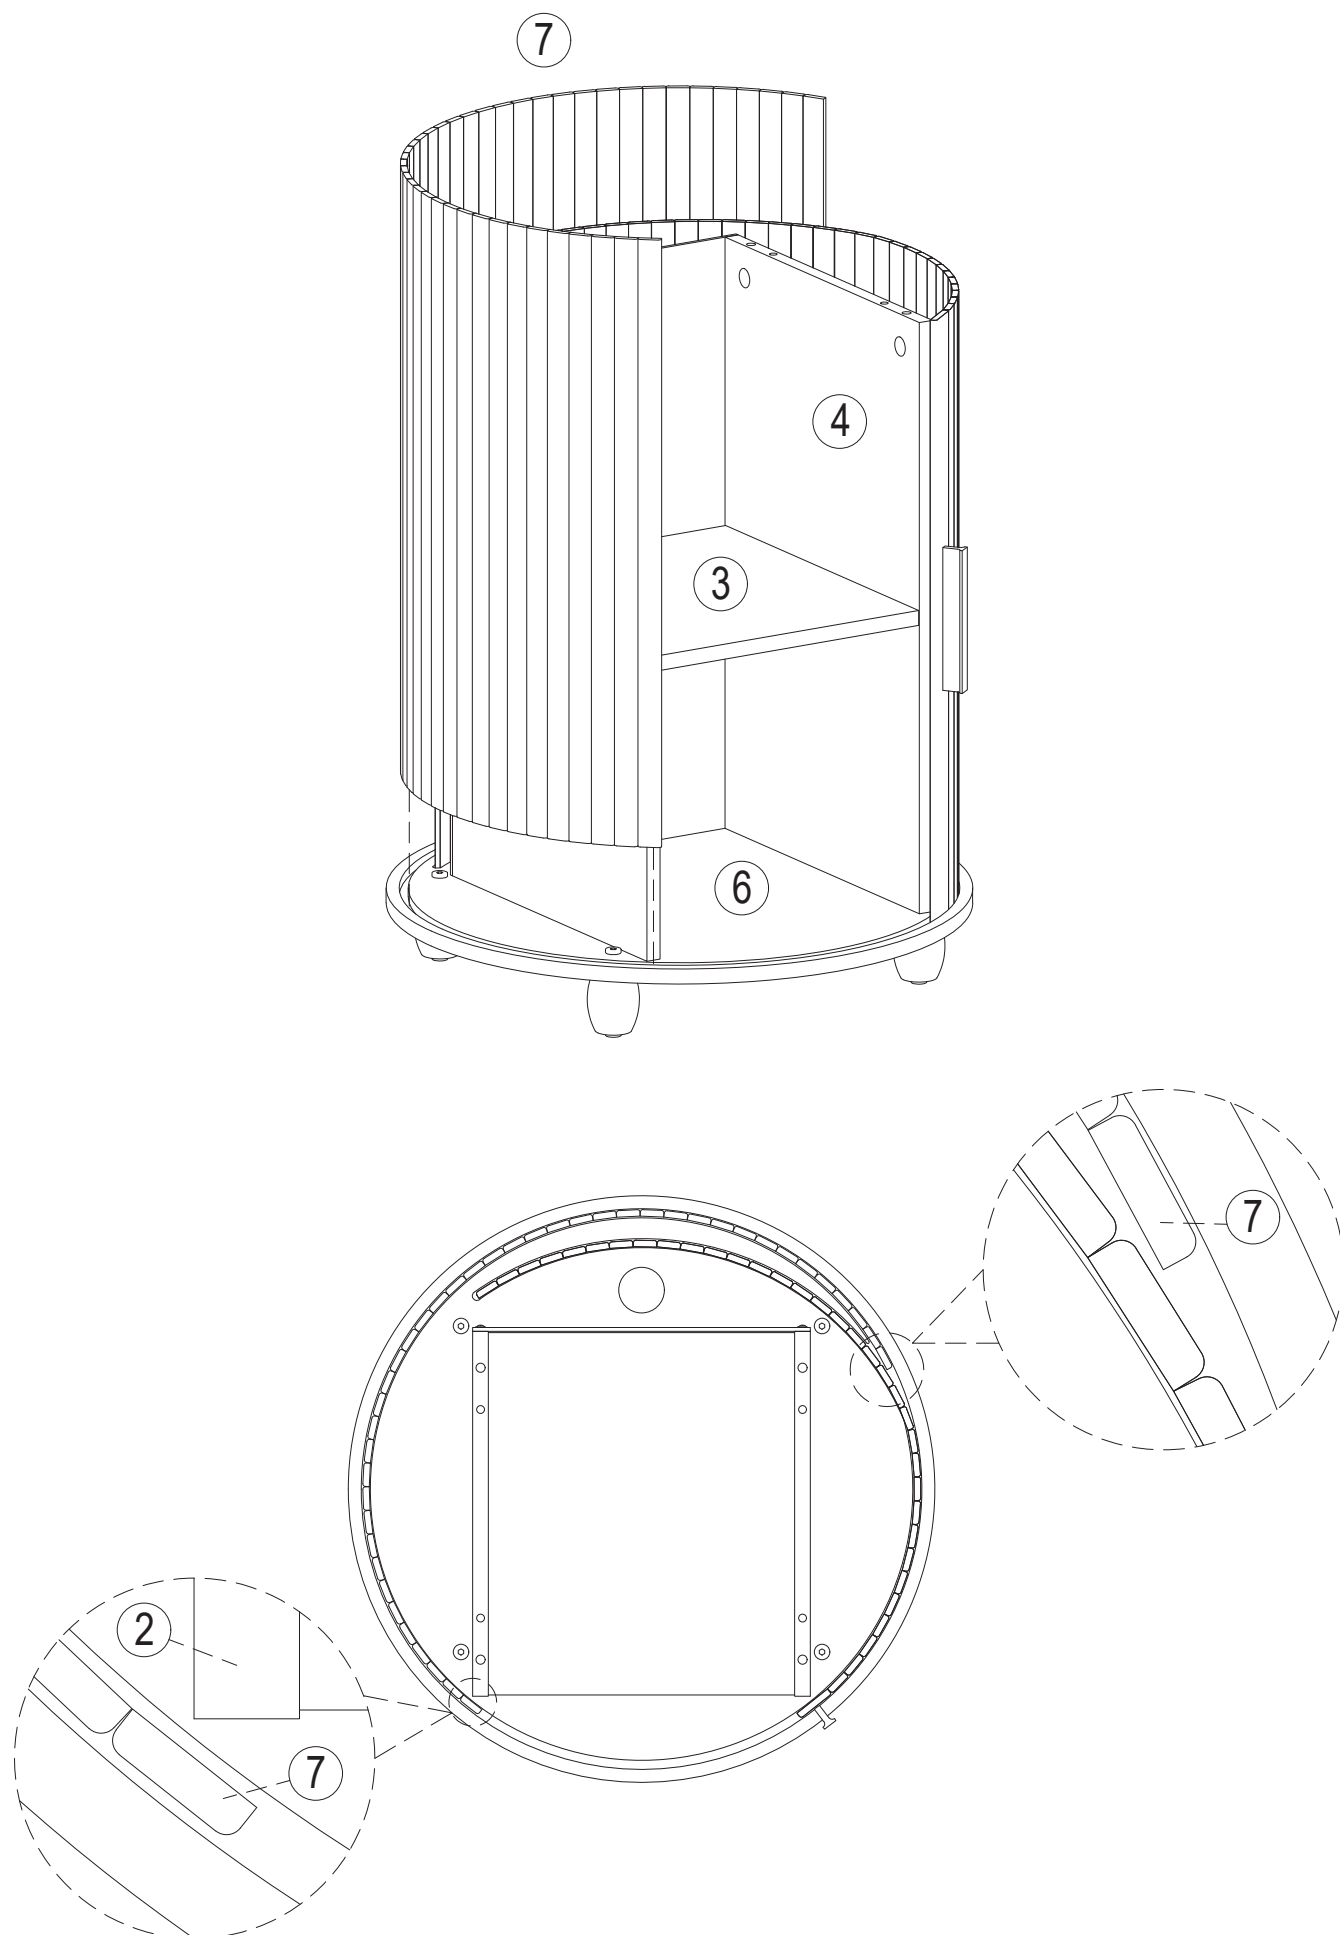


STEP 9

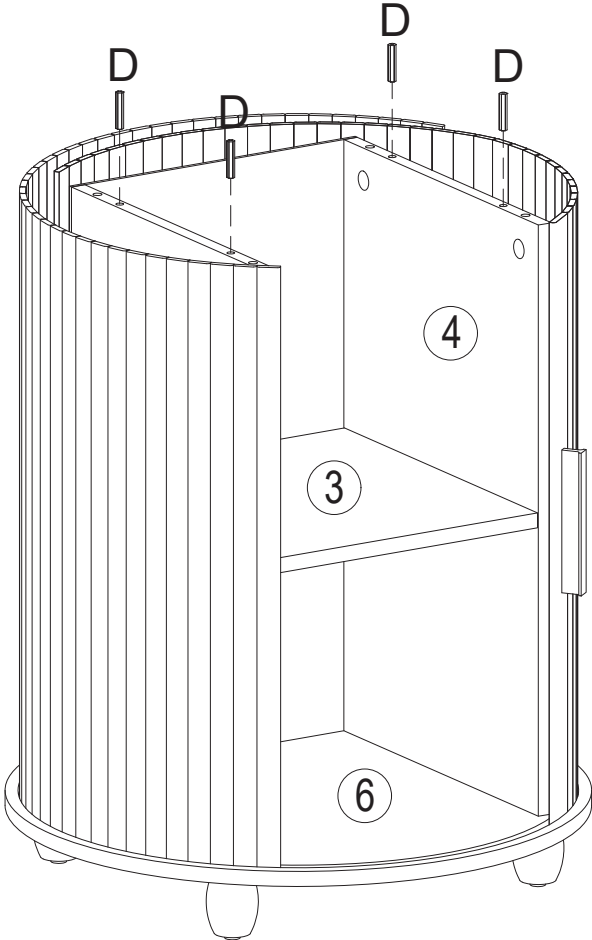

No. D
Quantity: 4 PCS
Dowel
ø6x30mm





STEP 10

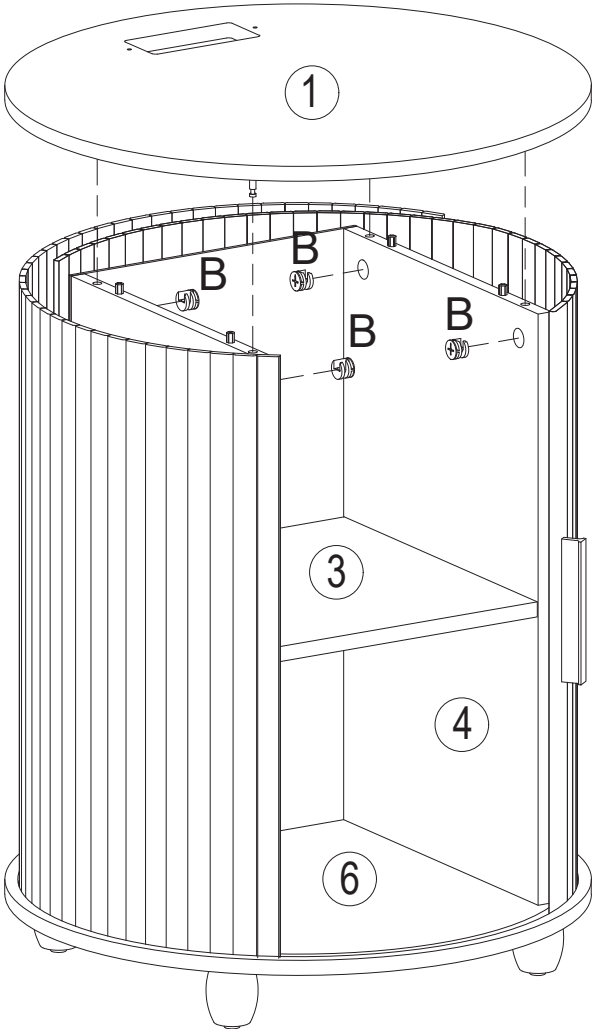


No. B
Quantity: 4 PCS
Cam
ø15x9.5mm




STEP 11

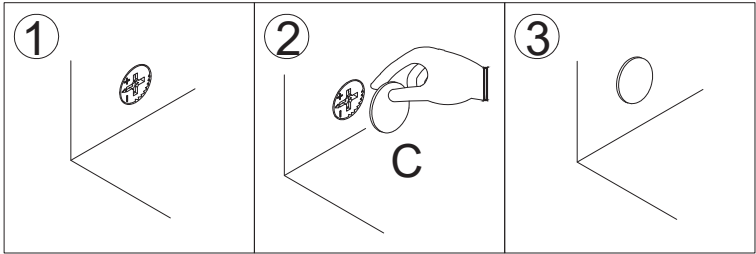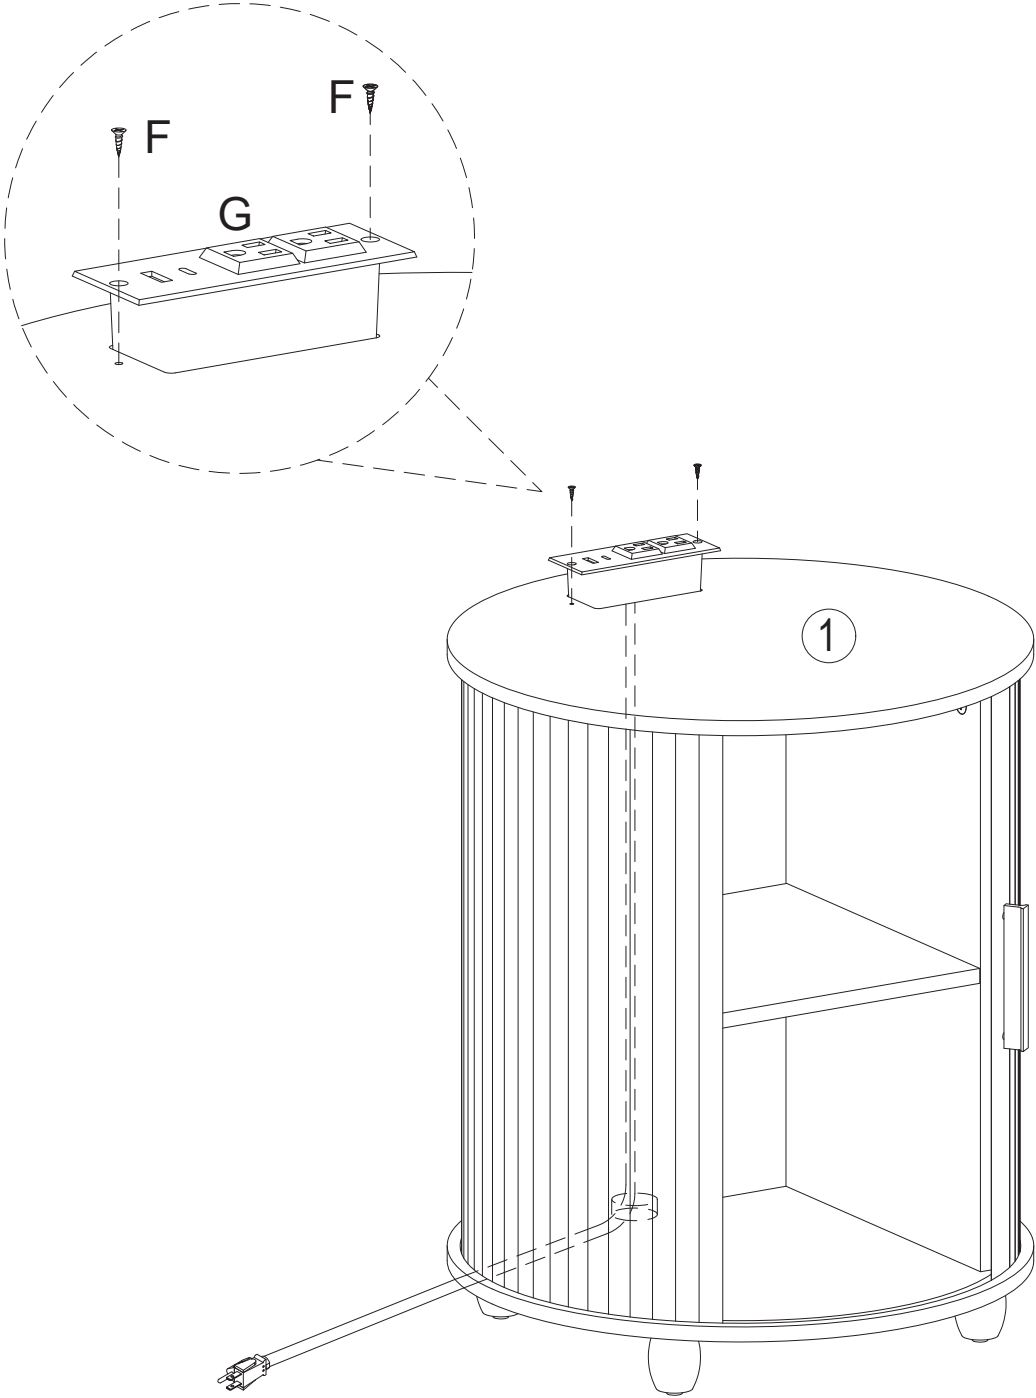

No. G
Quantity: 1 PCS

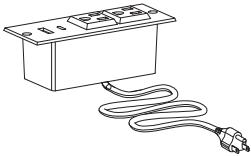

No. F
Quantity: 2 PCS
Screw
ø3.5x12mm



No. C
Quantity: 8 PCS
Sticker
ø20mm



