

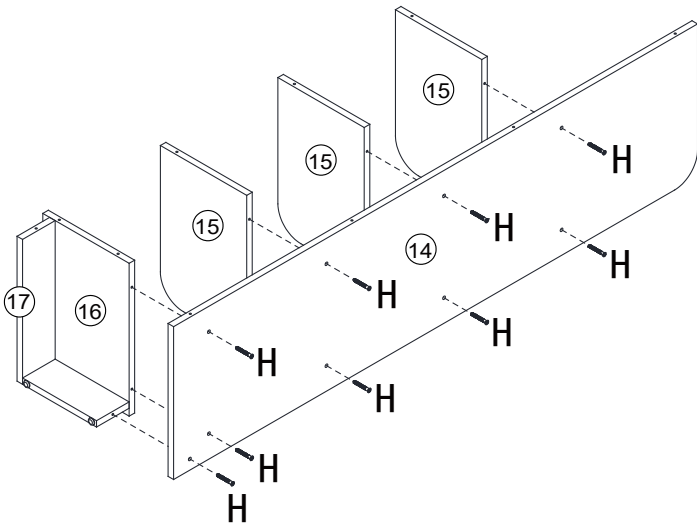



2

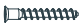


H		9pcs
M5x35		


3

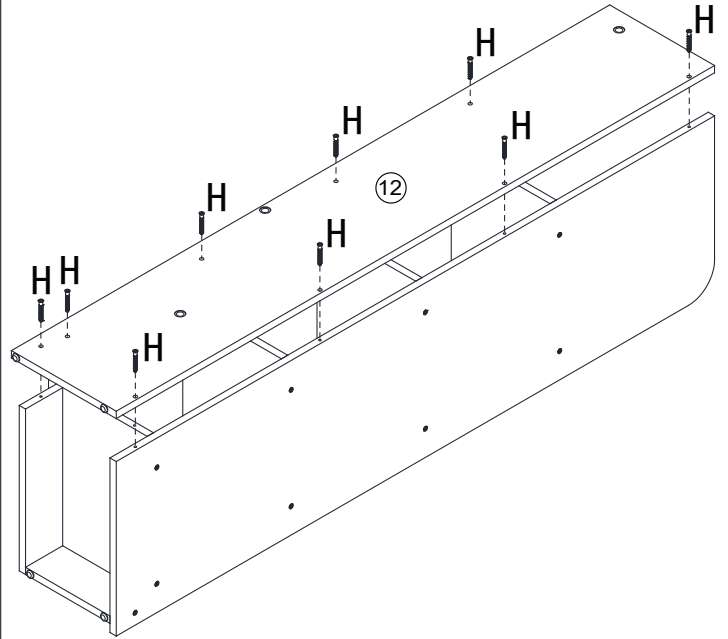


H		9pcs
M5x35		


4

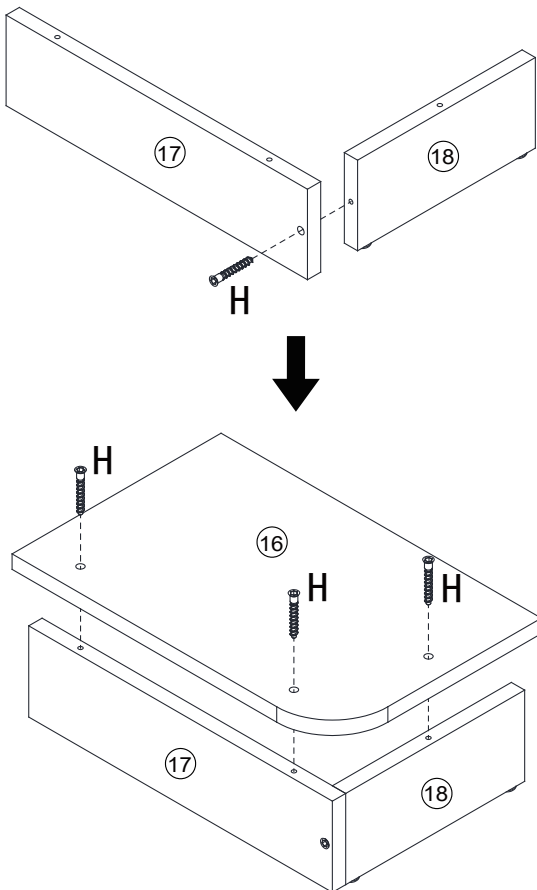

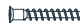
H		4pcs
M5x35		


5

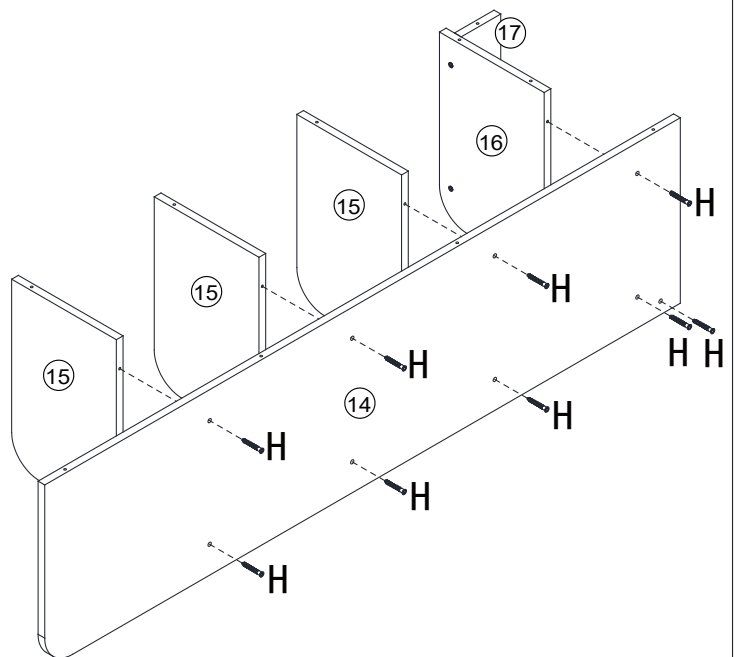


H		9pcs
M5x35		


6

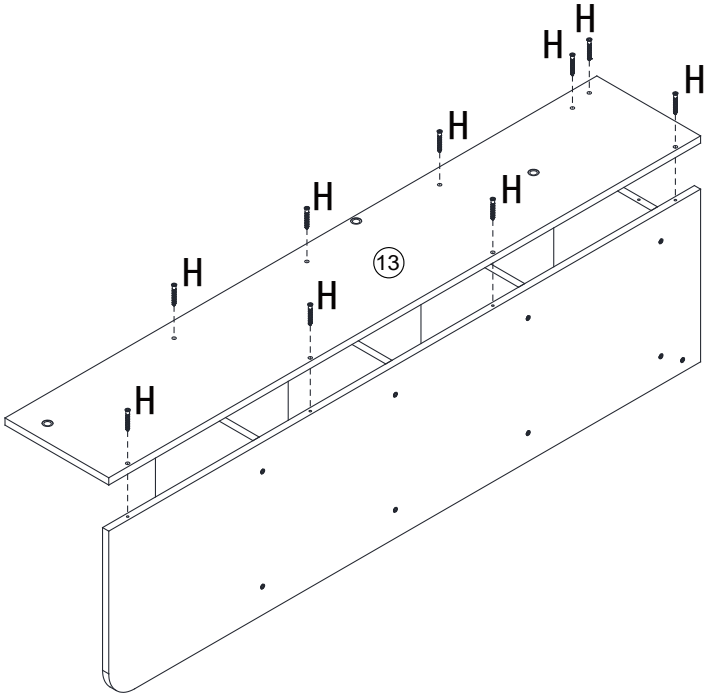


H		9pcs
	M5x35	

7

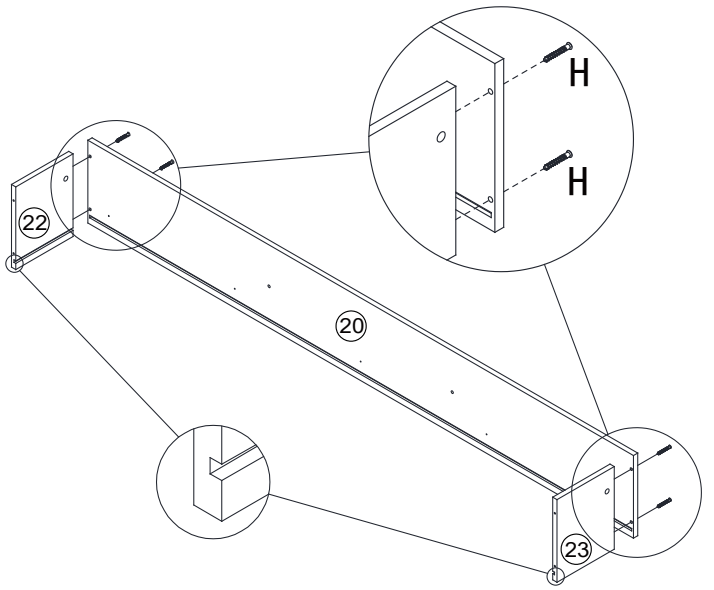

H		4pcs
	M5x35	


8

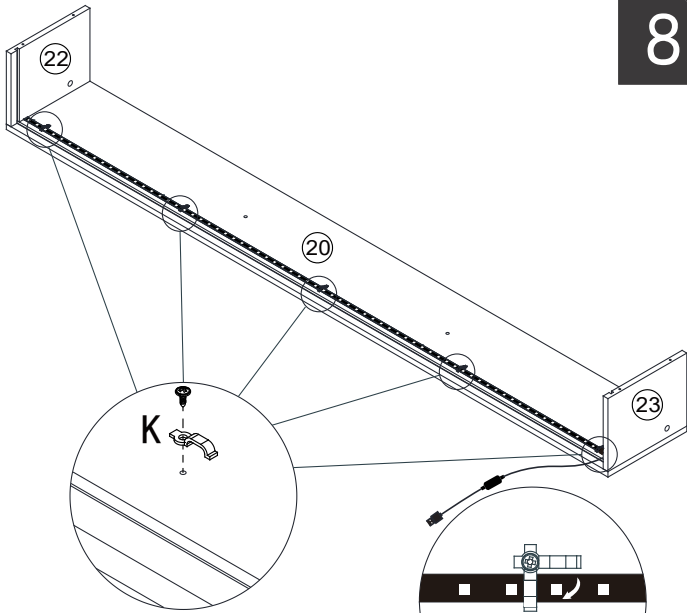


Do not lock the screws.




Lock all screws tightly

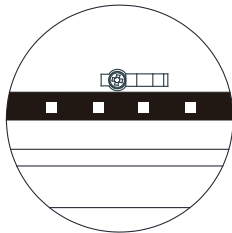


9

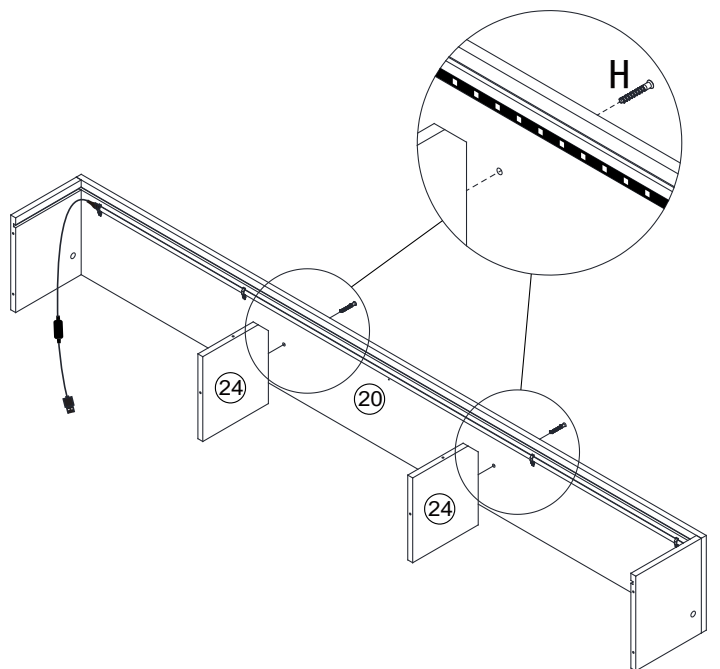


H		2pcs
	M5x35	

10

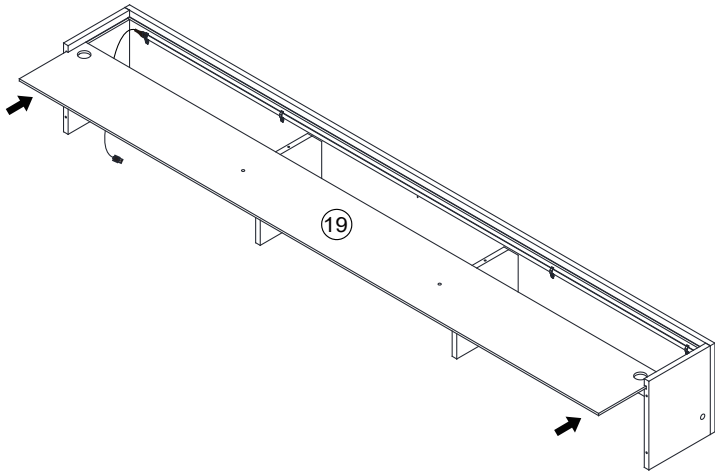



11

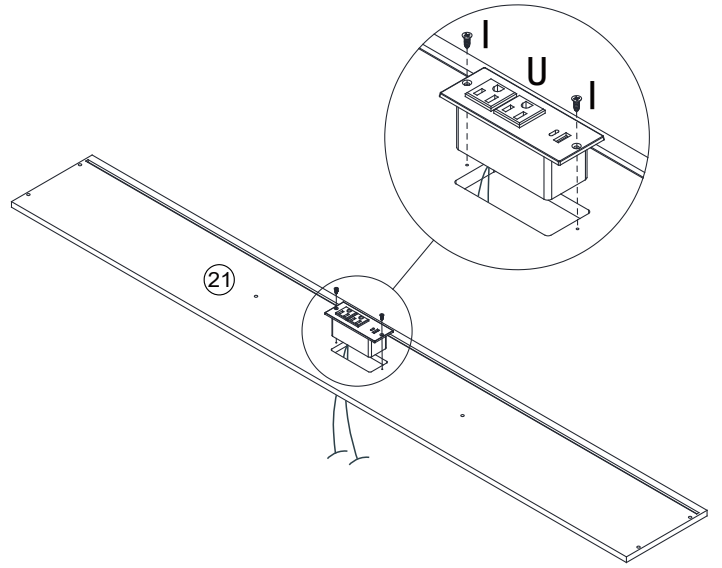


I	 ST4. 2x12	2pcs
---	---	------

12

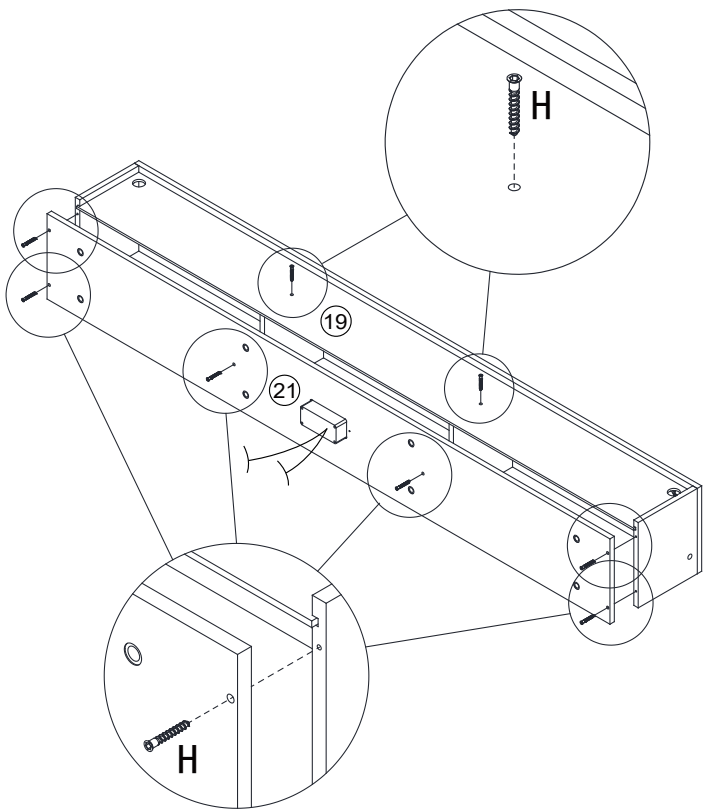


H	 M5x35	8pcs
---	---	------

13

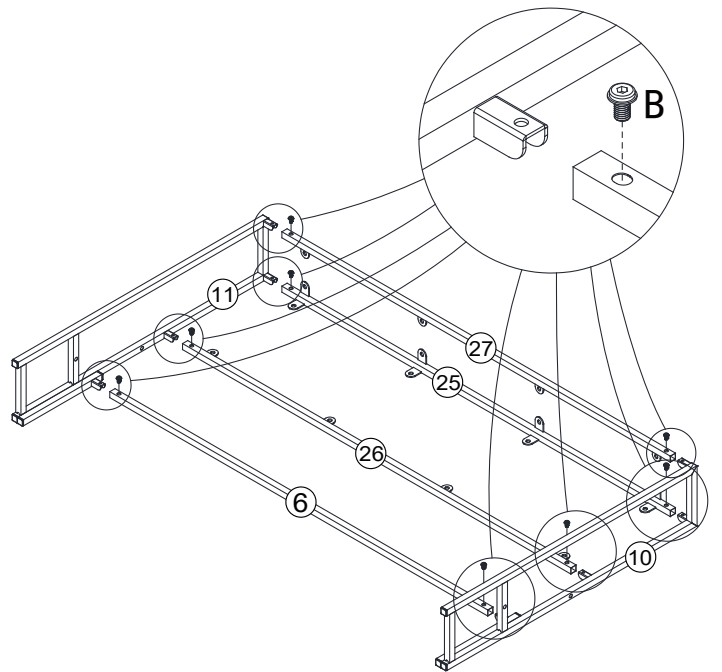


B	 M8x14	8pcs white zinc
---	---	-----------------

14

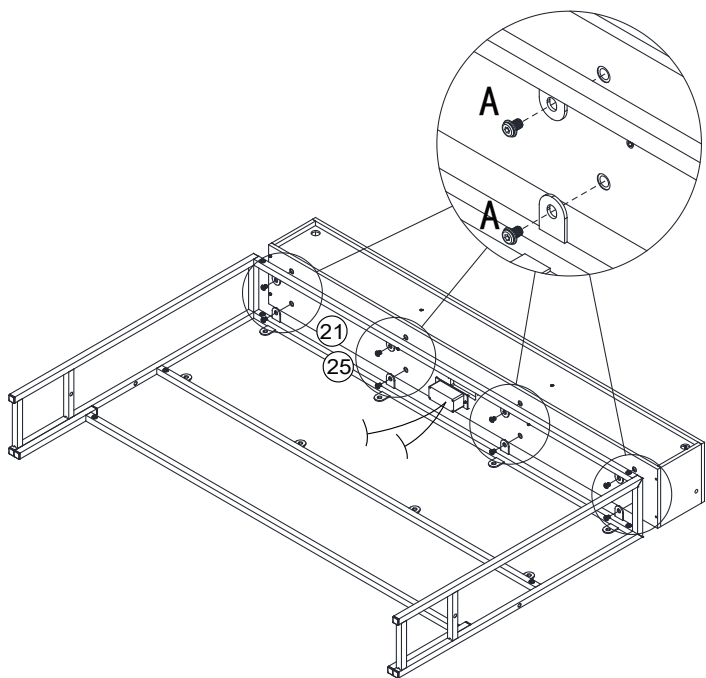


A		8pcs
---	---	------

15

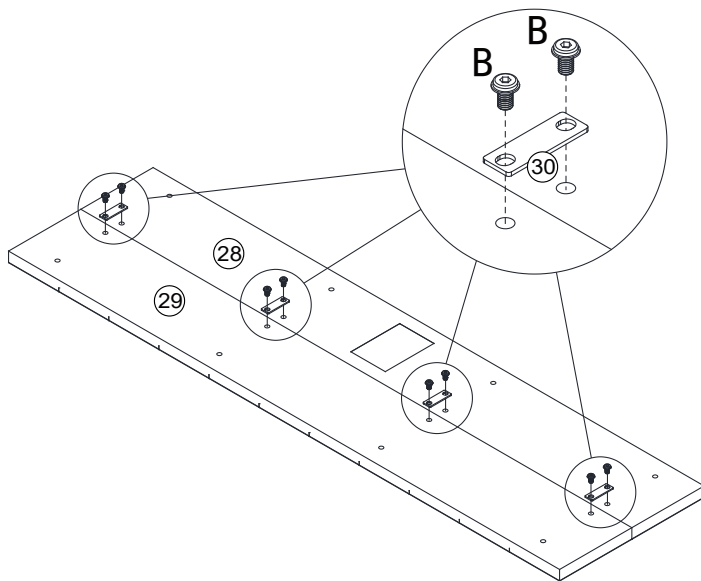


B		8pcs white zinc
---	--	-----------------

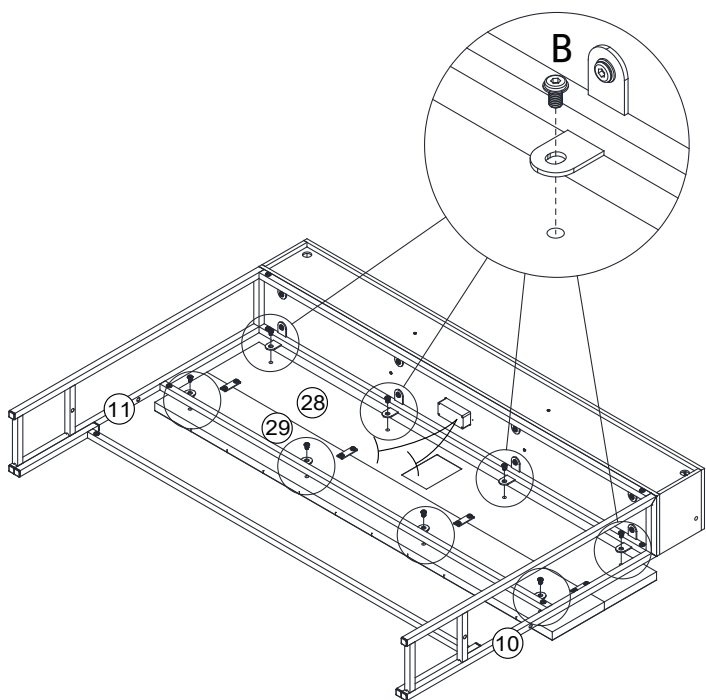

16



B		8pcs white zinc
---	---	-----------------

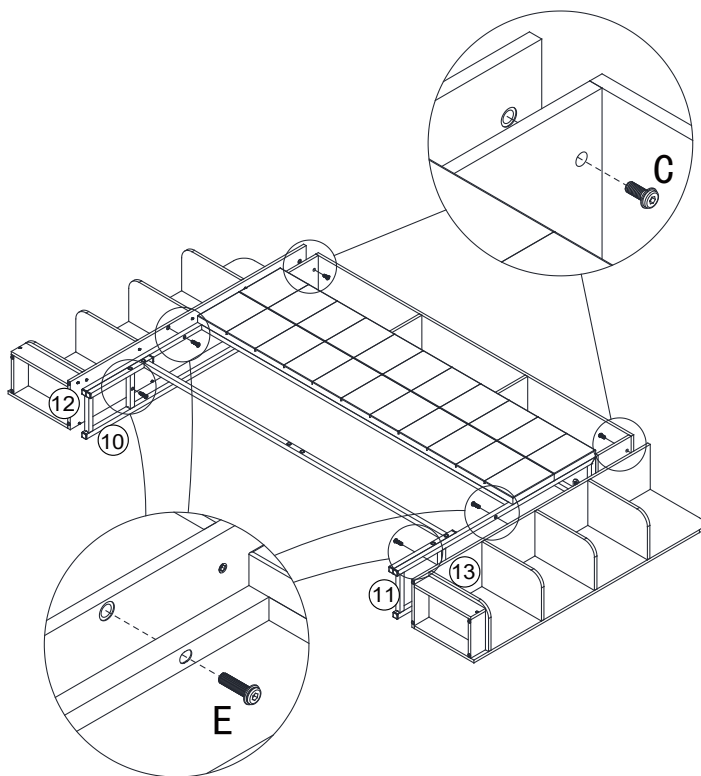
17



C		2pcs
E		4pcs

18


x2

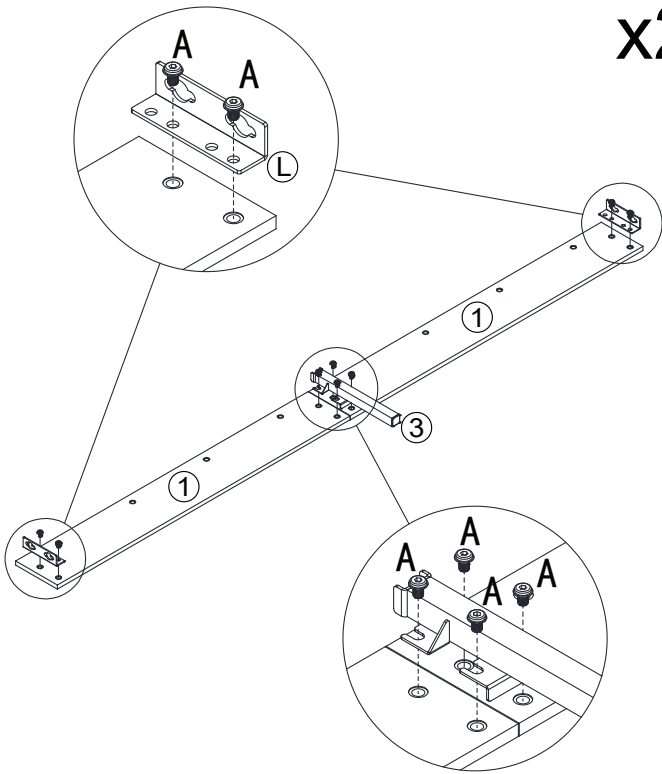

A		16pcs
M8x12		


19

x2

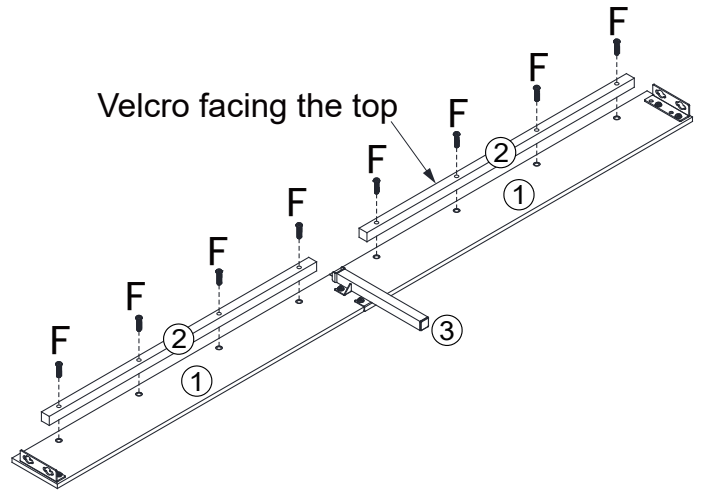

F		16pcs	white zinc
M8x33			


20

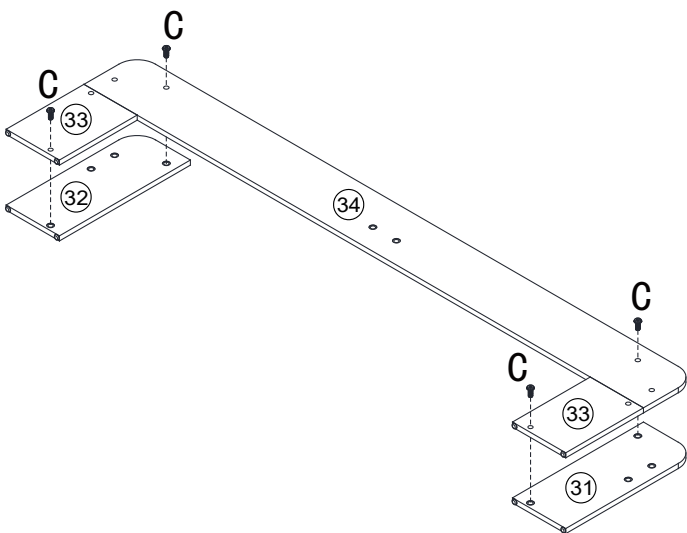

C		4pcs
M8x20		


Tighten screws D

21

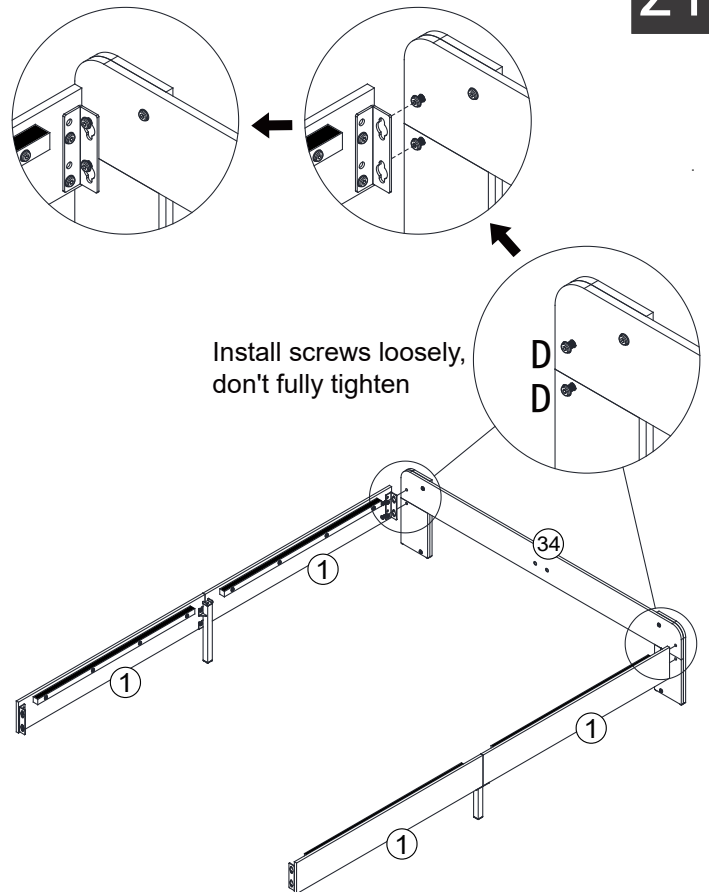


D		4pcs	white zinc
M8x25			


22

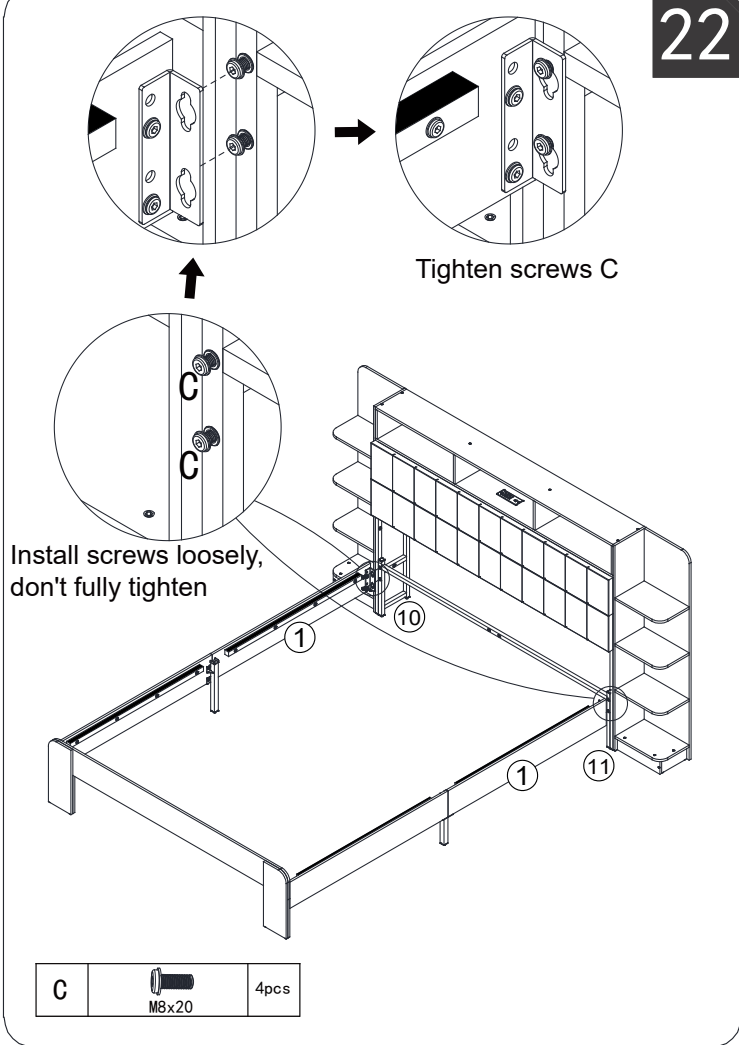


23


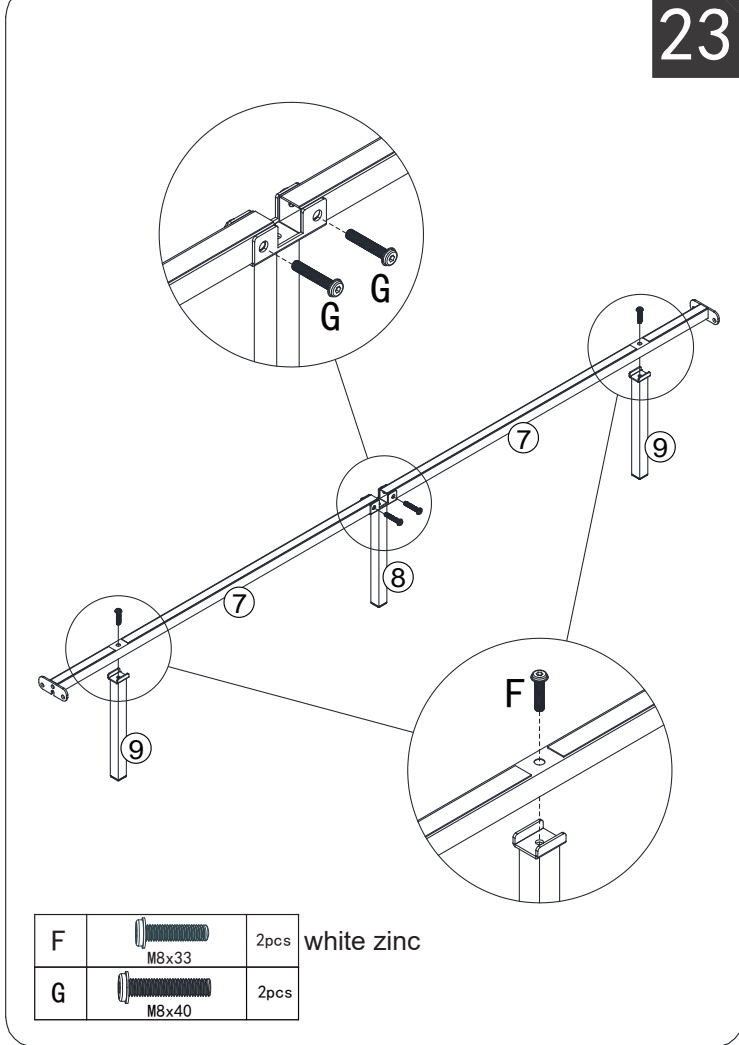


24

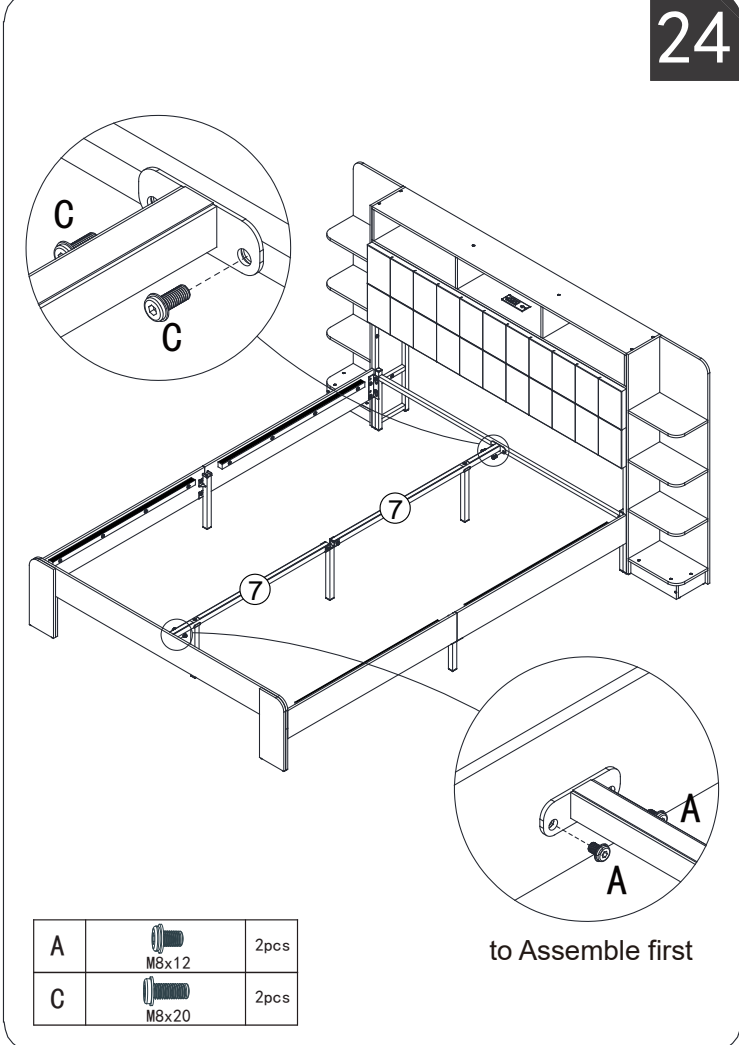

25

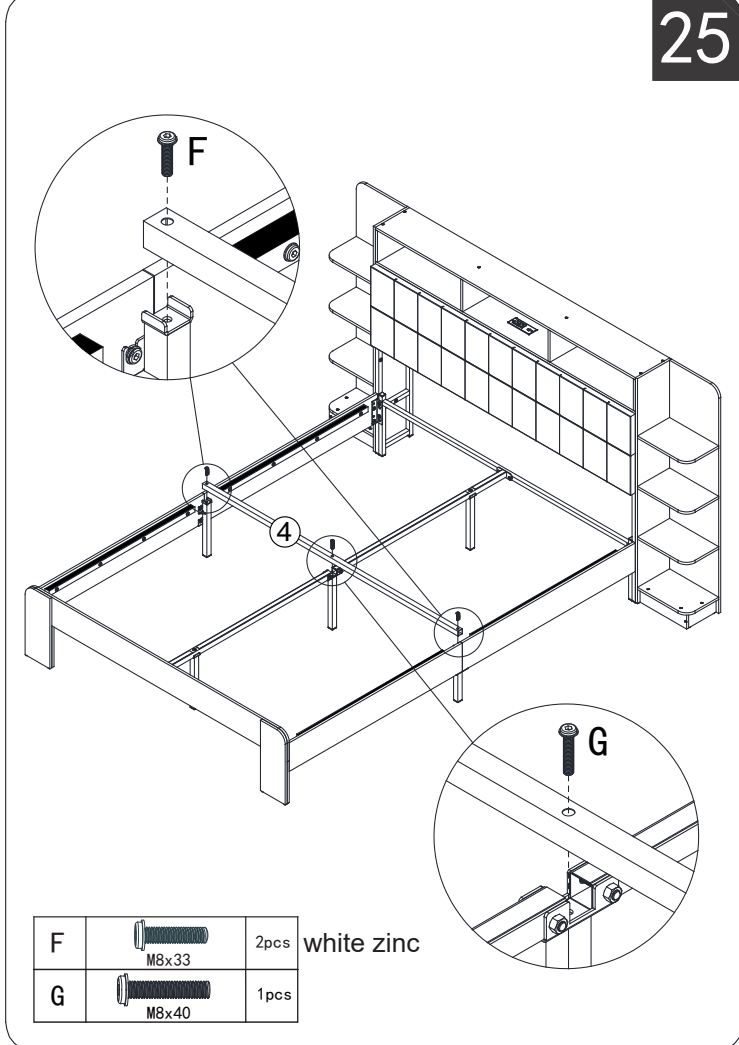

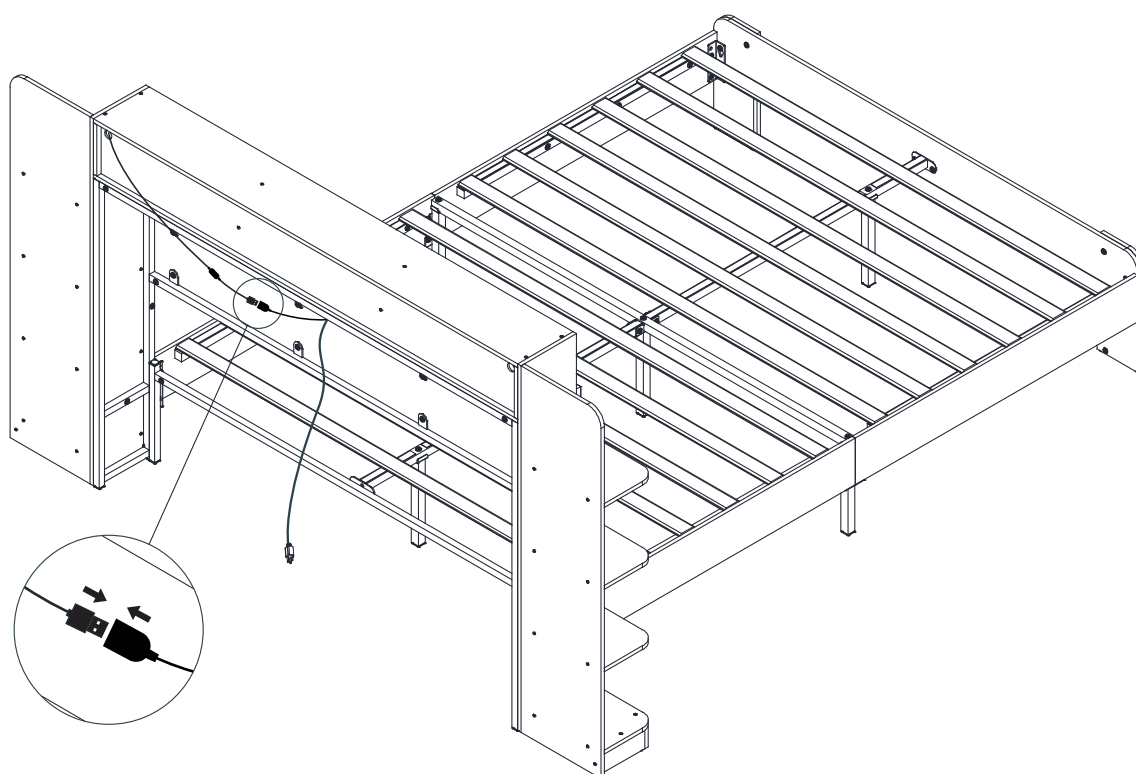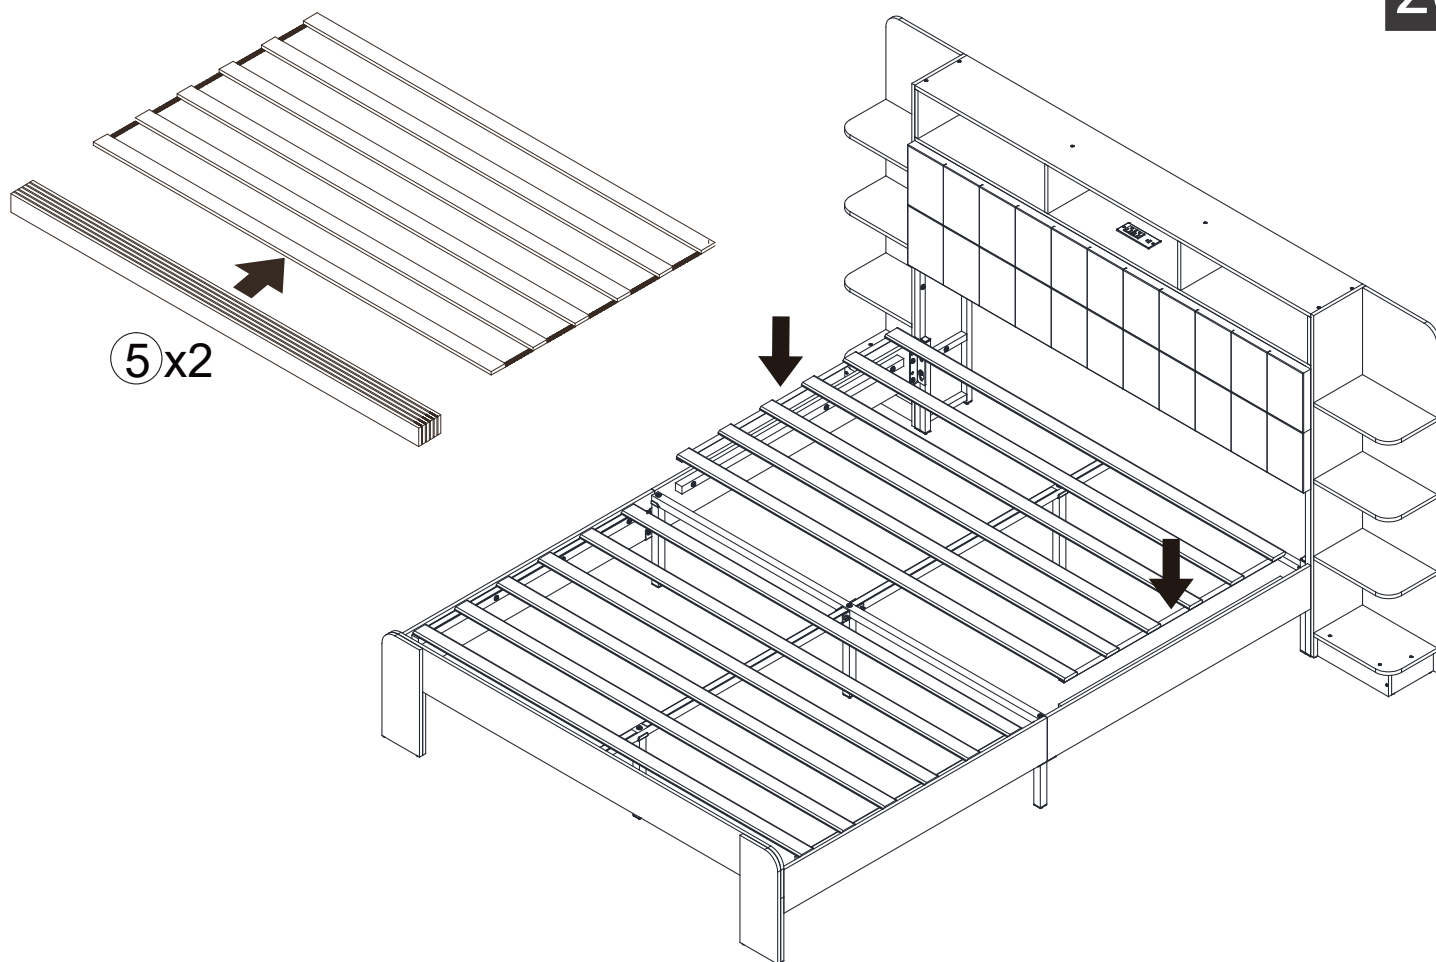

Finish

