

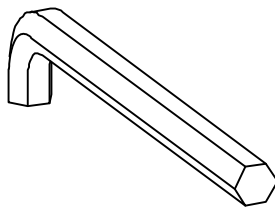
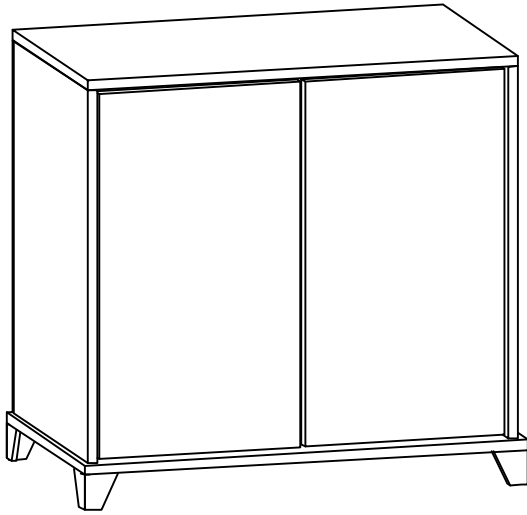
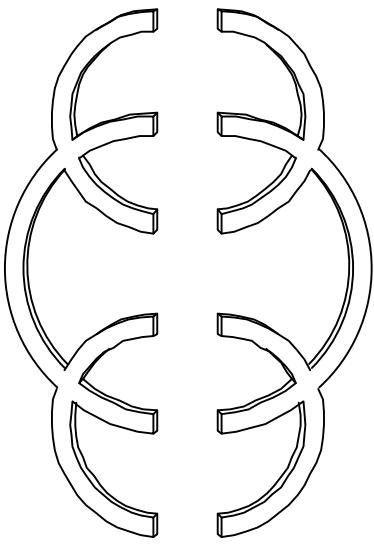
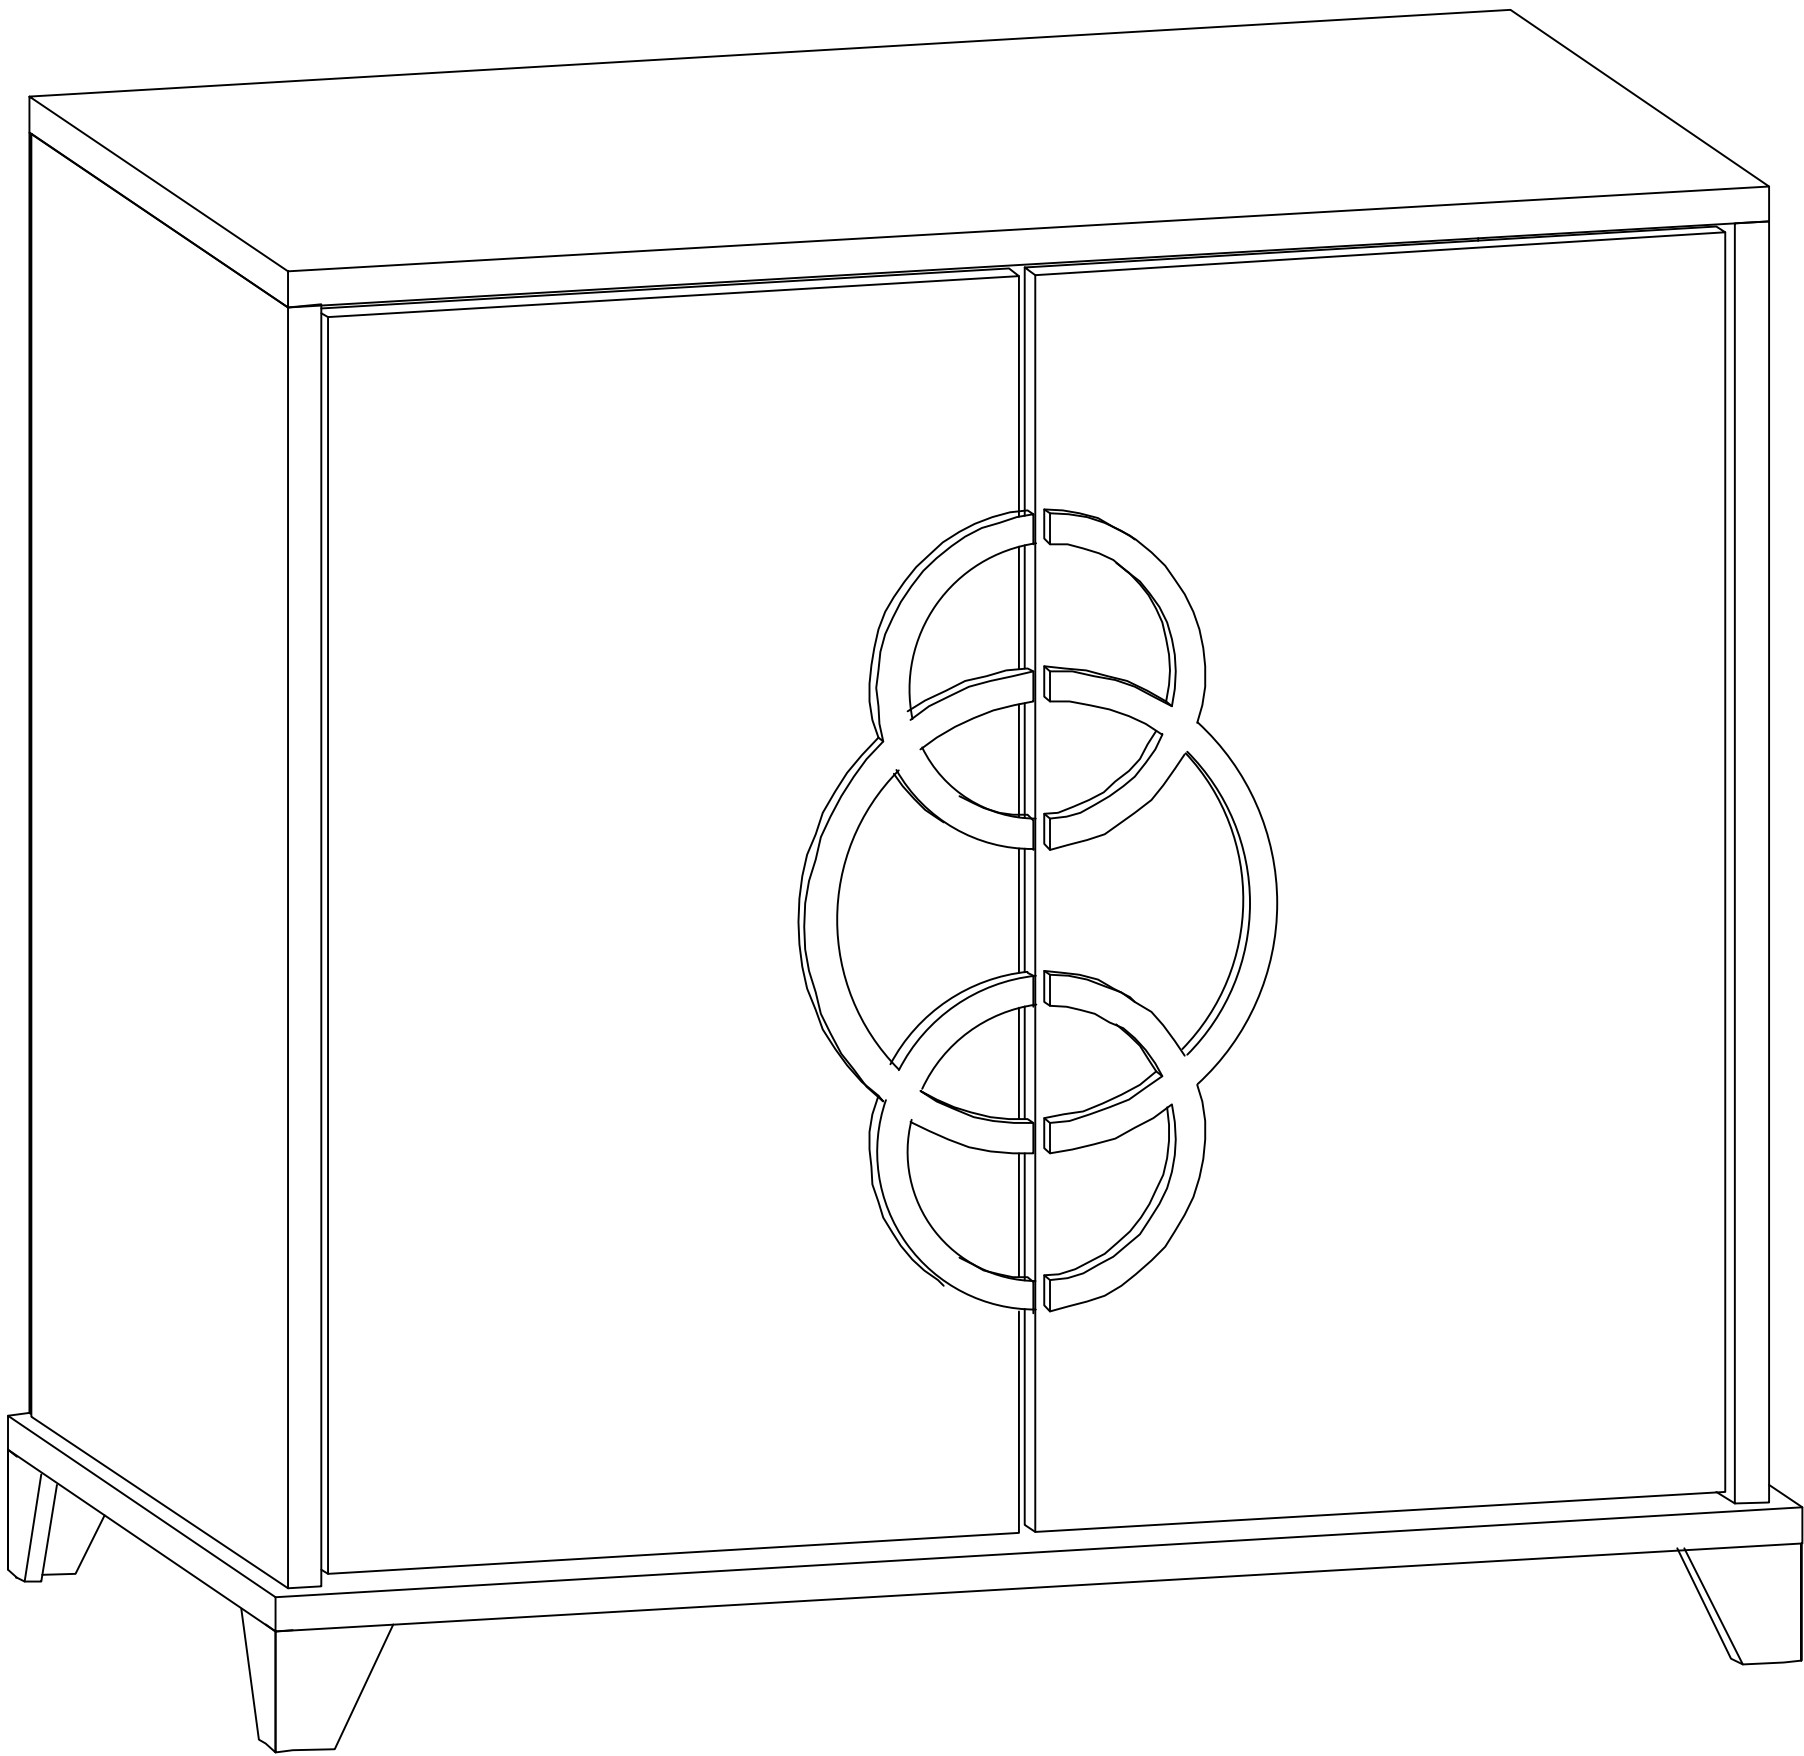


ASSEMBLY INSTRUCTIONS






ITEM # CVFNR 661



PART#	A	B	C	D	Door Handle	
Image						
Quantity	8	1	1		2	

STEP 1

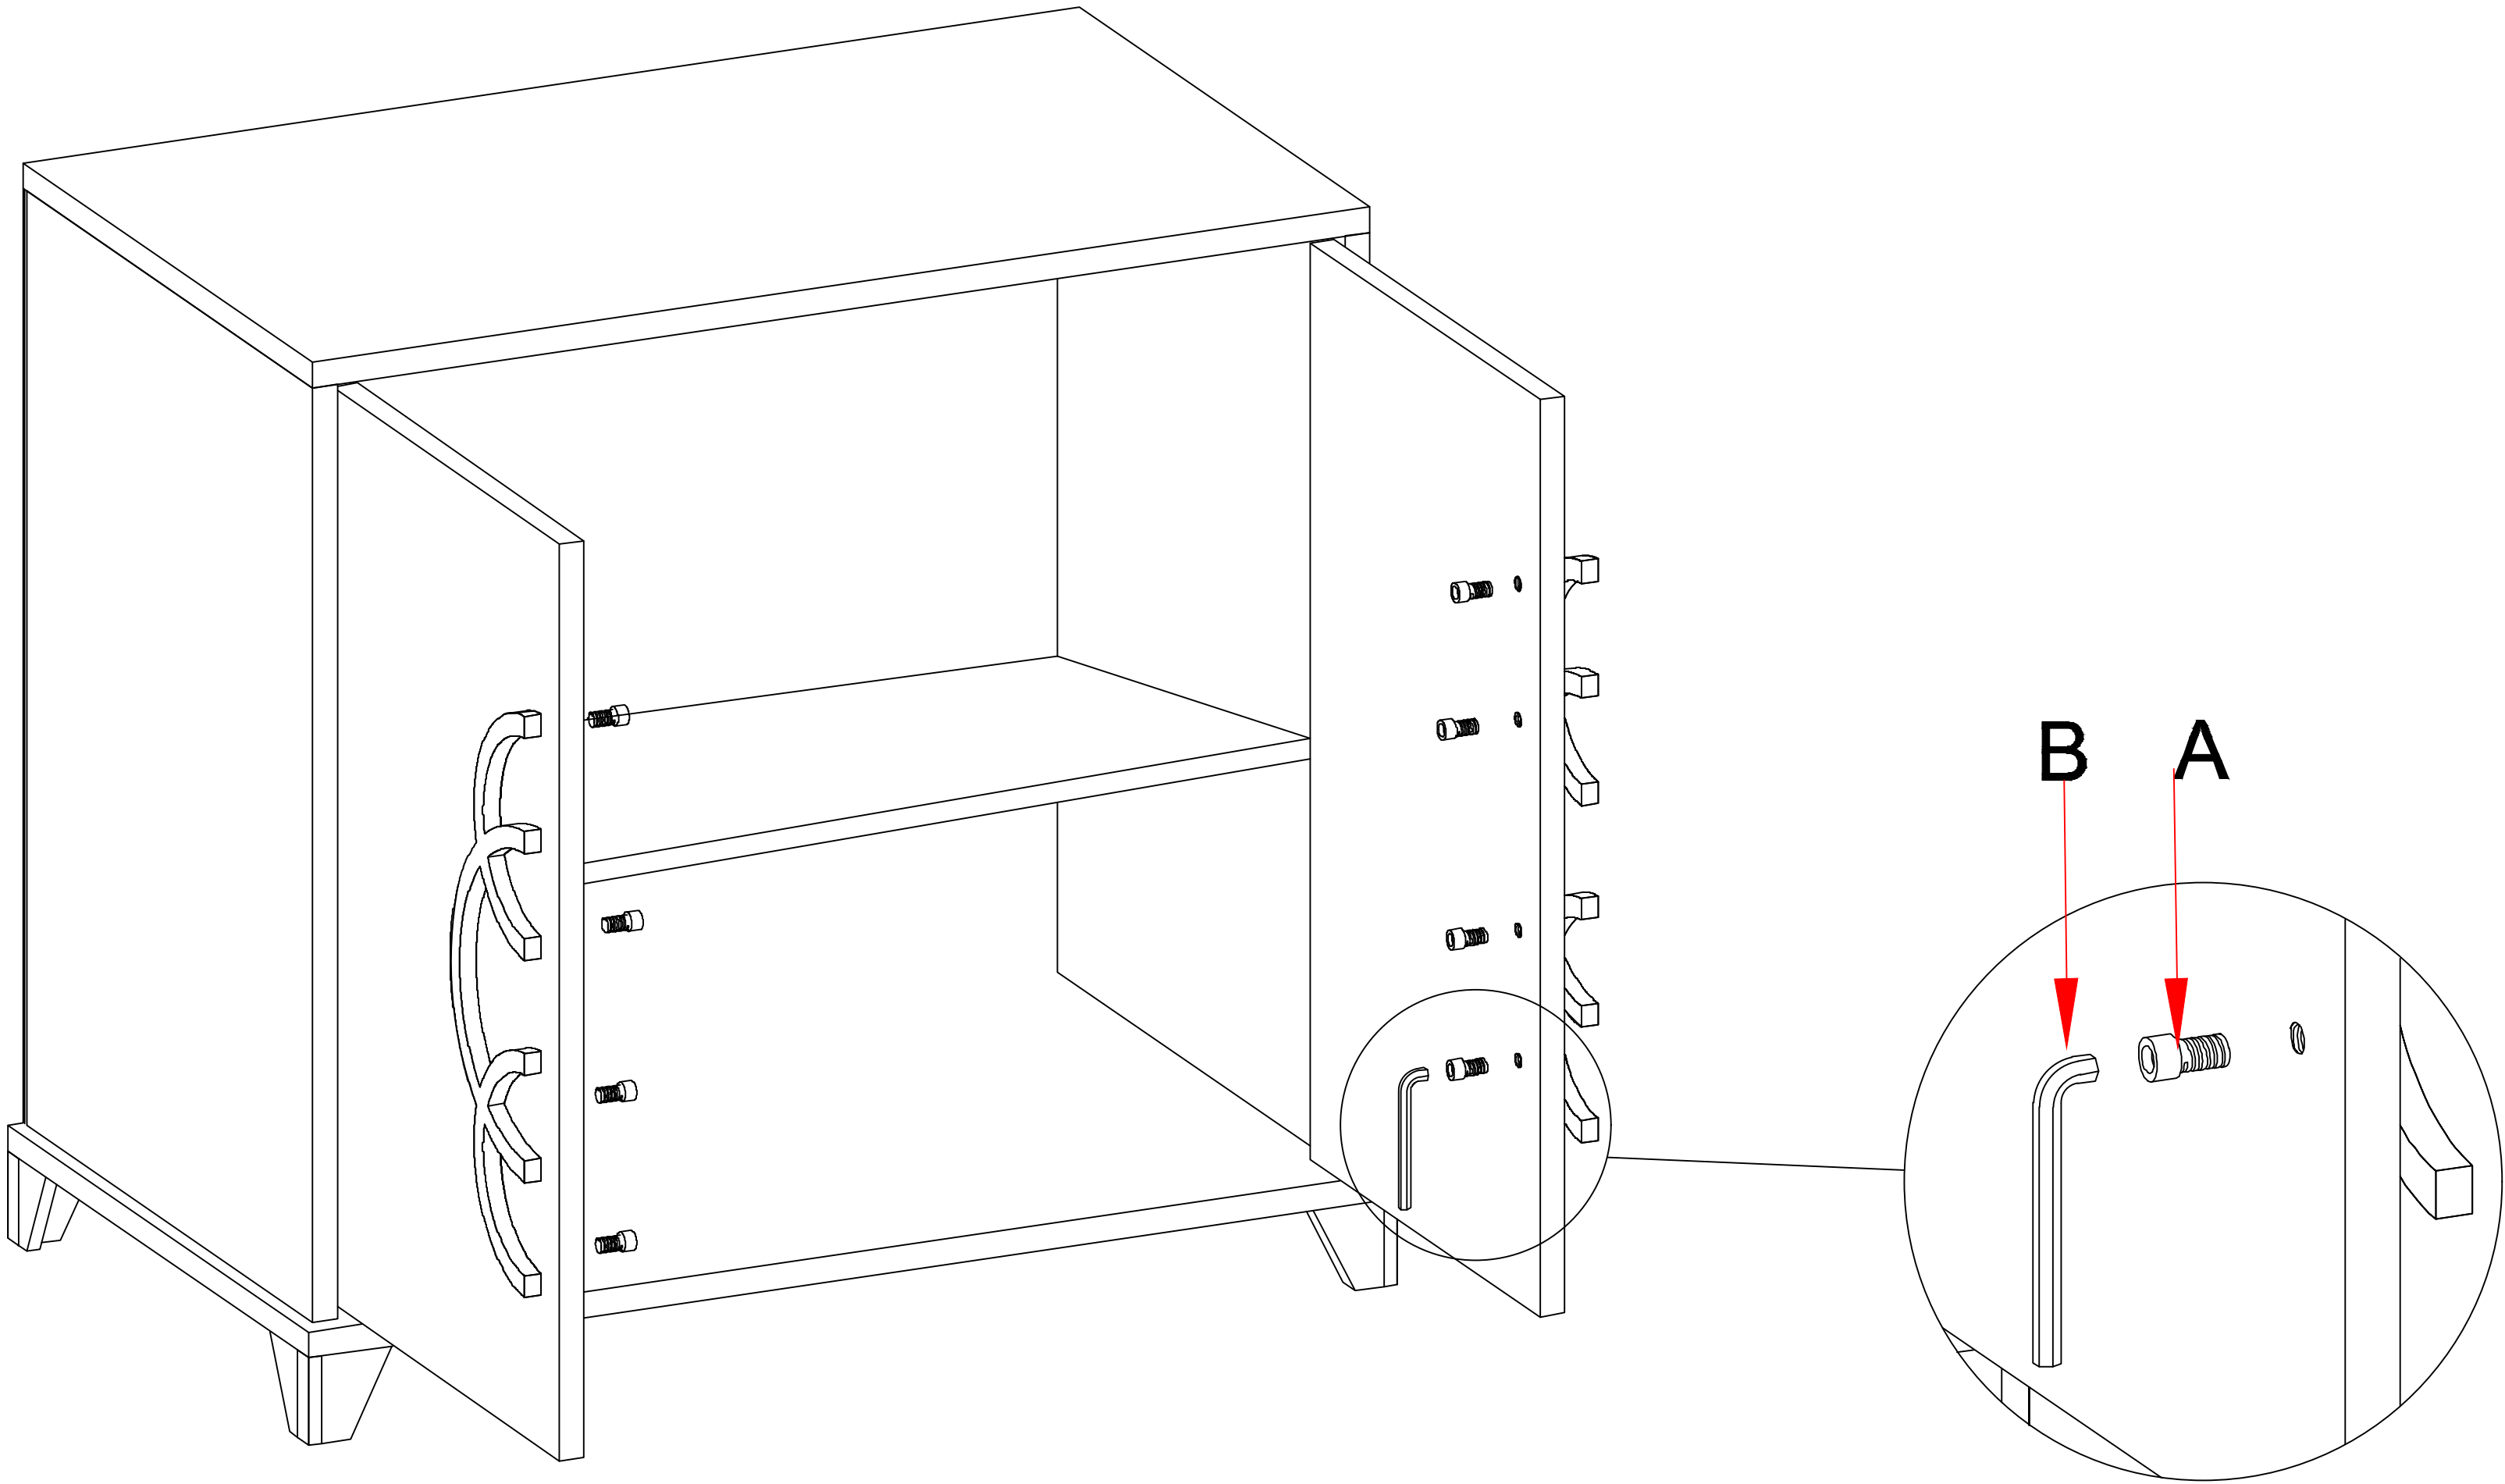

ASSEMBLY INSTRUCTIONS

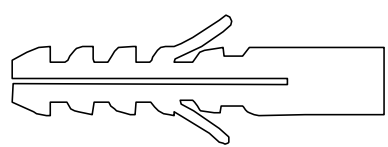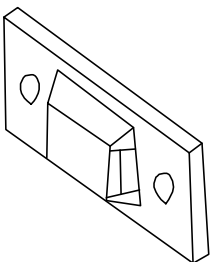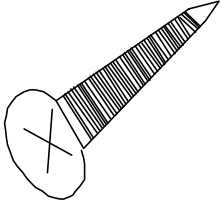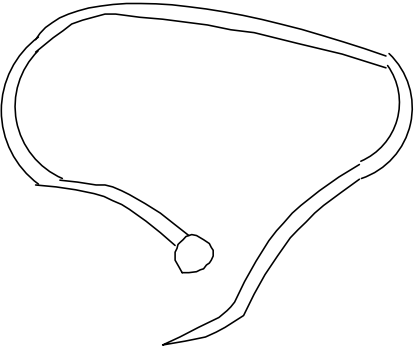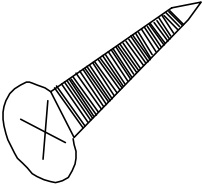A X 4	B X 4	C X 4 wall for scrow	D X 2	E X 4 cabinet for scrow
				

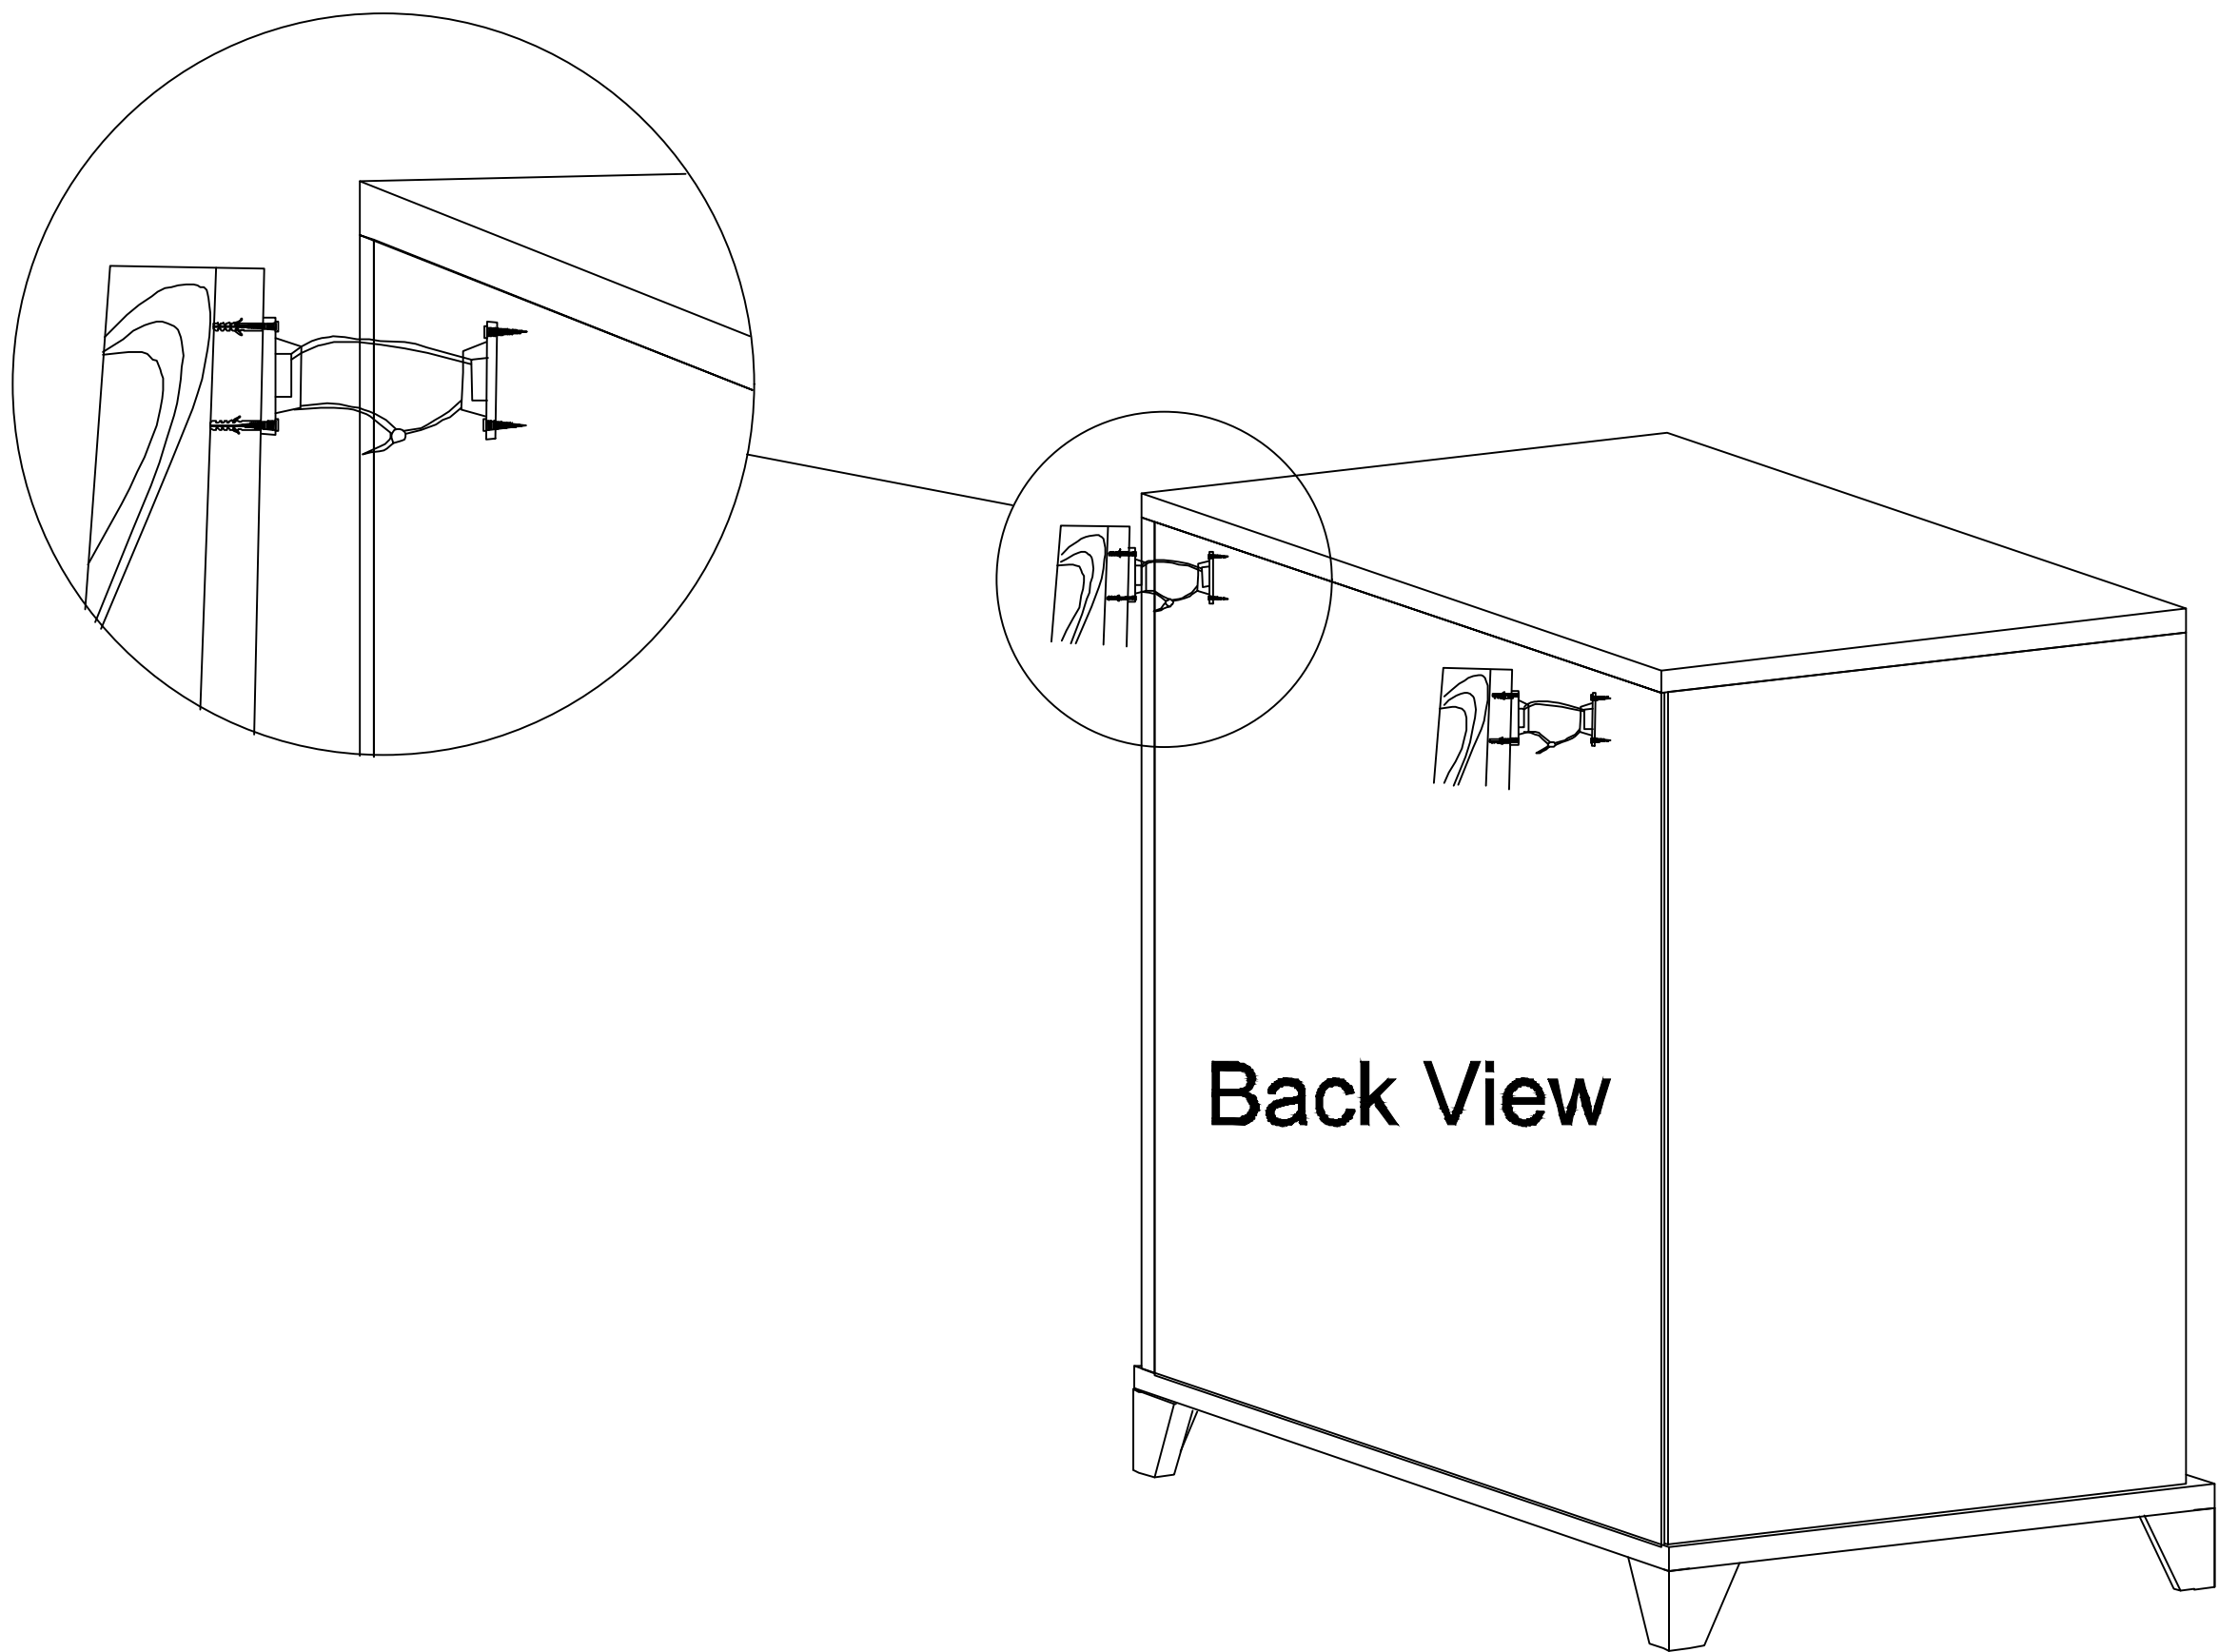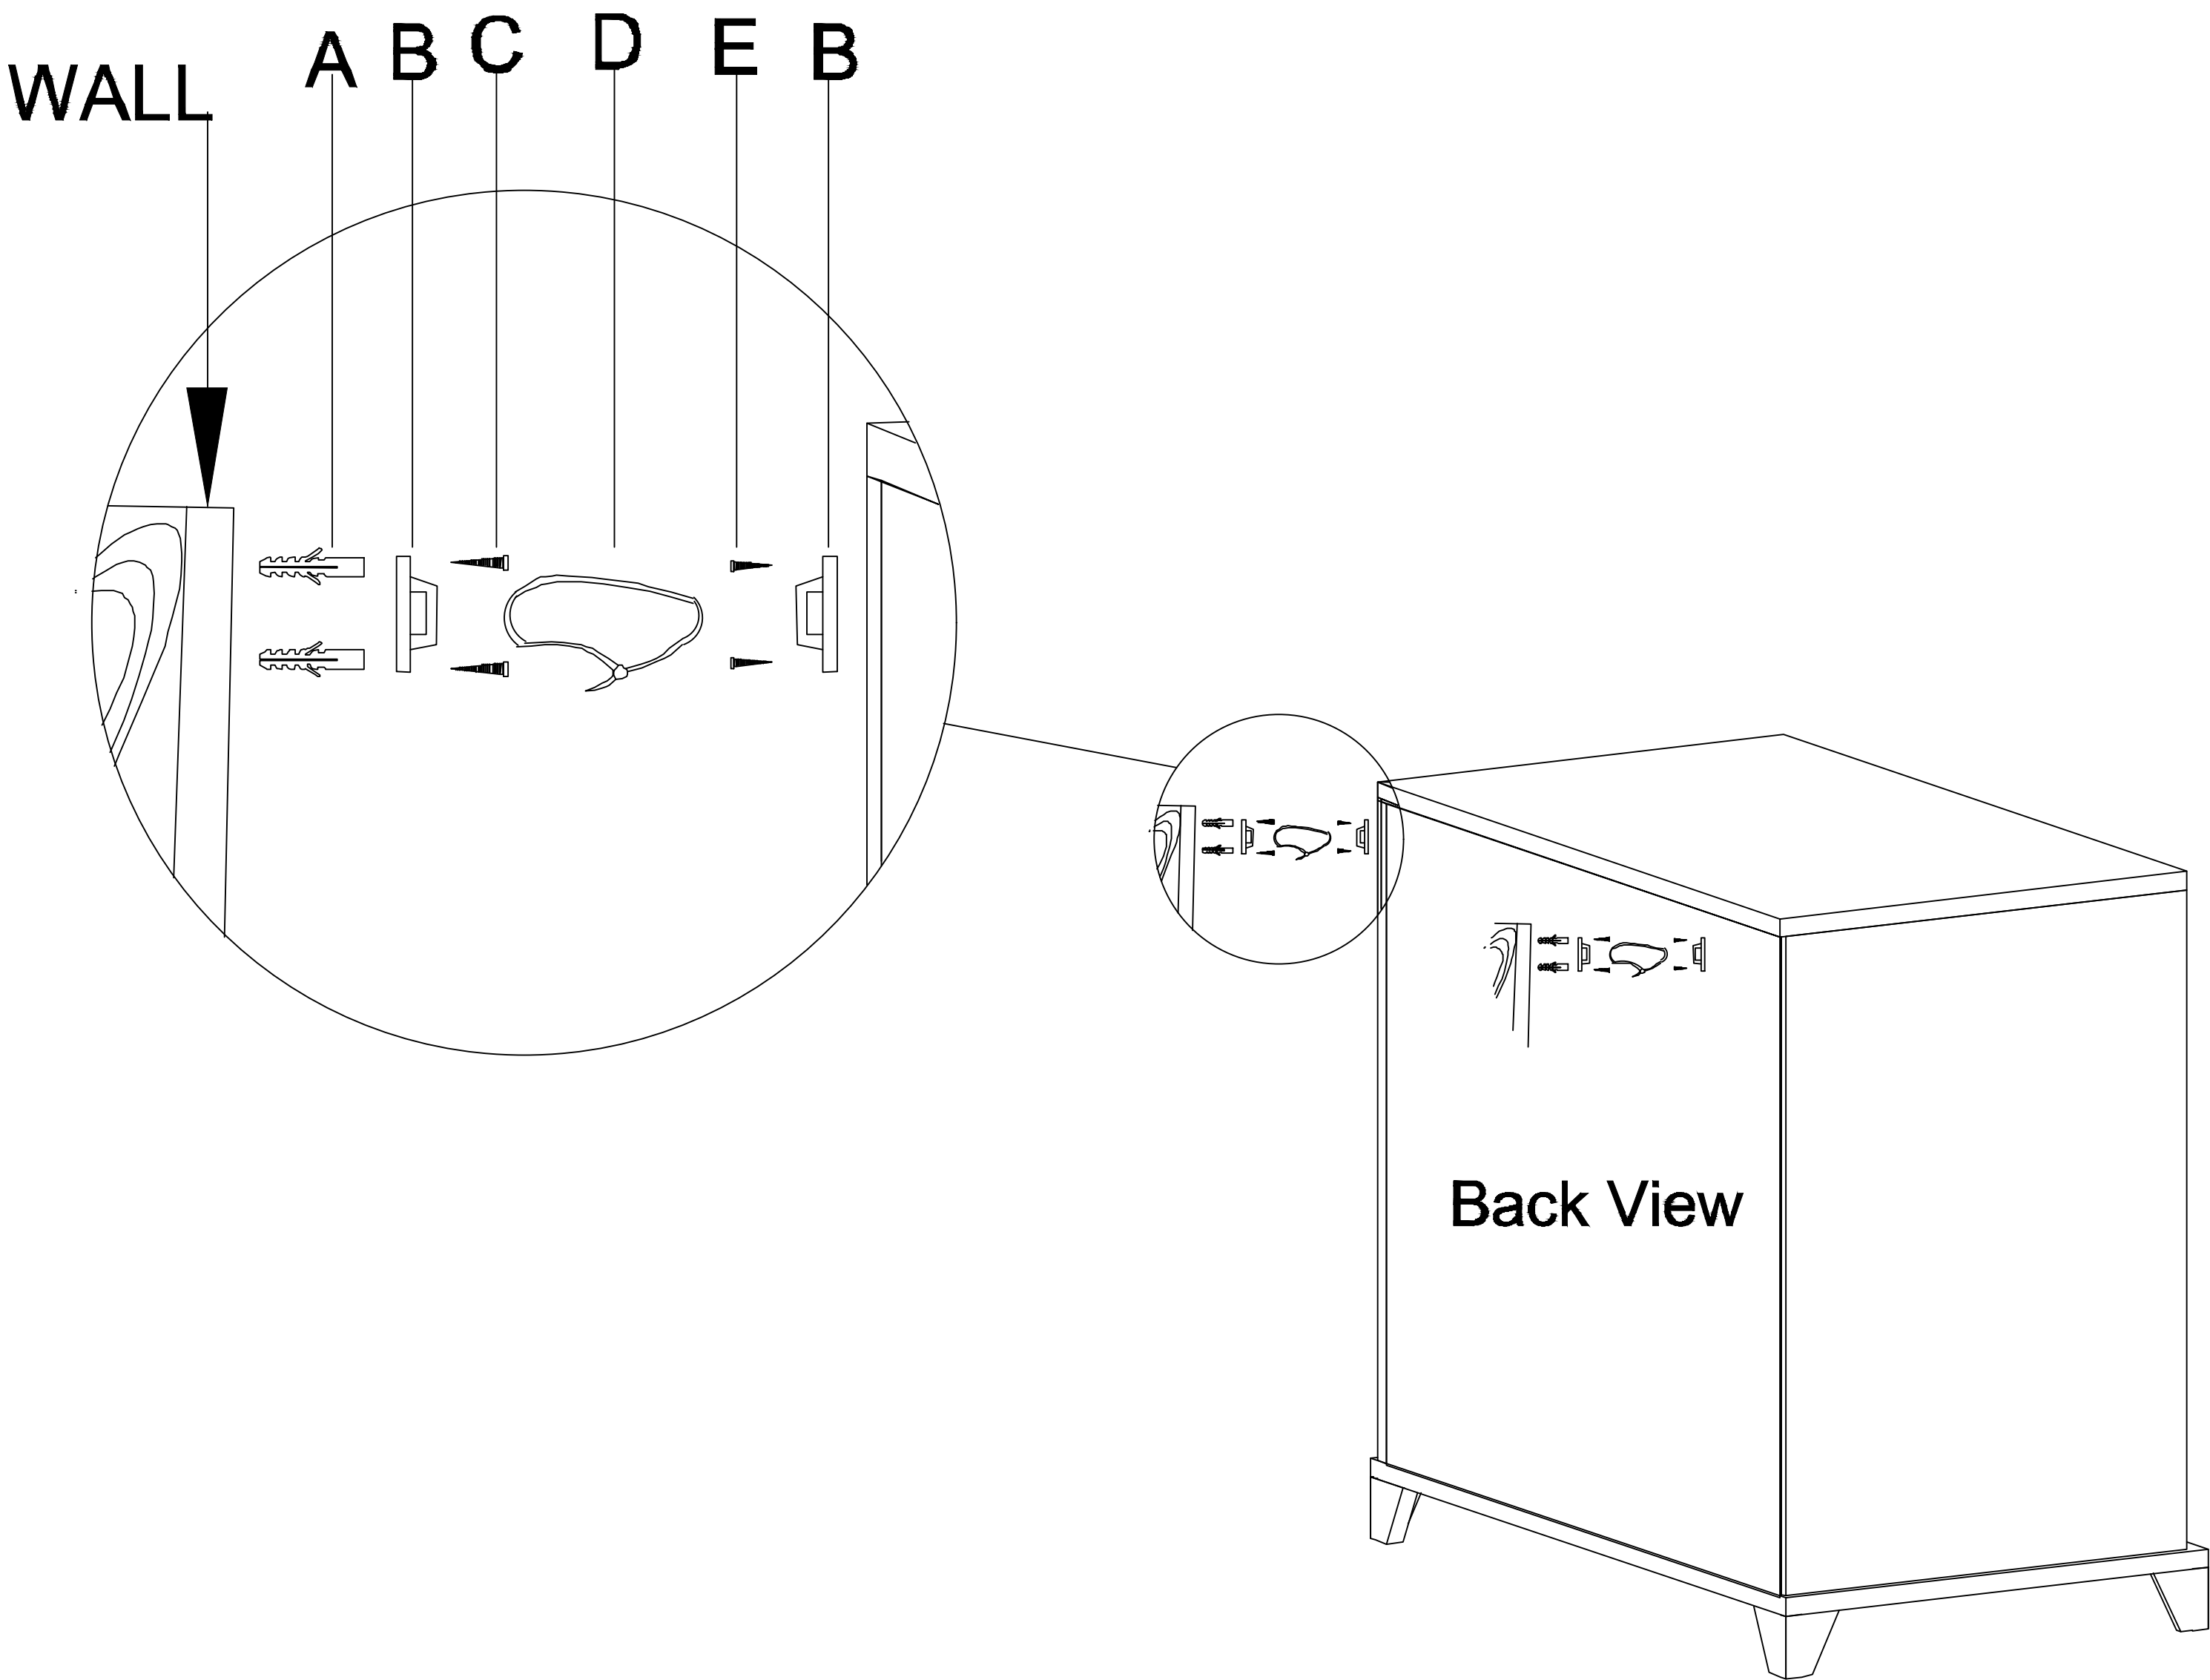

FINAL PRODUCT

