

SILVER SOL QUEEN BED

ASSEMBLY INSTRUCTION



Assembly Instruction

ASSEMBLY TIPS:









1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast and easy assembly.





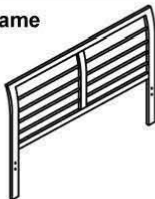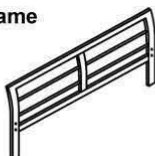







Warning !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION:

NO	DESCRIPTION & FIGURE	QTY
A	Headboard Frame 	1 pc
B	Footboard Frame 	1 pc
C	Side Rails 	2 pcs
D	Base Frame Retainers 	2 pcs
E	Middle Support Rail 	1 pc
F	KD-Support Legs 	3 pcs
G	Spring Wooden Slats 	30 pcs
H	KD-Support Legs 	2 pcs


Z: HARDWARE PACKAGE:

NO	DESCRIPTION	FIGURE	QTY
1	Short Bolt (M6 x 25MM)		8 pcs
2	Medium Bolt (M6 x 40MM)		7 pcs
3	Nut (M6 x 20MM)		4 pcs
4	Stud Screw		5 pcs
5	Side Slat Stopper		30 pcs
6	Center Slat Stopper		15 pcs
7	Spring Washer (M6)		8 pcs
8	Allen Key (M4)		2 pcs
9	Washer		17 pcs
10	Large Bolt (M6 x 60MM)		2 pcs

Step 1




Locate the Side Rails (C) onto the Headboard (A) and Footboard (B) tighten using (1) and (7) as shown.


1		
	Short Bolt M6 x 25mm	8 PCS
7		
	Spring Washer M6	8 PCS
9		
	Washer	8 PCS

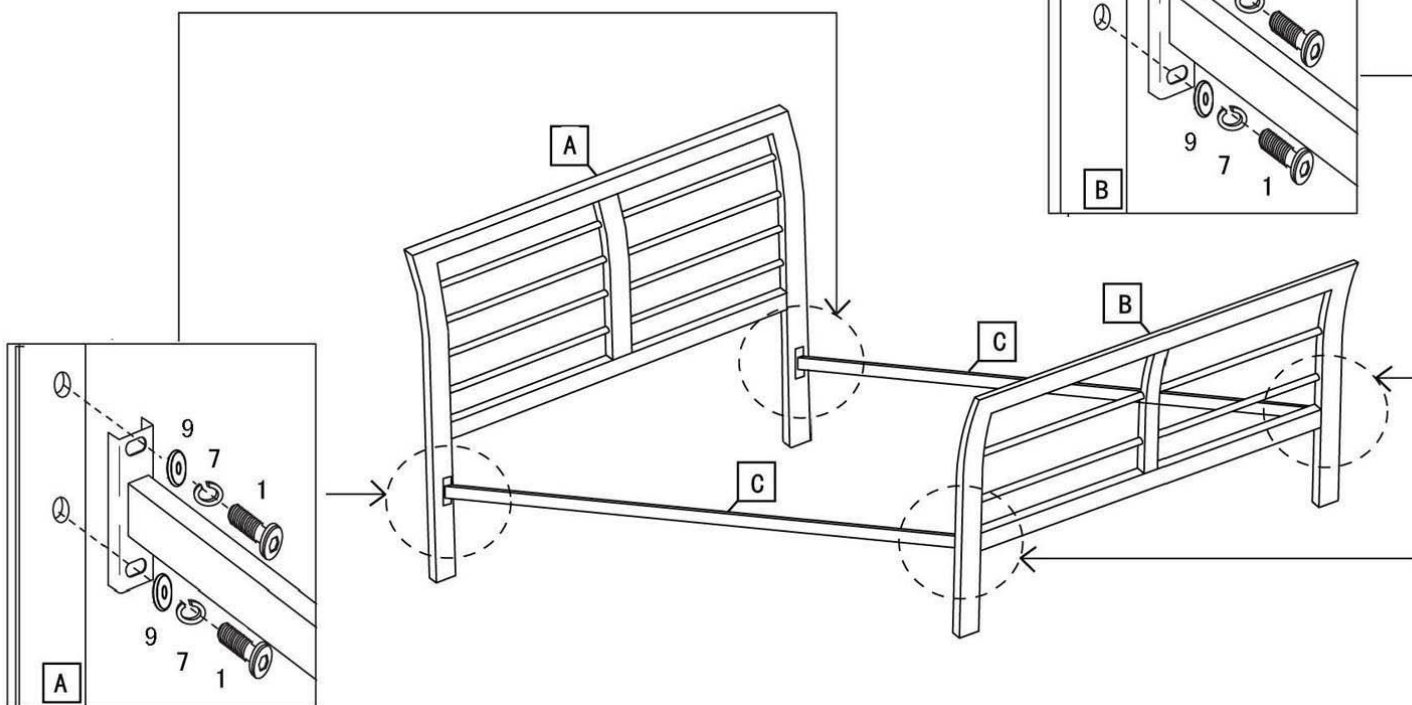

Step 2




Attach the Base Frame Retainers (D) as shown.
Use fitting (2) & (3) to secure.


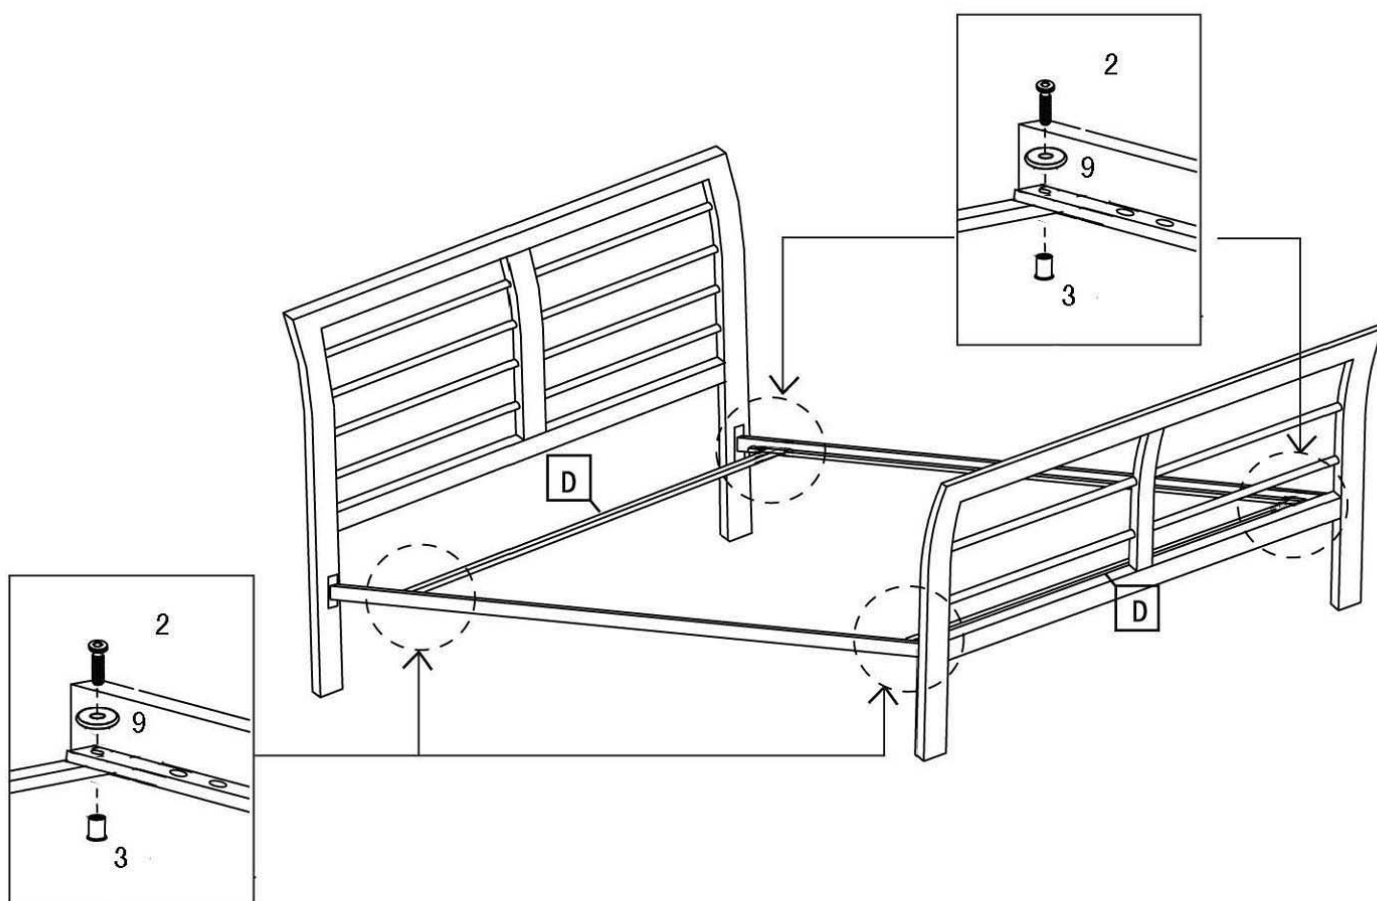
2		
	Medium Bolt M6 x 40mm	4 PCS
3		
	Nut M6 x 20mm	4 PCS
9		
	Washer	4 PCS



Step 3




Attach the Middle Support Rail (E) to the Base Frame Retainers (D). Use fitting (9) & (10) to secure. Place the KD Support Legs (H) onto the Middle Support Rail (E) as shown.

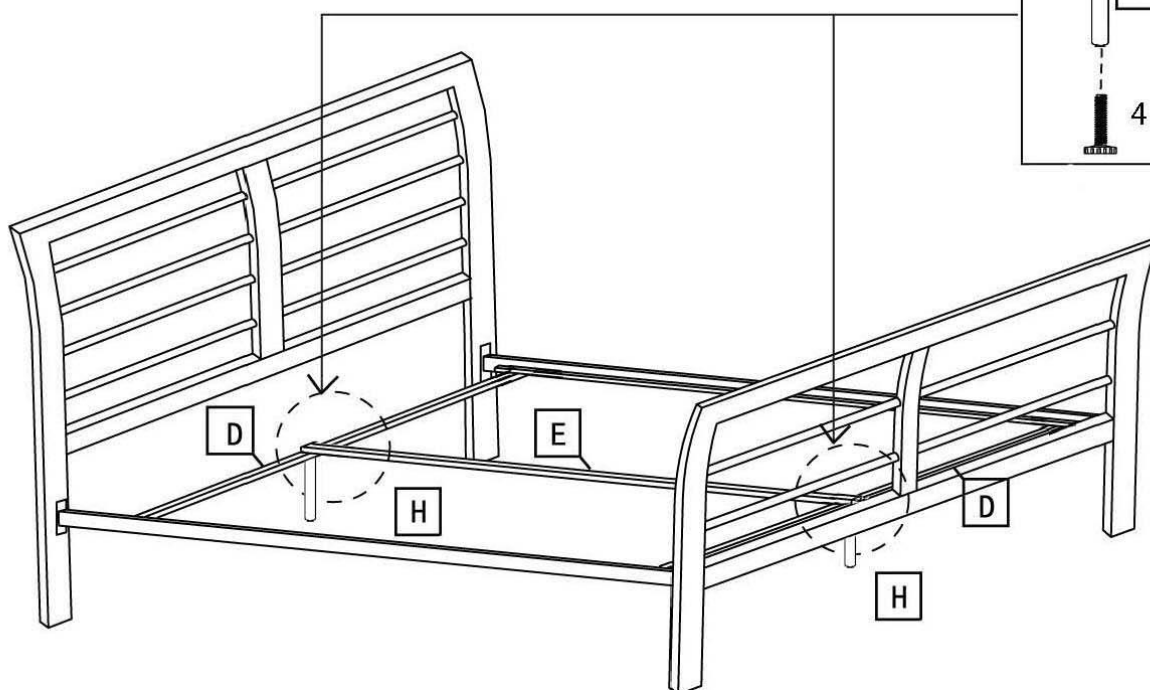
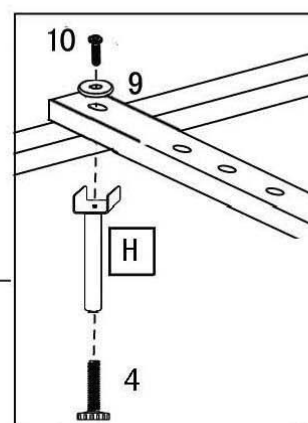
10		
Large Bolt M6 x 60mm		2 PCS
4		
Stud Screw		2 PCS
9		
Washer		2 PCS



Step 4


Place the KD Support Legs (F) onto the Middle Support Rail (E) as shown.
Use fitting (2) & (4) to secure.

2		
Medium Bolt M6 x 40mm		3PCS
4		
Stud Screw		3PCS
9		
Washer		3PCS

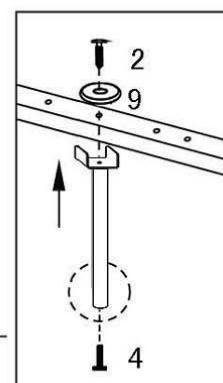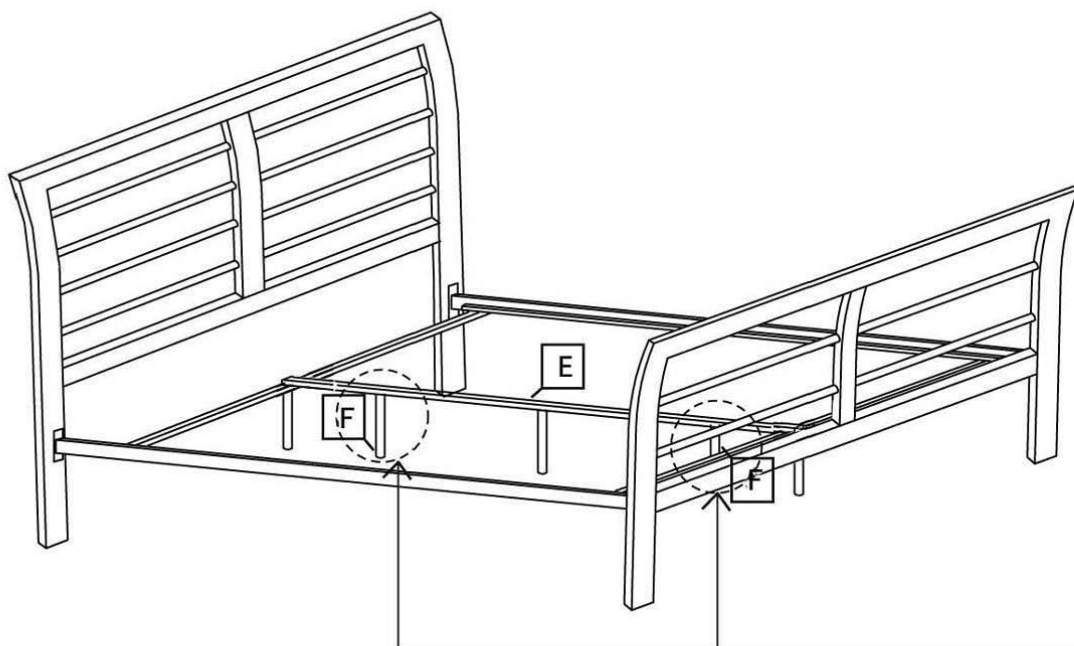

Step 5

Insert the Spring Wooden Slat (G) with fixed Slat Stopper (5) & (6) into between the Side Rails (C) as shown and to fix stopper firmly into the hole on the Side Rails (C).

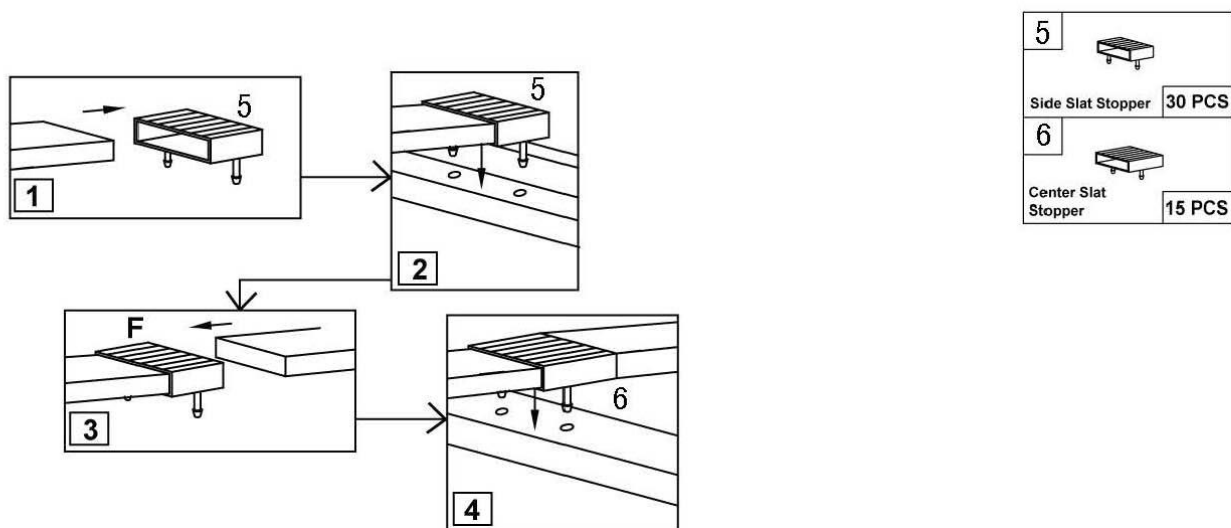

Note:

Please check and fully tighten all the fittings at this stage.

