
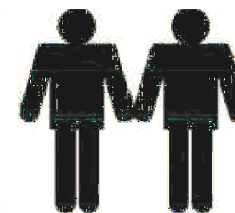


Assembly Instruction

Note:

1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.

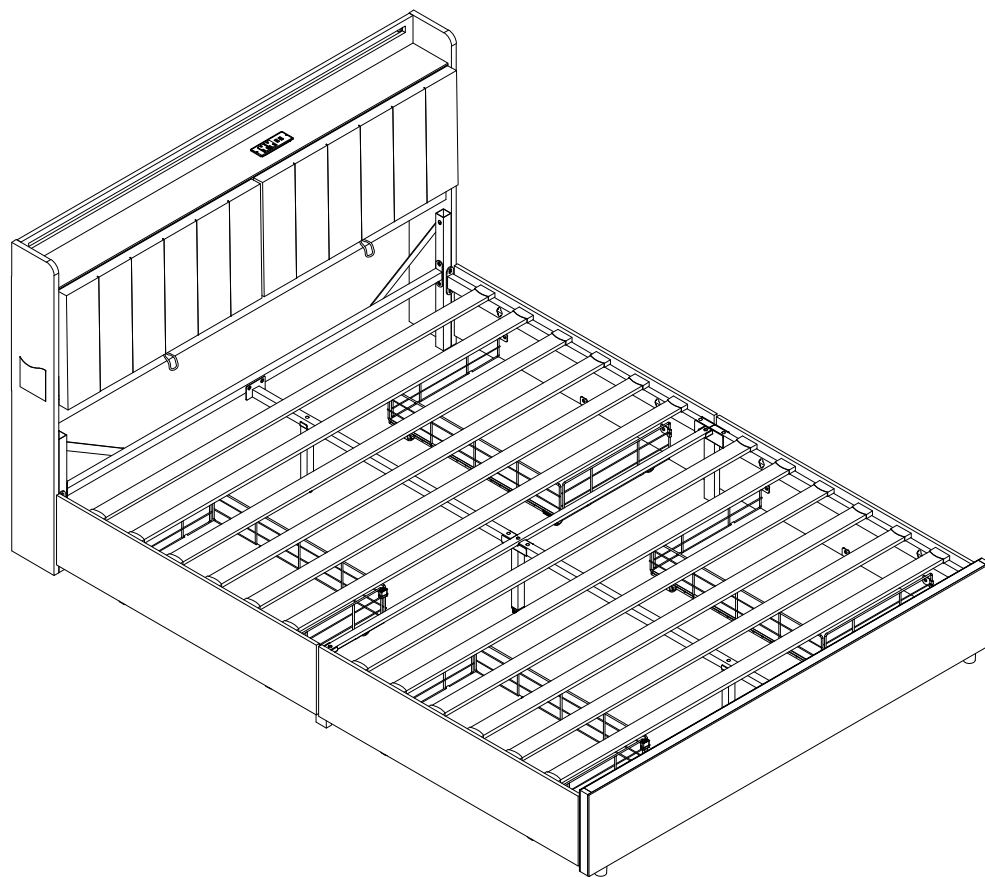


It needs at least two people to install.




Before starting the assembly, you must read the whole manual and follow the instructions .

Assembly Instruction

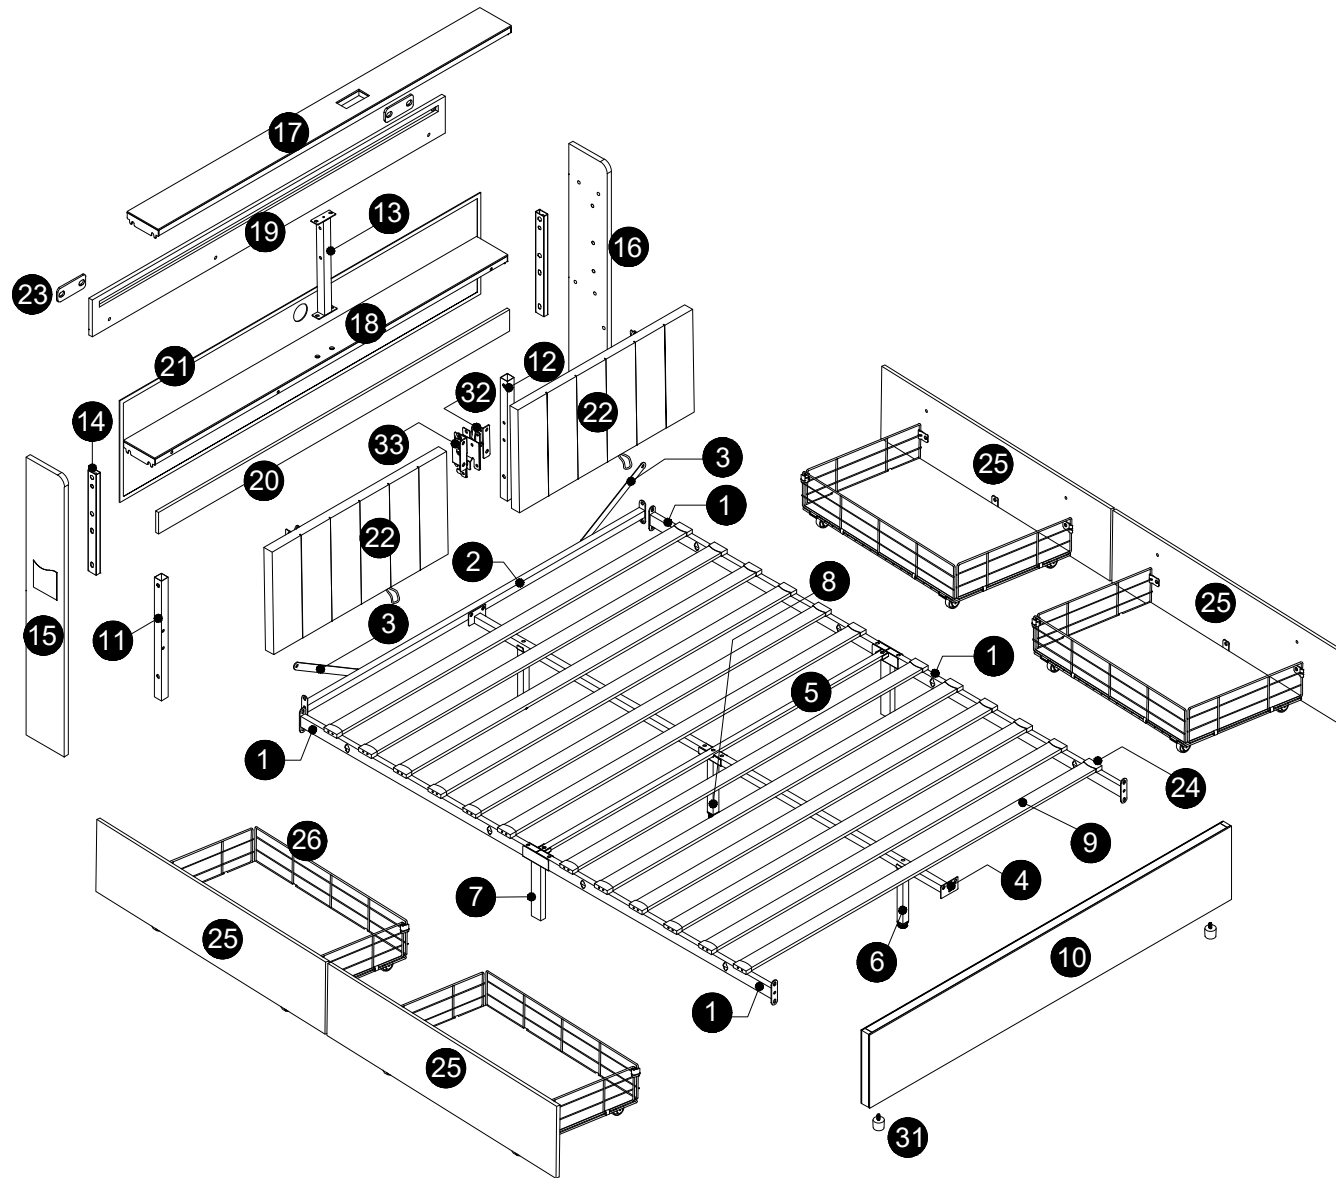


Assembly Instruction

Hardware parts 1

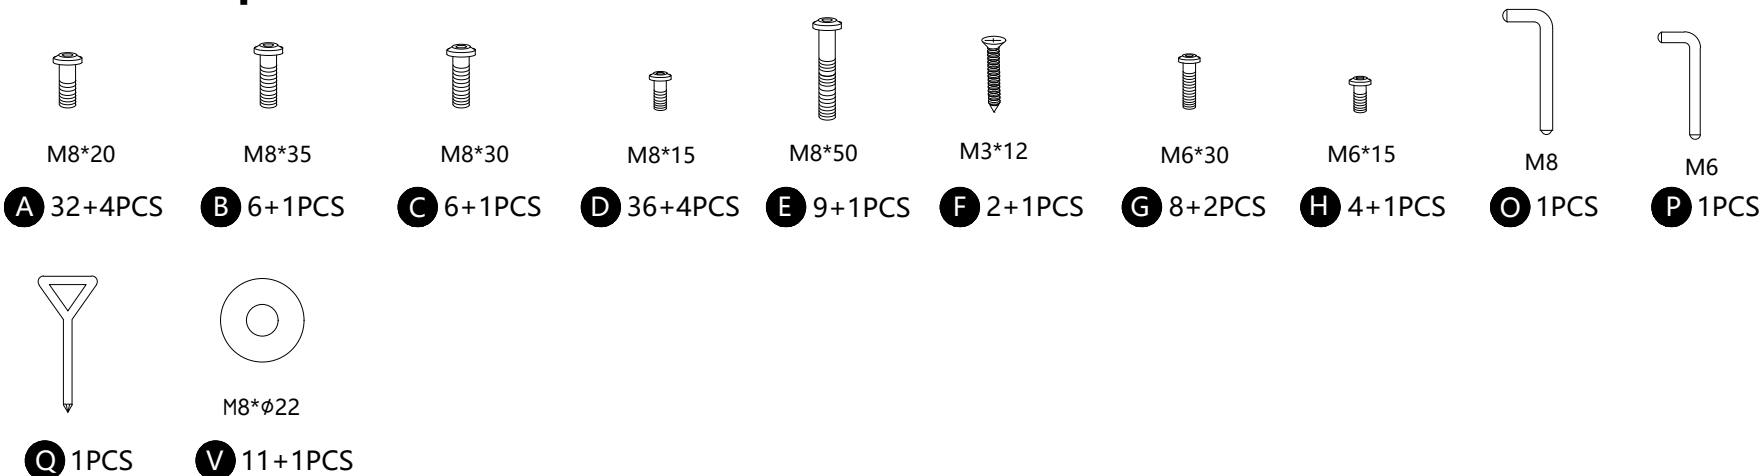


Part list

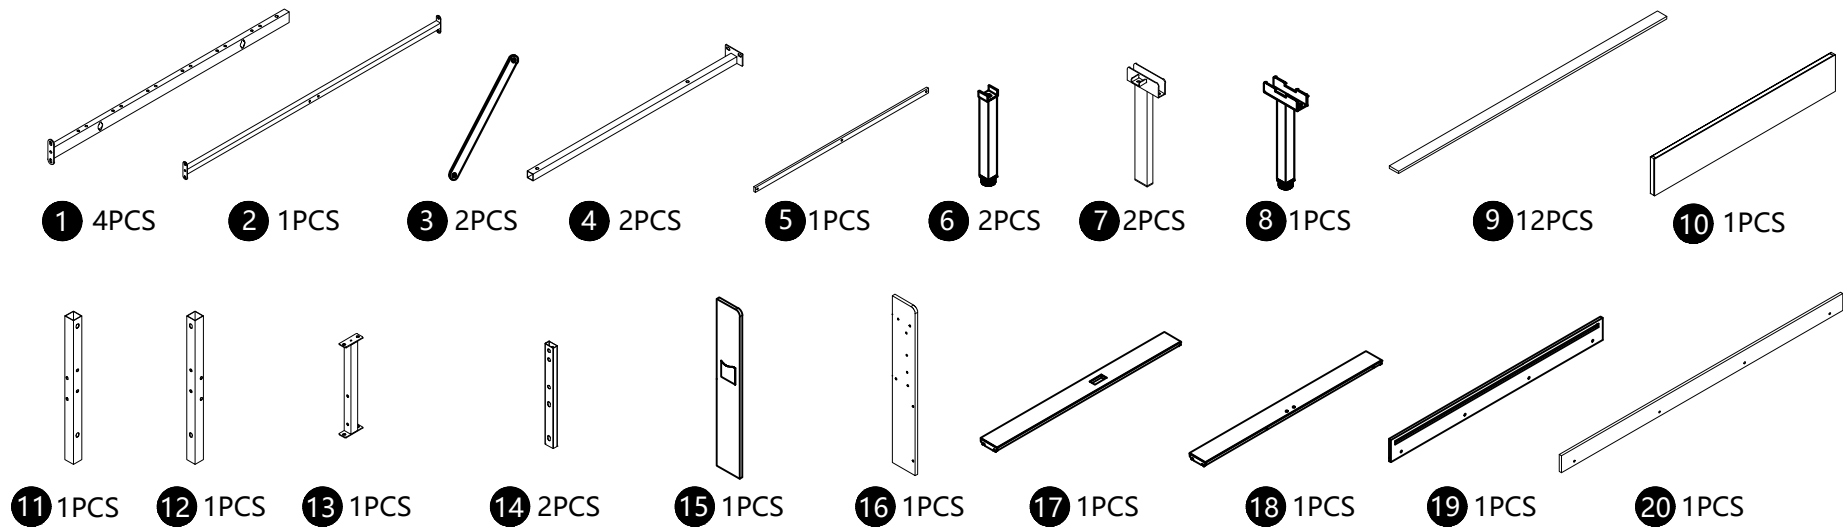


Assembly Instruction of Bedside cabinet

Part list

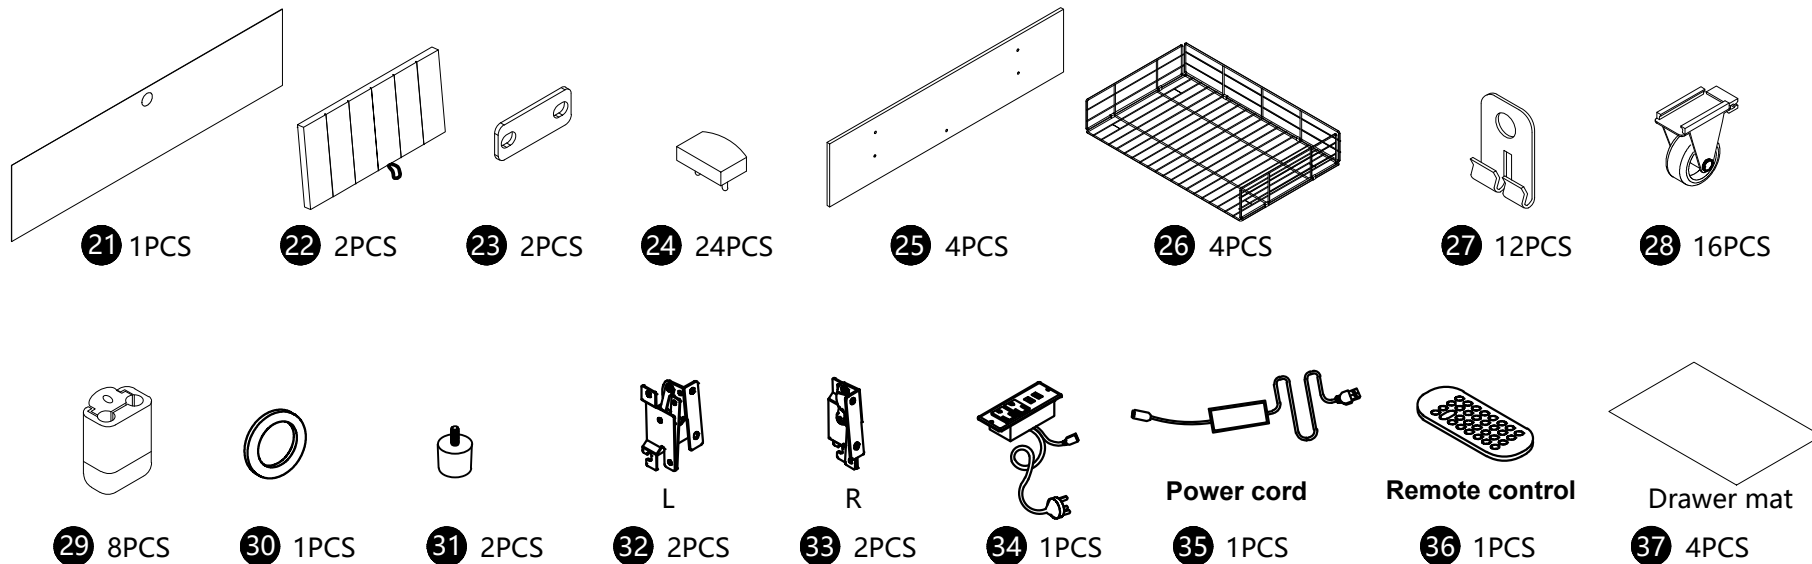


Assembly Instruction of Bedside cabinet

Step:1

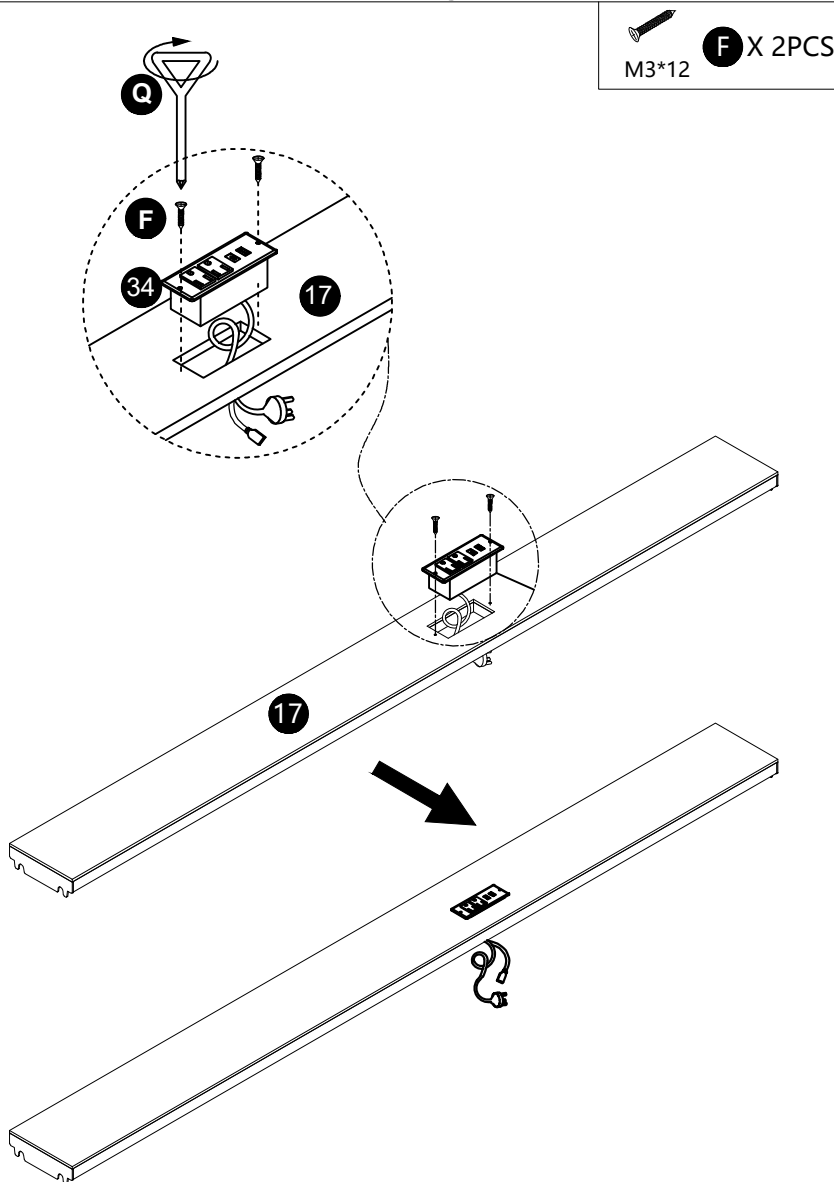


Step:2

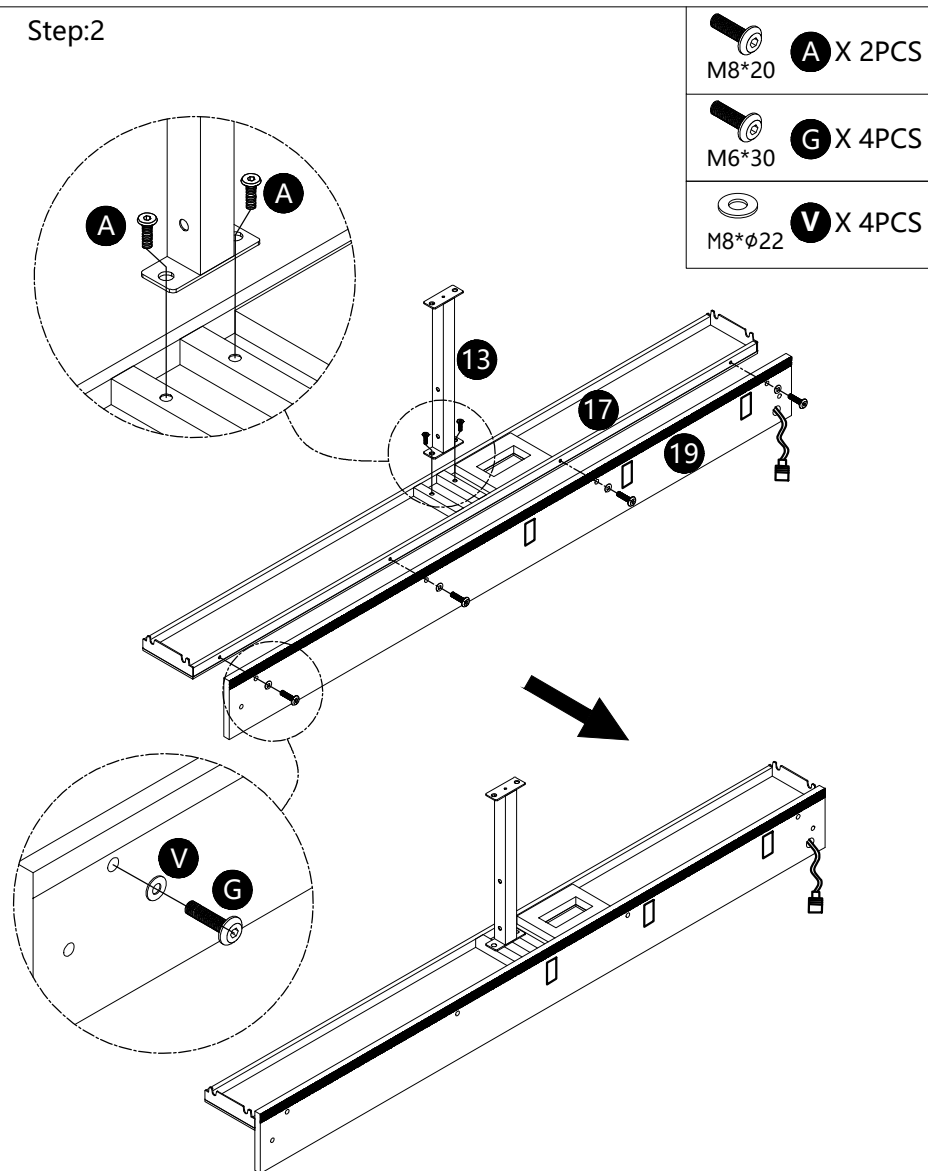

Assembly Instruction of Bedside cabinet


Step:3

 M6*30 **G** X 4PCS

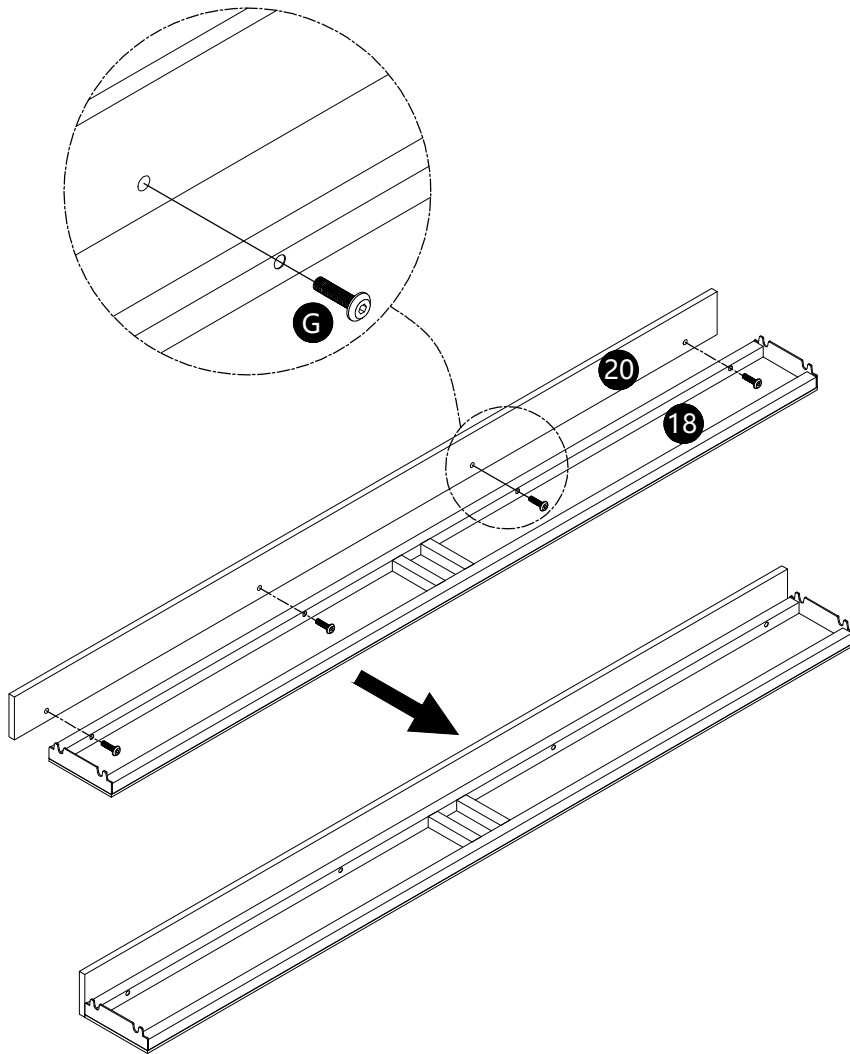

Step:4



 M8*50 **E** X 4PCS

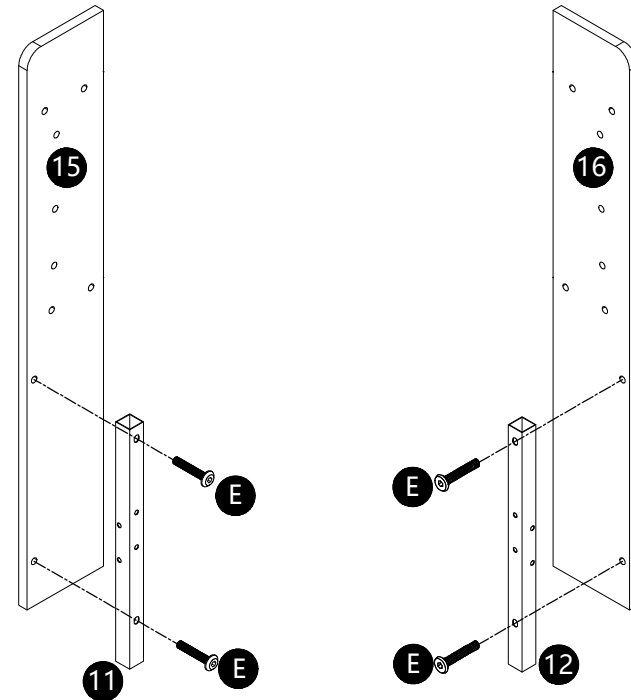


Assembly Instruction of Bedside cabinet

Step:5


 M8*20 **A** X 8PCS

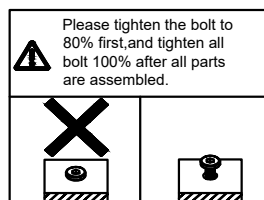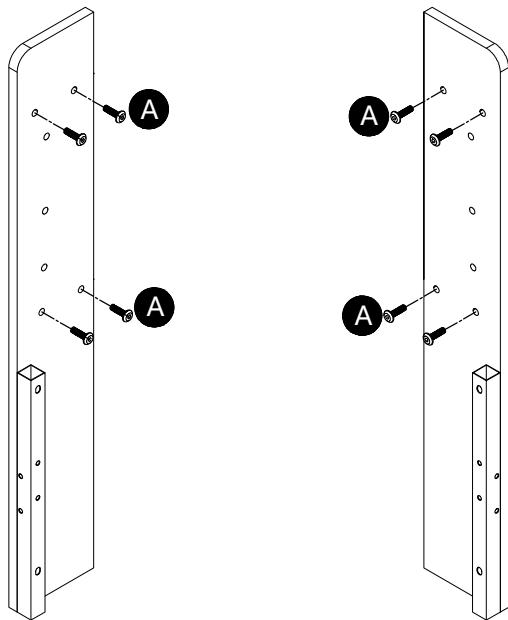

Step:6

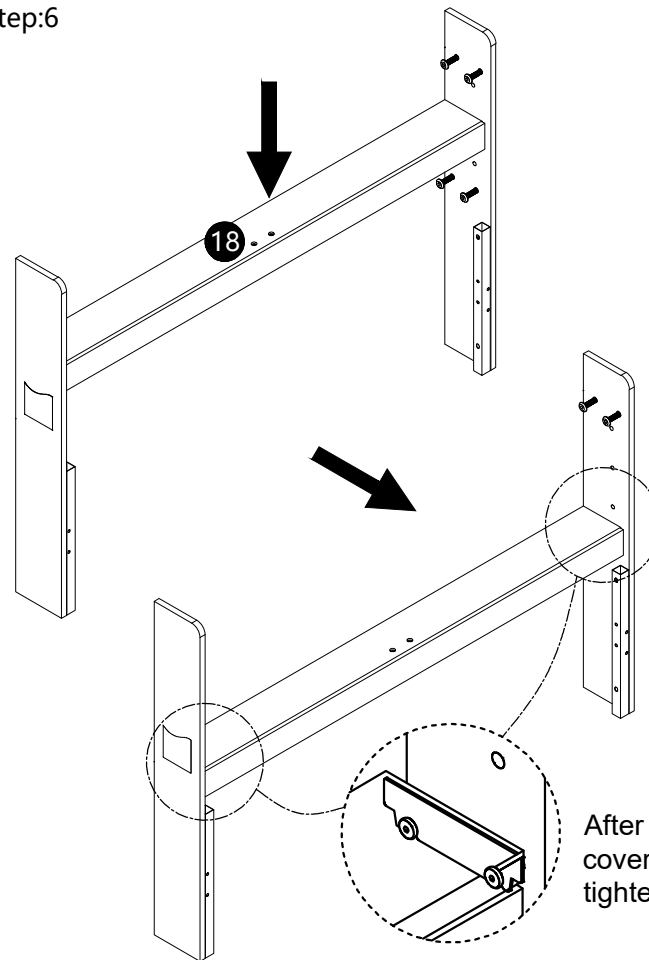


After flattening the cloth covers at both ends, tighten the screws.

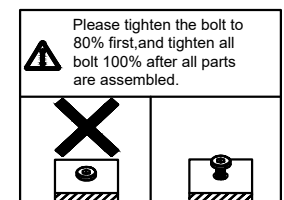

Assembly Instruction of Bedside cabinet


Step:7

Nut facing outward

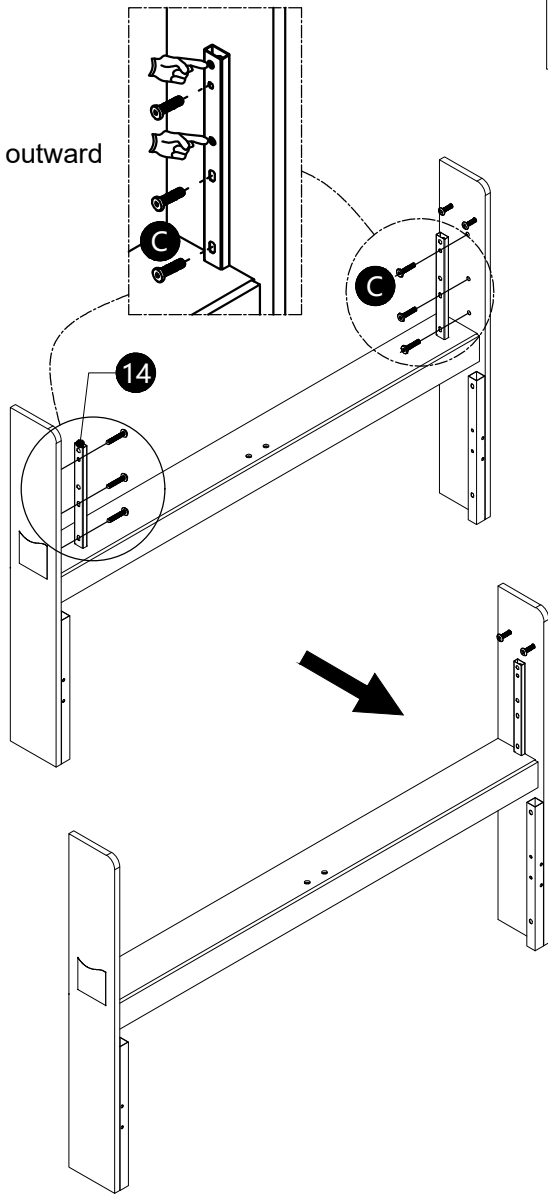

M8*30  X 6PCS


Step:8

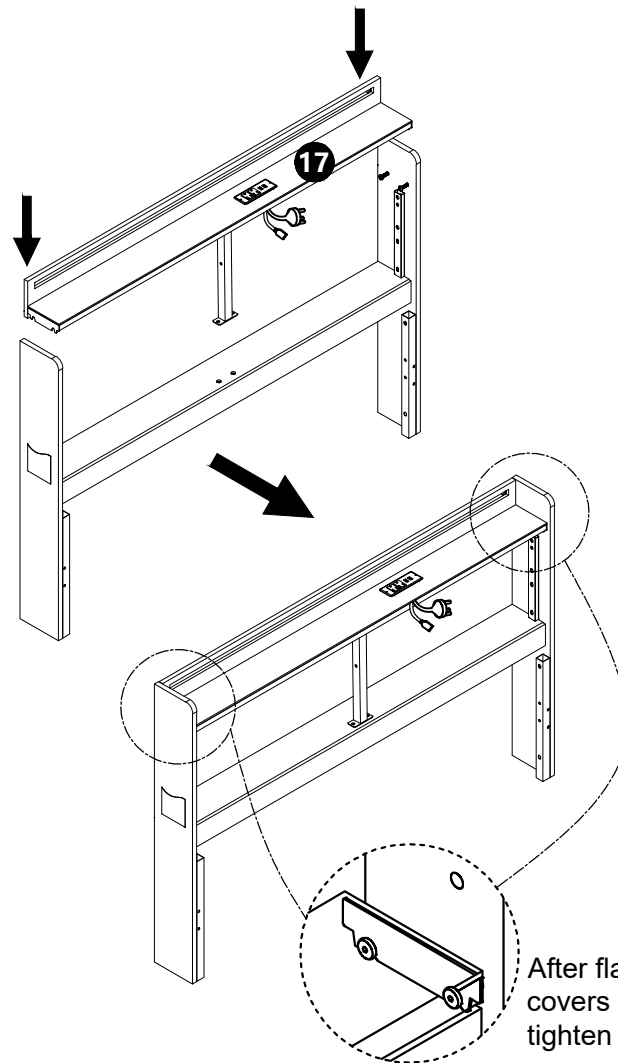

Assembly Instruction of Bedside cabinet


Step:9

M8*20 **A** X 2PCS

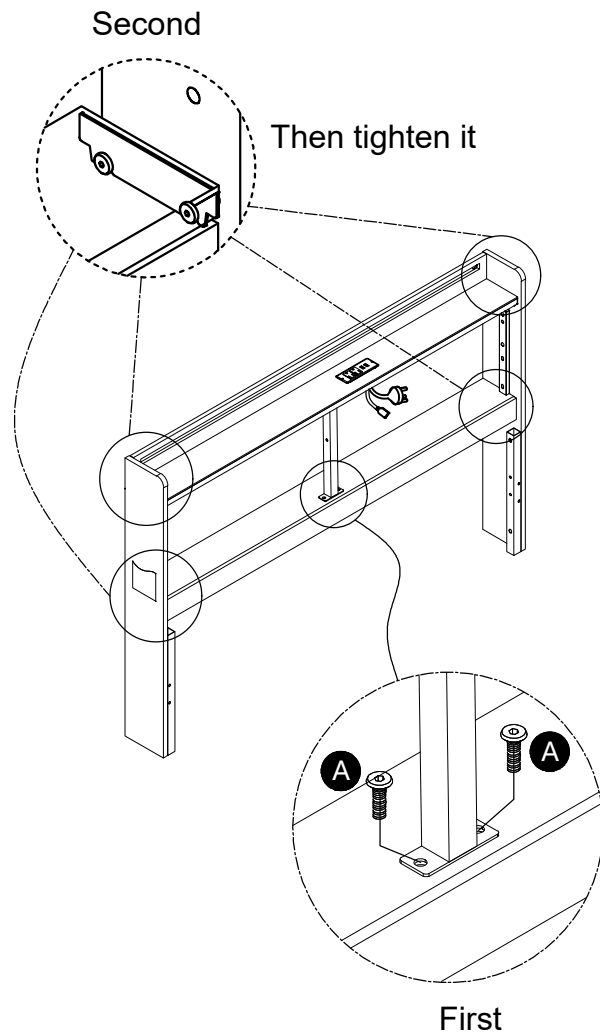

Step:10


M8*15 **D** X 4PCS

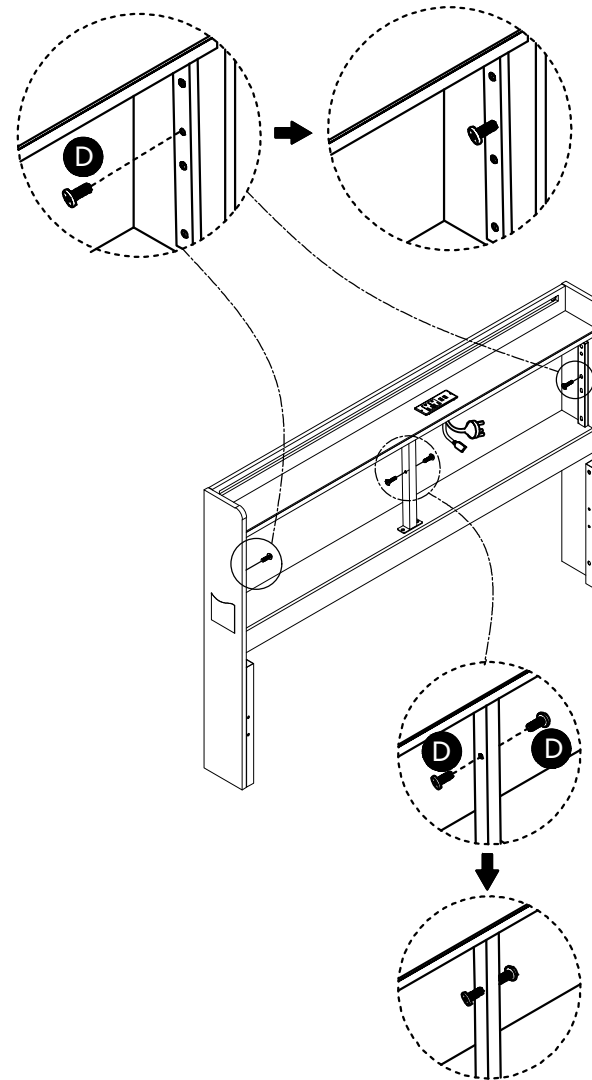

Assembly Instruction of Bedside cabinet

Step:11


M8*15 **D** X 8PCS

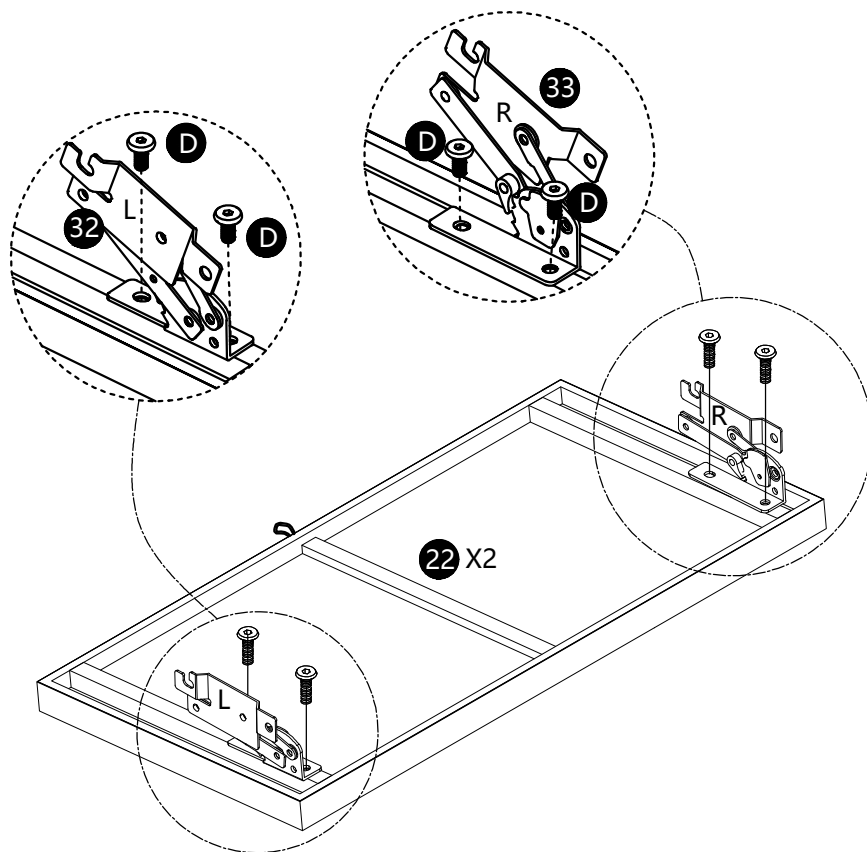

Step:12

Then tighten it

M8*15 **D** X 4PCS

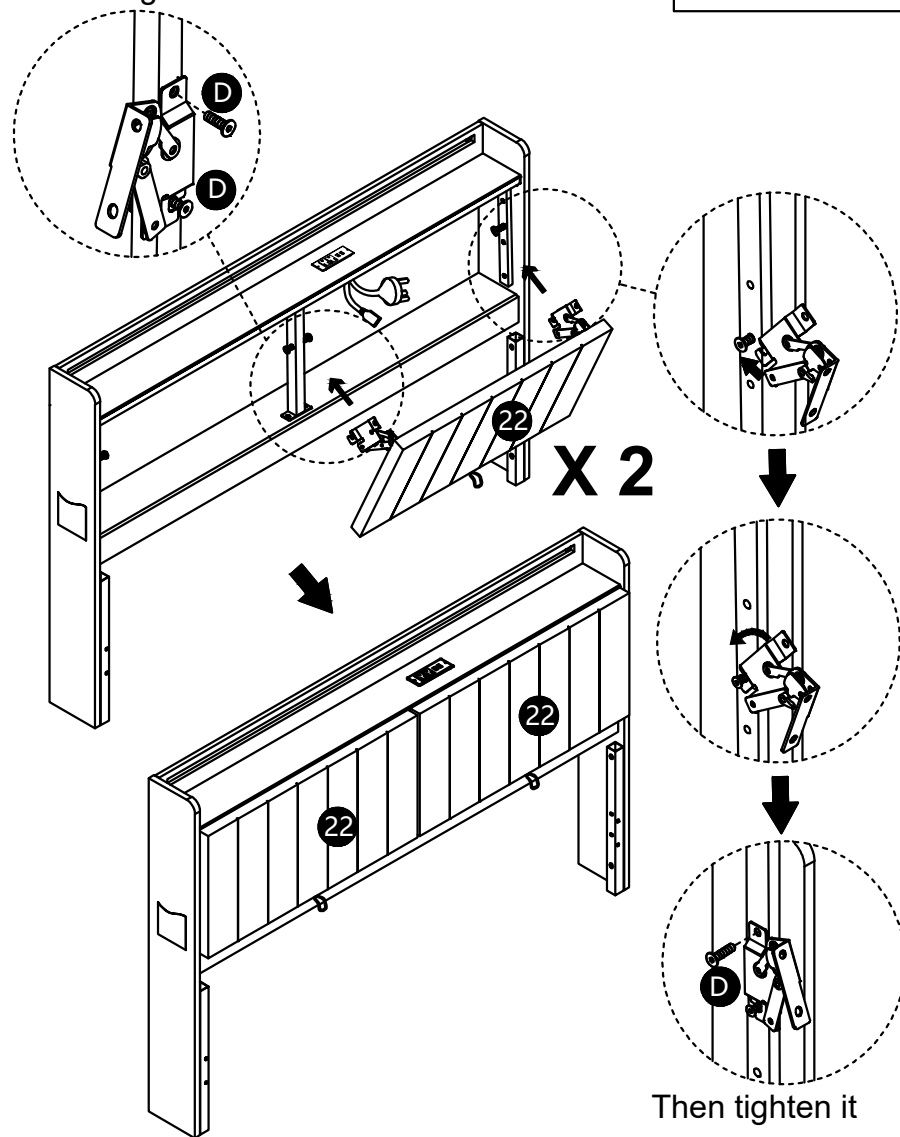


Then tighten it


Assembly Instruction of Bedside cabinet

Step:13

 **A** X 4PCS
M8*20

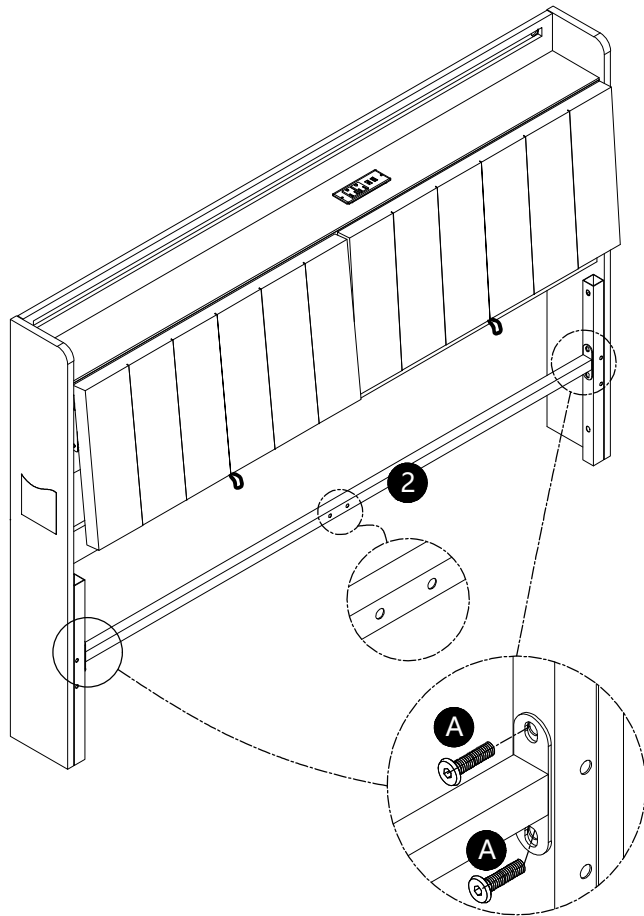

Step:14

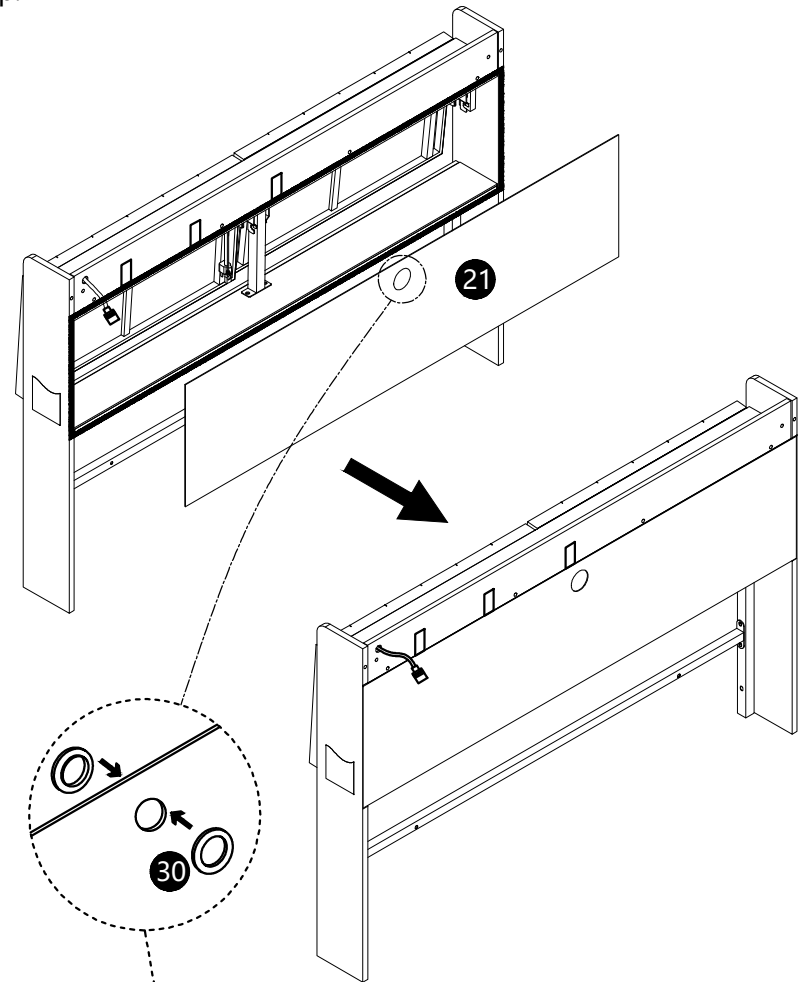


First Open accessory(30)

Second Place them separately on
the front and back of the (21)
hole and press them tightly

Assembly Instruction of Bedside cabinet


Step:15

 M8*20 **A** X 4PCS

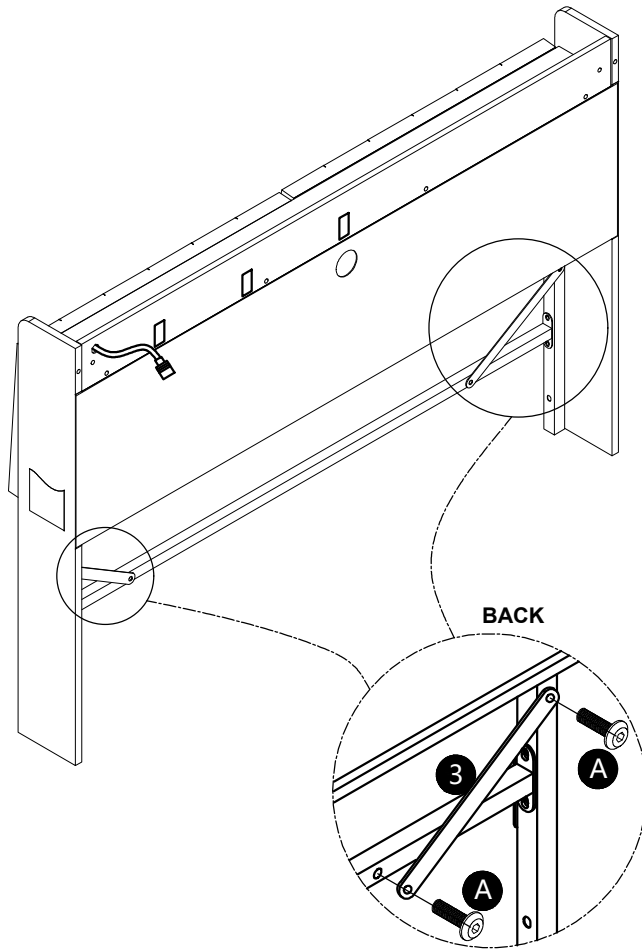

Step:16


 M6*15 **H** X 4PCS

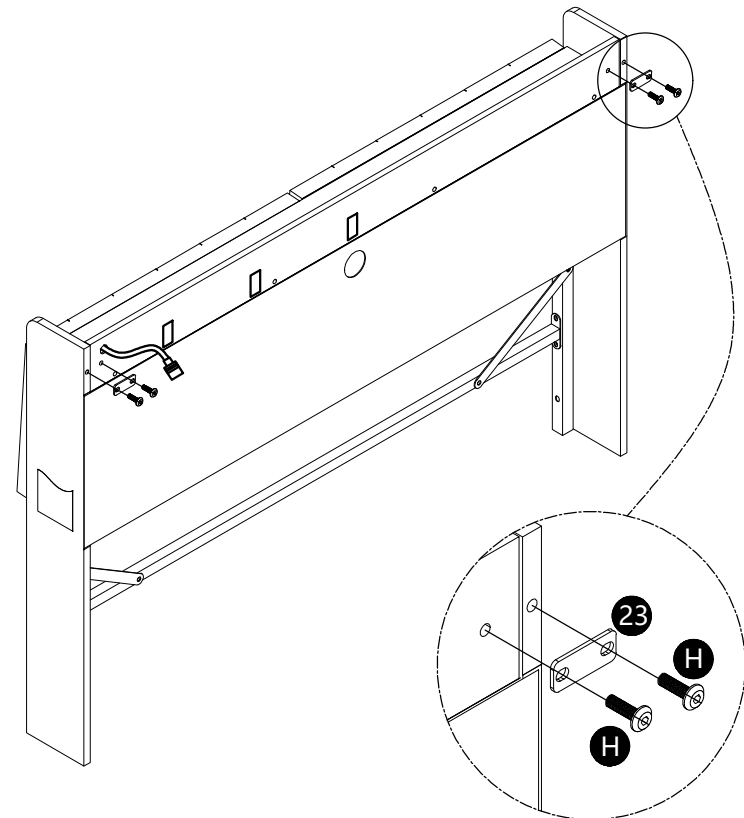

Assembly Instruction


Step:17

 M8*50 **E** X 4PCS

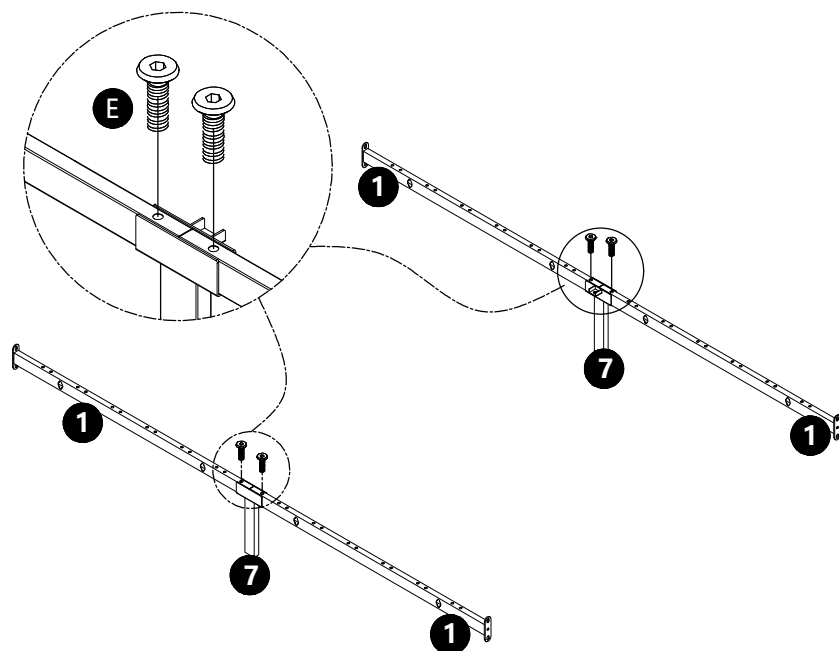

Step:18

 M8*20 **A** X 8PCS

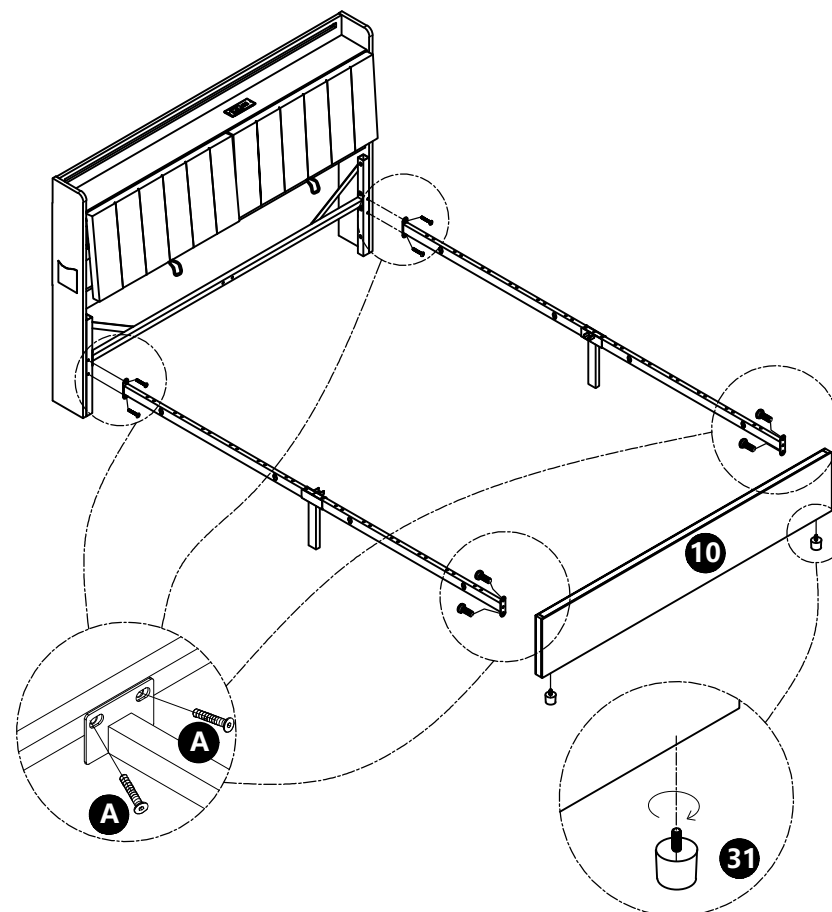


Install the adjusting feet first

Assembly Instruction

Step:19


 **B** X 2PC
M8*35

 **V** X 2PCS
M8*ø22

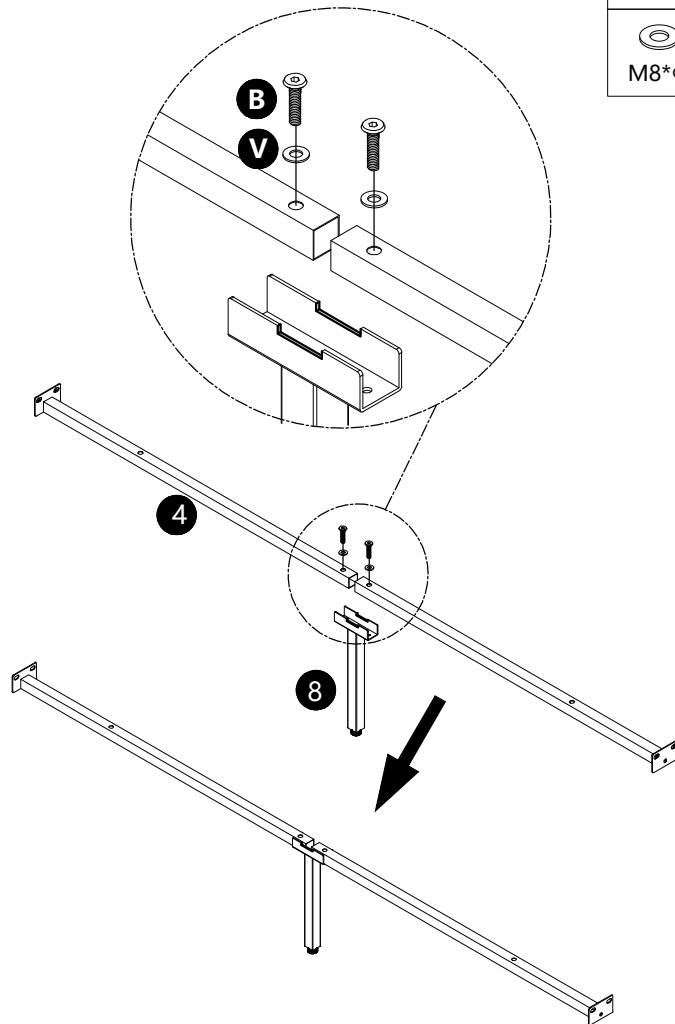

Step:20

 **A** X 4PC
M8*20

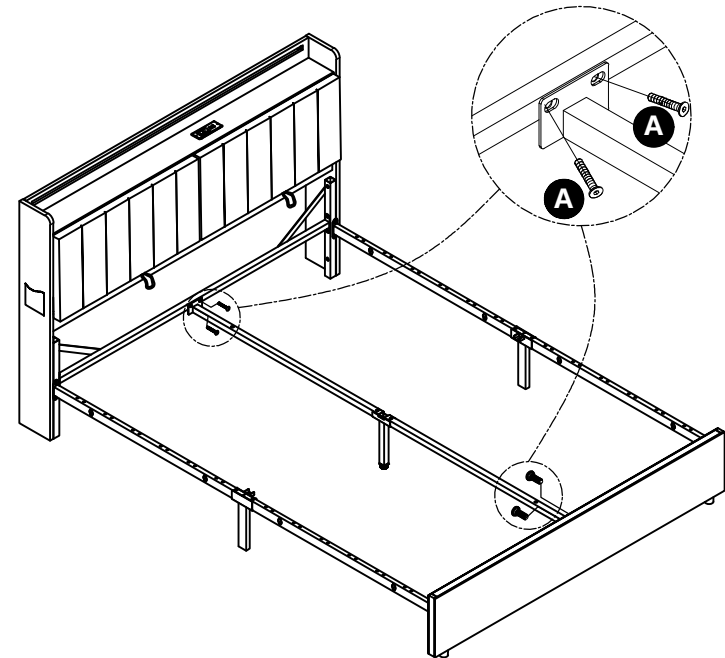


Assembly Instruction

Step:21


M8*35 **B** X 4PCS

M8*50 **E** X 1PCS

M8* ϕ 22 **V** X 5PCS

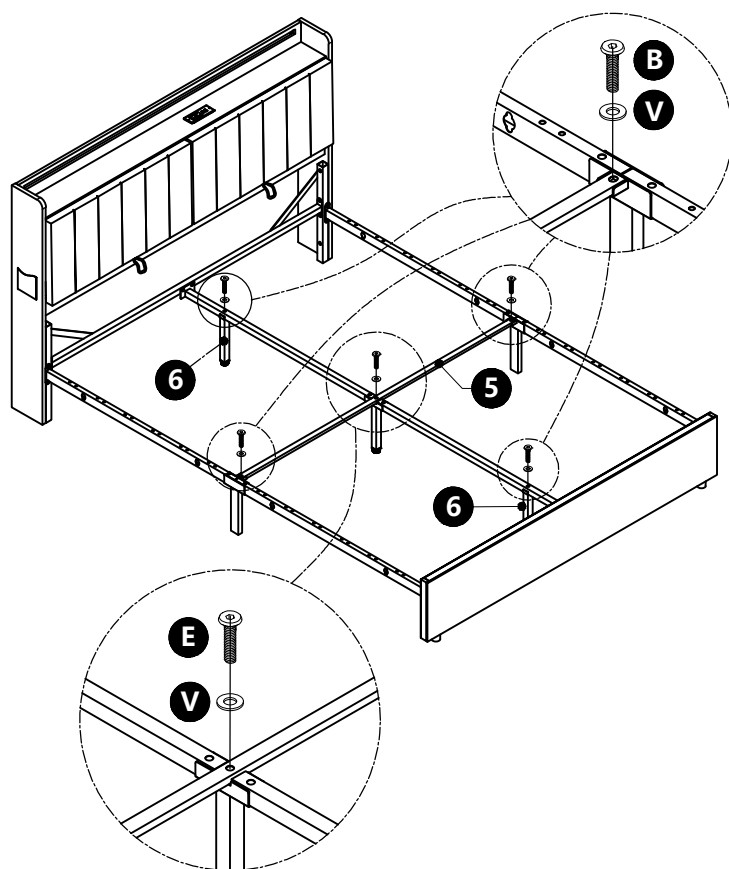


Step:22

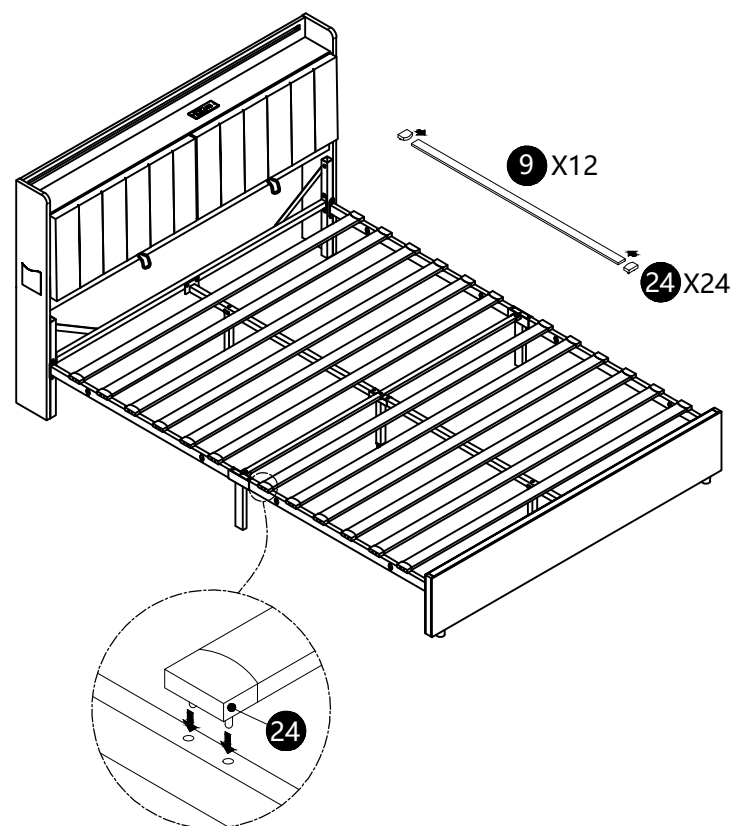


Assembly Instruction



Step:23



35 1PC
Power cord



36 1PC
Remote control

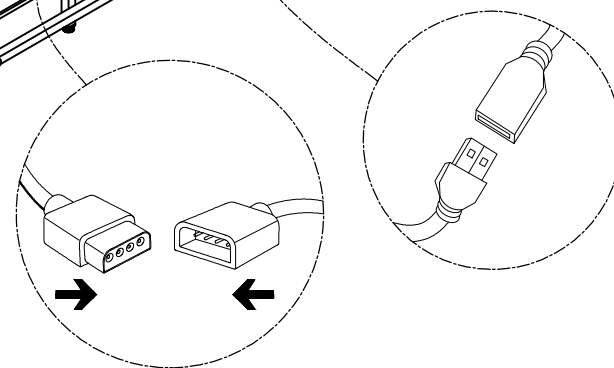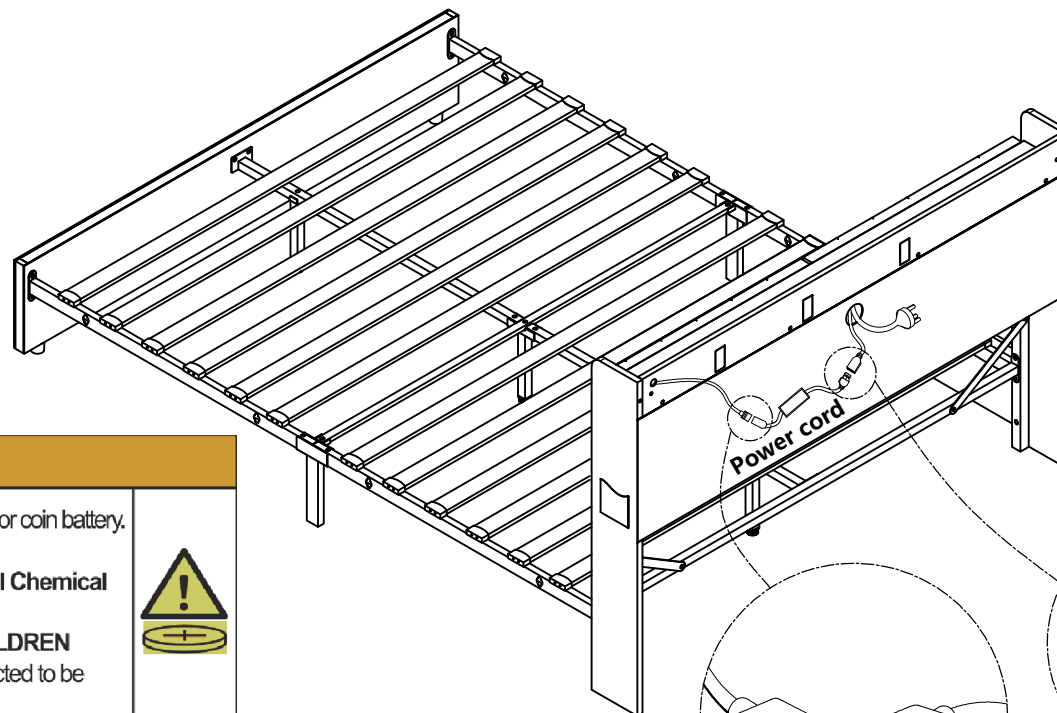




⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.






Assembly Instruction of **drawer**

Black plastic buckle instructions for assembling drawer mesh

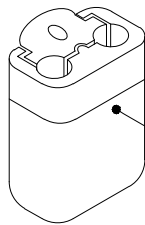

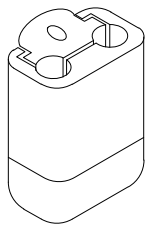


Remember this
convex coil




Reverse
direction

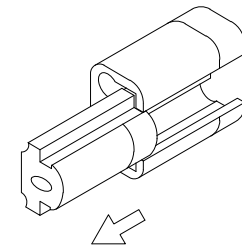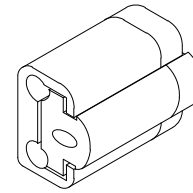

You can pull the buckle out by
following the direction indicated
by the arrow

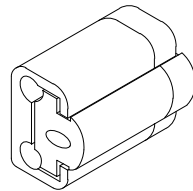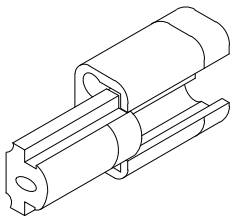

So This is the only direction that
can be locked

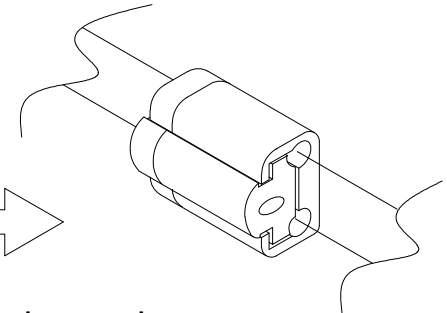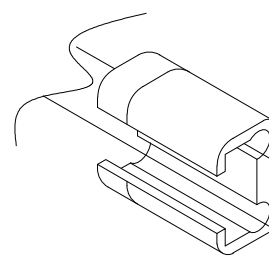


Place round iron tube as shown
for better drawer assembly

Drawer Base's Assembly Instruction





Please note that this drawer base (26) has front and back sides! Please see the instructions clearly before assembling!!!



As shown in the figure Clip the pulley into position first

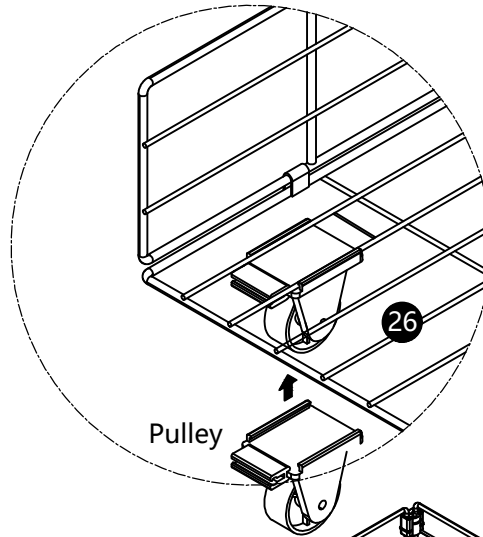

Then push the pulley to the side
At the same time, clamp the iron wire at the edge. It takes a little strength

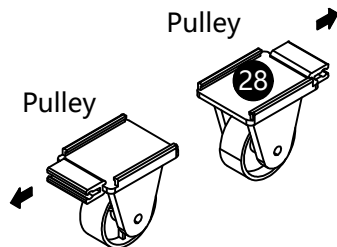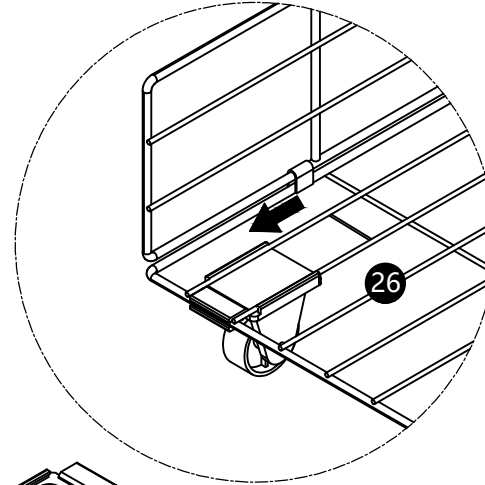


Pay attention to the orientation before clamping in

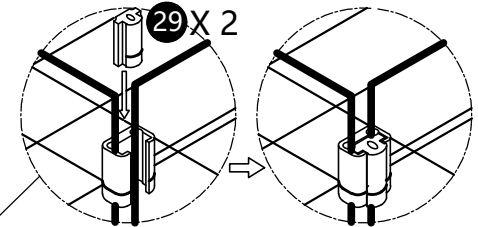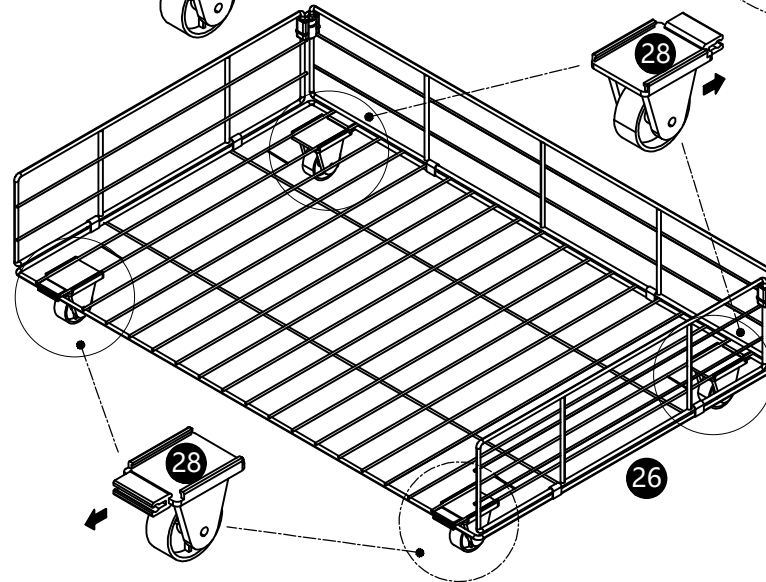

Assemble the other three drawers in this way. 4 drawers in total.

Assembly Instruction of **drawer**

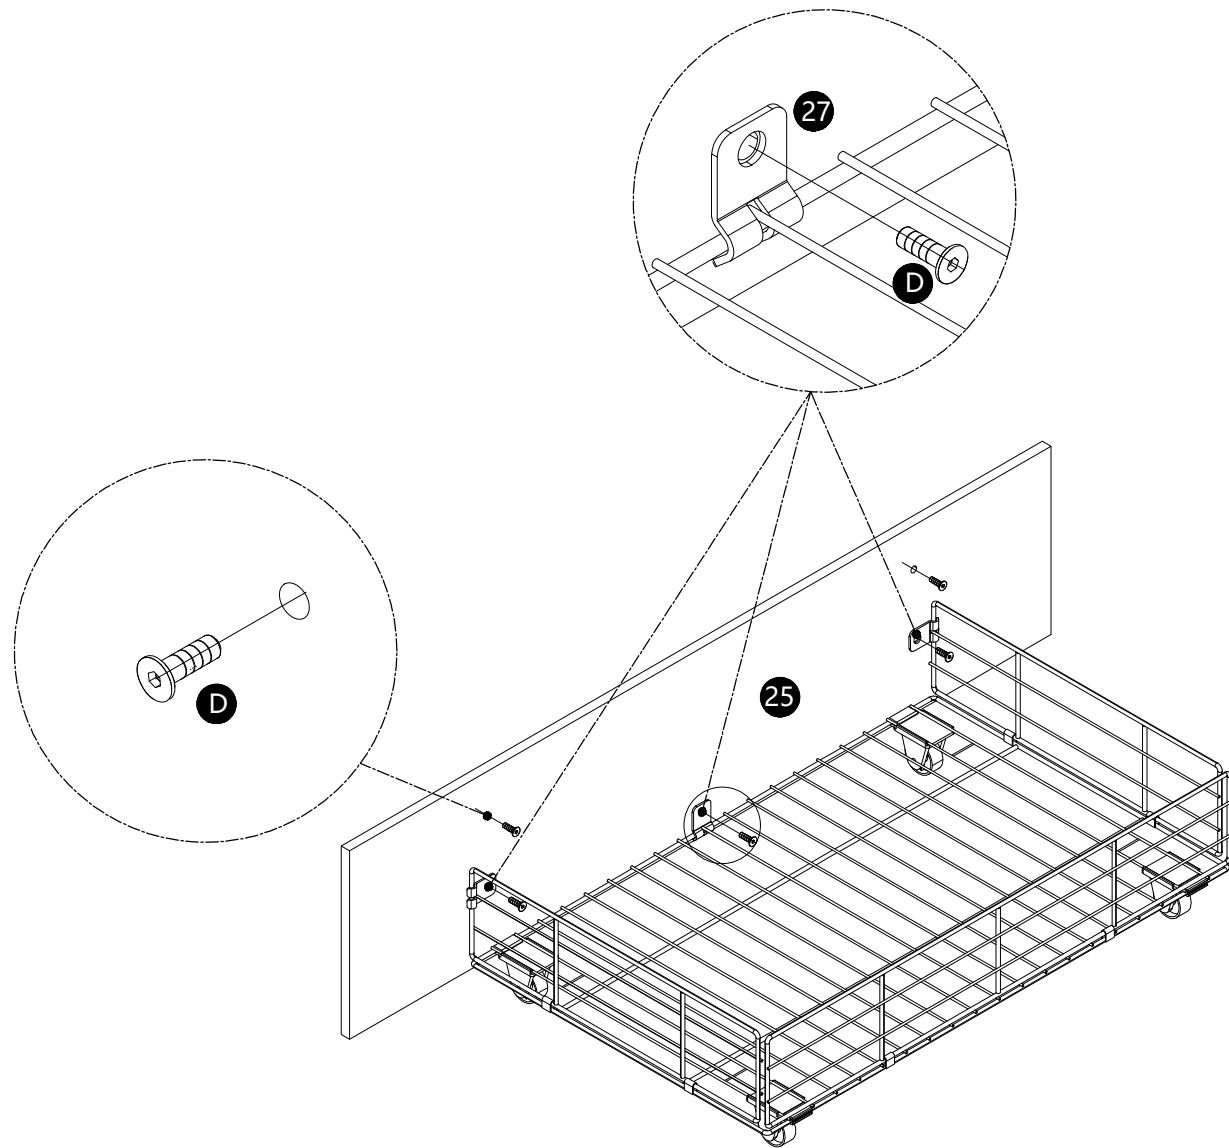

Iron buckle x 12




M8*15
Screw x 20pcs

Assembly Instruction


1: You must put the drawer pad (37) in the drawer

2: This screw must be turned out slightly, leaving a distance of 2-3mm

3: Gently lift the drawer, align the screw with the gourd hole.

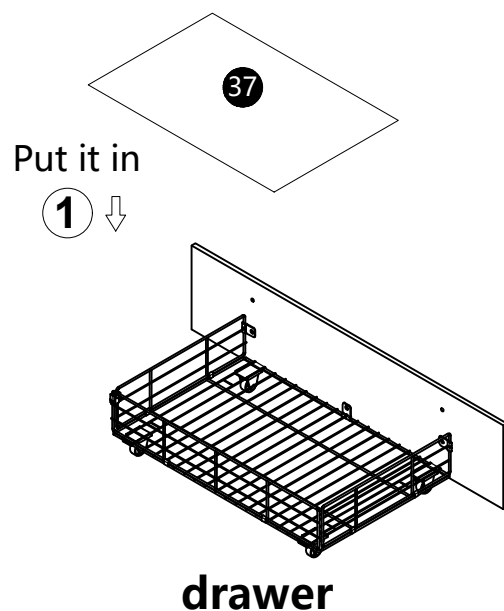

**When pushing into the drawer,
Lift the drawer gently,
Align the screw with the gourd hole
and push in
When pulling out the drawer,
Lift the drawer gently,
Align the screw with the gourd hole,
and then pull it out**

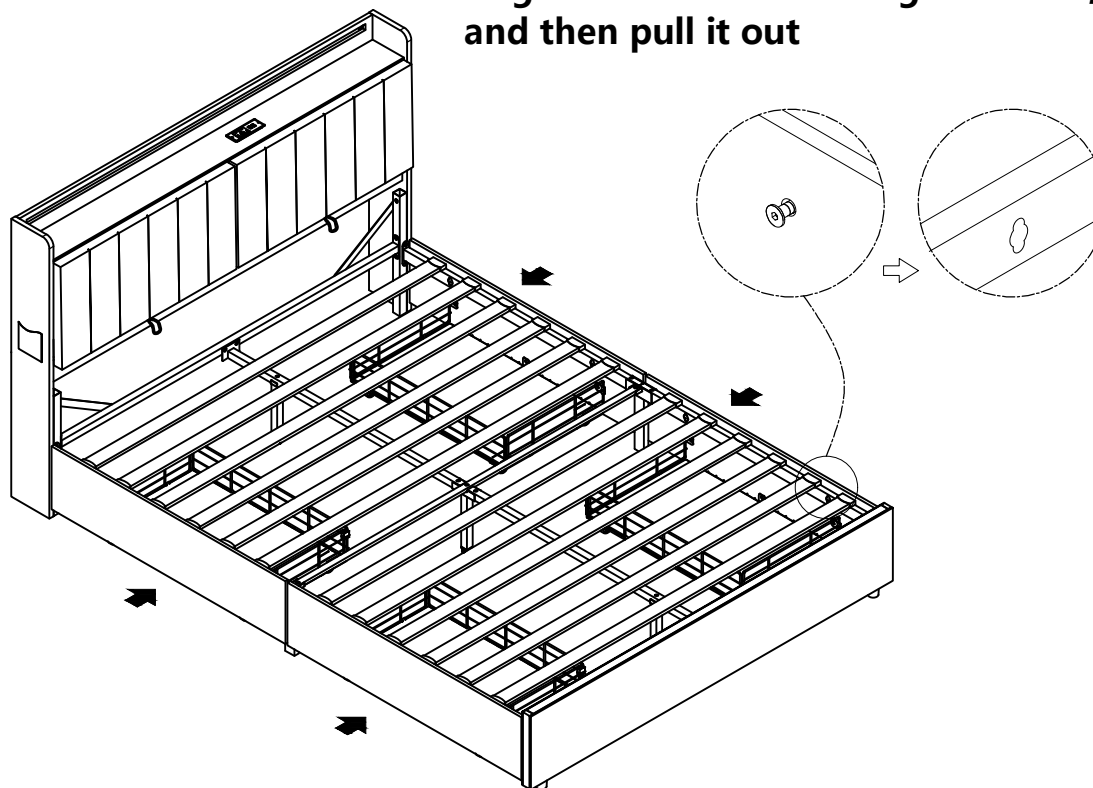

Assembly Instruction of **drawer**

