



Deep Trough Planter Box

Installation Guide

Thank You!

You're only a few steps away from your perfect vegetable garden or elevated planter. We hope you enjoy!

Model# E213612 / E213612G
Dimensions 36" L x 12" W x 21" H

Before You Start

Please read the instructions carefully to familiarize yourself with every detail and step involved. Keep this manual for future reference. Find a suitable space to assemble your new Trough Planter Box.

You need at least 37" x 13" (94 x 33cm) for the finished product. A flat and firm area (like a garage floor or flat yard space) is perfect! The only tool you may need is a rubber mallet.

Important Notes

Small parts are included; we advise you to keep them away from children and pets.

We also suggest having another person help you assemble. Maximum Load Capacity: approximately 4 cu. ft. of soil

★ **Subscribe at www.everbloom-garden.com for extra savings and upgrading information!**



Everbloom-Garden.com

Questions or Comments?

Email us at service@everbloom-garden.com

Parts List

Deep Trough Planter Box - 36" L x 12" W x 21" H

Left Corner
Post
X 2

Top



Bottom


Right Corner
Post
X 2

Top



Bottom

Long
Board
X 4




900mm

Long Support
Board
X 2




900mm

Short
Board A
X 4




240mm

Short
Board B
X 2



240mm

Bottom
Board
X 2

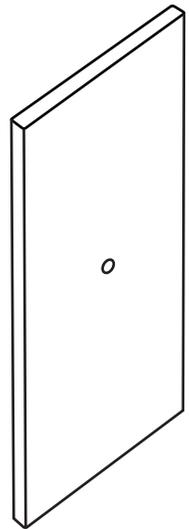

420mm

Post Cap
X 4



+ 2pc
replacement

Garden Bed
Liner
X 1



Assembly

Deep Trough Planter Box - 36" L x 12" W x 21" H


Four depths are available by changing the sequence of the boards and position of the bottom boards, as shown in below images. You can choose according to different needs first.

* For depth of 16.9" and 10" as shown in Image 1, please refer to steps from page 4.

* For depth of 14.4" and 7.5" as shown in Image 2, please refer to steps from page 10.

IMAGE 1

Depth 1 - 16.9" from page 4

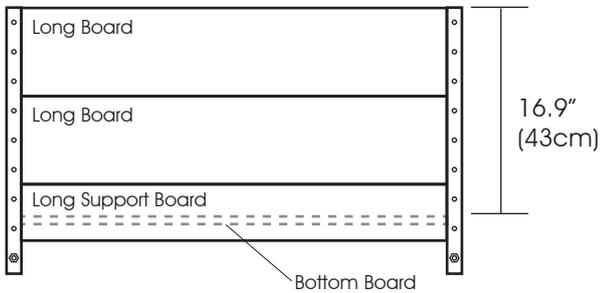

Depth 2 - 10" from page 4



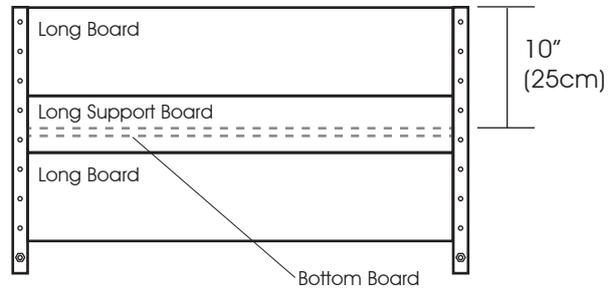


IMAGE 2

Depth 4 - 14.4" from page 10

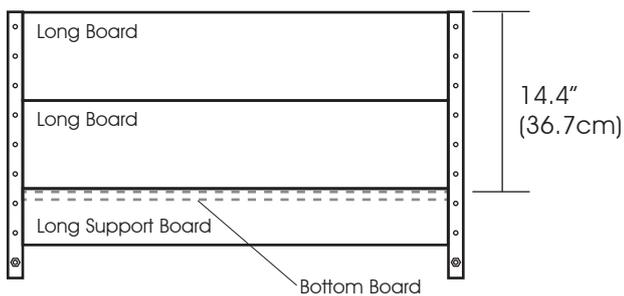

Depth 5 - 7.3" from page 10

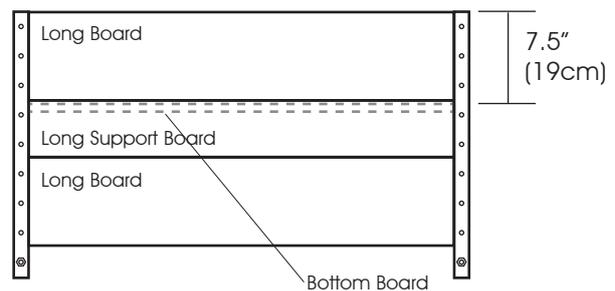

Assembly

Deep Trough Planter Box - 36" L x 12" W x 21" H

For the deepest planting depth of 16.9", please follow steps below.

For depth of 10", the assembly methods are similar, just pay attention to the sequence of the boards and position of the bottom boards, please refer to page 3.

Start by making sure each corner post is oriented correctly, as shown in Image 3. Slide one short board B into the corner brackets from above.

Note: The short boards need to be placed in the inward "U" shape of the brackets, as shown in Image 4.

IMAGE 3





IMAGE 4

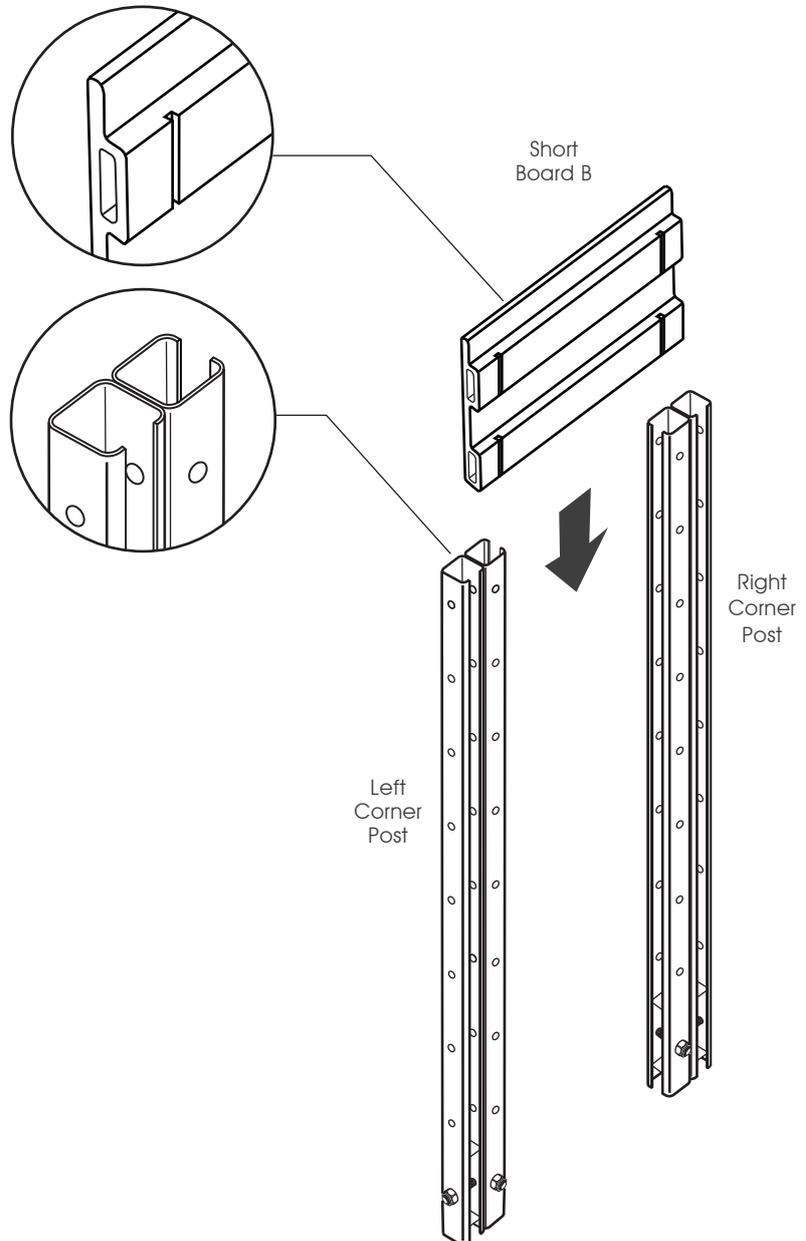


Assembly

Deep Trough Planter Box - 36" L x 12" W x 21" H

Slide another short board B into the other two corner brackets from above, as shown in Image 5.

IMAGE 5

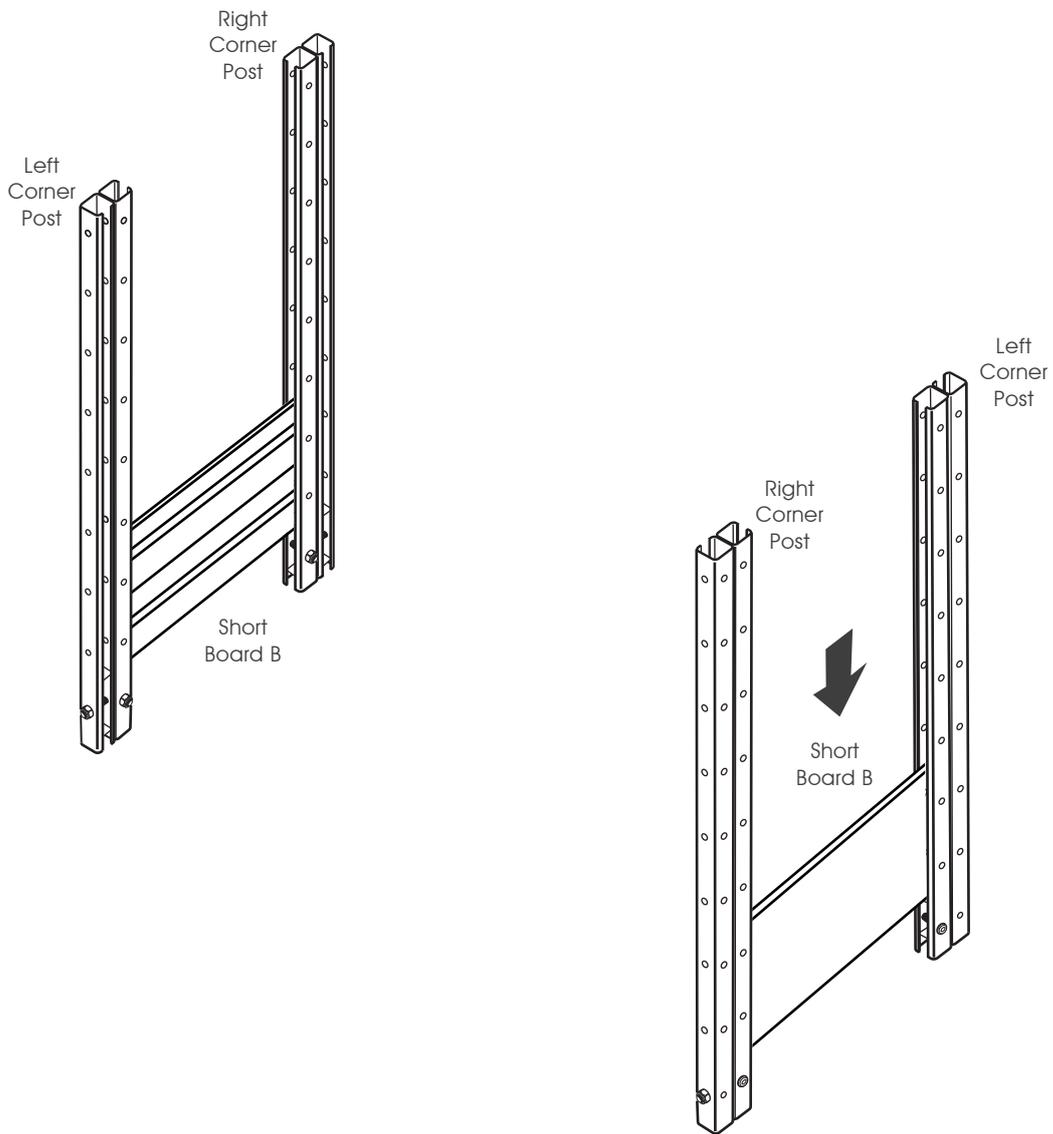


Assembly

Deep Trough Planter Box - 36" L x 12" W x 21" H

With the help of another person holding the 2 assembled parts, slide the 2 long supporting boards into the brackets from above. Make sure that one support board goes straight to the bottom, while the other one stays in the middle of the way (don't push it to the bottom), with the top edge between the 5th and 6th holes of the post.

IMAGE 6

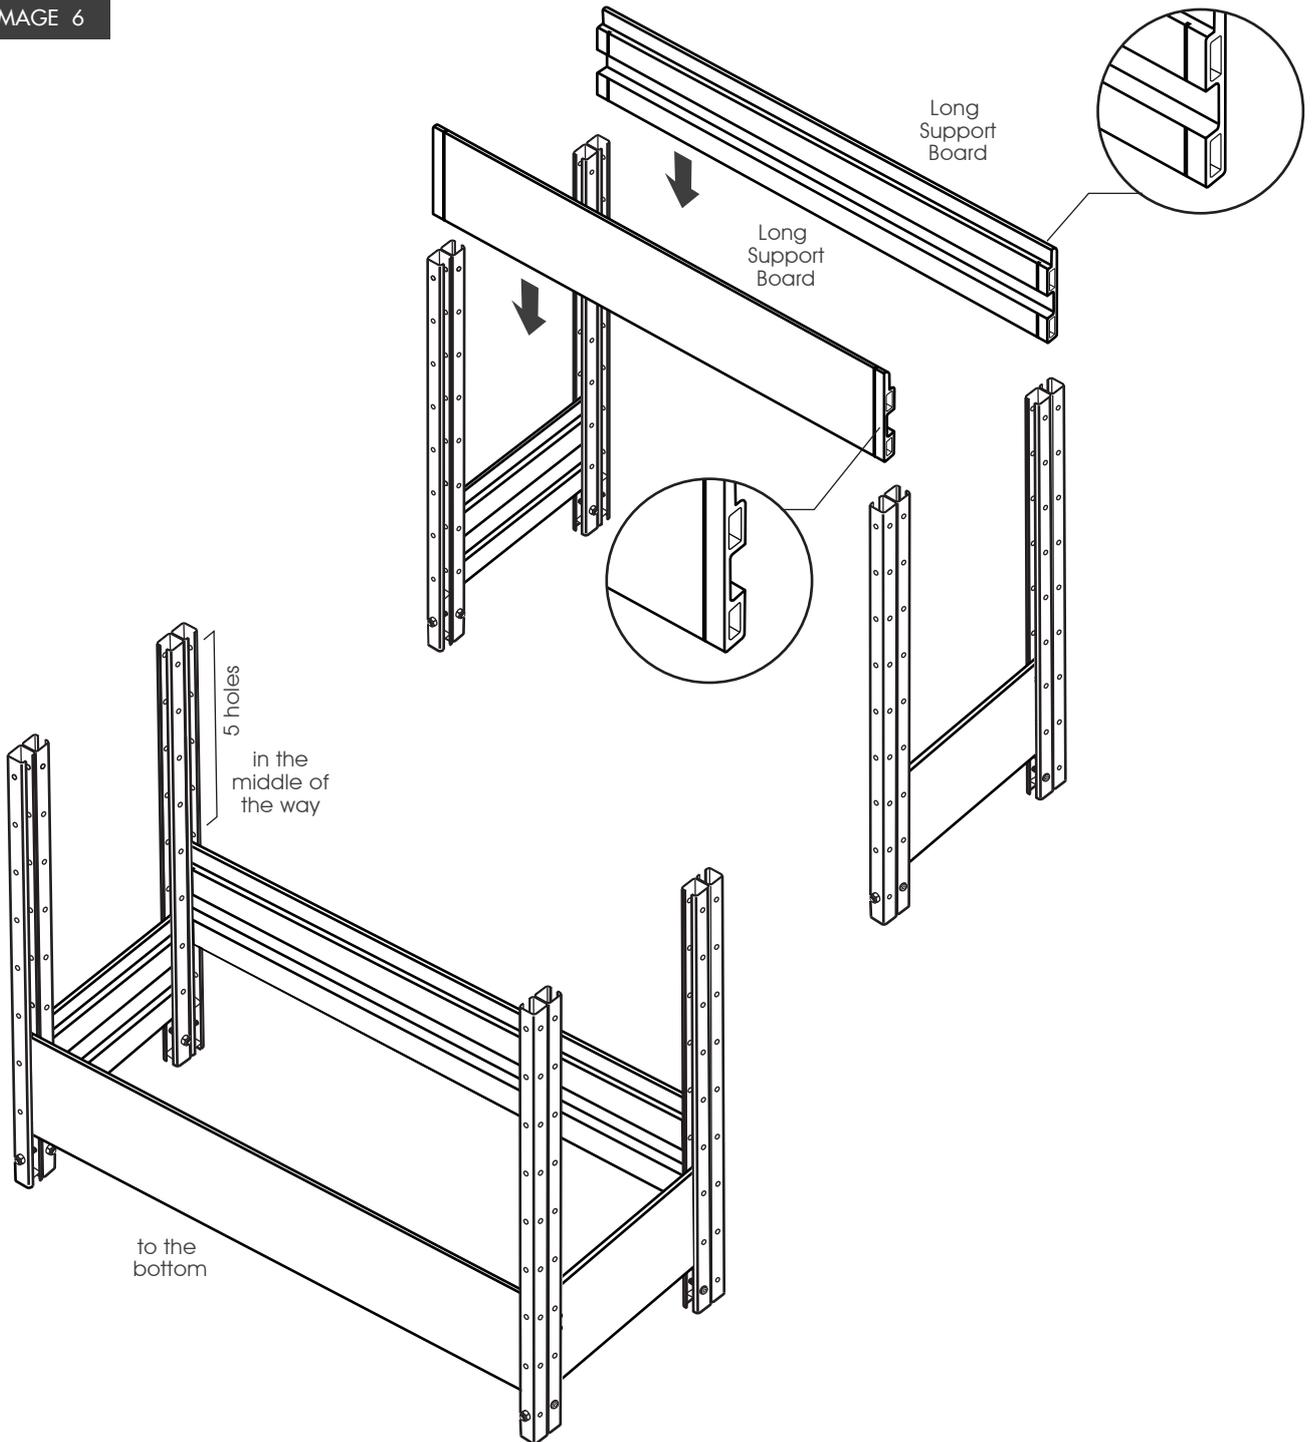


Assembly

Deep Trough Planter Box - 36" L x 12" W x 21" H

Put the bottom boards on lower slots of long support boards. Make sure the 2 ends of these bottom boards go into the lower slots and rest in them with enough contact as shown in Image 7. Adjust the height of the higher long support board slightly to hold these bottom boards if necessary.

IMAGE 7

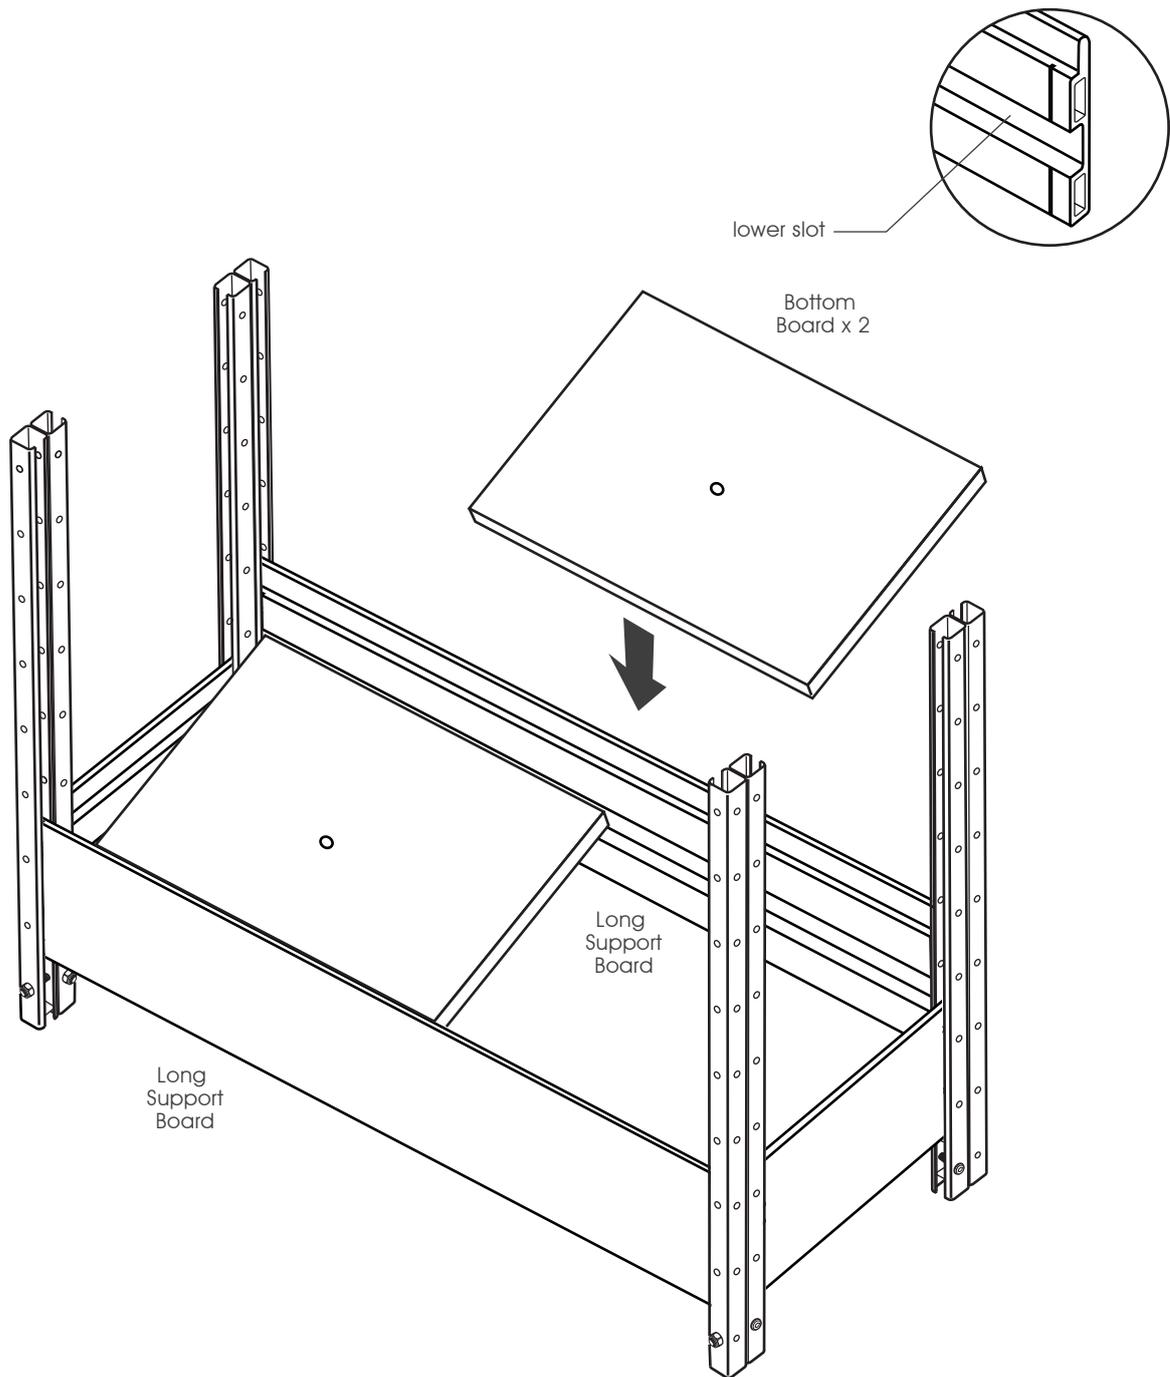


Assembly

Deep Trough Planter Box - 36" L x 12" W x 21" H

Push down the higher long support board to the bottom, as shown in Image 8.

IMAGE 8

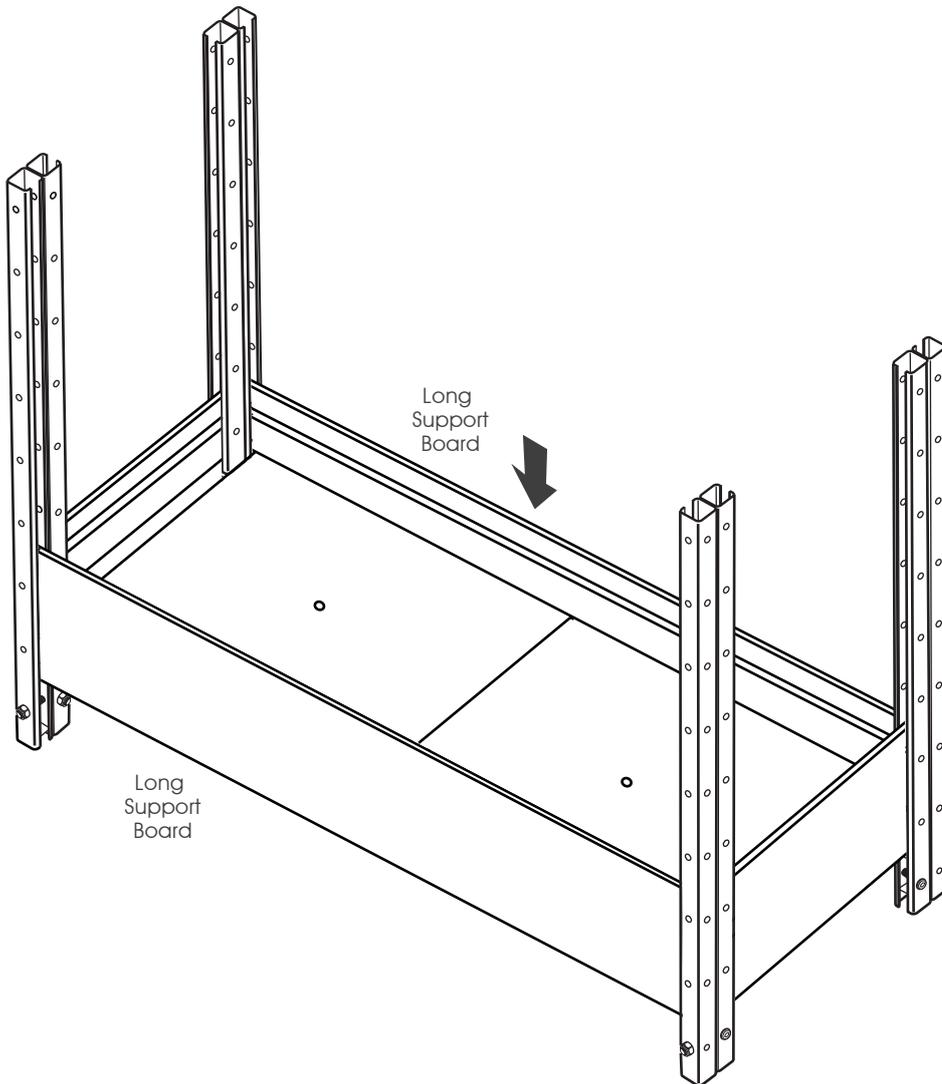


Assembly

Deep Trough Planter Box - 36" L x 12" W x 21" H

Slide the remaining boards into place, as shown in Image 9. Now you get an trough planter box with 16.9" planting depth. Then, go to page 15, and follow the steps afterwards.

Note: If you want to add trellis kit onto this bed, please assemble the extension connectors **before** this step, to avoid disassembling the boards later.

IMAGE 9

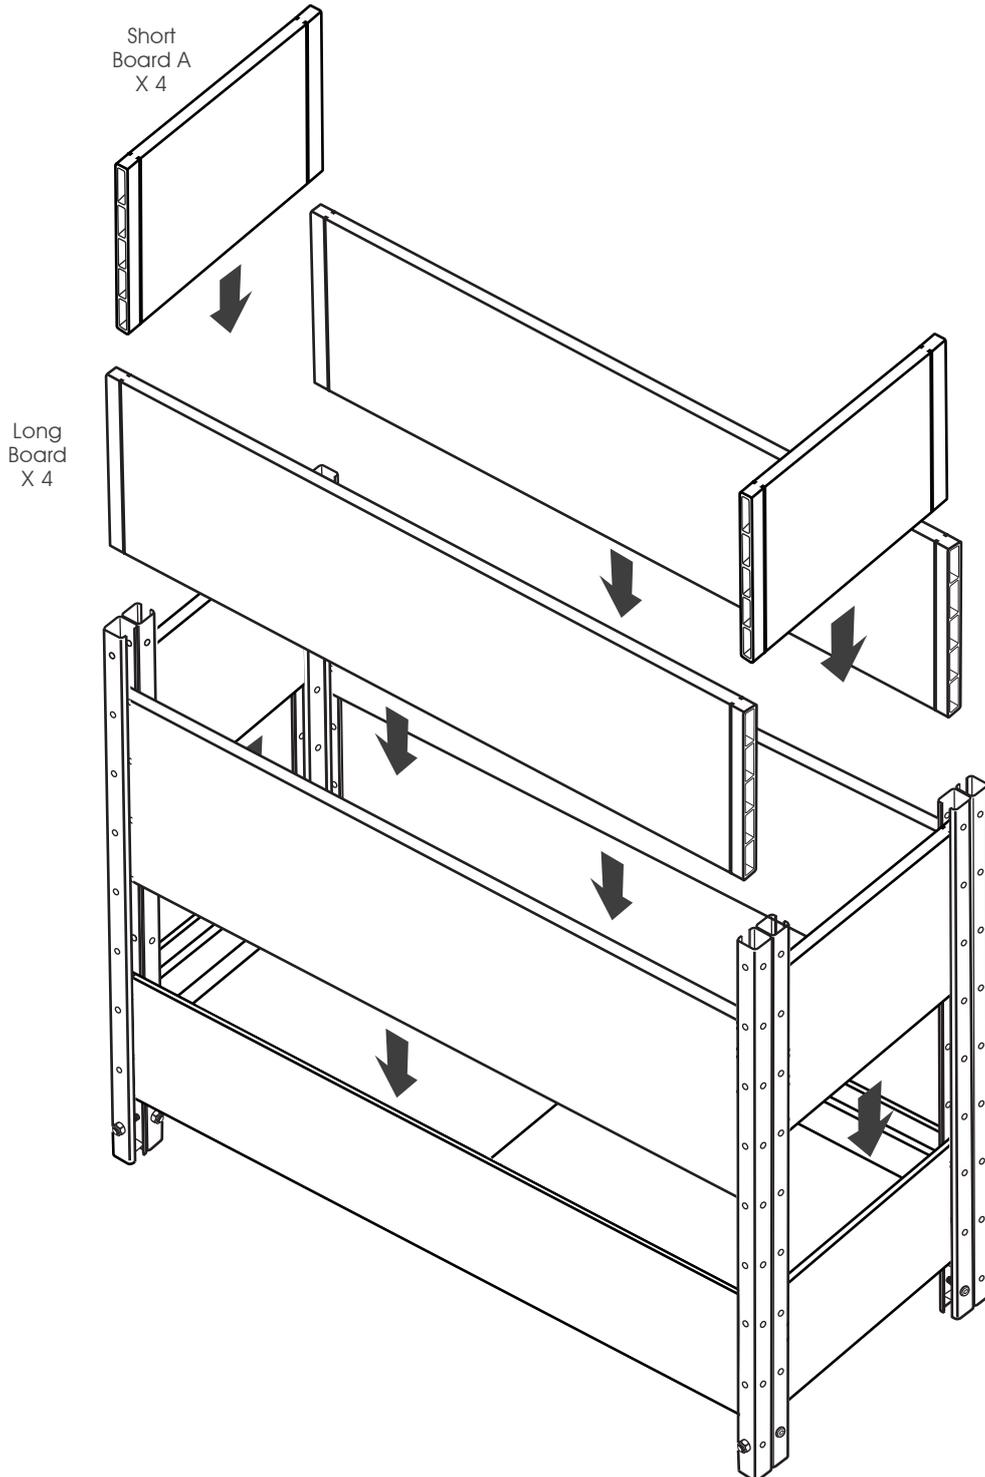

Assembly

Deep Trough Planter Box - 36" L x 12" W x 21" H

For the planting depth of 14.4", please follow steps below.

For depth of 7.5", the assembly methods are similar, just pay attention to the sequence of the boards and position of the bottom boards, please refer to page 3.

Start by making sure each corner post is oriented correctly, as shown in Image 3a. Slide one short board B into the corner brackets from above.

Note: The short boards need to be placed in the inward "U" shape of the brackets, as shown in Image 4a.

IMAGE 3a





IMAGE 4a

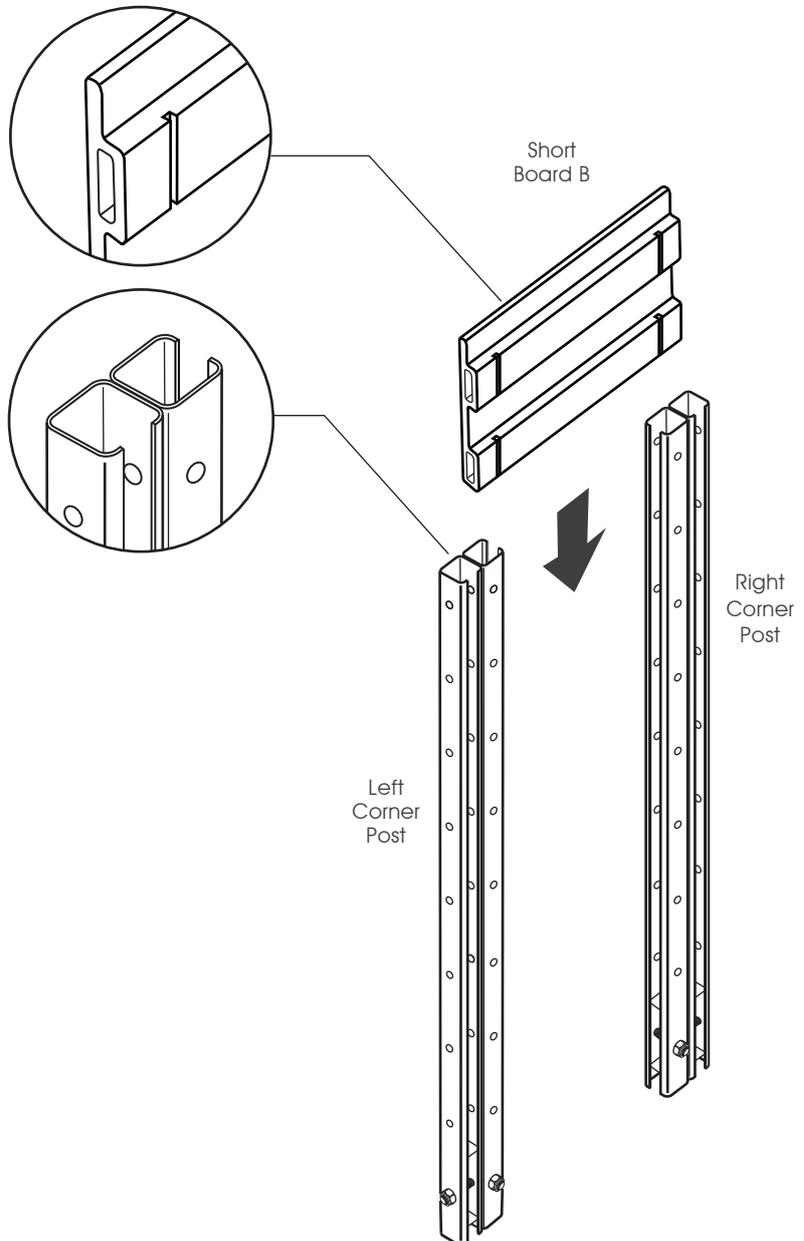


Assembly

Deep Trough Planter Box - 36" L x 12" W x 21" H

Slide another short board B into the other two corner brackets from above, as shown in Image 5a.

IMAGE 5a

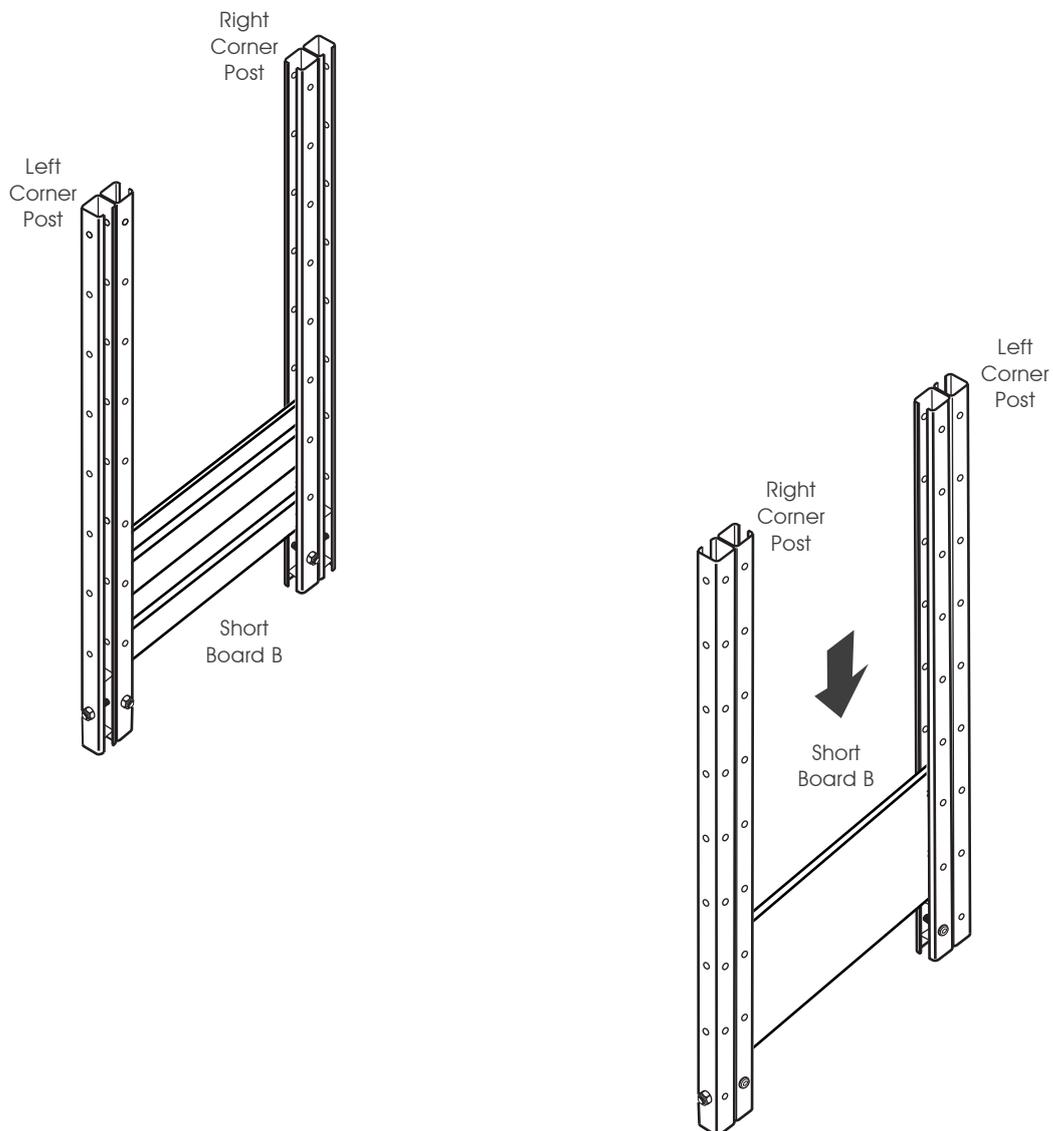


Assembly

Deep Trough Planter Box - 36" L x 12" W x 21" H

With the help of another person holding the 2 assembled parts, slide the 2 long support boards into the brackets from above to the bottom, as shown in Image 6a.

IMAGE 6a

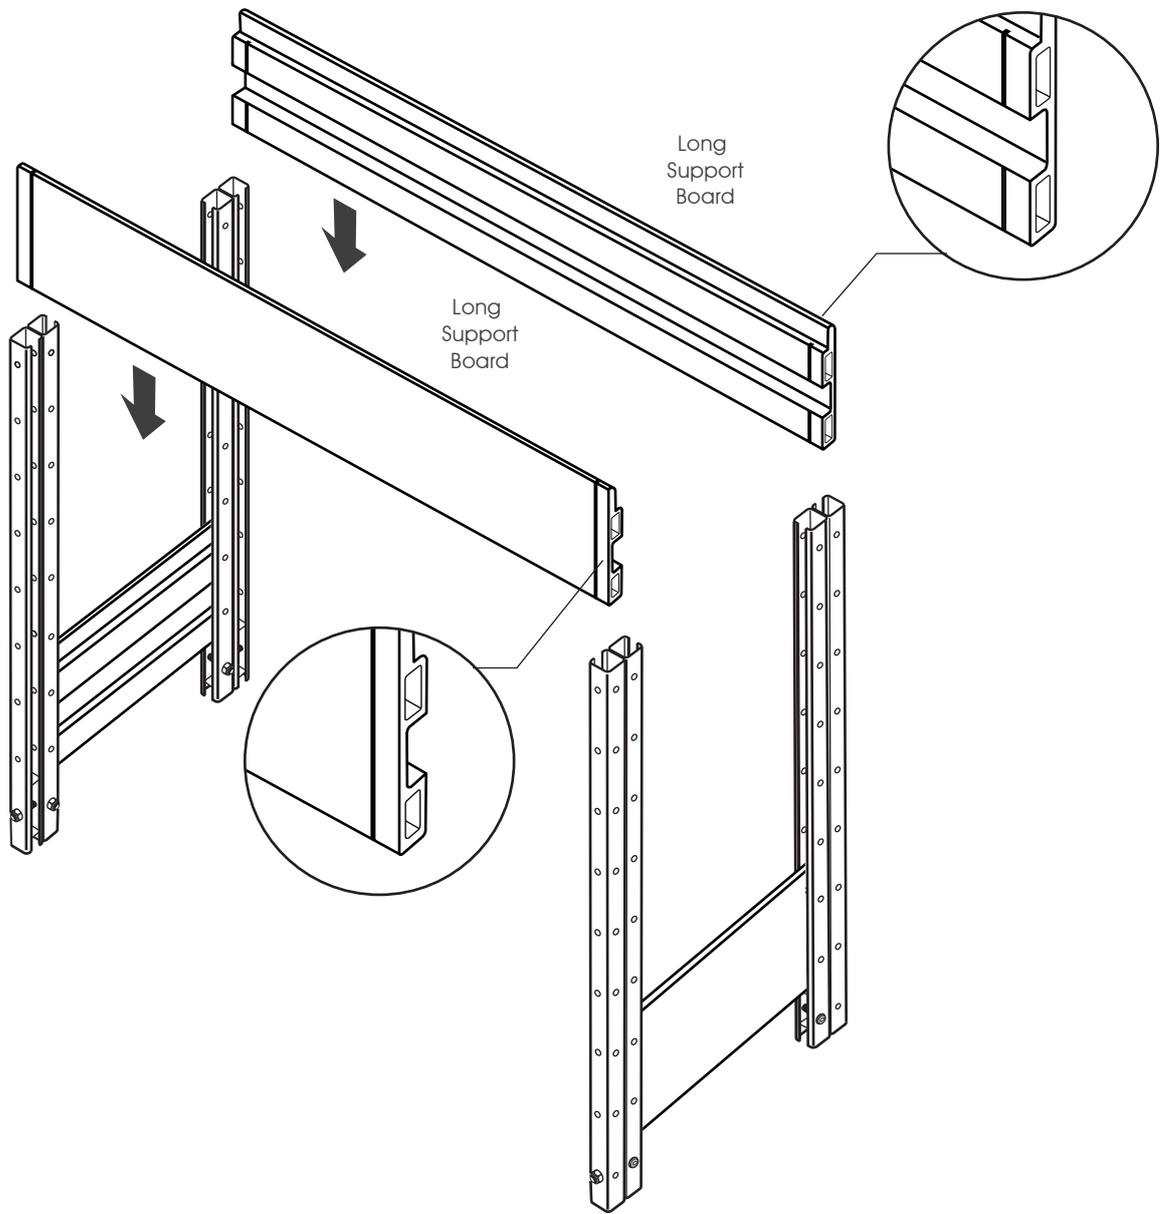


Assembly

Deep Trough Planter Box - 36" L x 12" W x 21" H

Put the bottom boards on the long support boards, as shown in Image 7a.

IMAGE 7a

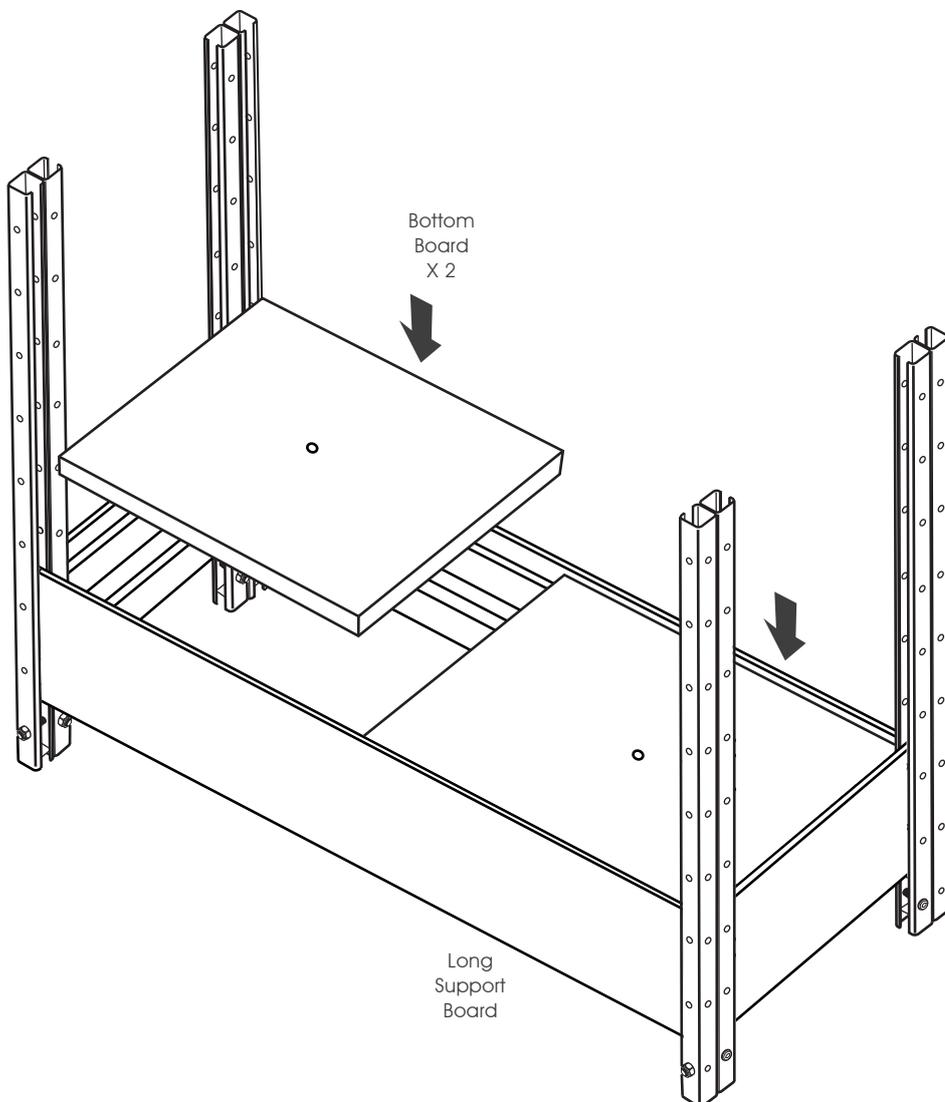


Assembly

Deep Trough Planter Box - 36" L x 12" W x 21" H

Slide the remaining boards into place, as shown in Image 8a. Now you get an trough planter box with 14.4" planting depth. Then, go to page 15, and follow the steps afterwards.

Note: If you want to add trellis kit onto this bed, please assemble the extension connectors **before** this step, to avoid disassembling the boards later.

IMAGE 8a

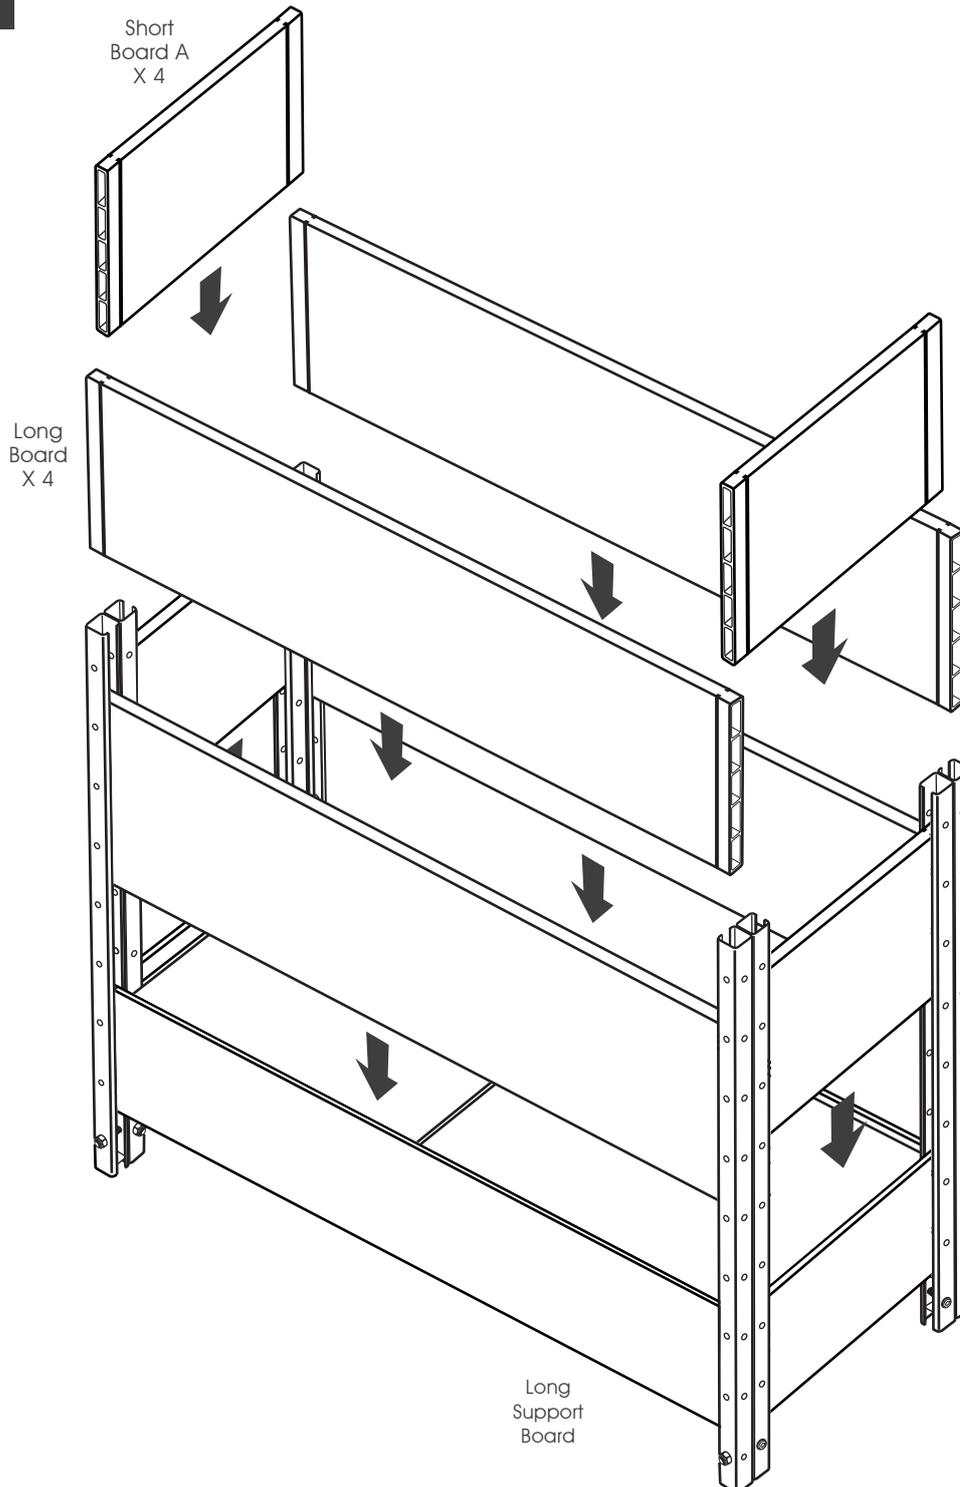


Assembly

Deep Trough Planter Box - 36" L x 12" W x 21" H

If necessary, use your rubber mallet to ensure the boards are tightly in place. Cover the brackets with the 4 end caps, as shown in Image 10.

IMAGE 10

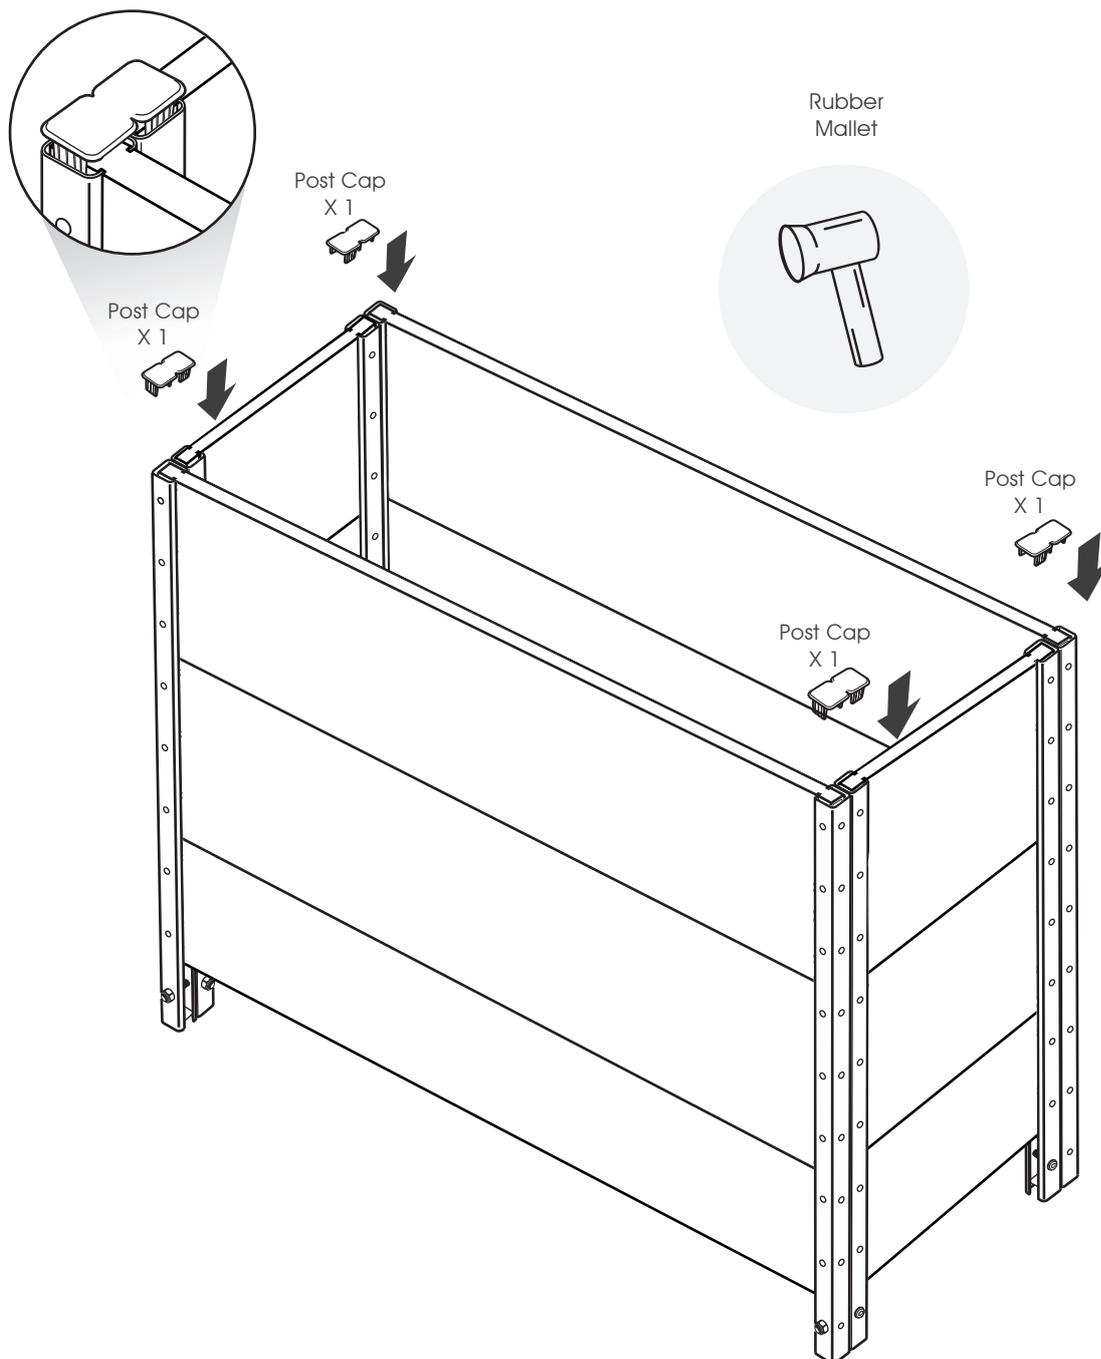

Assembly

Deep Trough Planter Box - 36" L x 12" W x 21" H

Unfold the liner and cover the bottom of the Planter Box, as shown in Image 11 and Image 12.

IMAGE 11


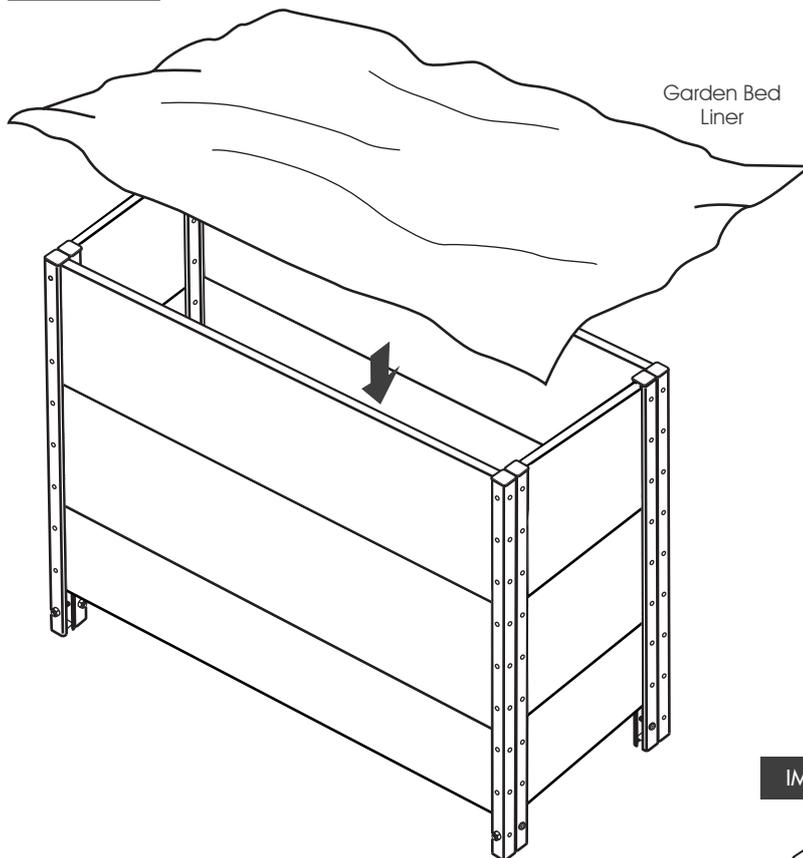


IMAGE 12

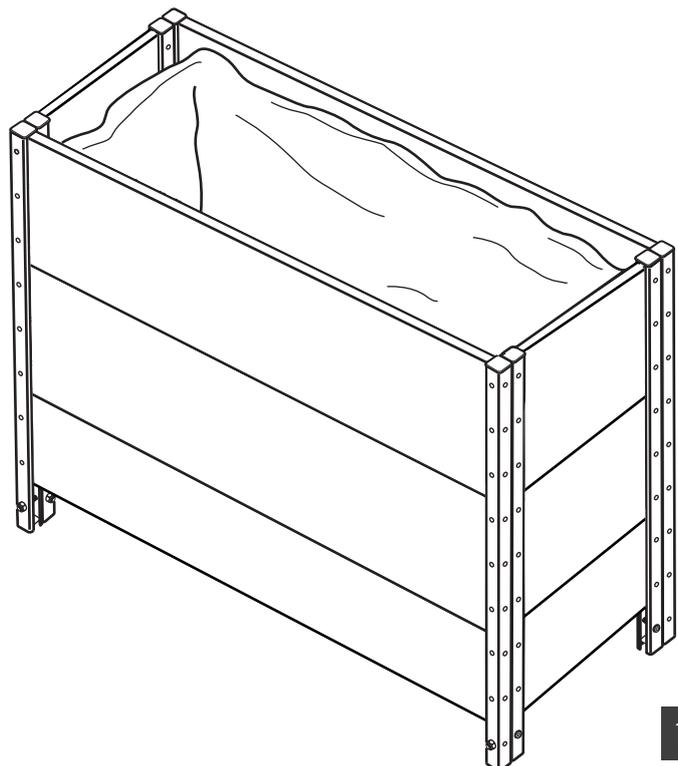

Note

Deep Trough Planter Box - 36" L x 12" W x 21" H

Sometimes there might be a misalignment of the Corner Posts as shown in Image 13 and Image 14, which may result in difficulty of sliding boards into the brackets. Please adjust them to the right position so that they are parallel to each other, and perpendicular to the ground.

IMAGE 13

Assembling Problem 1


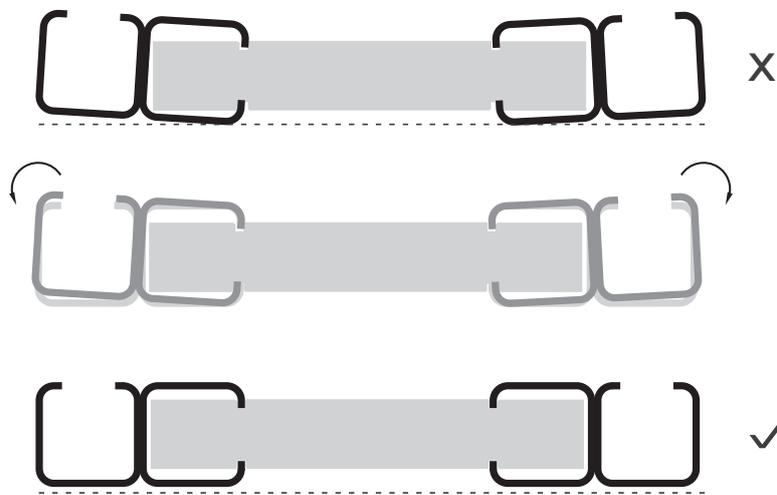


IMAGE 14

Assembling Problem 2

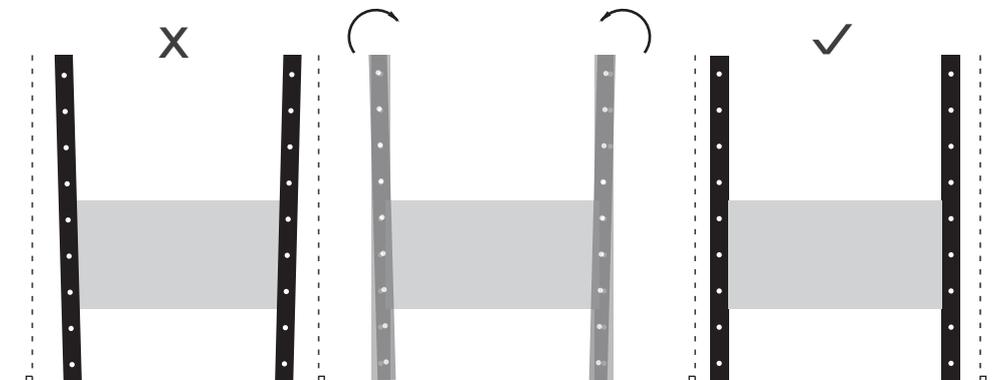

Bloom On.

Everbloom-Garden.com

US Patent Pending

★ Subscribe at www.everbloom-garden.com for
extra savings and upgrading information!

Distributed by:
Dynaforge Trading LLC
St. Paul, MN55101
Email: service@everbloom-garden.com

4PK 2" Caster Wheels

Installation Guide

Parts Includes:

- 1. 2" Swivel Caster Wheelx 4
- 2. Stainless Steel Bolt x 4
- 3. Stainless Steel Nylon Lock Nutx 4
- 4. 5mm hex keyx 1
- 5. 13mm nut driverx 1

Installation 1

Install on Everbloom


E281719 Elevated Planter Box

E283612 Elevated Trough Planter Box

Before installation the wheels, carefully flip over the garden bed so that it lays flat with the long side facing towards the sky.



1. Insert the wheel

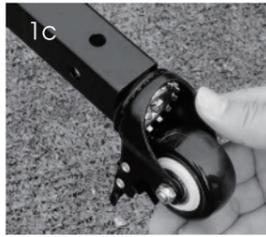

Pay attention to the direction of wheel and the corner post.

2. Insert the bolt, Be sure it goes through the support bracket inside the post



3. Turn on the nylon lock nut and tighten them with hex key and nut driver



4. Install the lower wheel



5. Assemble the remaining wheels using the same method. Attn: The direction of each wheel aligns with the corner posts.



6. After installing all wheels, carefully flip over the Planter Box. Then, you get a mobile planter box.

Installation 2

Install on Everbloom

E213612 Deep Trough Planter Box /

E211719 Corner Stone Planter Box /

E144519 Deskside Planter Box /

E143612 Trough Planter

Before installation the wheels, carefully flip over the garden bed so that it lays flat with the long side (or short side of post) pointing towards the sky.



1. Remove bolts and nuts on the post bracket with hex key and nut driver and take out one support bracket, as shown in Pic. 1a and Pic.1b.

Note:

Please pay attention to the position of the support bracket that need to be taken out.



2. Insert the wheel



3. Insert the bolt



4. Turn on the nylon lock nut and fasten it



5. Insert another bolt in the pack from side to side. Turn on the nut and fasten it. Be sure it goes through the support brack inside the post.



6. Take off the bolts and nuts on post brackets on the other side, and insert the wheel. Fix it with bolts and nuts.



7. Flip over the garden bed, then install another two wheels following the steps above.



8. Flip over the bed again so it stands upright

