



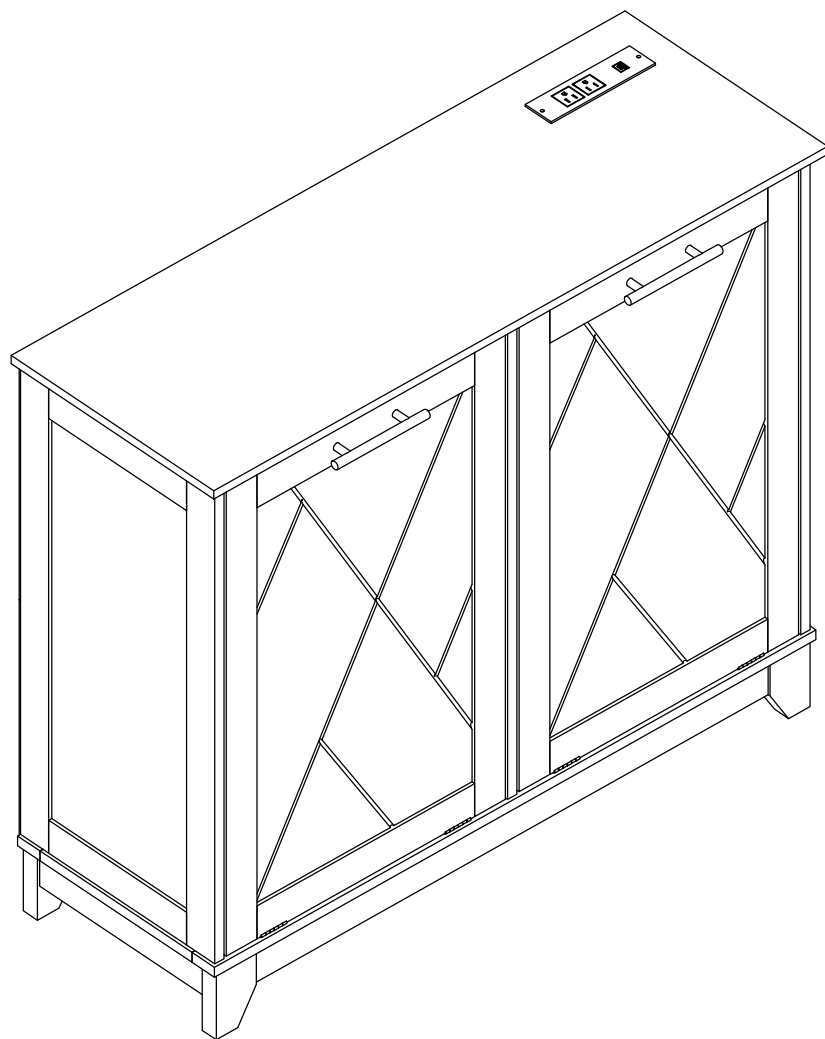

Before You Start

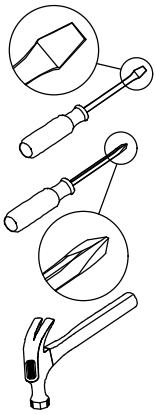

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification


Not actual size

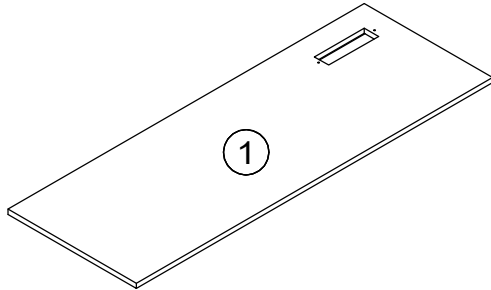


DESKTOP
Qty:1

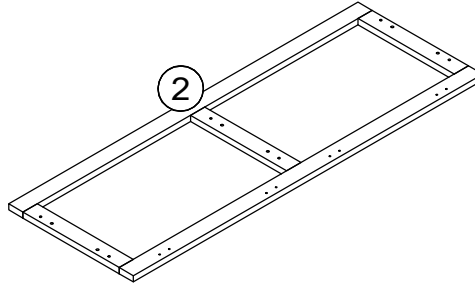


MOTHERBOARD
Qty:1




LEFT PANEL
Qty:1




RIGHT PANEL
Qty:1

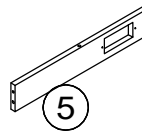


UPPER HORIZONTAL BAR
Qty:1

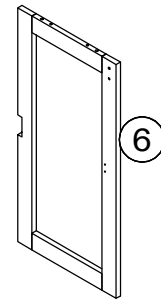

THE VERTICAL PLATE IN THE
MIDDLE
Qty:1

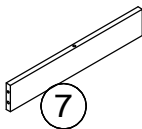


UPPER HORIZONTAL BAR
Qty:1

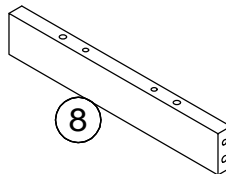


LEFT AND RIGHT STANDING
WATER HORIZONTAL BARS
Qty:2




STANDING WATER
WOOD FOOT 1
Qty:2



STANDING WATER
WOOD FOOT 2
Qty:2

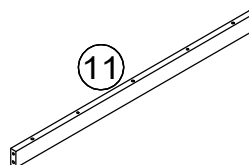


FRONT AND REAR STANDING
WATER HORIZONTAL BARS
Qty:2

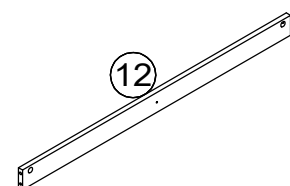


MIDDLE AND REAR BARS
Qty:1

Board Identification


Not actual size

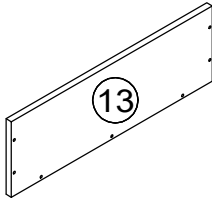


DRAWER BACK PANEL
Qty:2

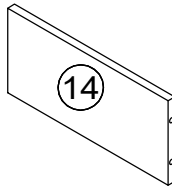


DRAWER LEFT PANEL
Qty:2

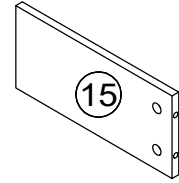

RIGHT PANEL OF
DRAWER
Qty:2

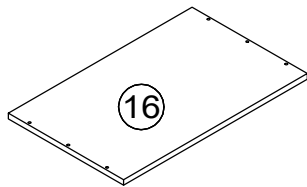


DRAWER BOTTOM
PANEL
Qty:2

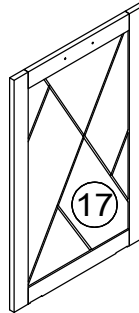


DRAWER PANEL
Qty:2



WOOD FOOT
Qty:1

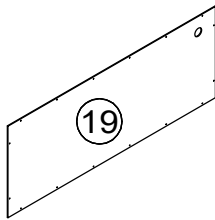


BACK PLATE
Qty:1

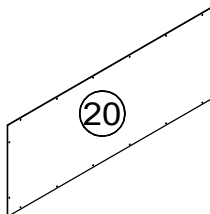


BACK PLATE
Qty:1


Part List

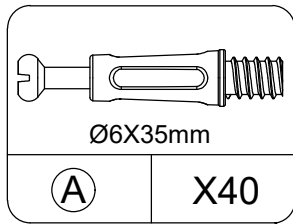


CAM BOLT
spare:2

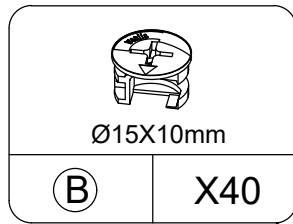


CAM LOCK
spare:2

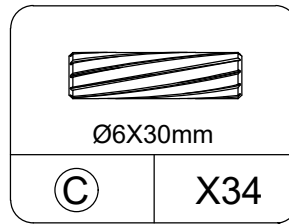


WOOD DOWEL
spare:2

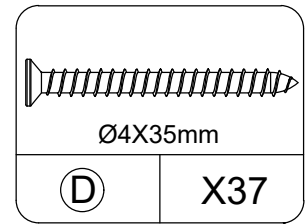


SCREW
spare:2

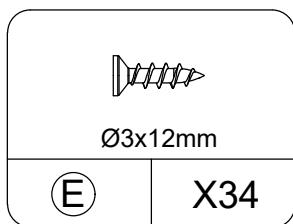


SCREW
spare:2

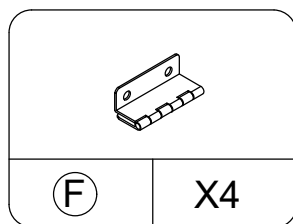


4-HOLE 3-PAGE HINGE

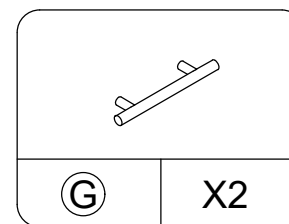


HANDLE

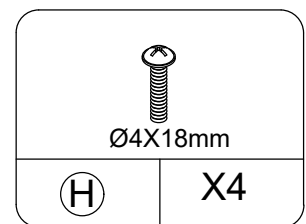


SCREW

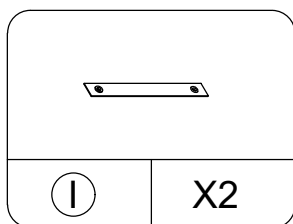


ANTI-INVERTED
STRIPS

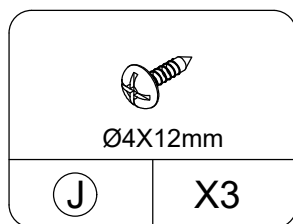


SCREW

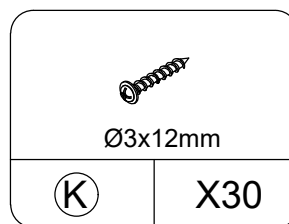


SCREW

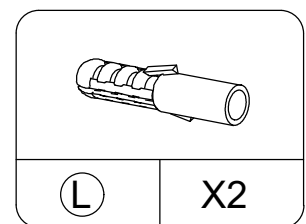


SLIDE EXPANSION BOLTS

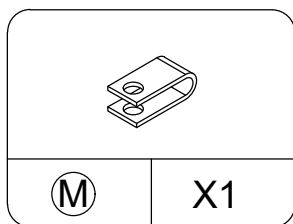


WIRE BUCKLE

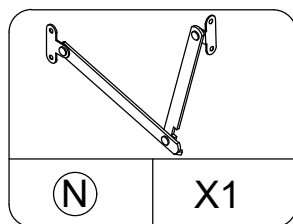


METAL PULL RODS

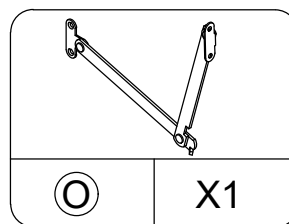


DECONTAMINATION

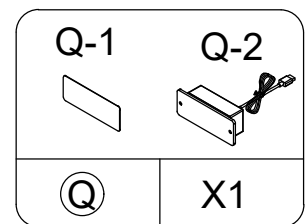


DECONTAMINATION

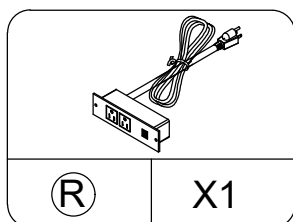

ELECTRICAL OUTLET

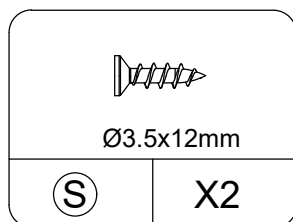

SCREW

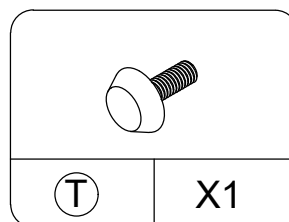


ADJUSTABLE FOOT

Part List


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


1

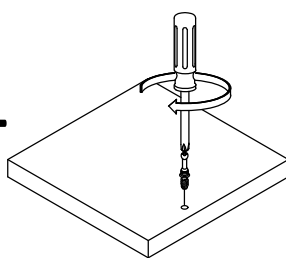

2

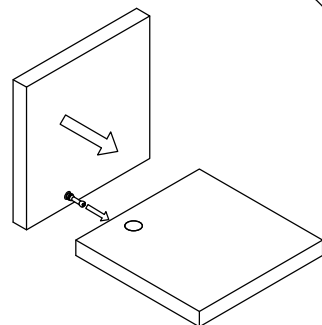


3

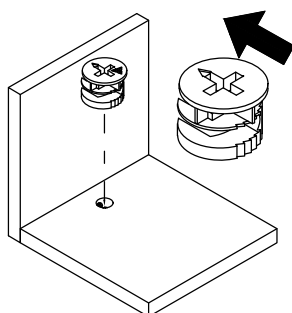


The opening must point toward the edge of the board

4

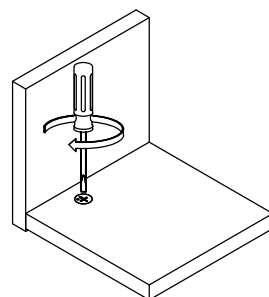


Board Identification


Not actual size

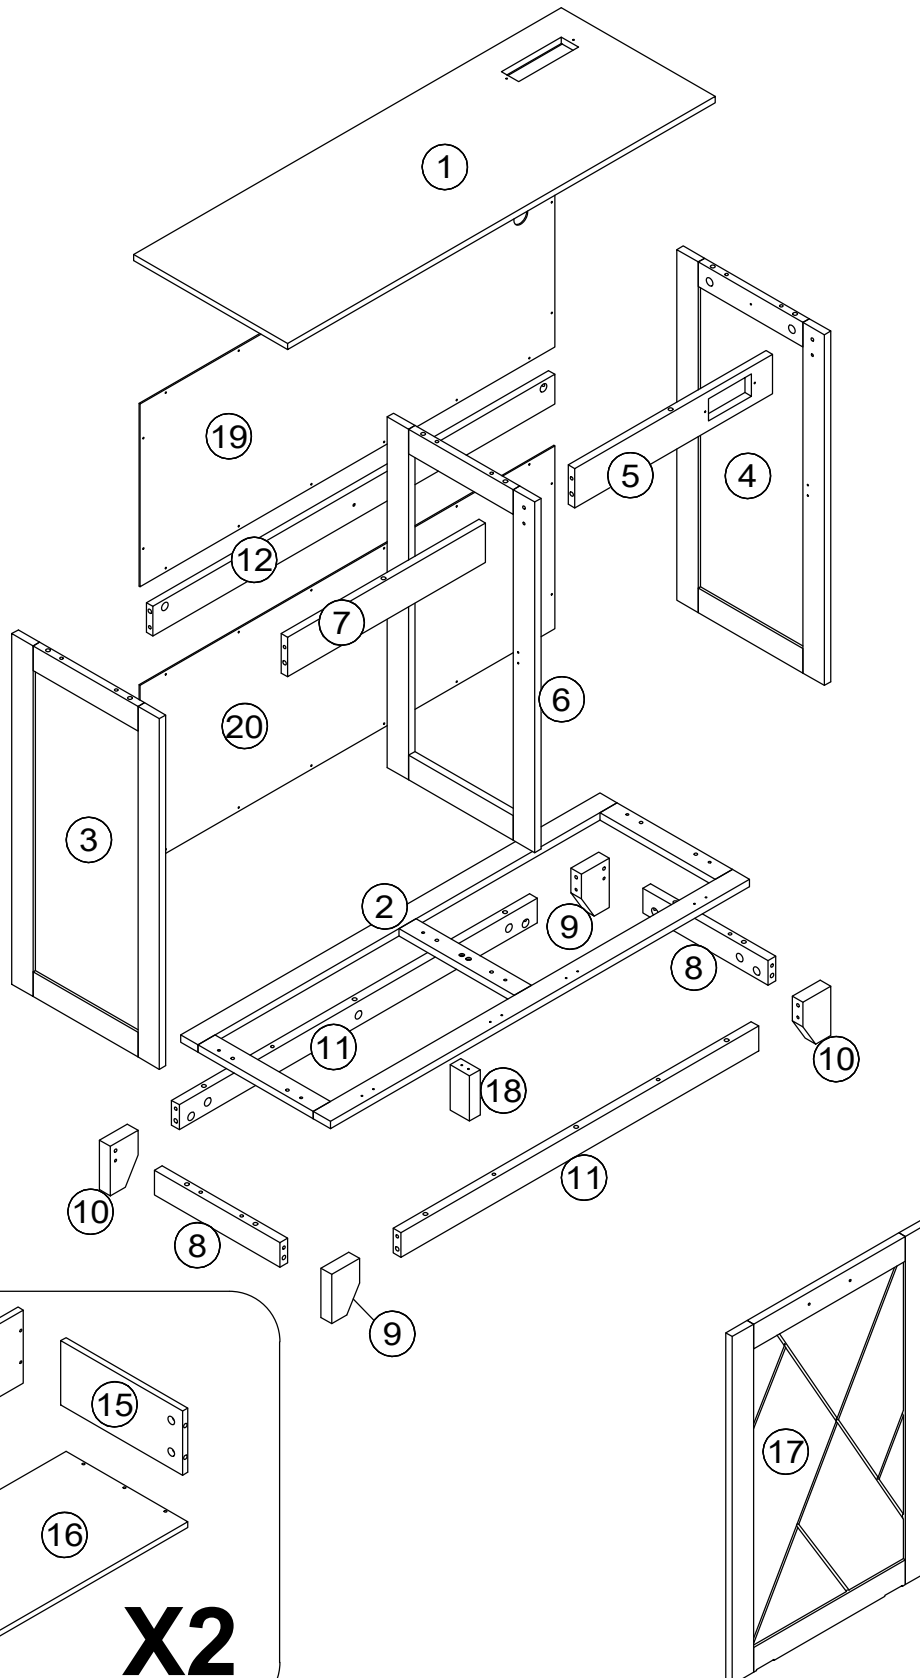









STEP1

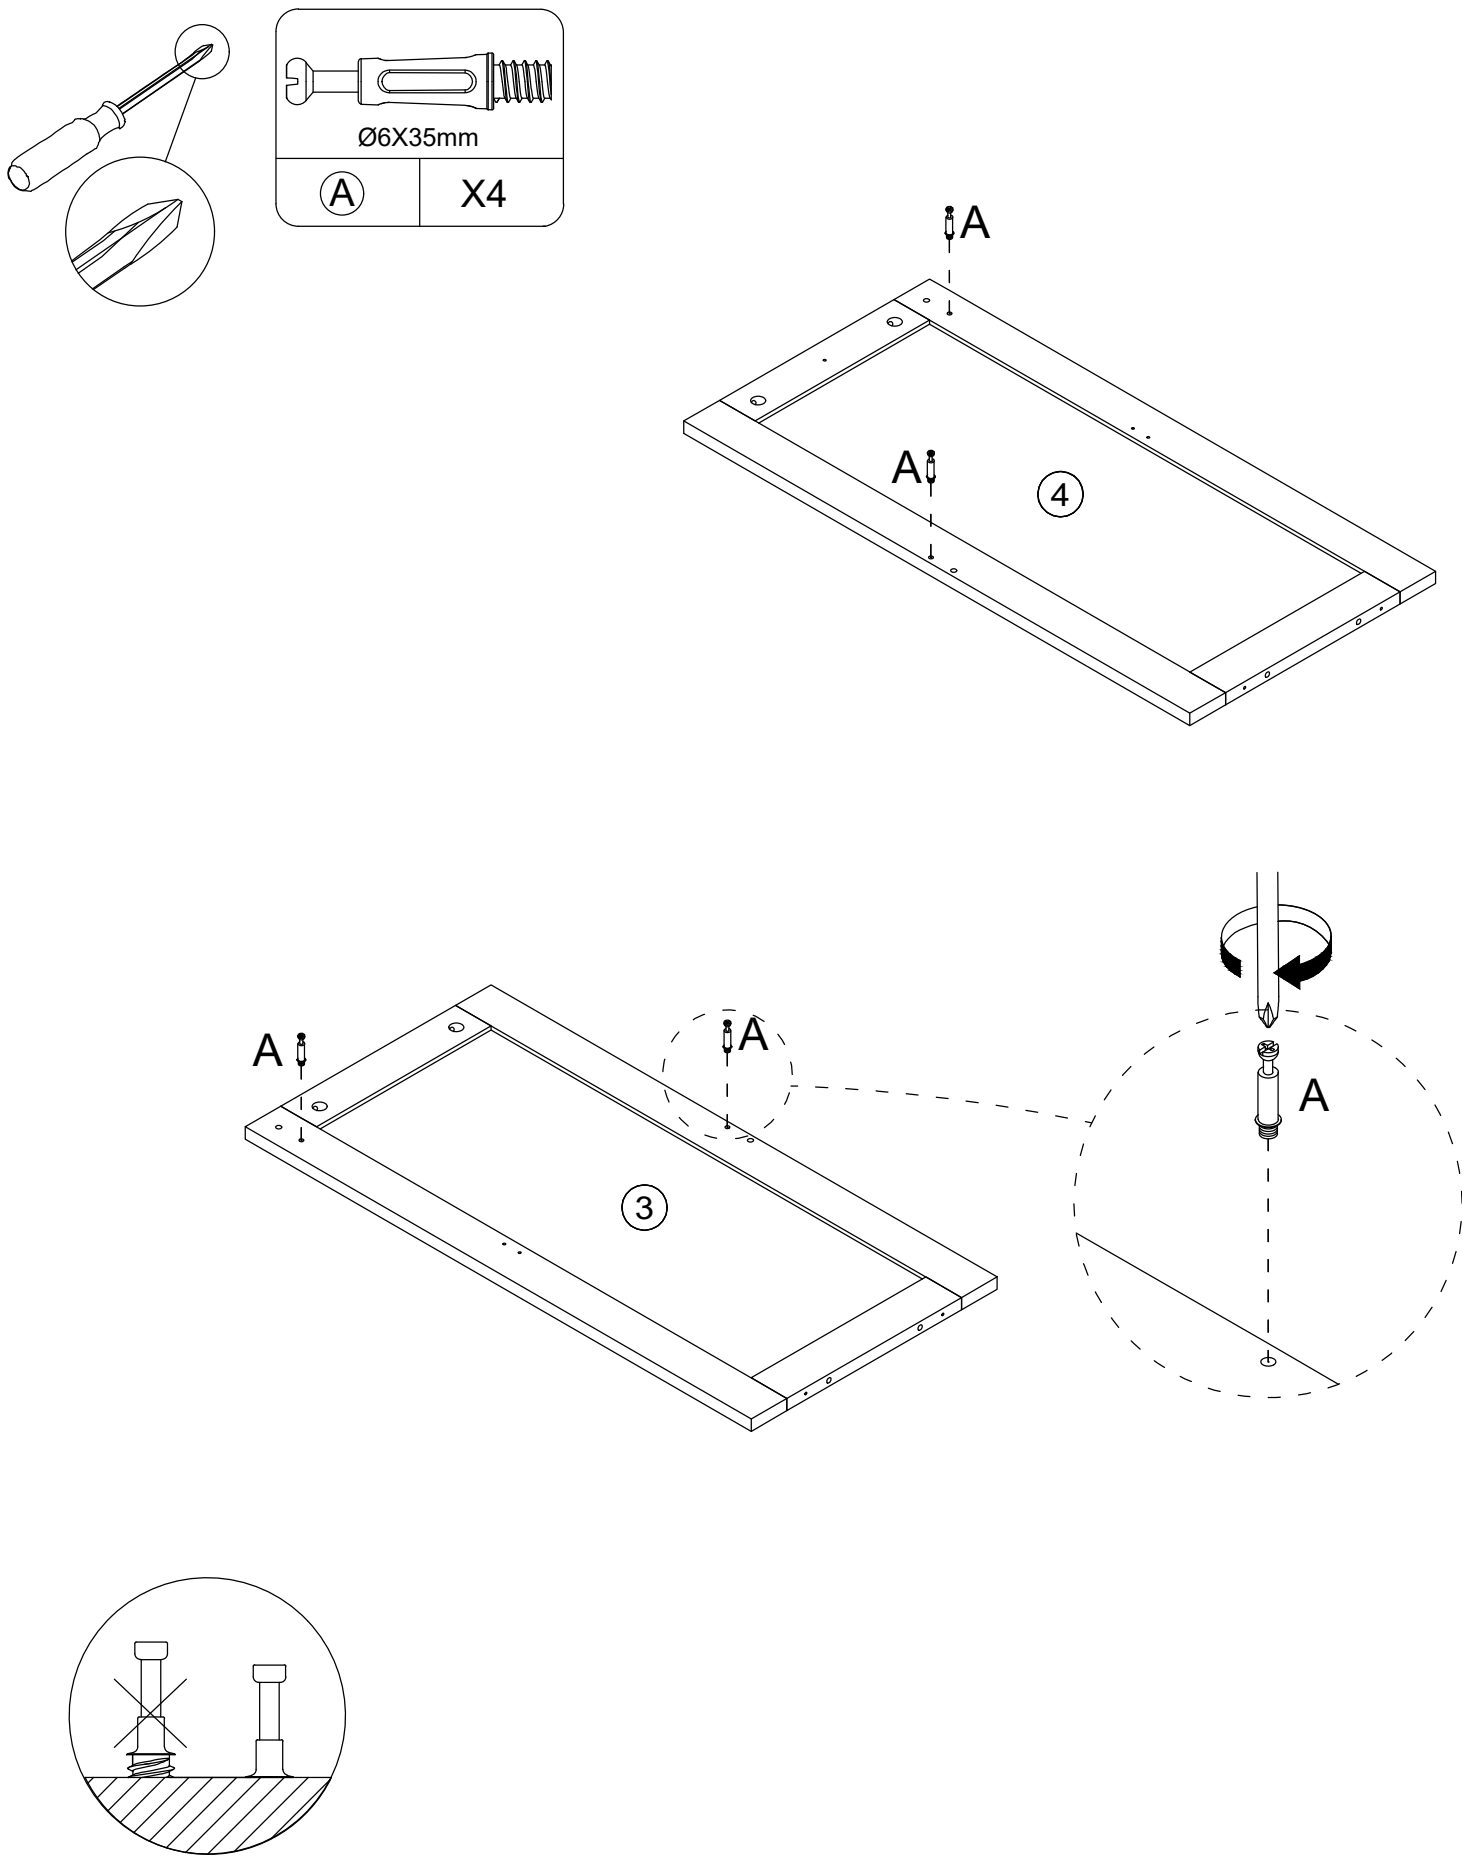

STEP2







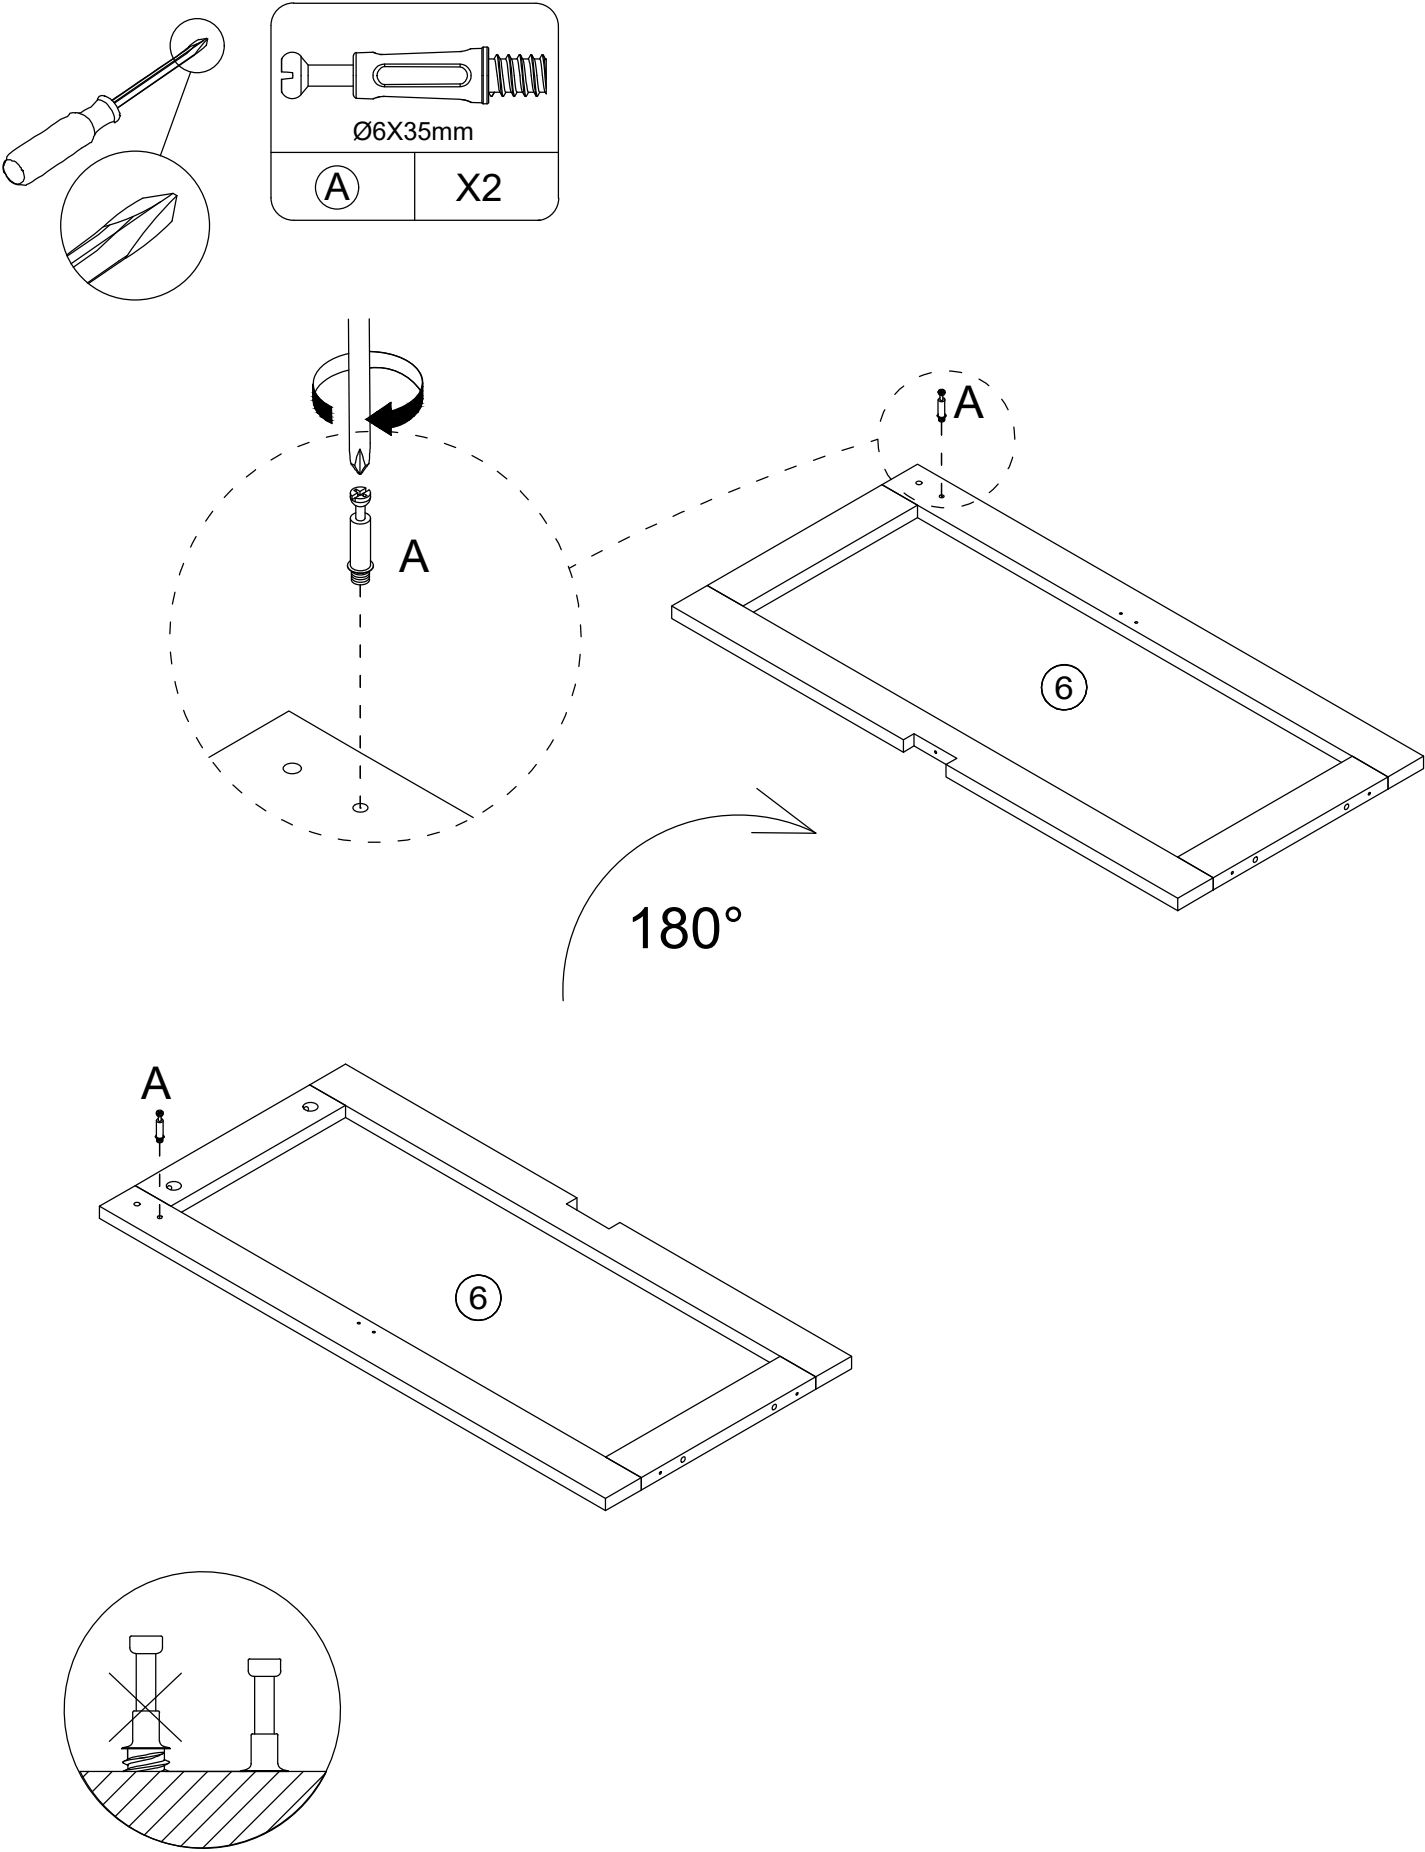


STEP3

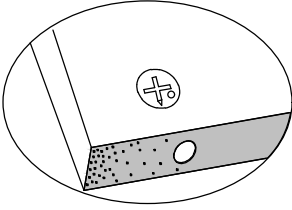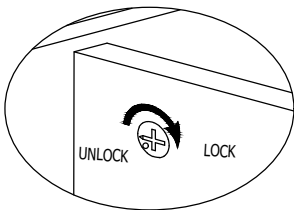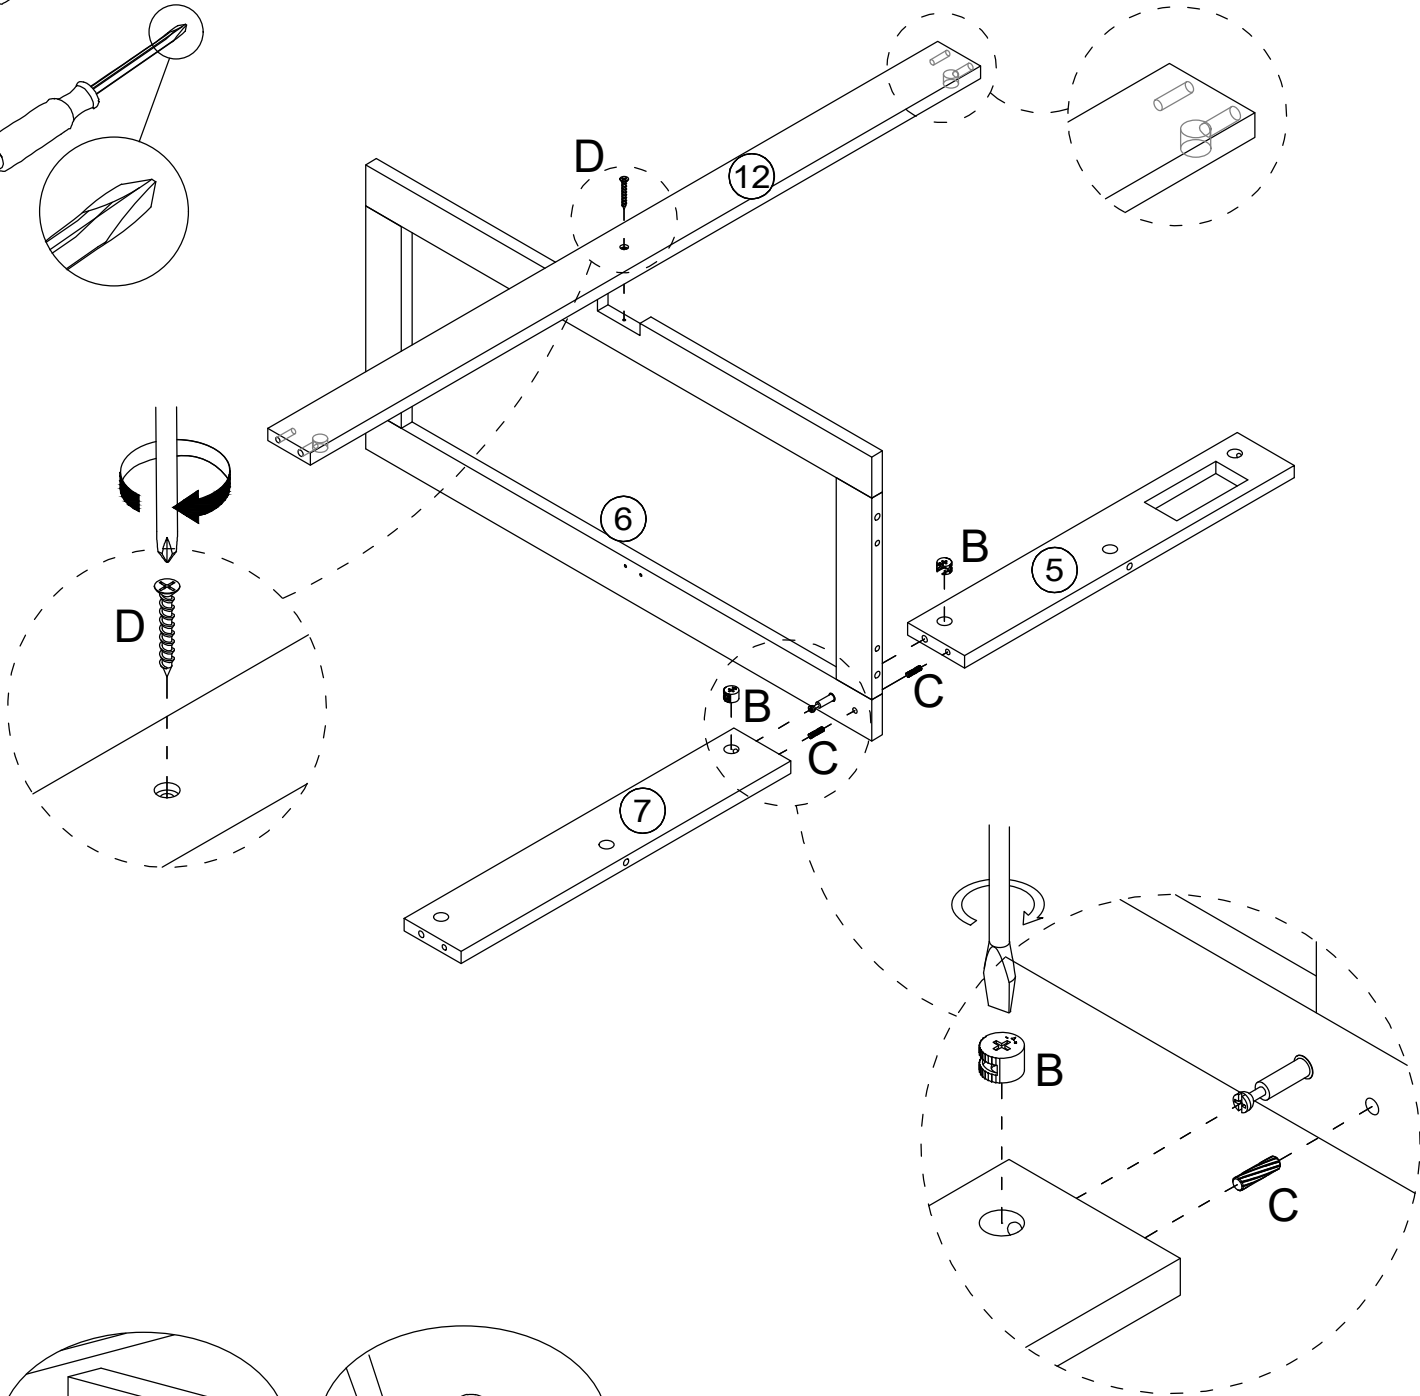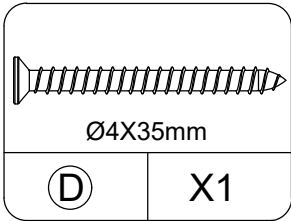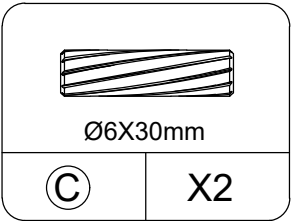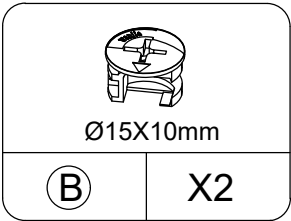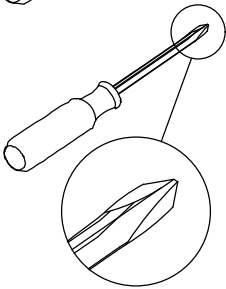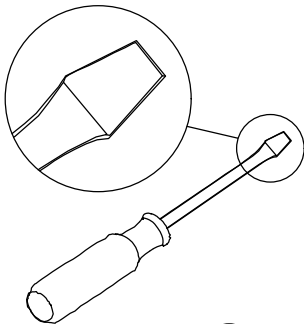






Proper orientation of CAM LOCK

STEP4

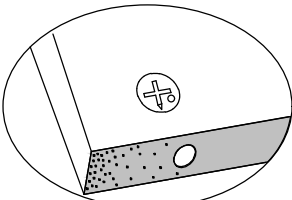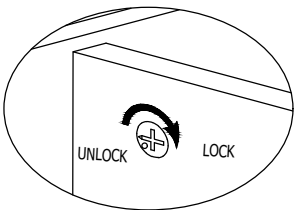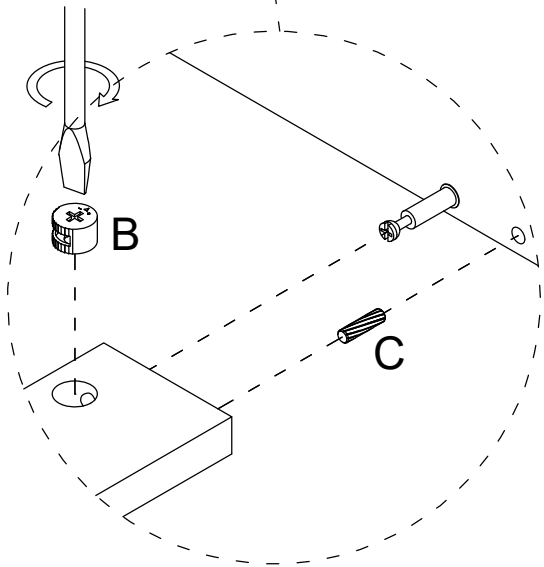
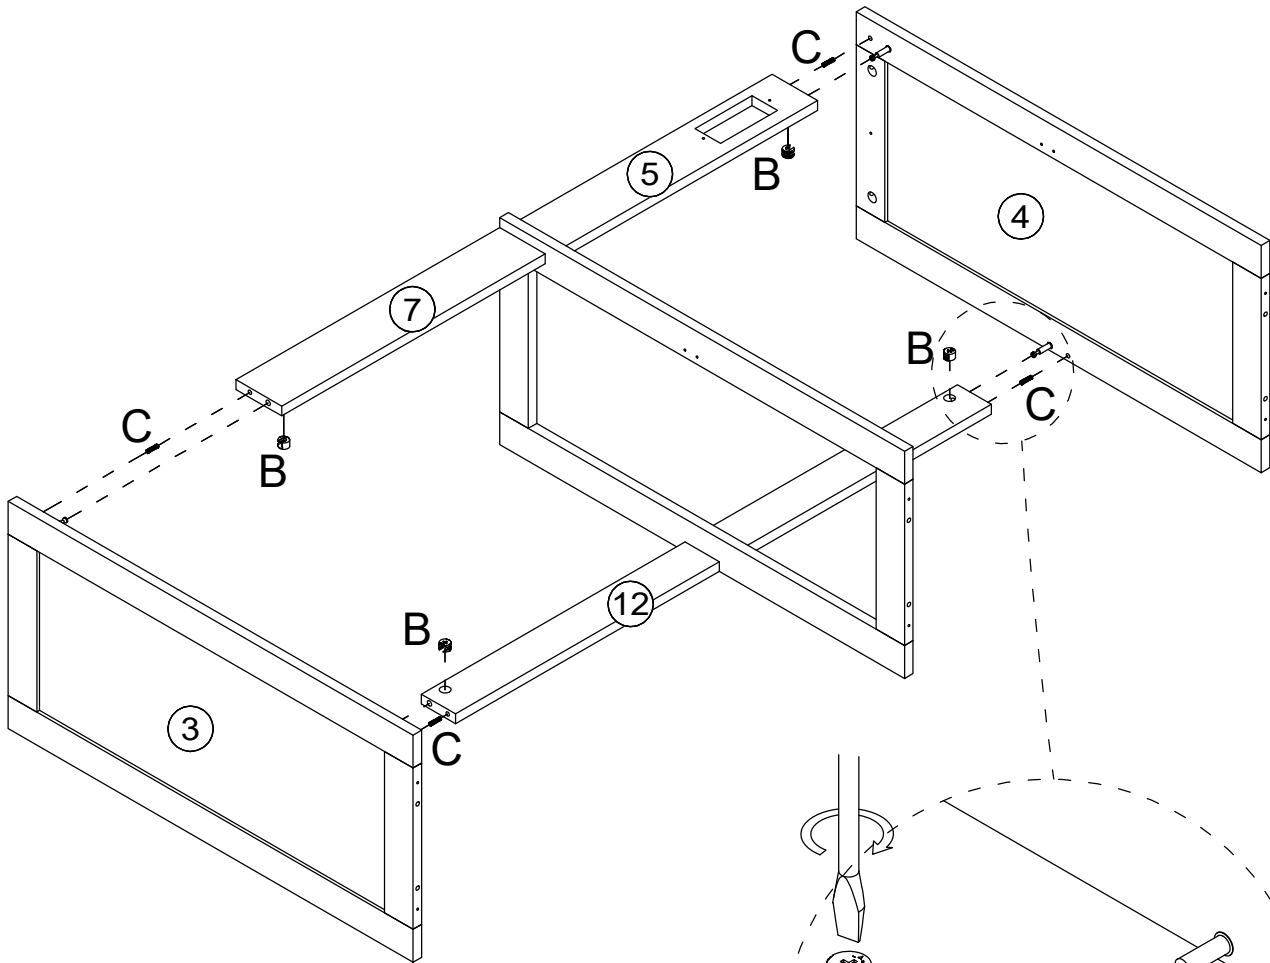
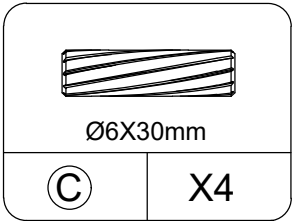
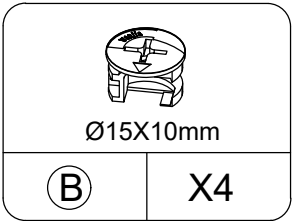
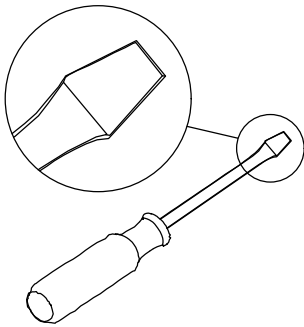


Proper orientation of CAM LOCK










STEP5

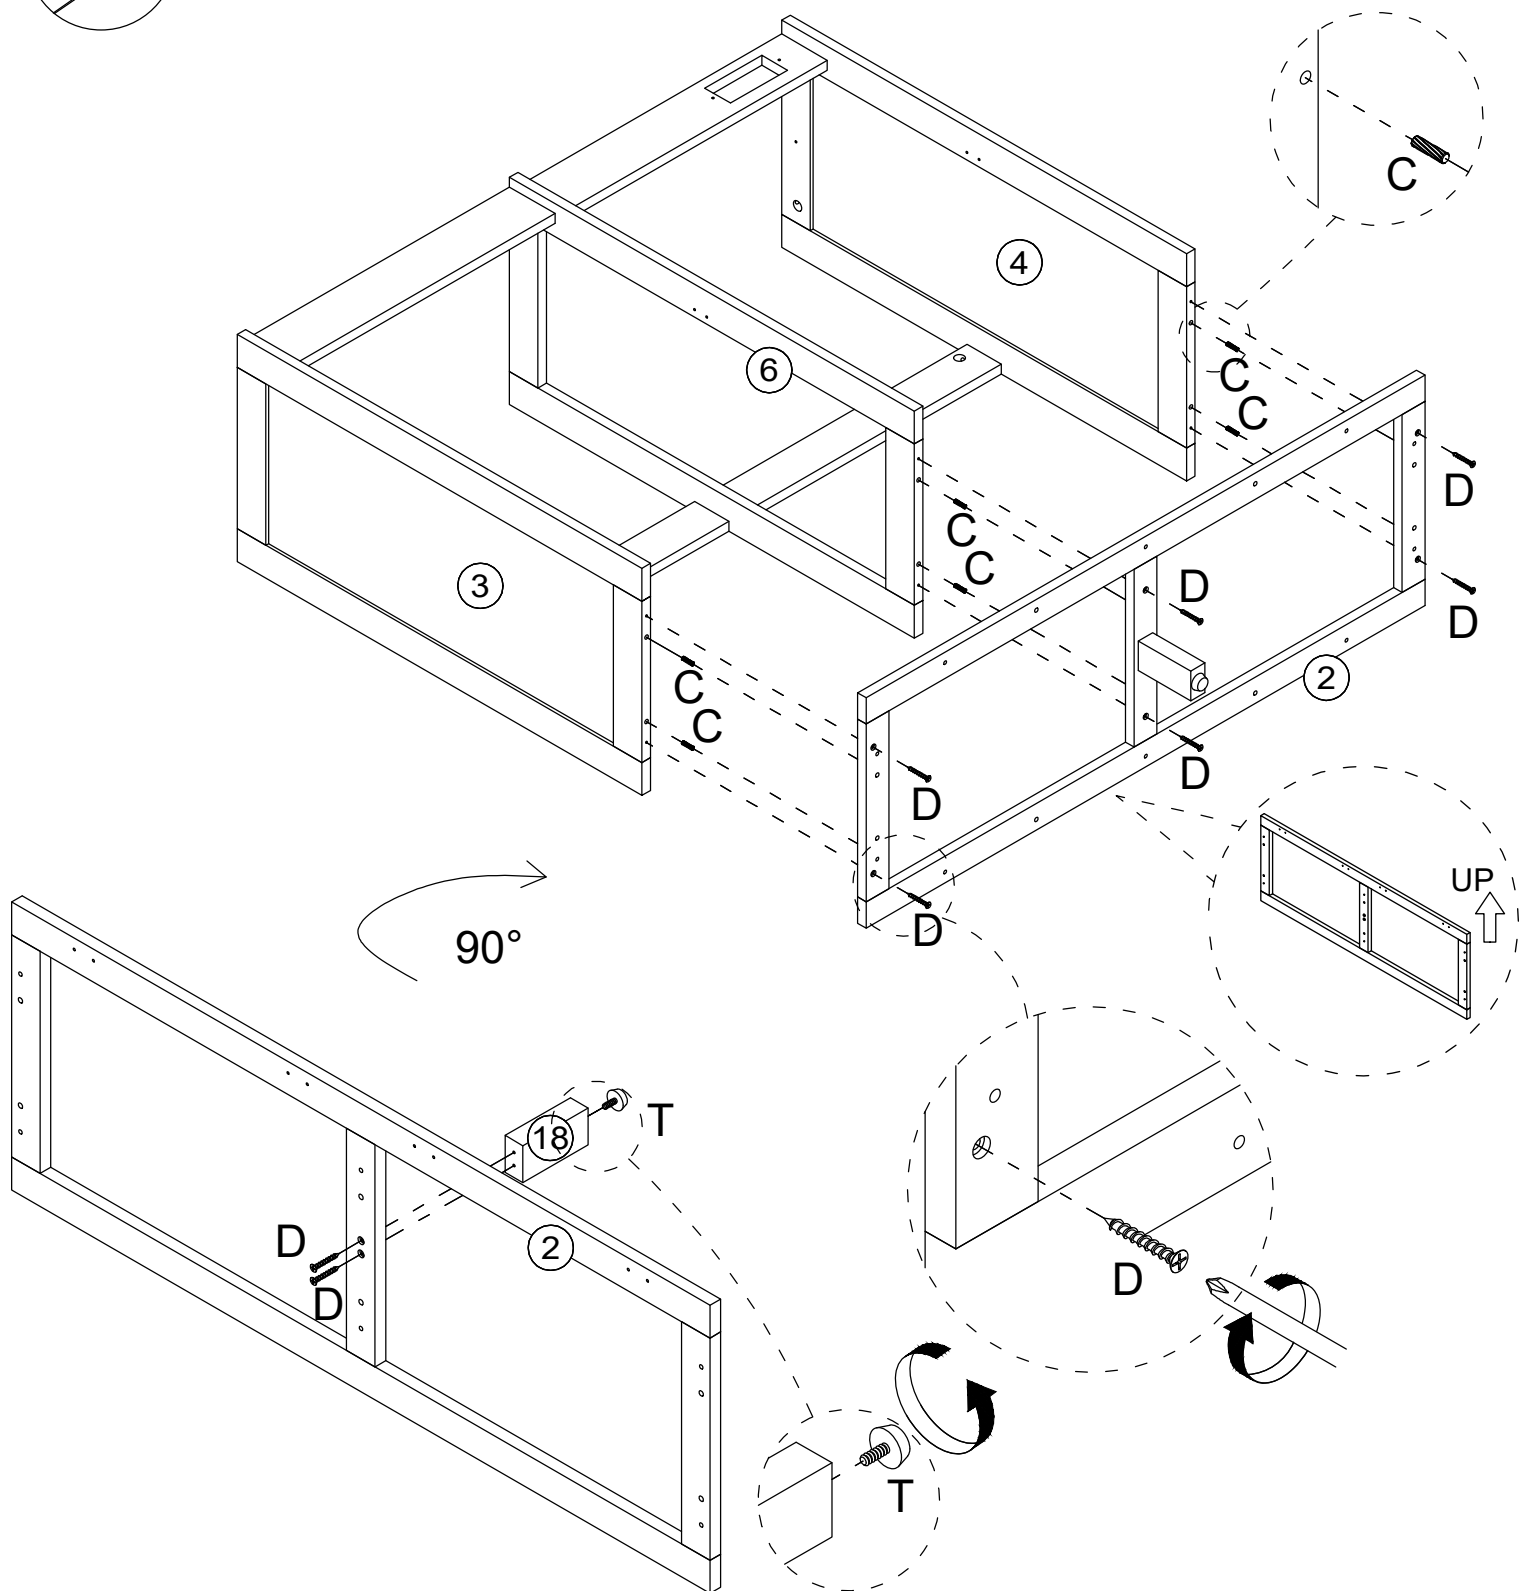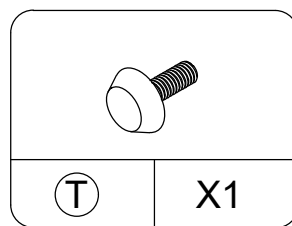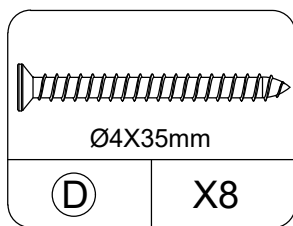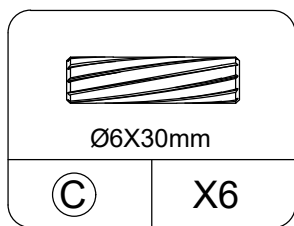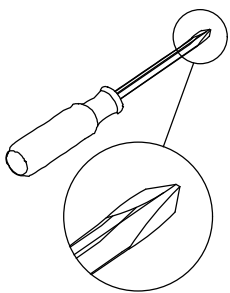

STEP6

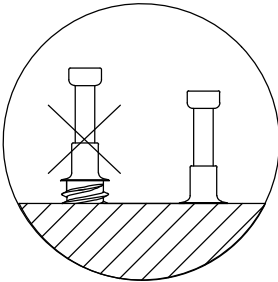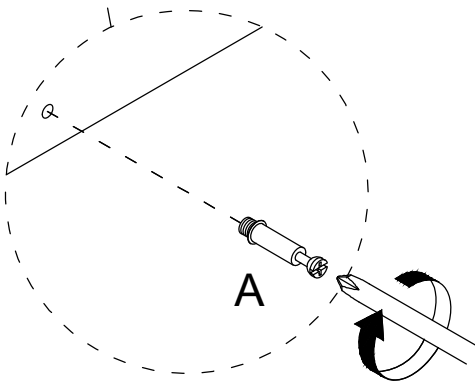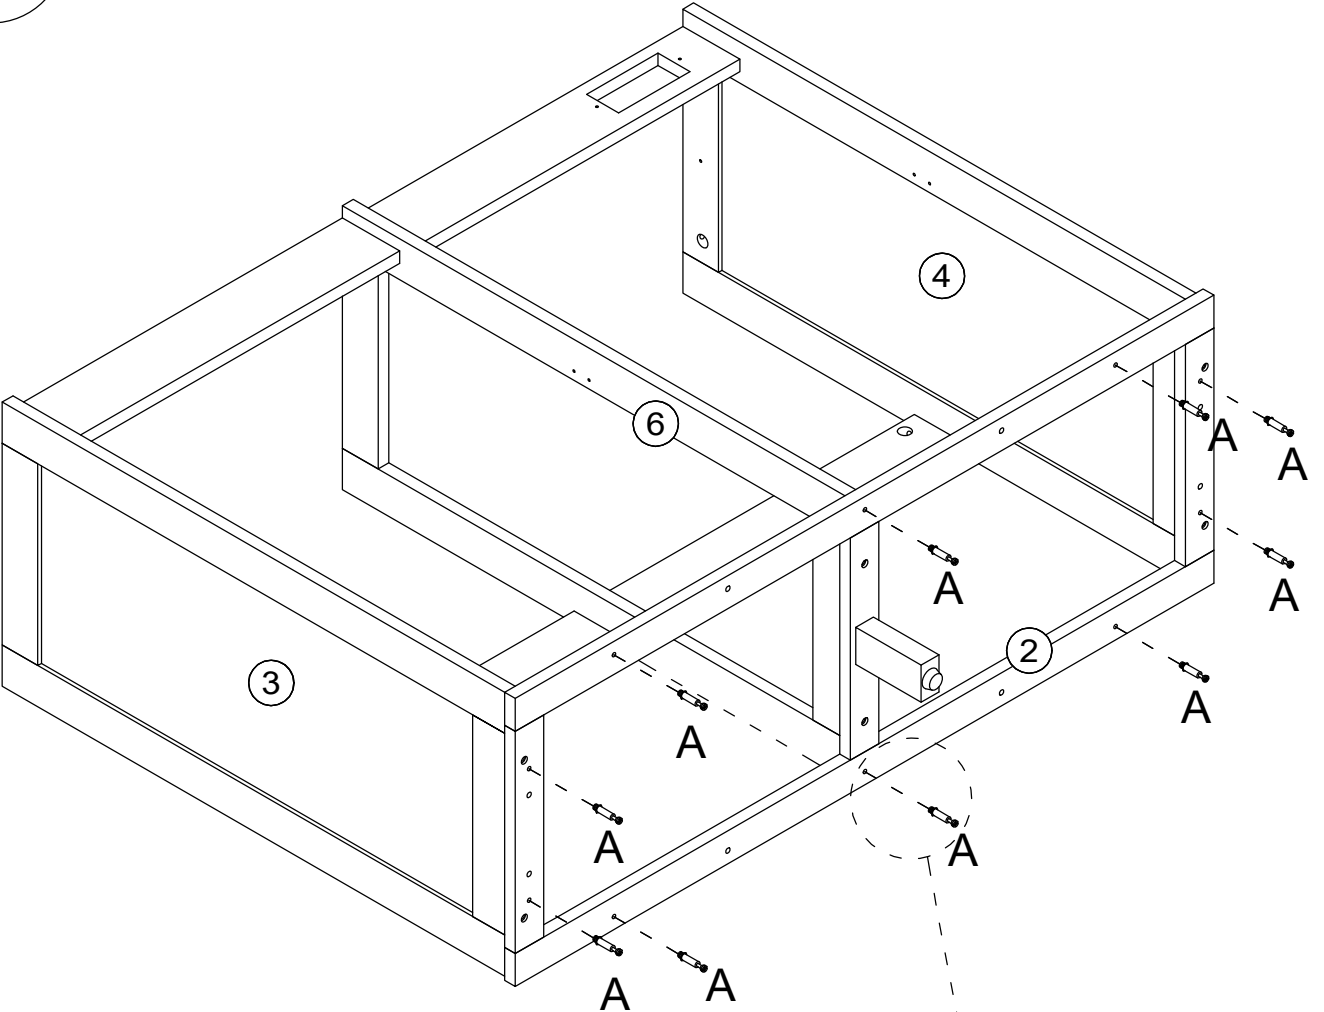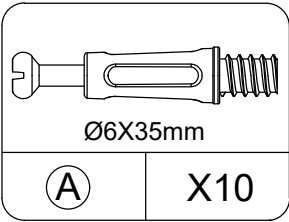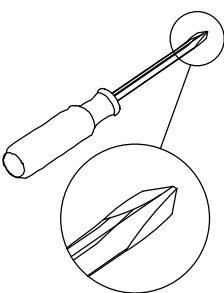







STEP7

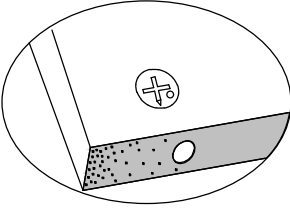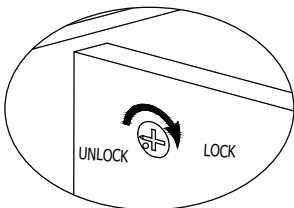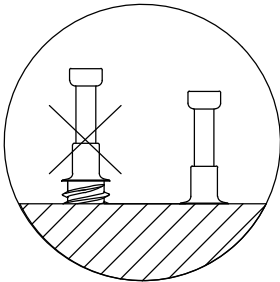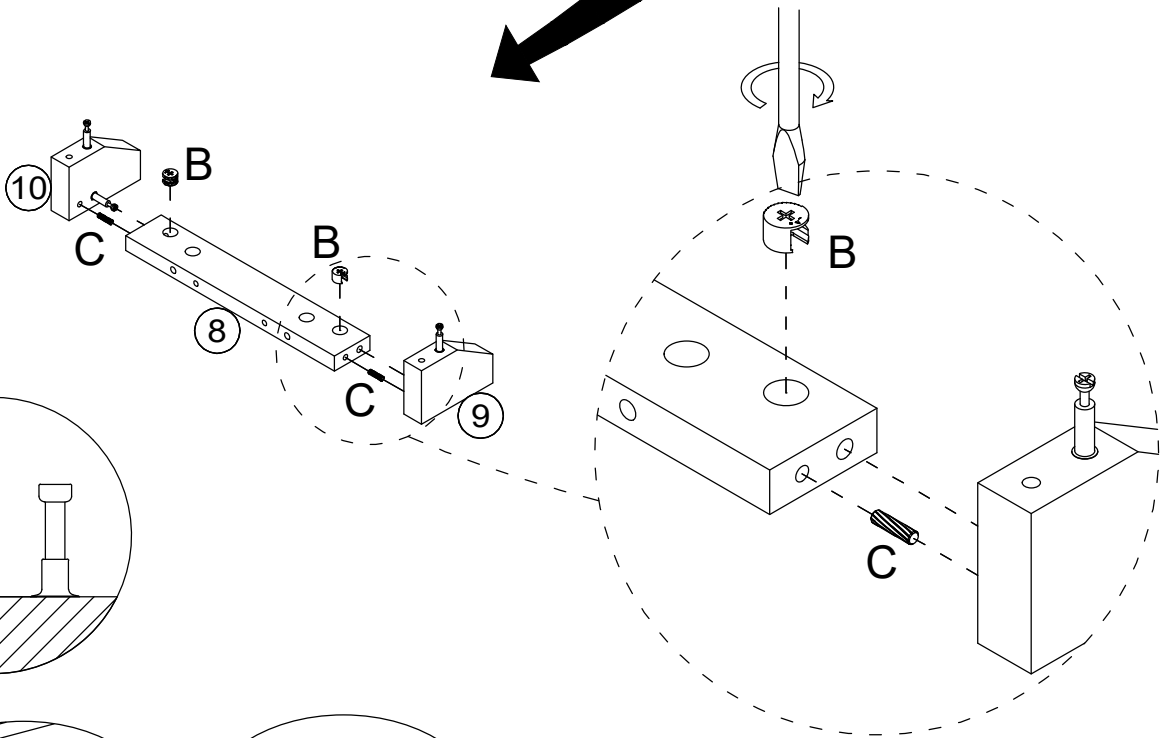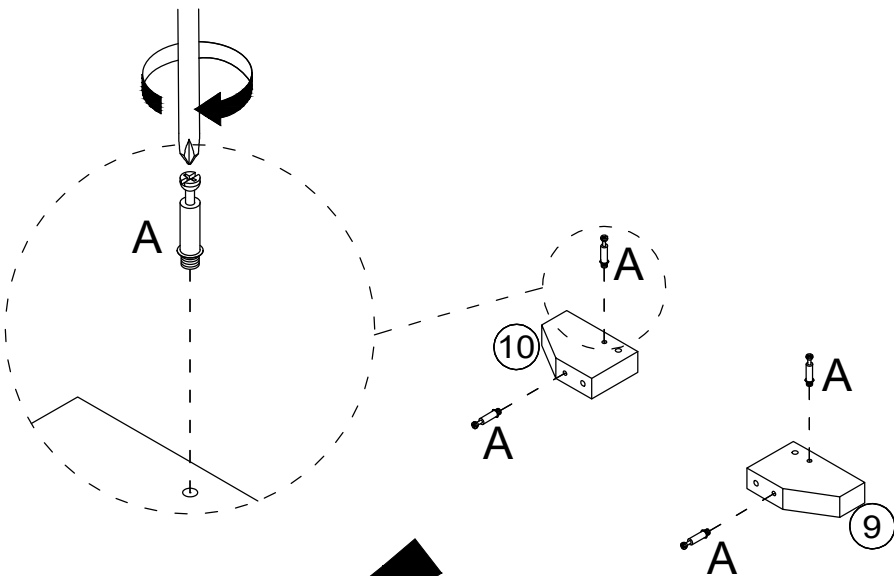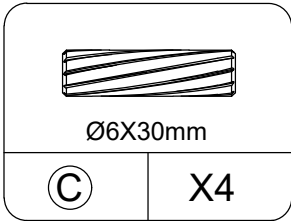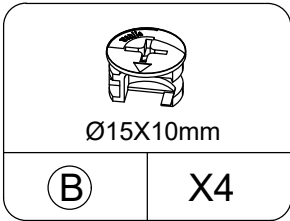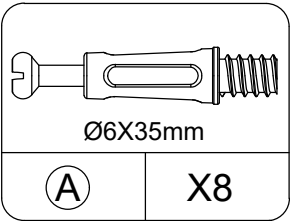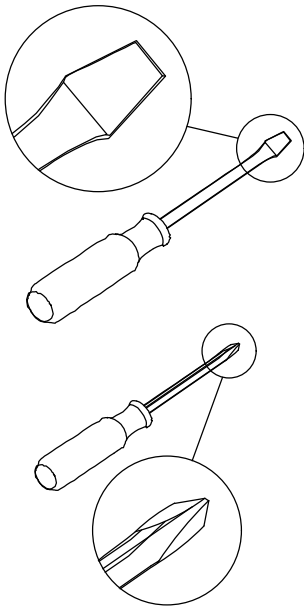

Proper orientation of CAM LOCK









X2

STEP8

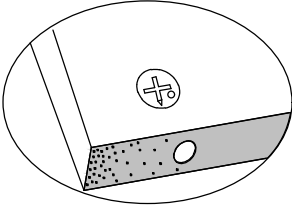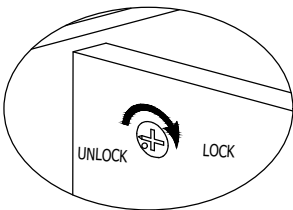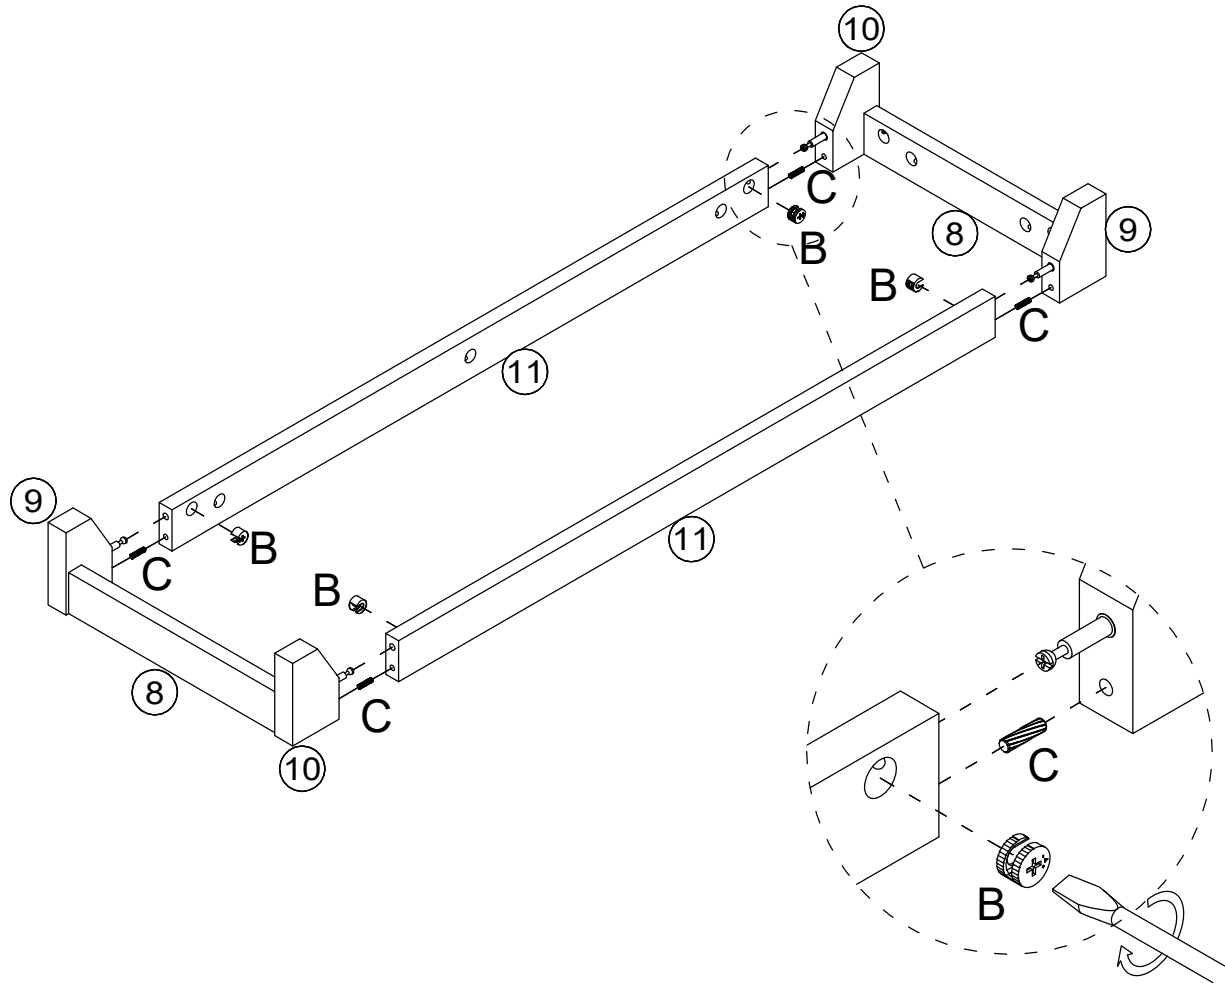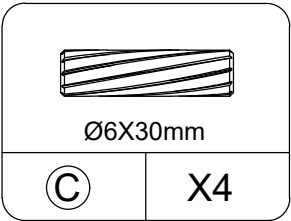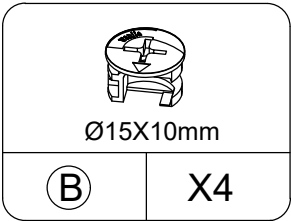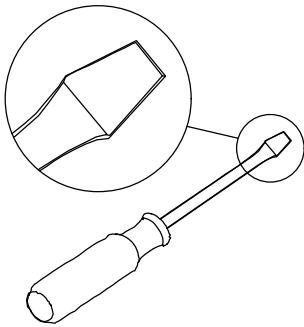







Proper orientation of CAM LOCK

STEP9

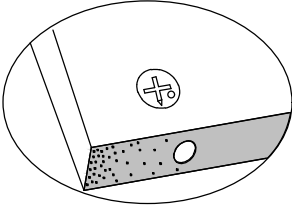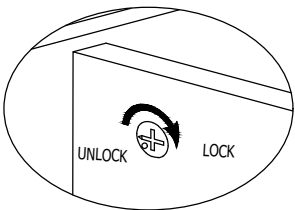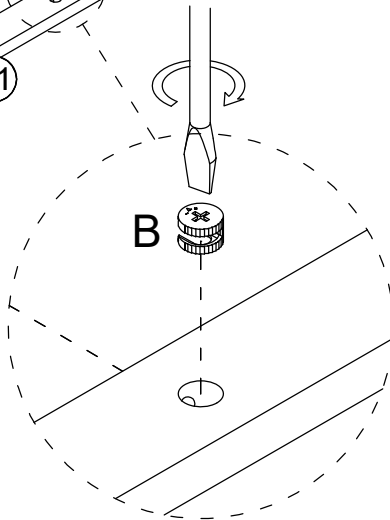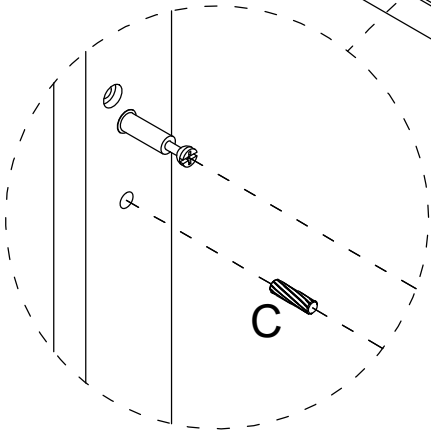
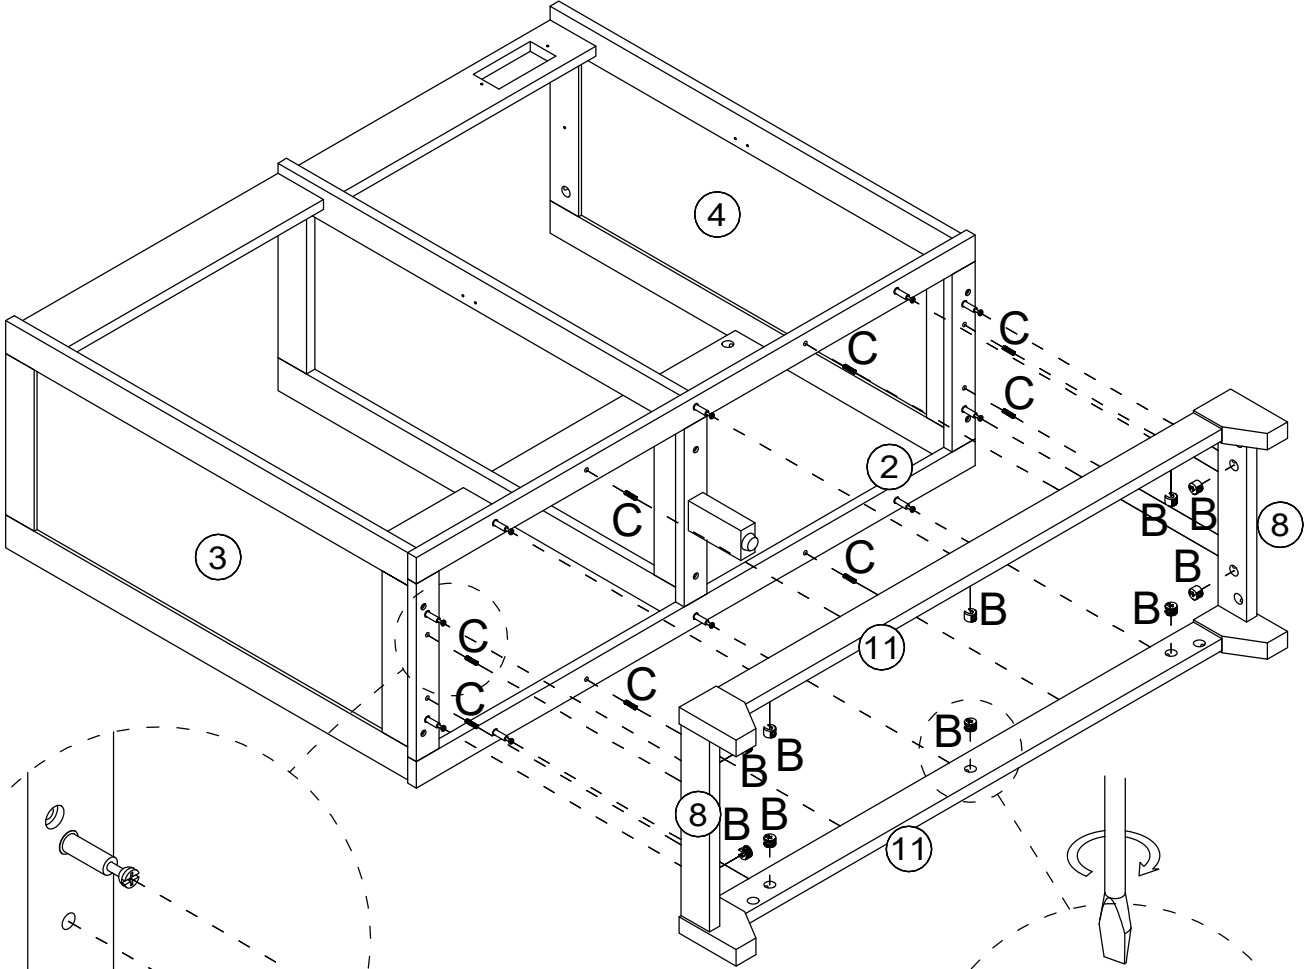
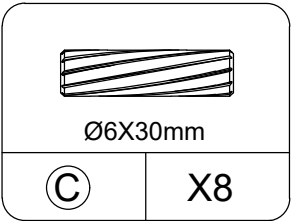
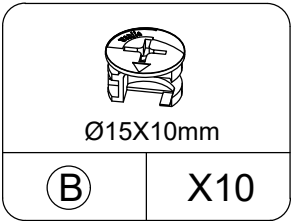
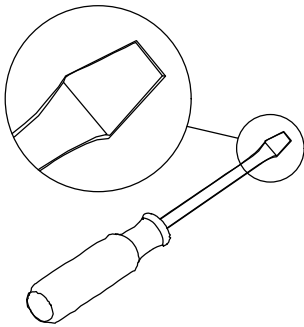


Proper orientation of CAM LOCK







STEP10

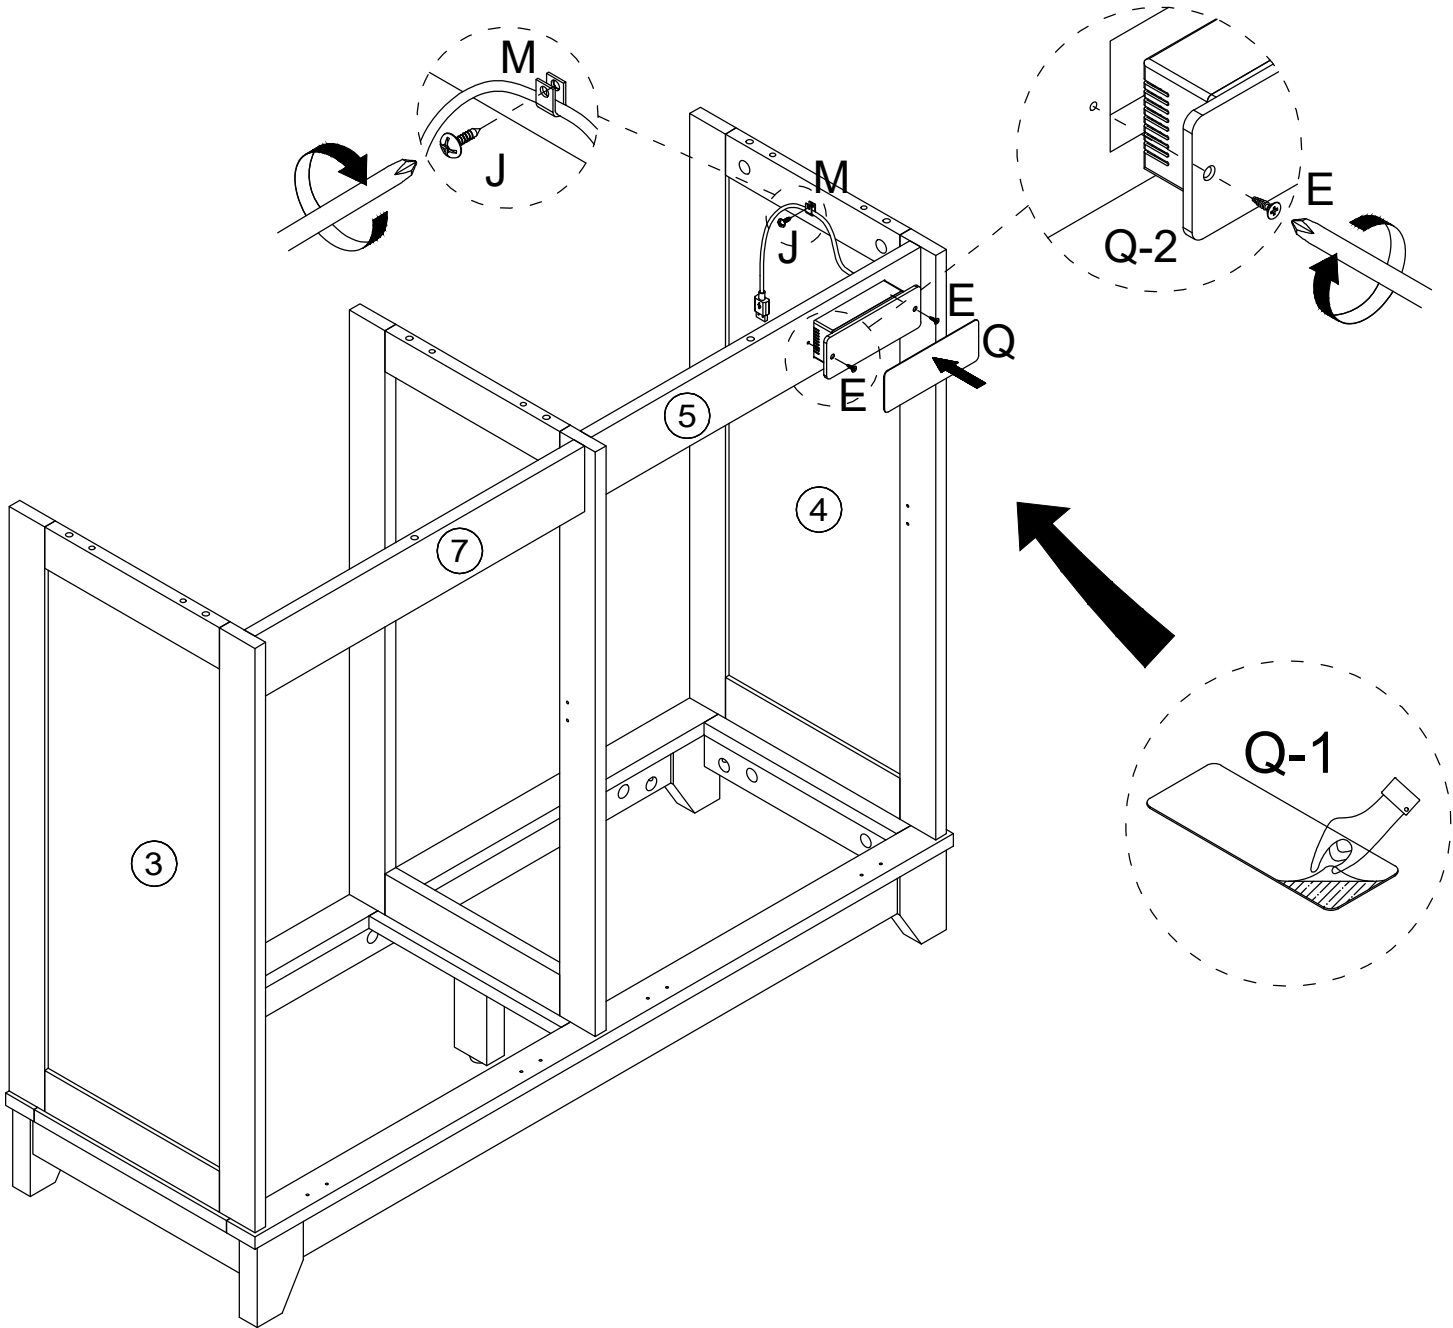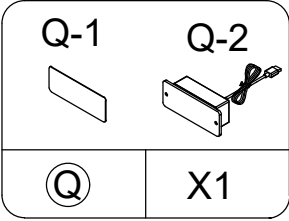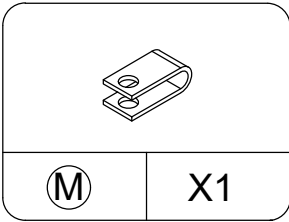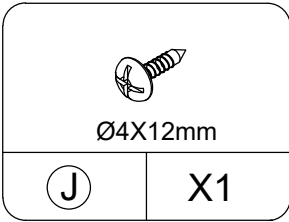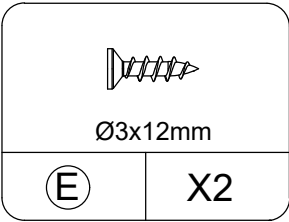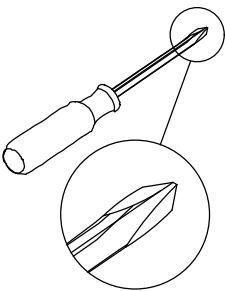

STEP11



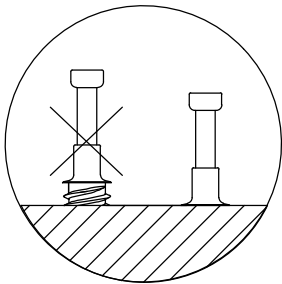
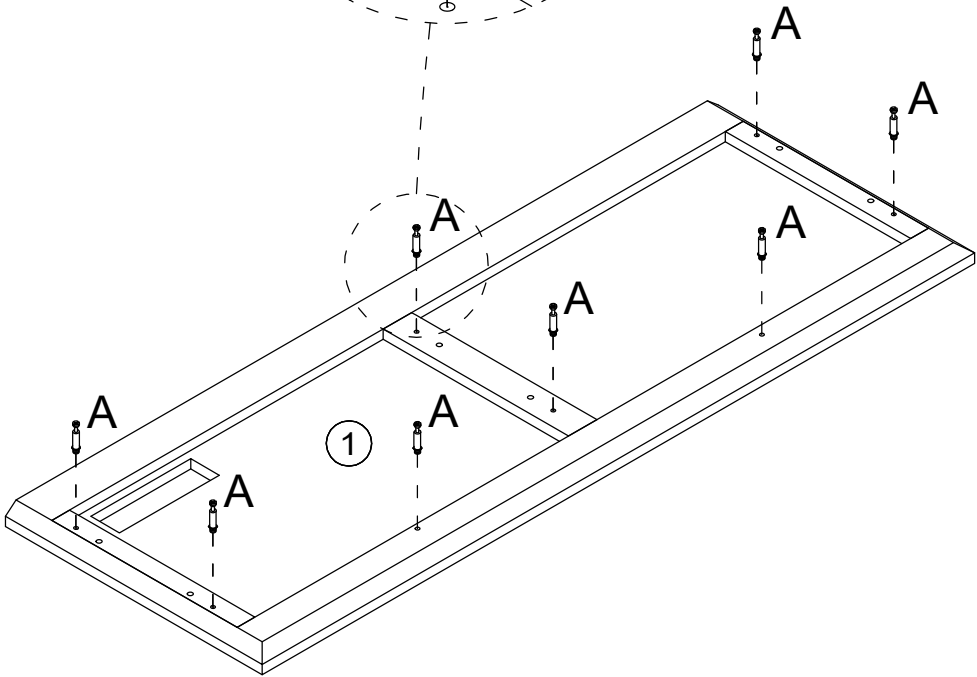
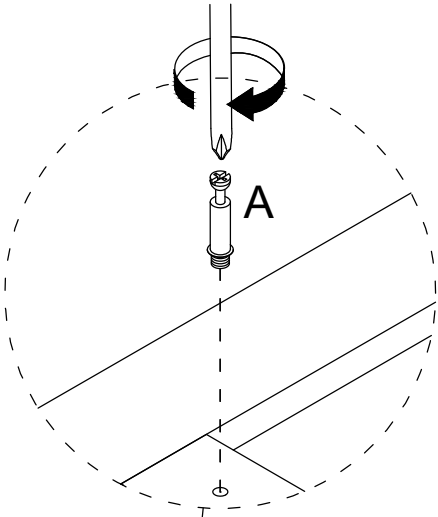
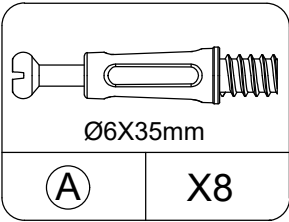
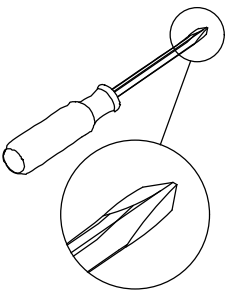


STEP12




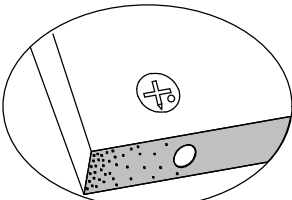
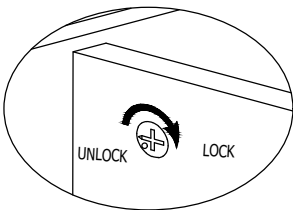
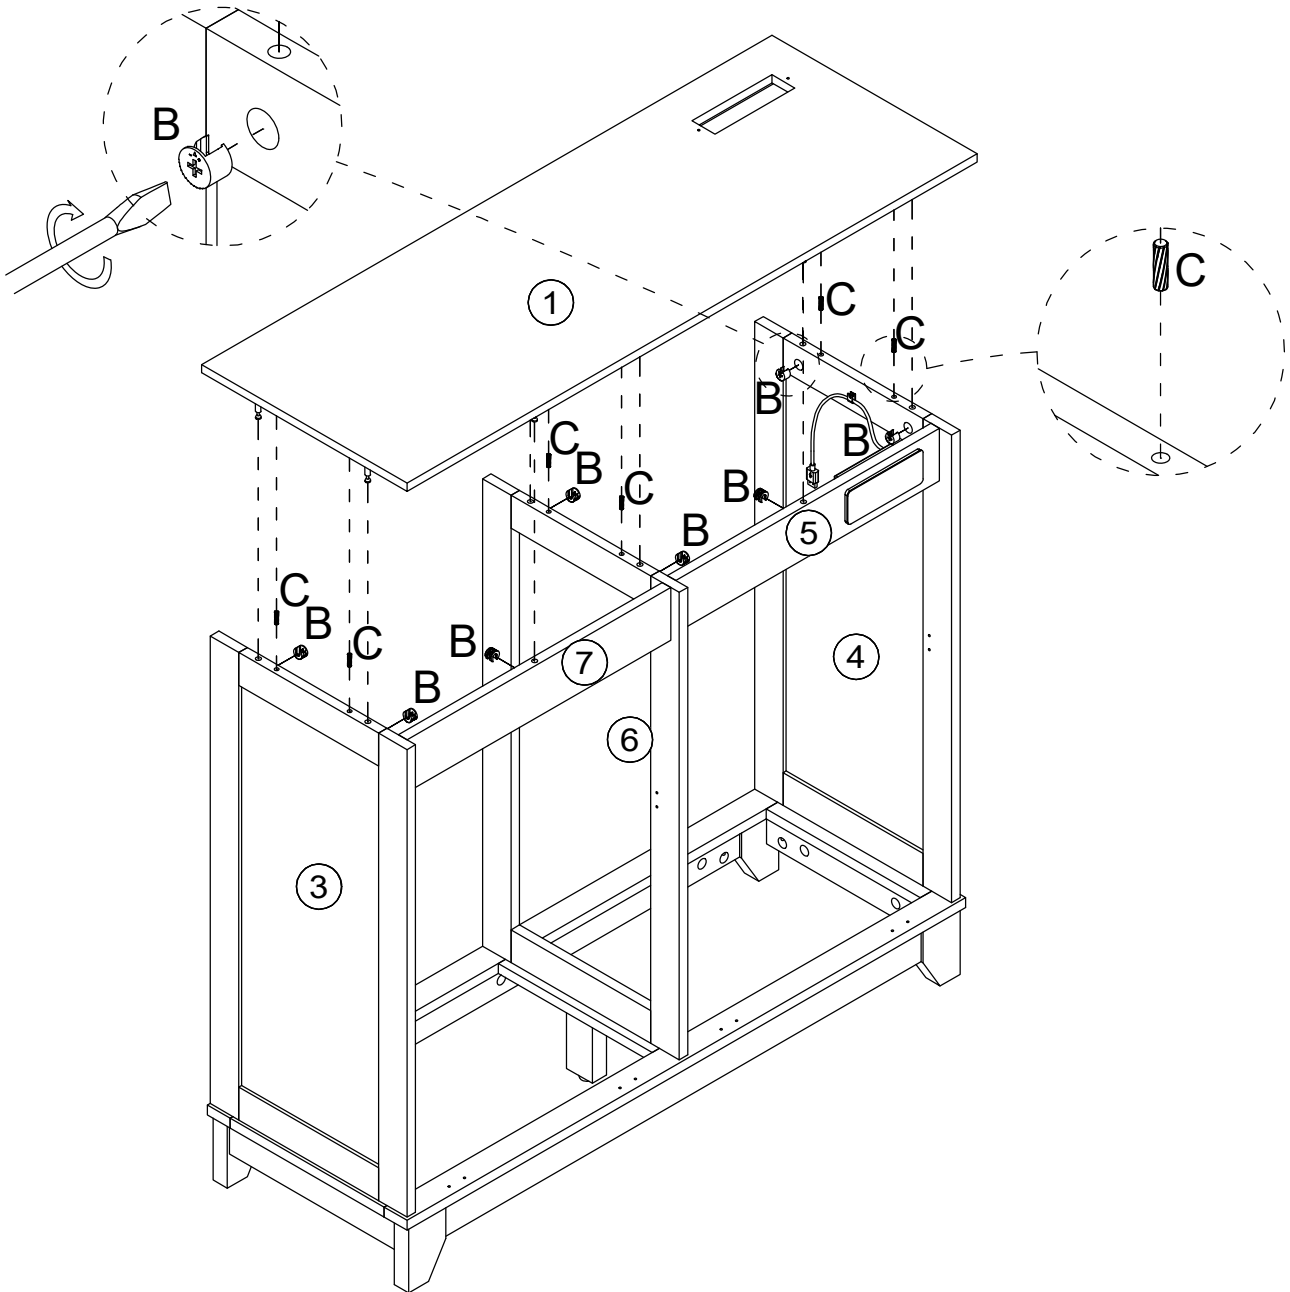
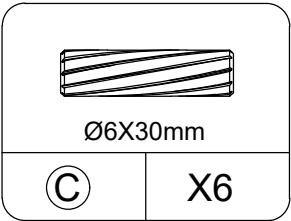
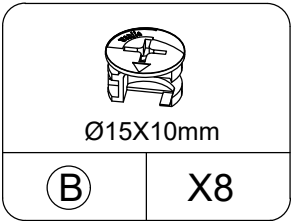
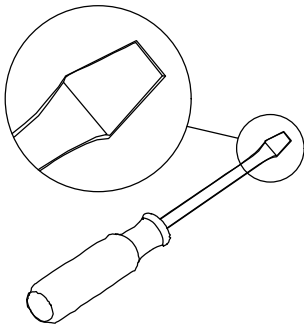


Proper orientation of CAM LOCK




STEP13

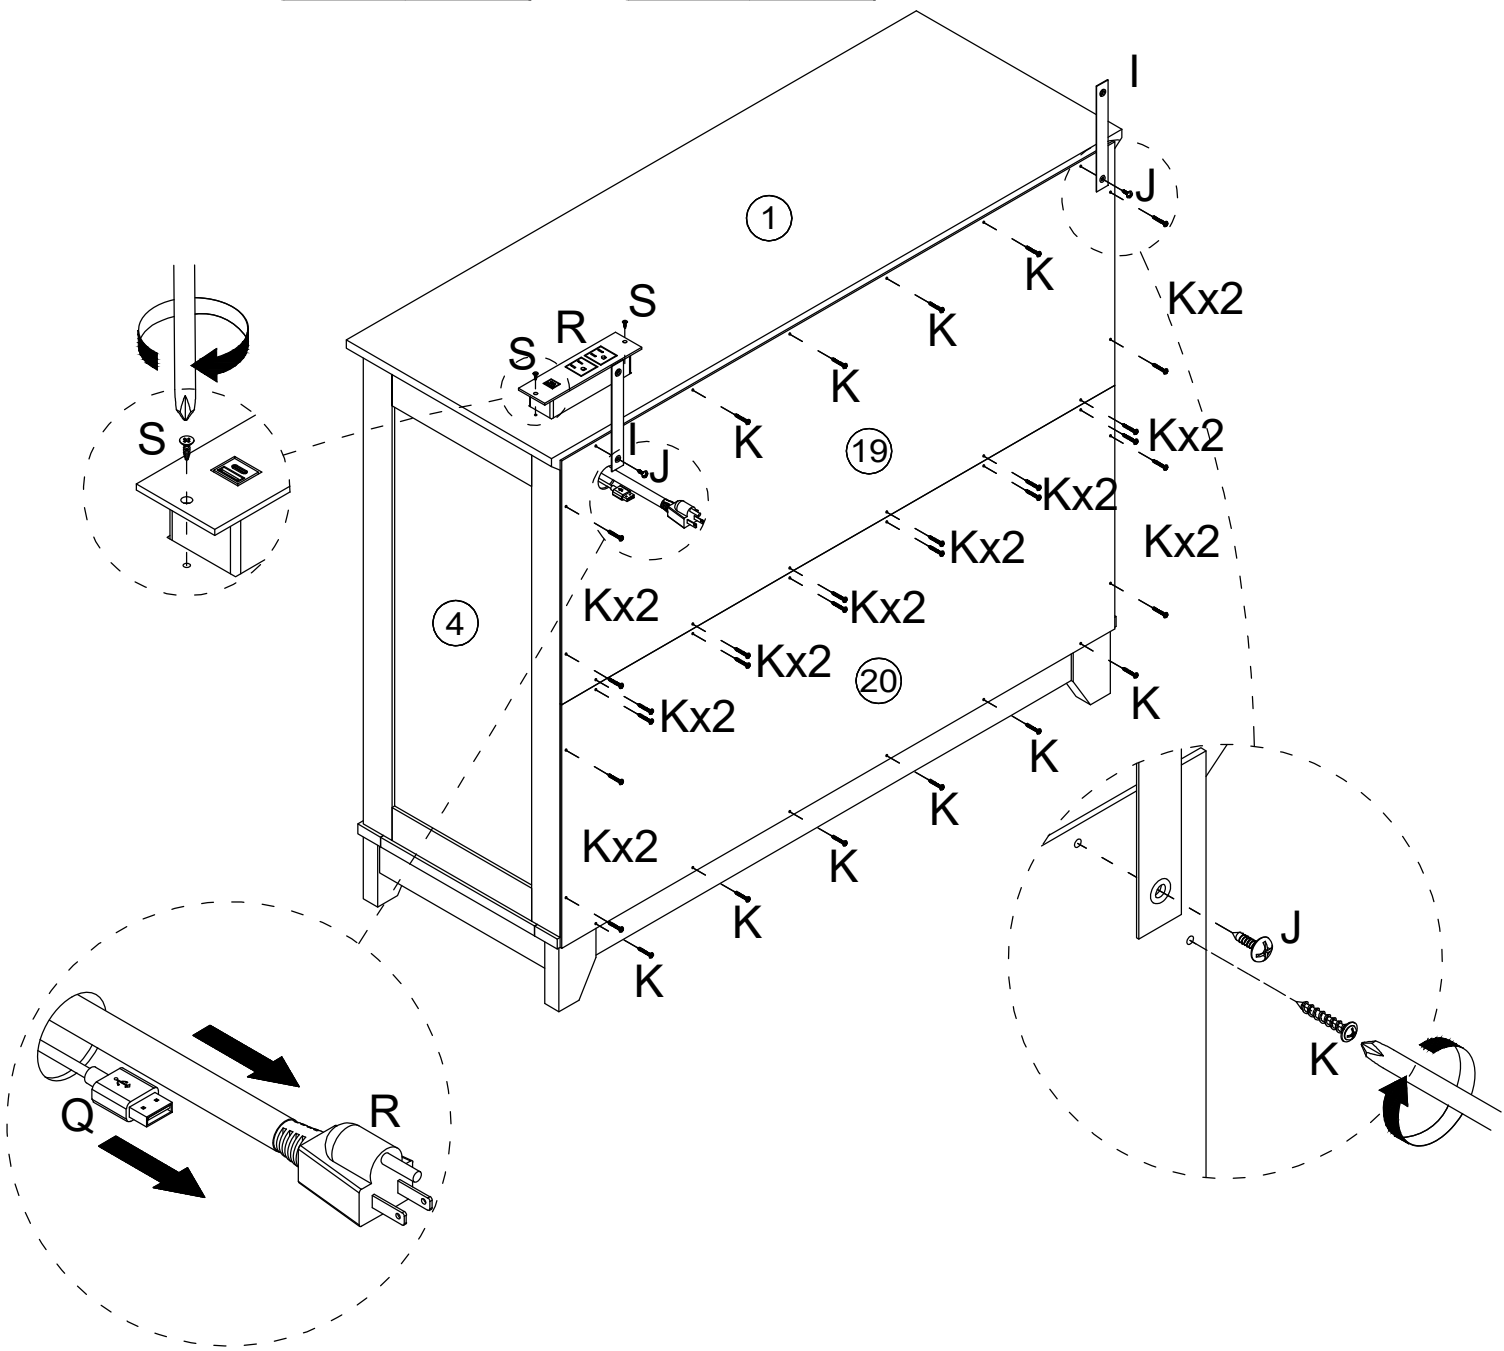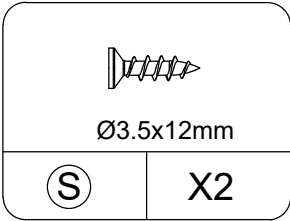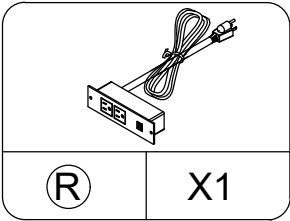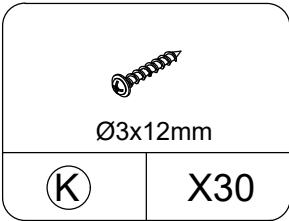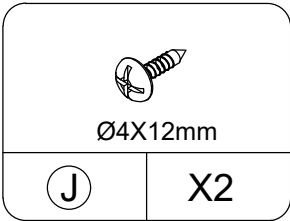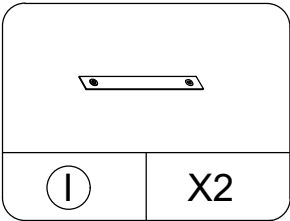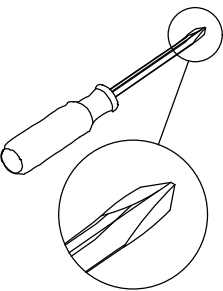




STEP 14

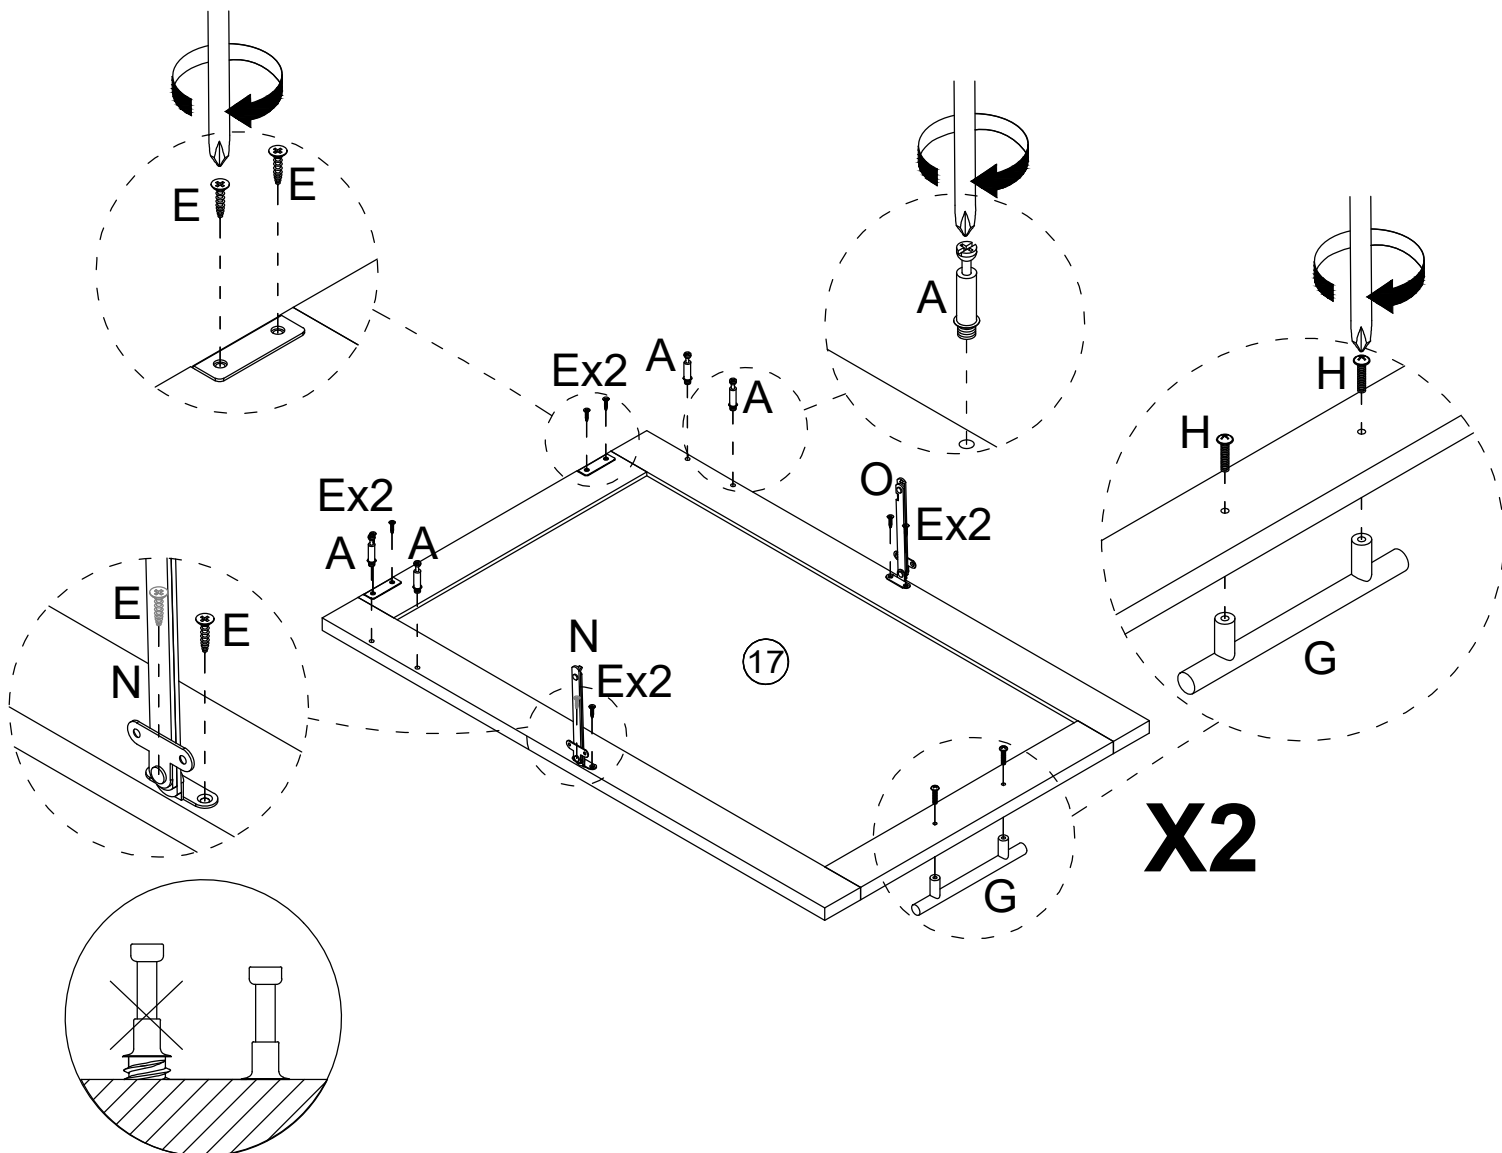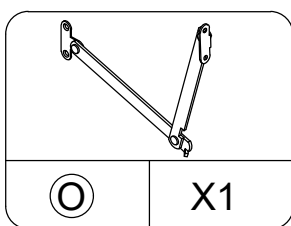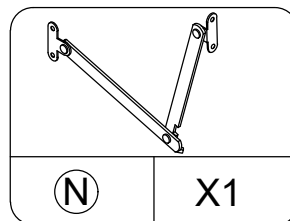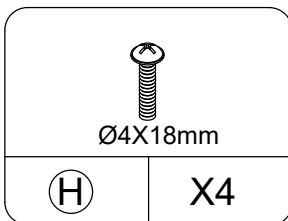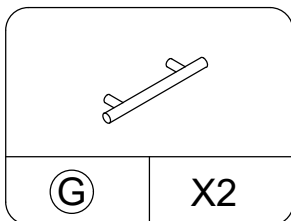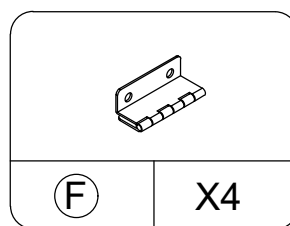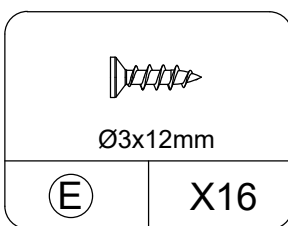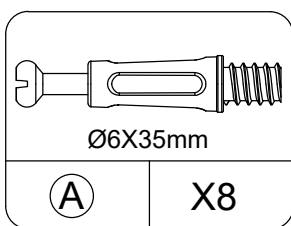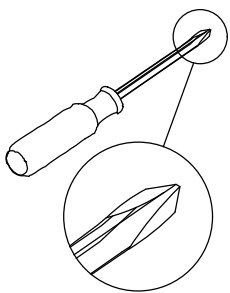

STEP15



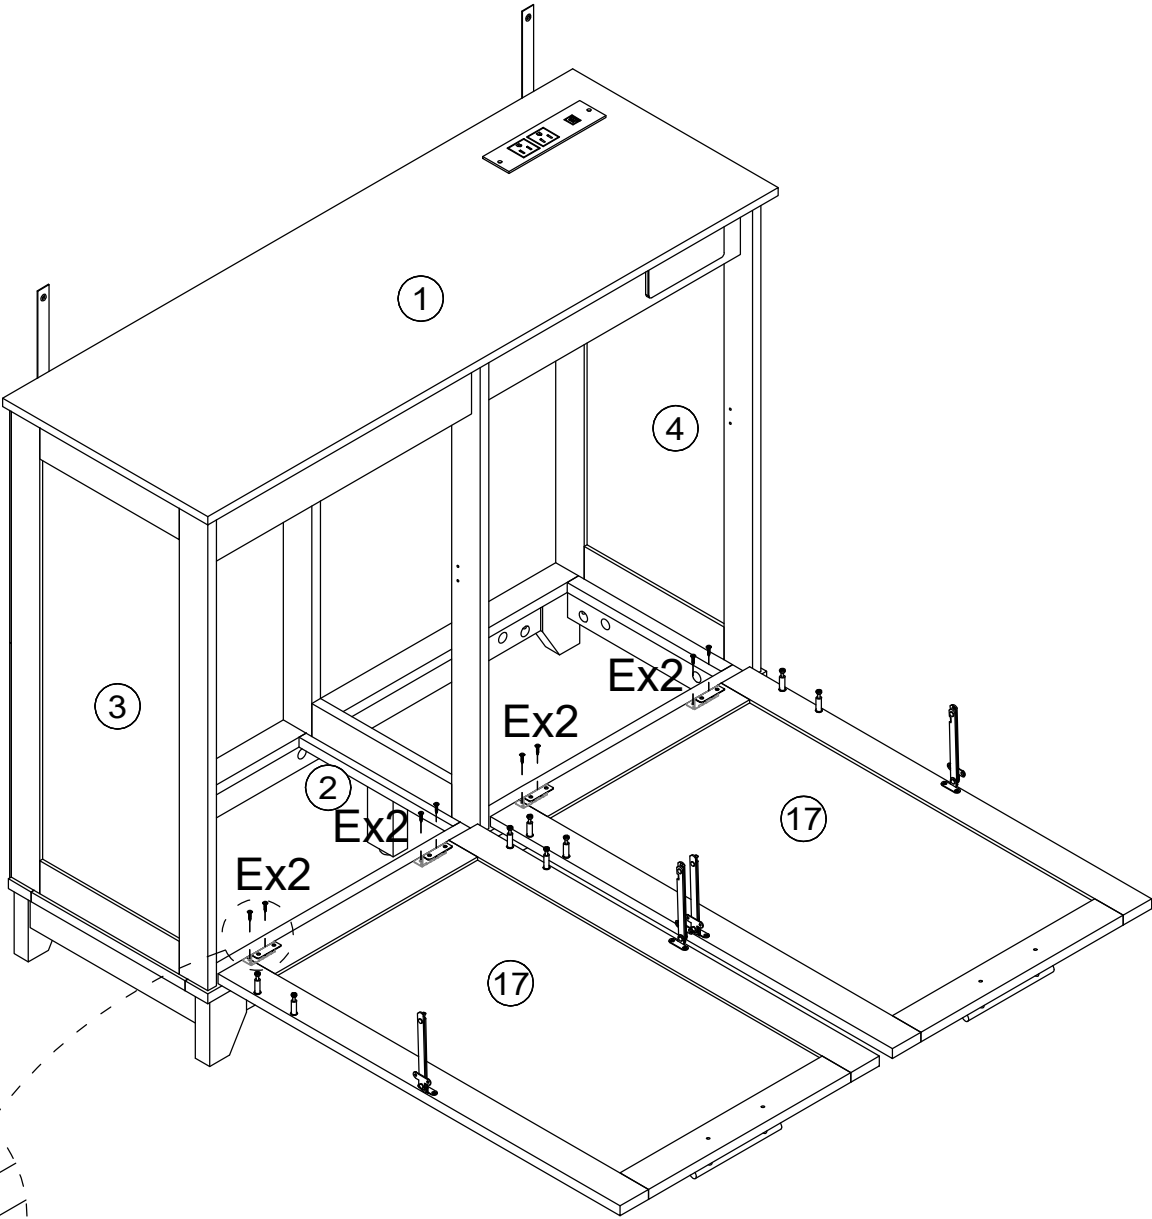
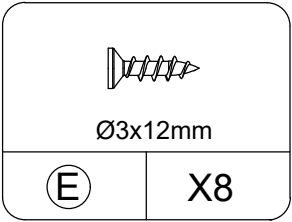
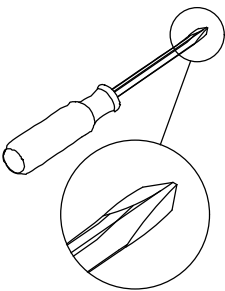


STEP16

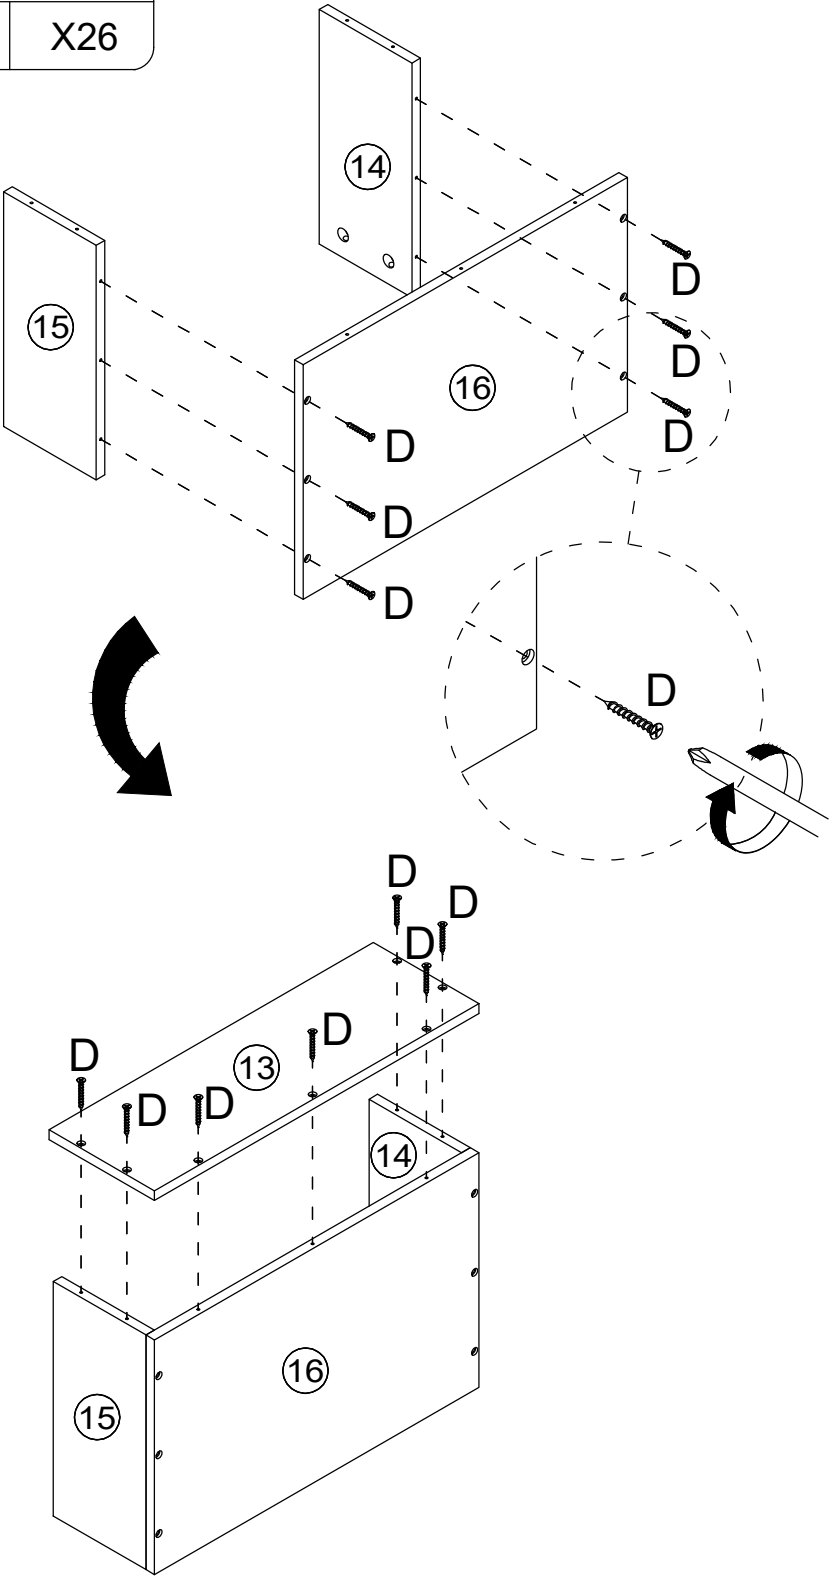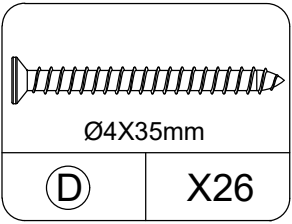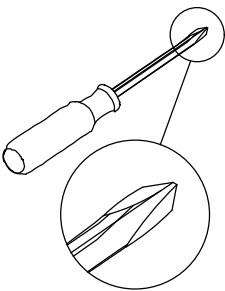




X2

STEP17

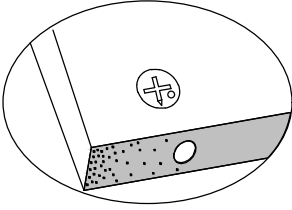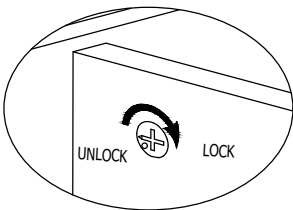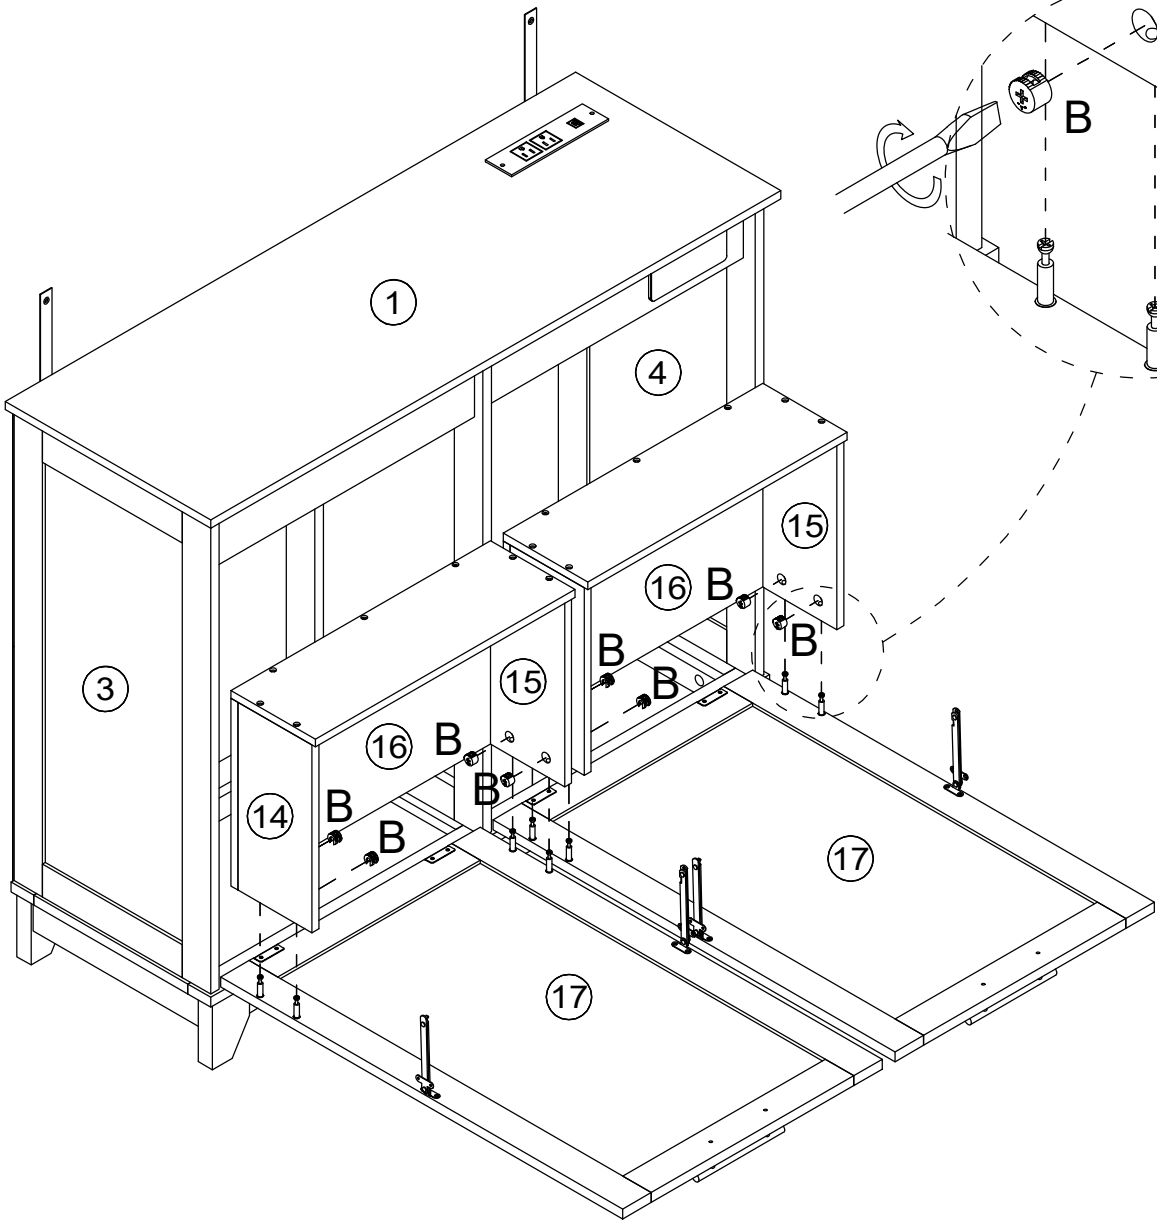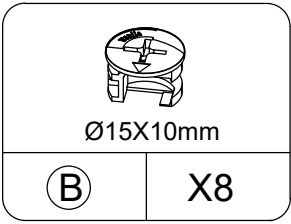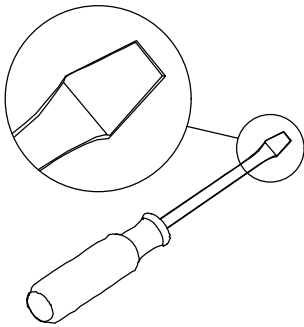

Proper orientation of CAM LOCK

STEP18

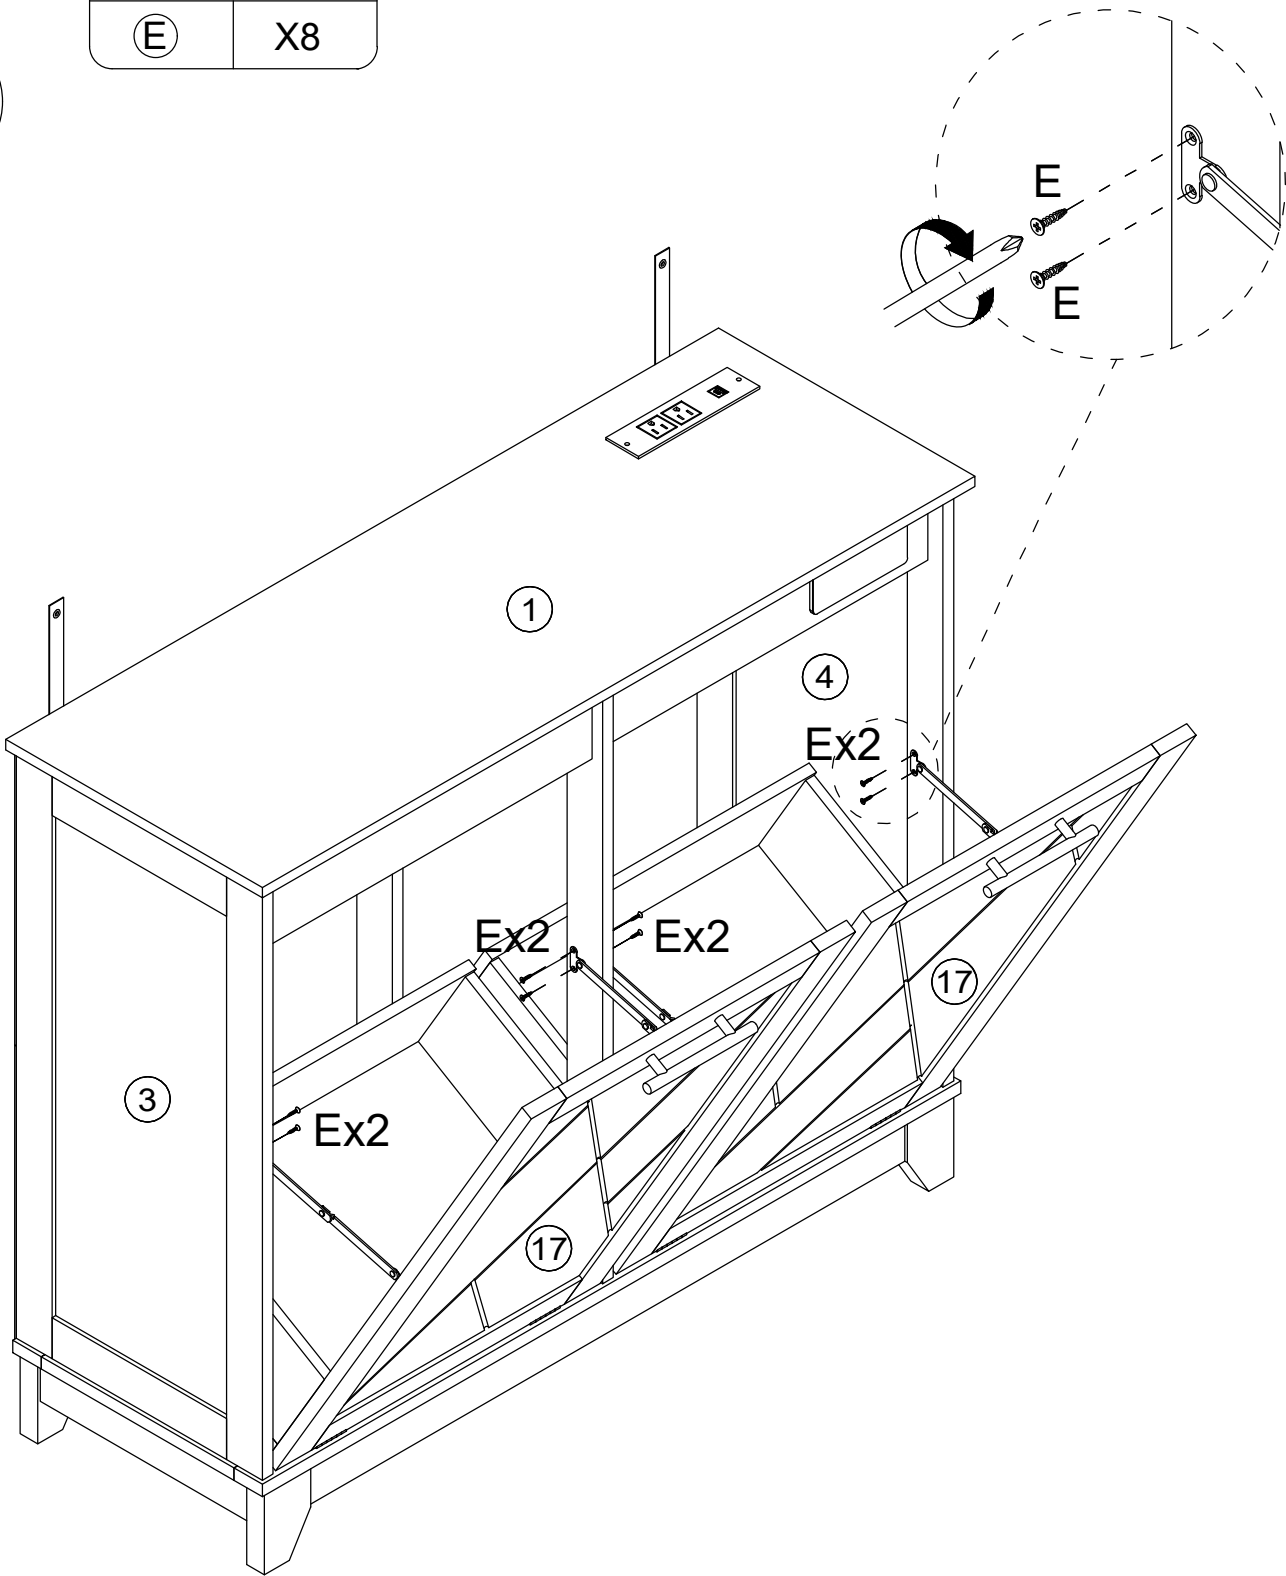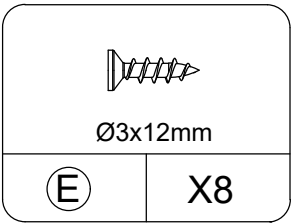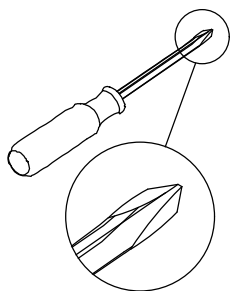

STEP19

