

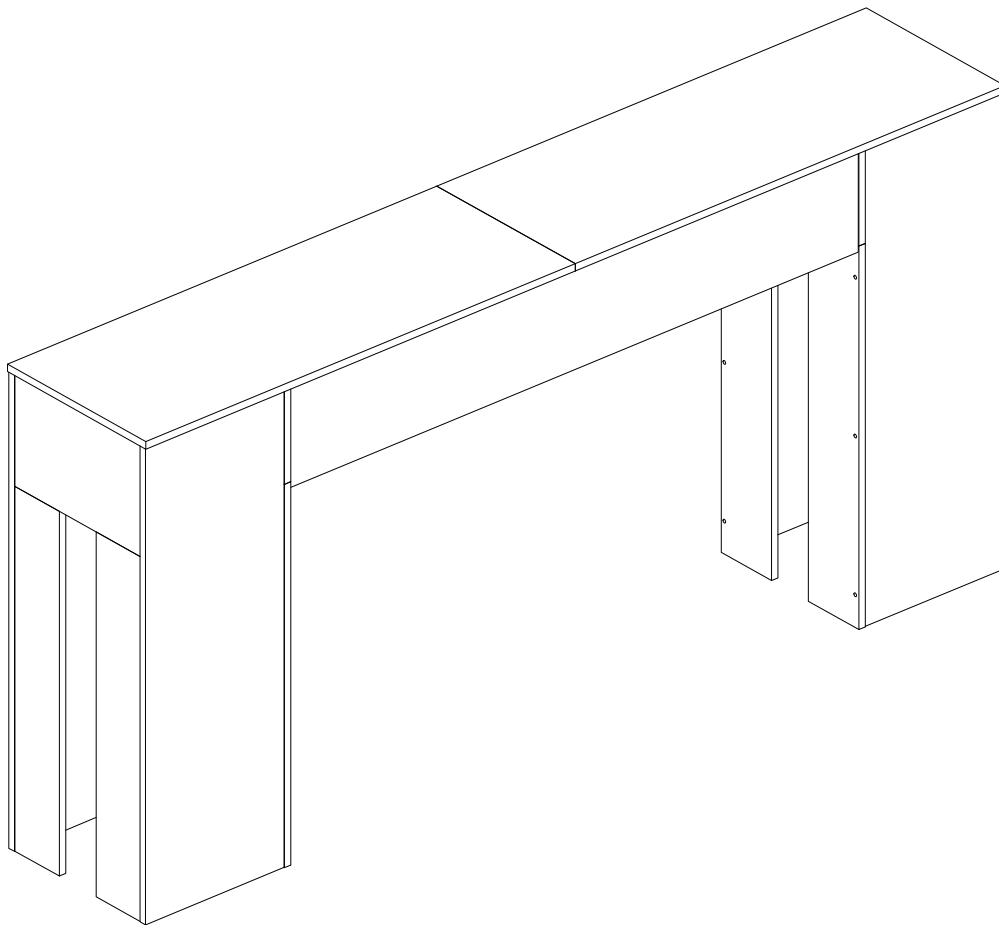
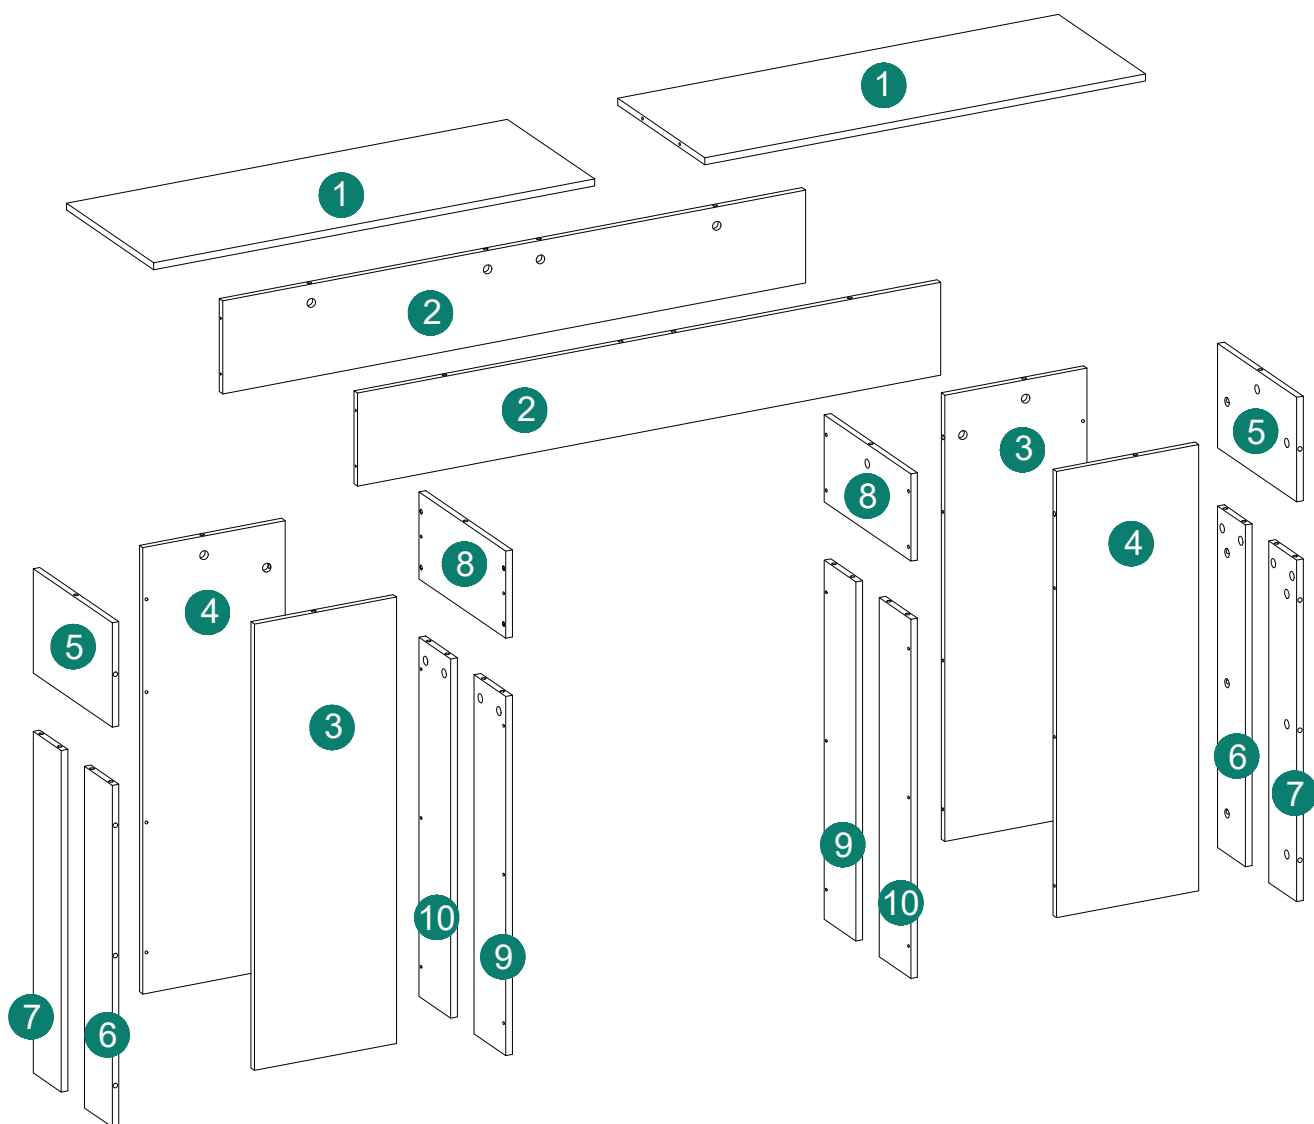
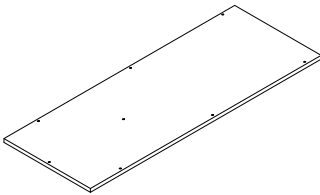
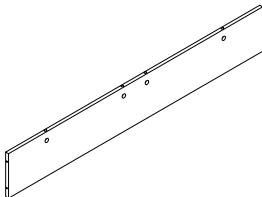


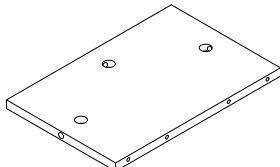

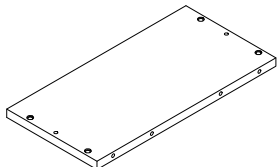








ASSEMBLY INSTRUCTION


SF022

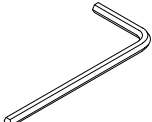

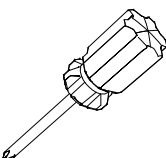

1  2PCS	2  2PCS	3  2PCS	4  2PCS	
5  2PCS	6  2PCS	7  2PCS	8  2PCS	
9  2PCS	10  2PCS	A  M6*40 52+3PCS	B  Ø15*9.3mm 52+3PCS	
C  Ø6*30mm 2+1PCS	D  M5*38 20+2PCS	E  30*12*2 8+1PCS	F F1  F2  M4*12 F3  F4  2PCS	 3mm 



1



⑤ 2pcs



Ⓐ 8pcs

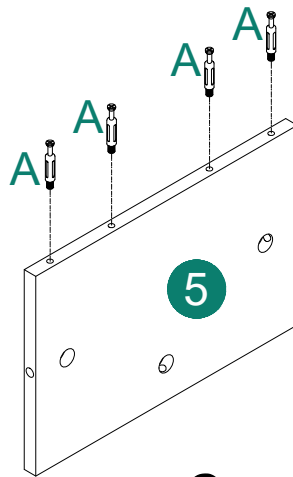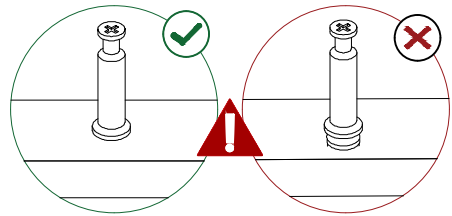

x2

2




⑥ 2pcs




⑦ 2pcs



Ⓑ 8pcs

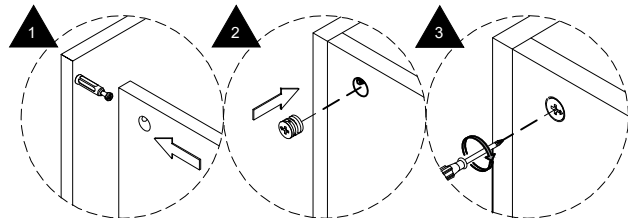





Pay attention to the orientation of the holes.

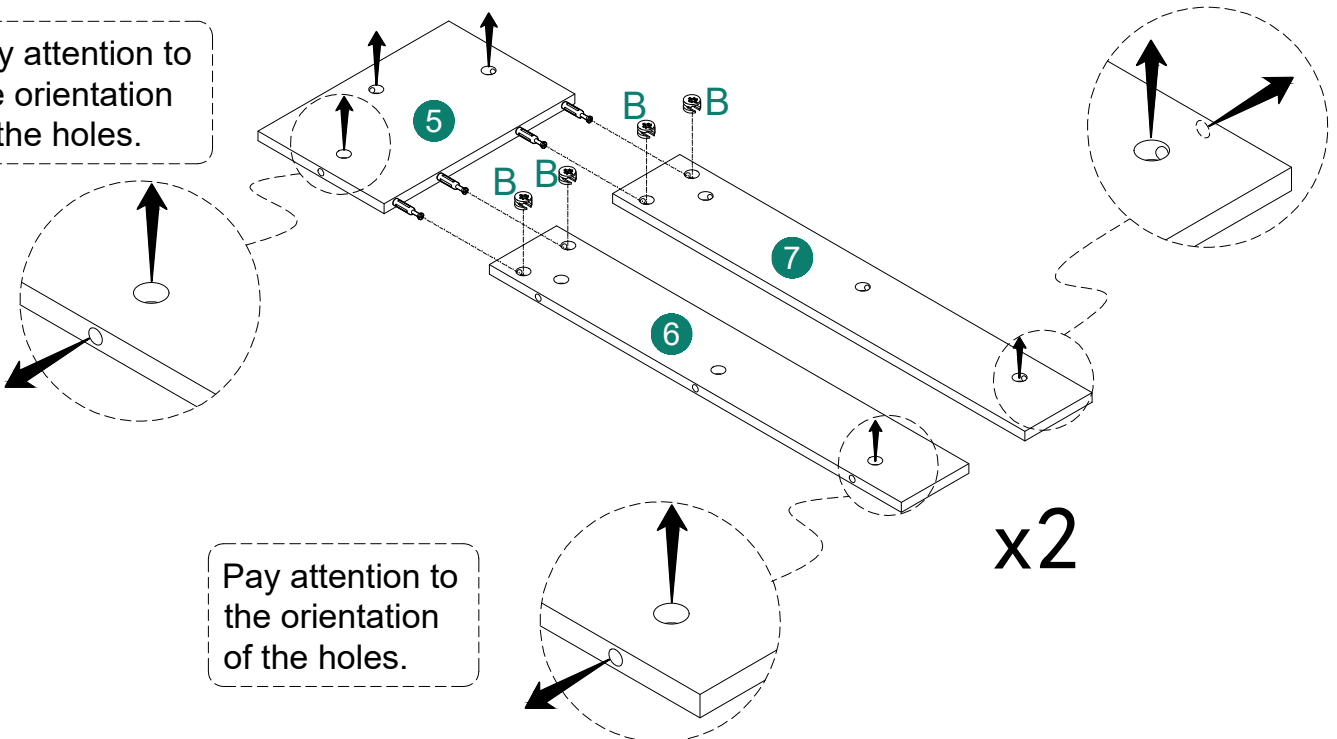


x2

Pay attention to the orientation of the holes.


3

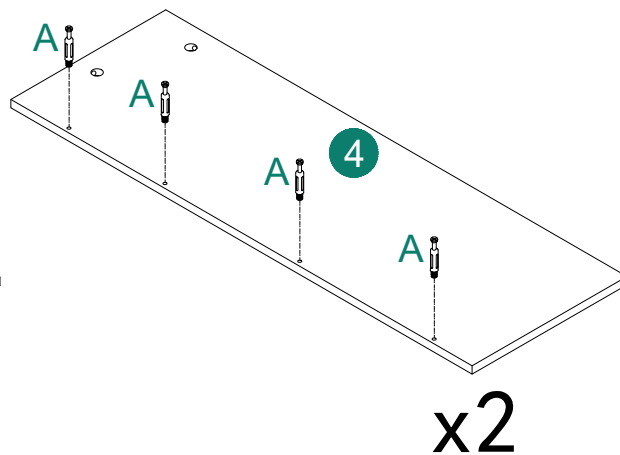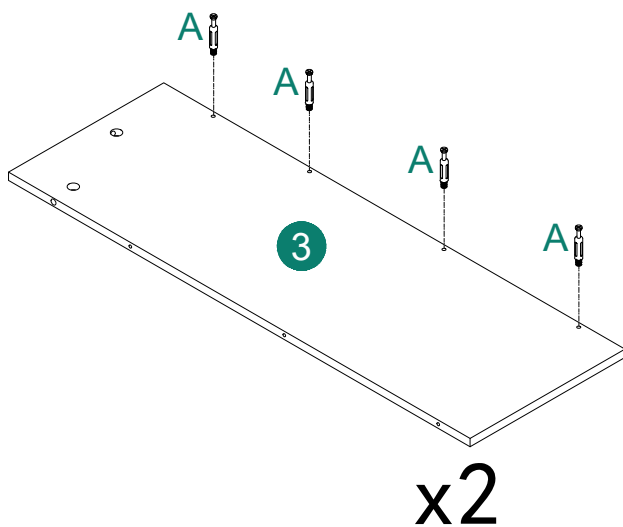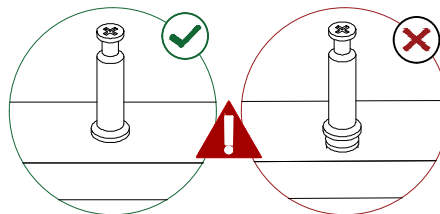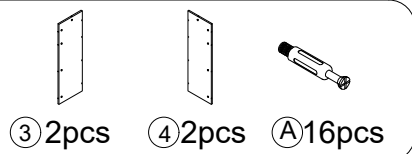


4

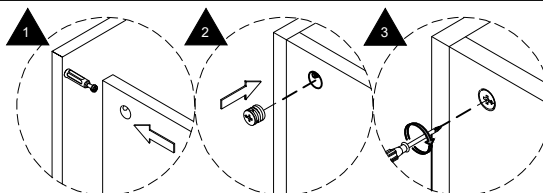



Pay attention to the orientation of the holes.

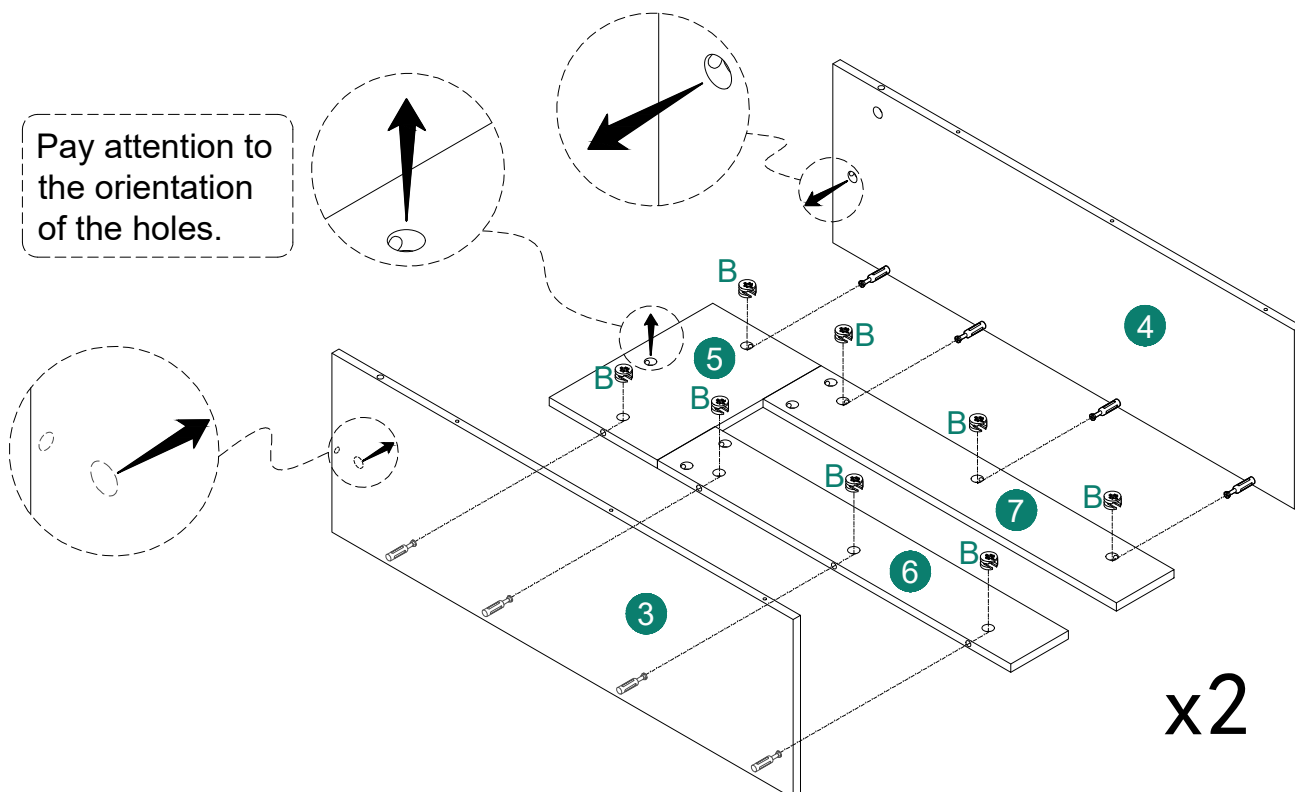

5



⑧ 2pcs ①A 12pcs

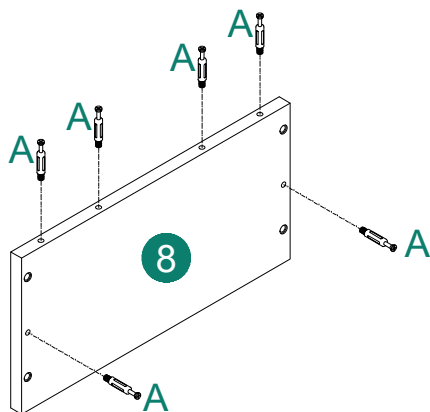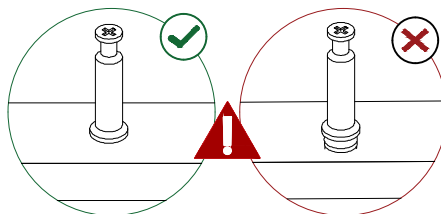

x2

6





⑨ 2pcs



⑩ 2pcs



①B 8pcs

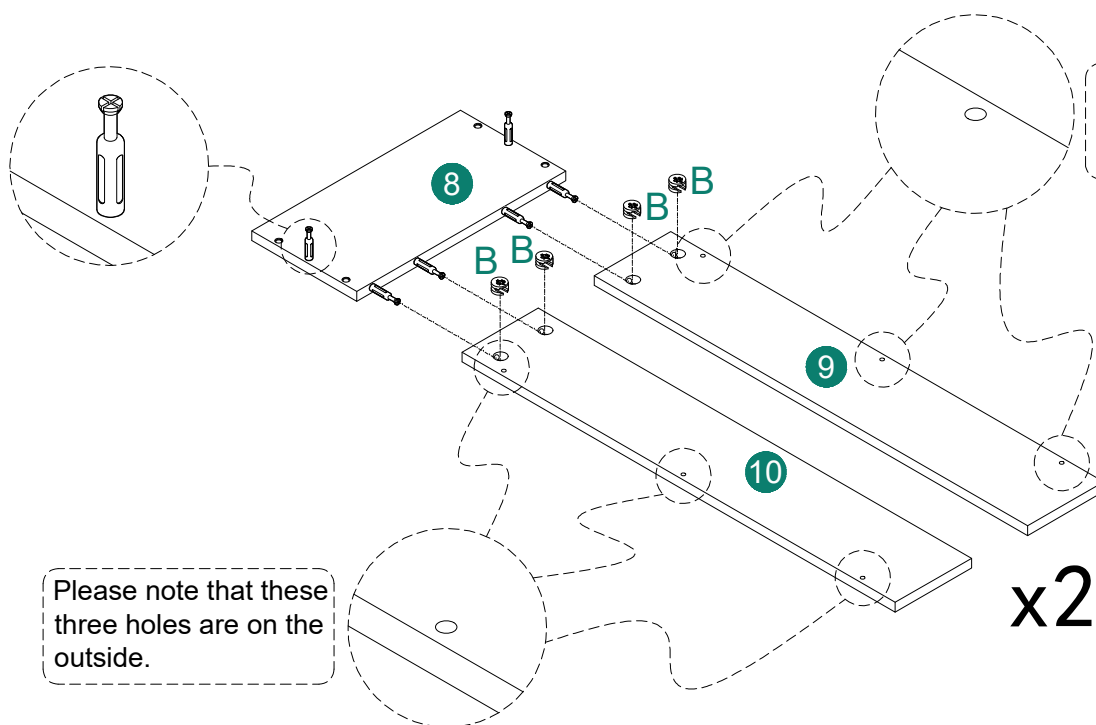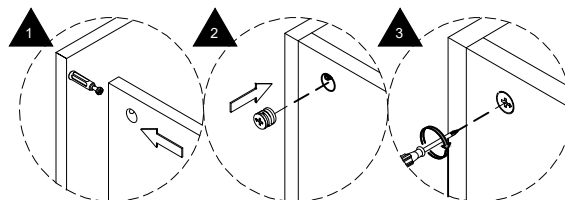


Please note that these three holes are on the outside.

Please note that these three holes are on the outside.

x2


7



② 2pcs

⑧ 8pcs

Pay attention to the orientation of the holes.

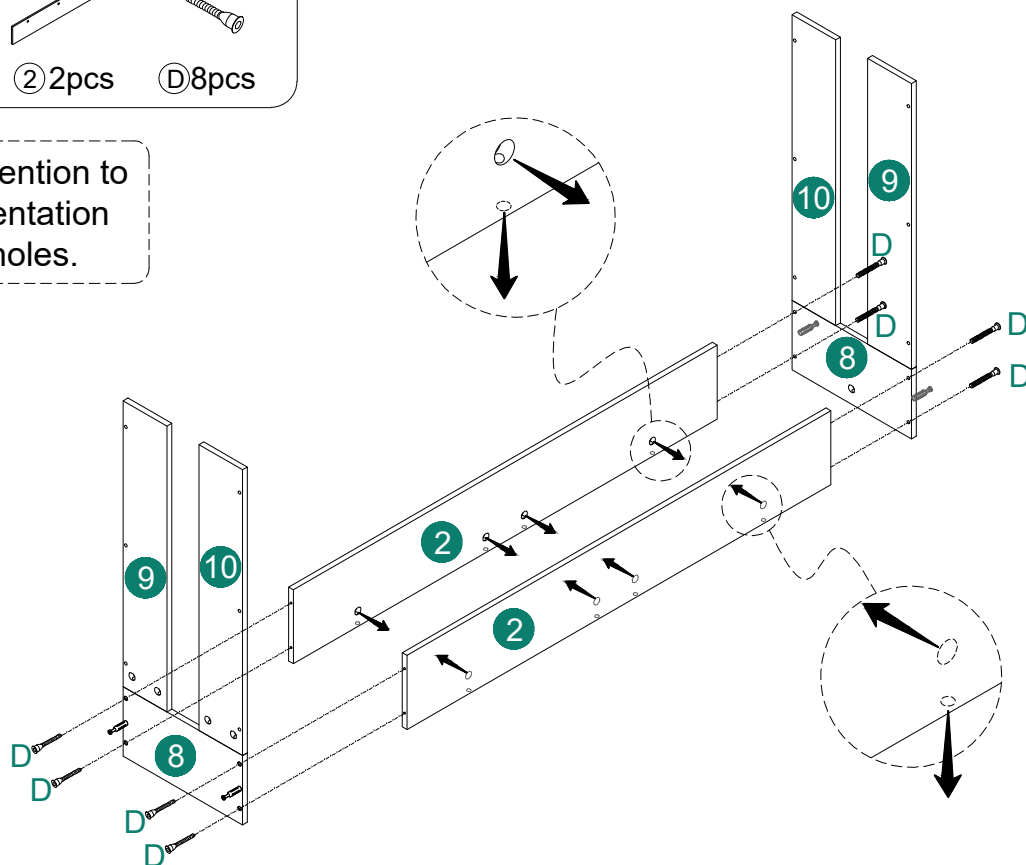



8




④ 4pcs



⑫ 12pcs

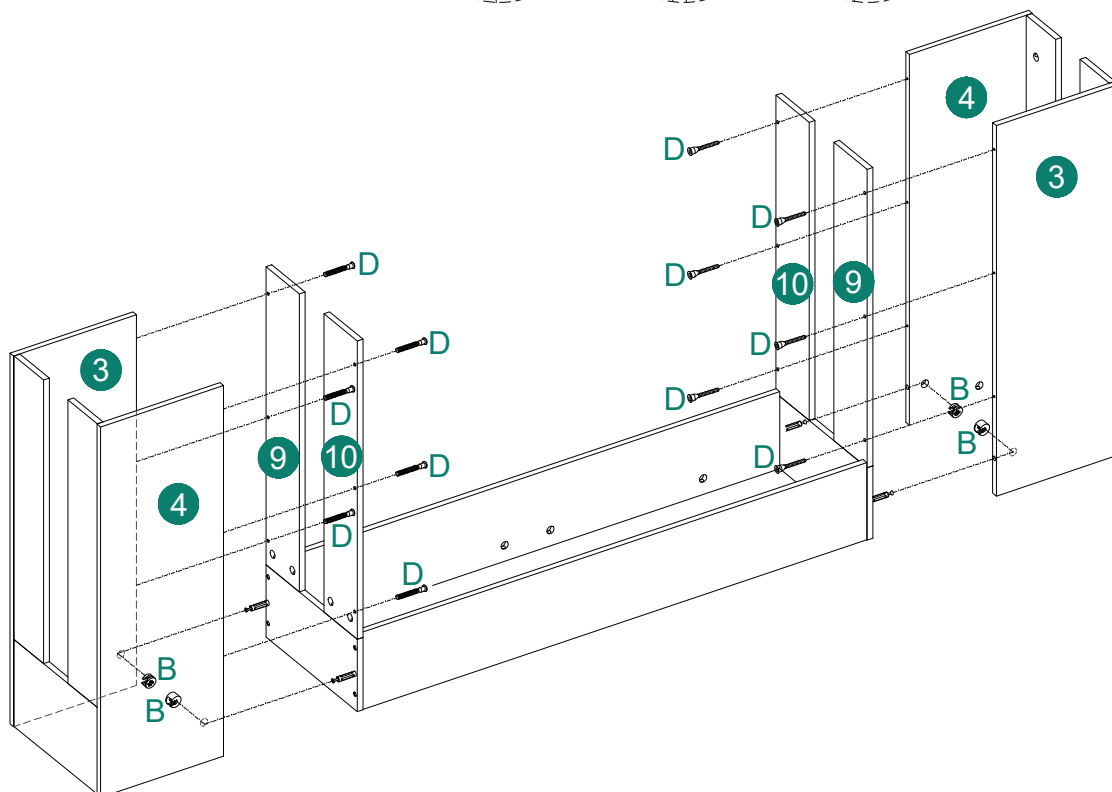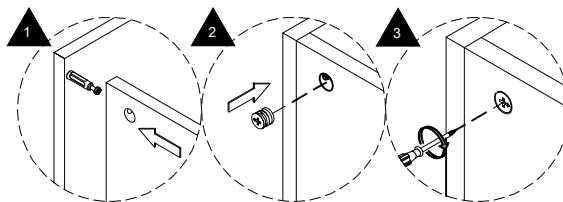


9




① 2pcs



Ⓐ 16pcs





Ⓒ 2pcs

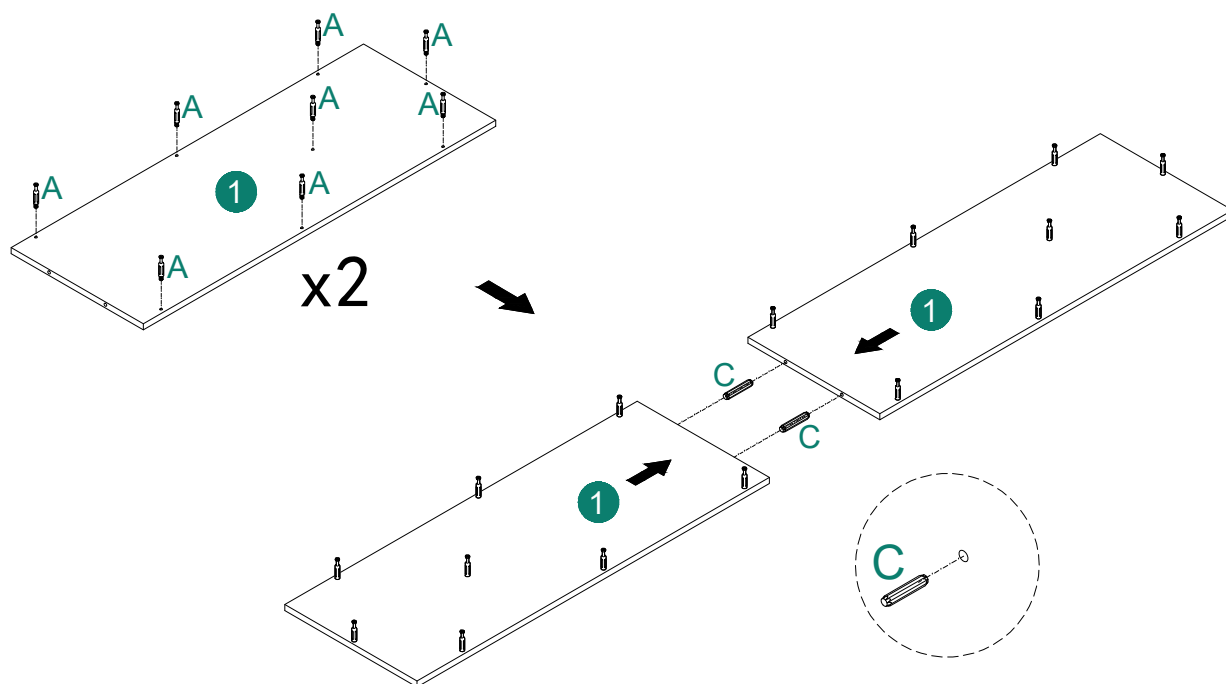


10





Ⓑ 16pcs

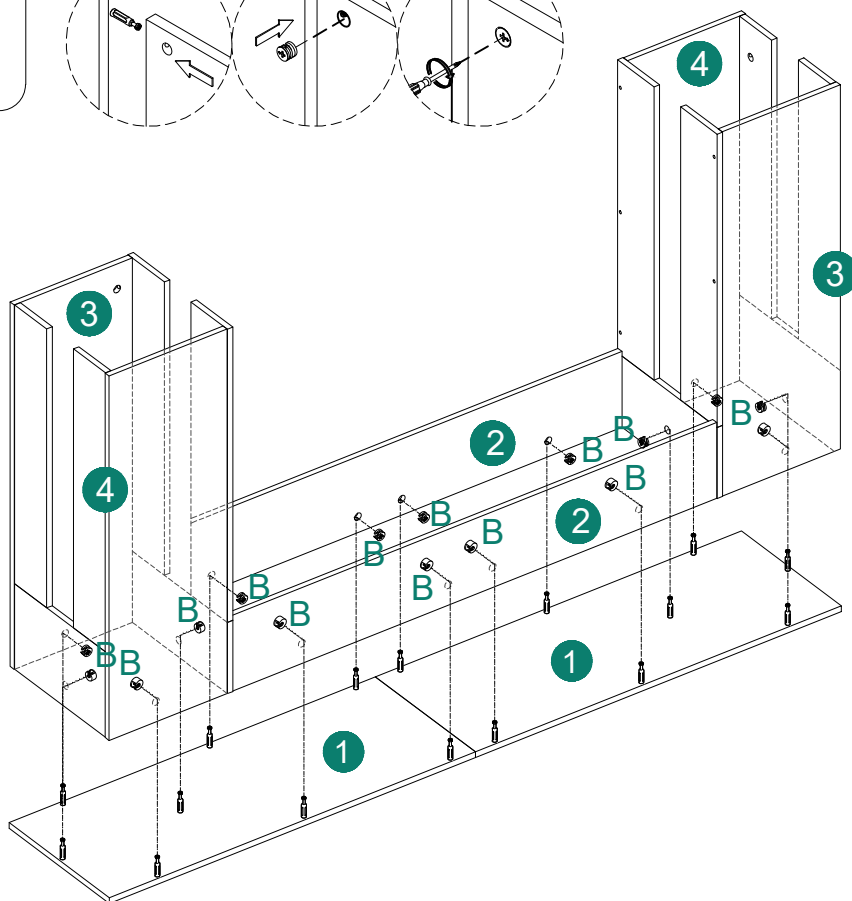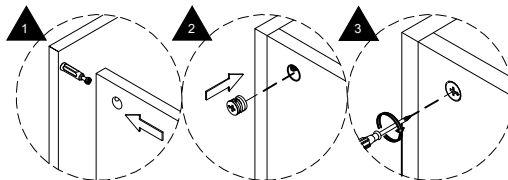

11



Ⓔ8pcs

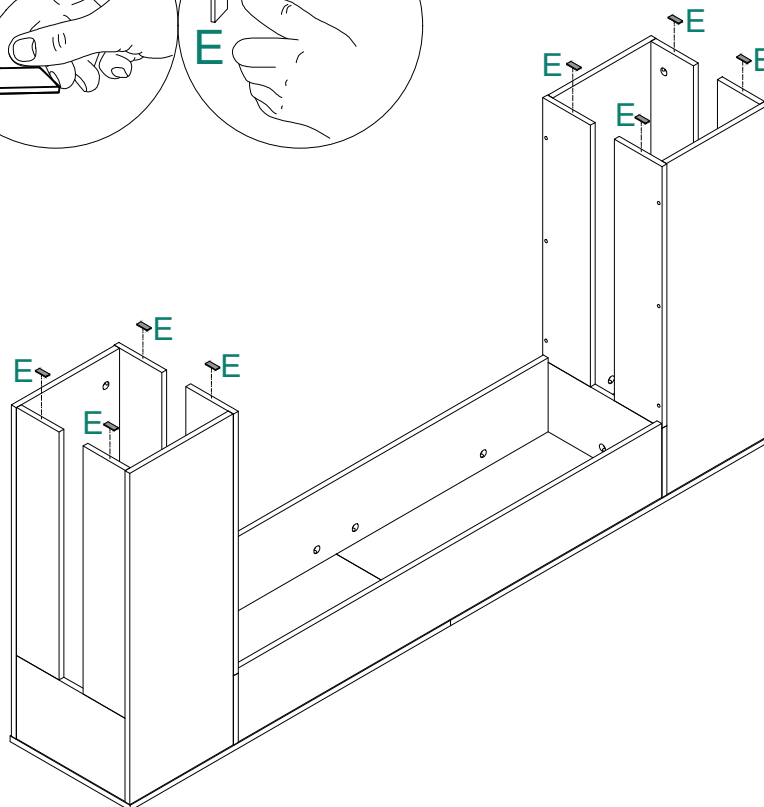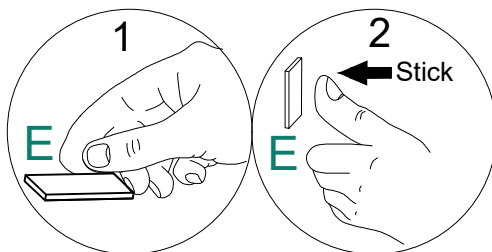

12




Ⓕ2pcs


Ⓖ2pcs

Ⓕ2pcs


Ⓖ2pcs

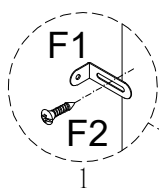


1

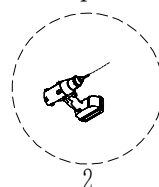


2

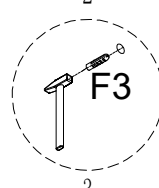

3

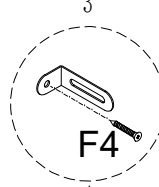


4

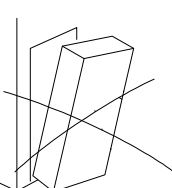

F1
F2

F1 F2

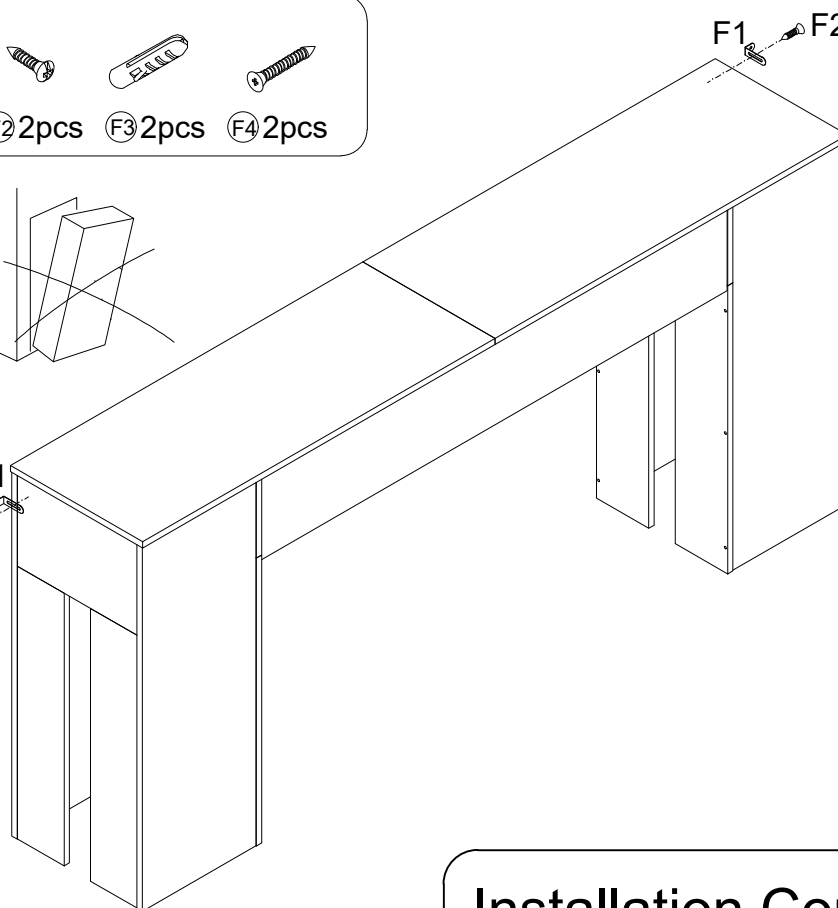

Installation Completed