




Product Installation Instructions

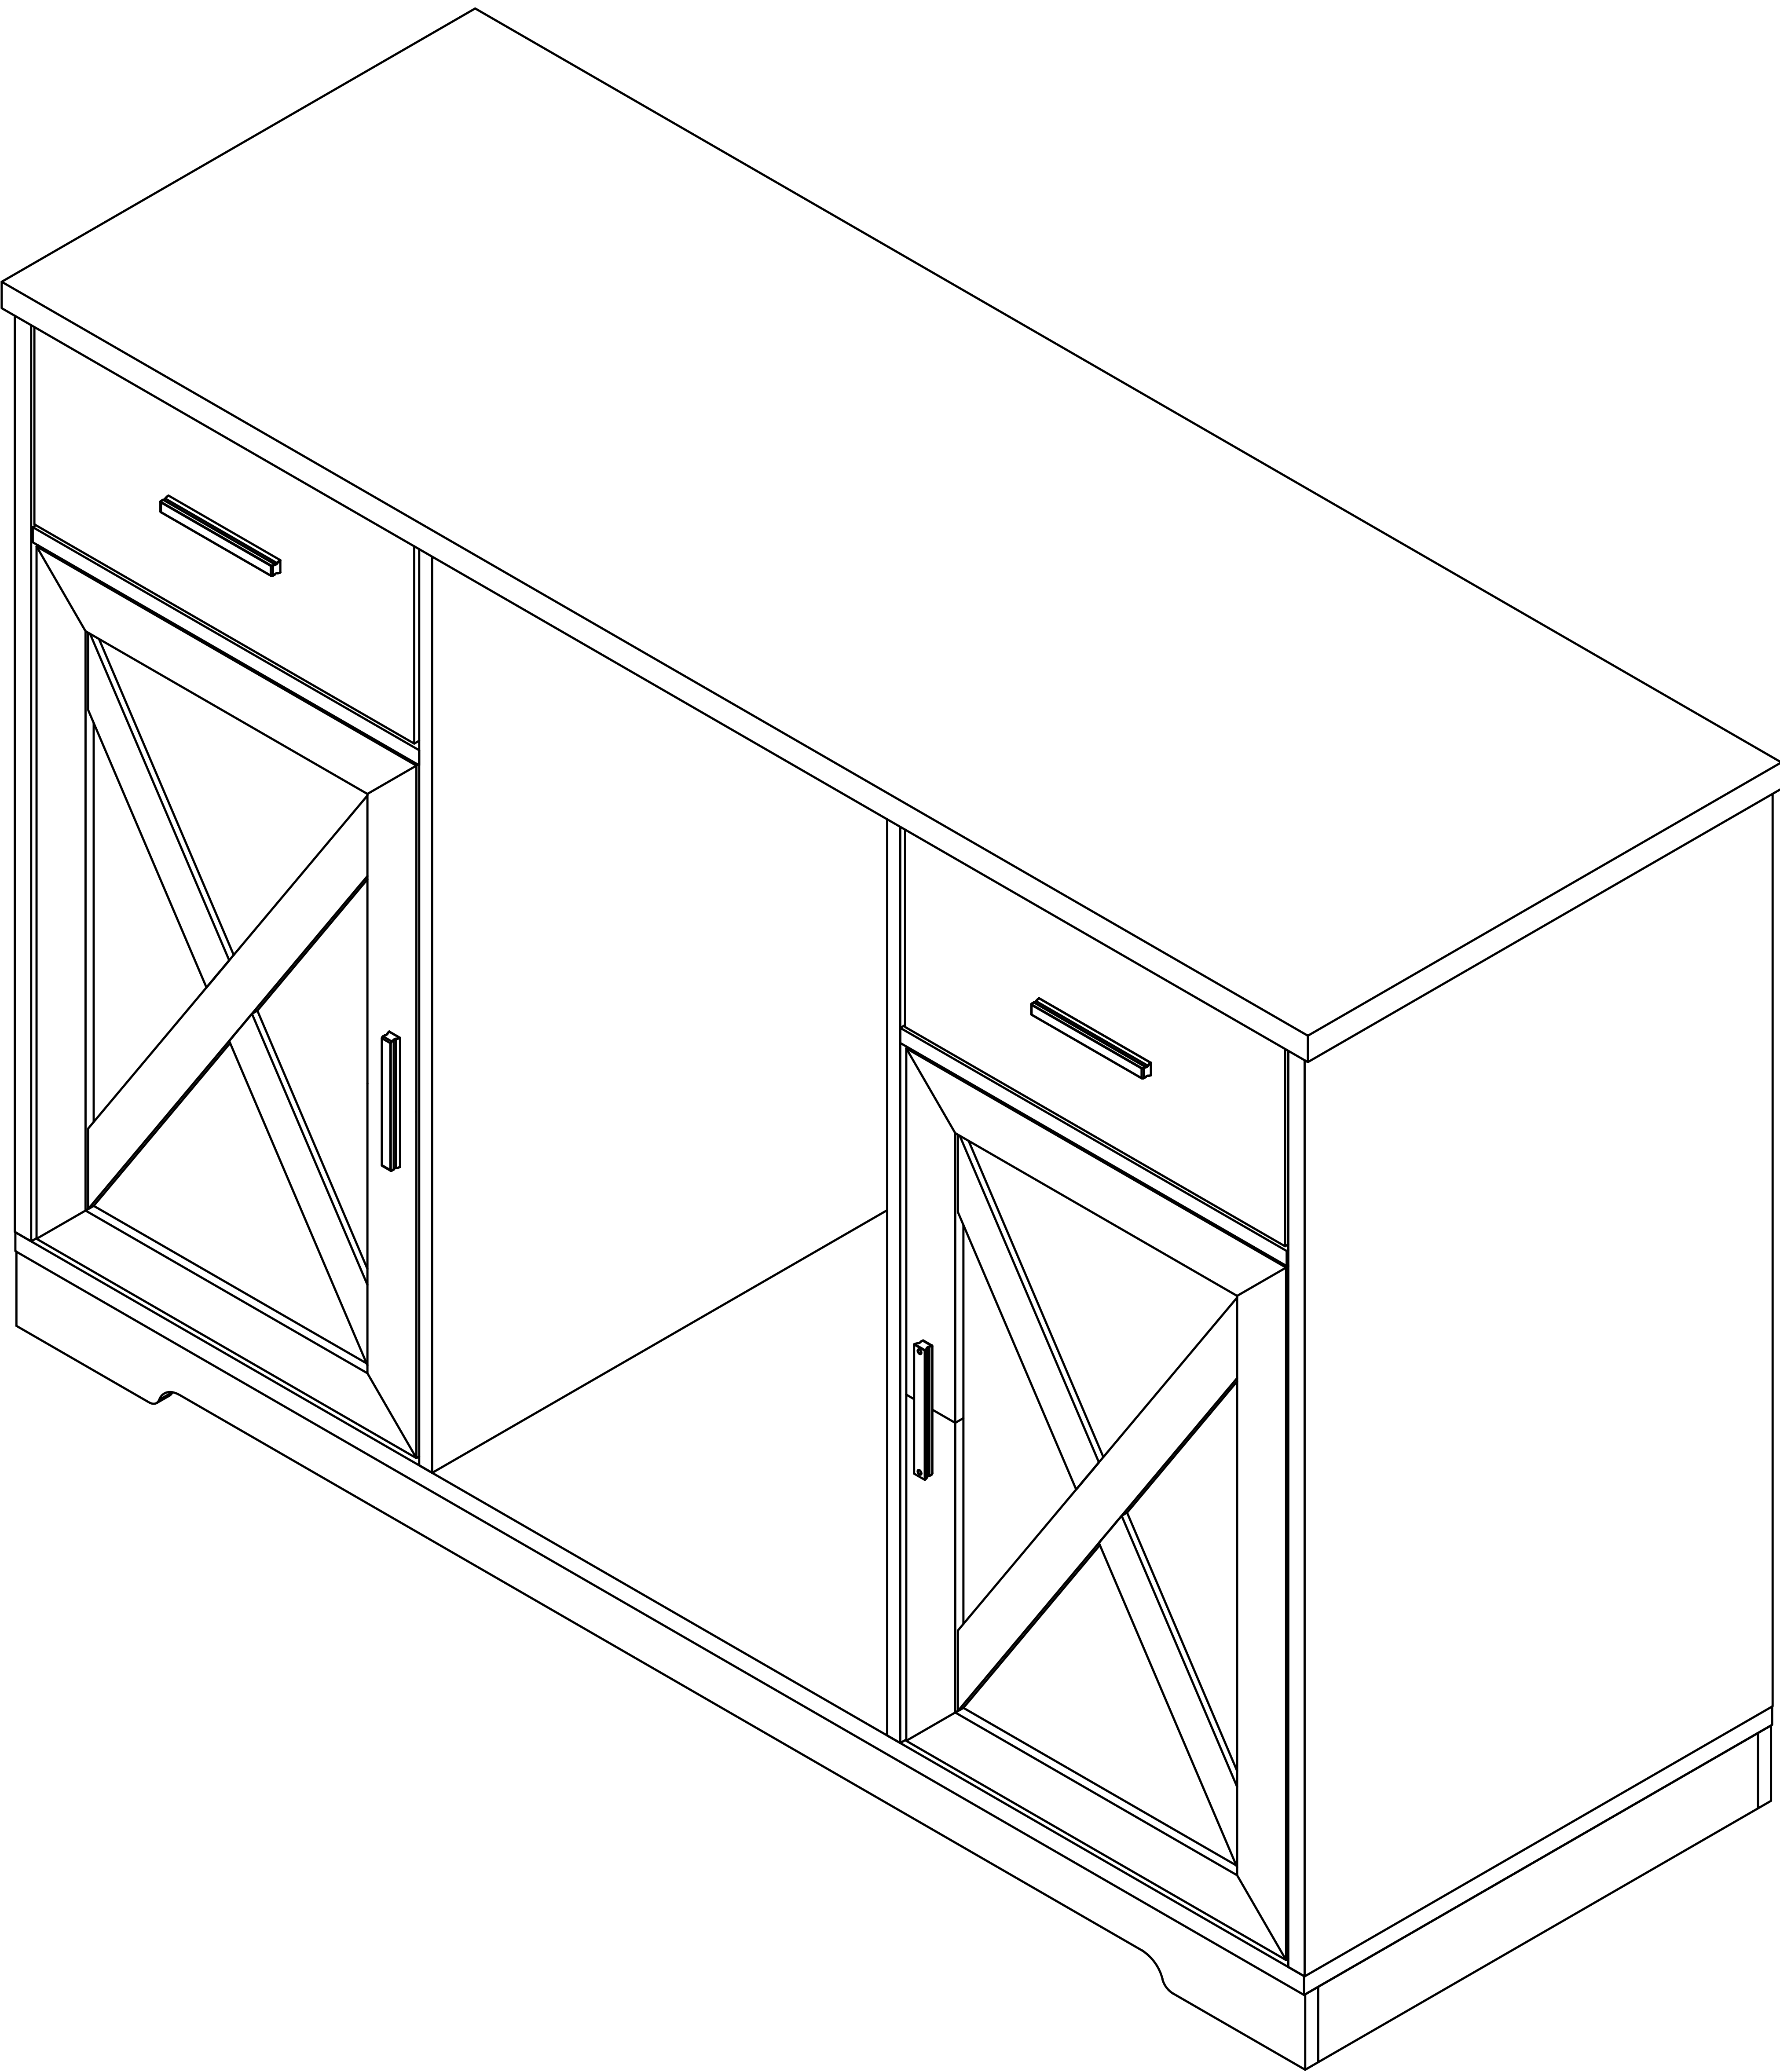


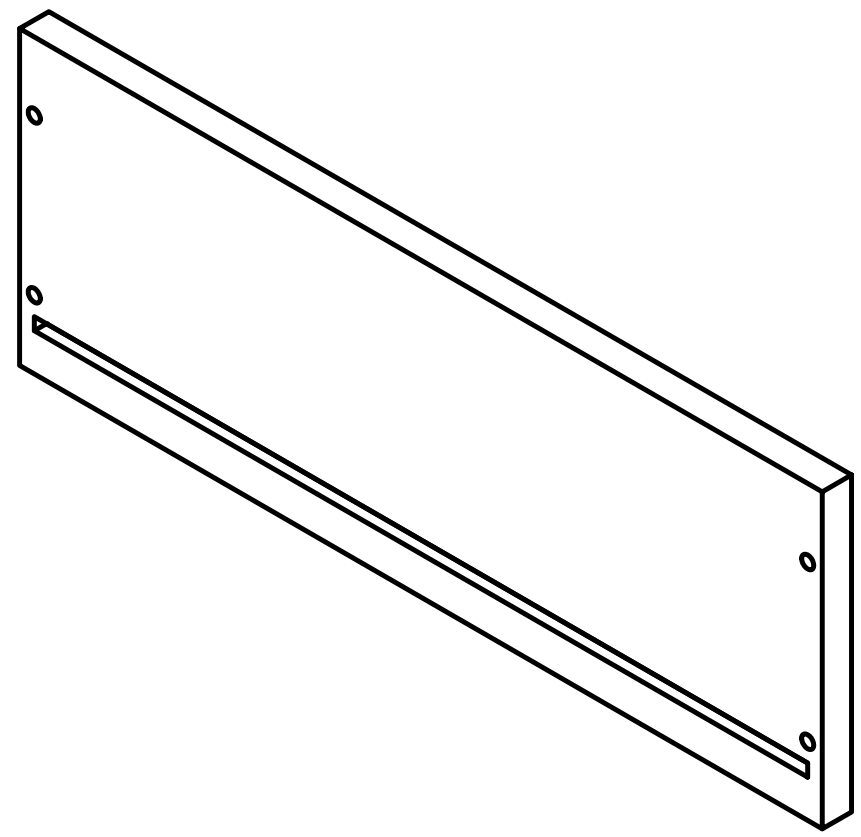


A x2

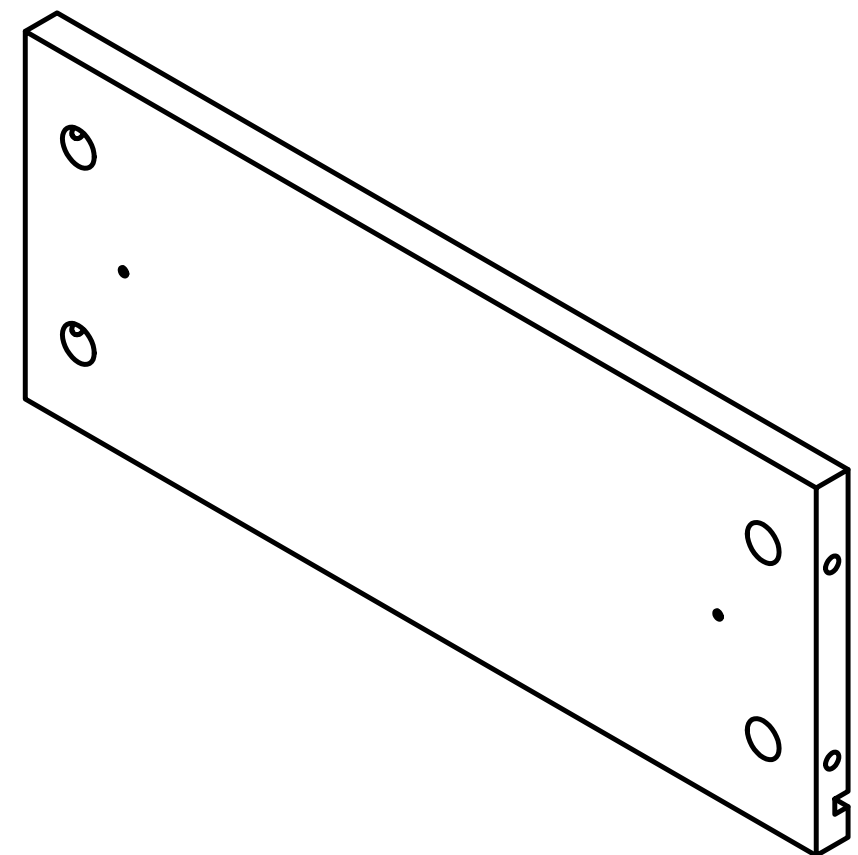


B x4

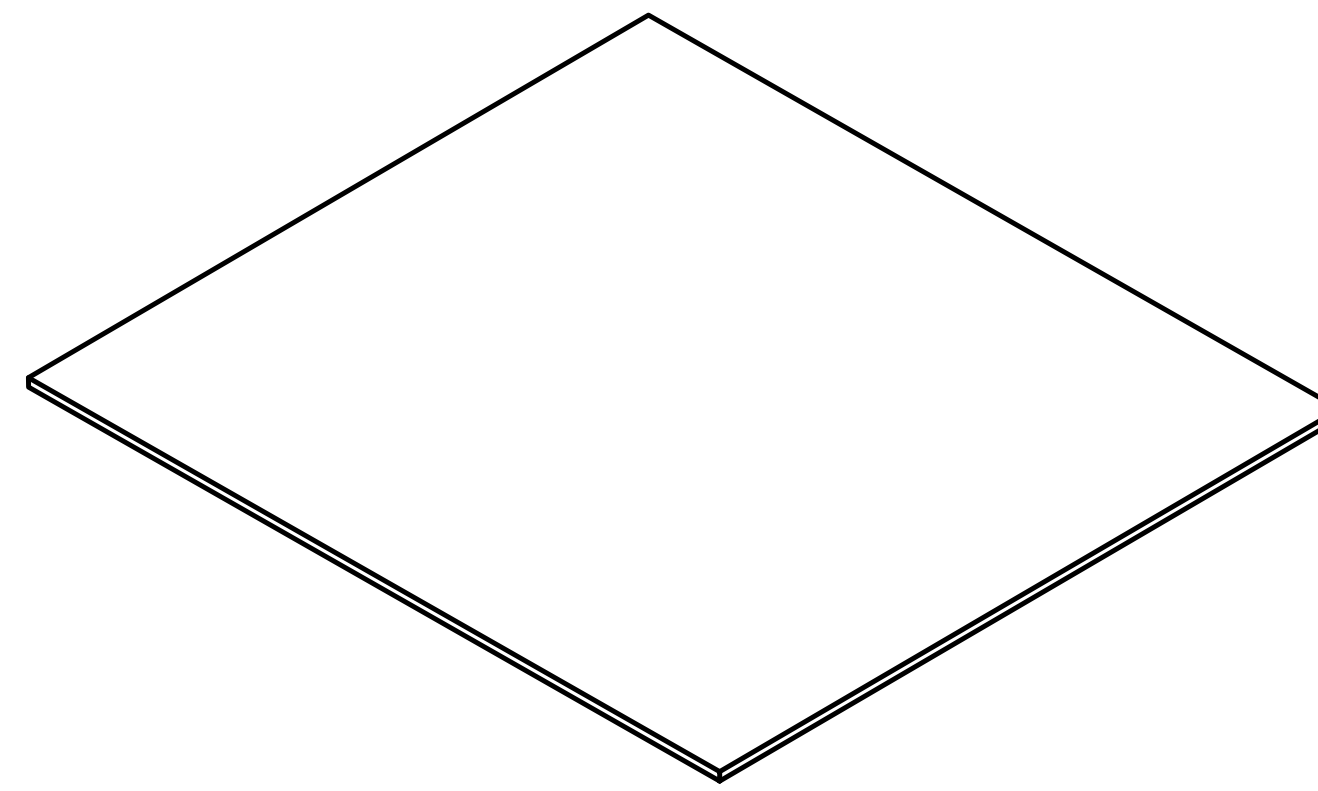


C x2

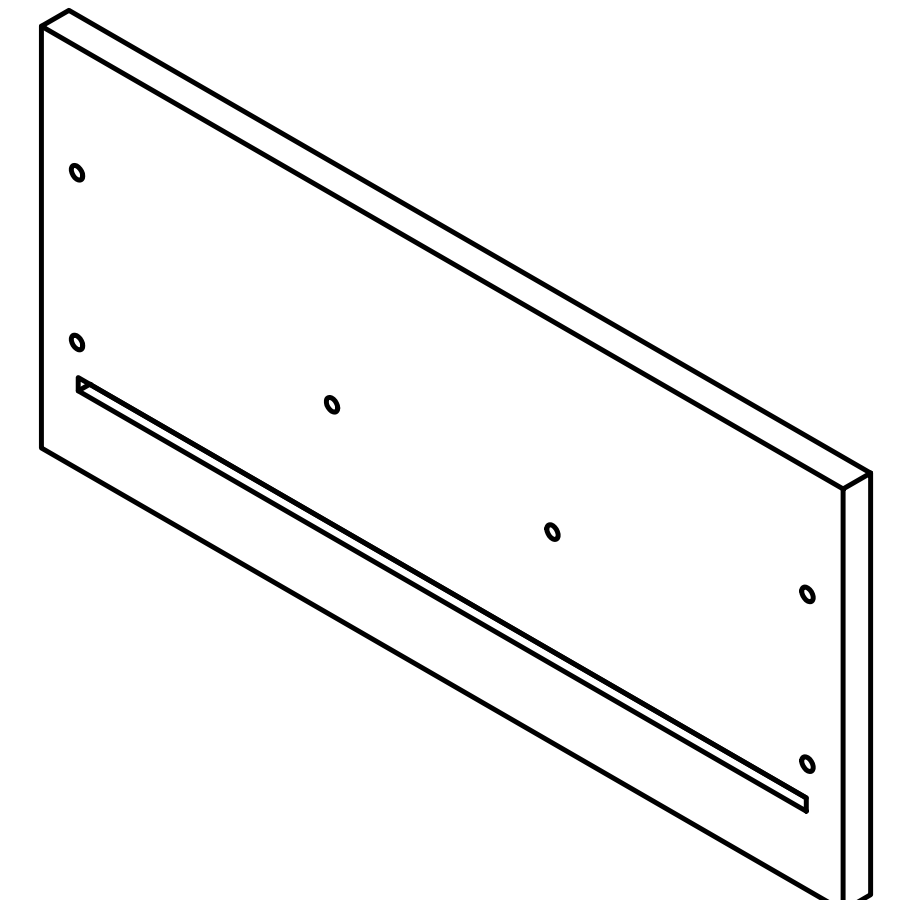


D x2

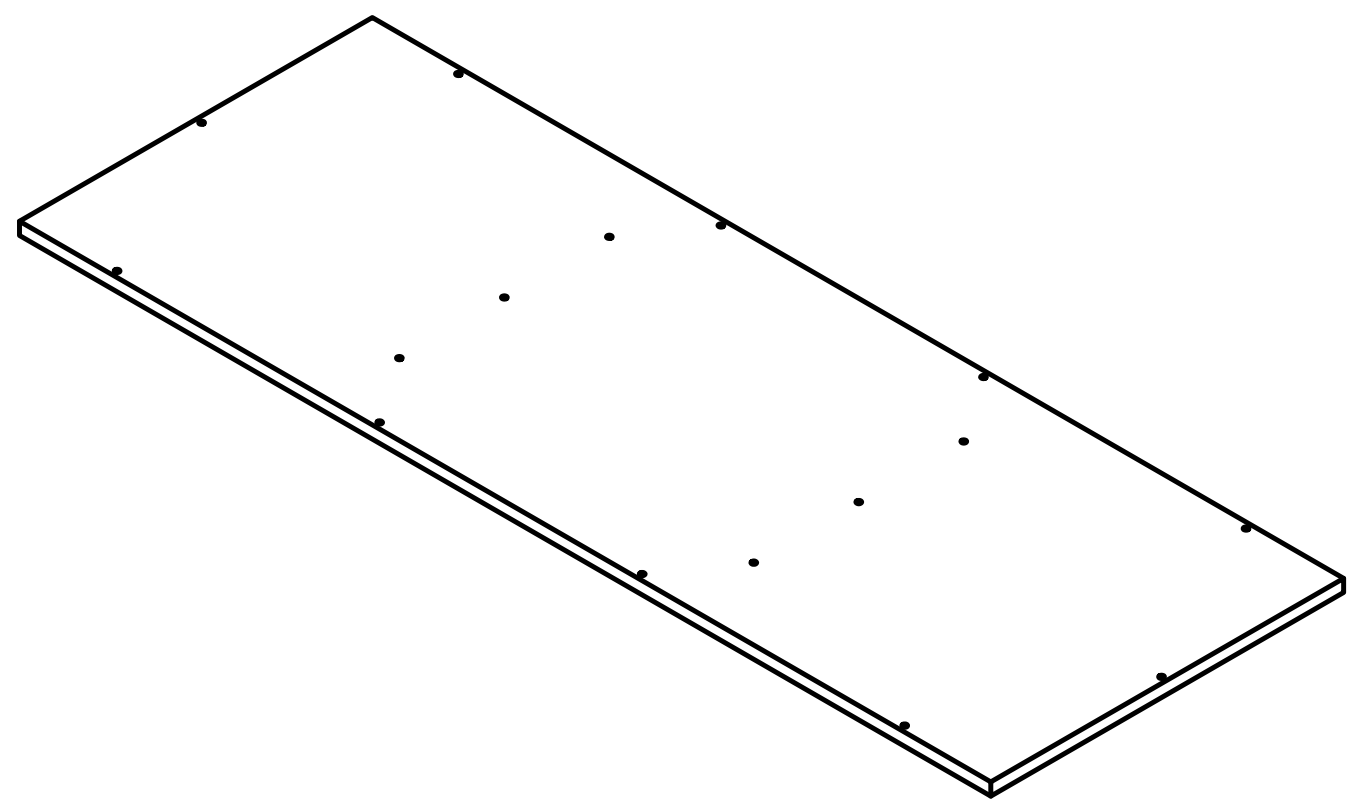


E x1

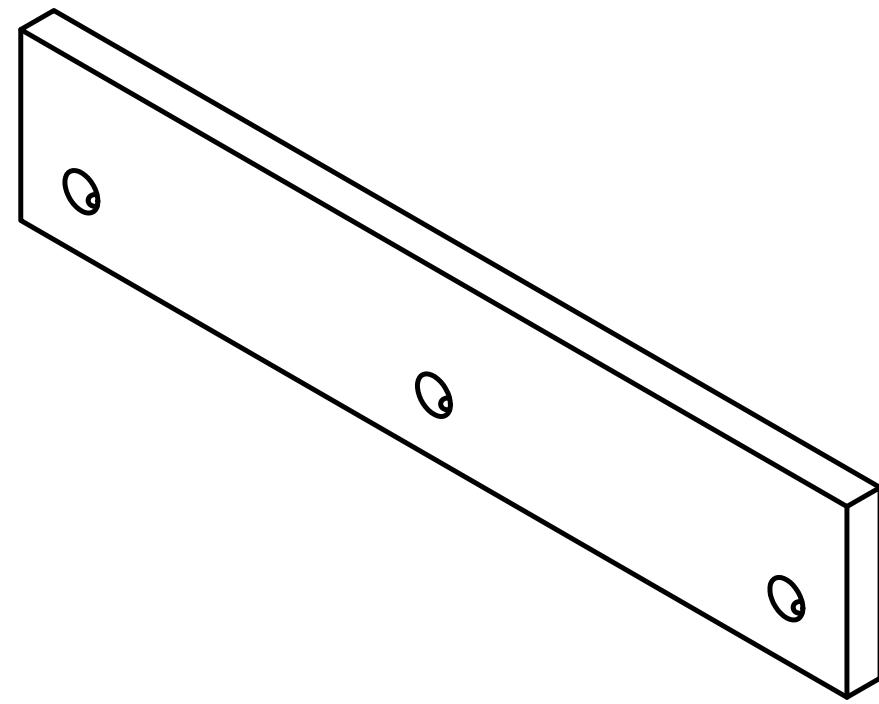


F x2

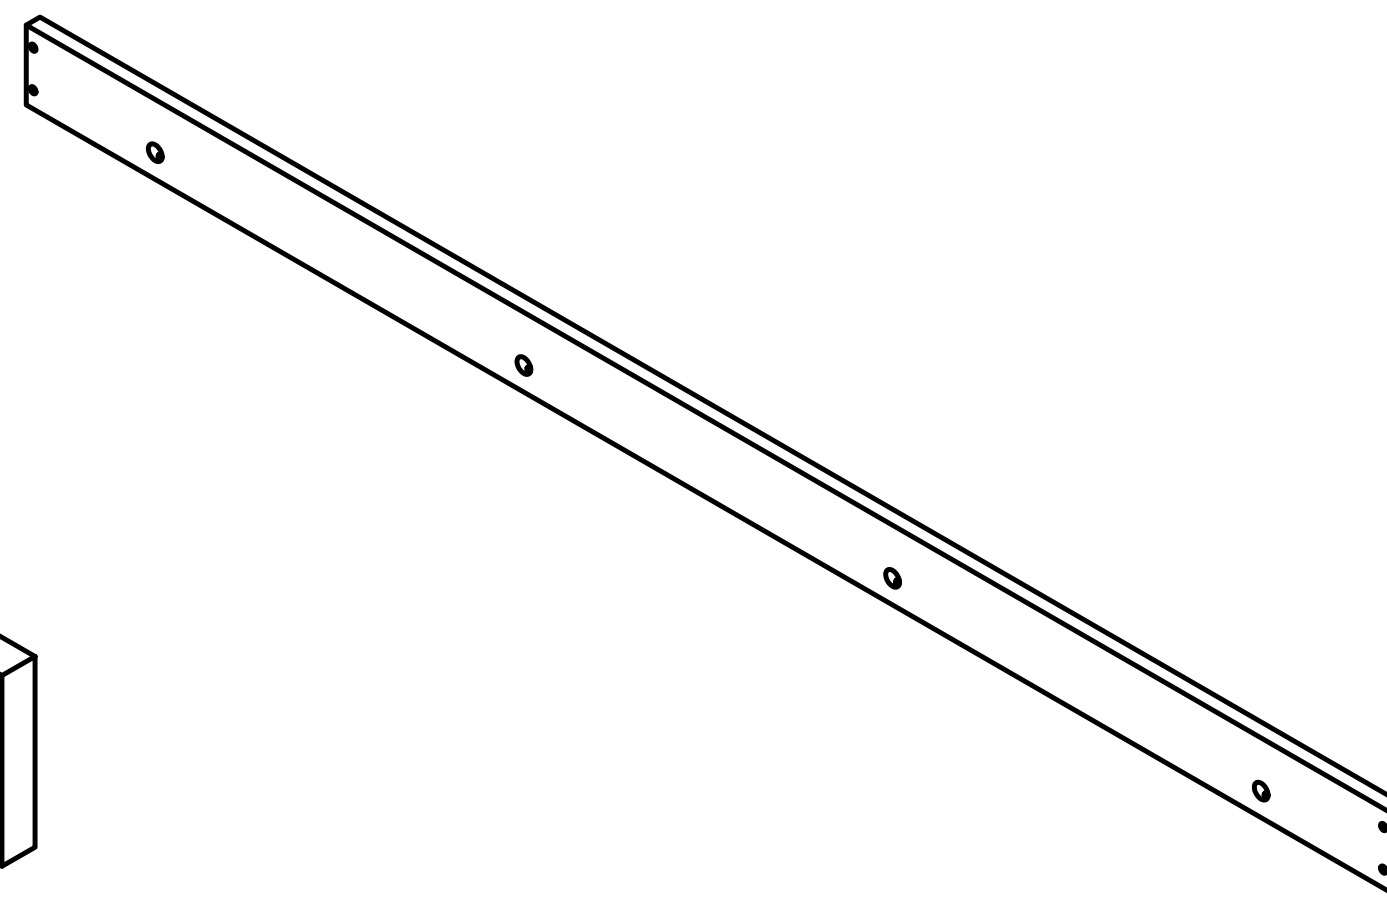


G x1

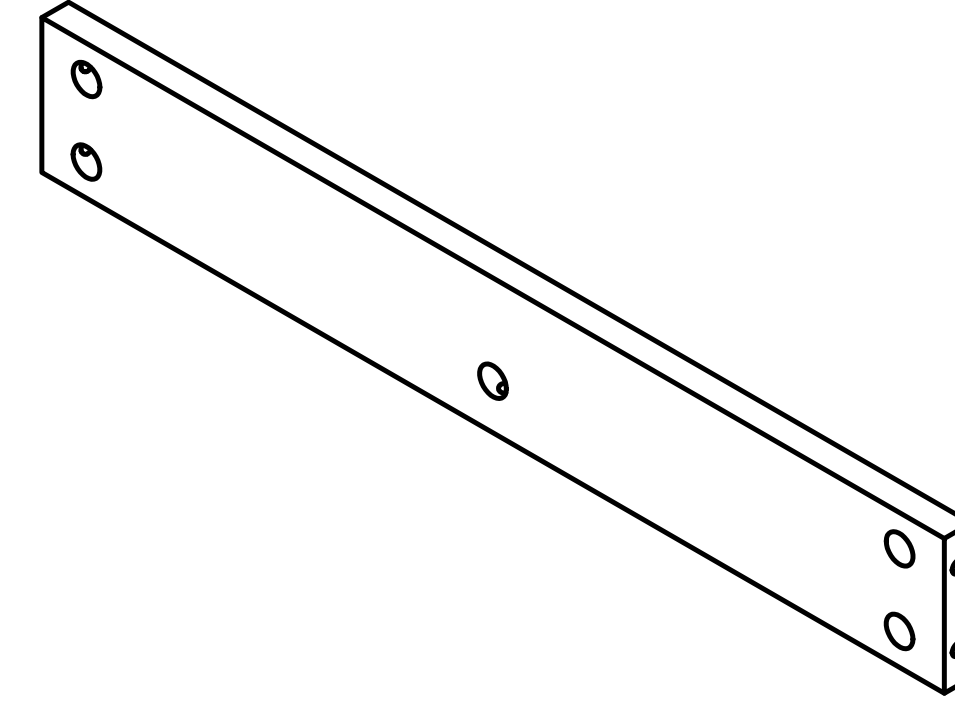


H x2

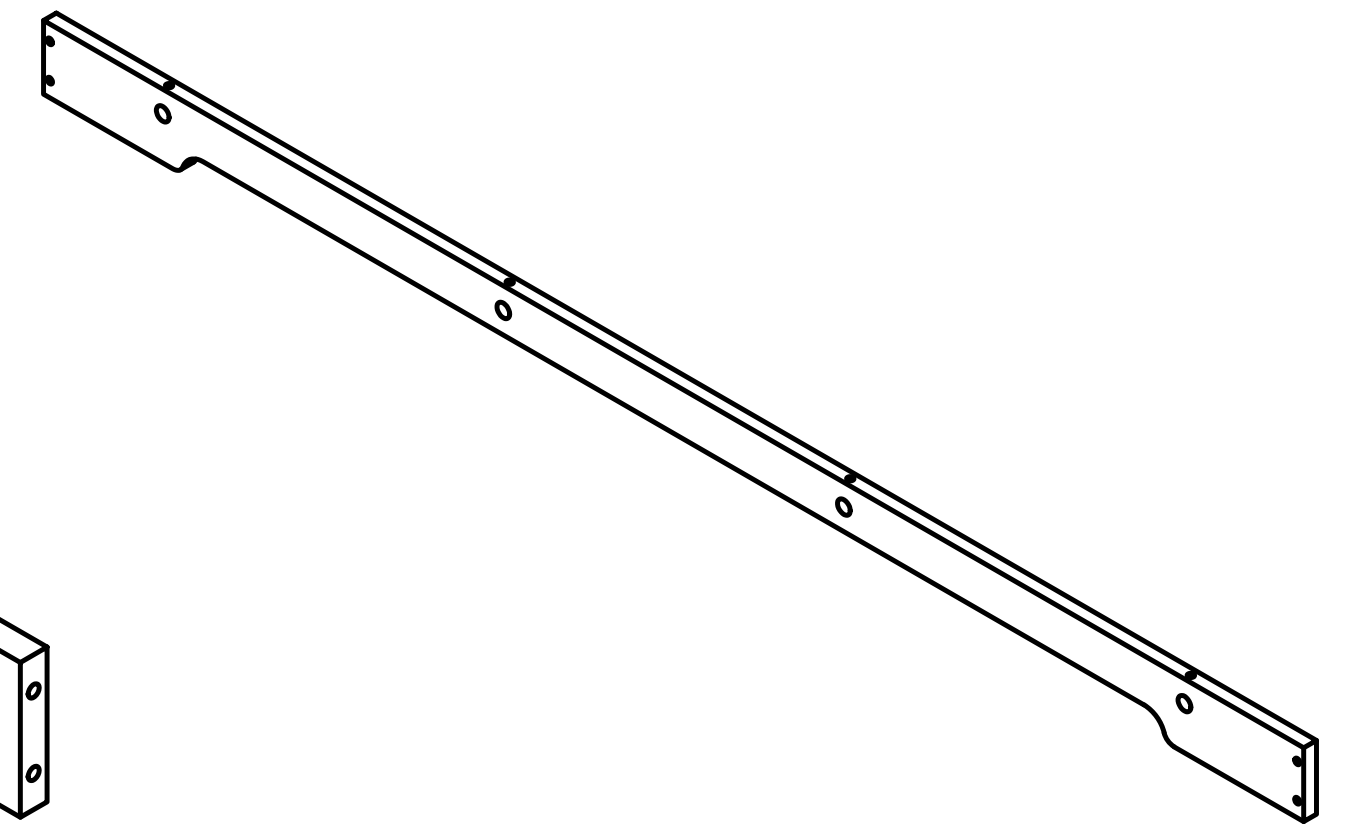


I x1

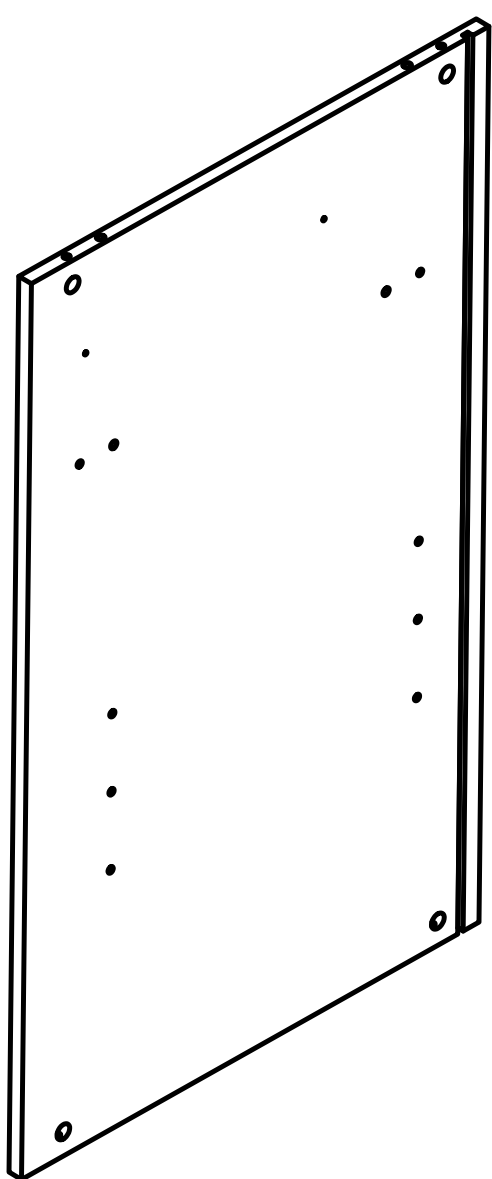


J x1

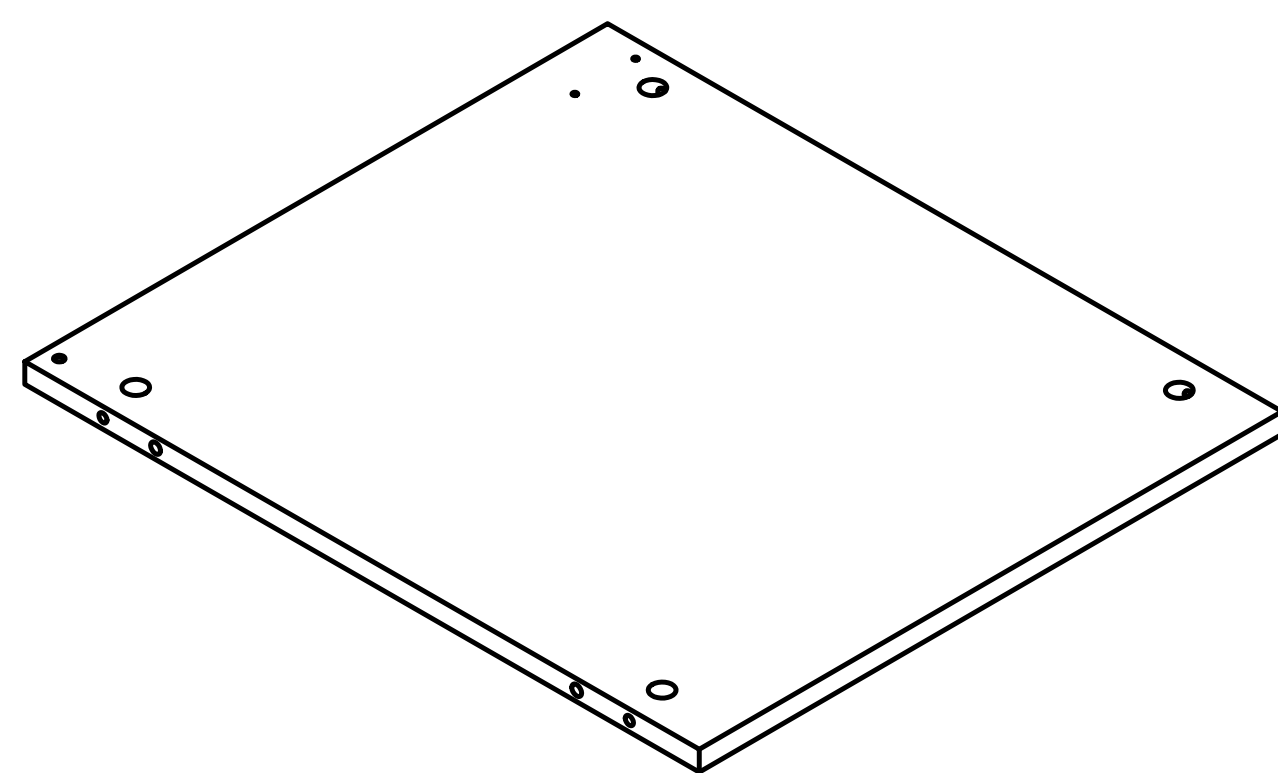


K x1

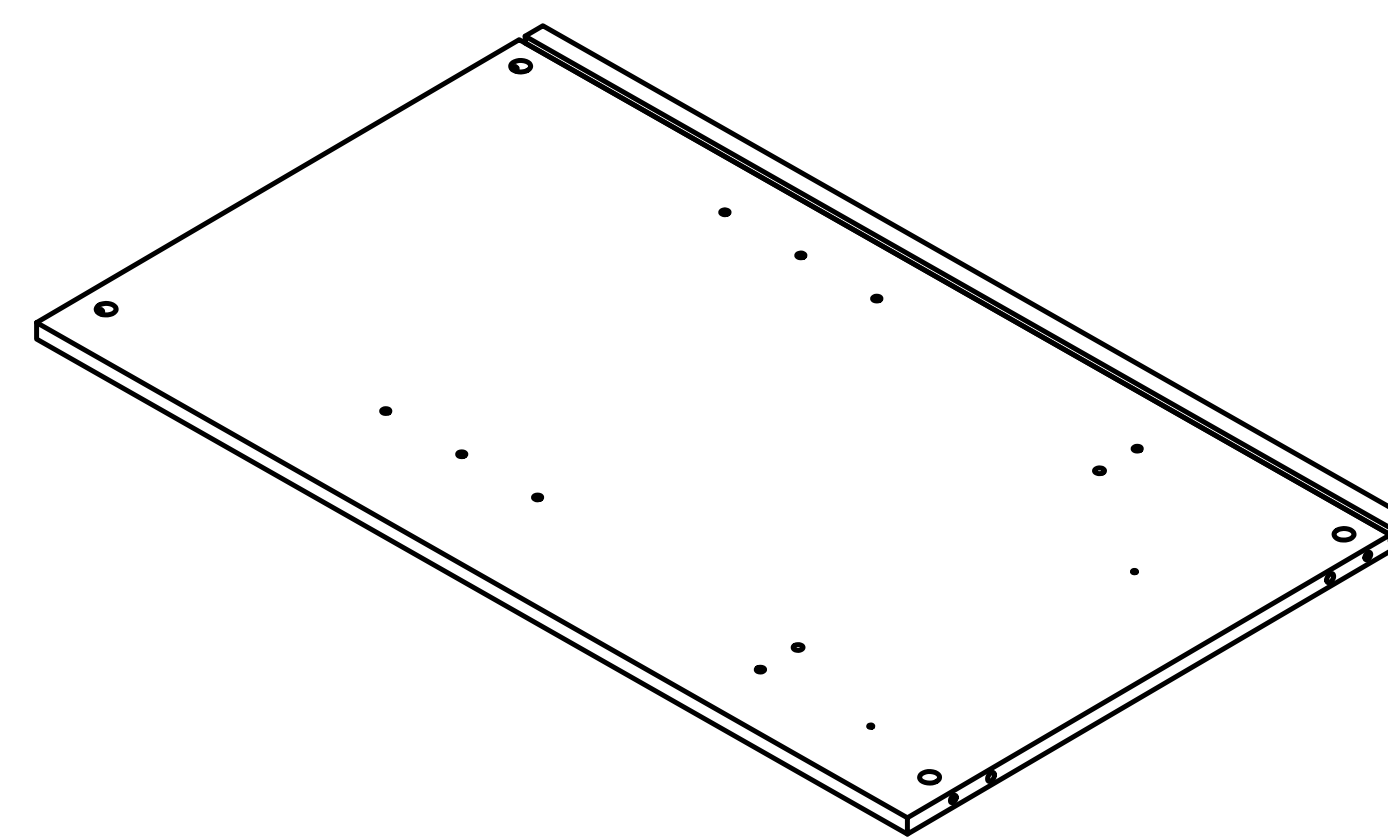


L x1

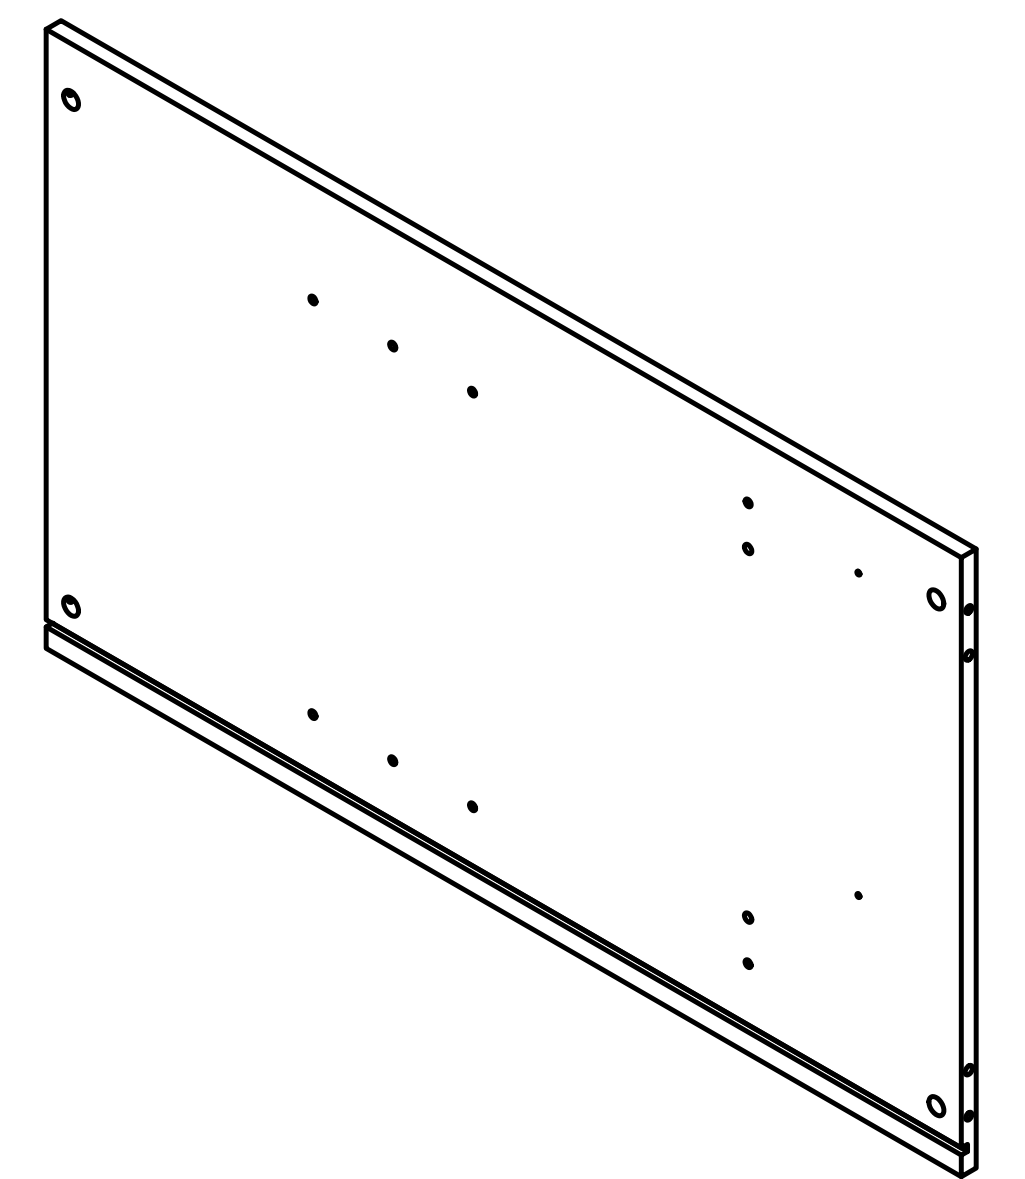


Mx1

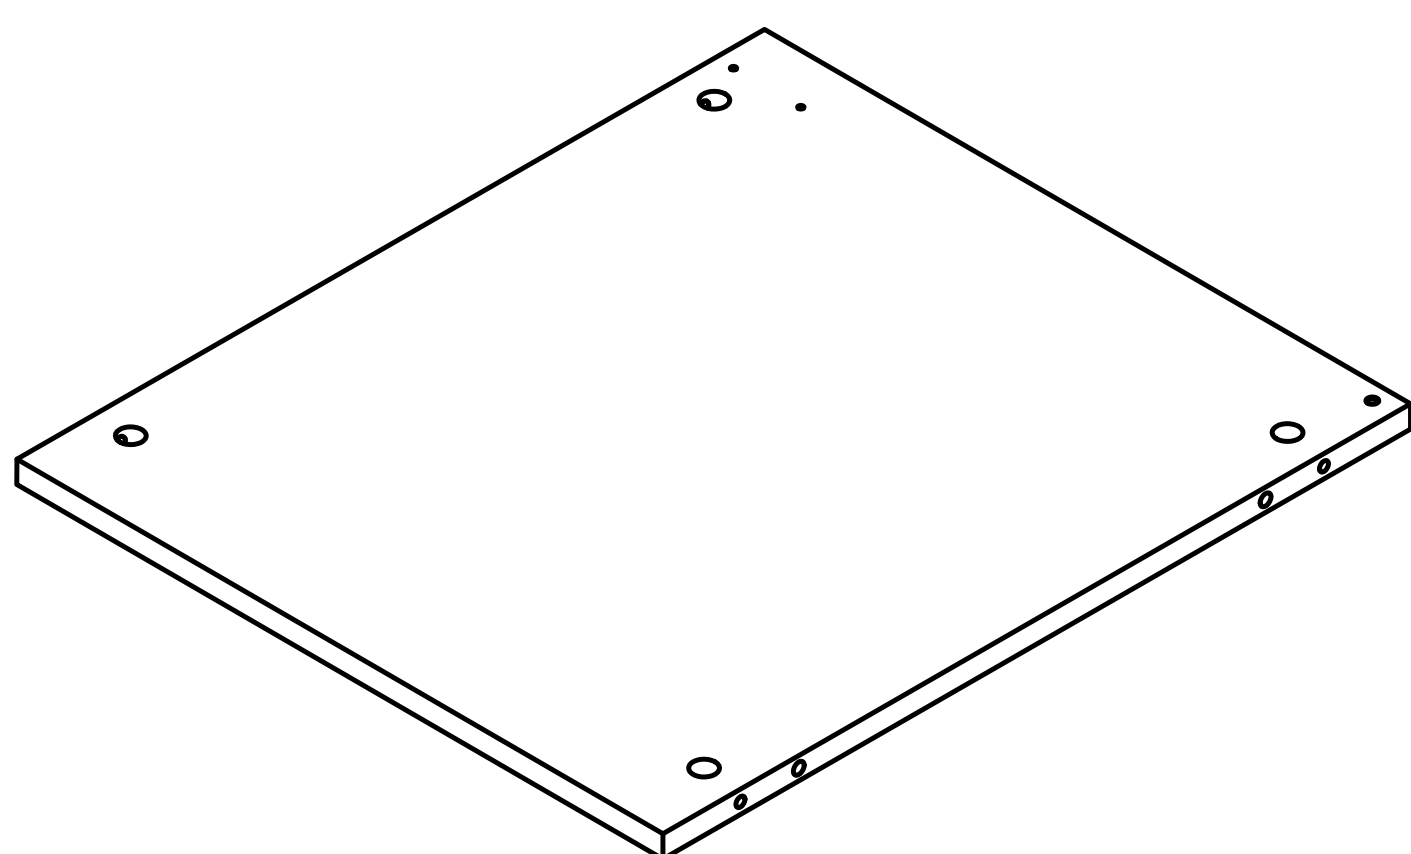


N x1

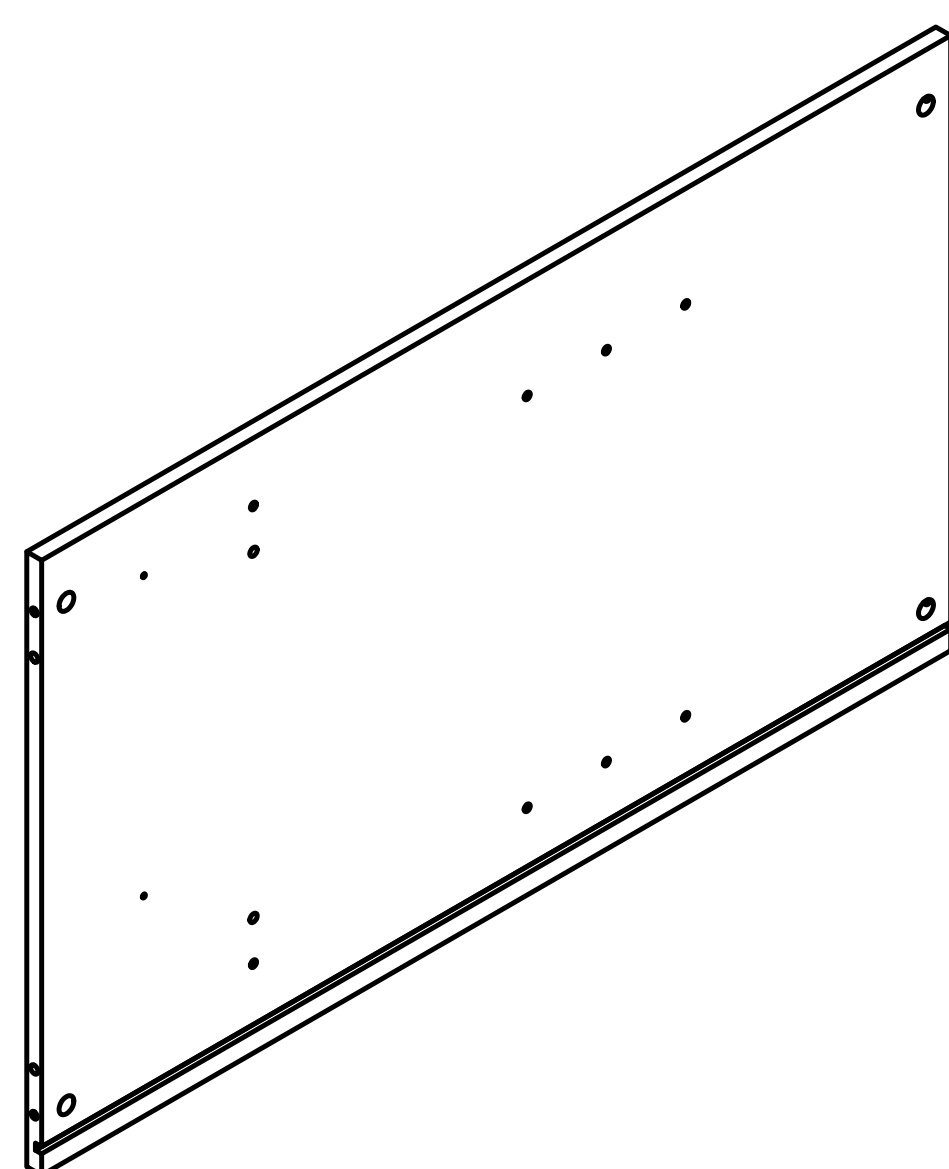


Ox1

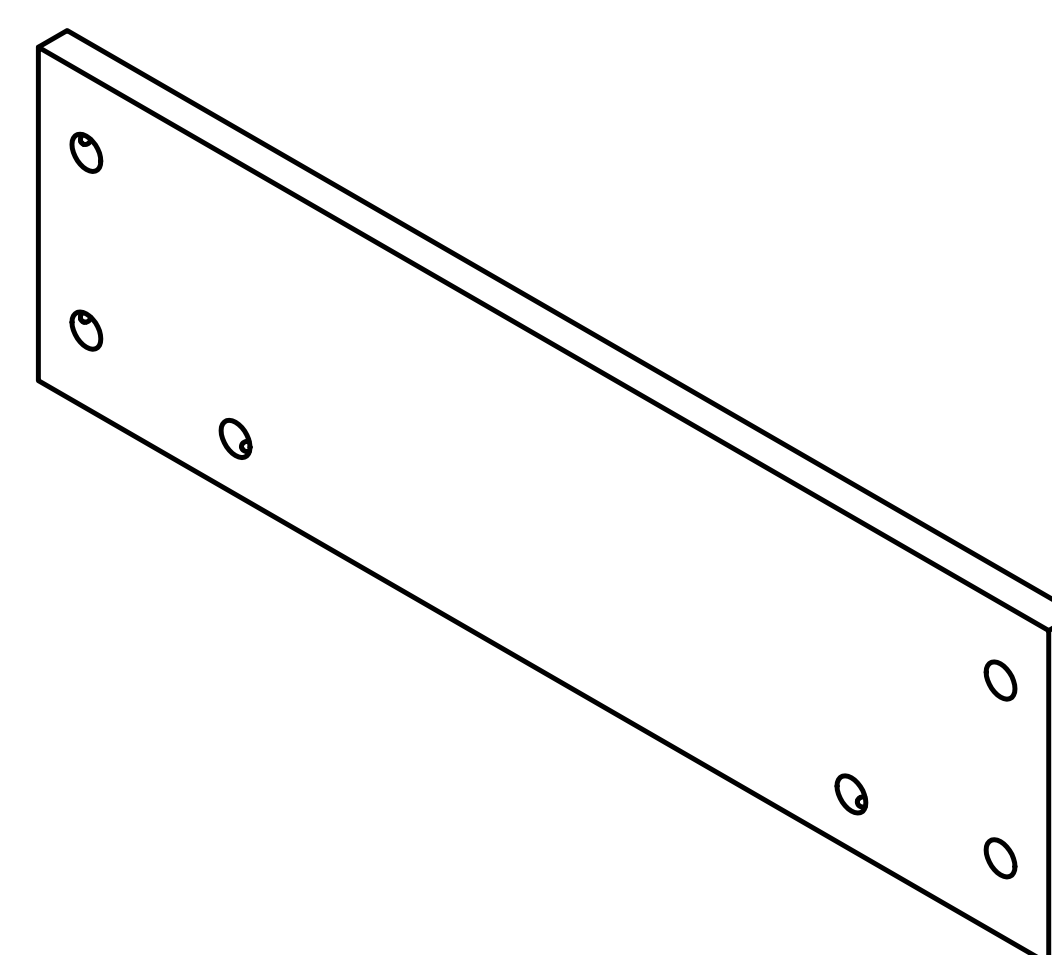


P x1

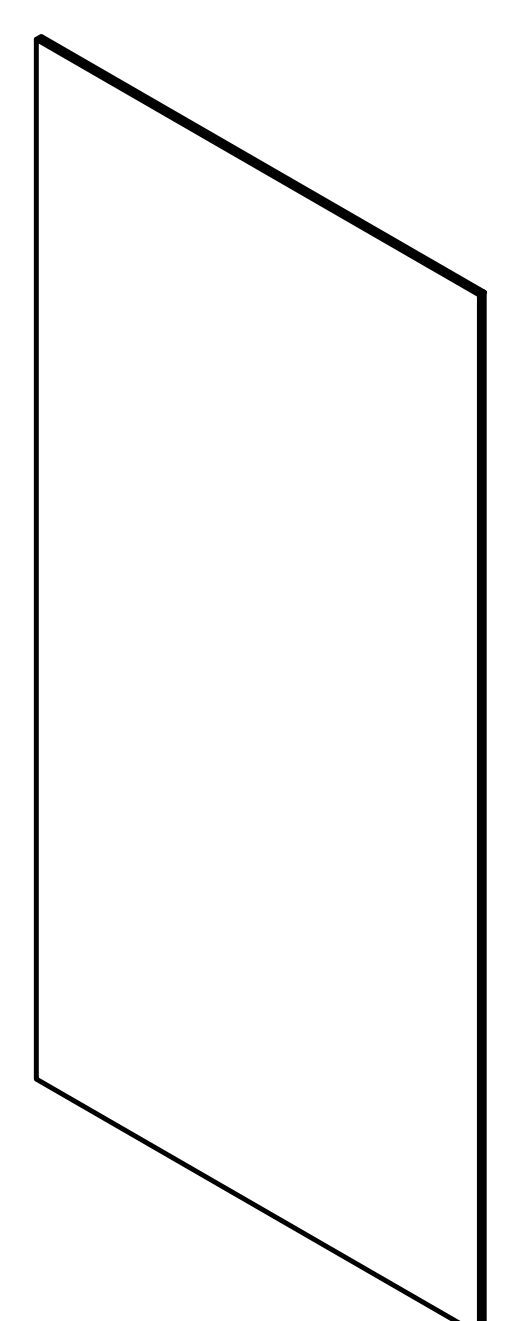


Qx2

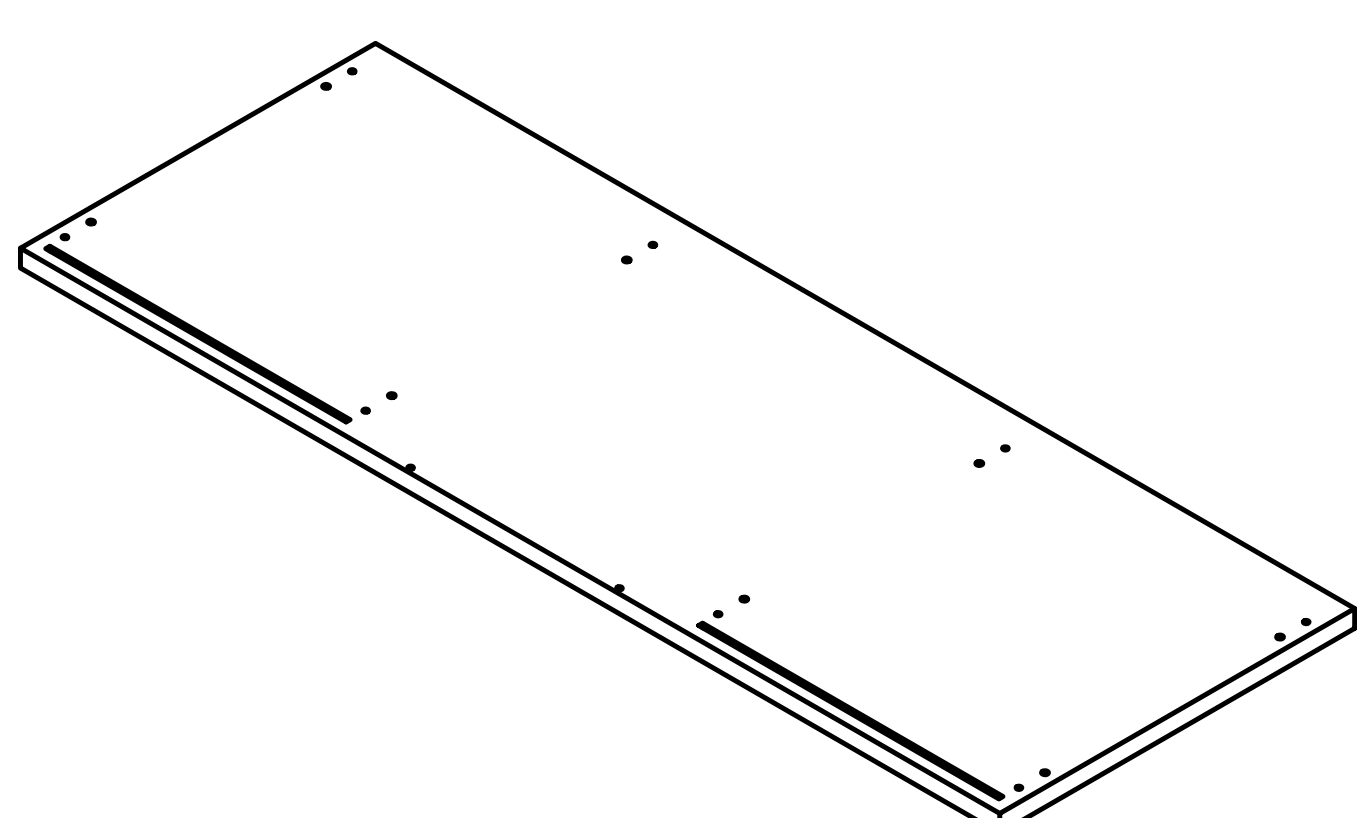


R x1

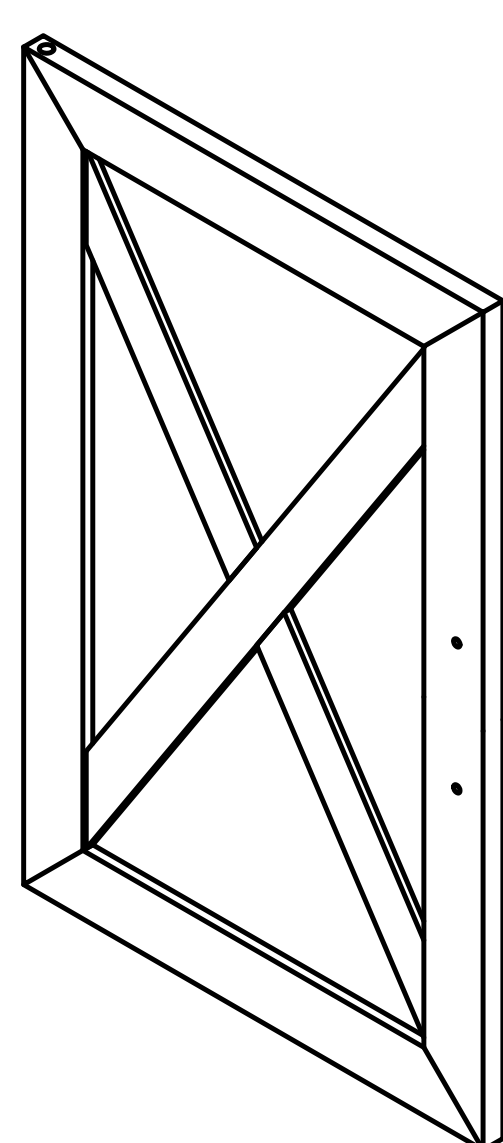


S x1

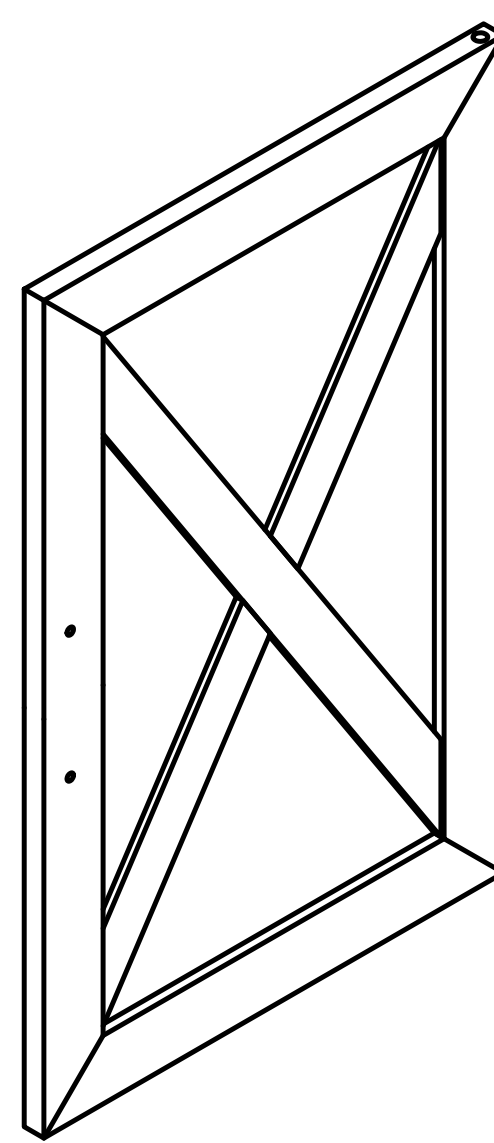

















T x1

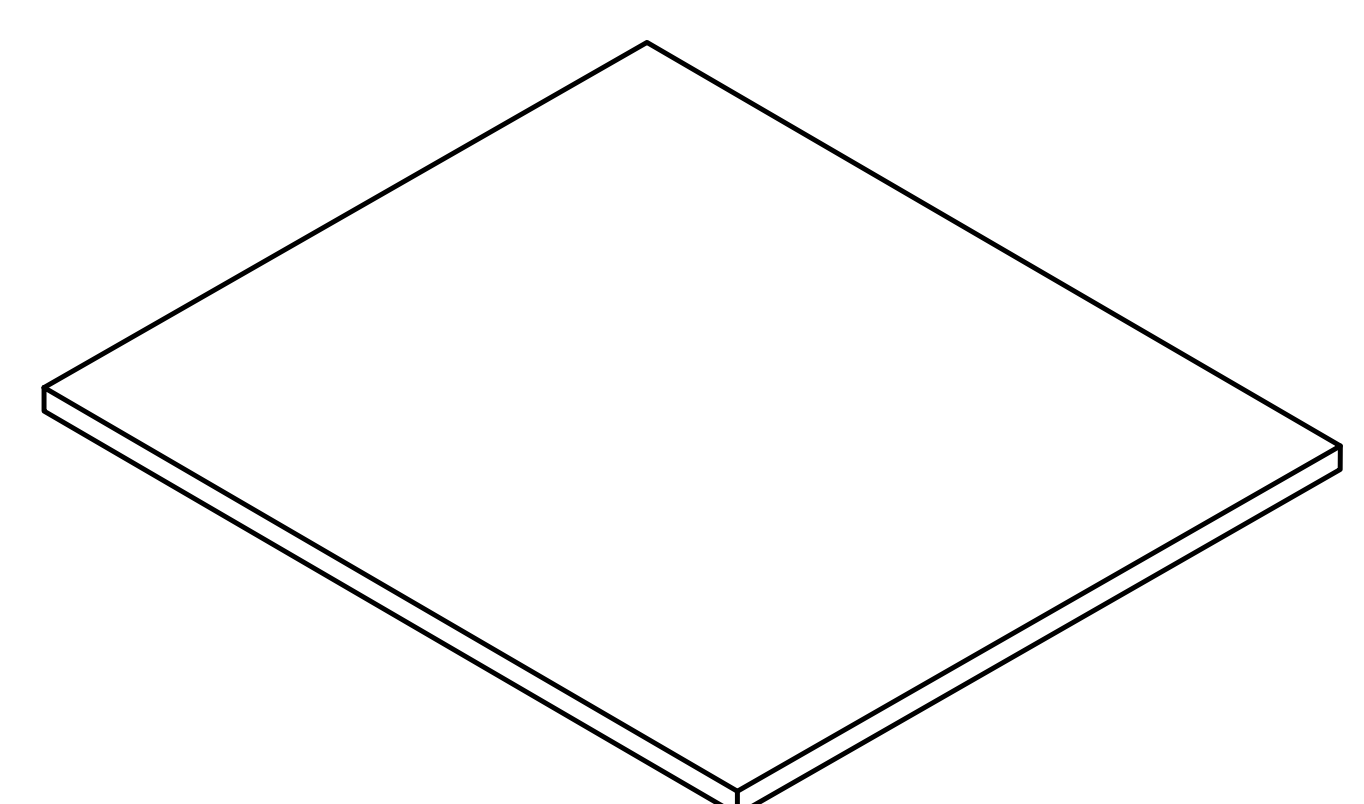


U x2

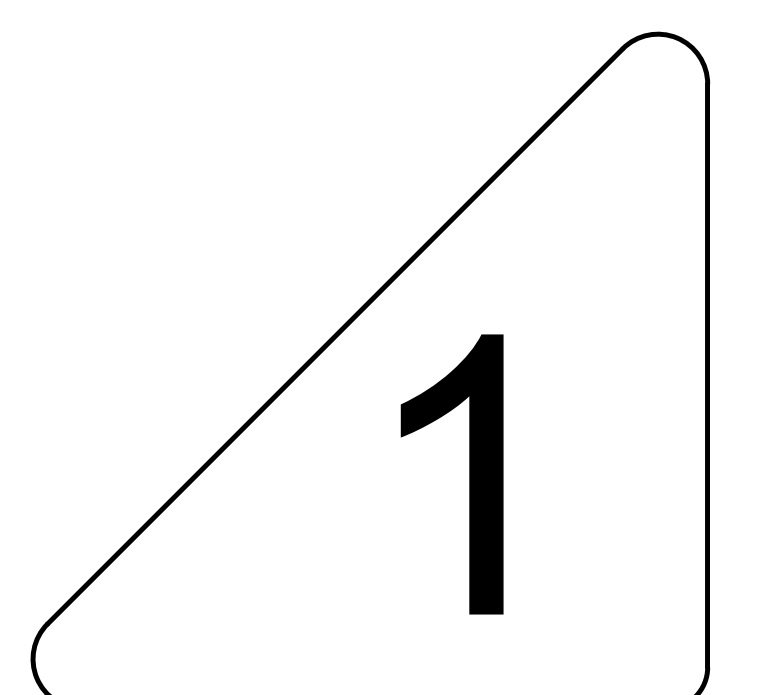

1

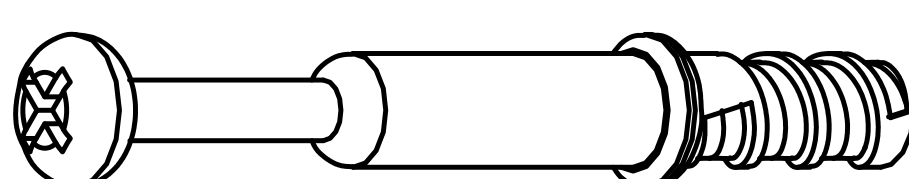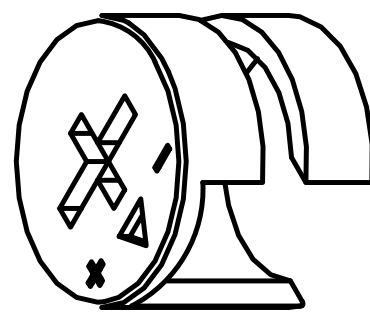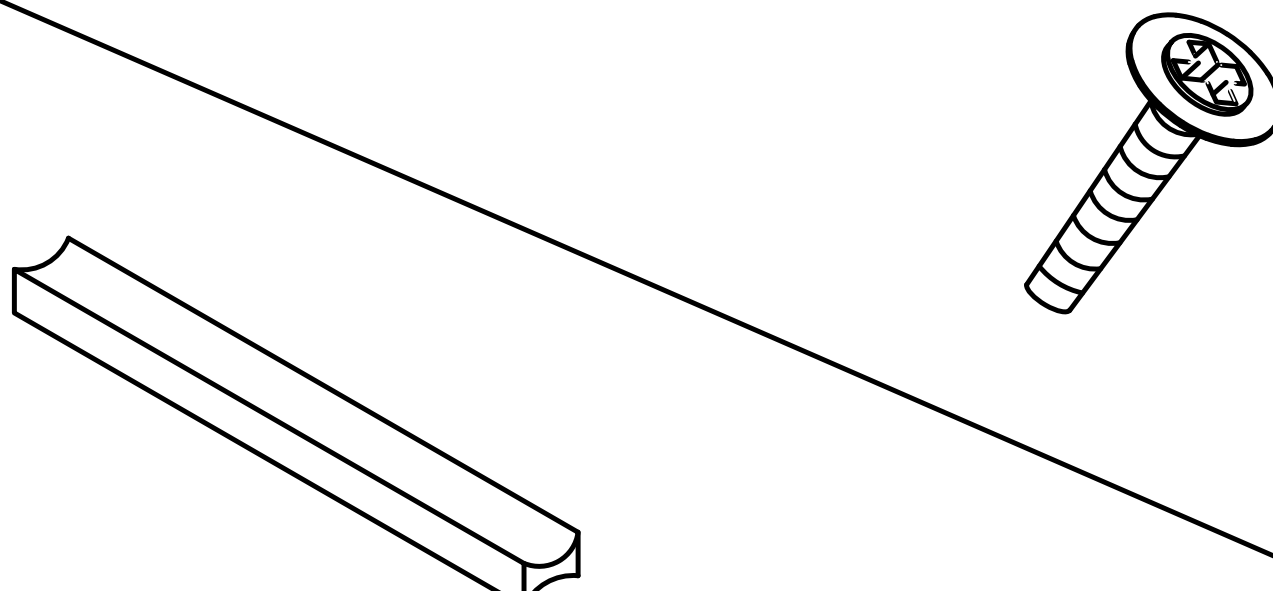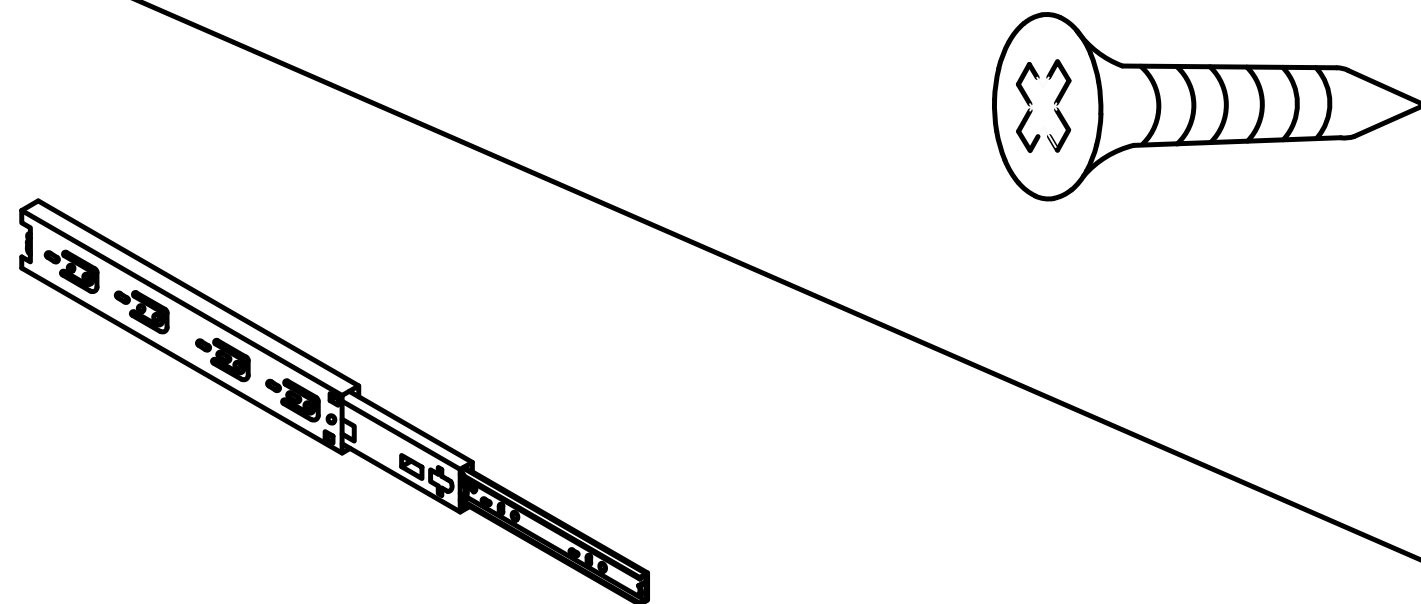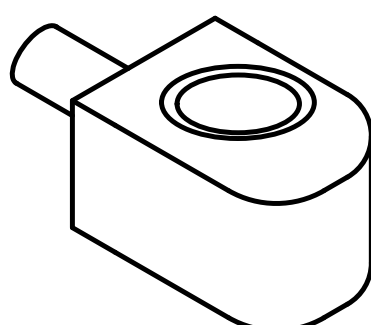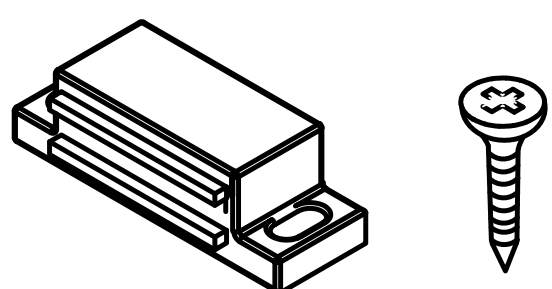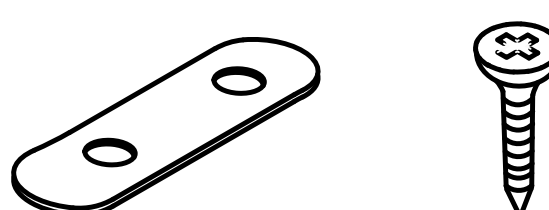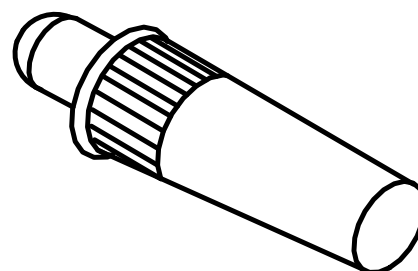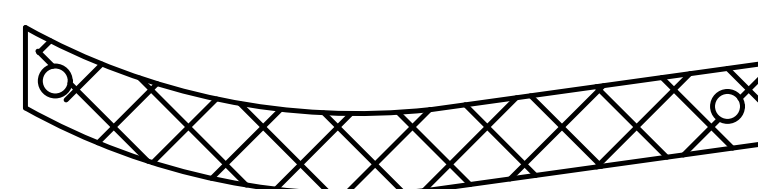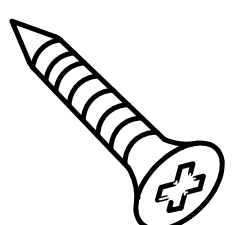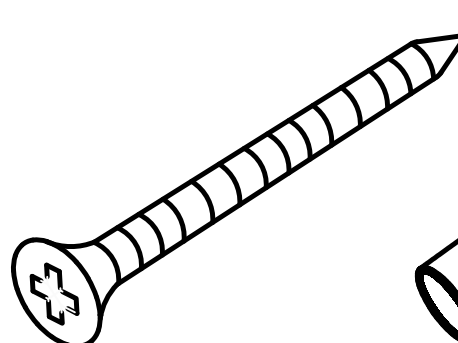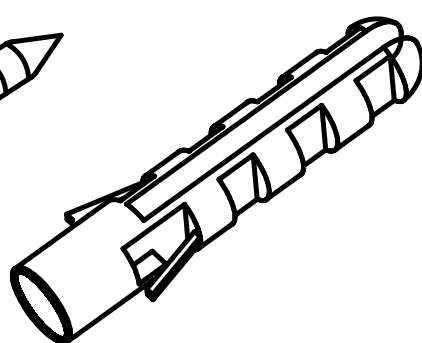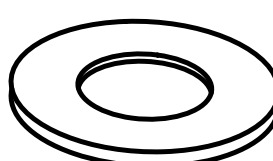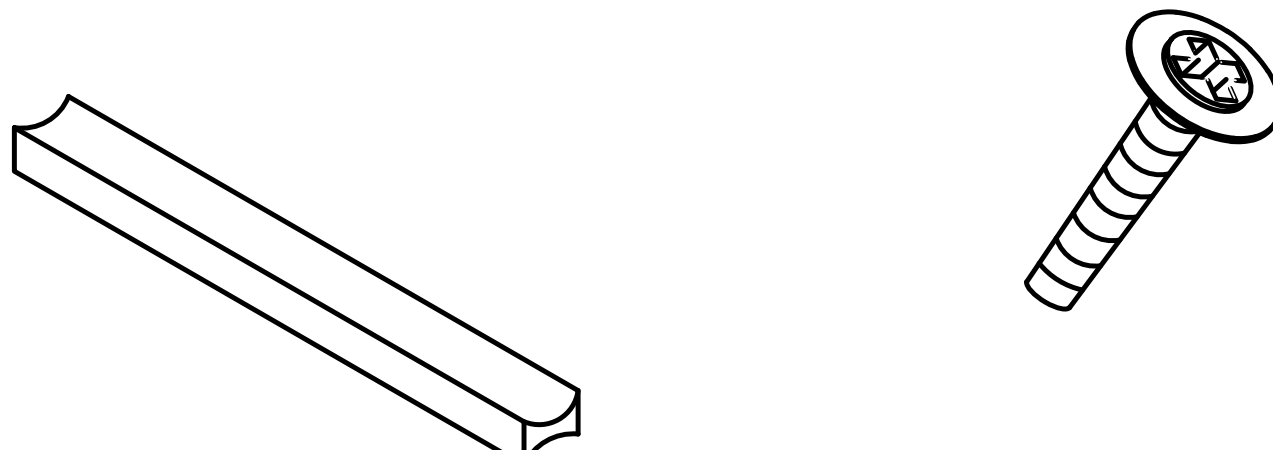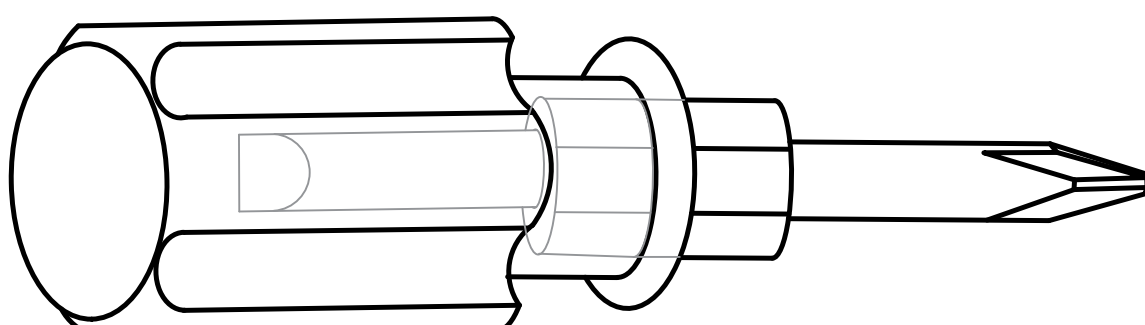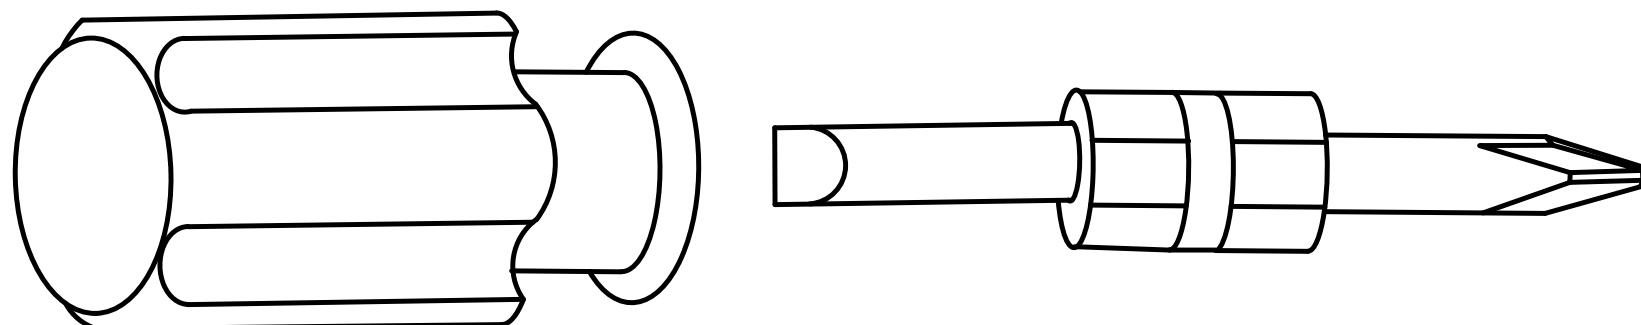
Accessories list						
①			Two In One Screw (6x28mm)		70pcs +7pcs	
②			Two In One Nut (10x12mm)		70pcs +7pcs	
③			Wood Chipping (6x30mm)		24pcs +4pcs	
④			Handle & Screw (4x16mm)		4pcs +2pcs 2pcs	
⑤			Guide rails & screws (3x12mm) 29cm		20pcs +4pcs 4pcs	
⑥			Non-slip pads (50x10x2mm)		8pcs +2pcs	
⑦			Laminate support nail		8pcs +2pcs	
⑧			Magnetic Attraction & Screw (B:3x14mm) Iron sheet & screw (3x10mm)		2pcs 4pcs +2pcs	2pcs 4pcs +2pcs
⑨			Door shaft		4pcs	
⑩			Fixing Clip & Screw (3x16mm)		16pcs +4pcs	
⑪	 1pcs  1pcs  1pcs  1pcs  2pcs		anti-tipping tape Screw & gasket (3.5x12mm) Screw (4x45mm)		1pcs	
⑫			Handle & Screw (4x18mm)		4pcs +2pcs 2pcs	
1pcs  ← →  Double-head screwdriver, use as required						
2						

Product structure decomposition

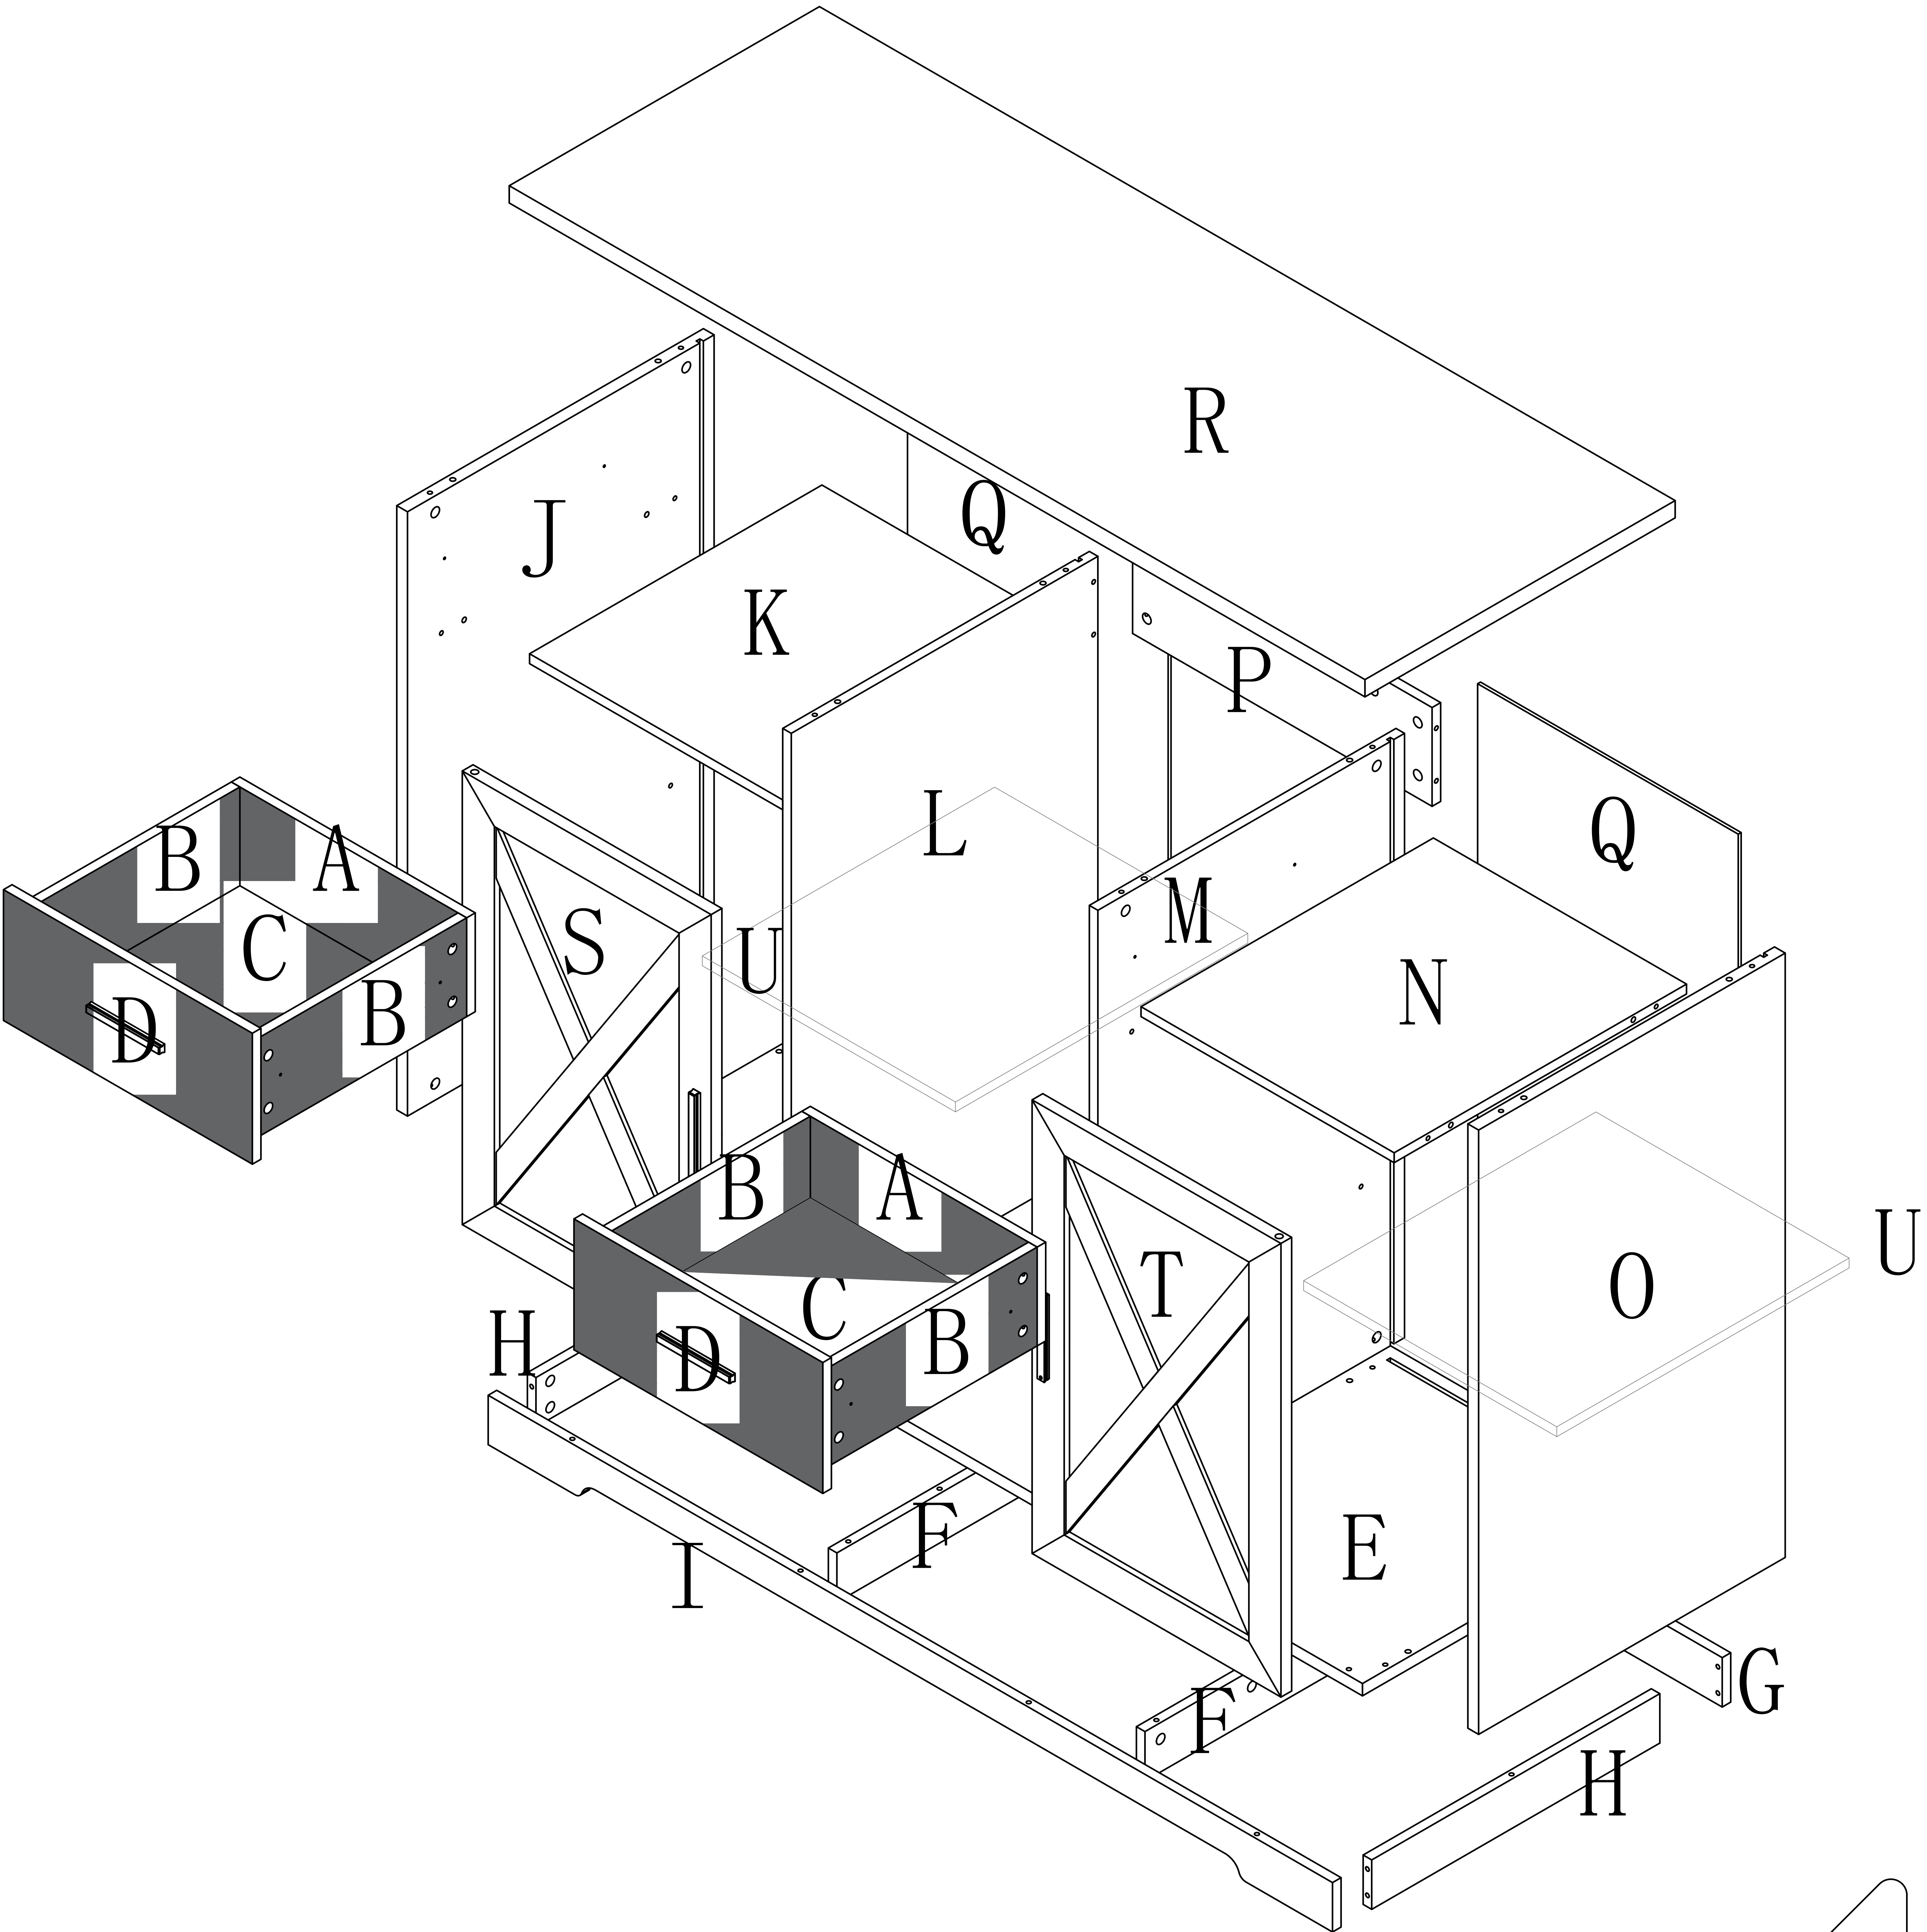


Use parts ① and ②




Step1

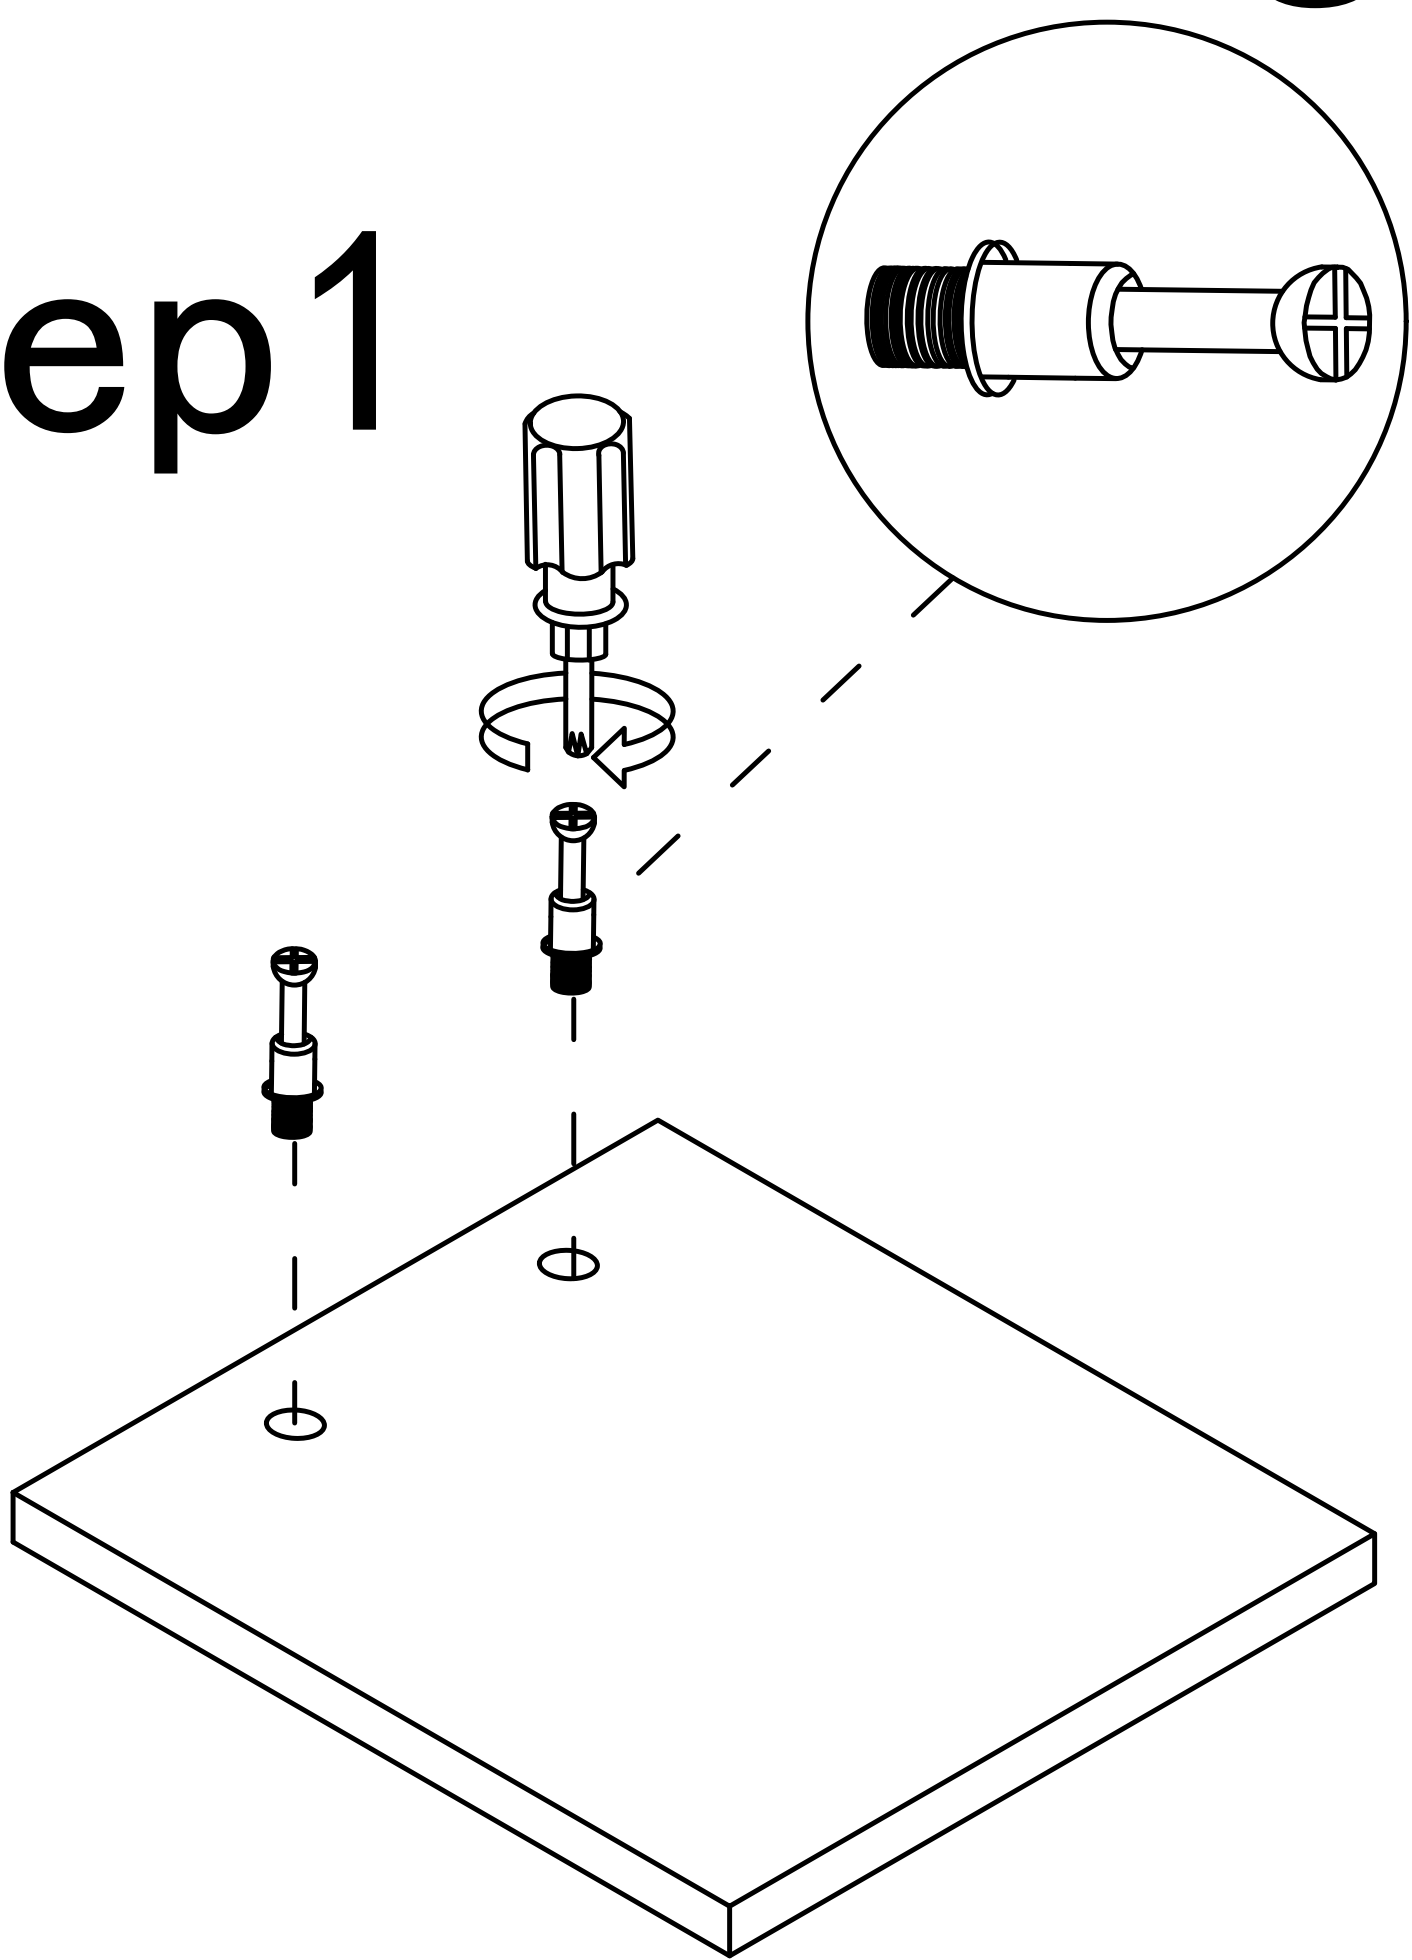

Step2

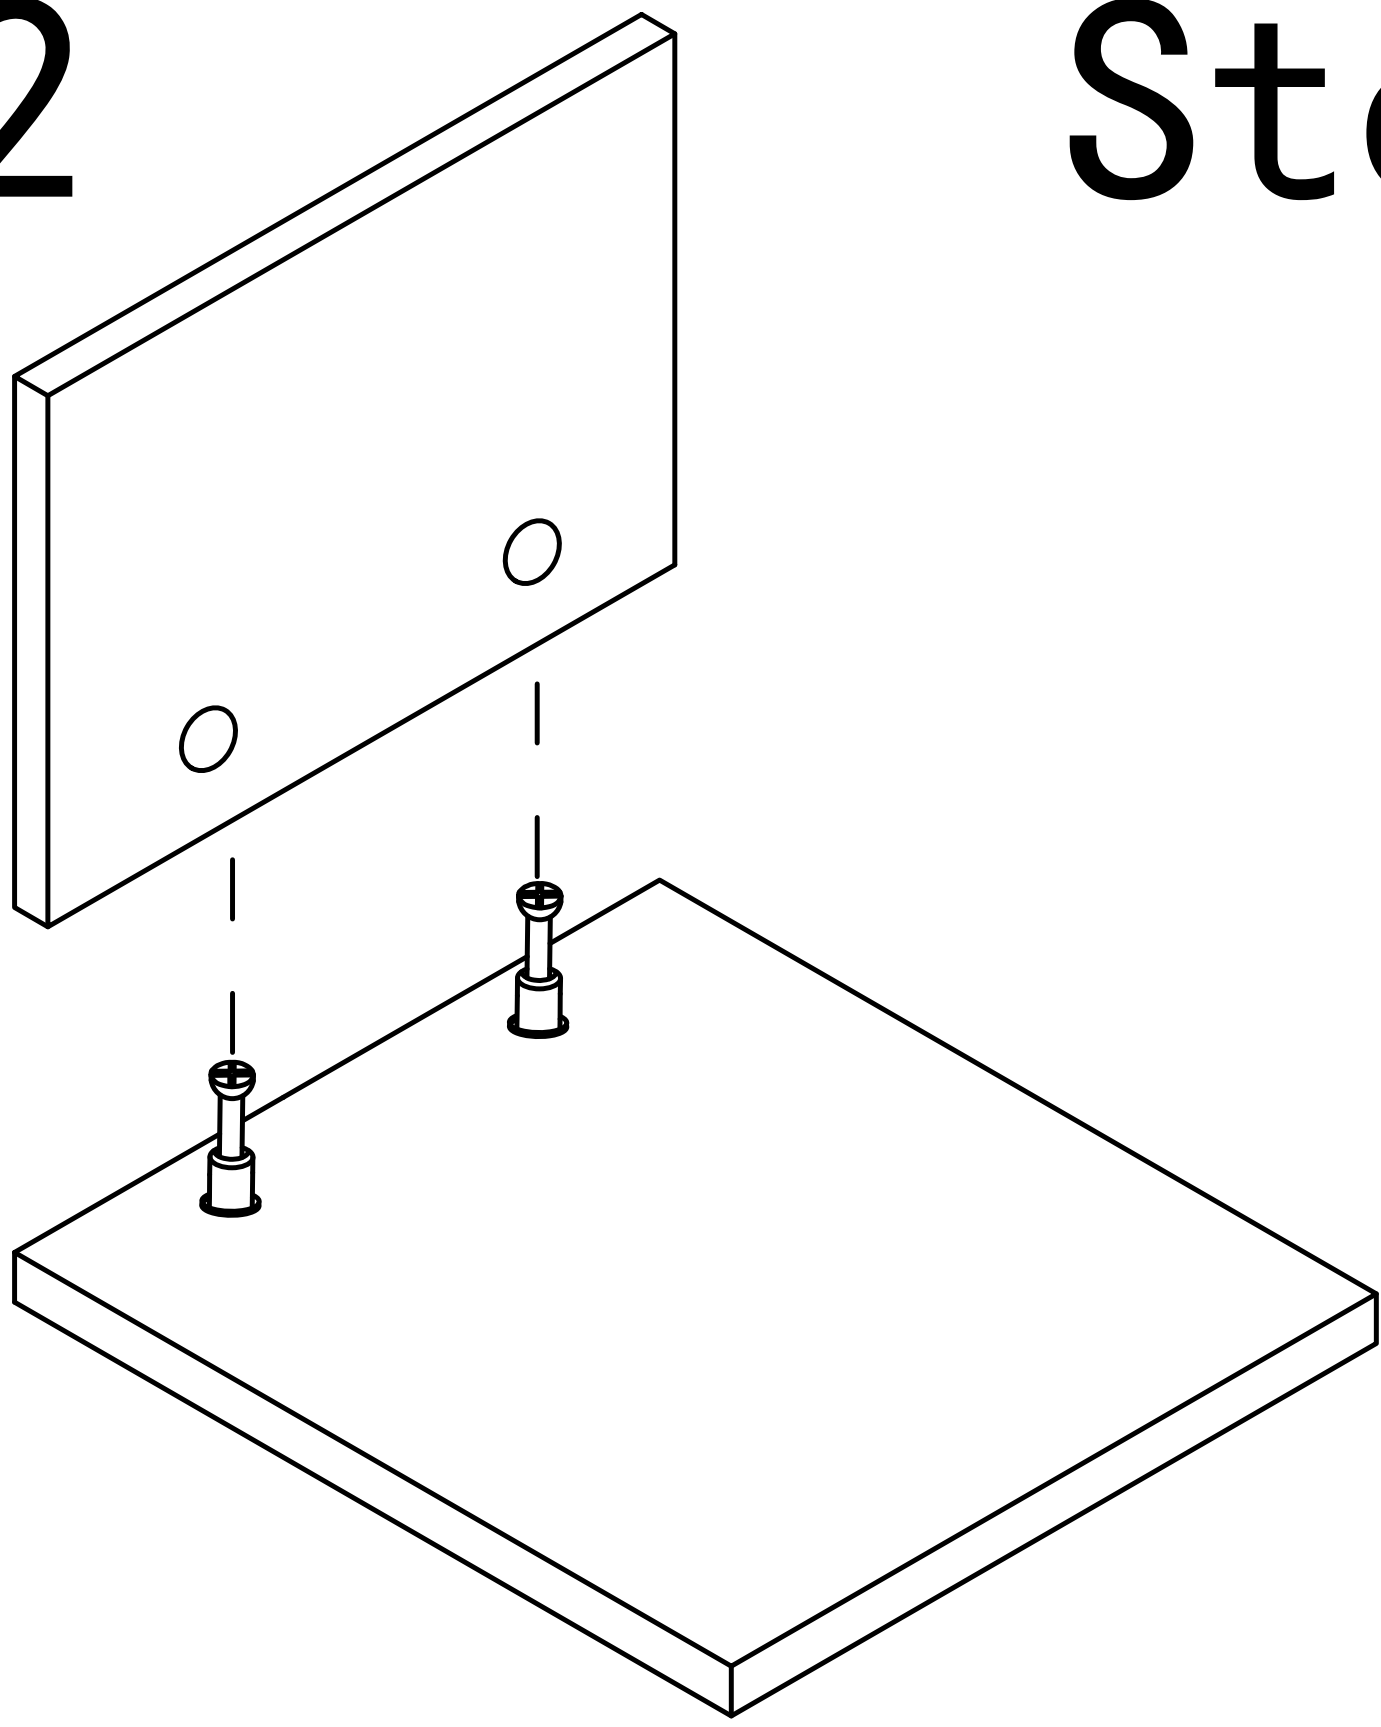



Step3

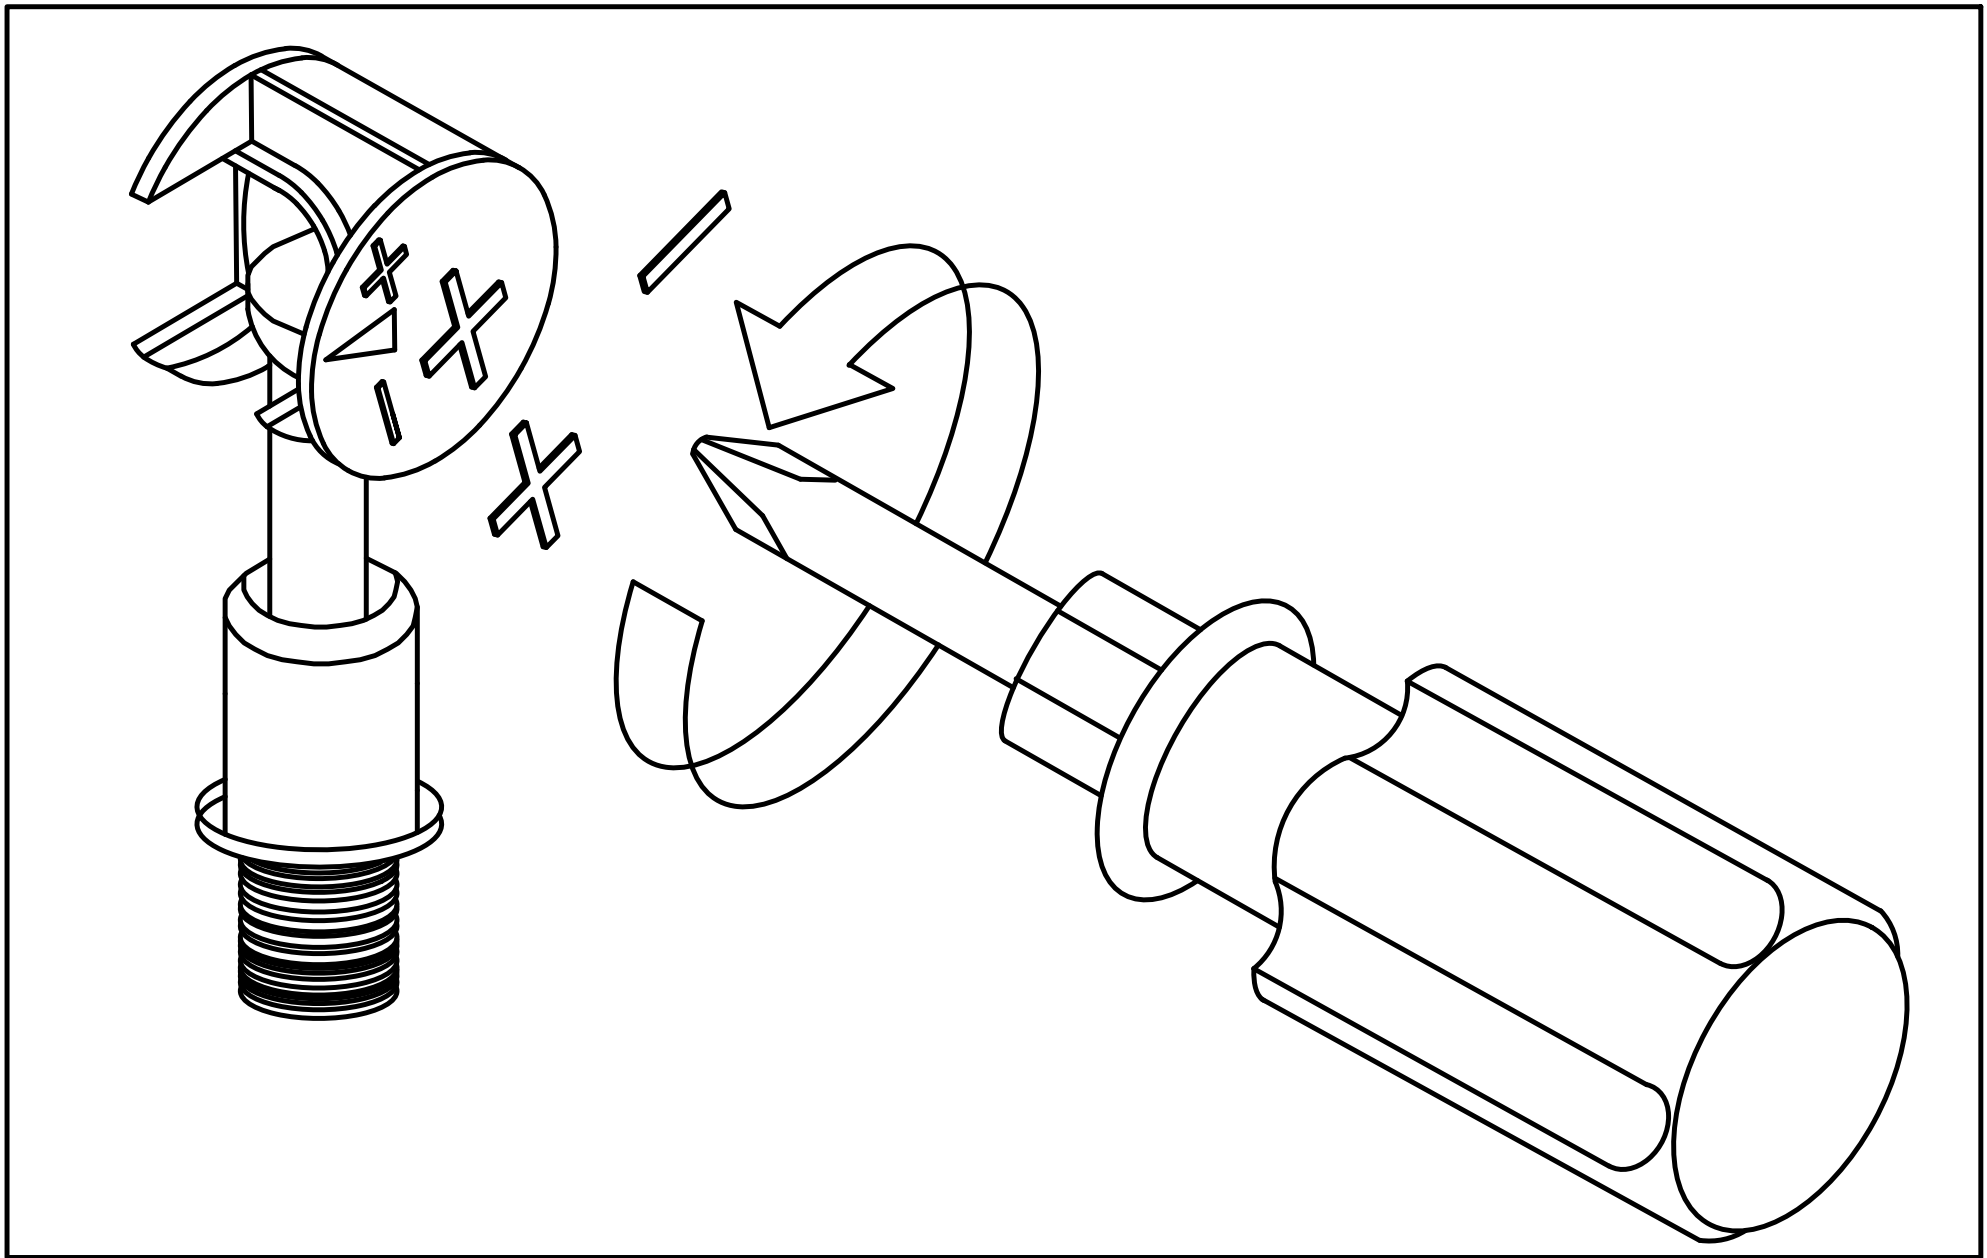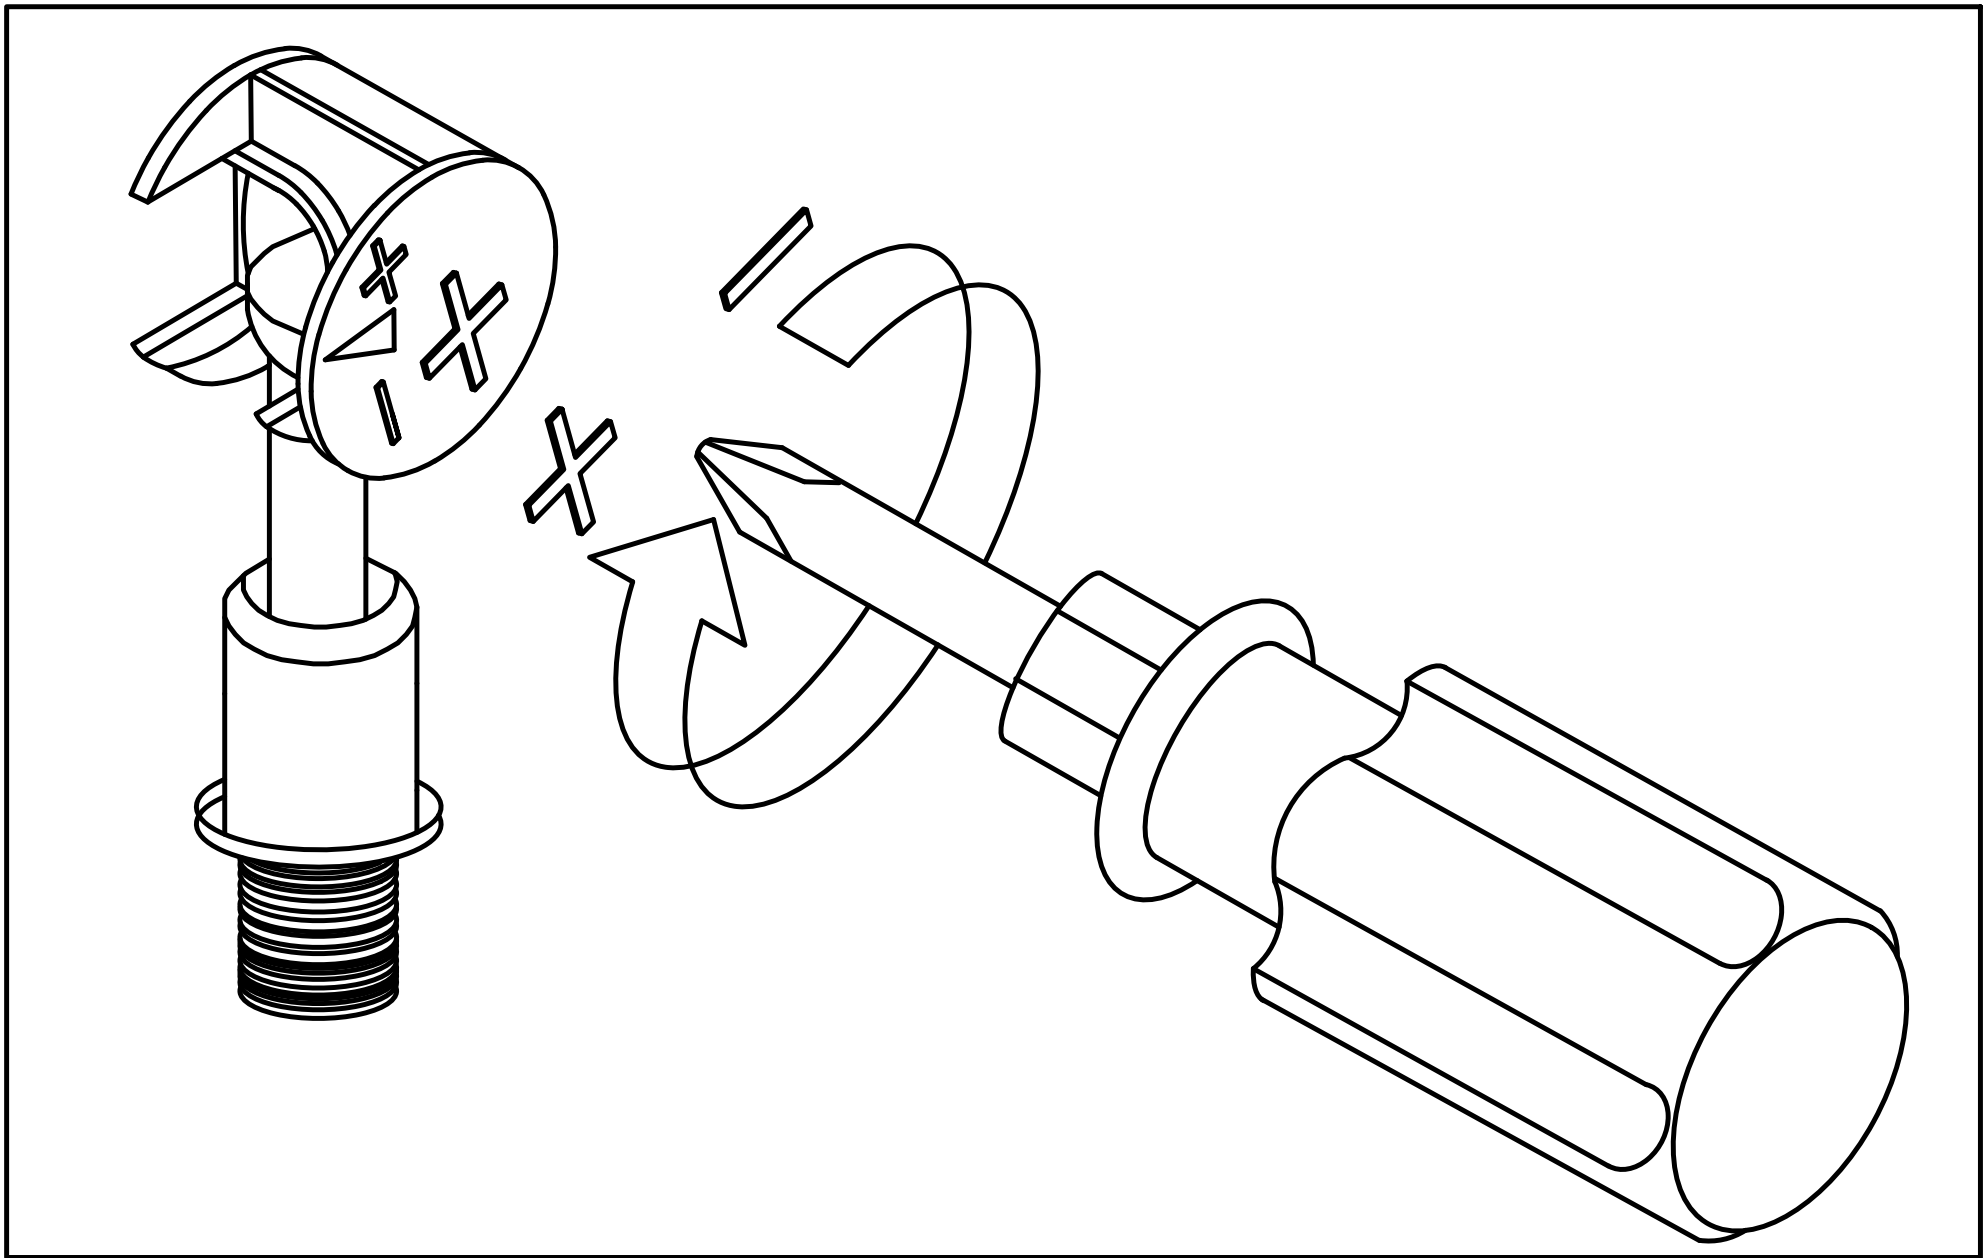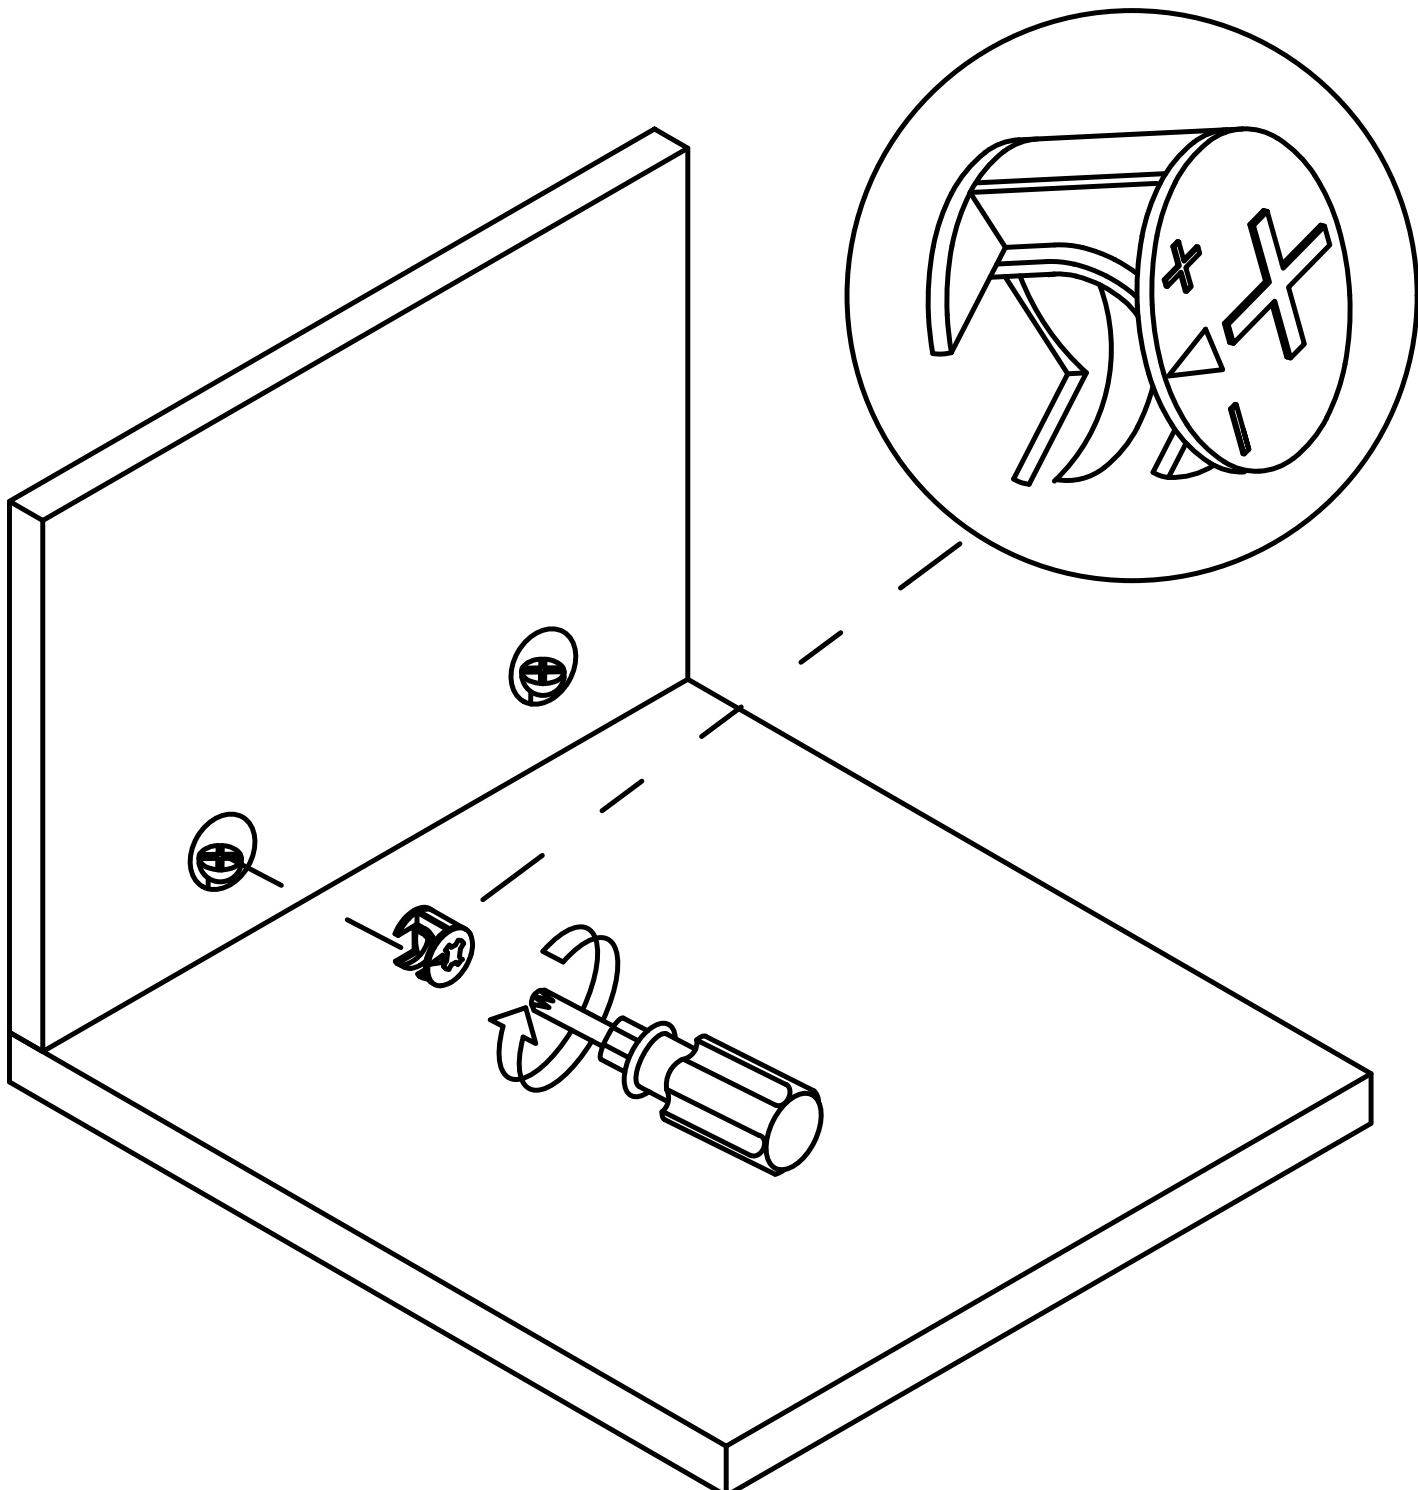


Use a screwdriver to lock in the direction of the "+" sign

Disassemble along the direction of "-" sign



Step 1

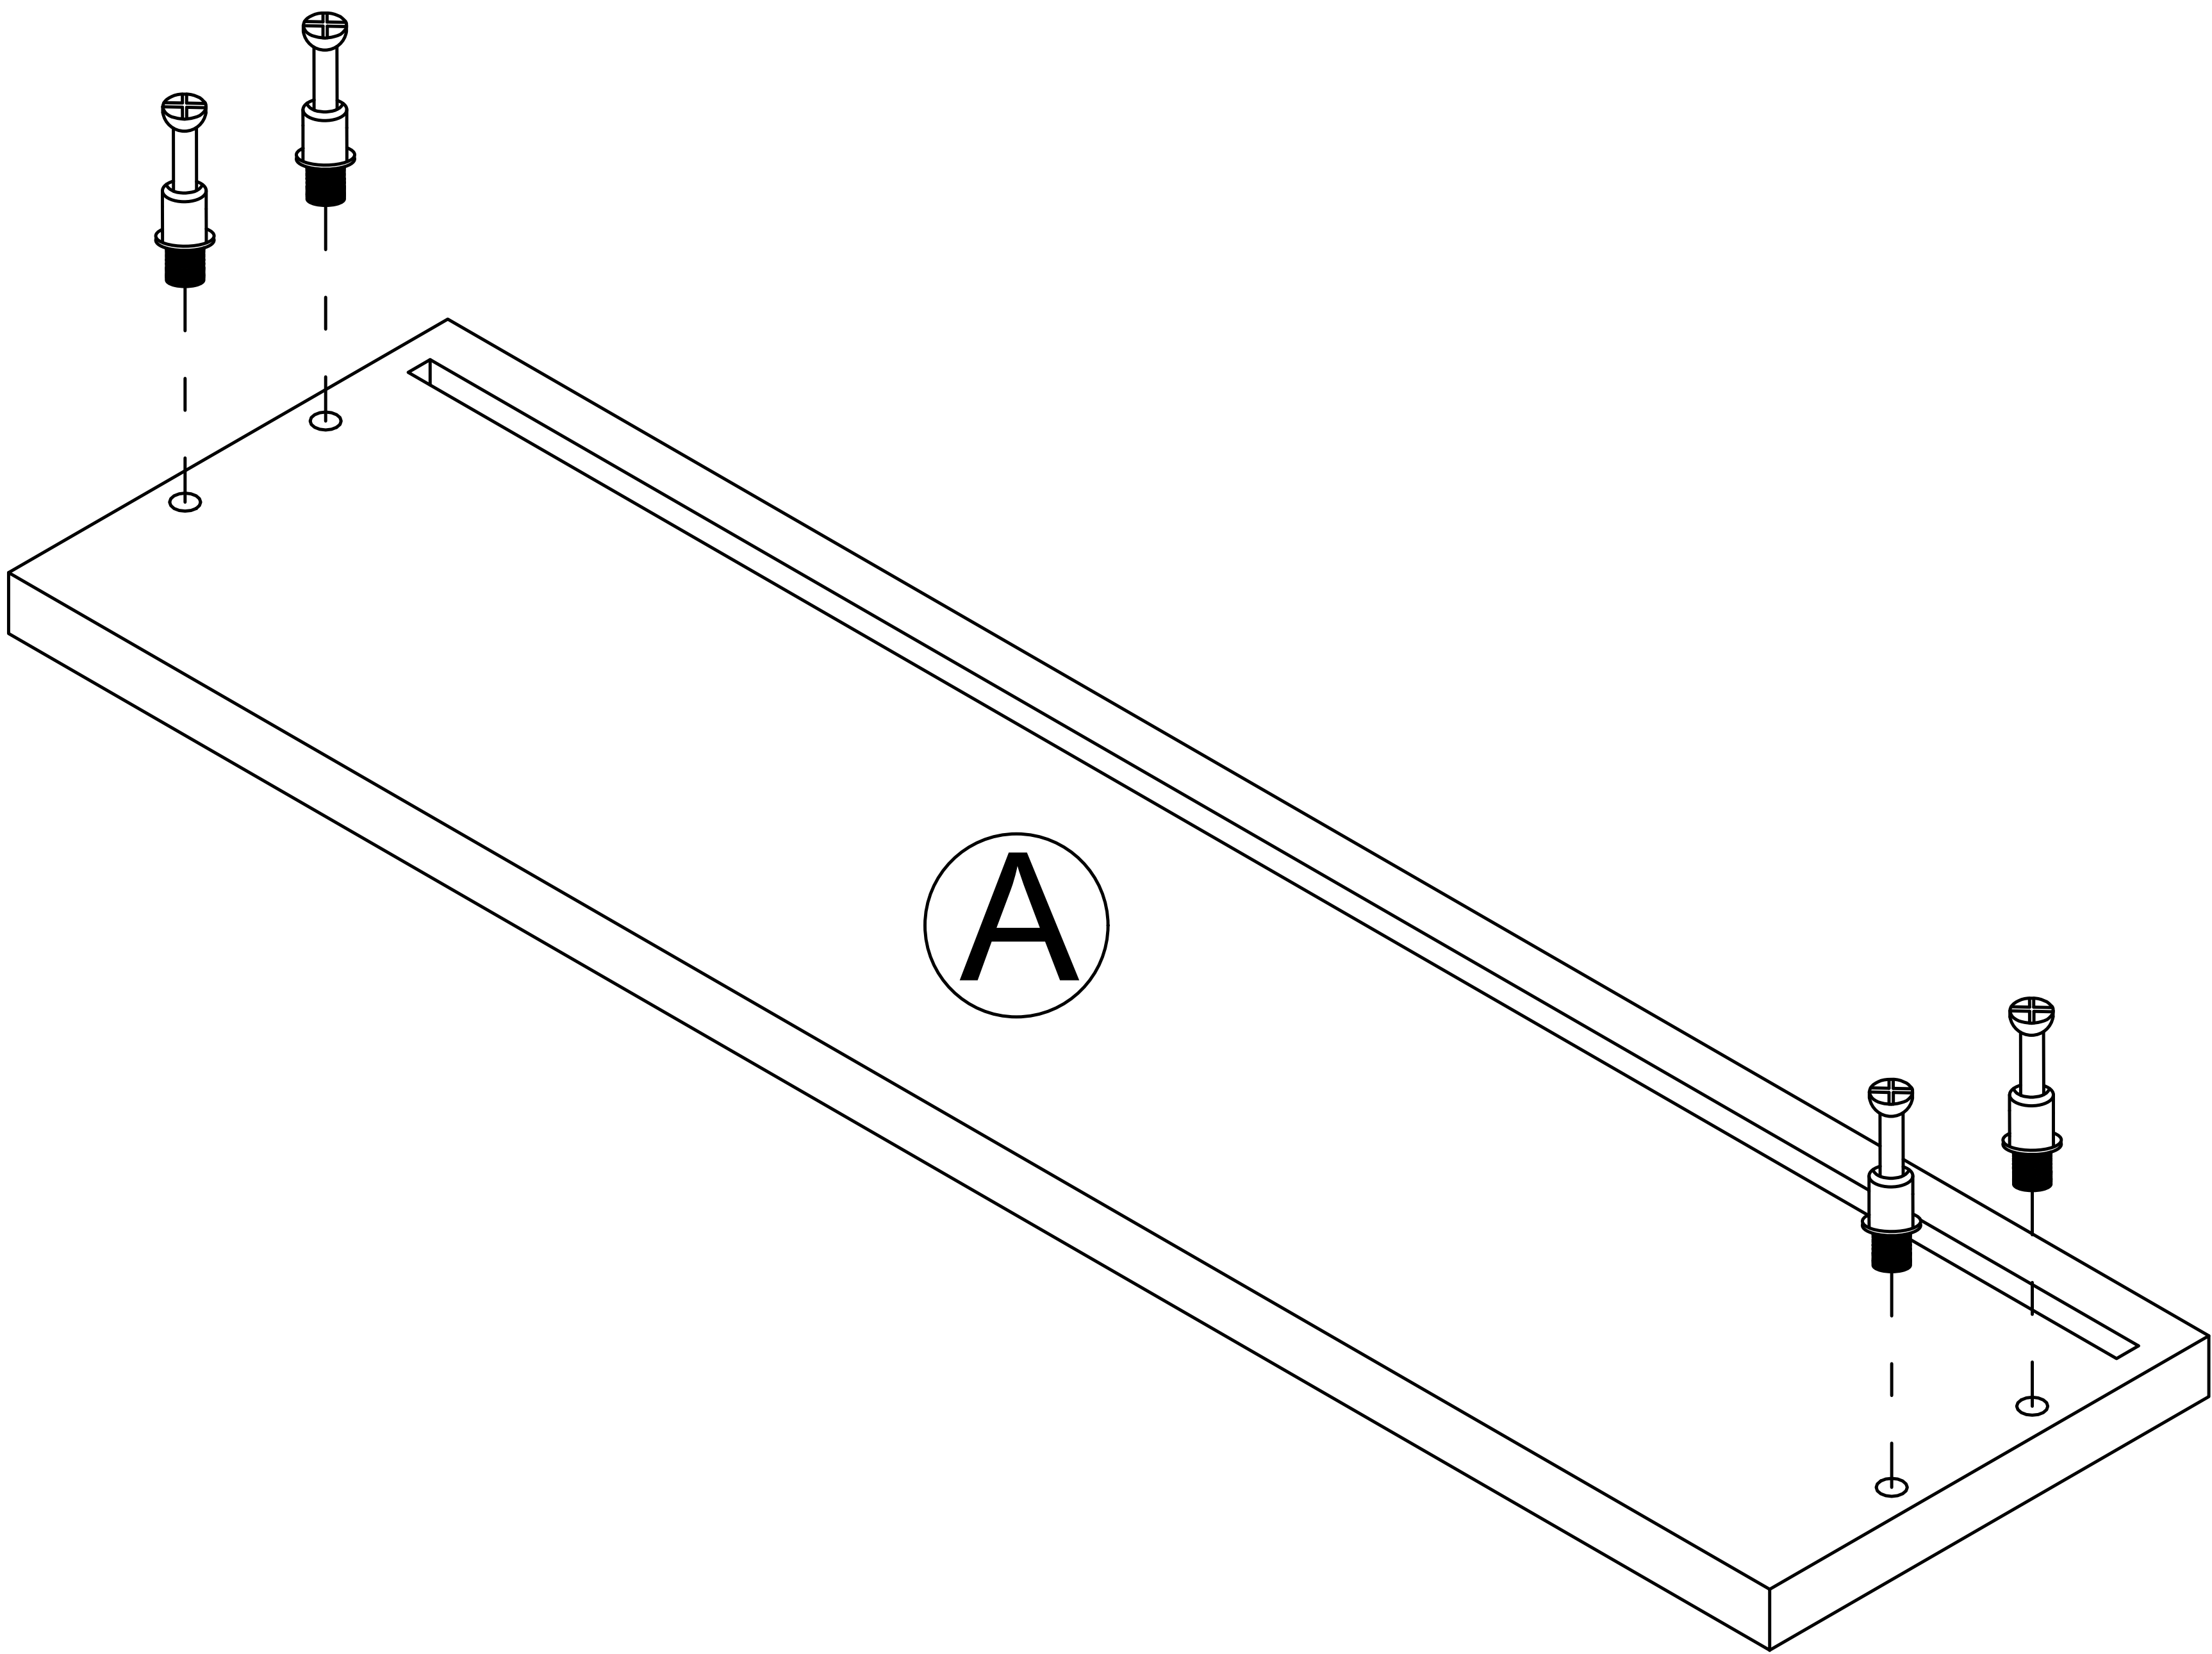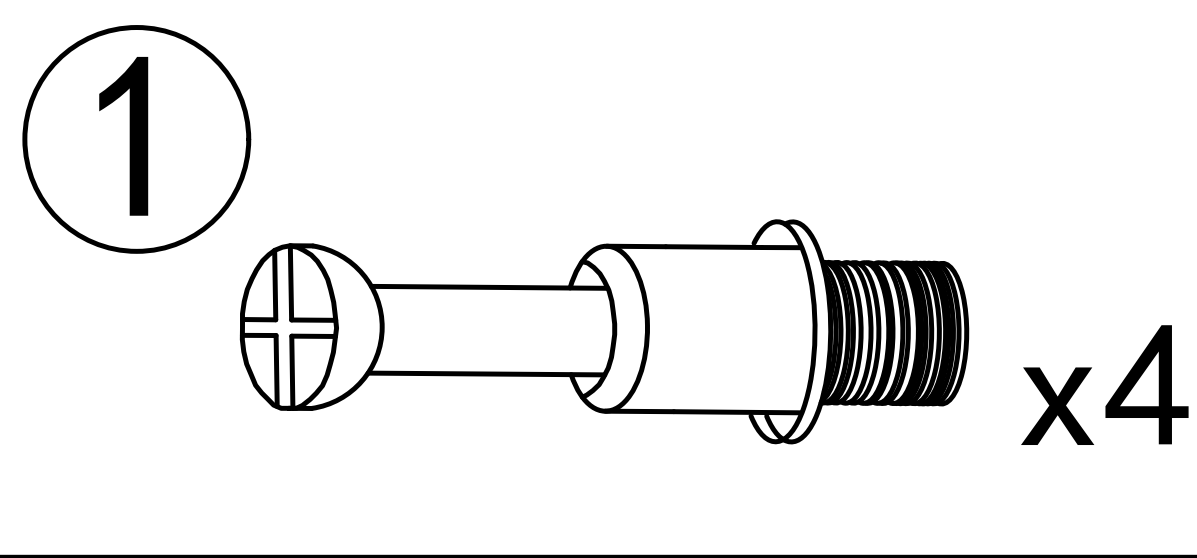



Step 2

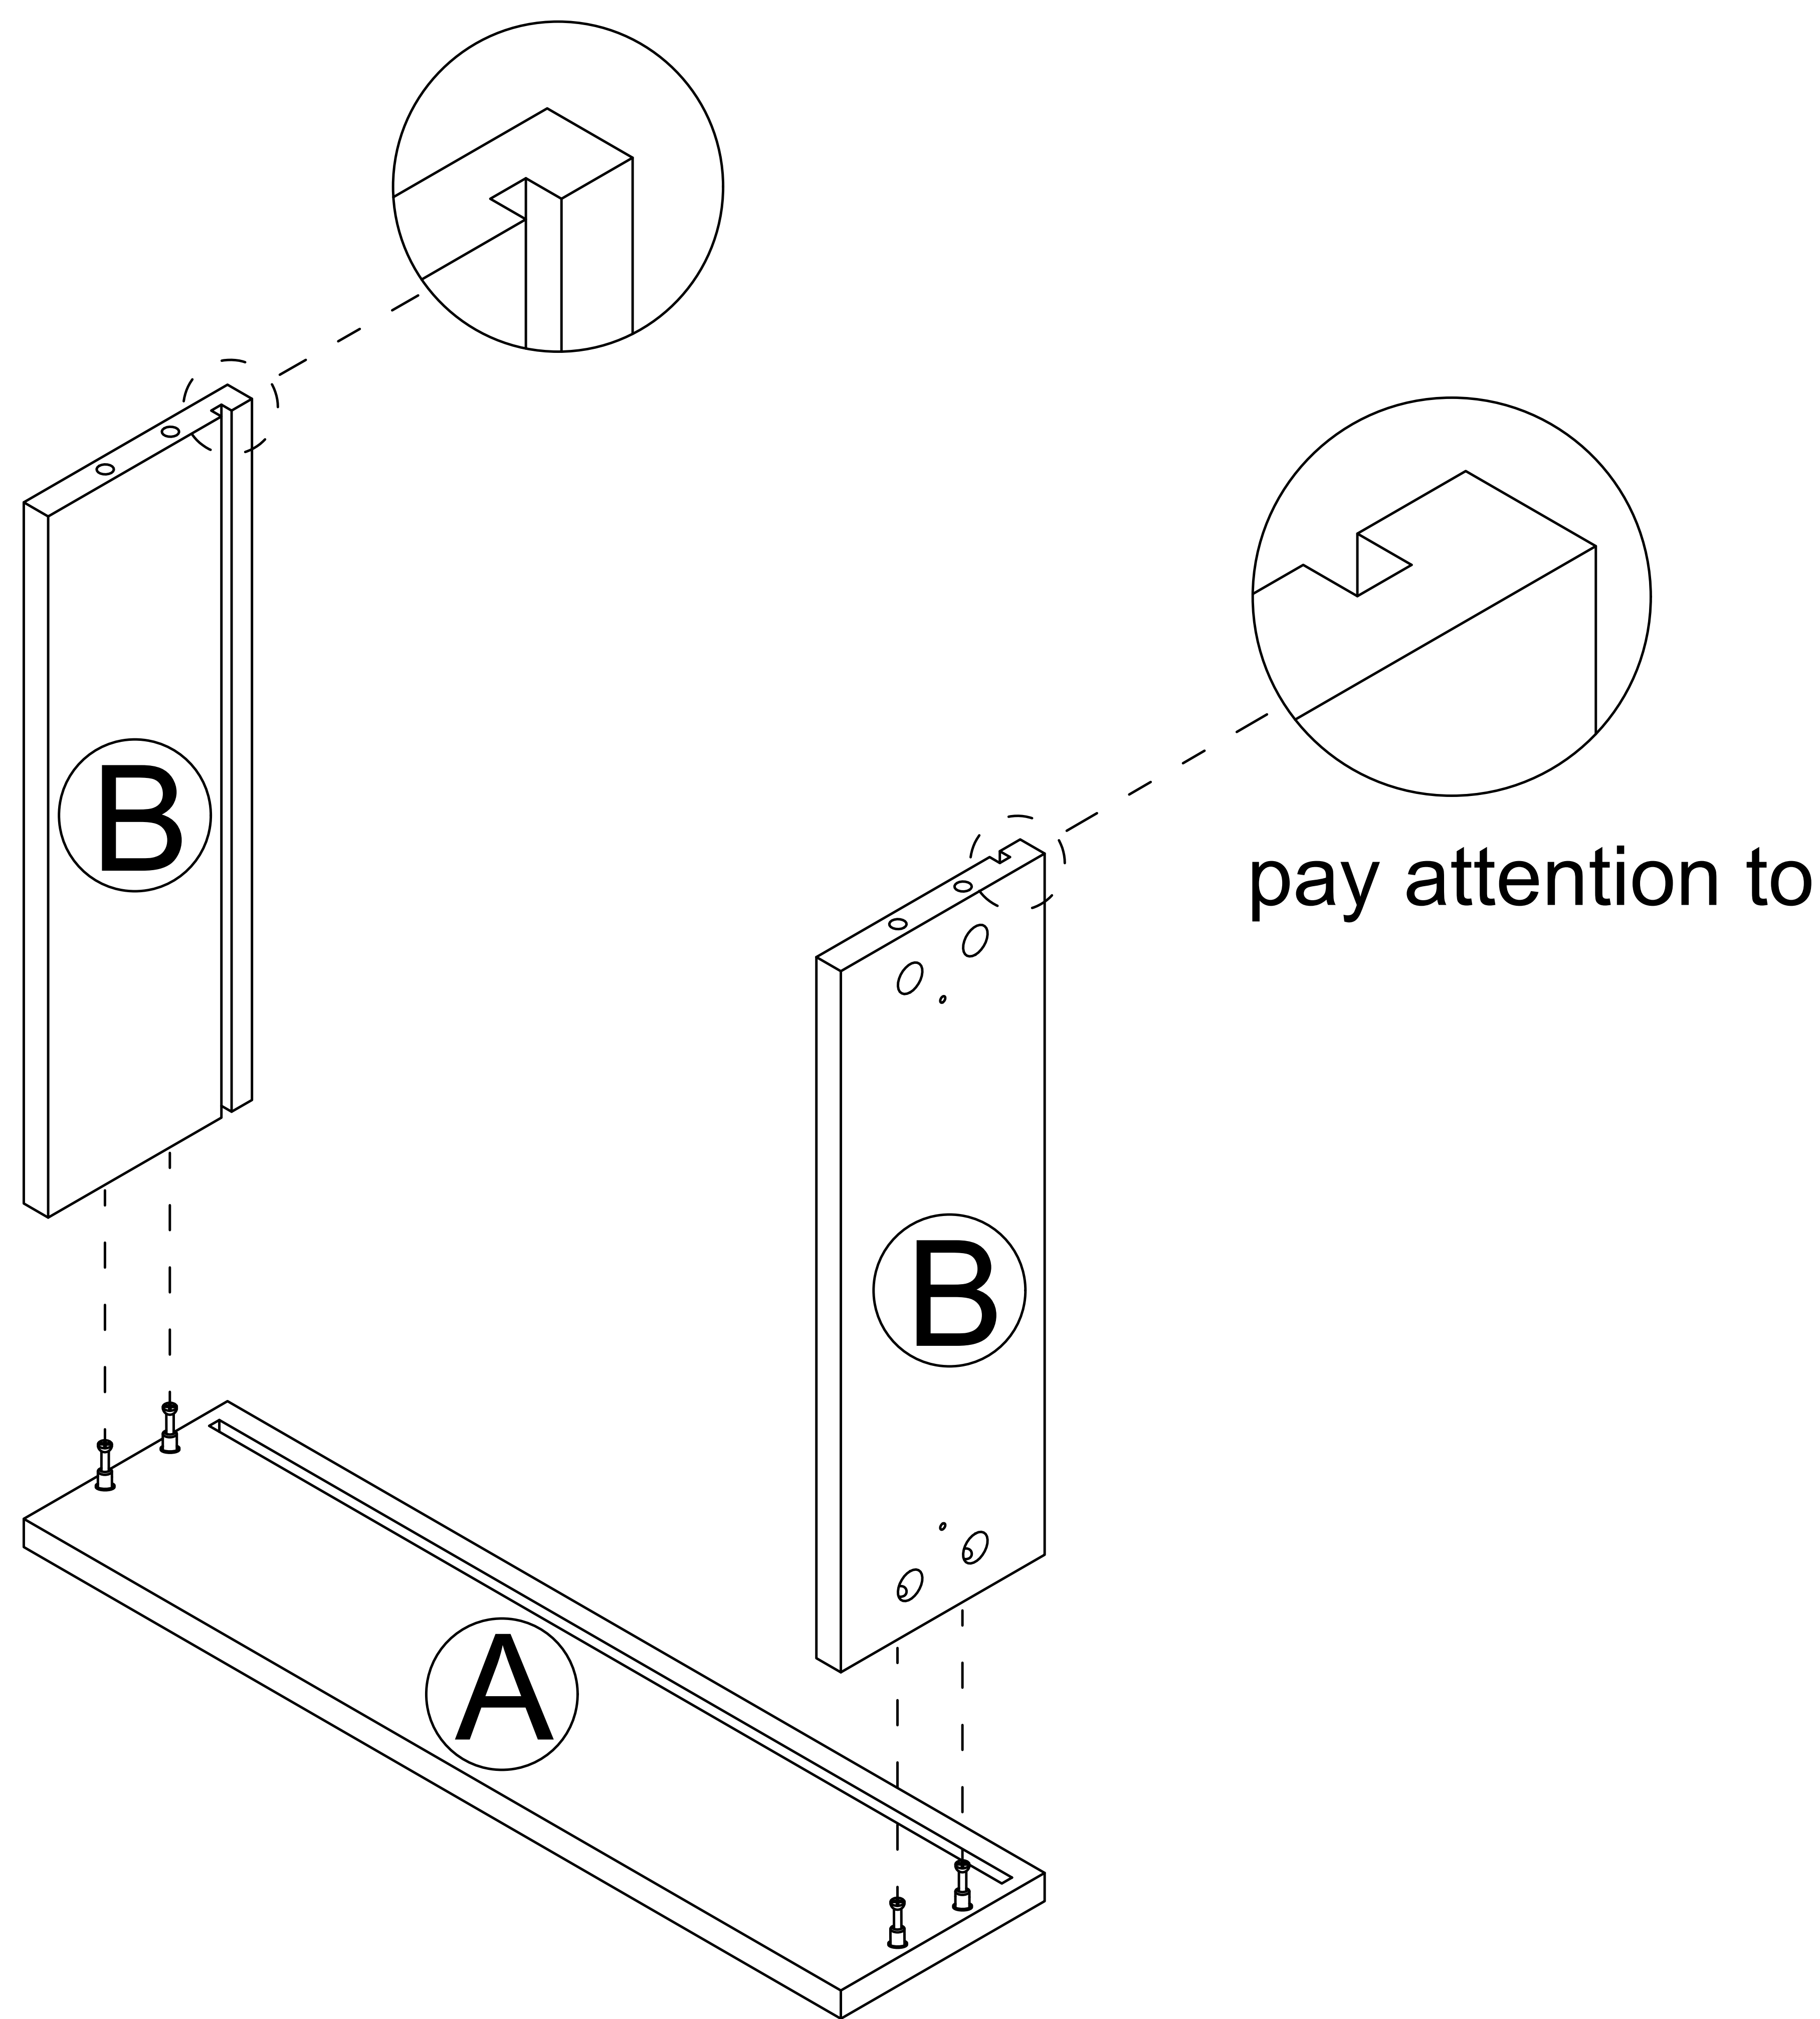



Step 3

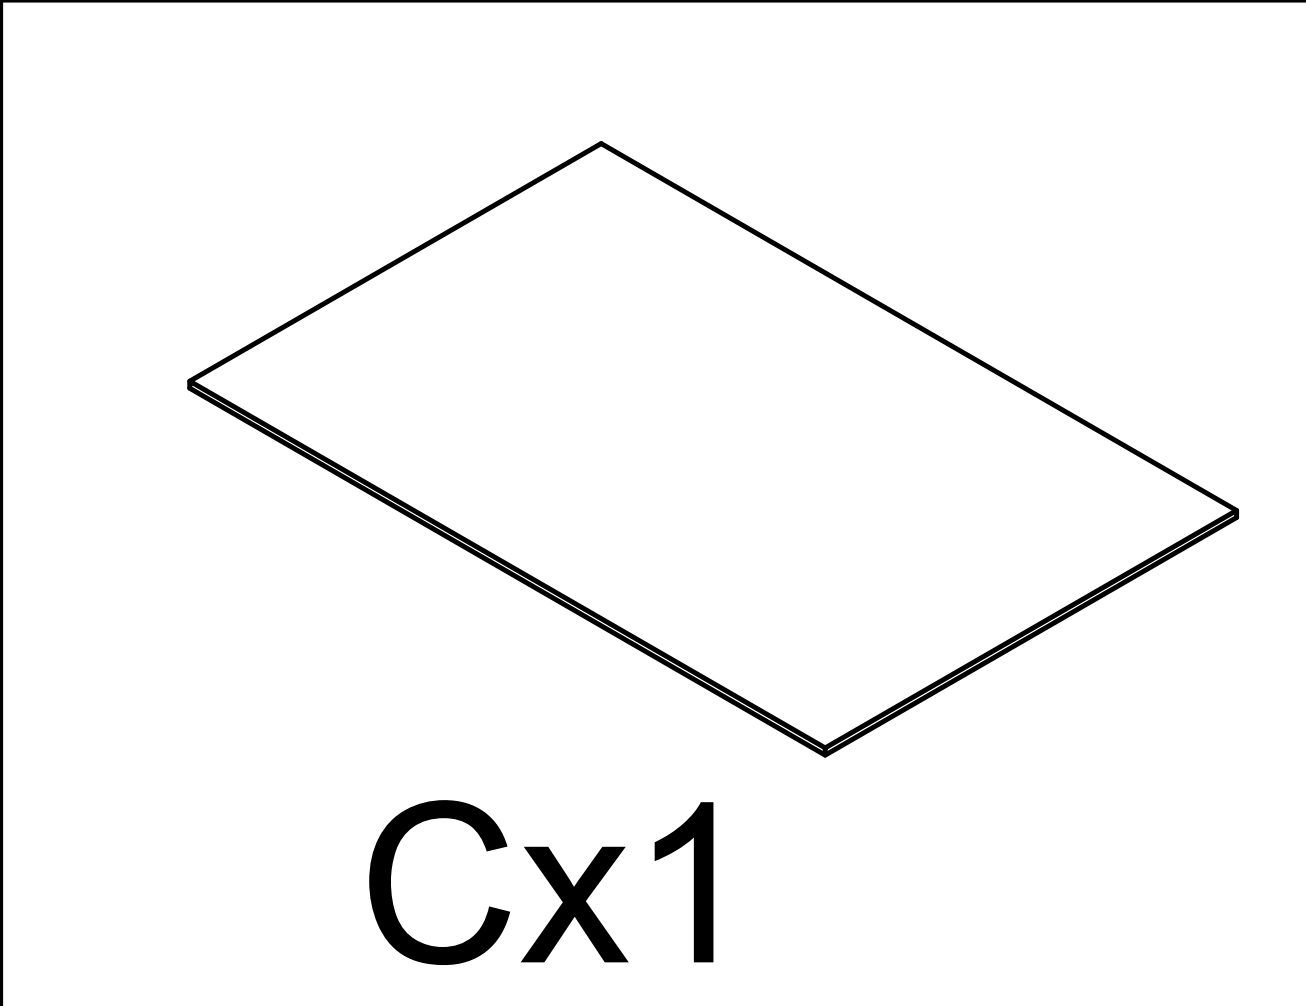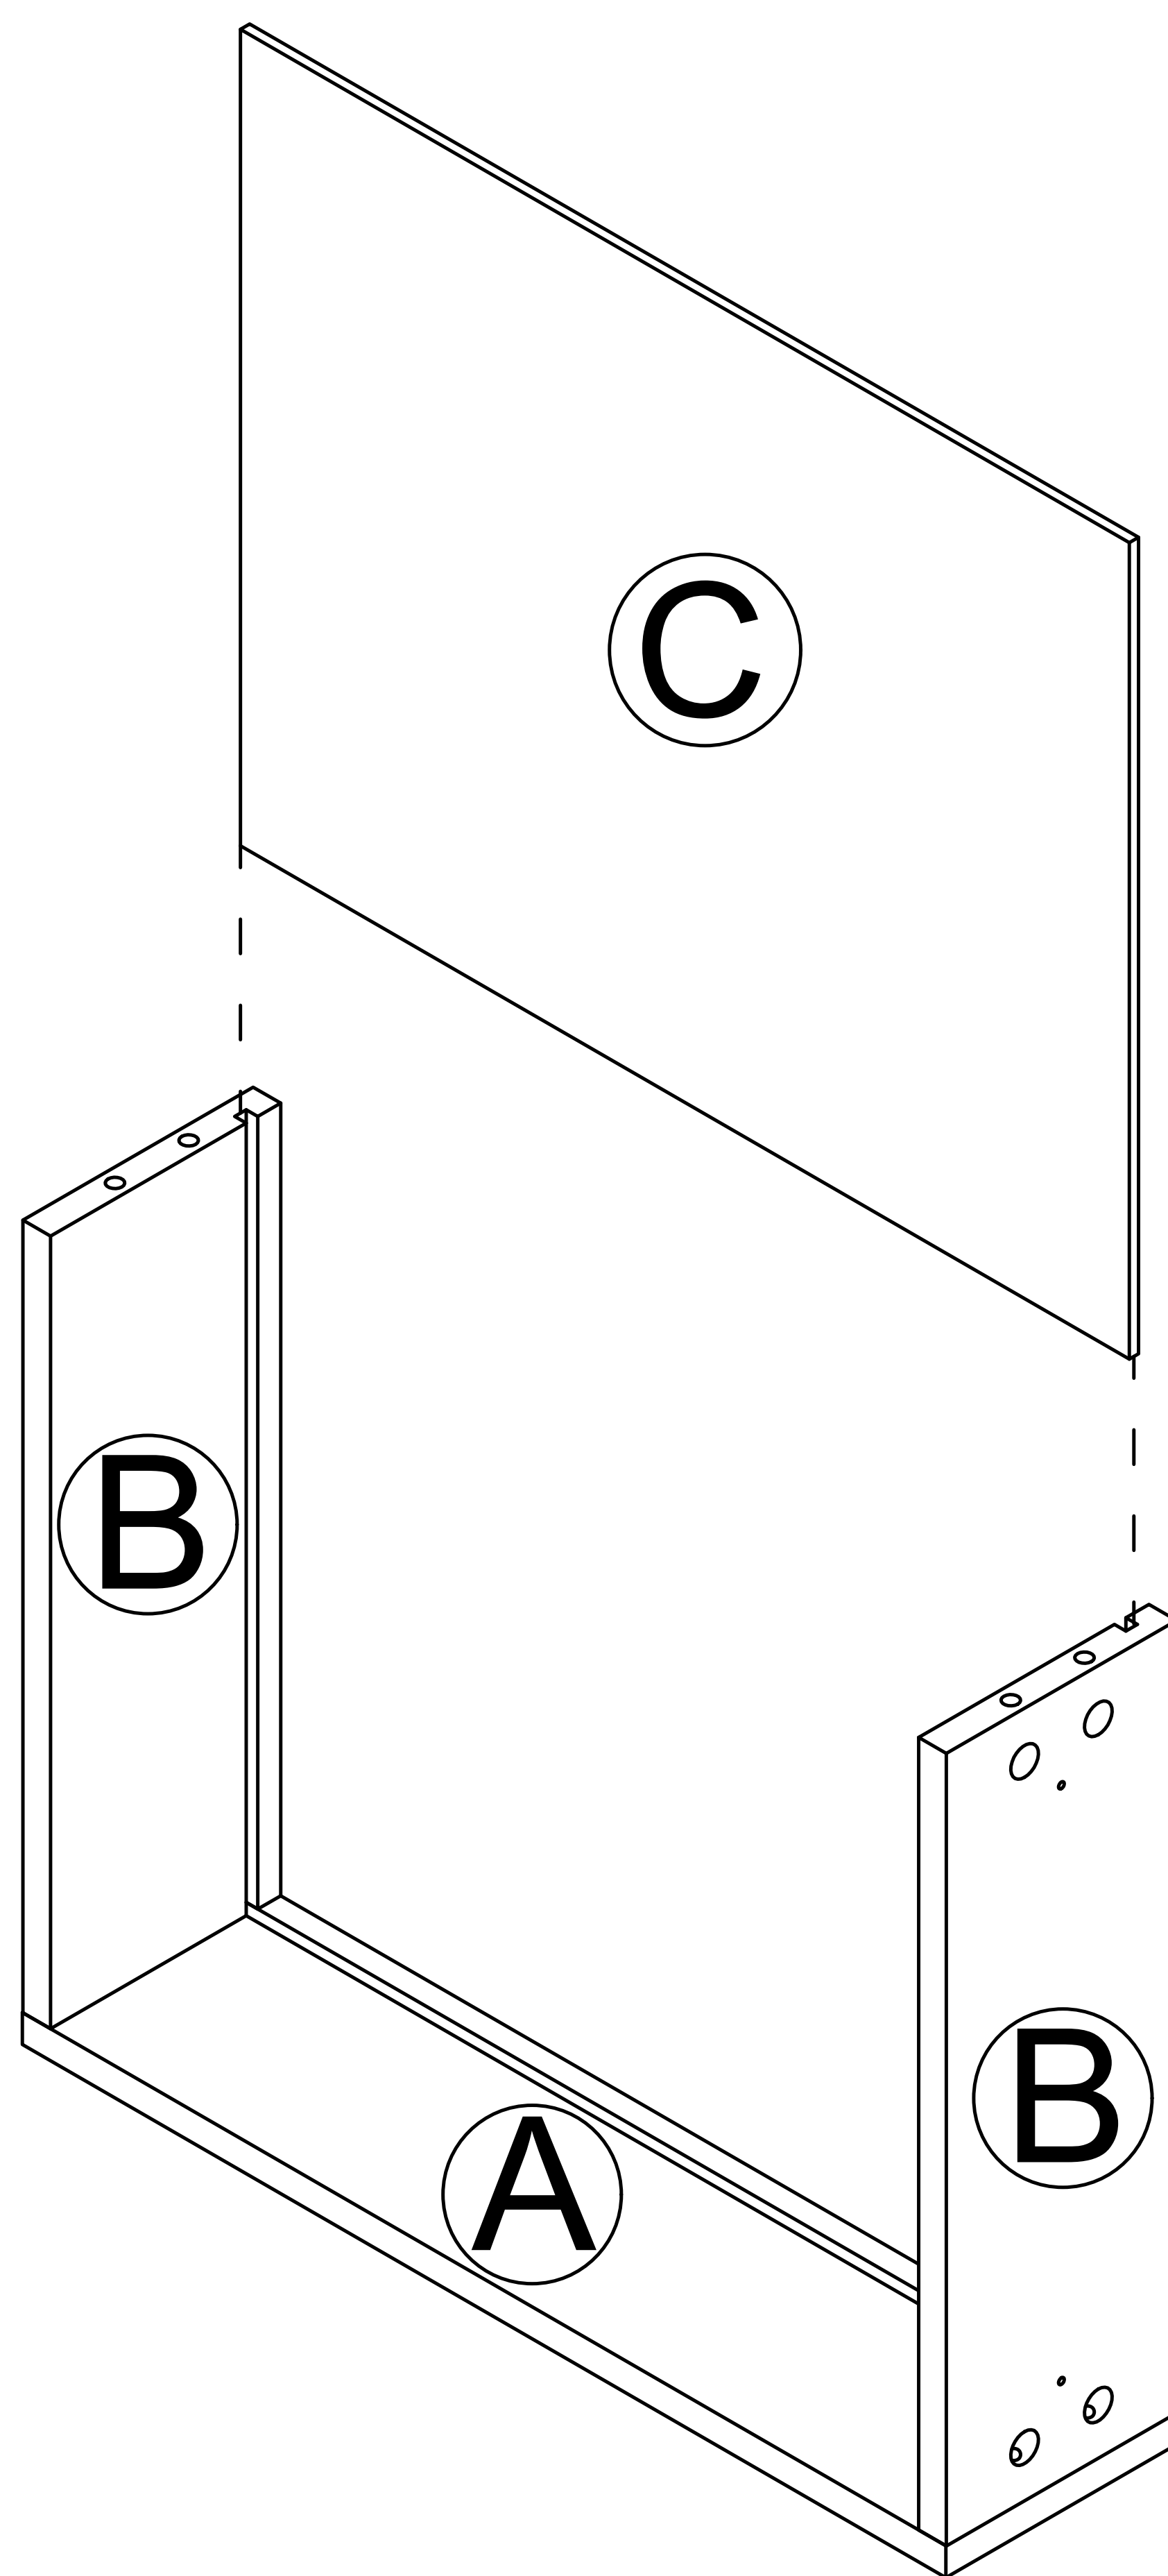

Step 4

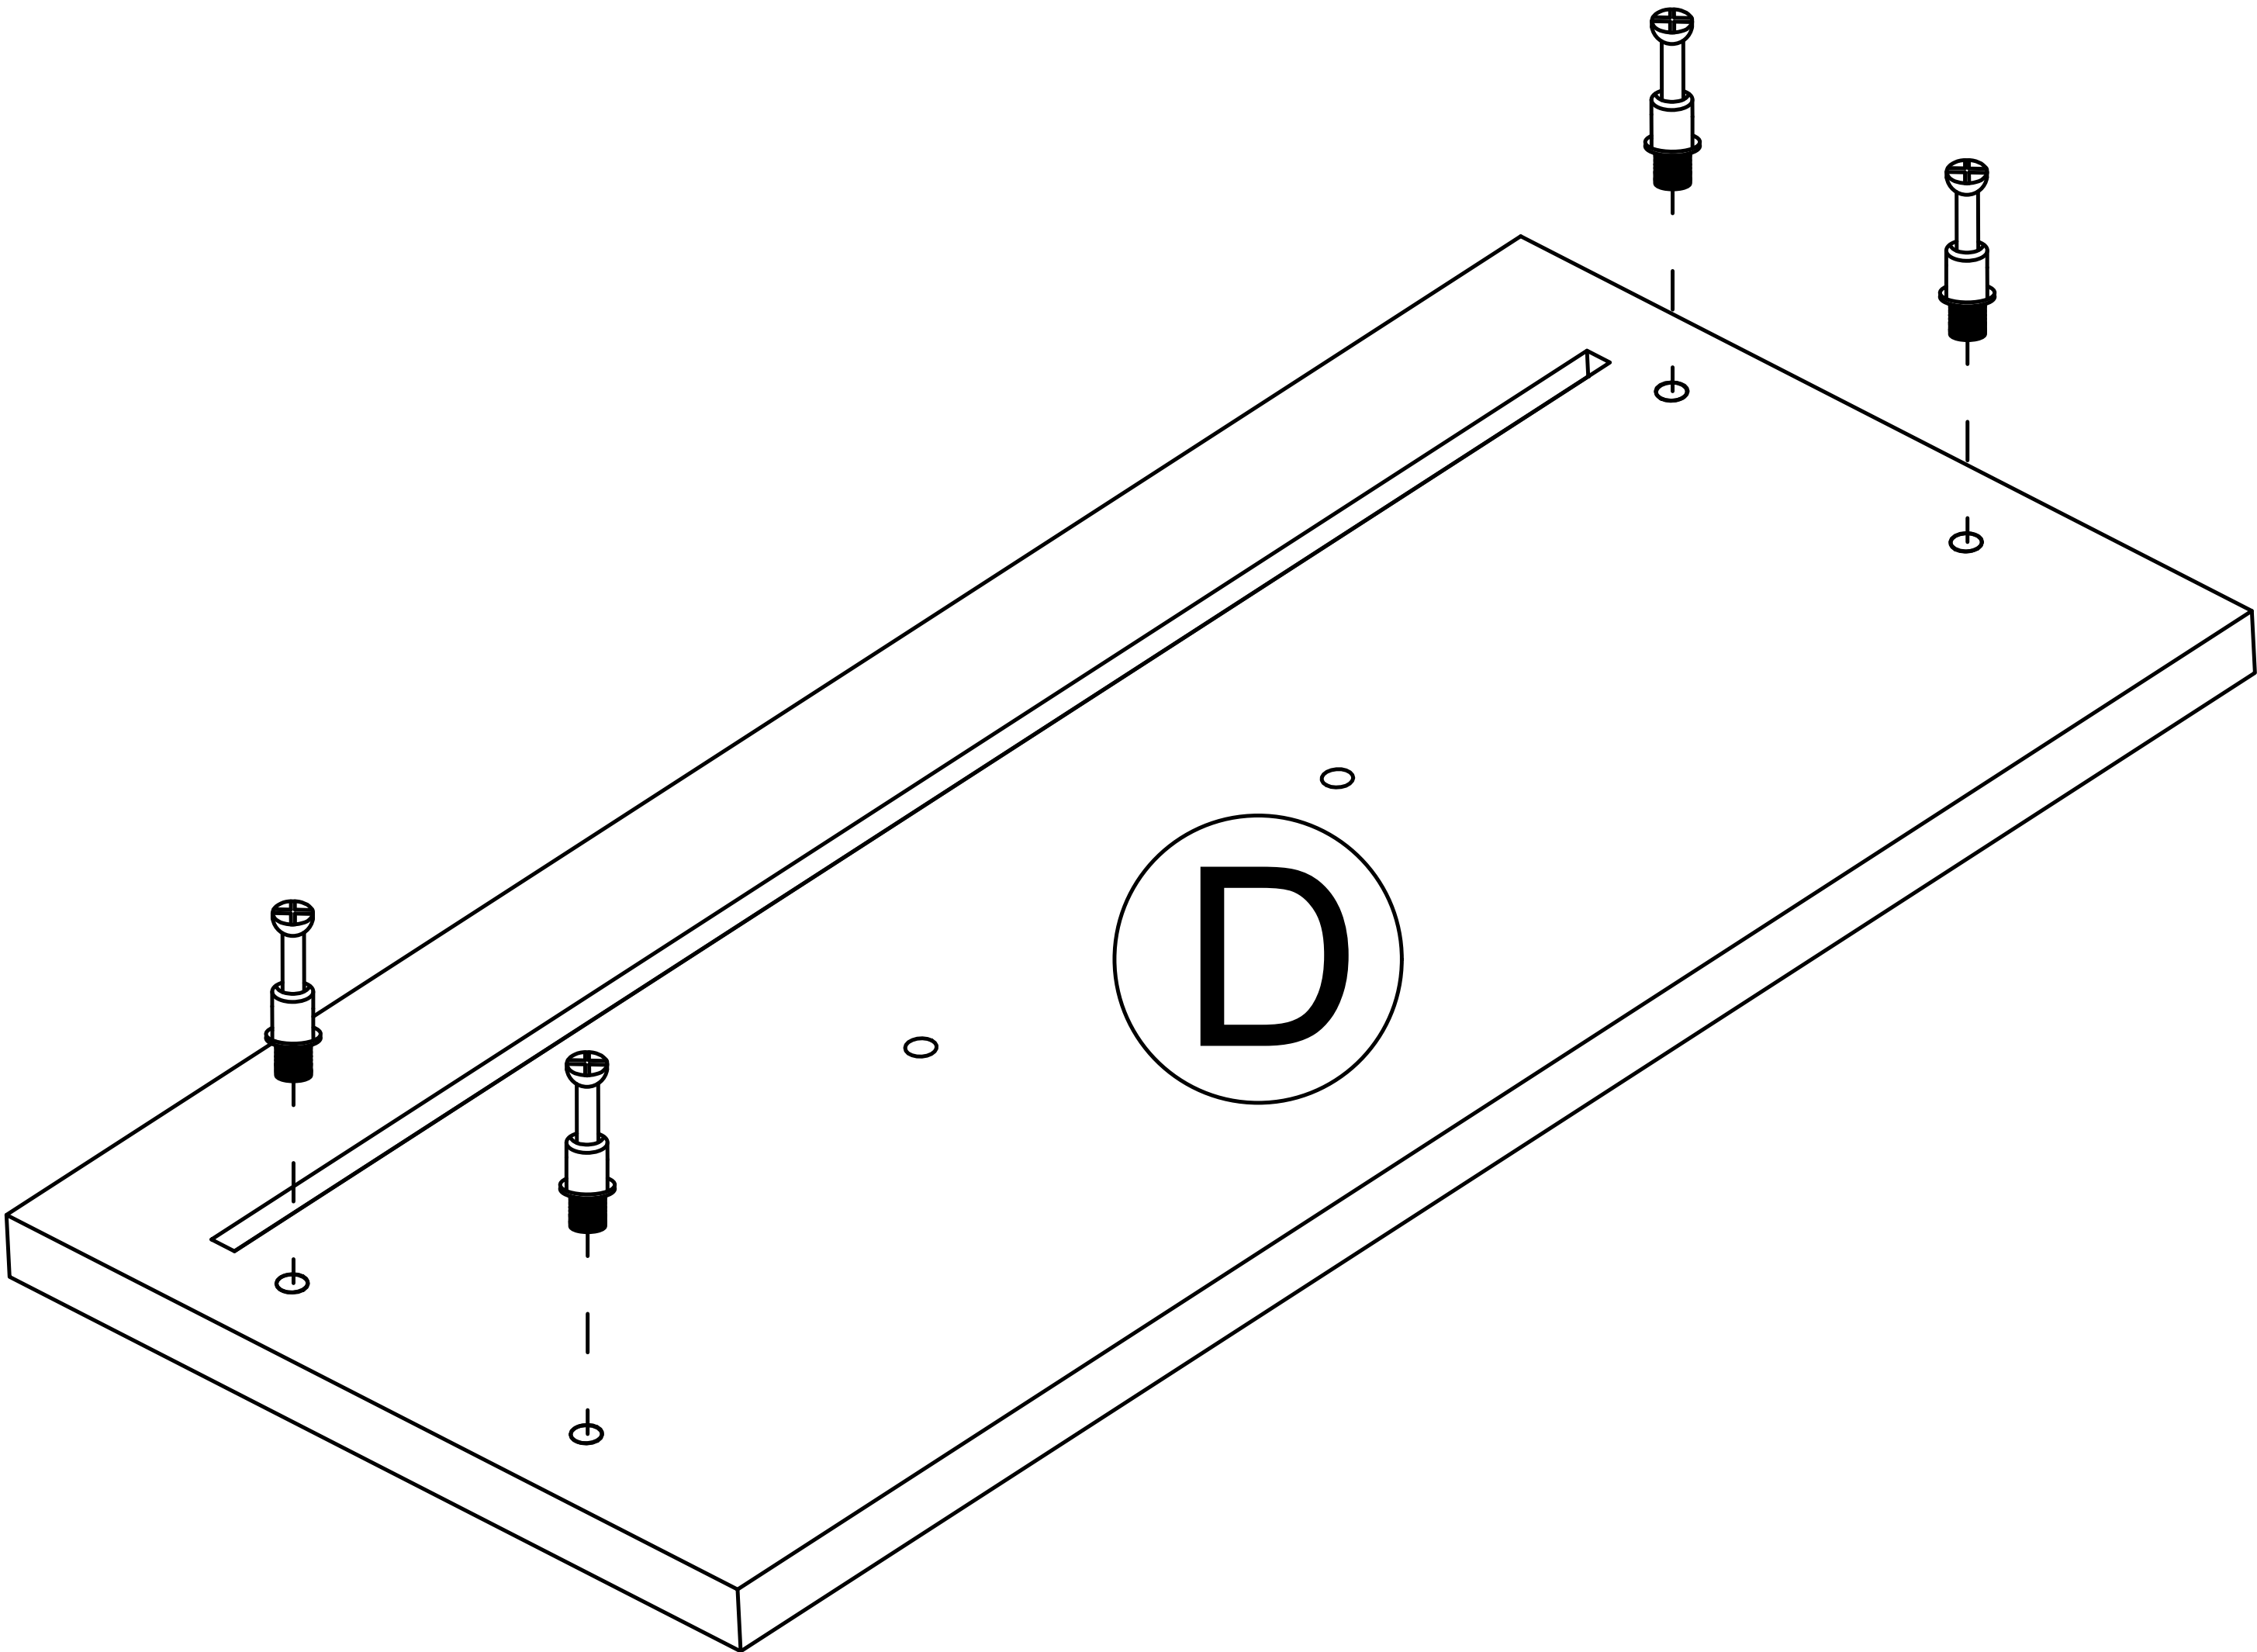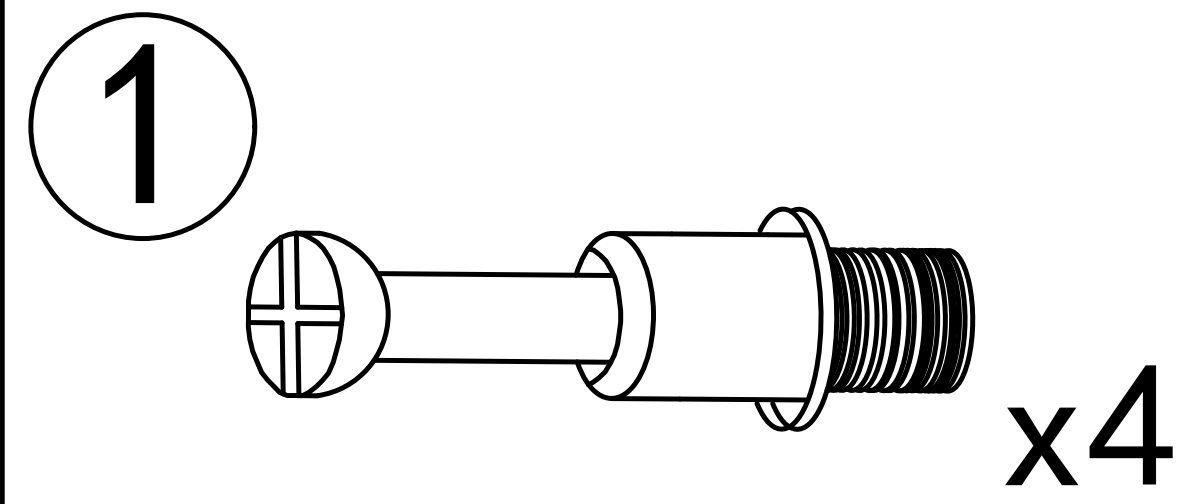


Step 5

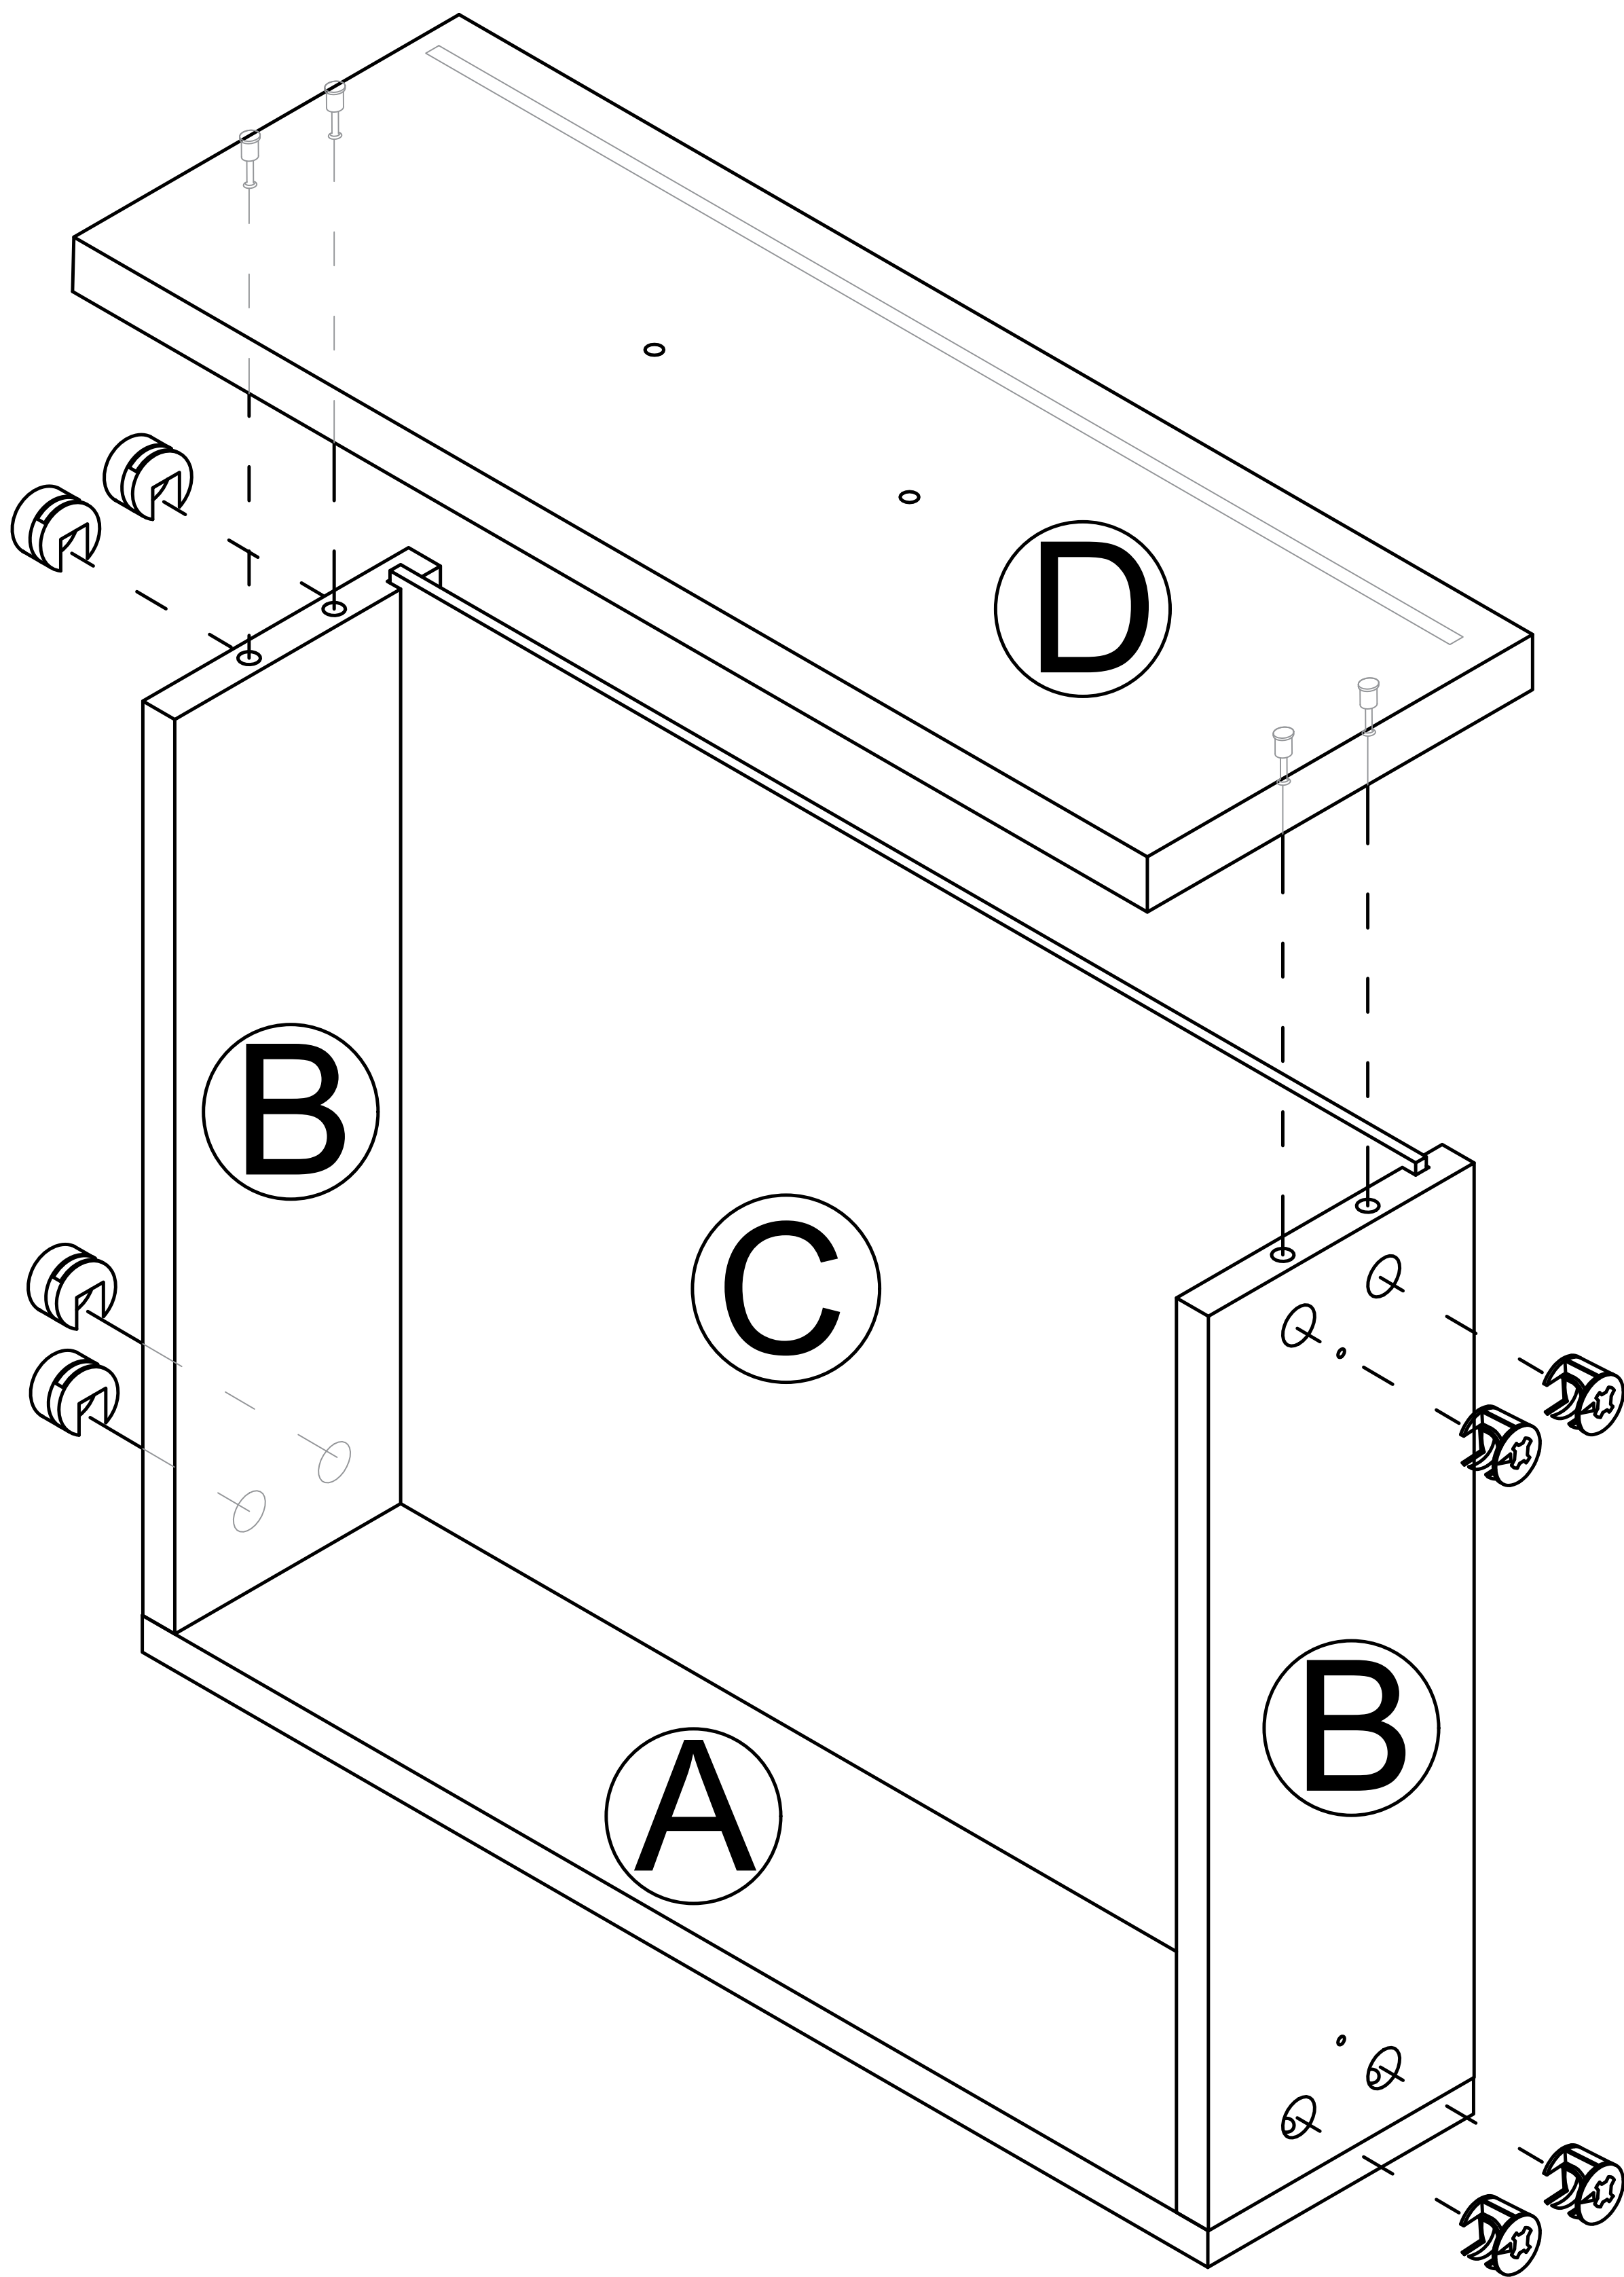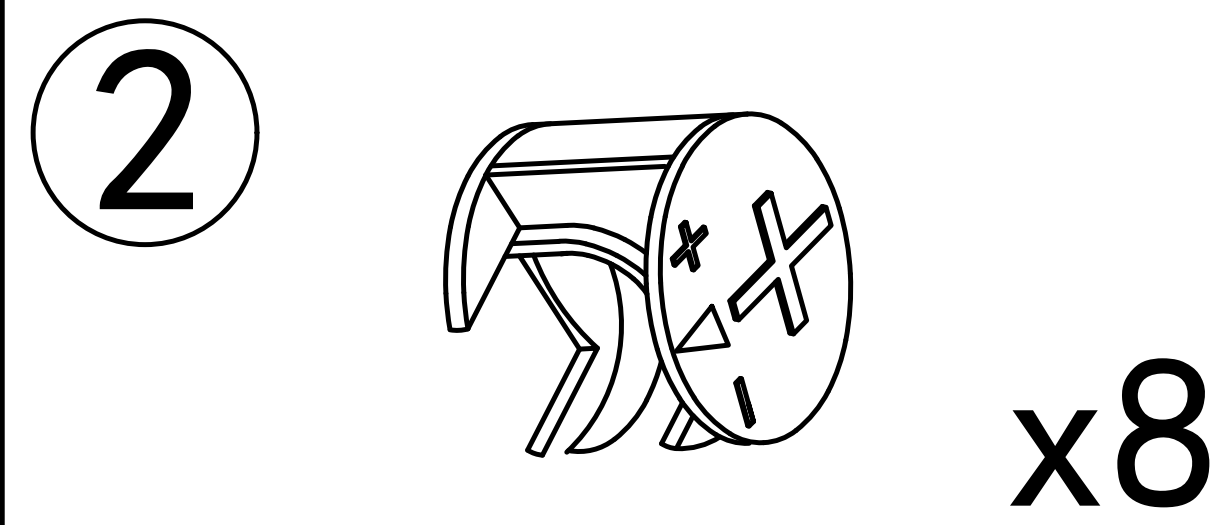


Use parts ⑤

Drawer rail breakdown diagram

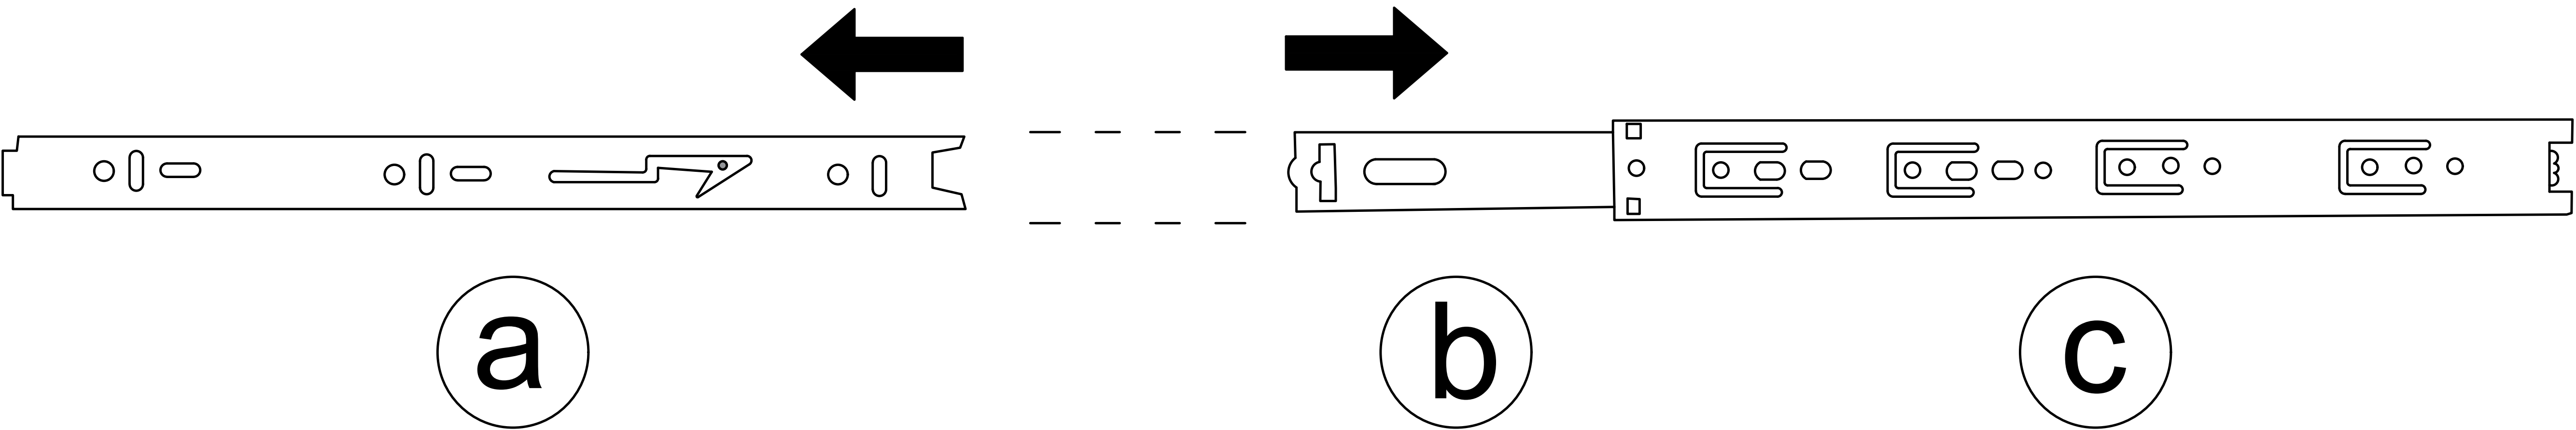


① Dismantle the schematic diagram

Step 1 : Pull the rails apart






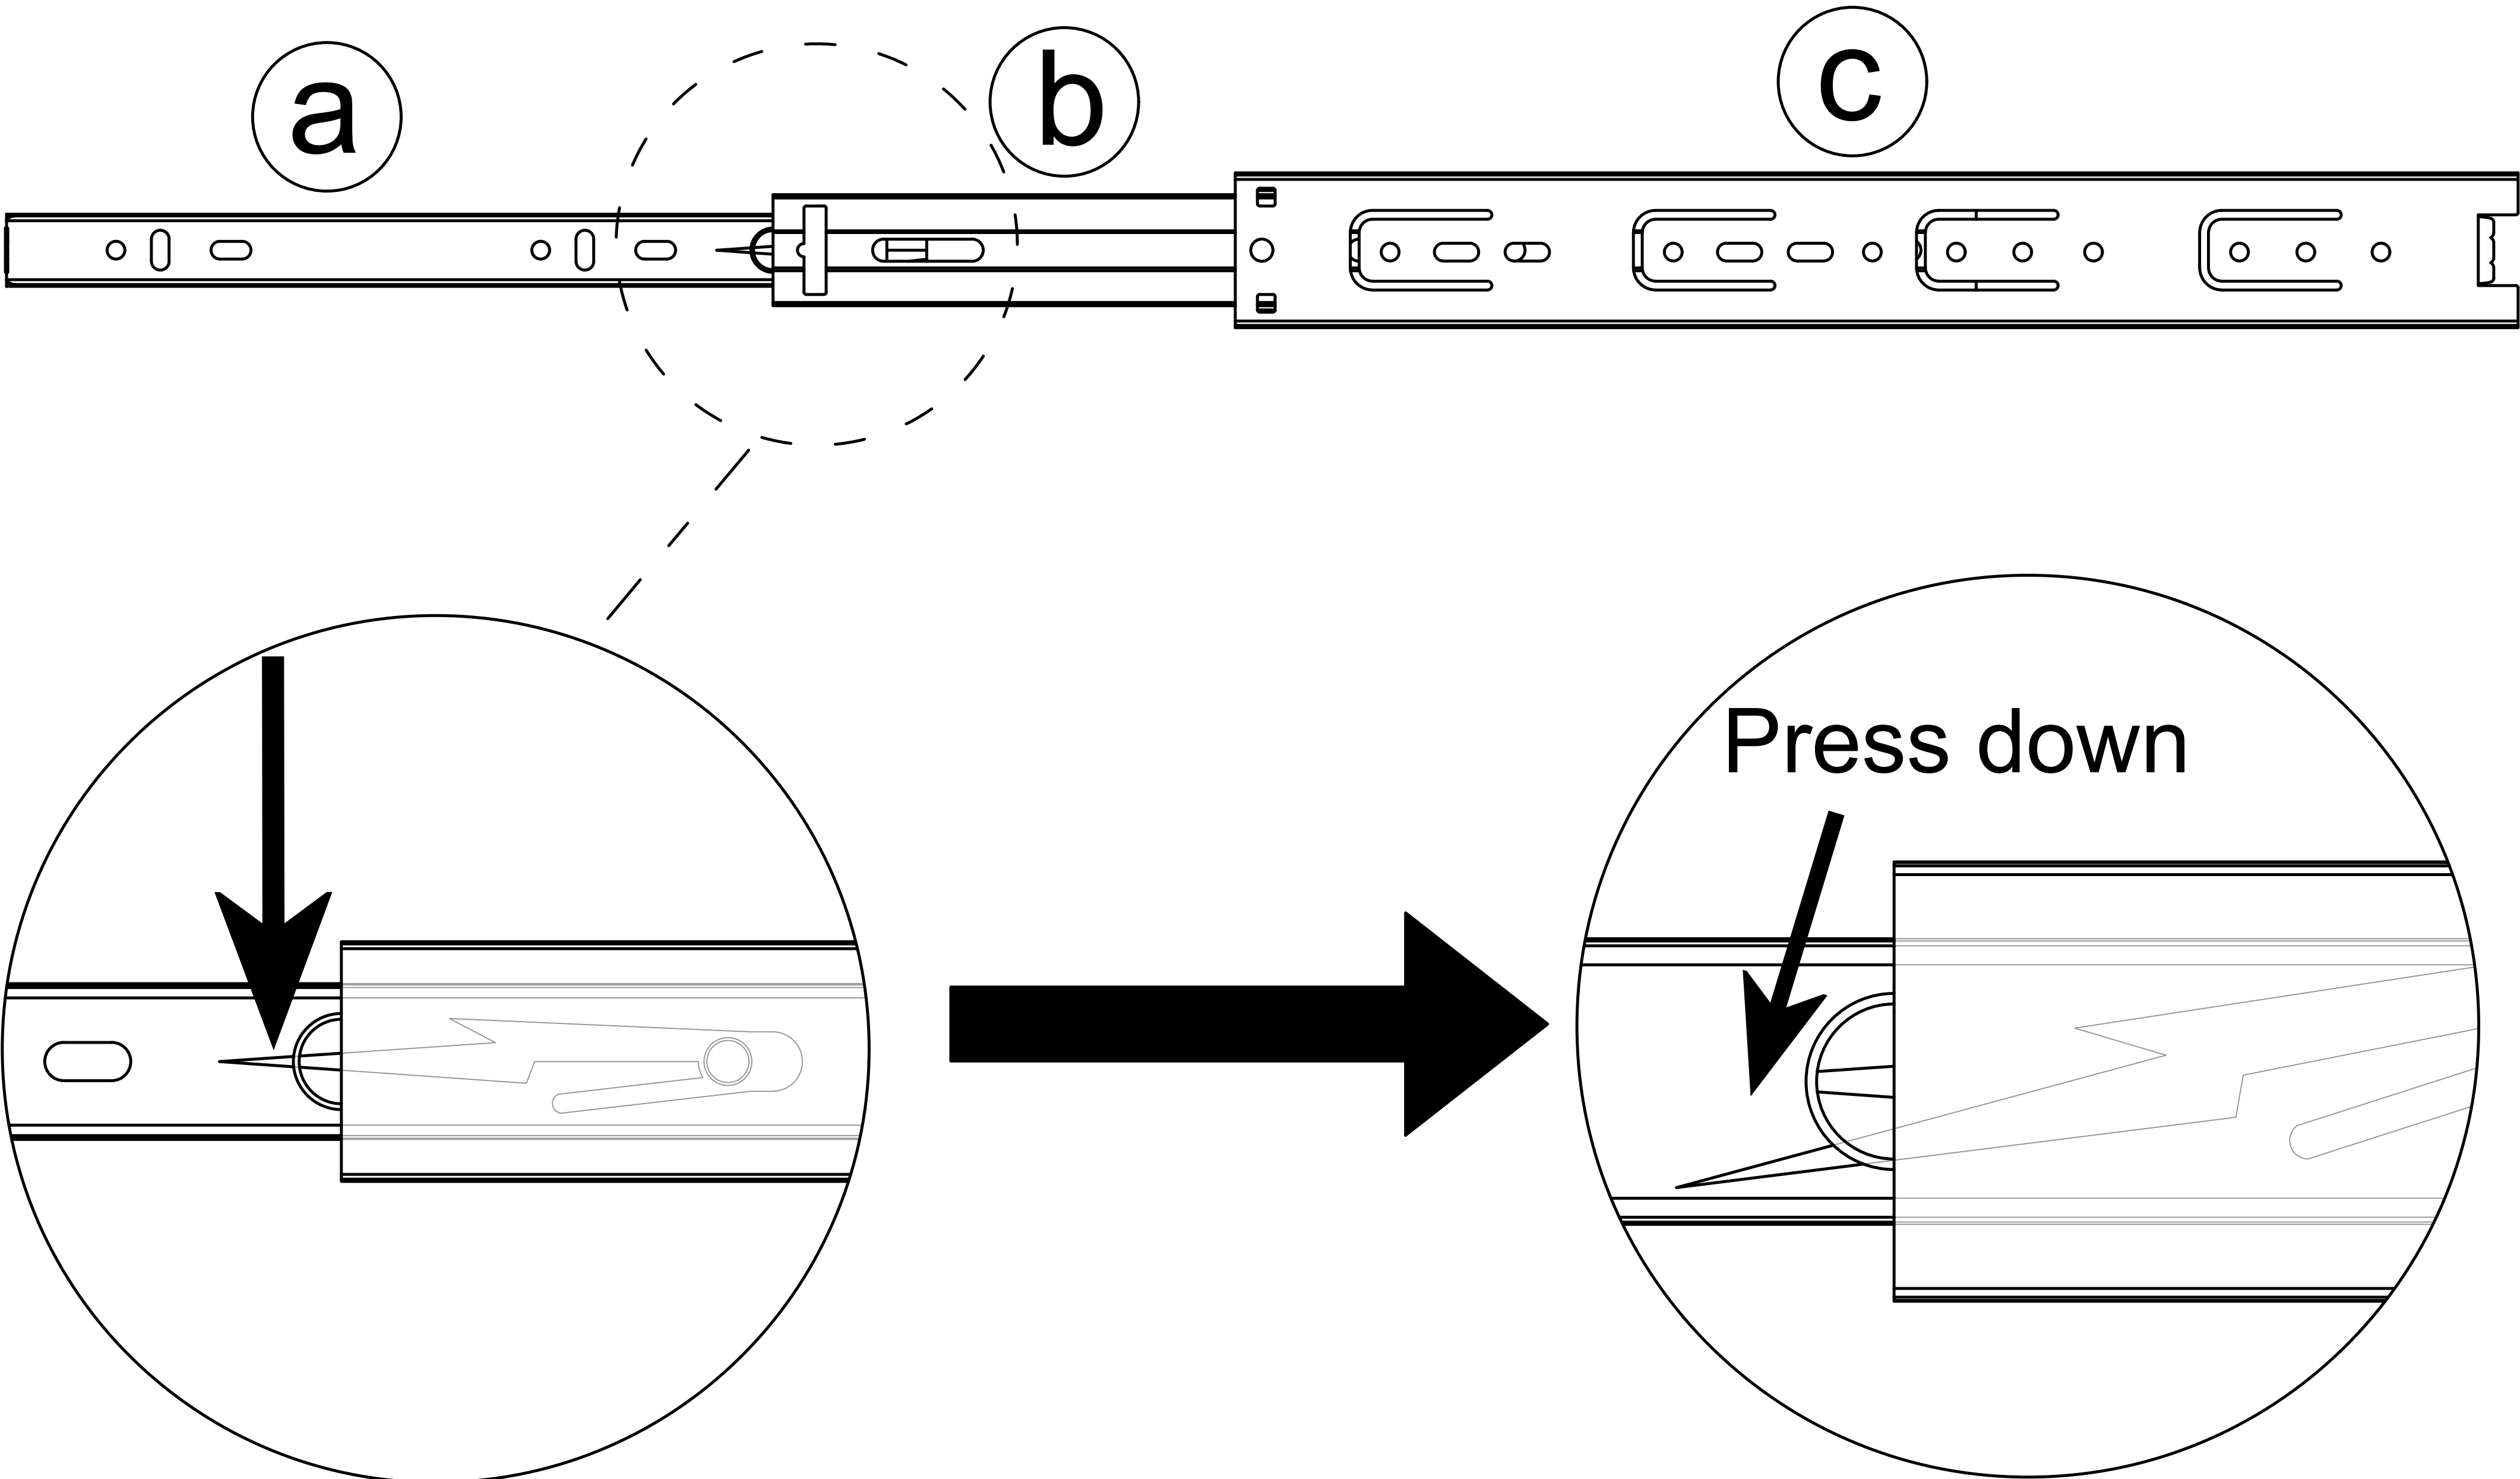


Step 2 : Press the nylon button and pull out (a).



Drawer rail decomposition completed schematic diagram

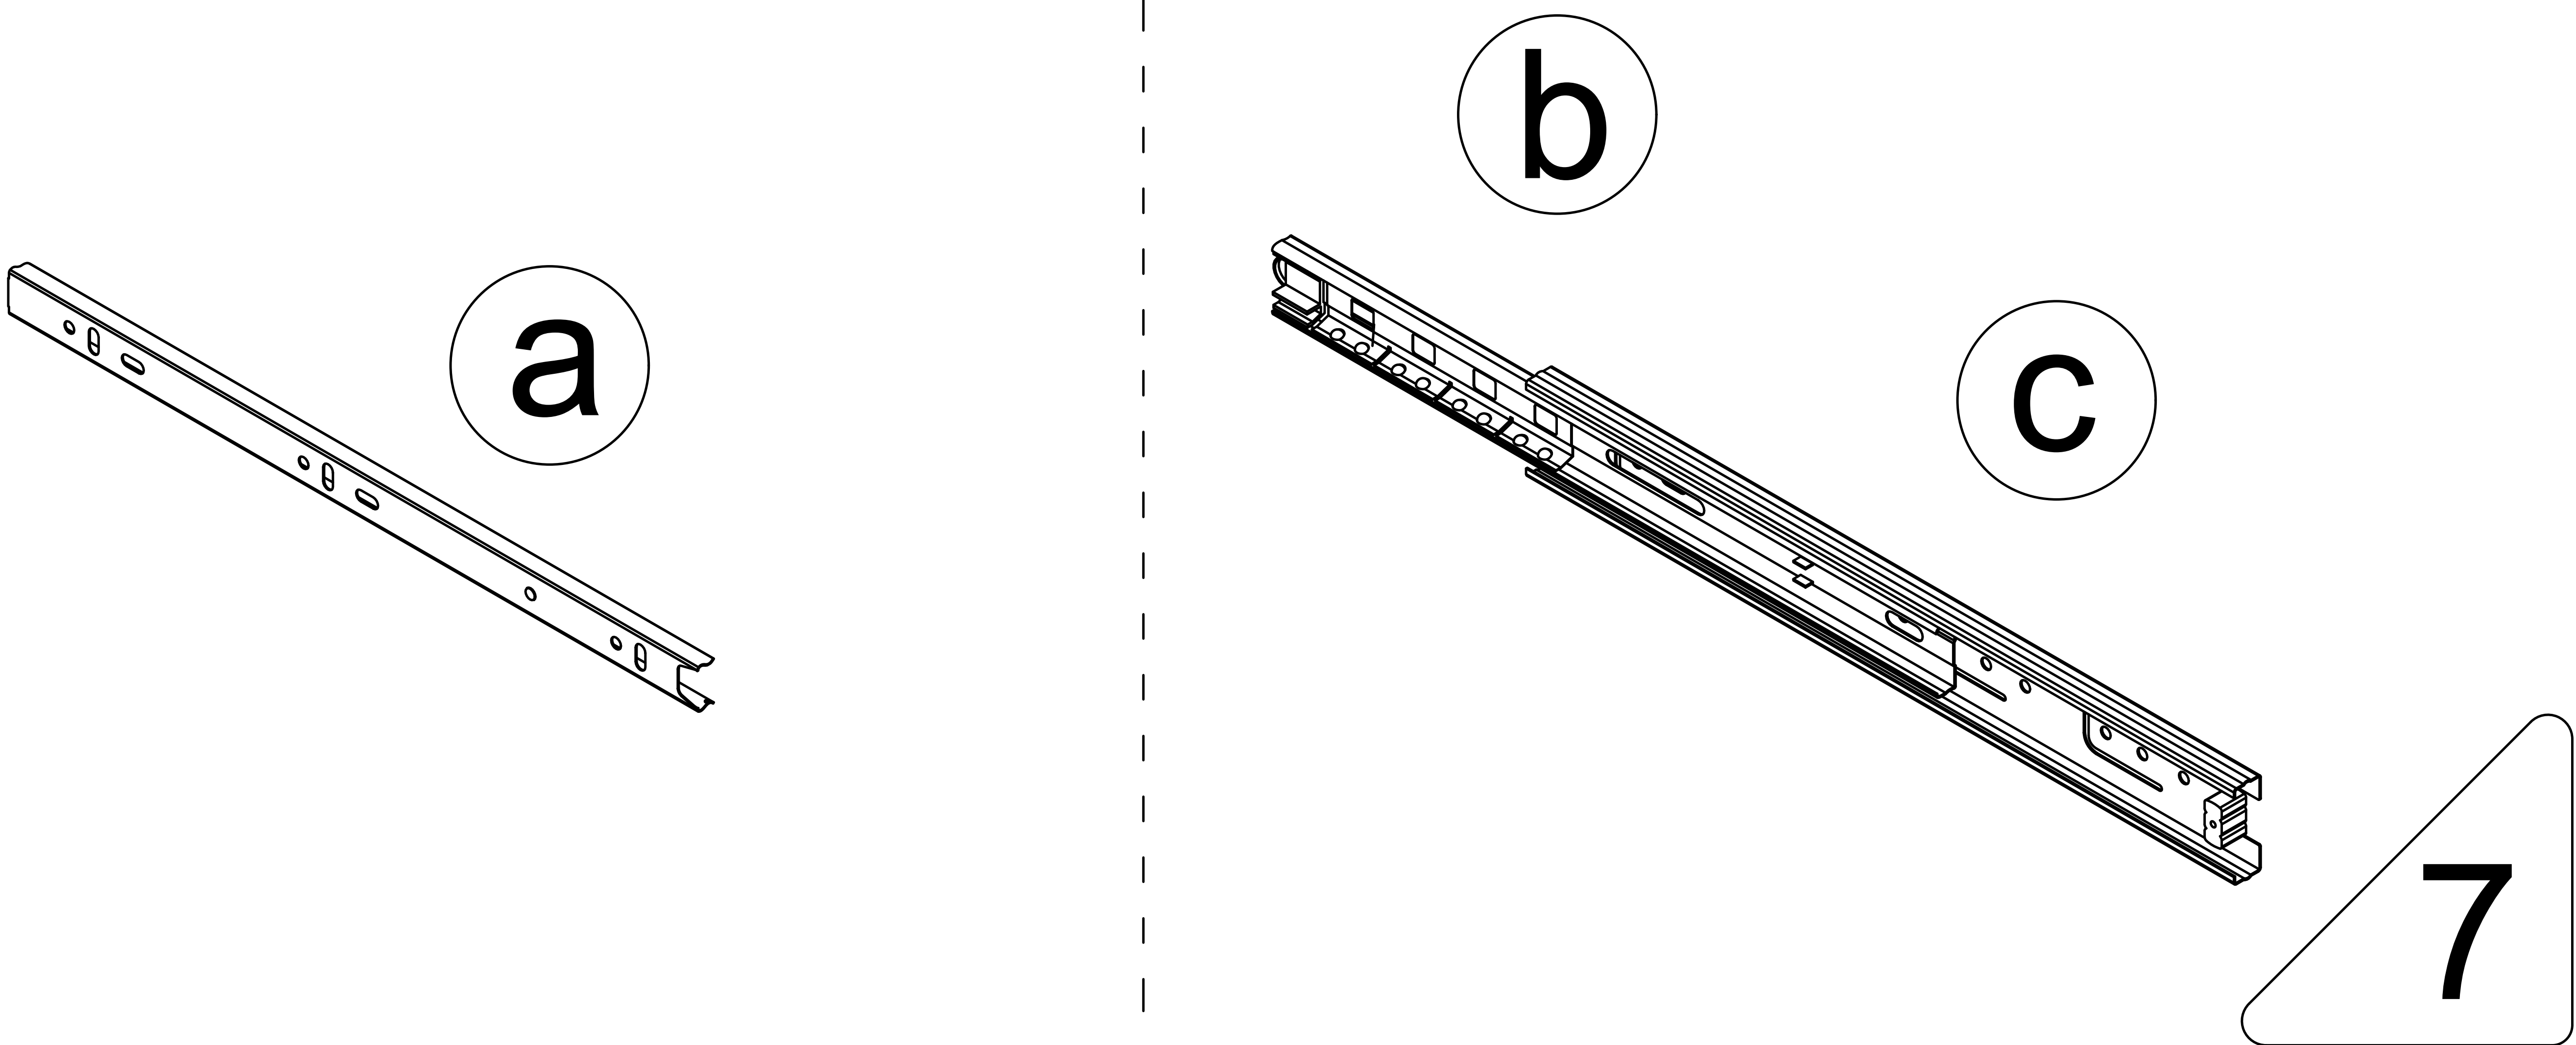

Step 6

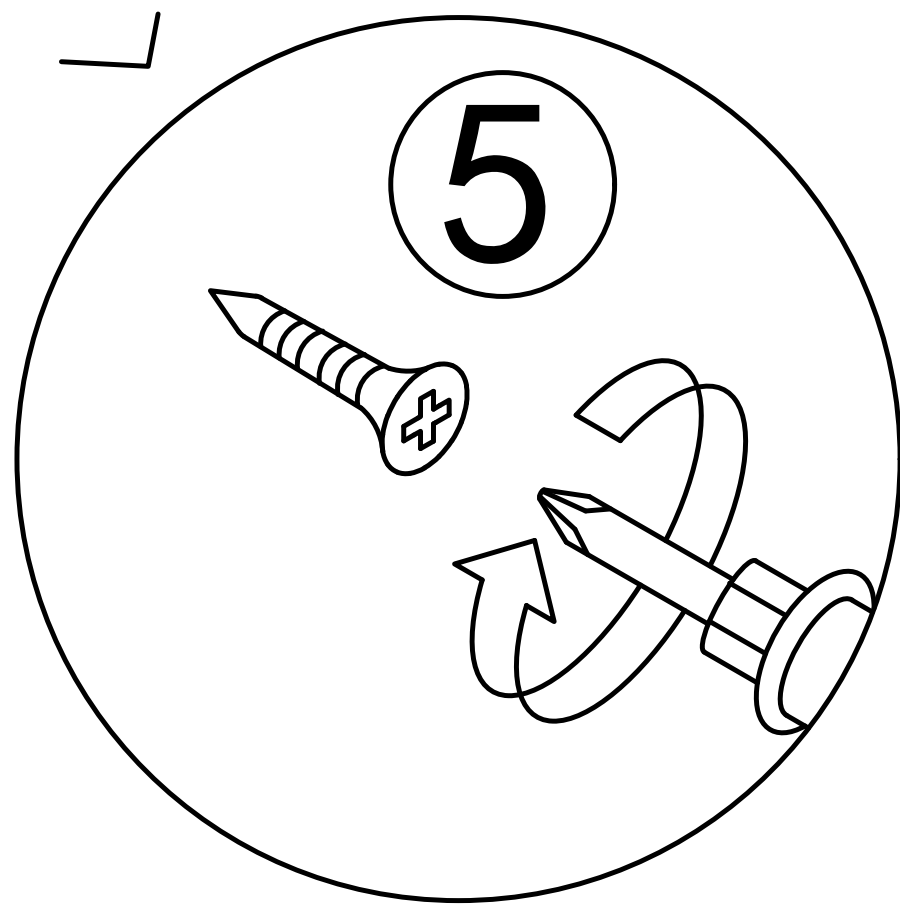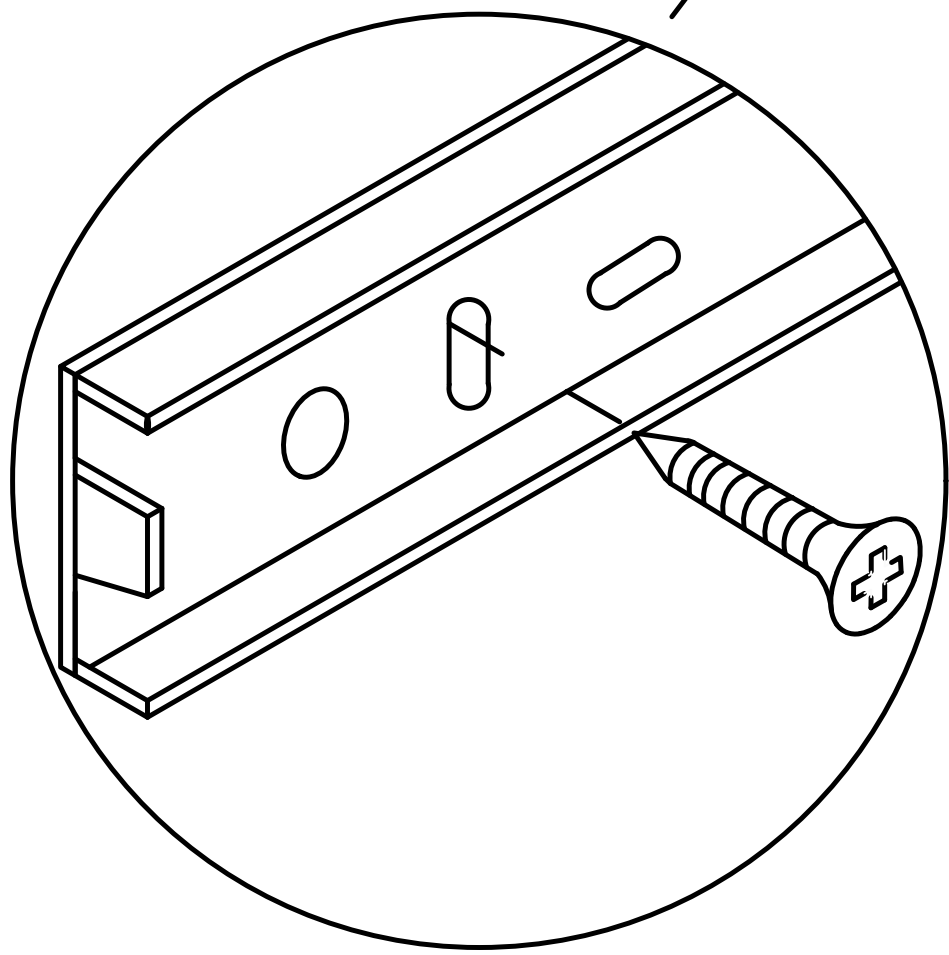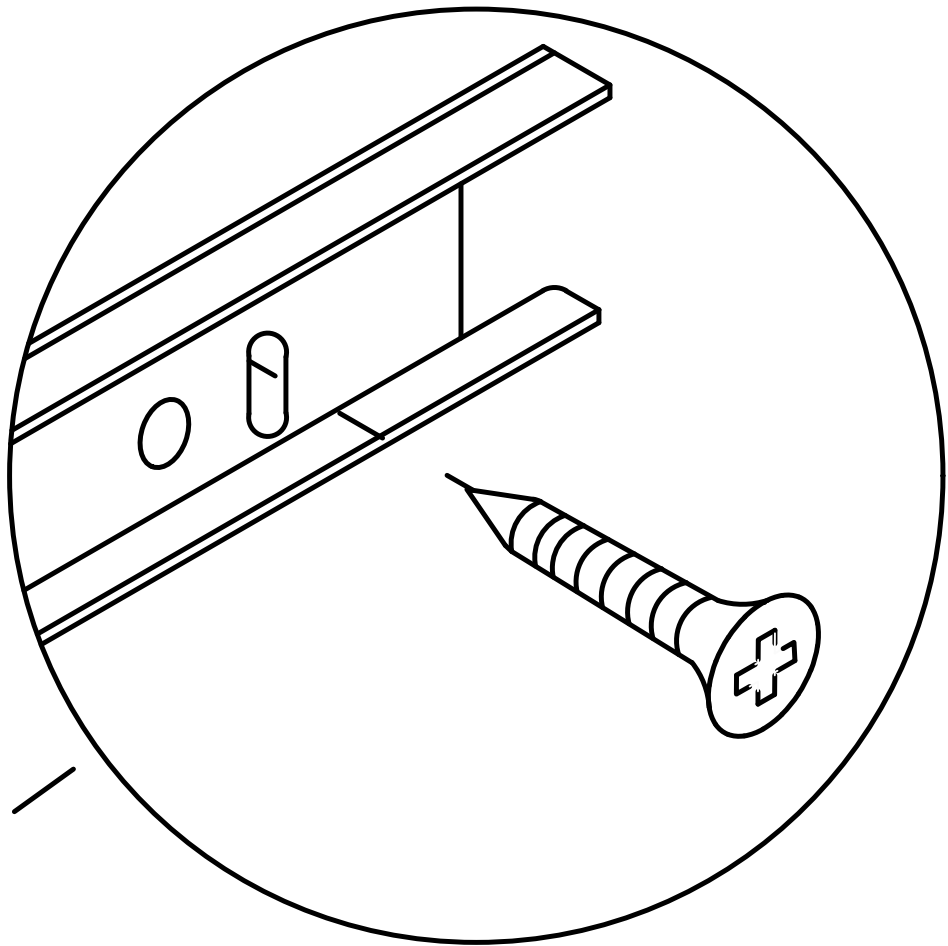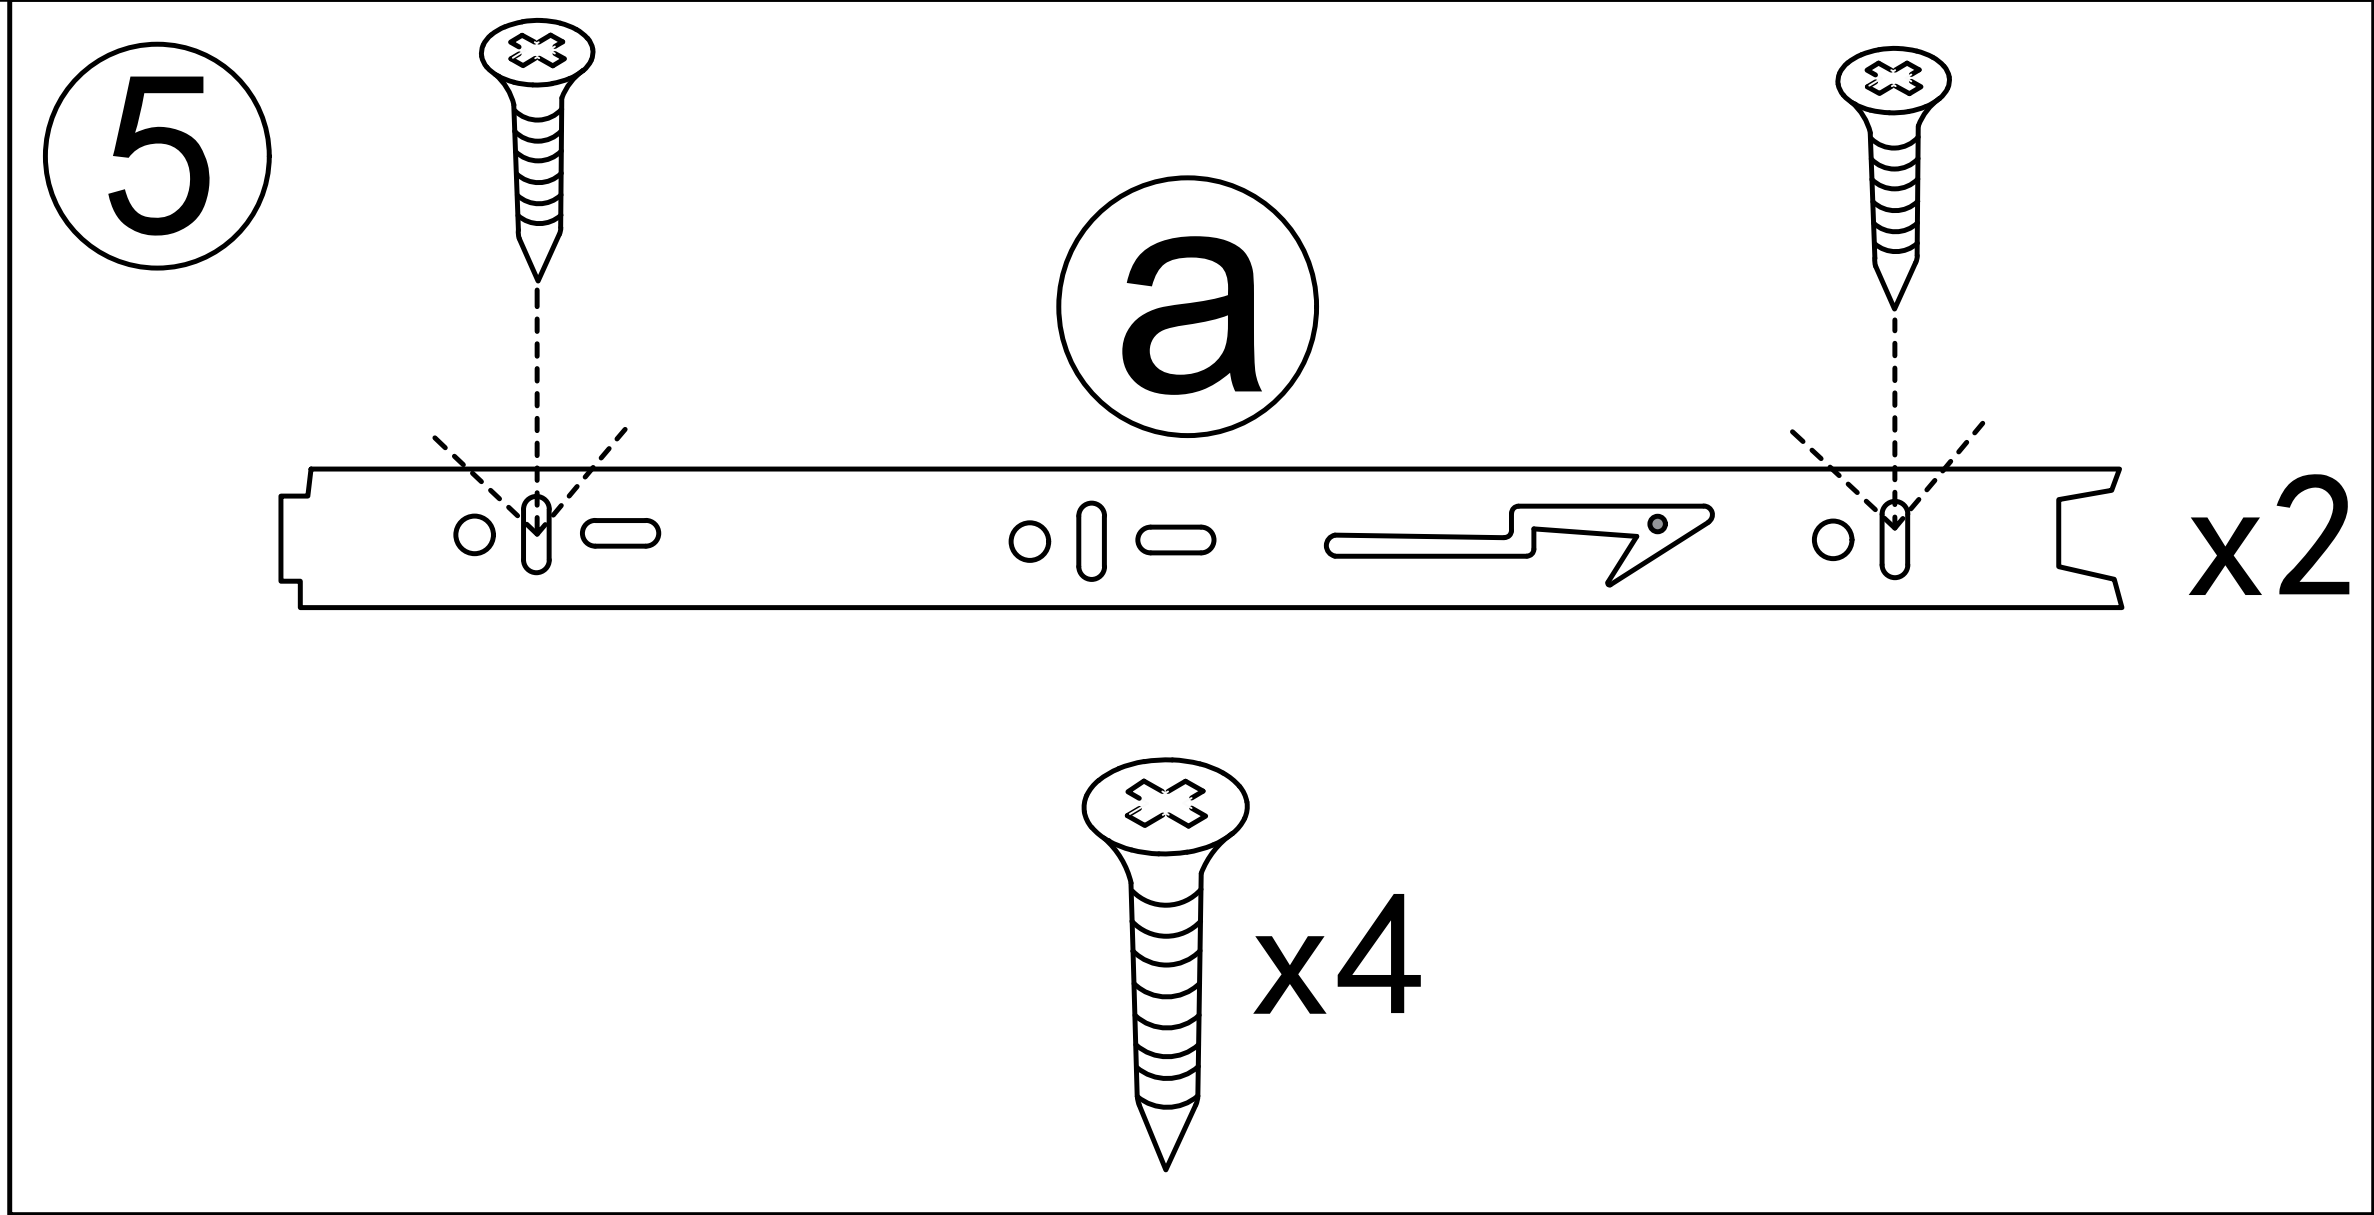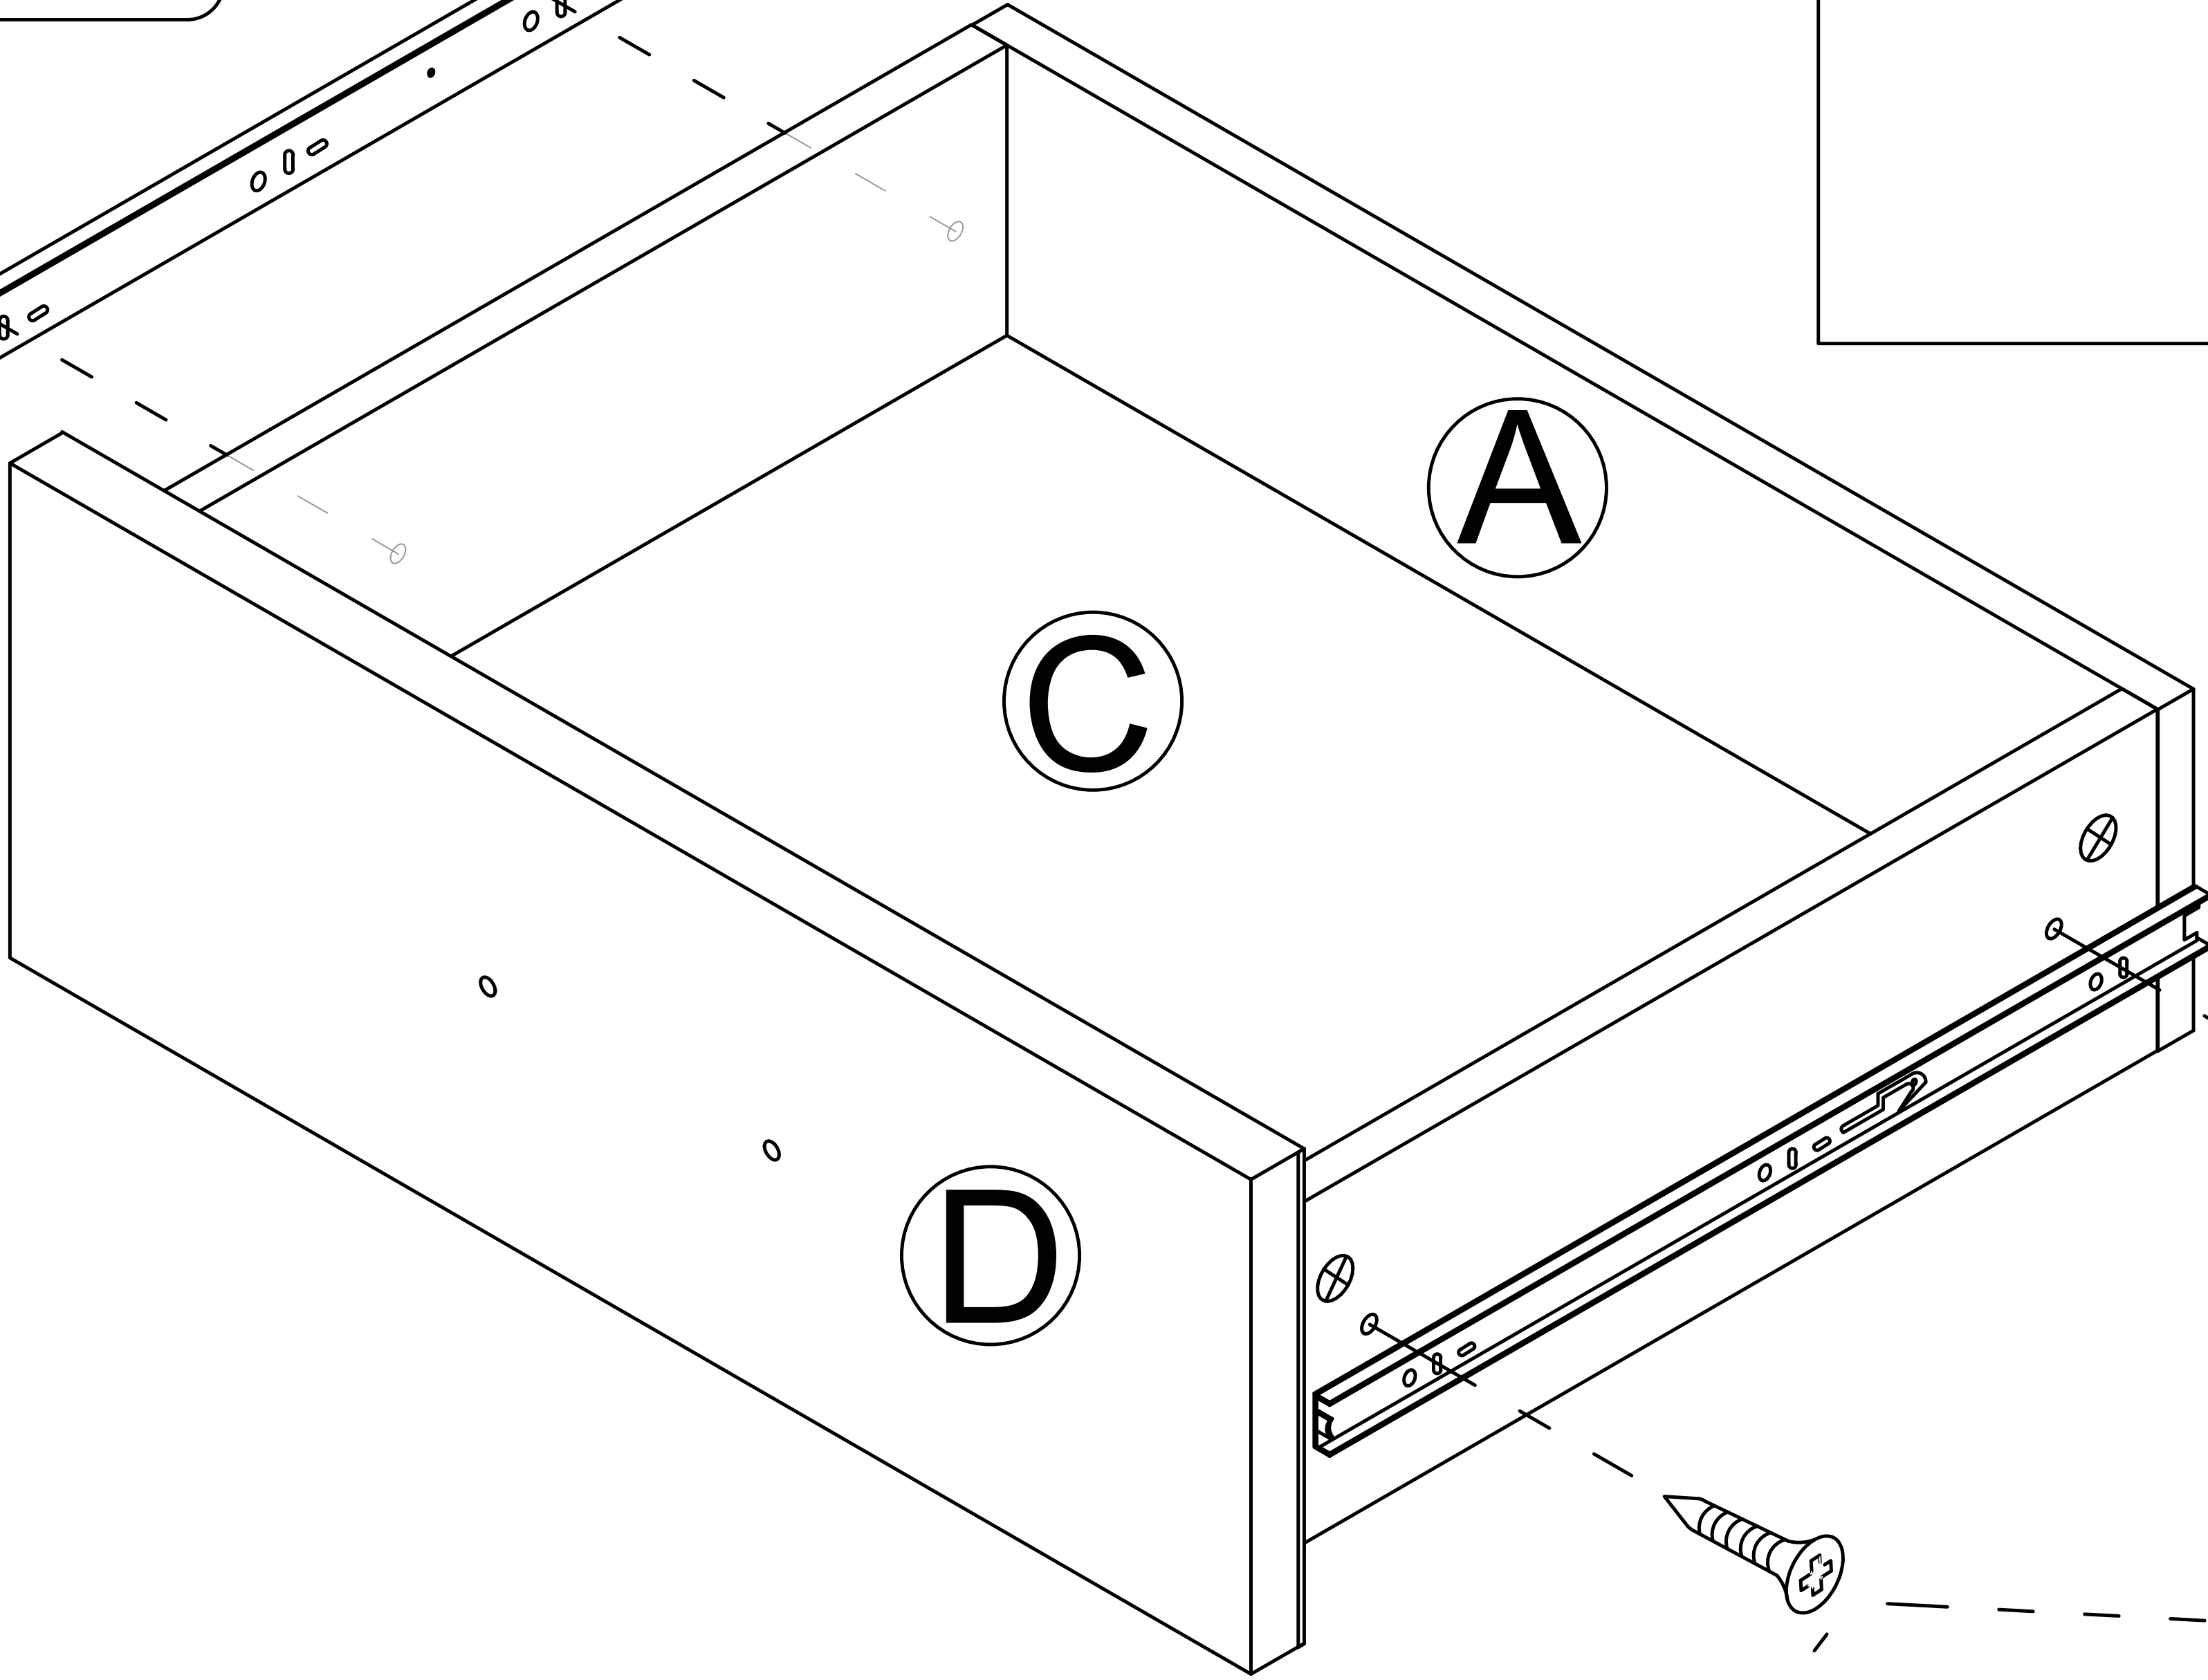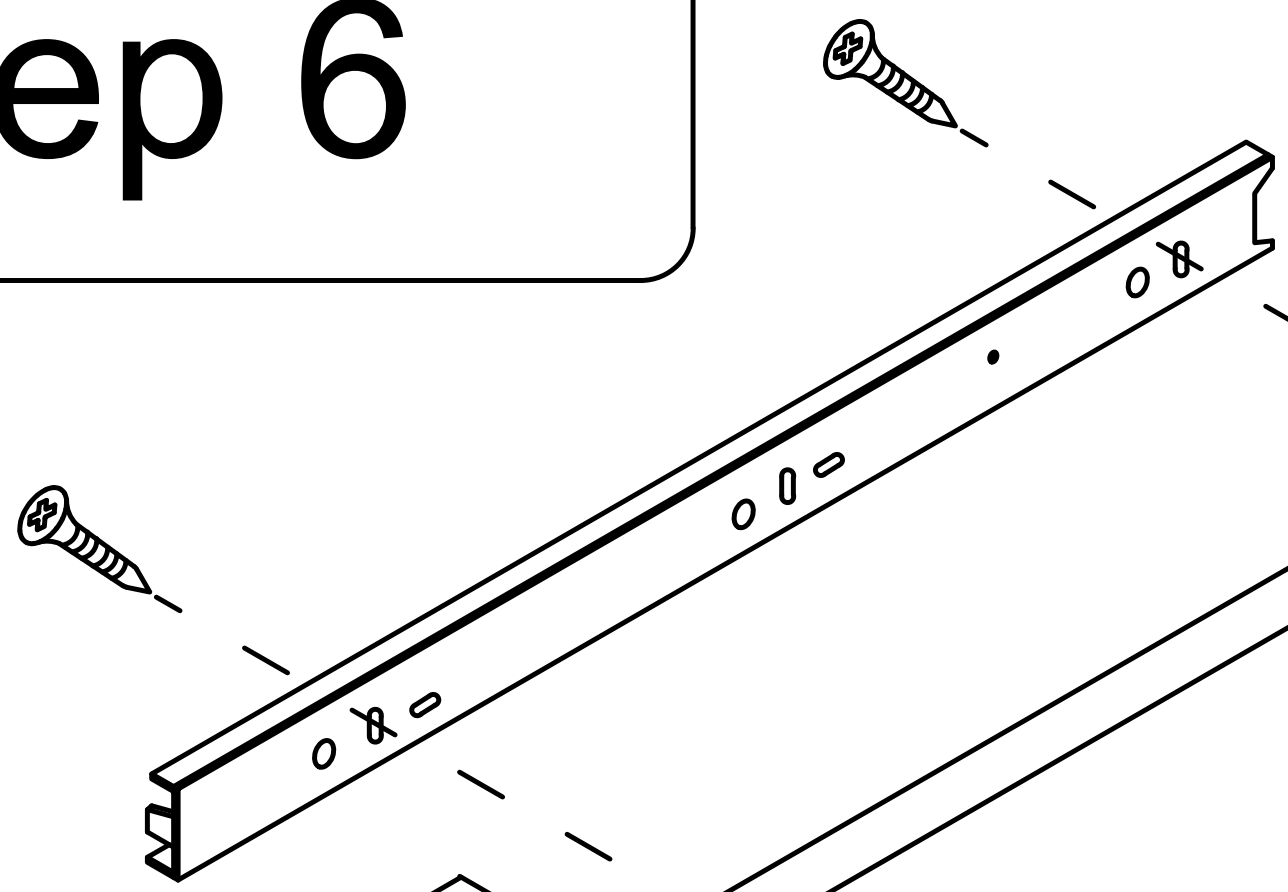


Step 7

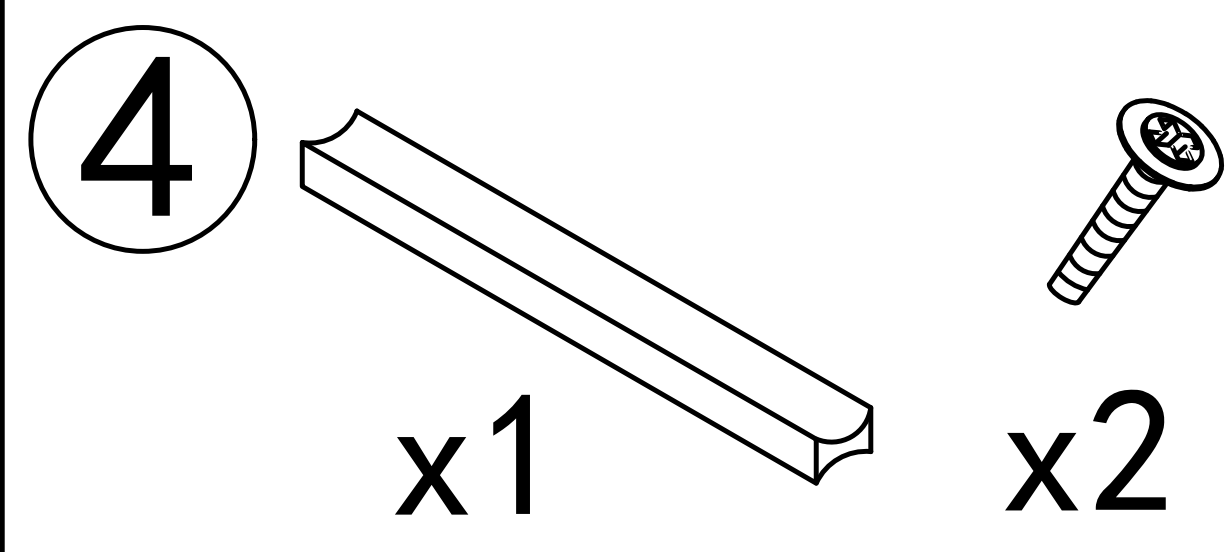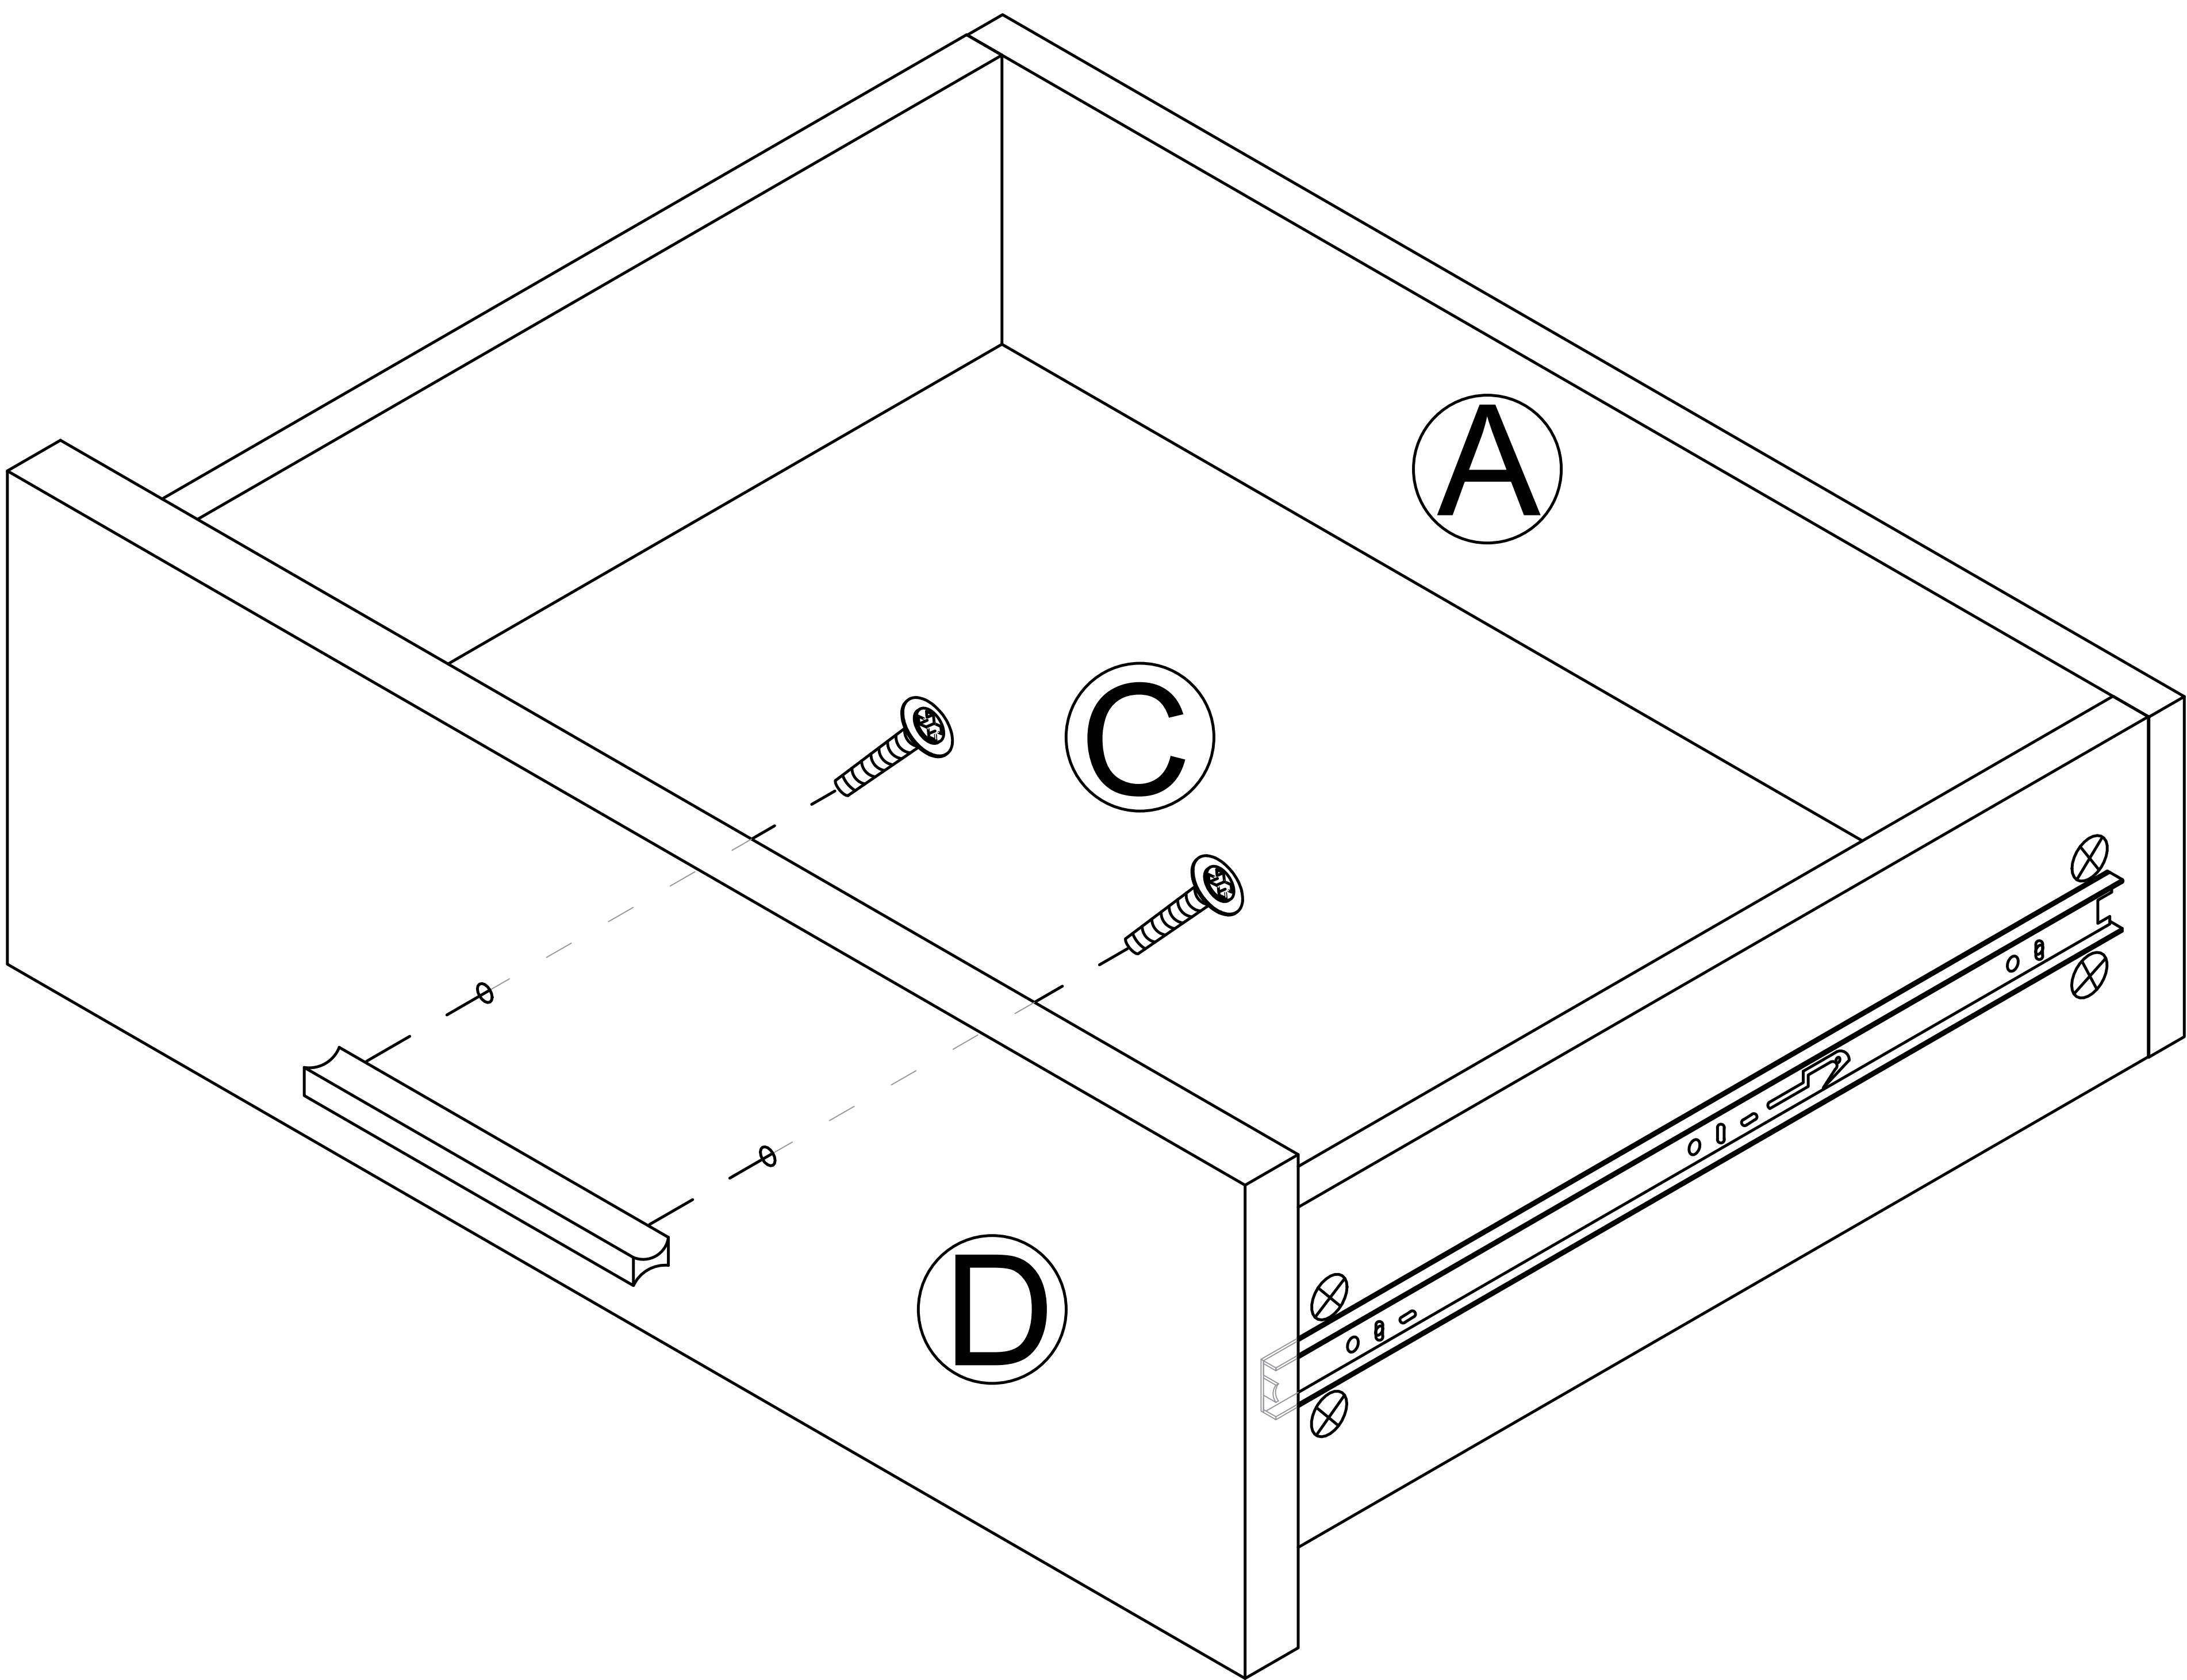


Step 8


- 1

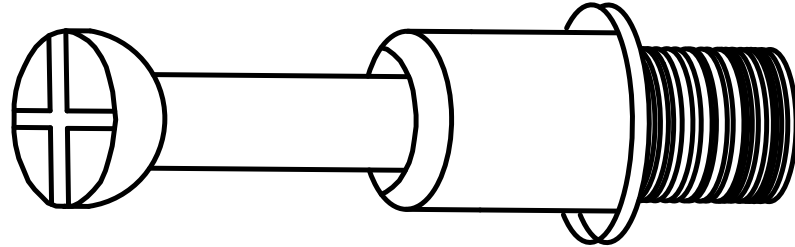


x8
- 2

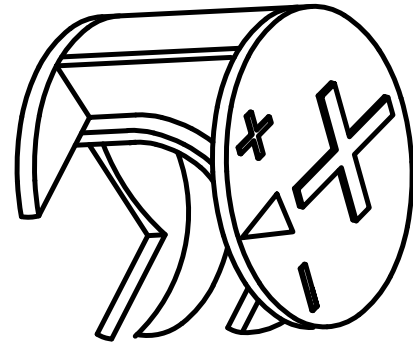

x8
- 4

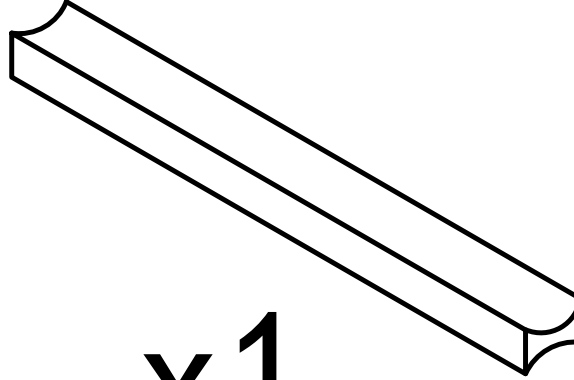



x1

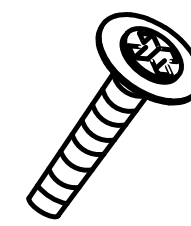

x2
- 5



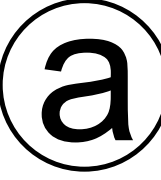




x2




x4

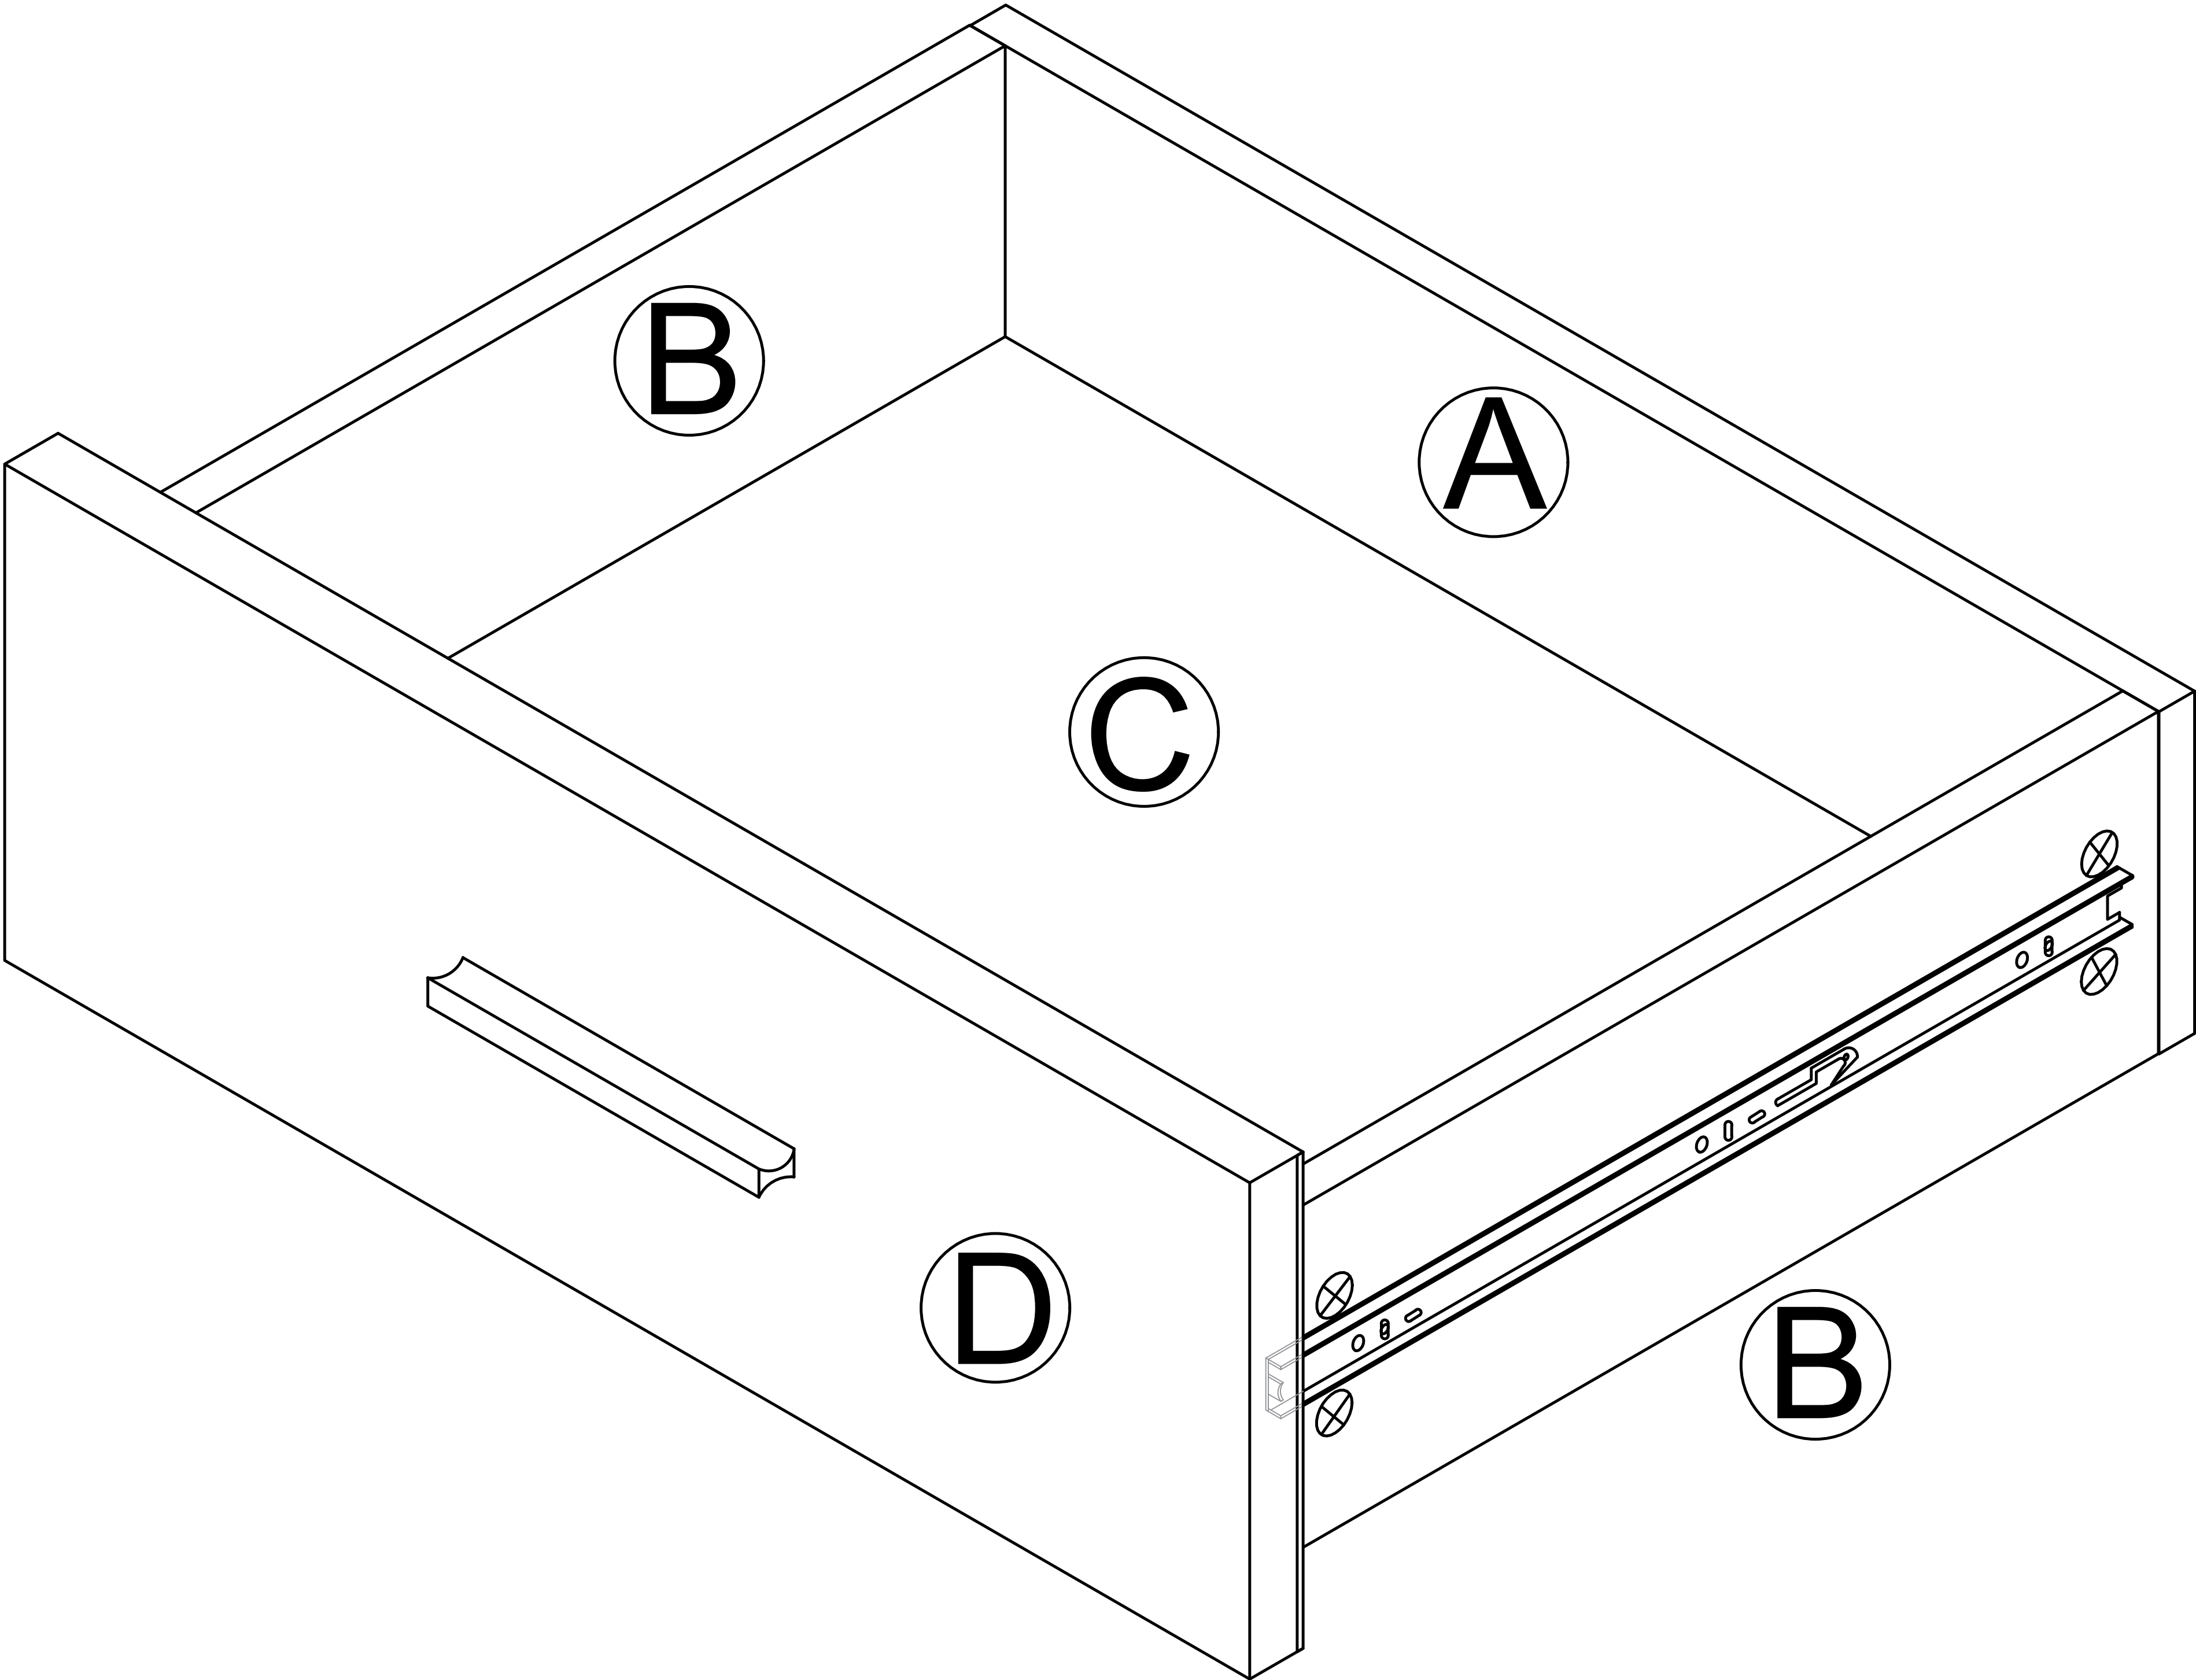

x2


Use the same way to install another drawer

Product structure decomposition

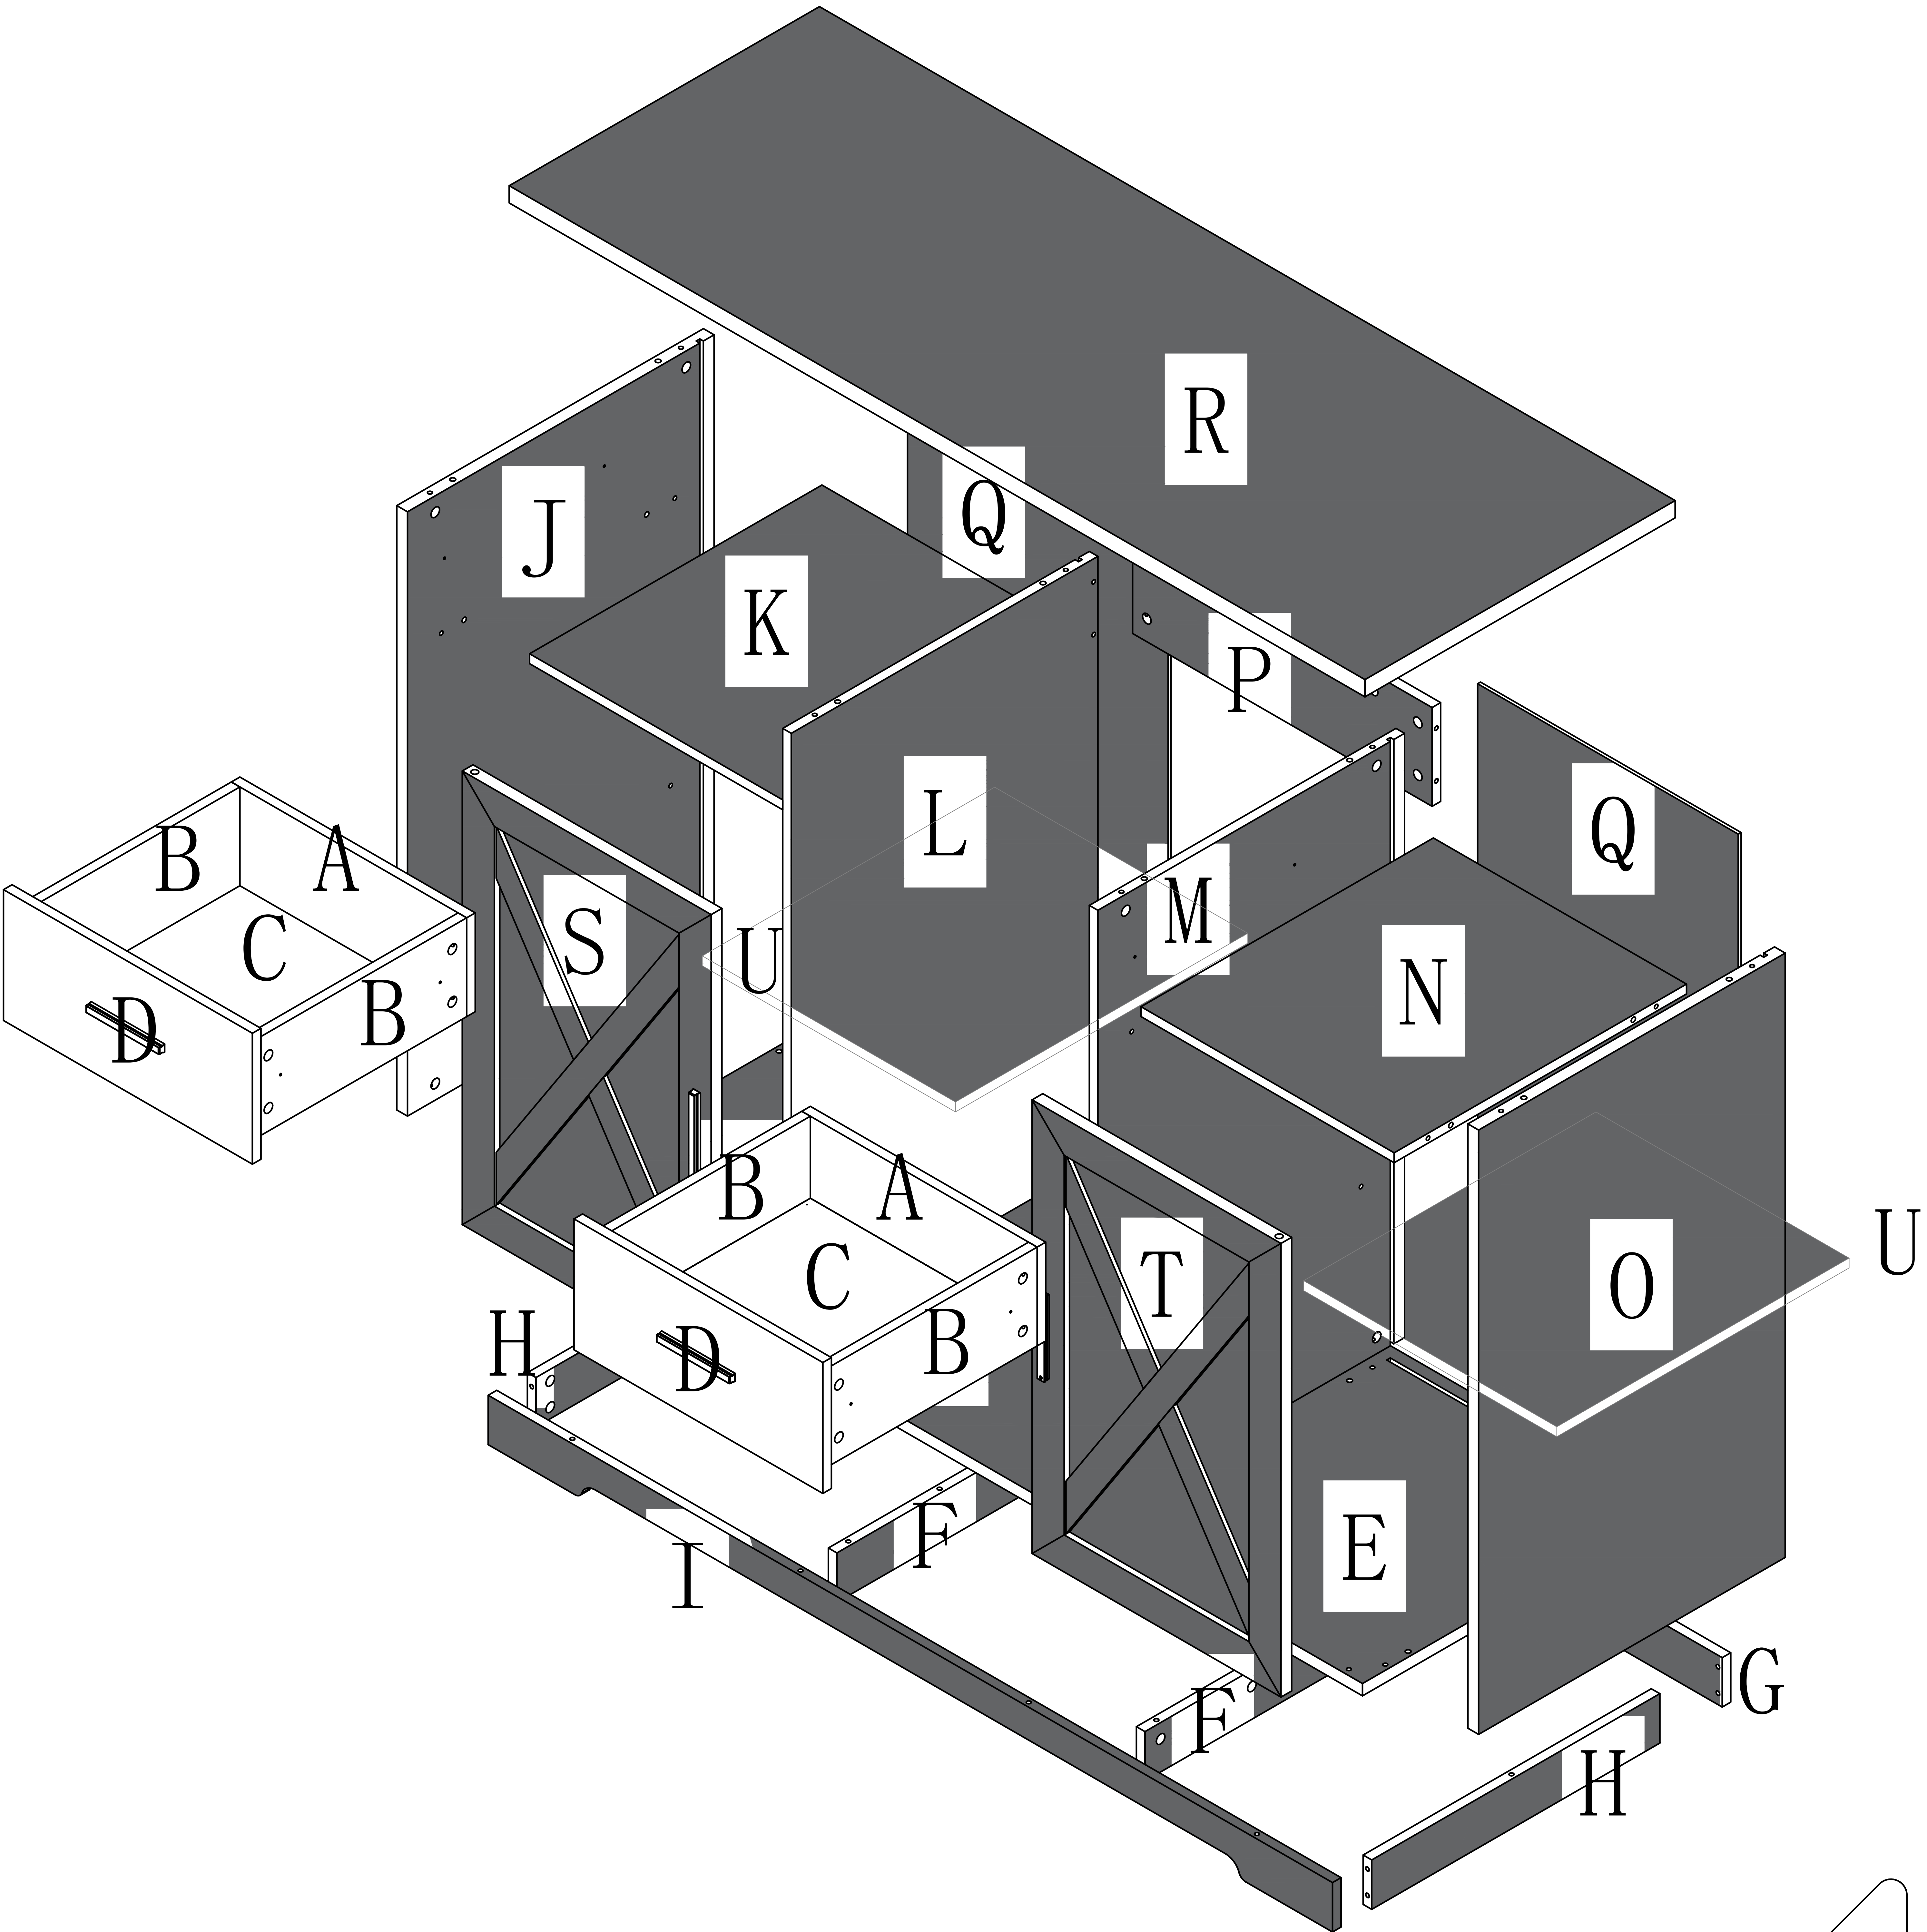


Step 9

1

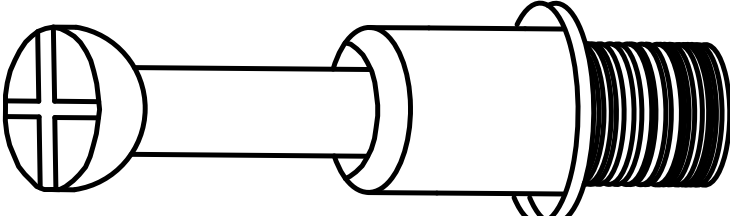


x8

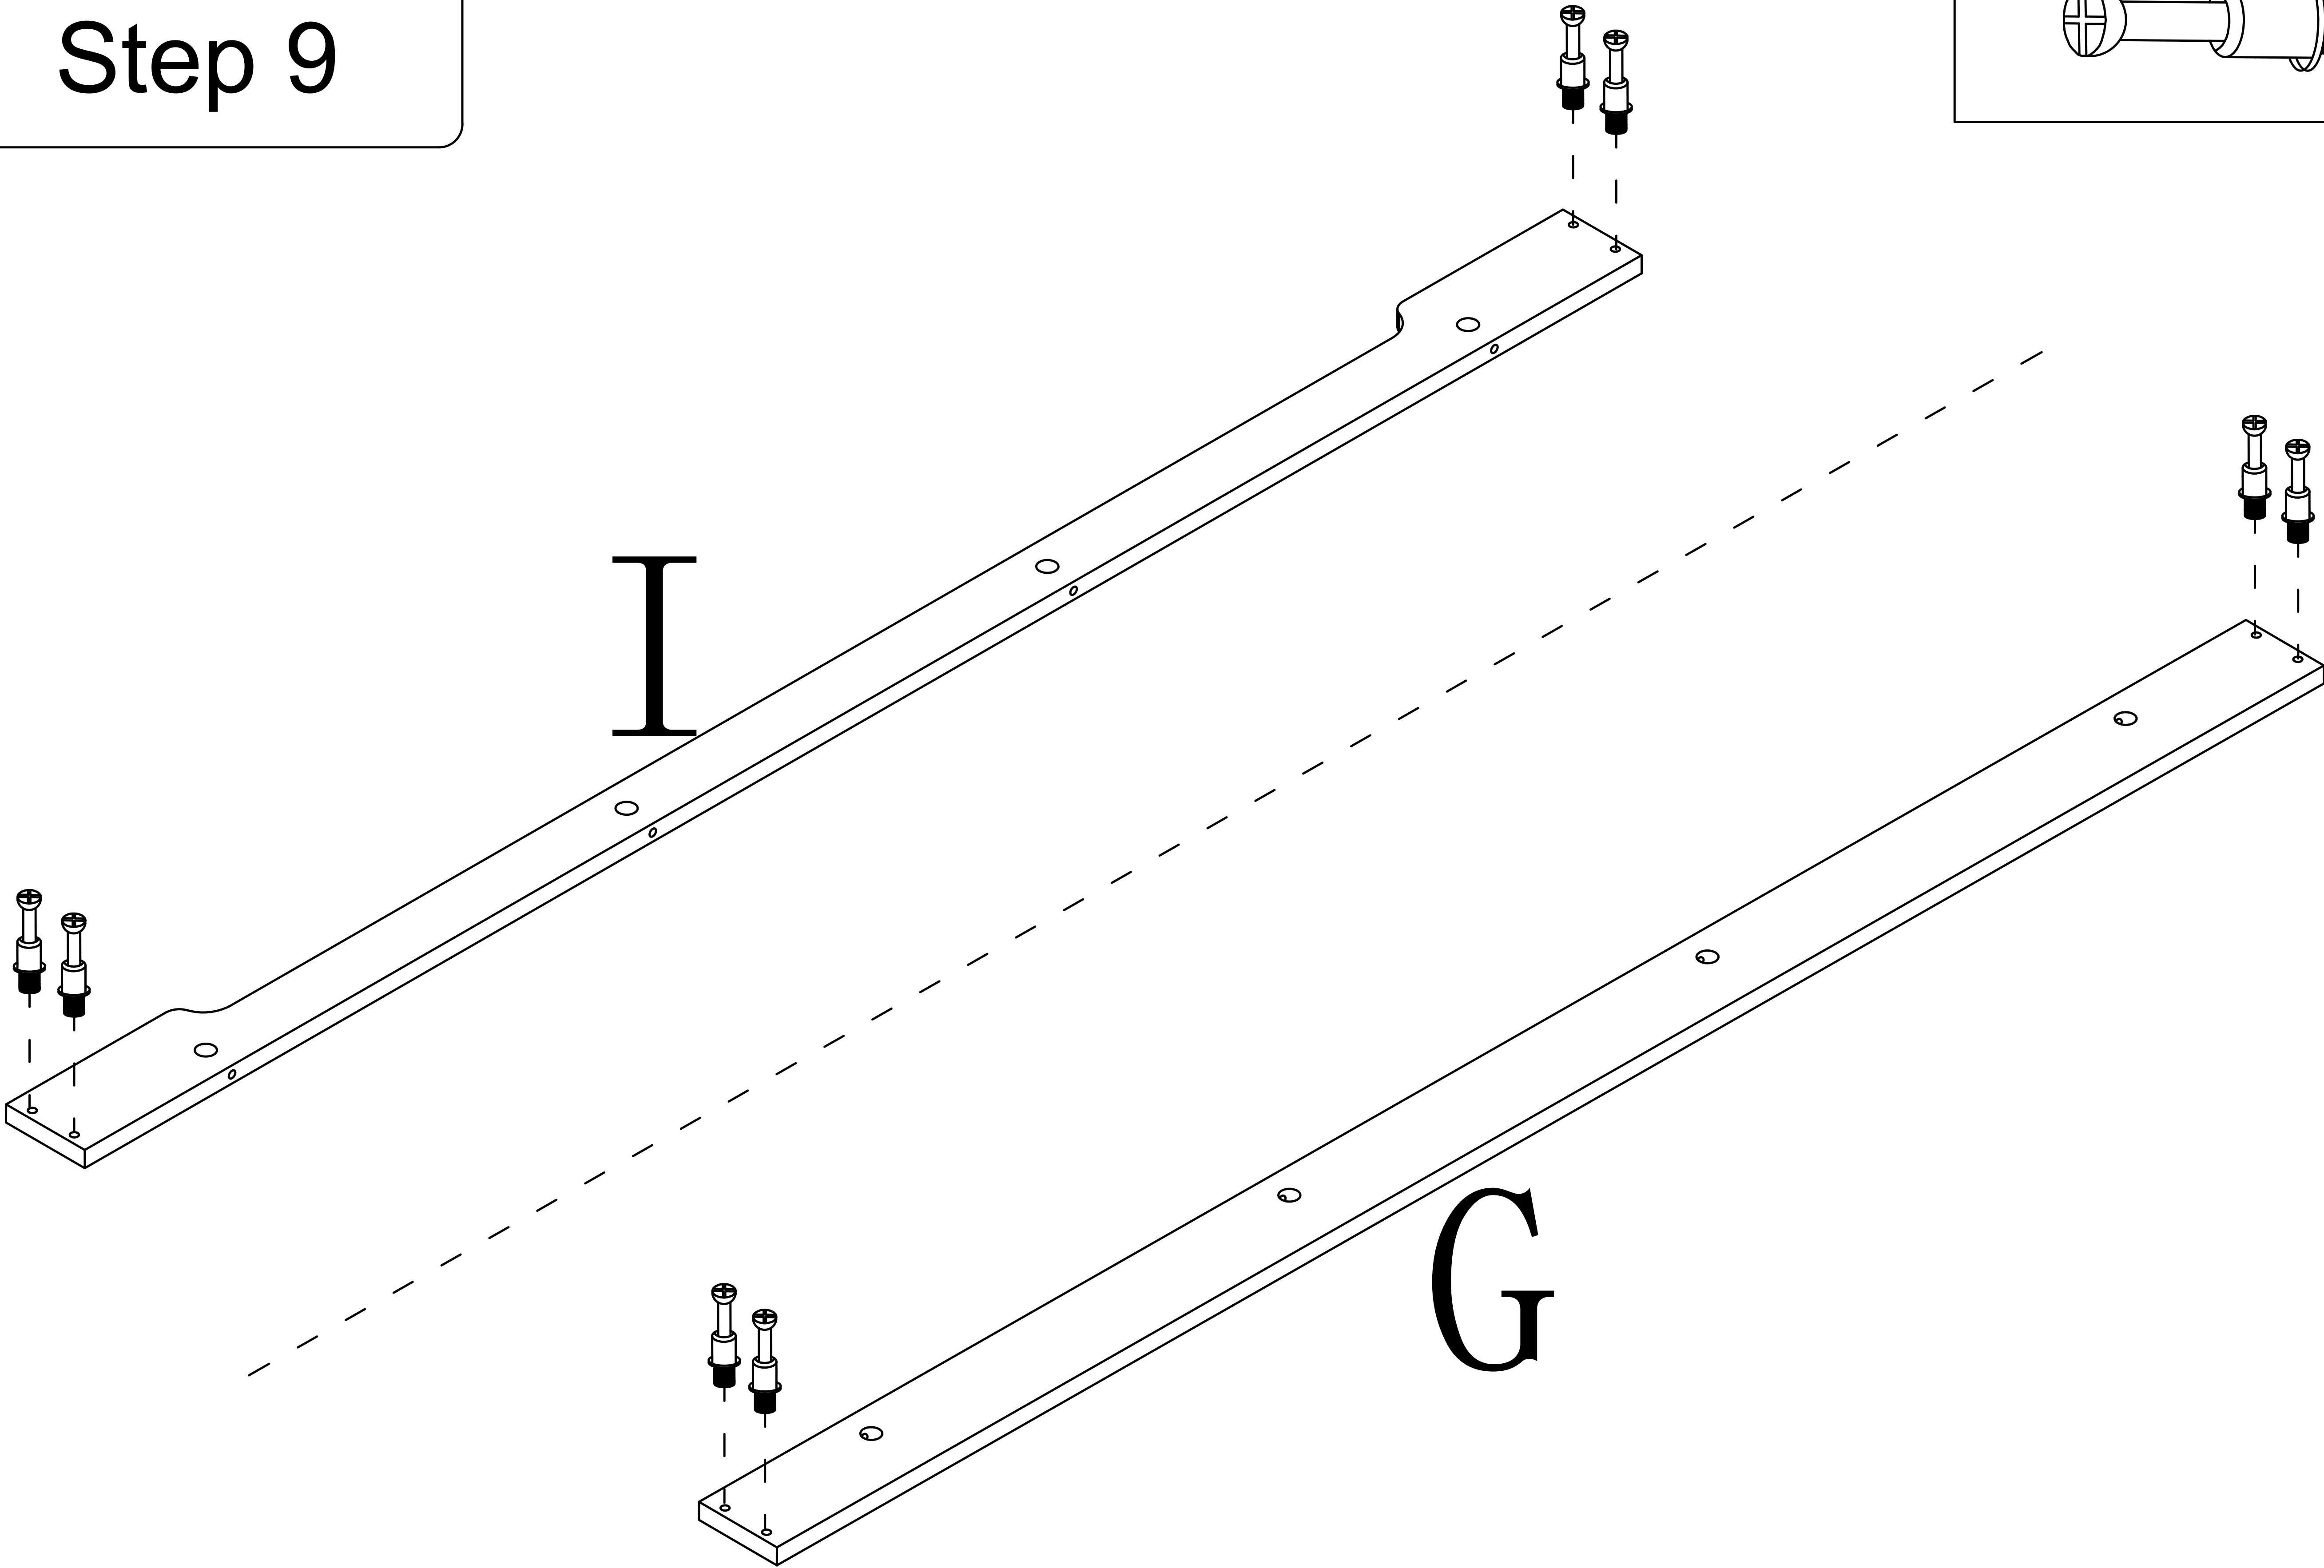


Step 10



2

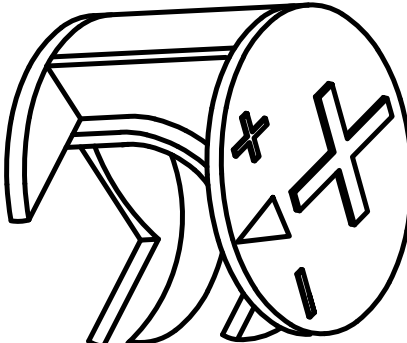



x8

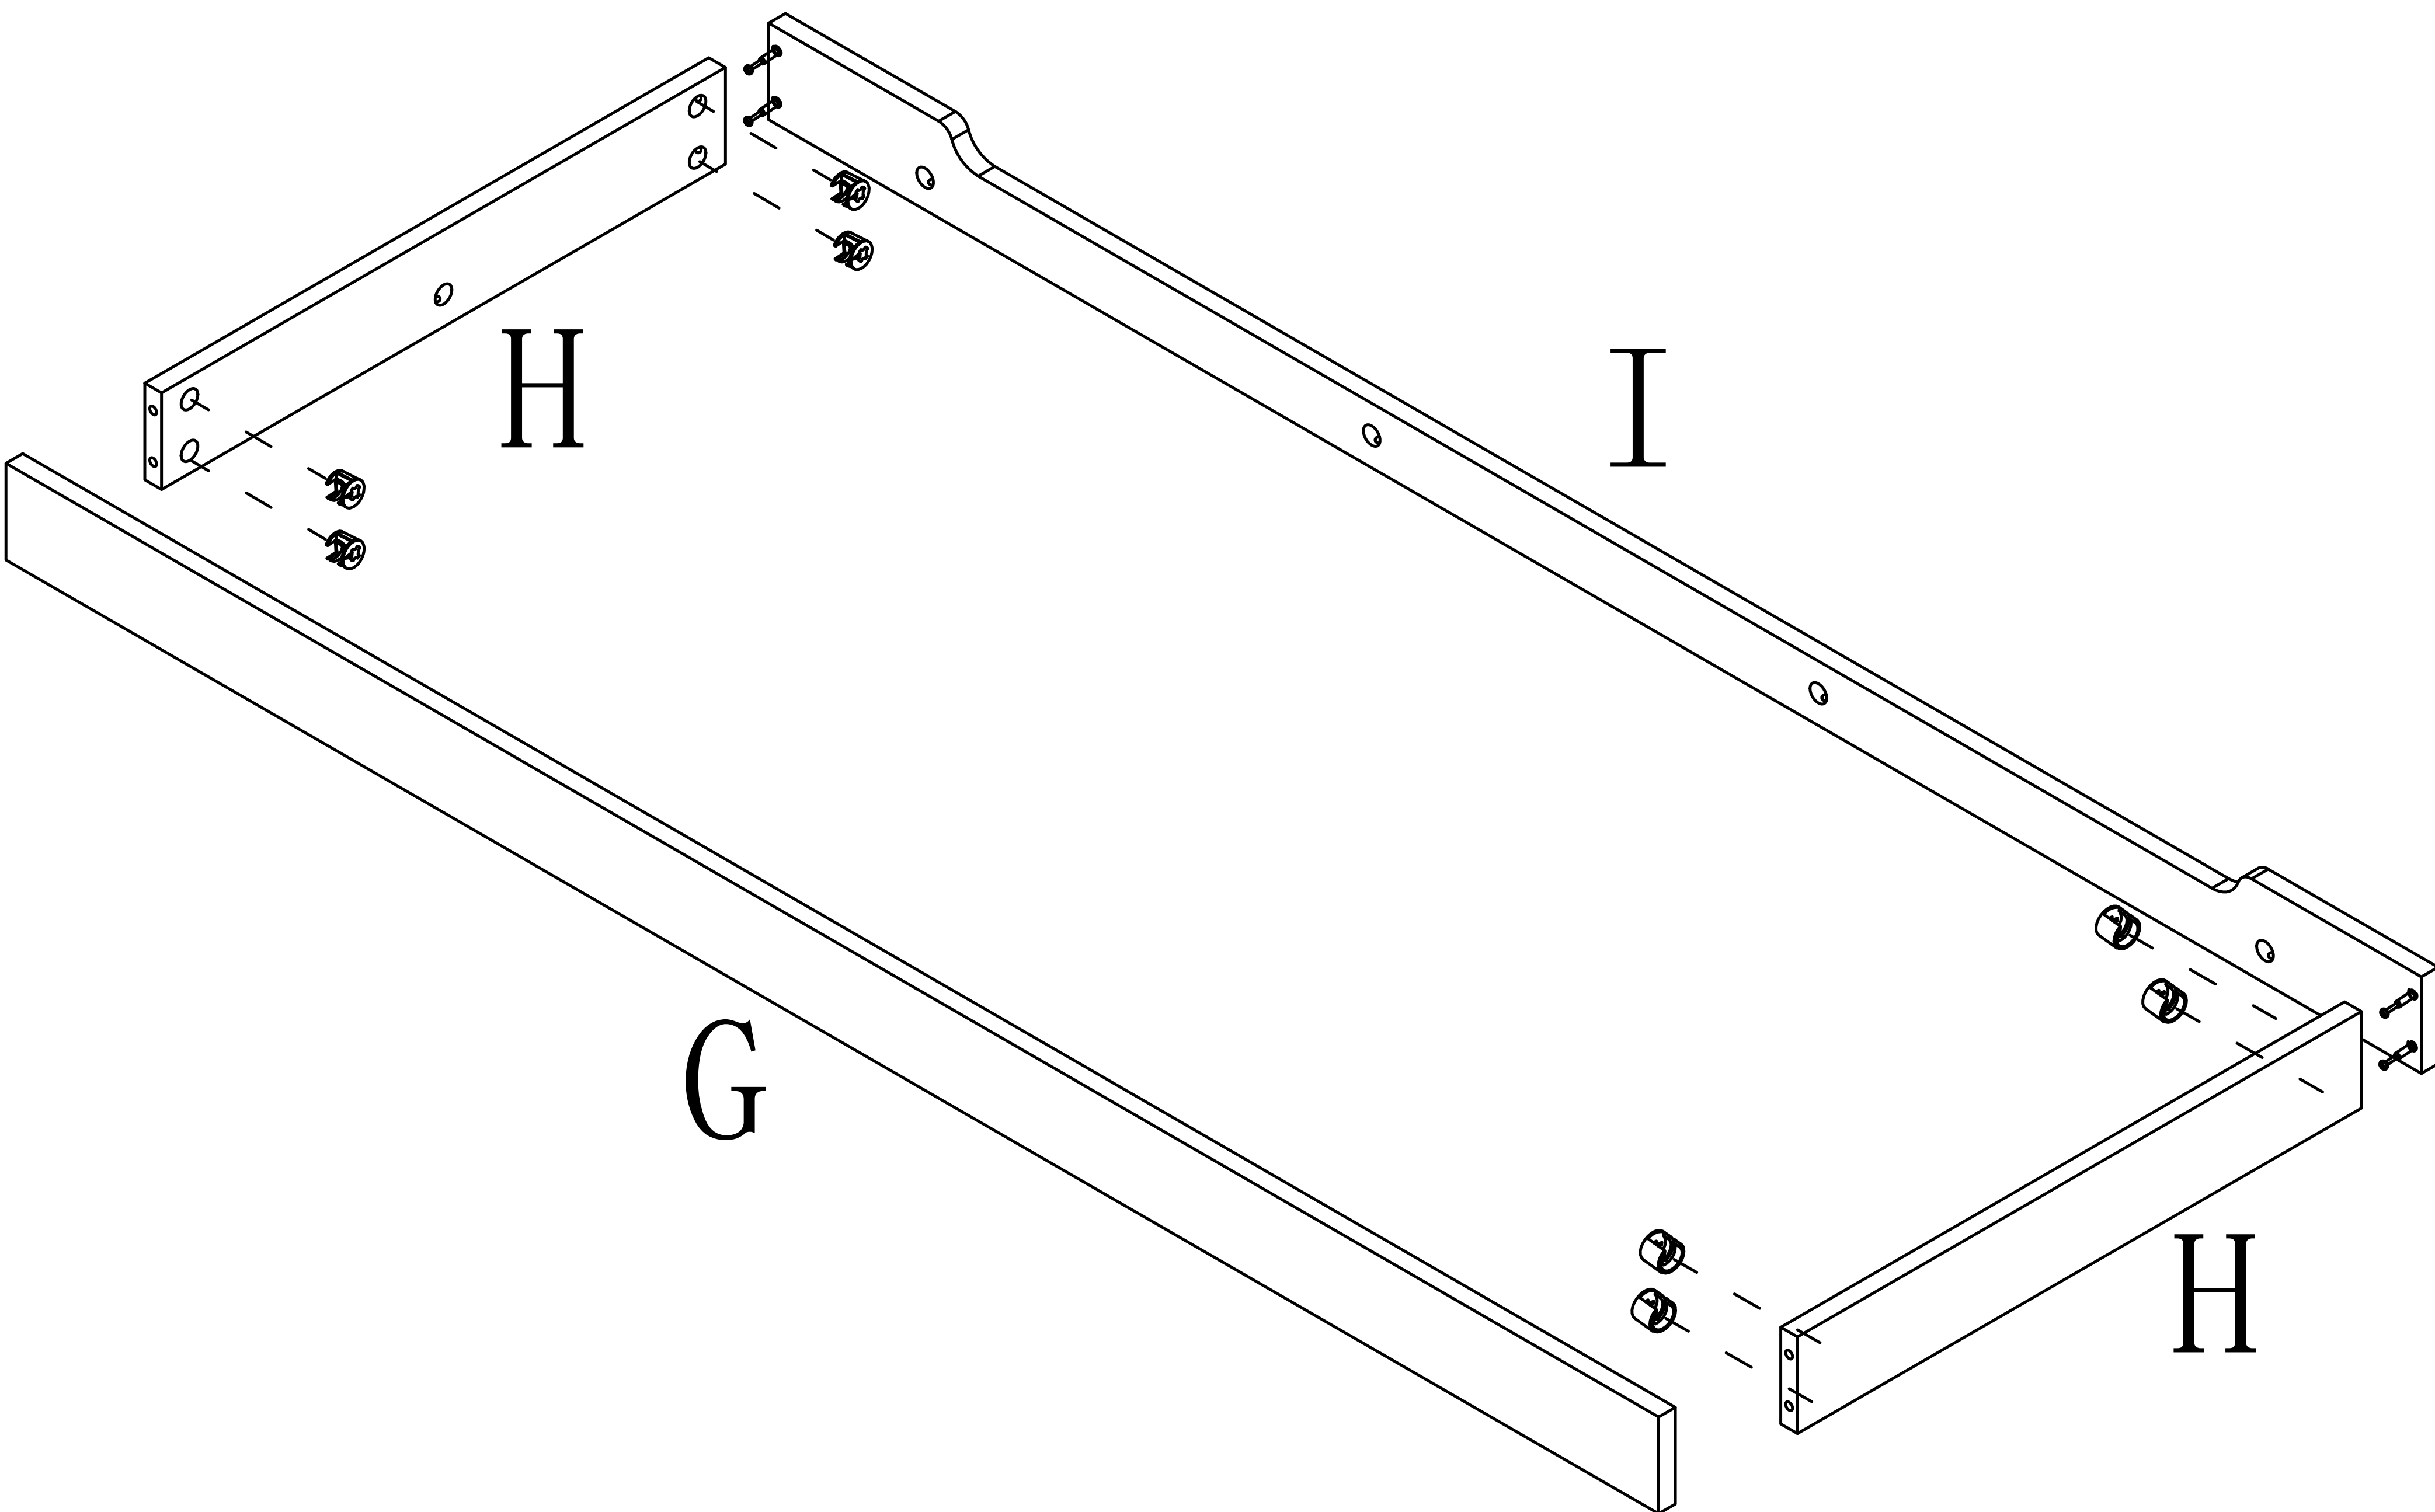

Step 11

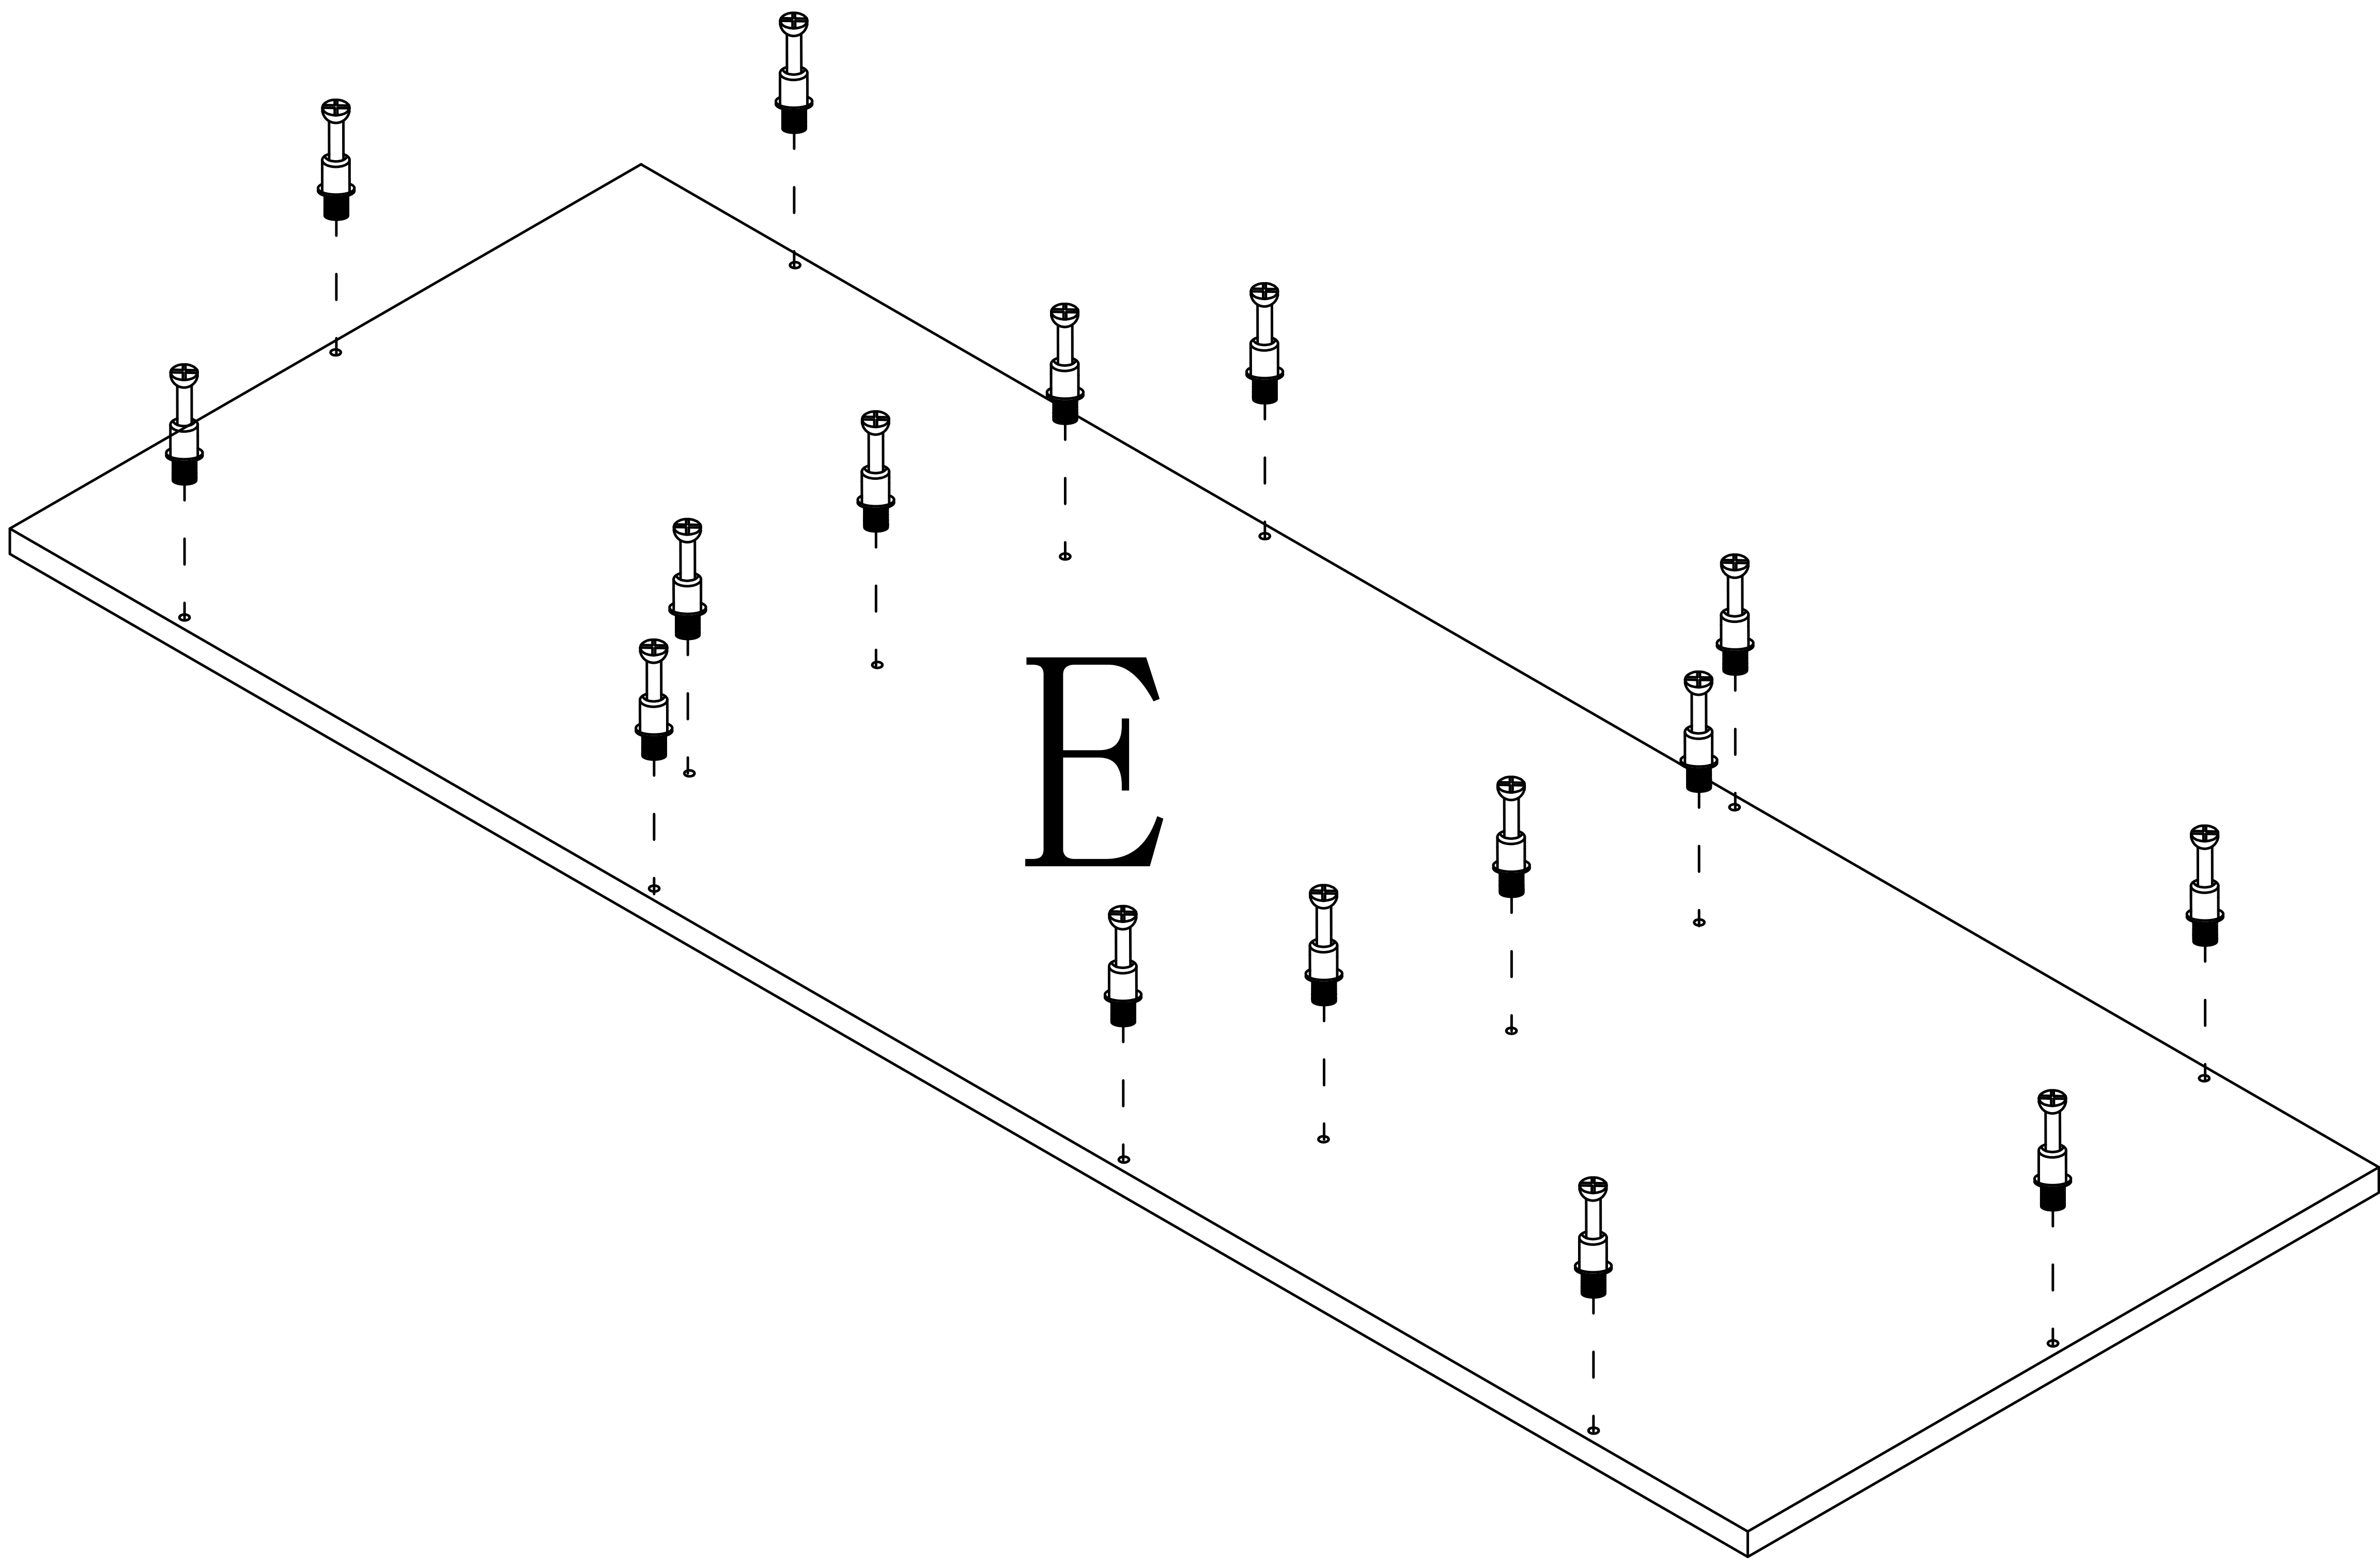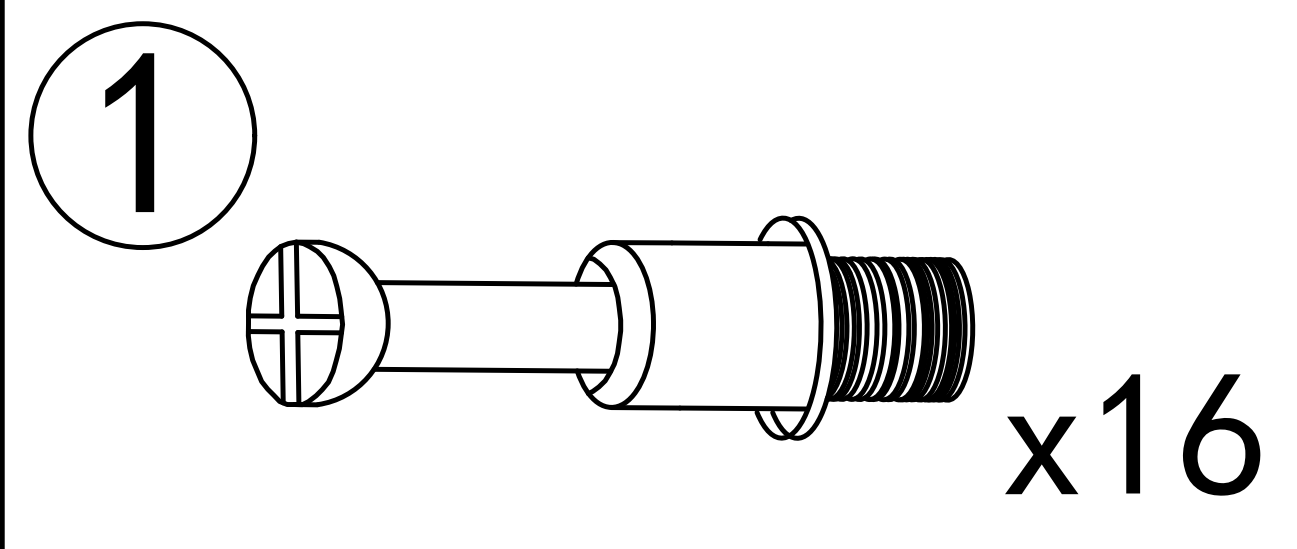


Step 12

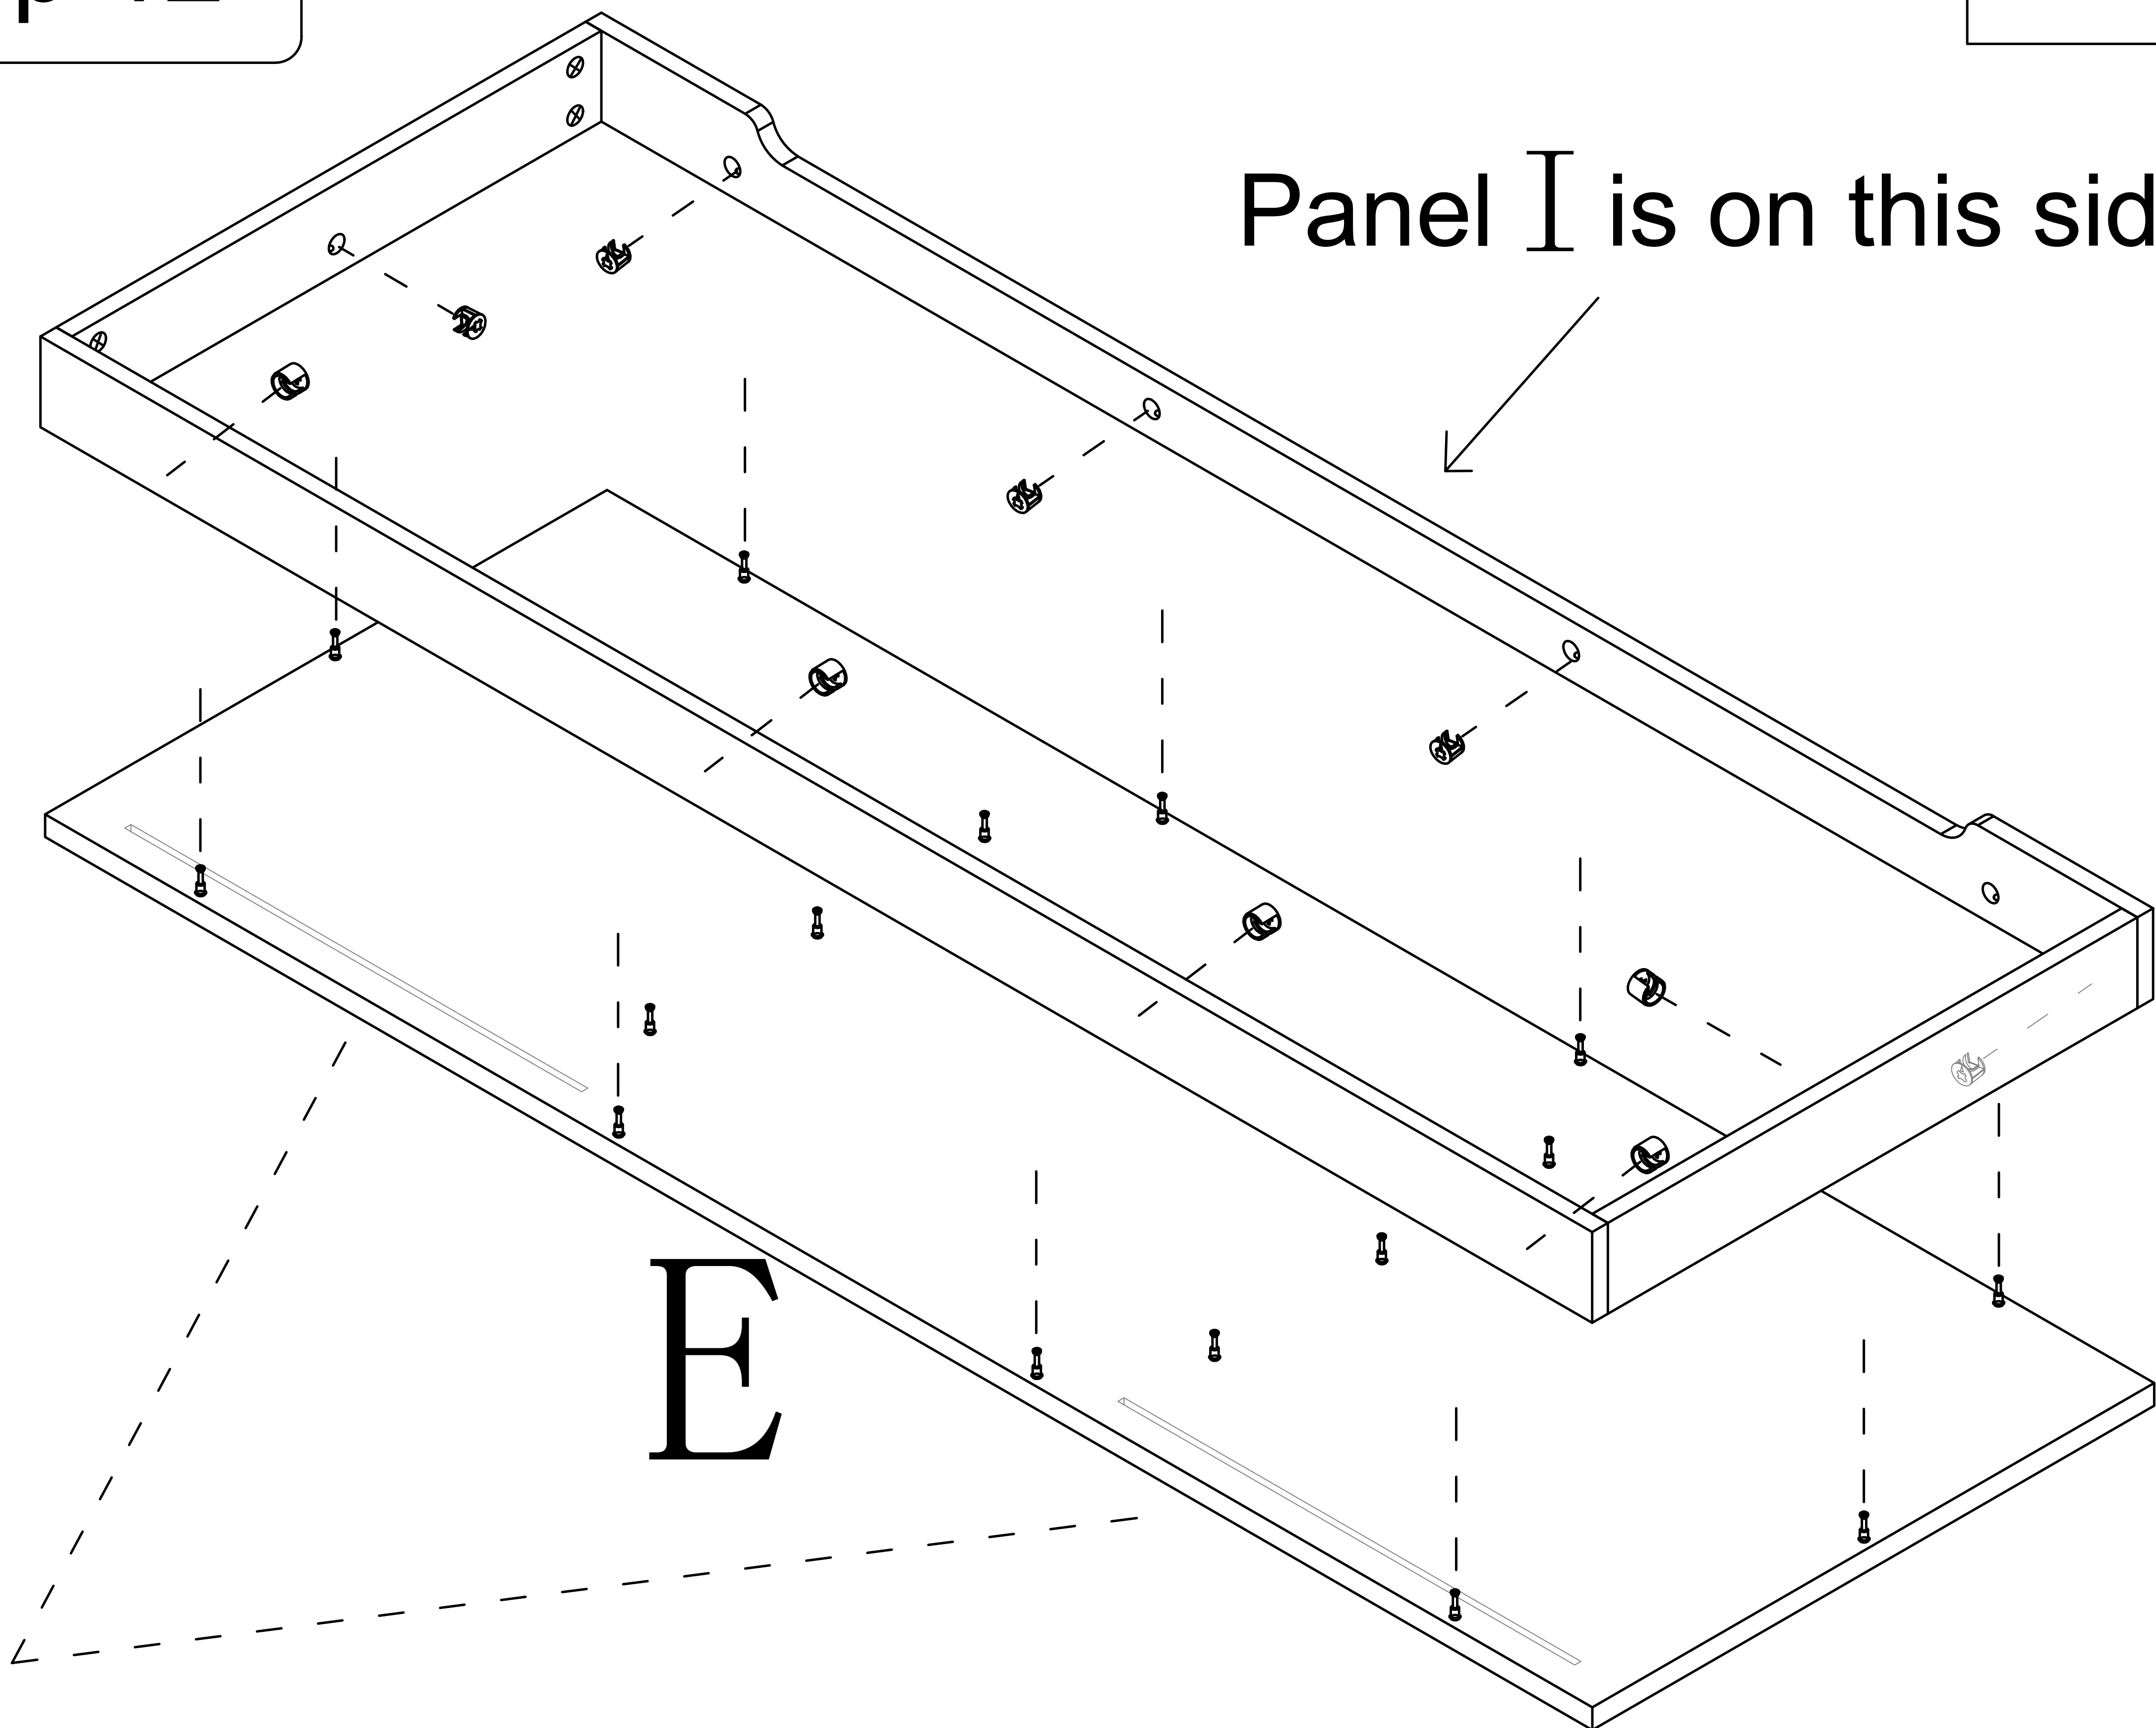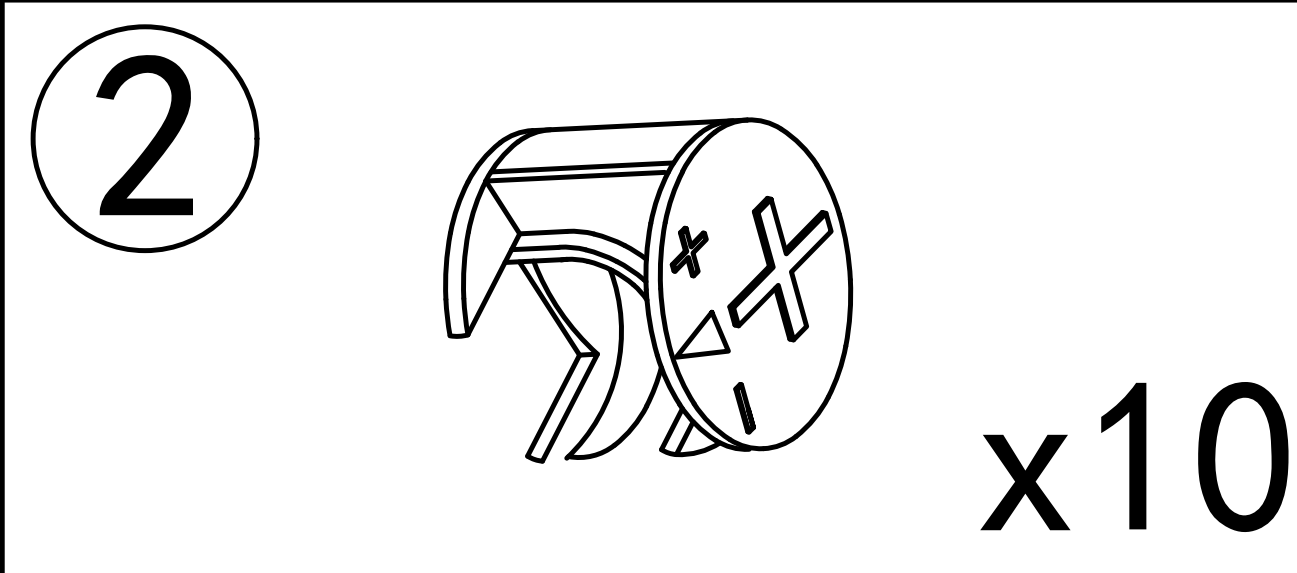


Please note that there is a groove on the back.

Step 13

2

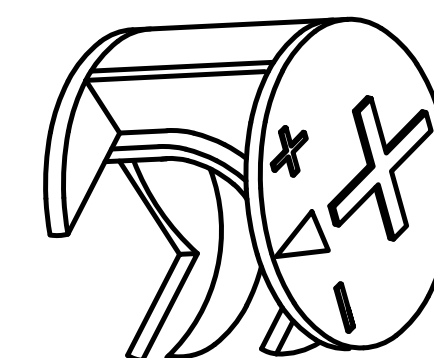


x6

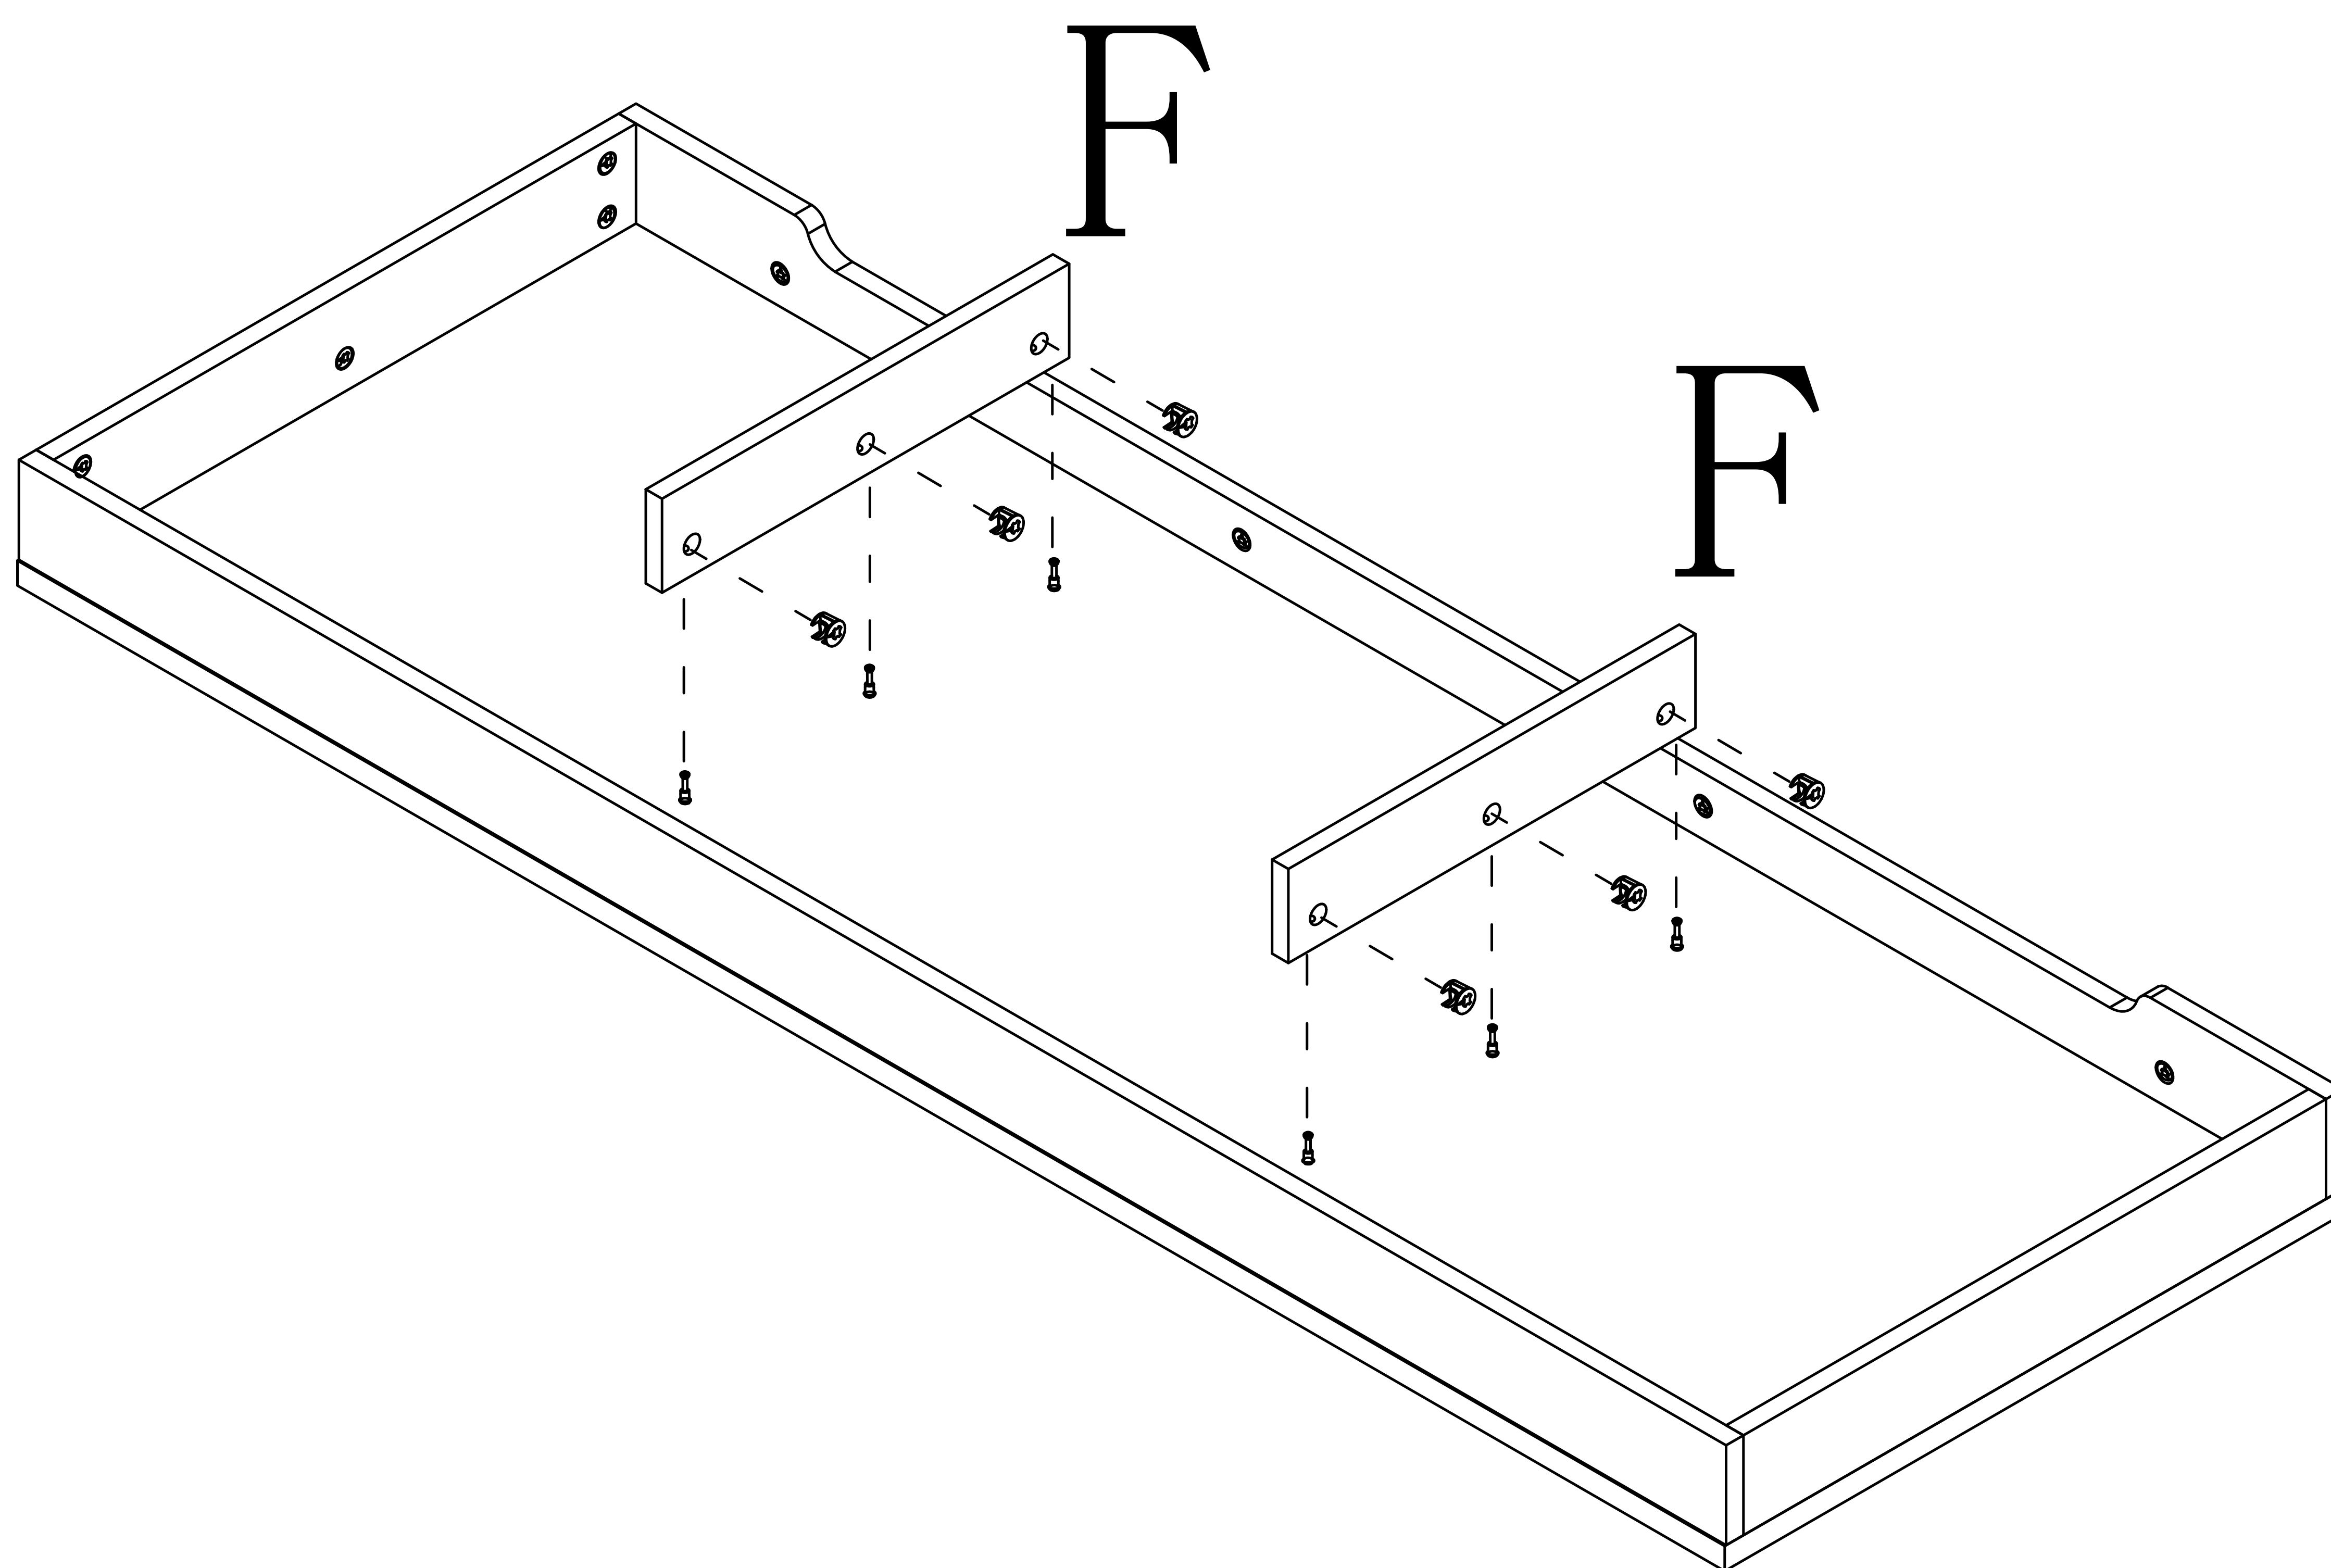


Step 14

6

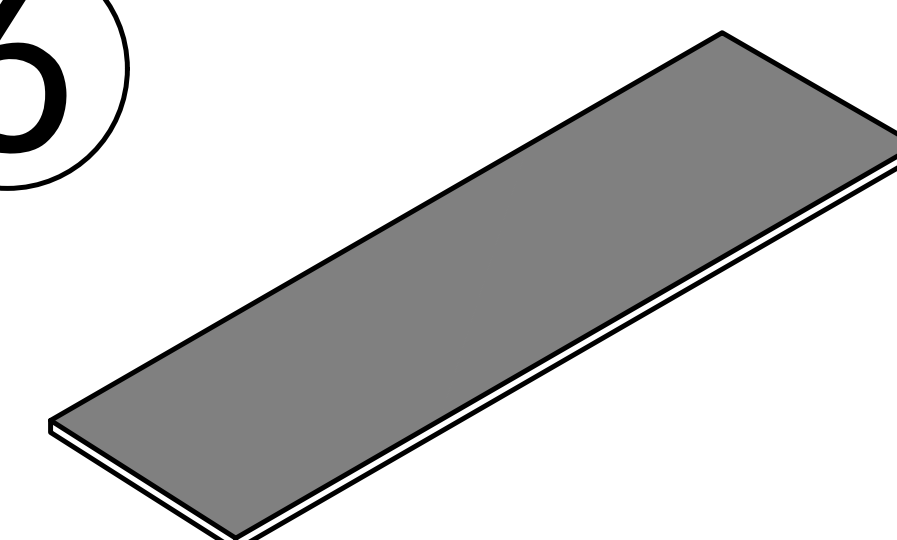



x8

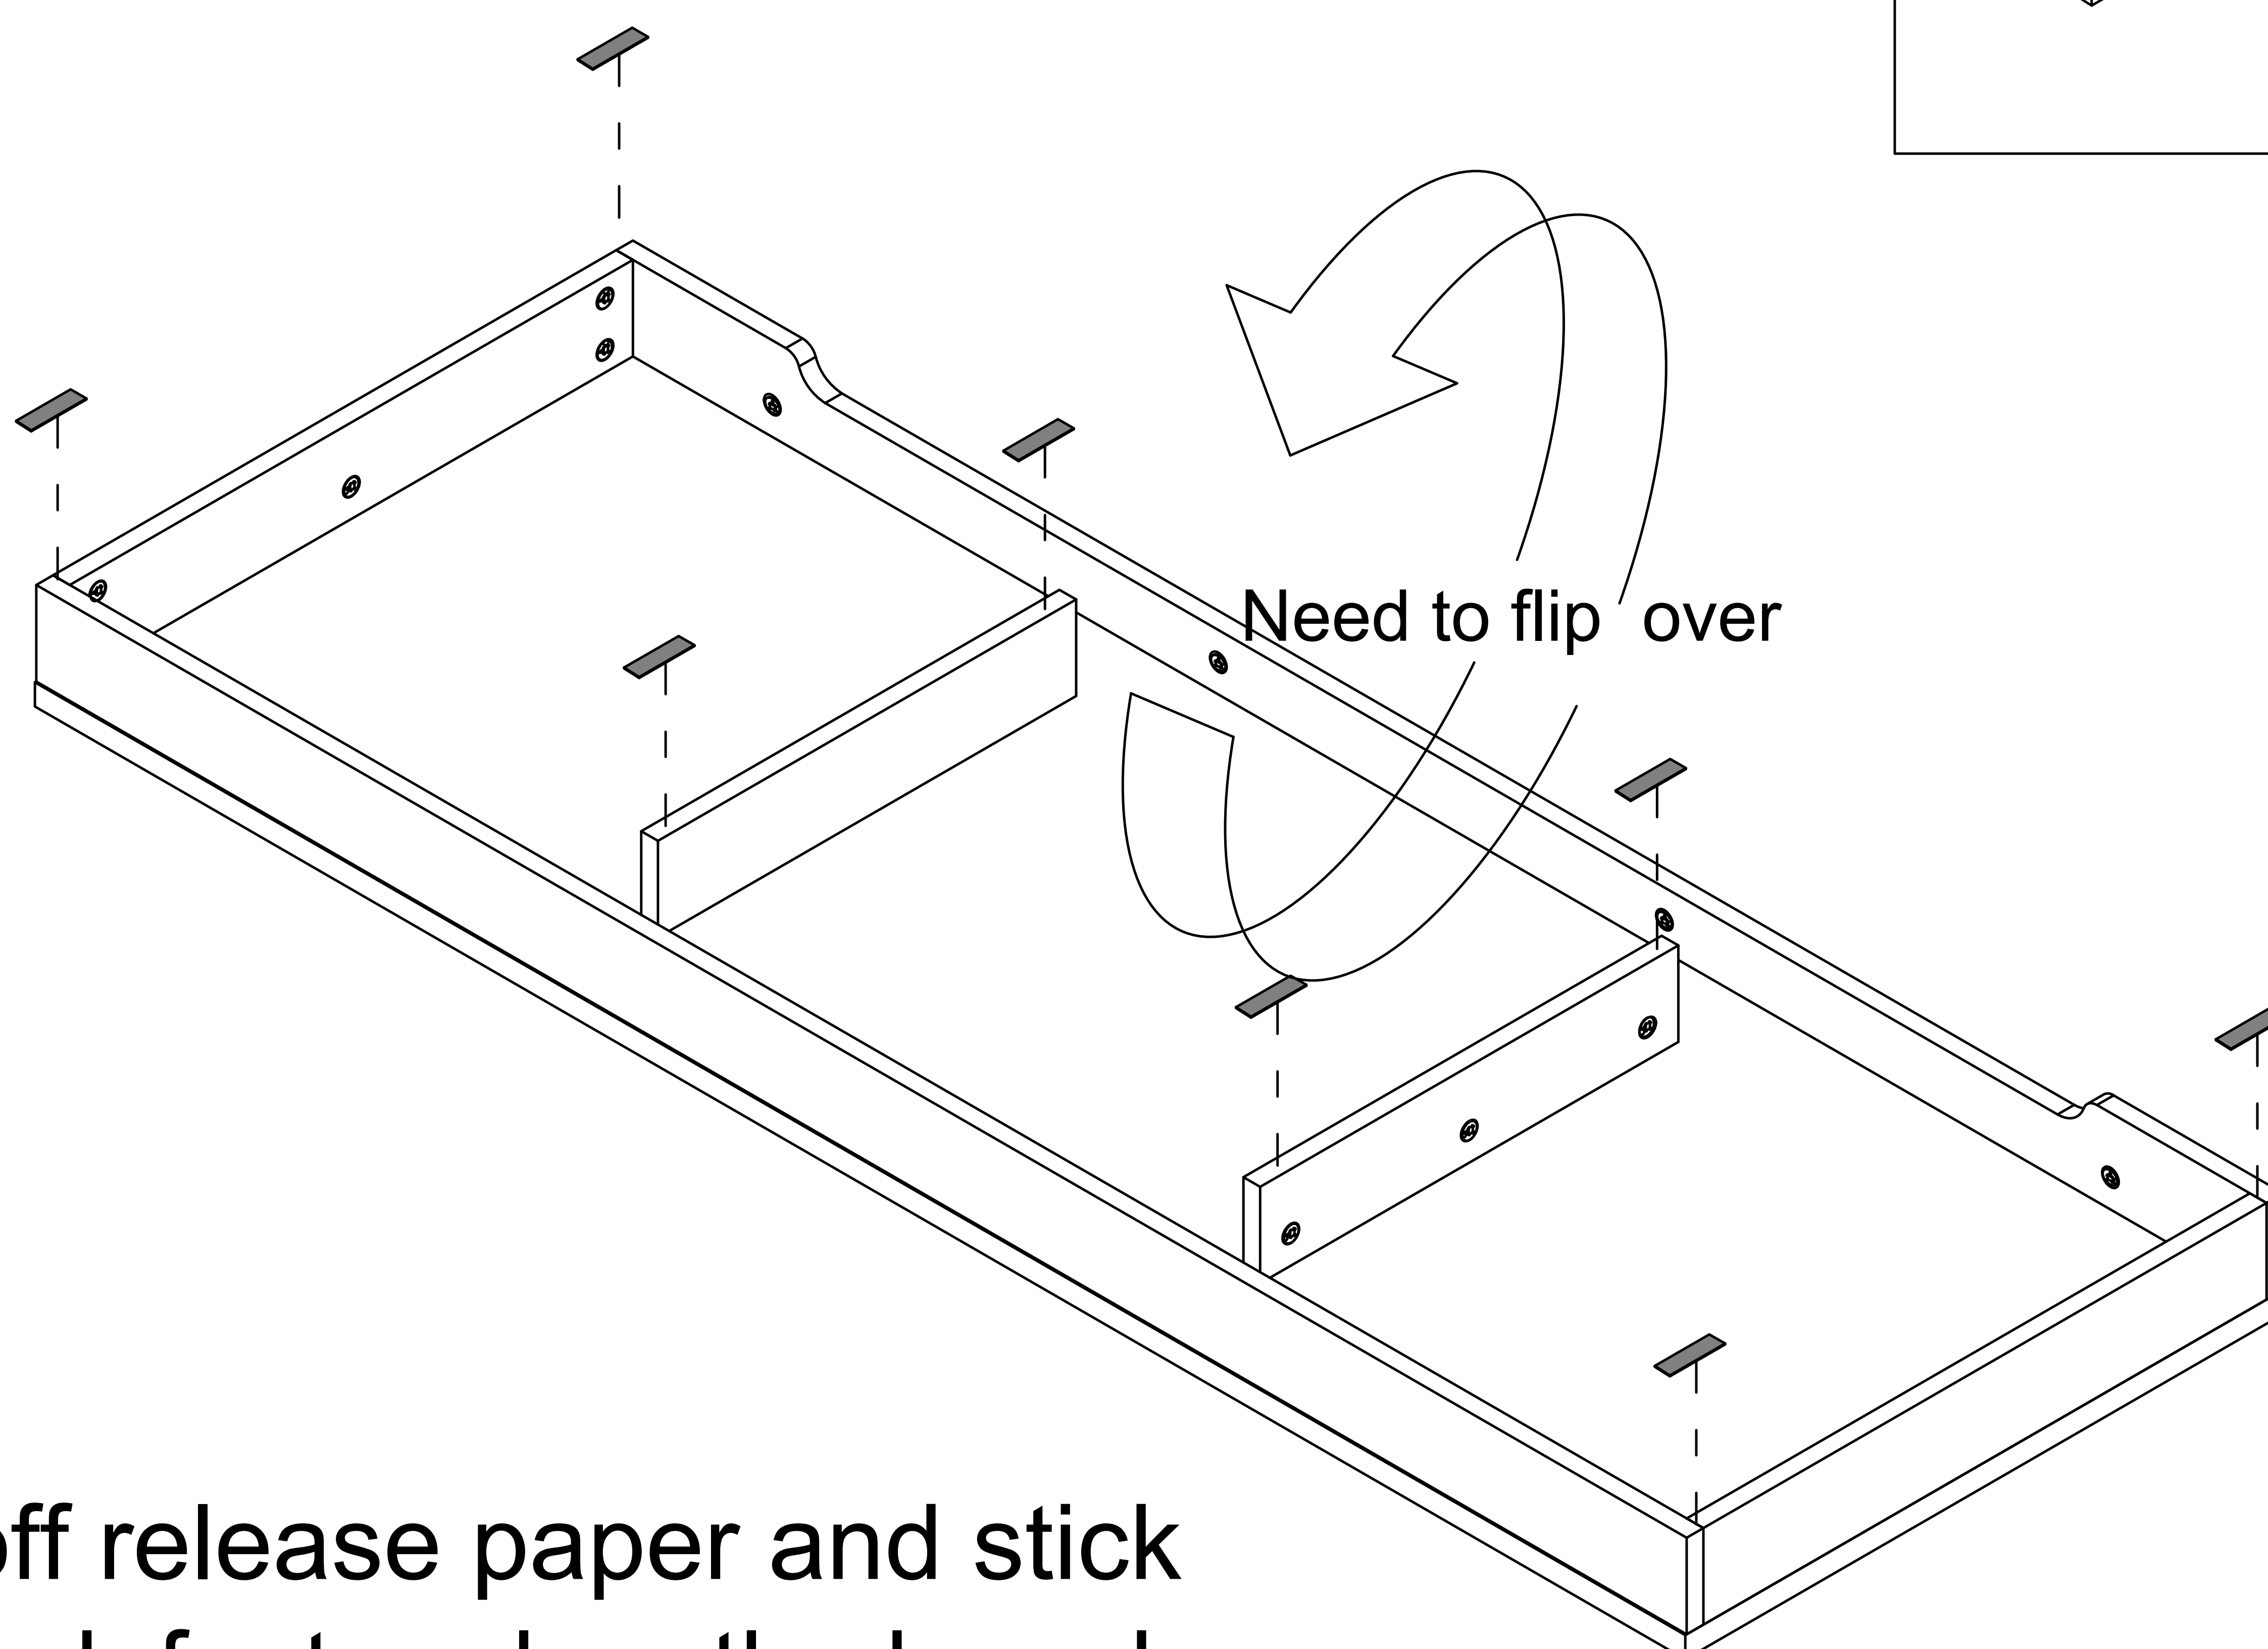



Tear off release paper and stick the black foot pad on the board

13






Step 15

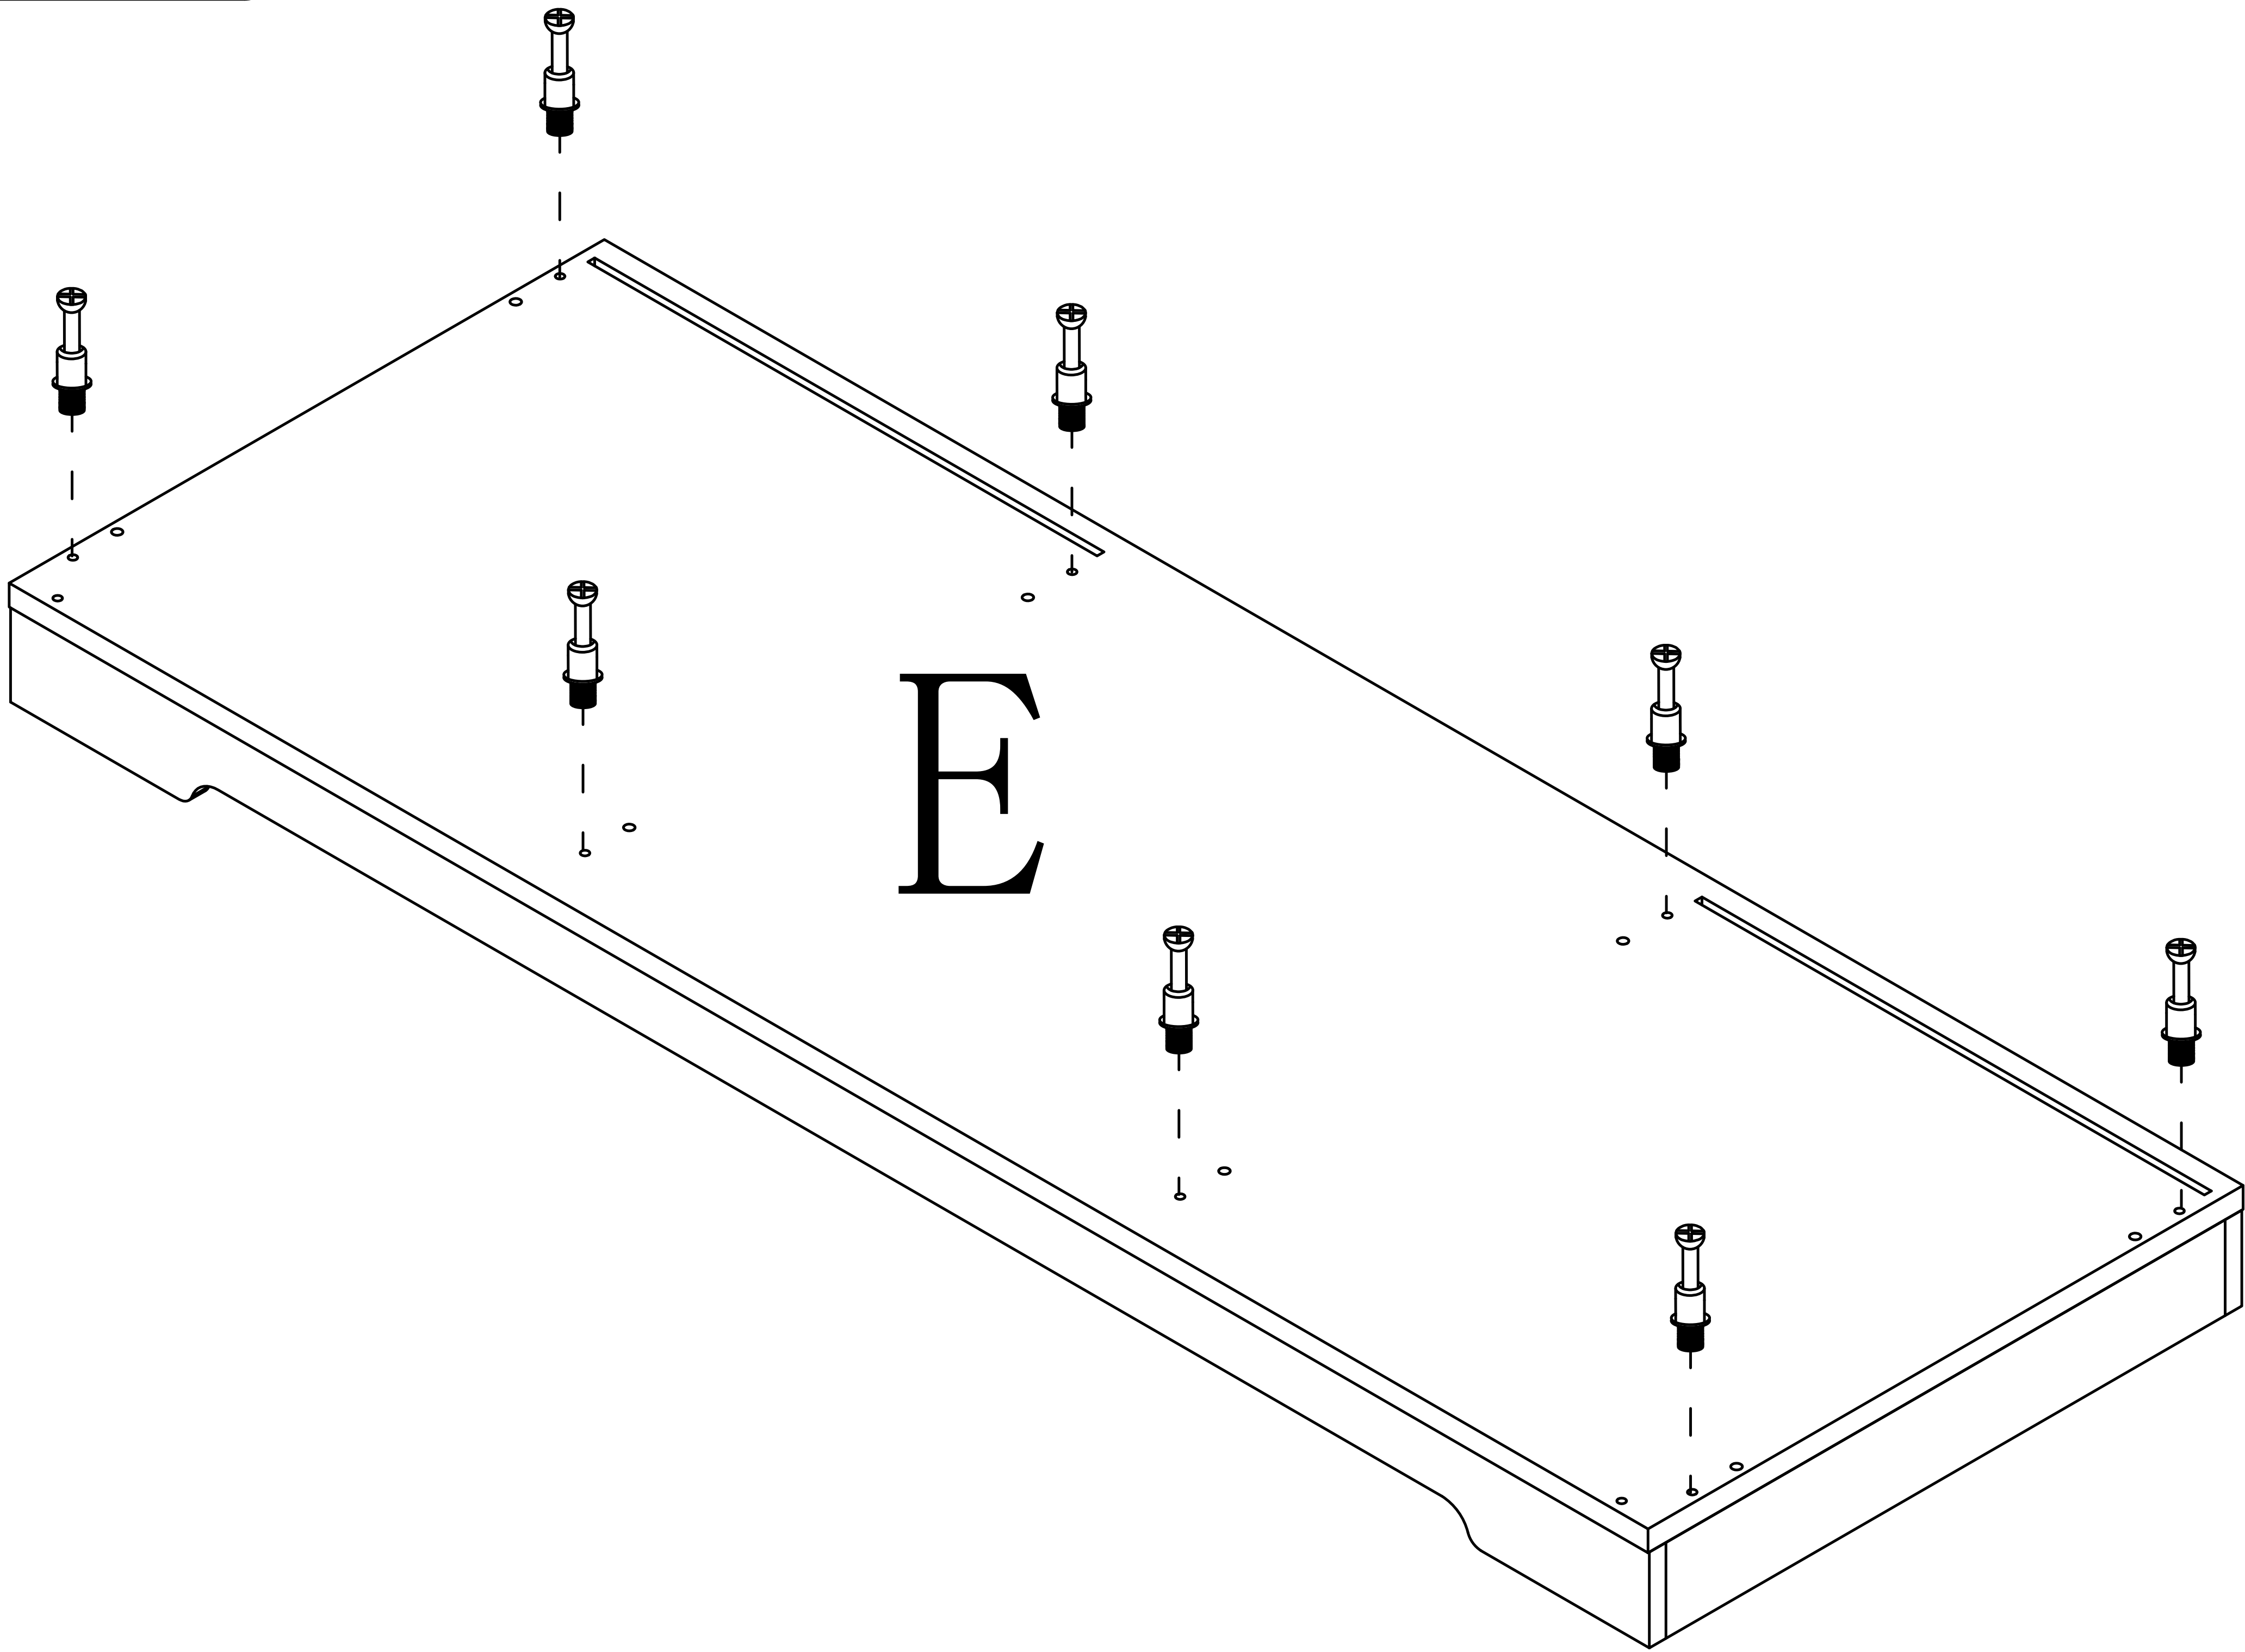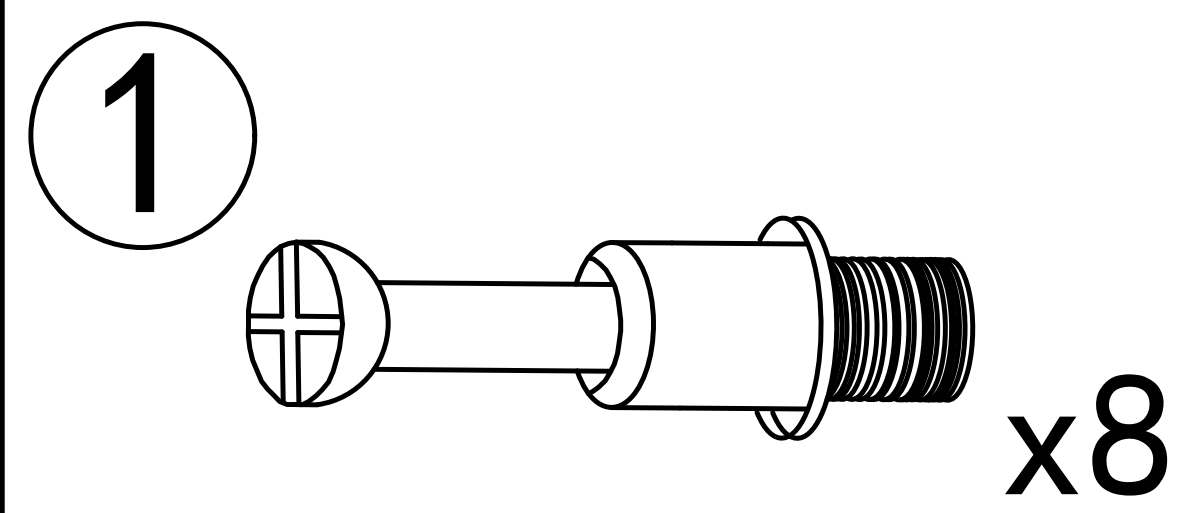





Step 16

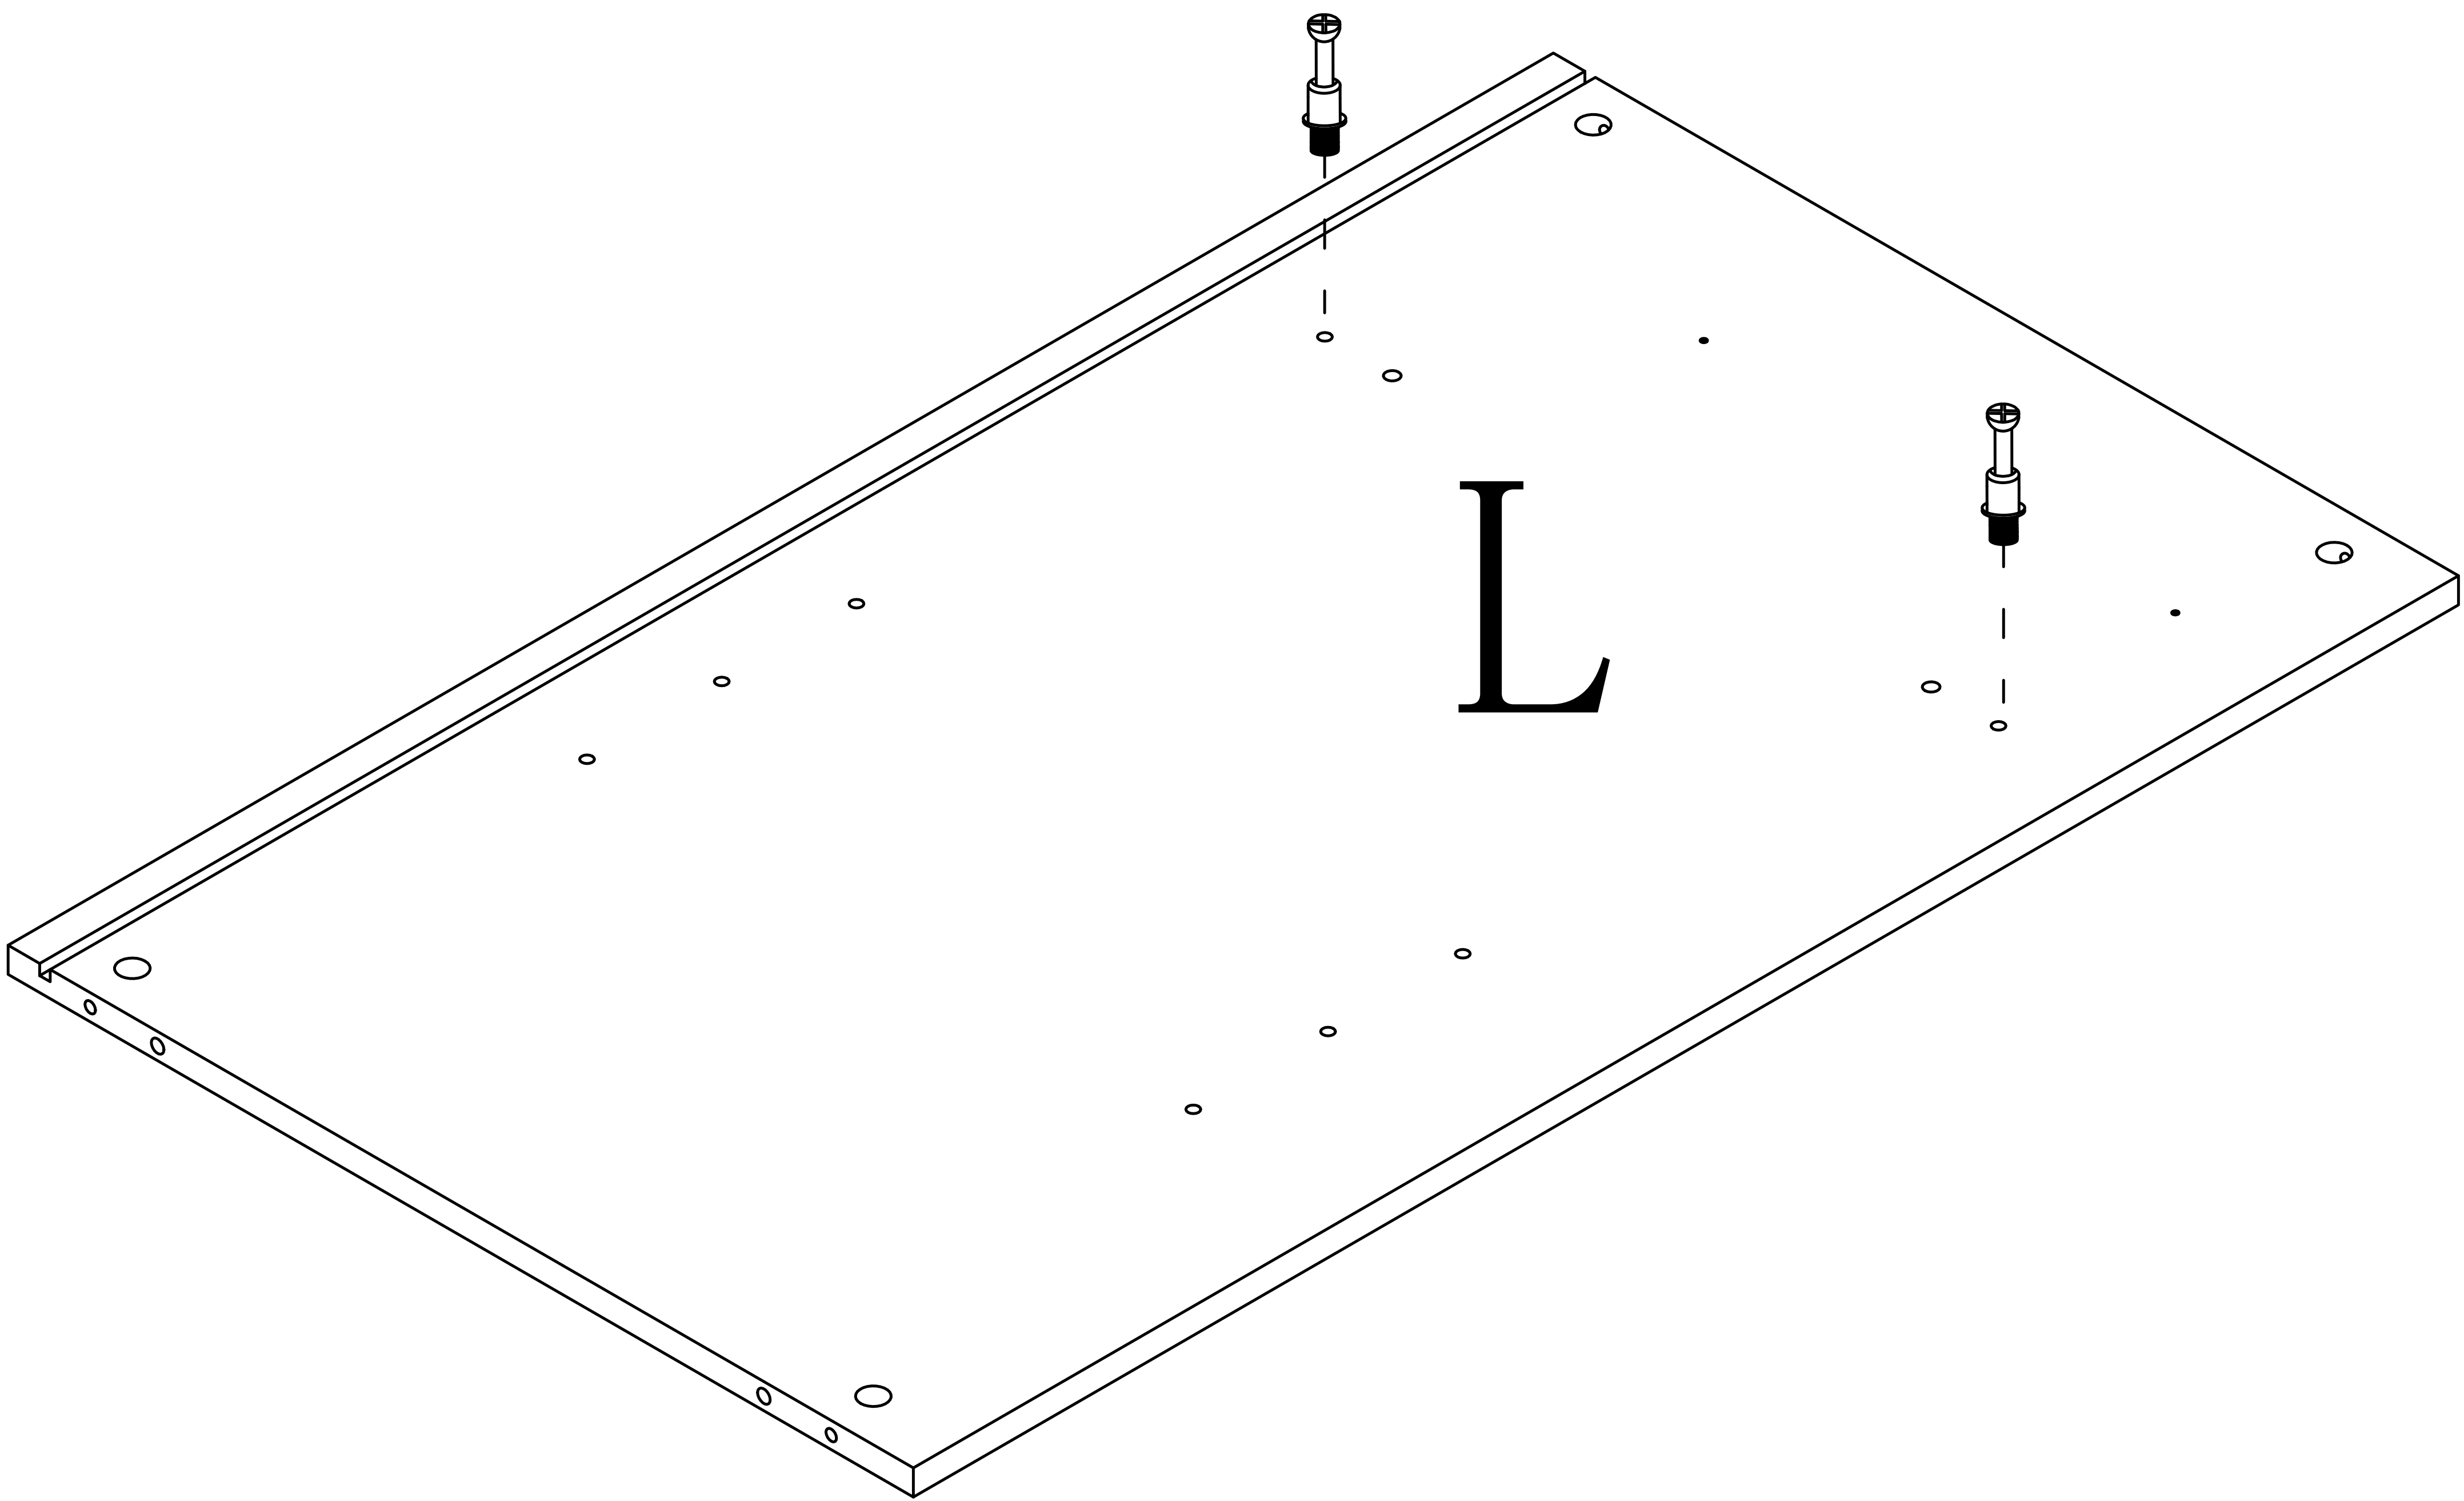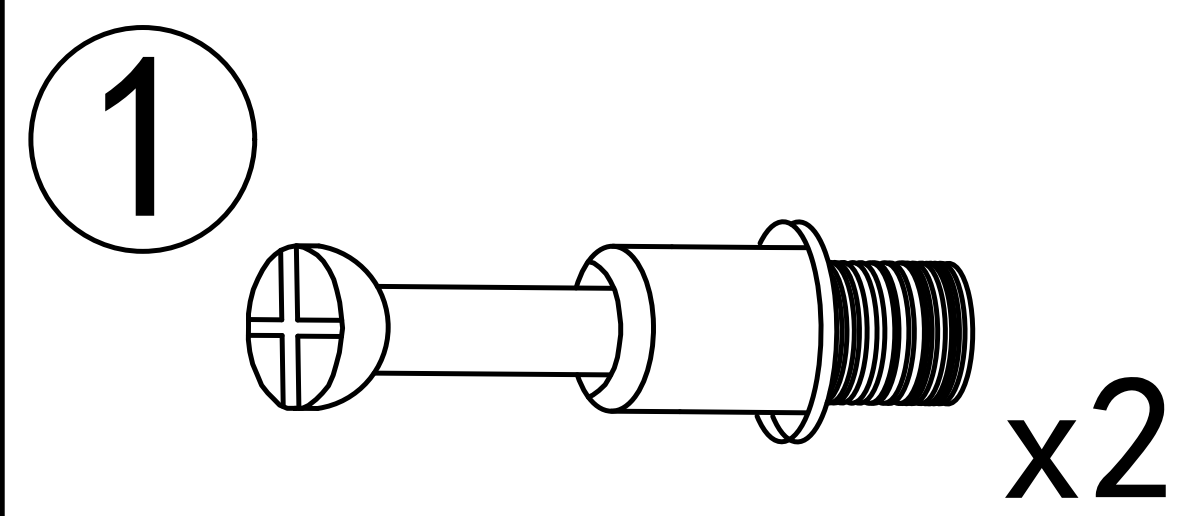


Step 17

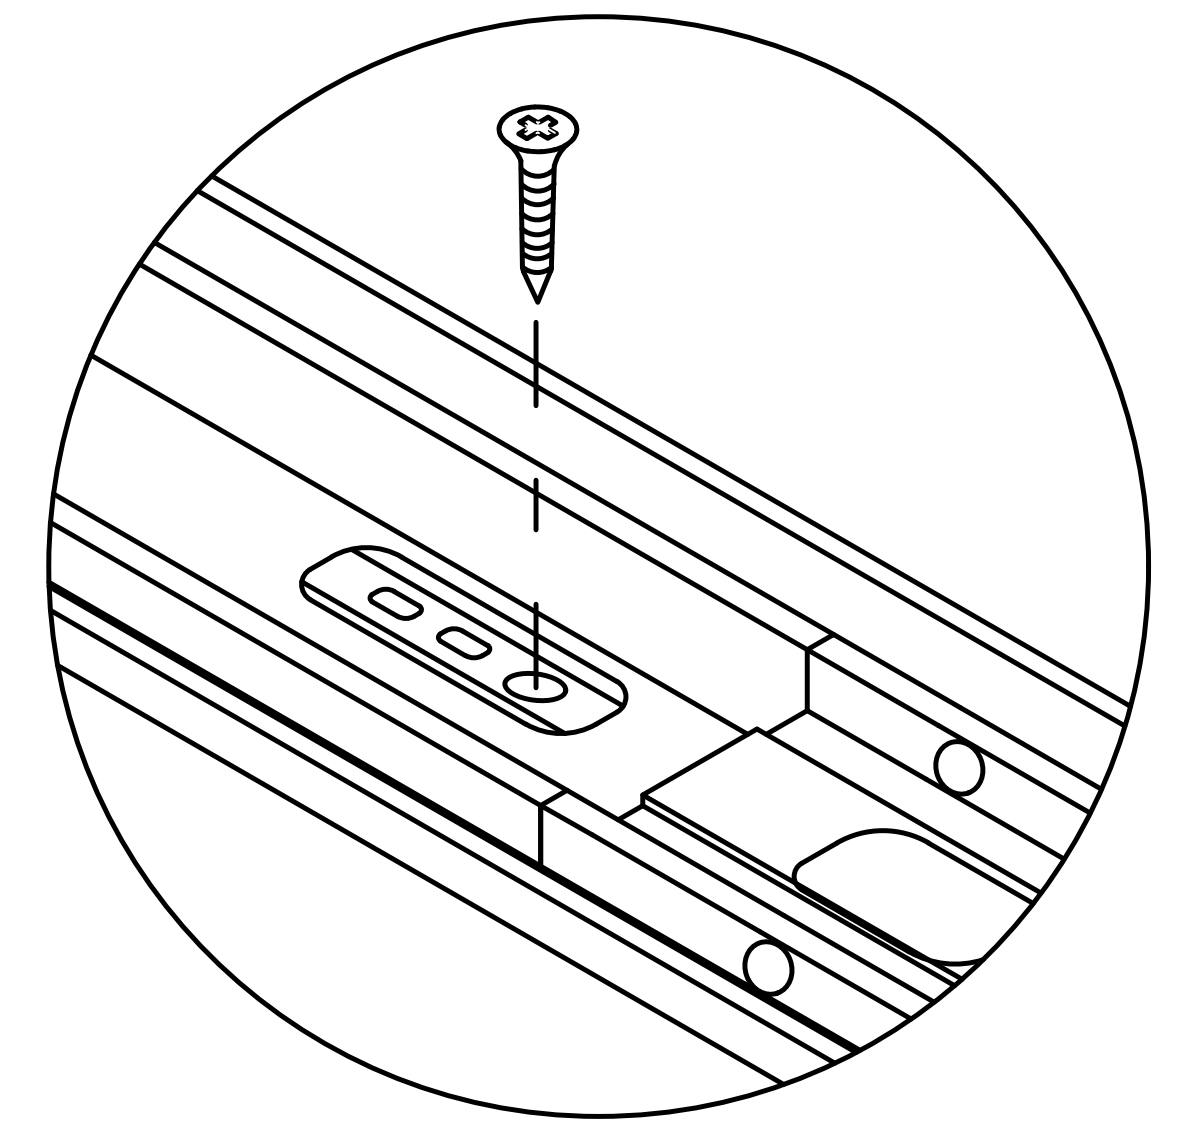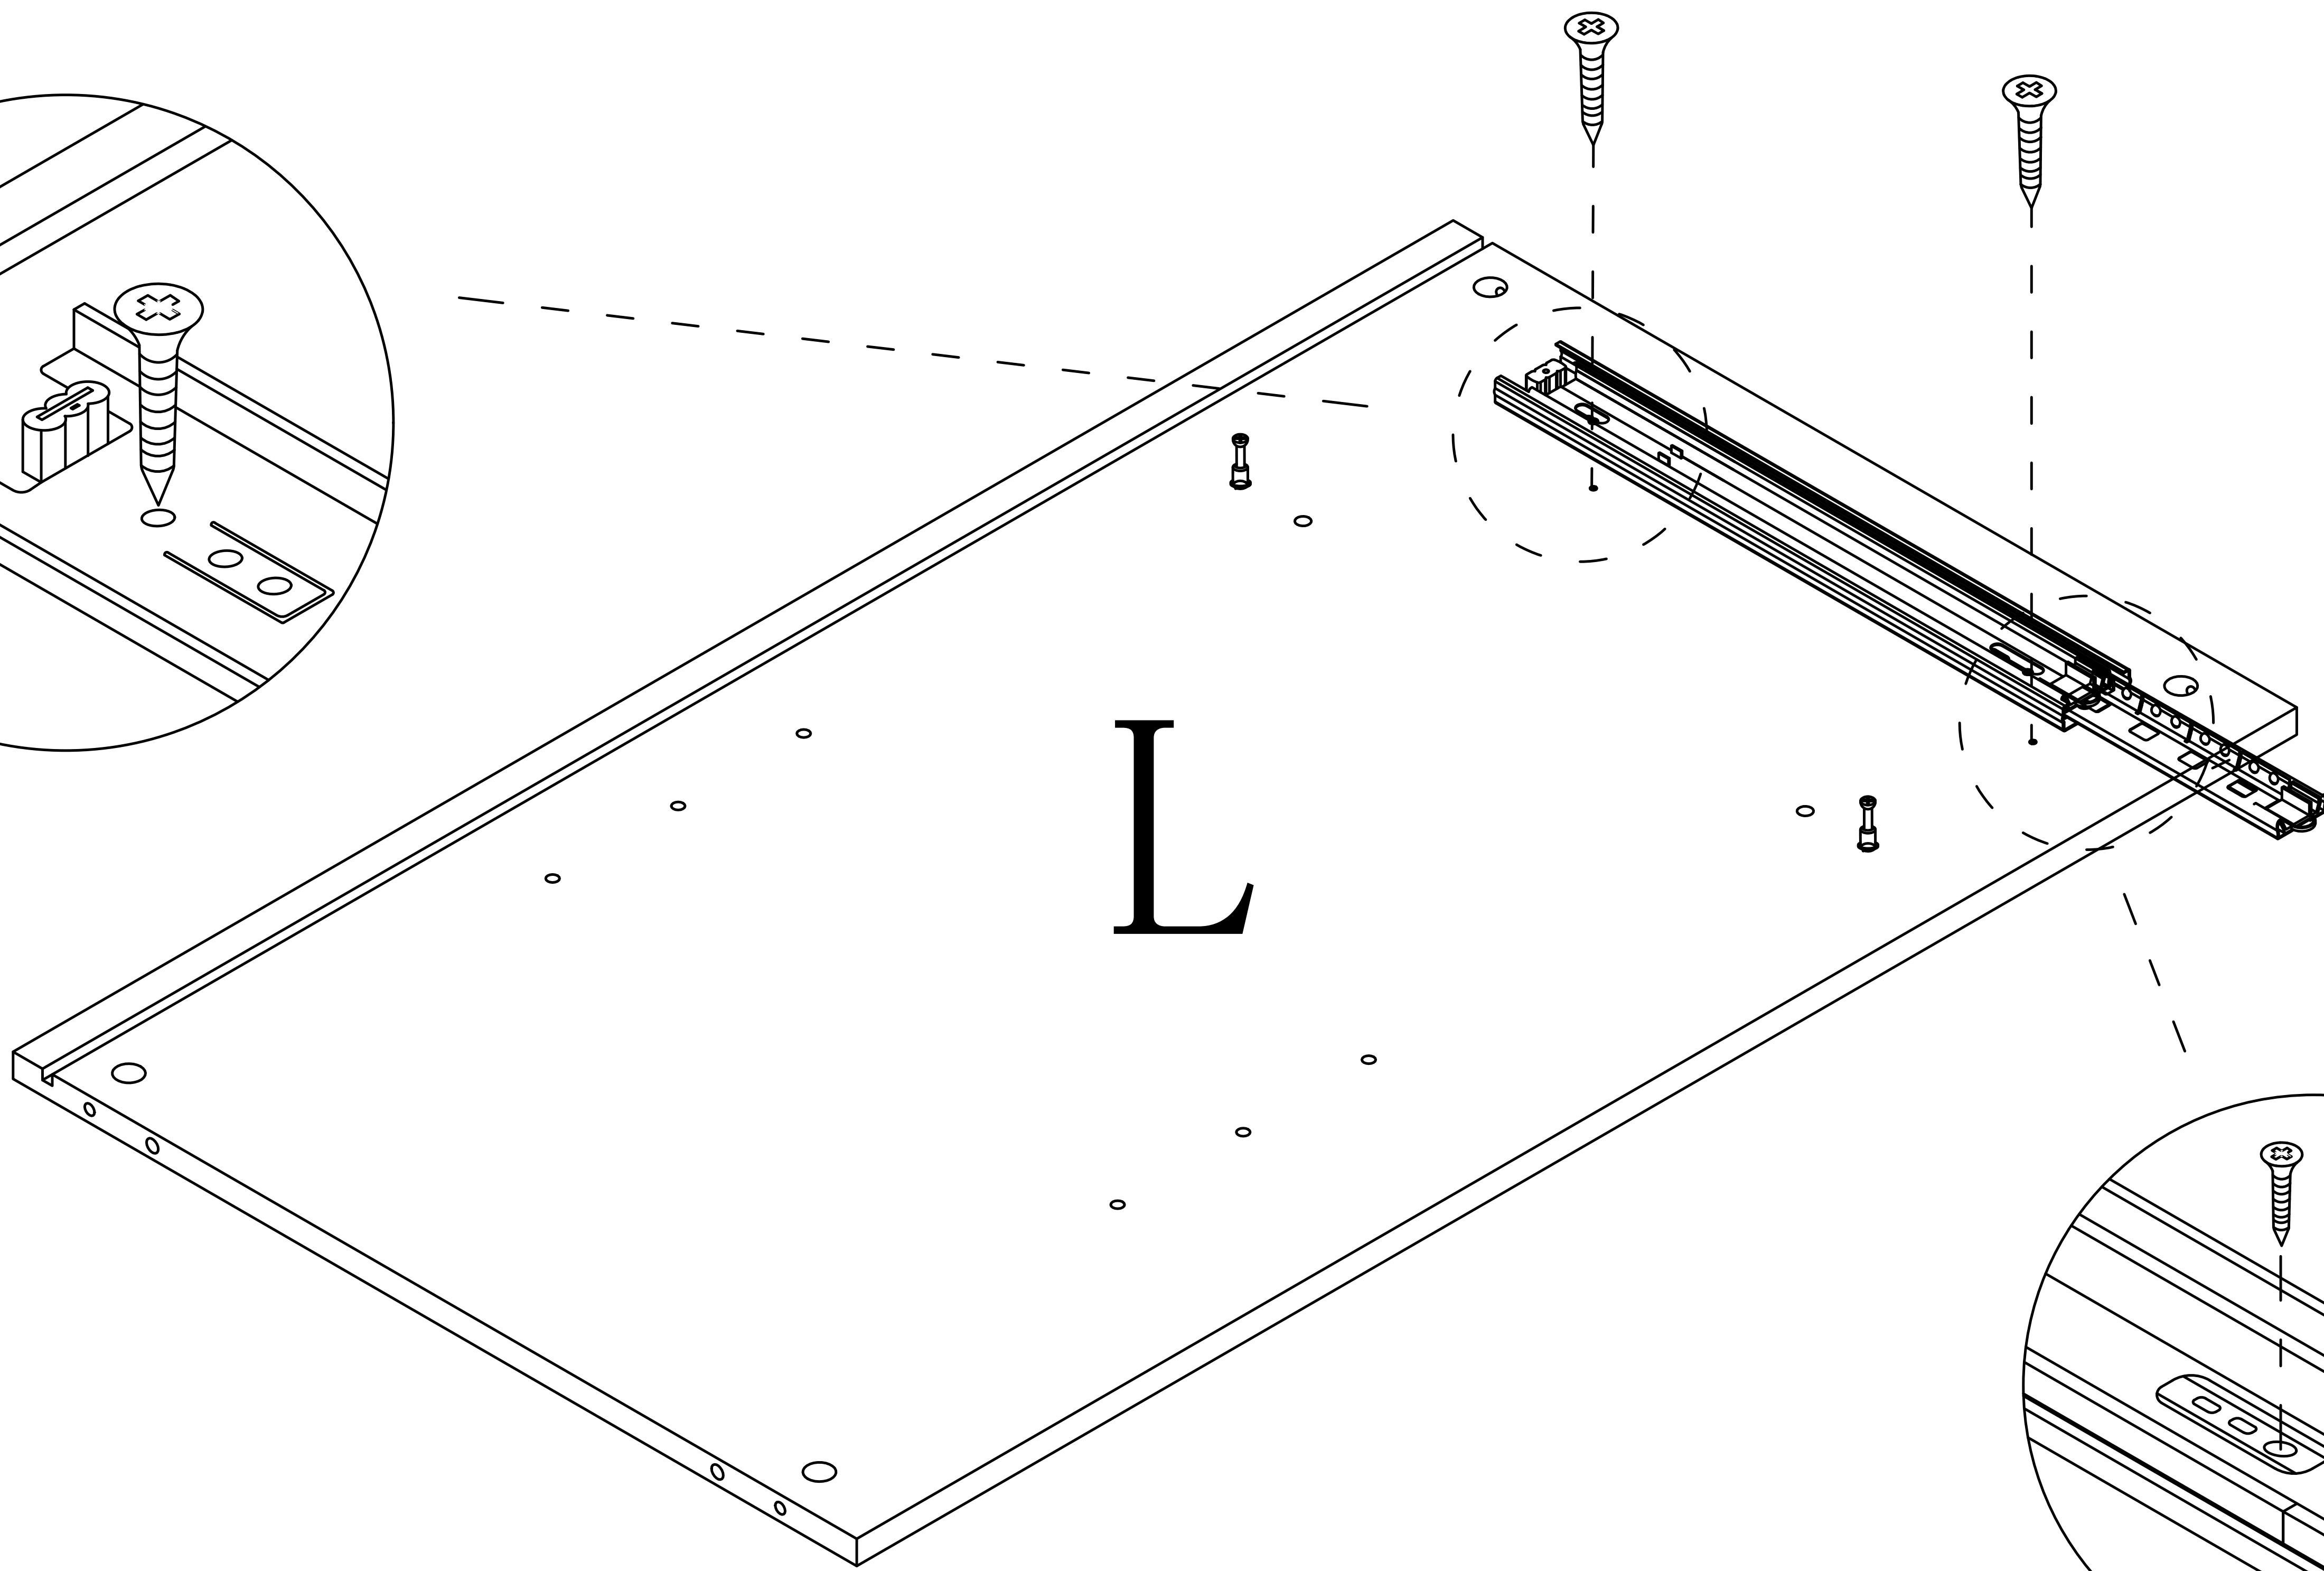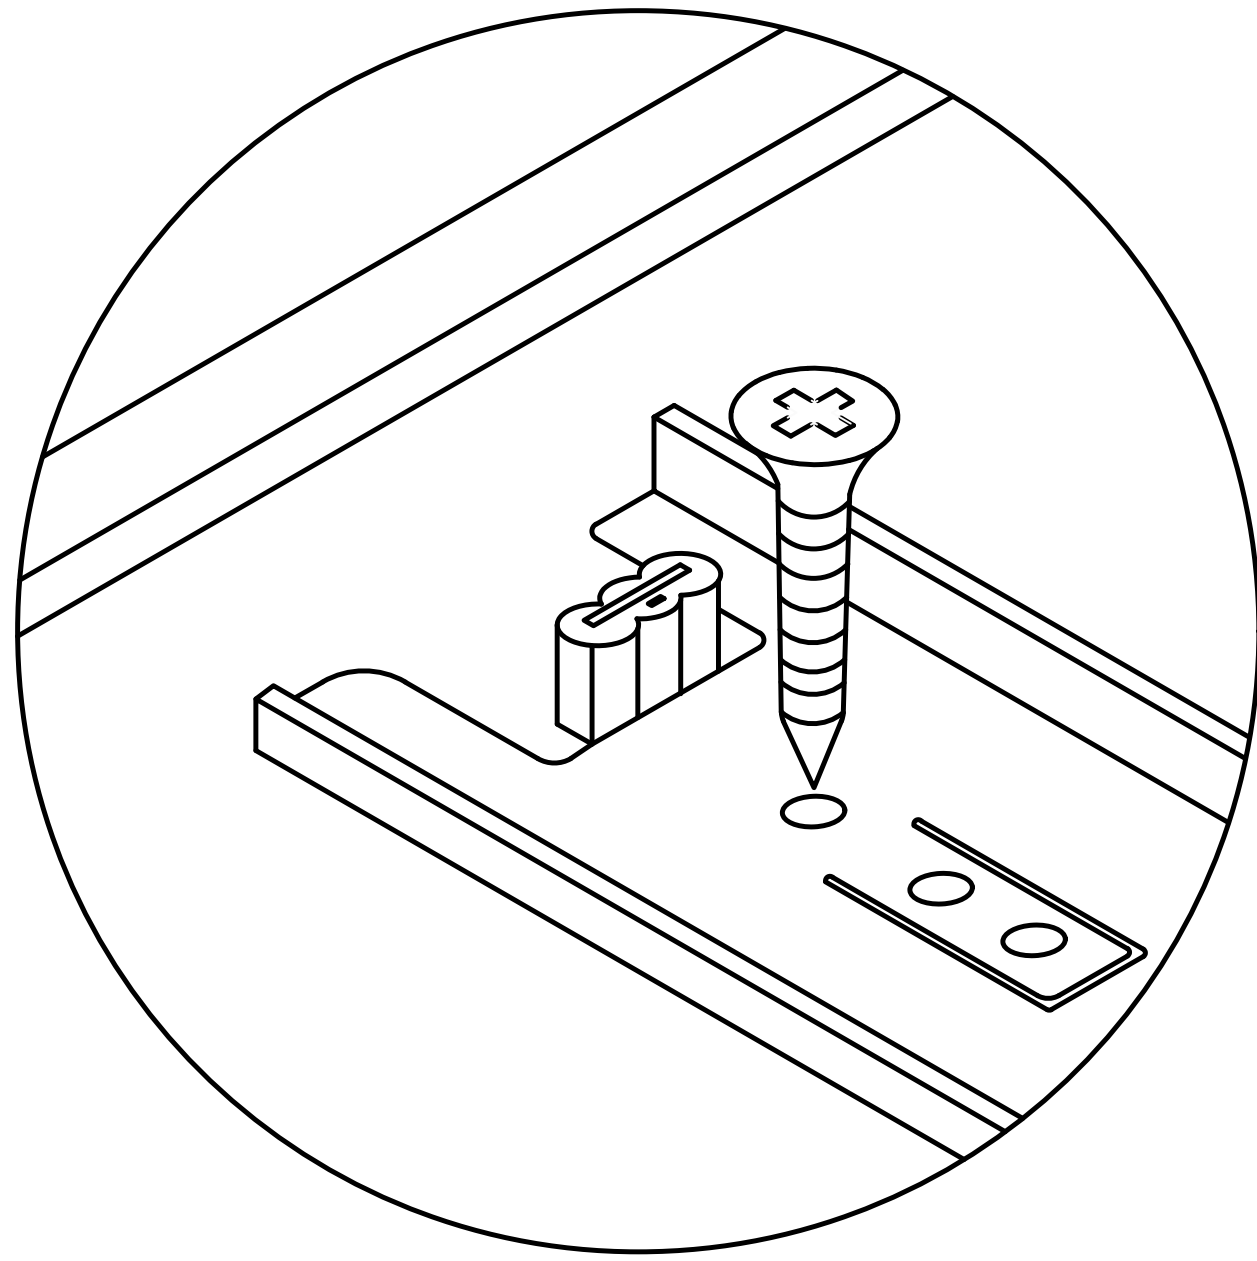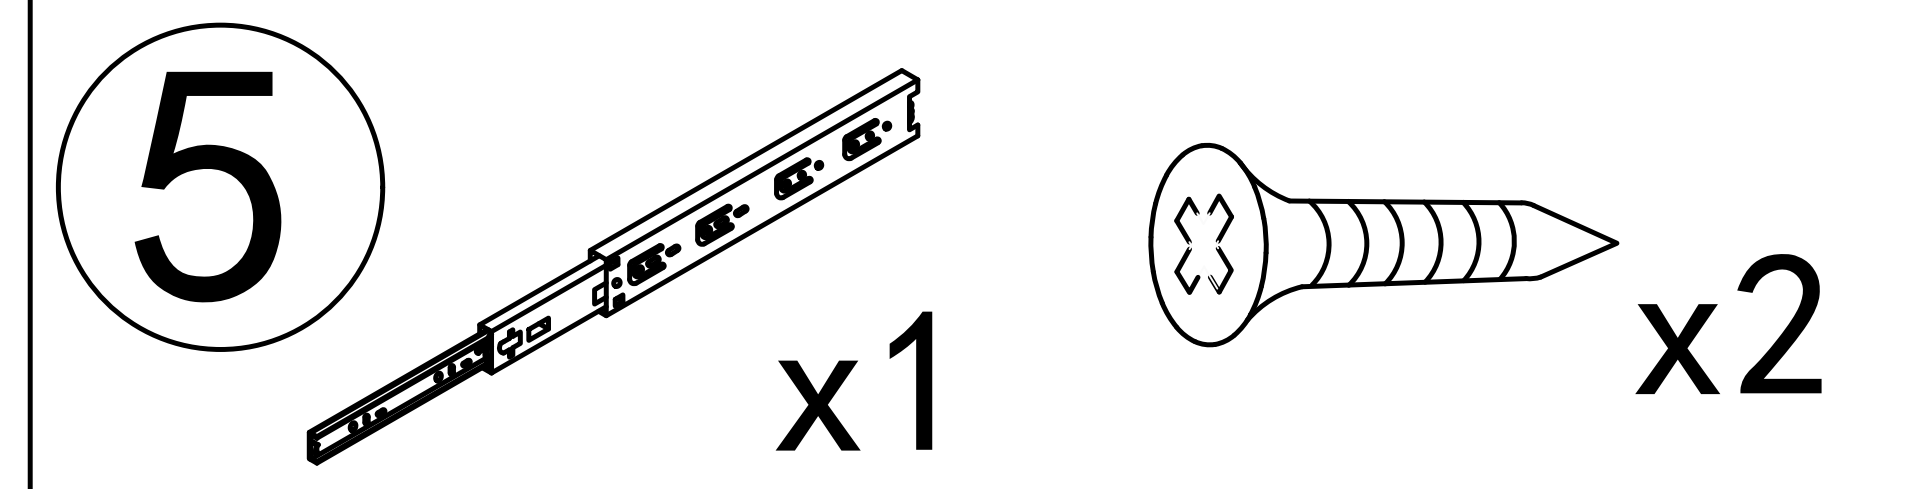
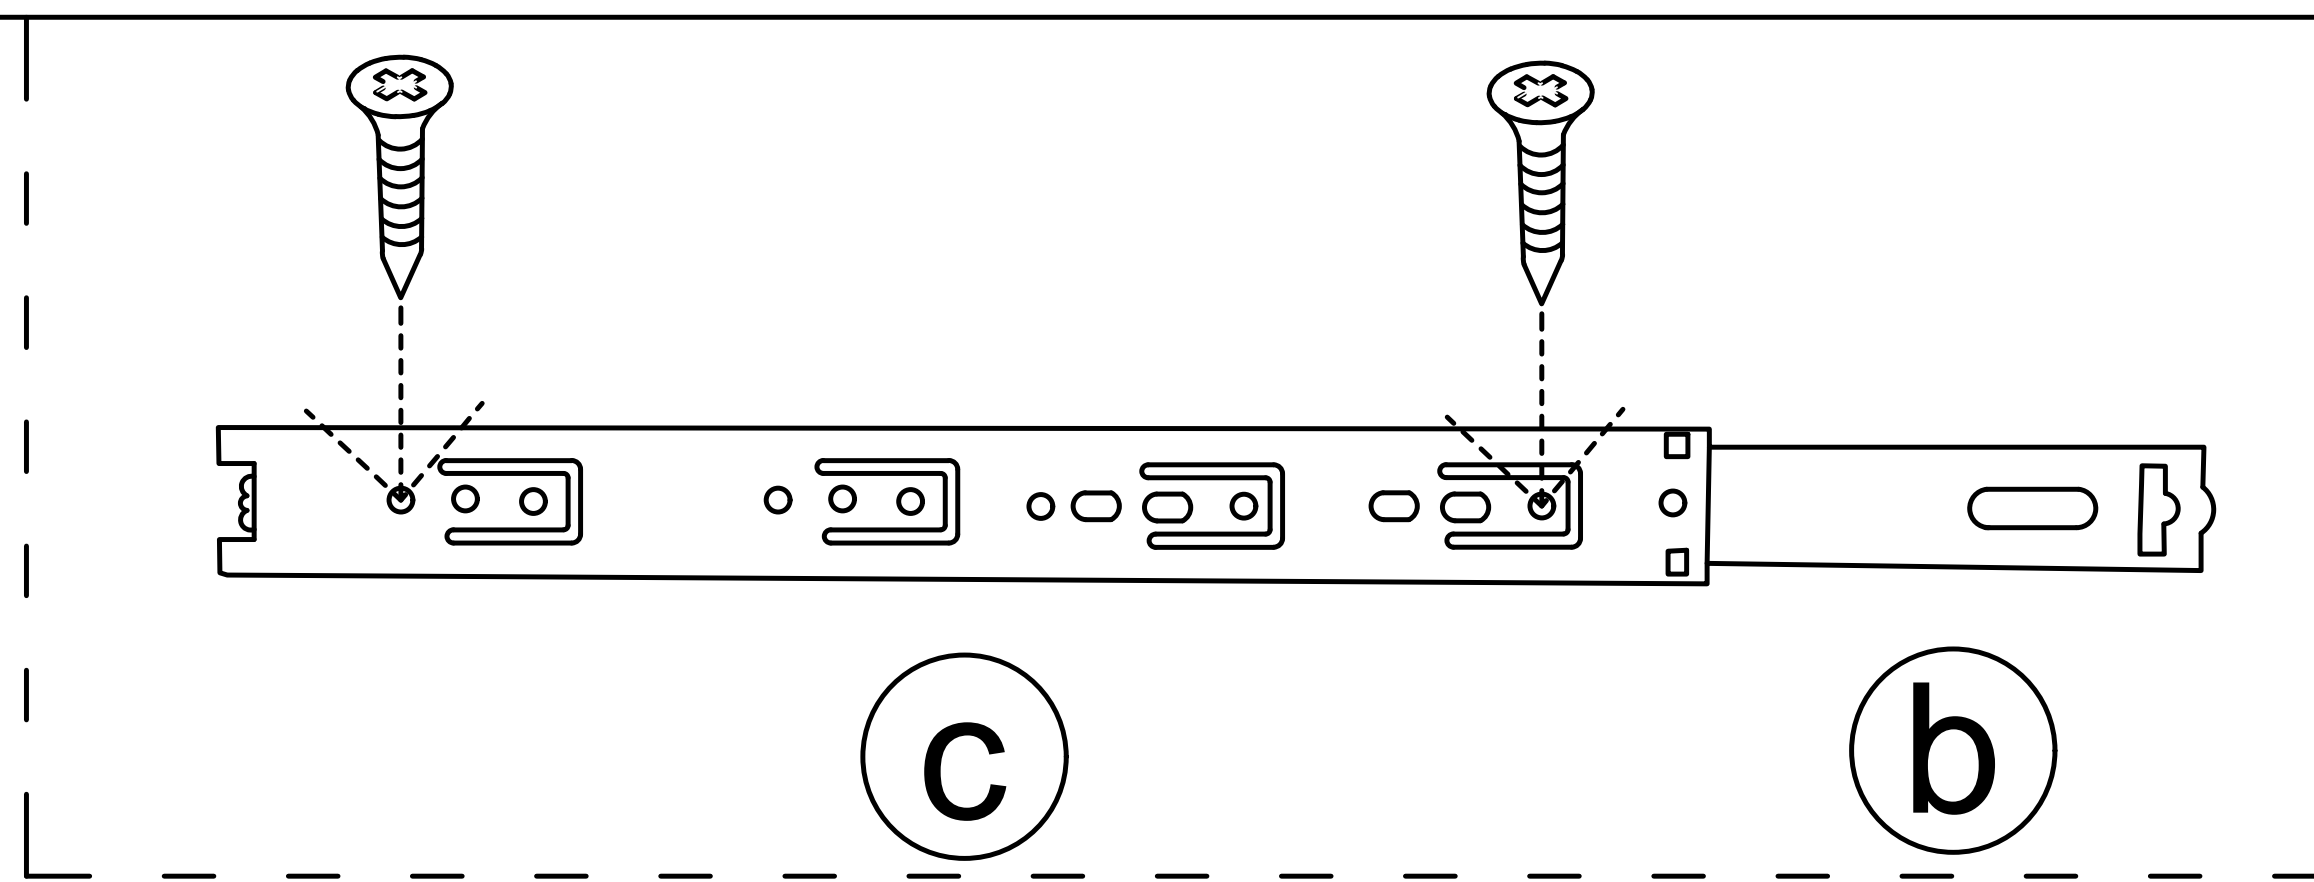


Step 18

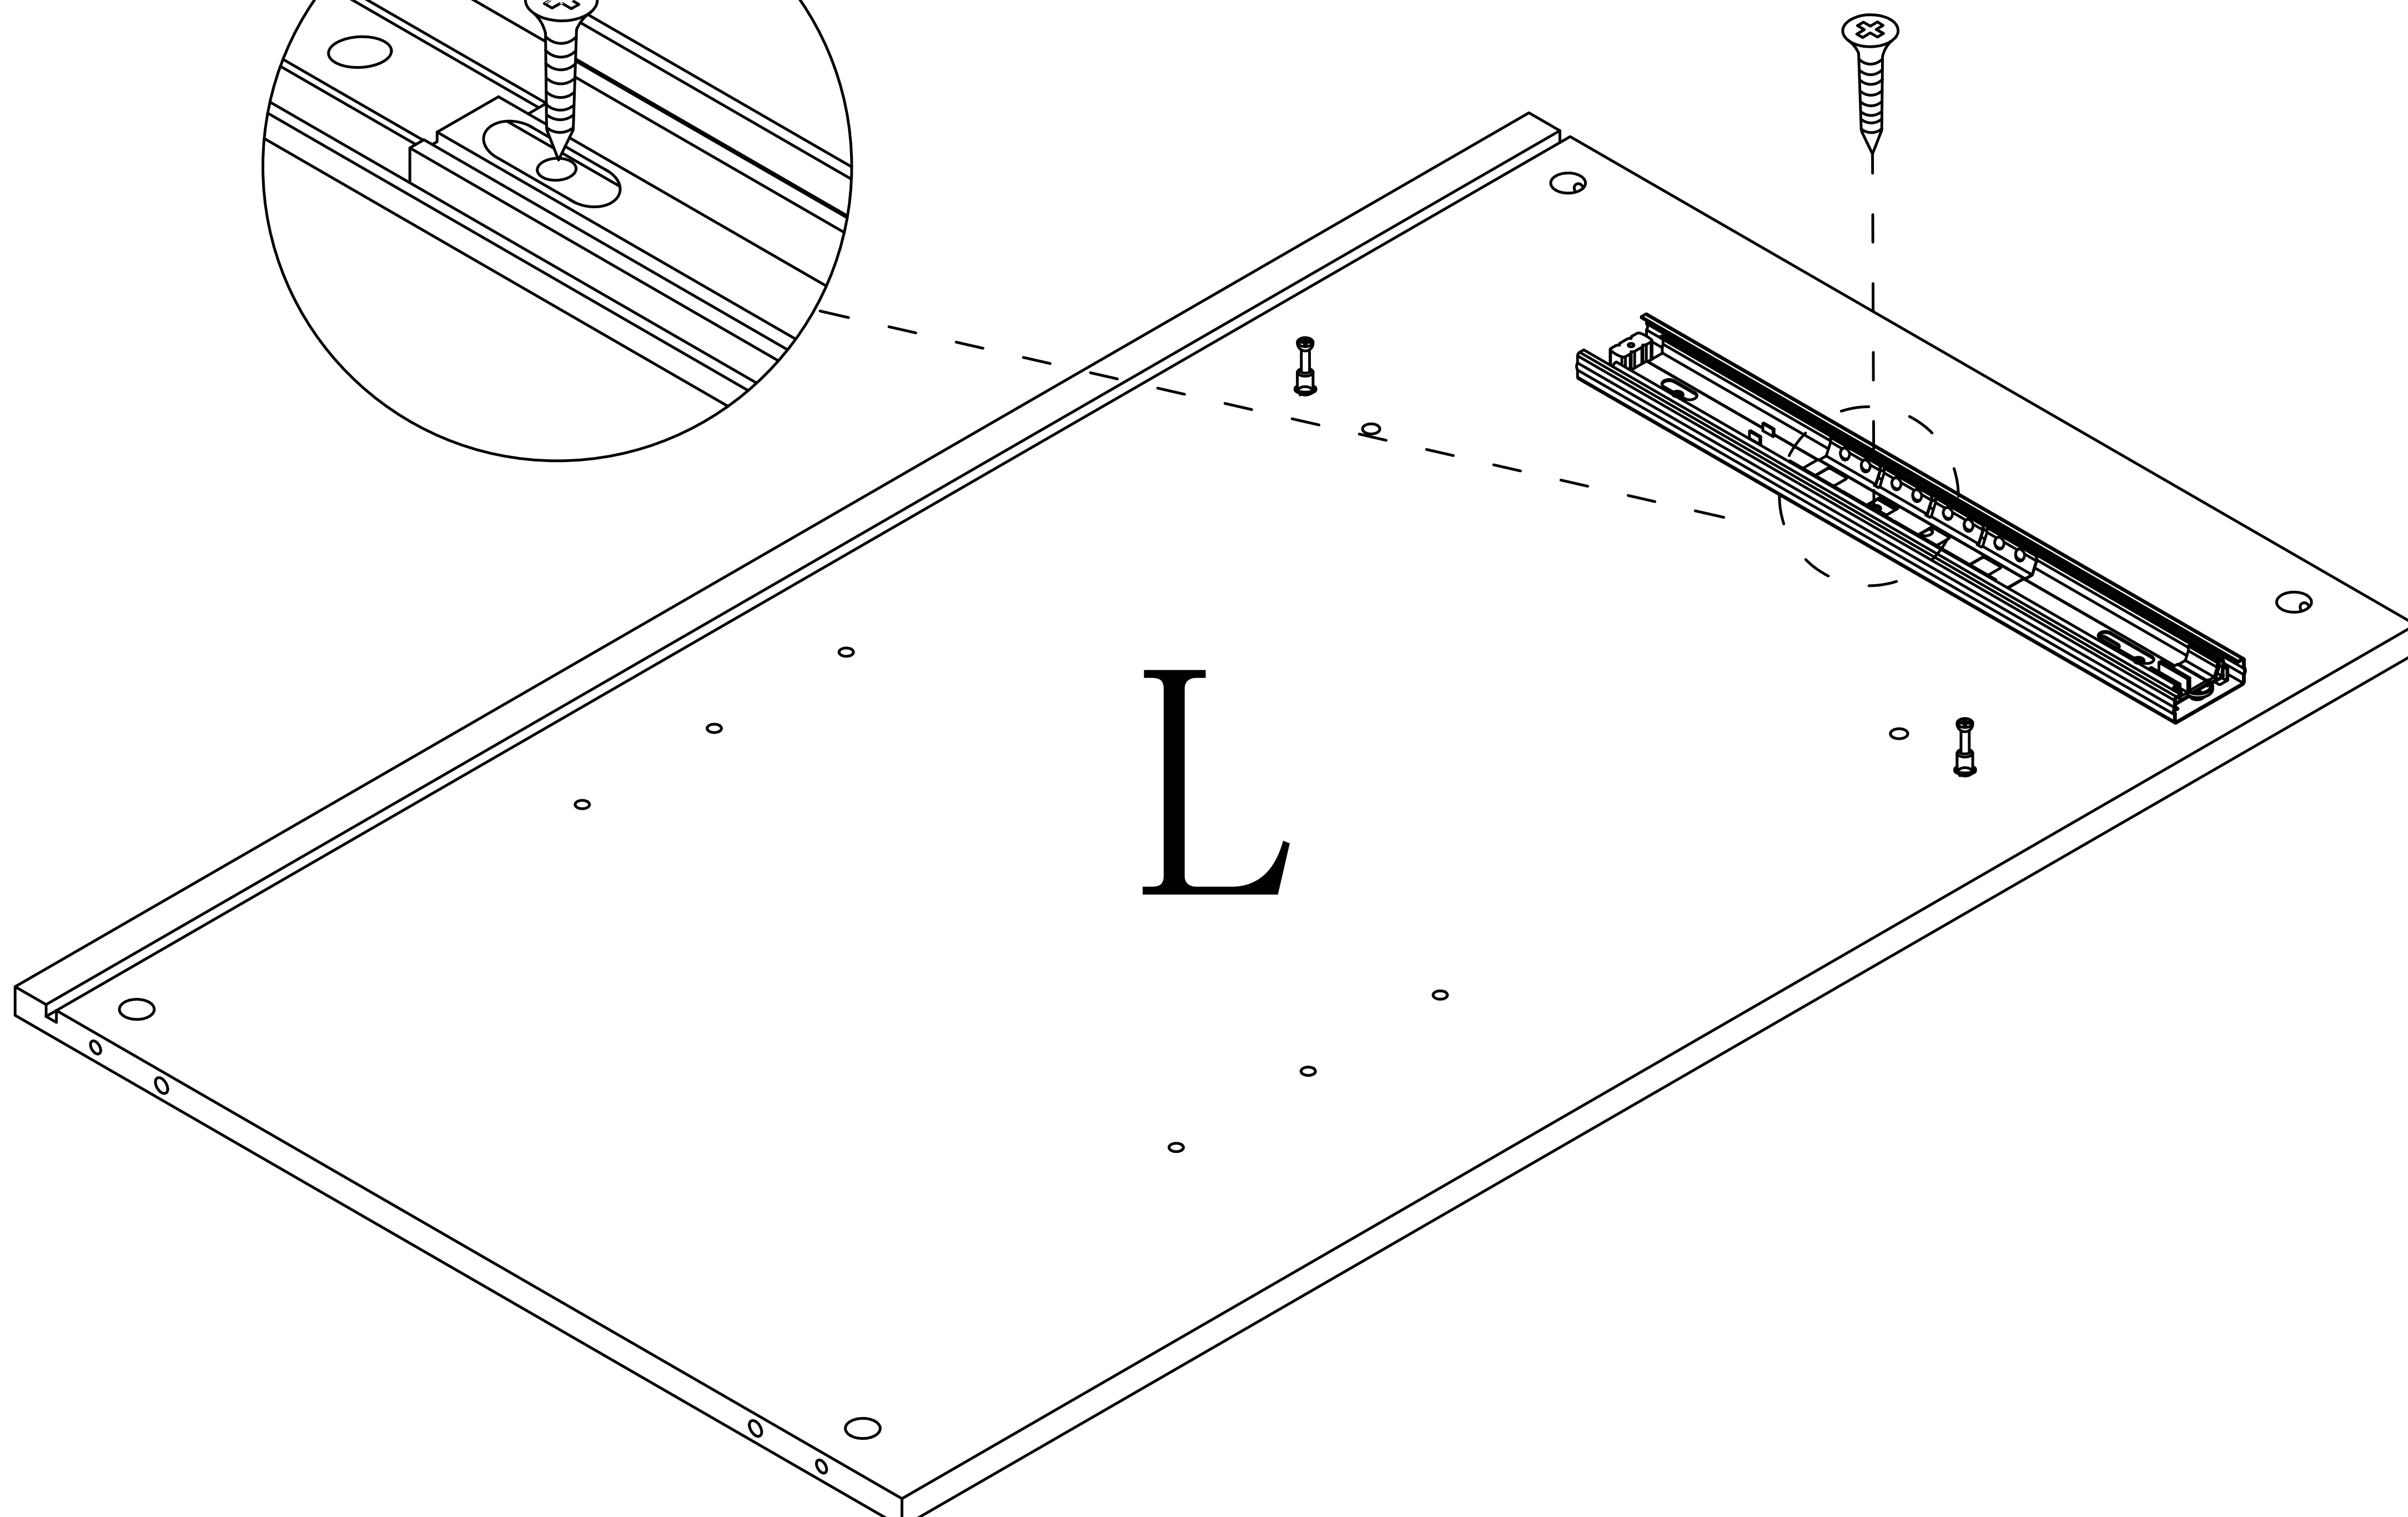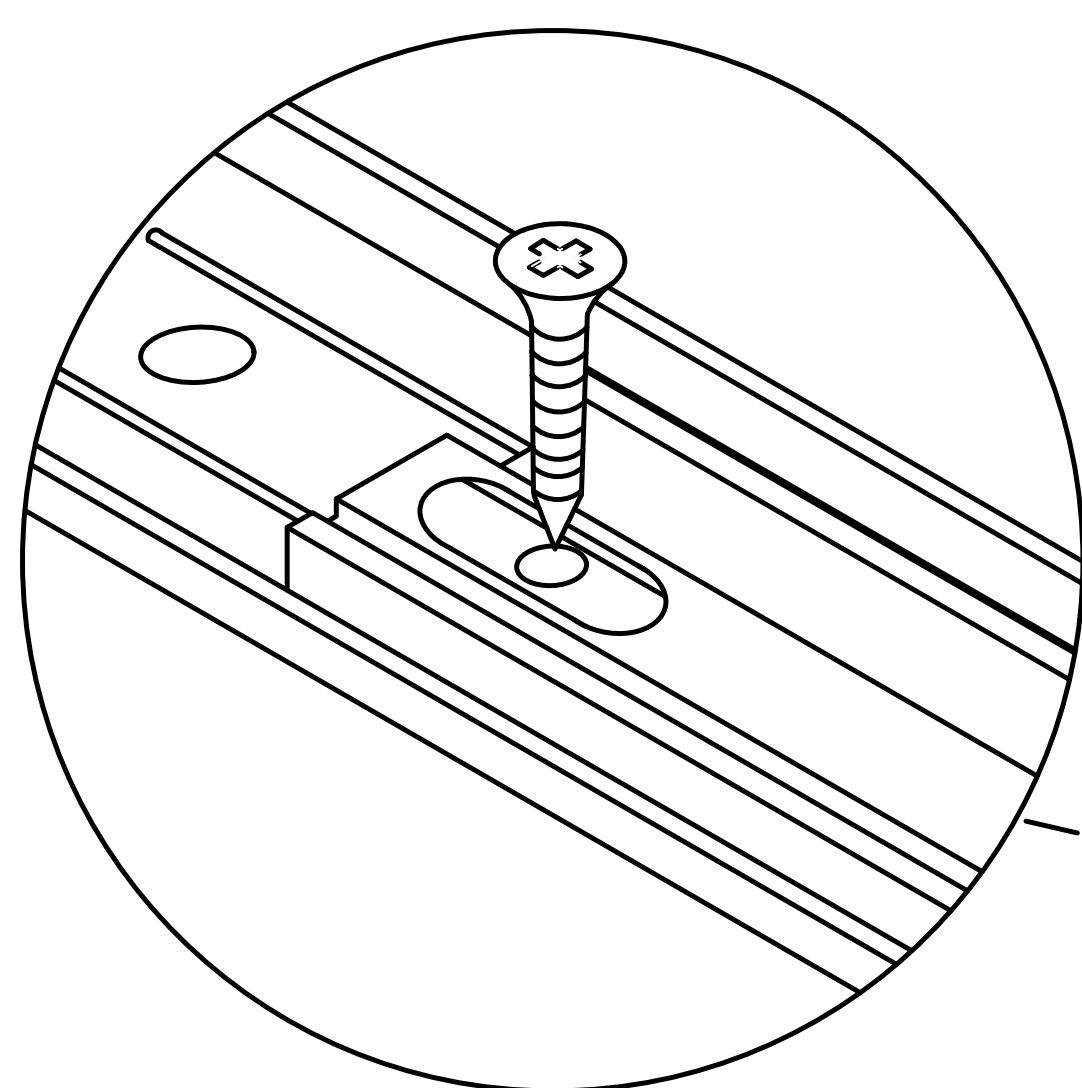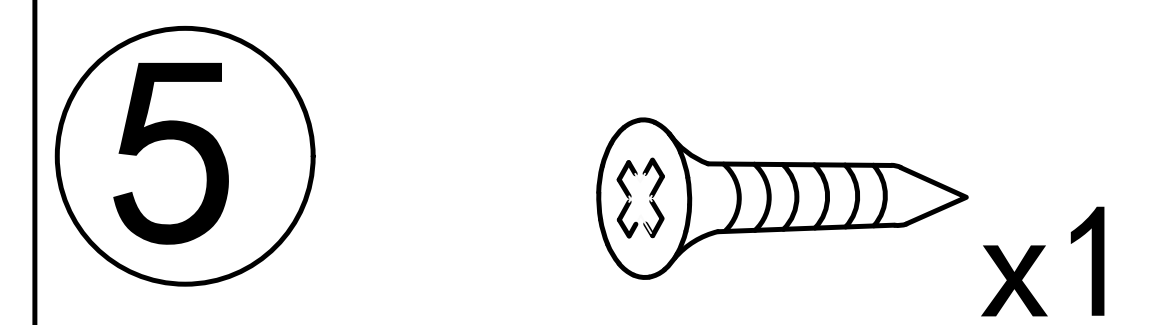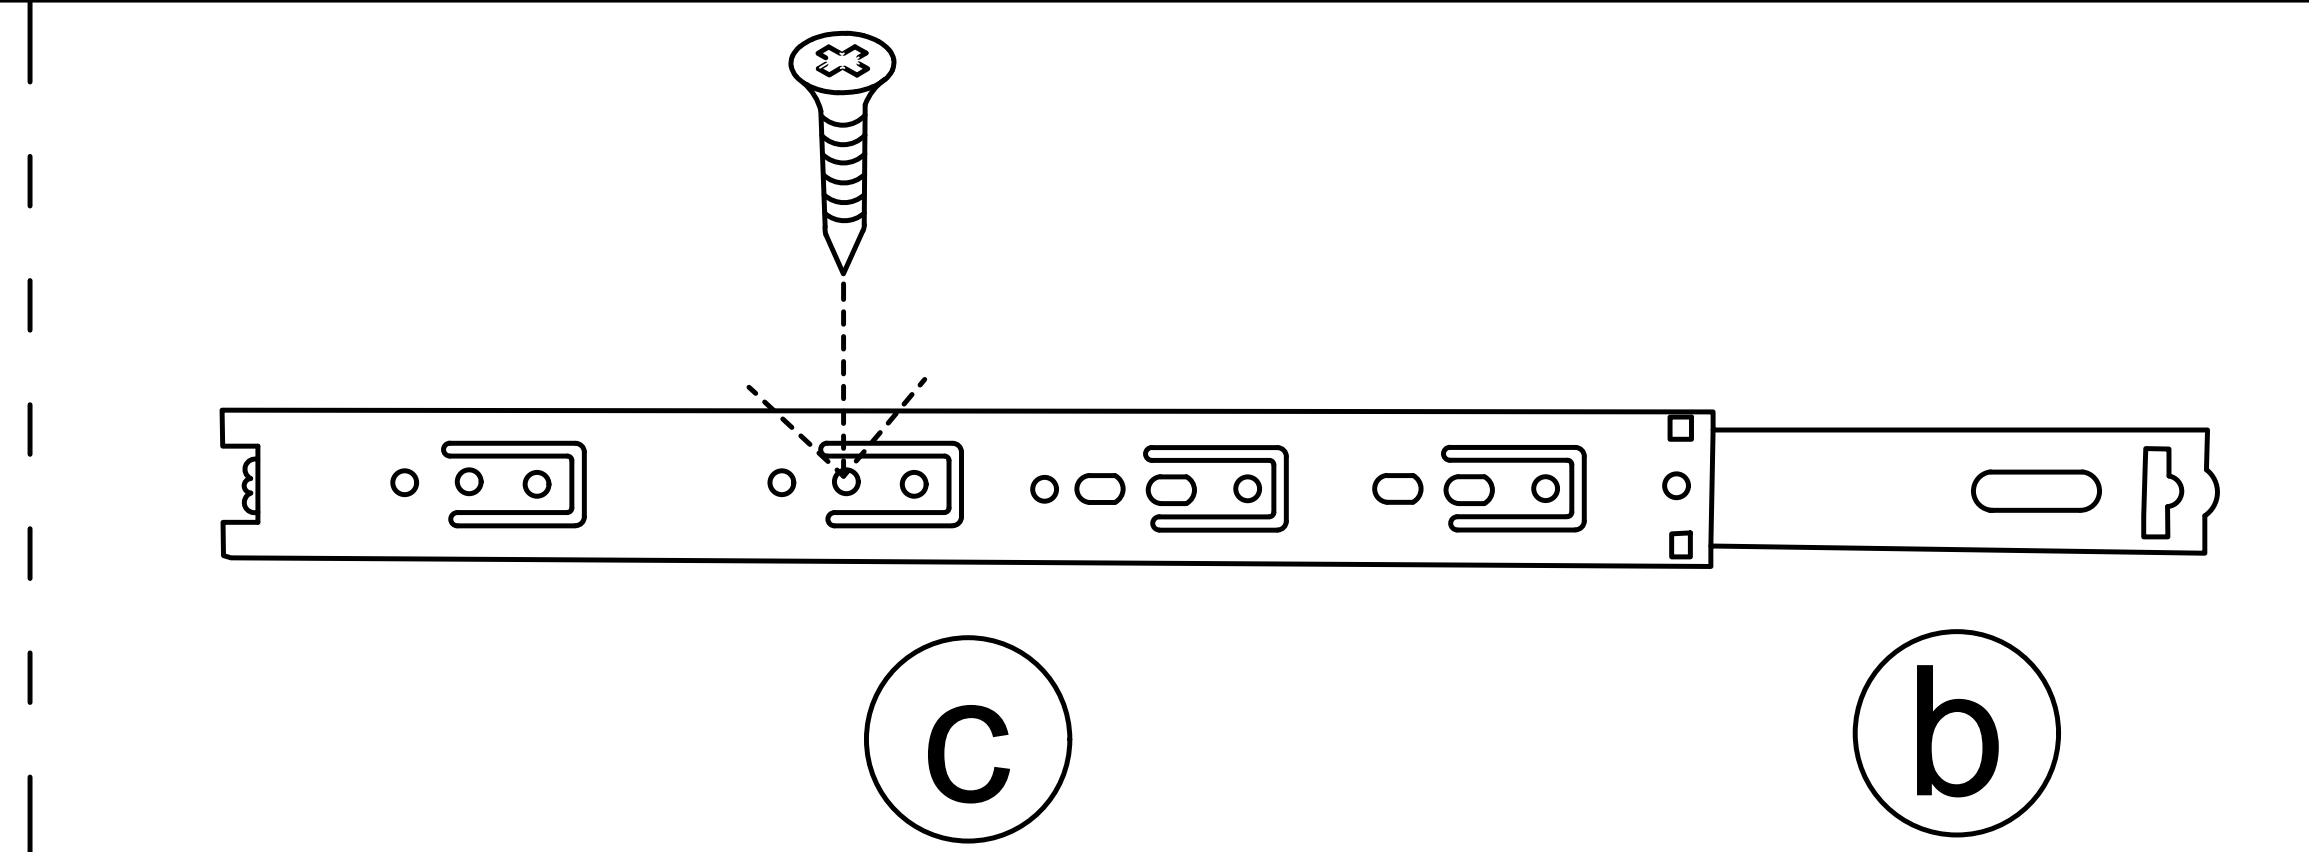



Step 19

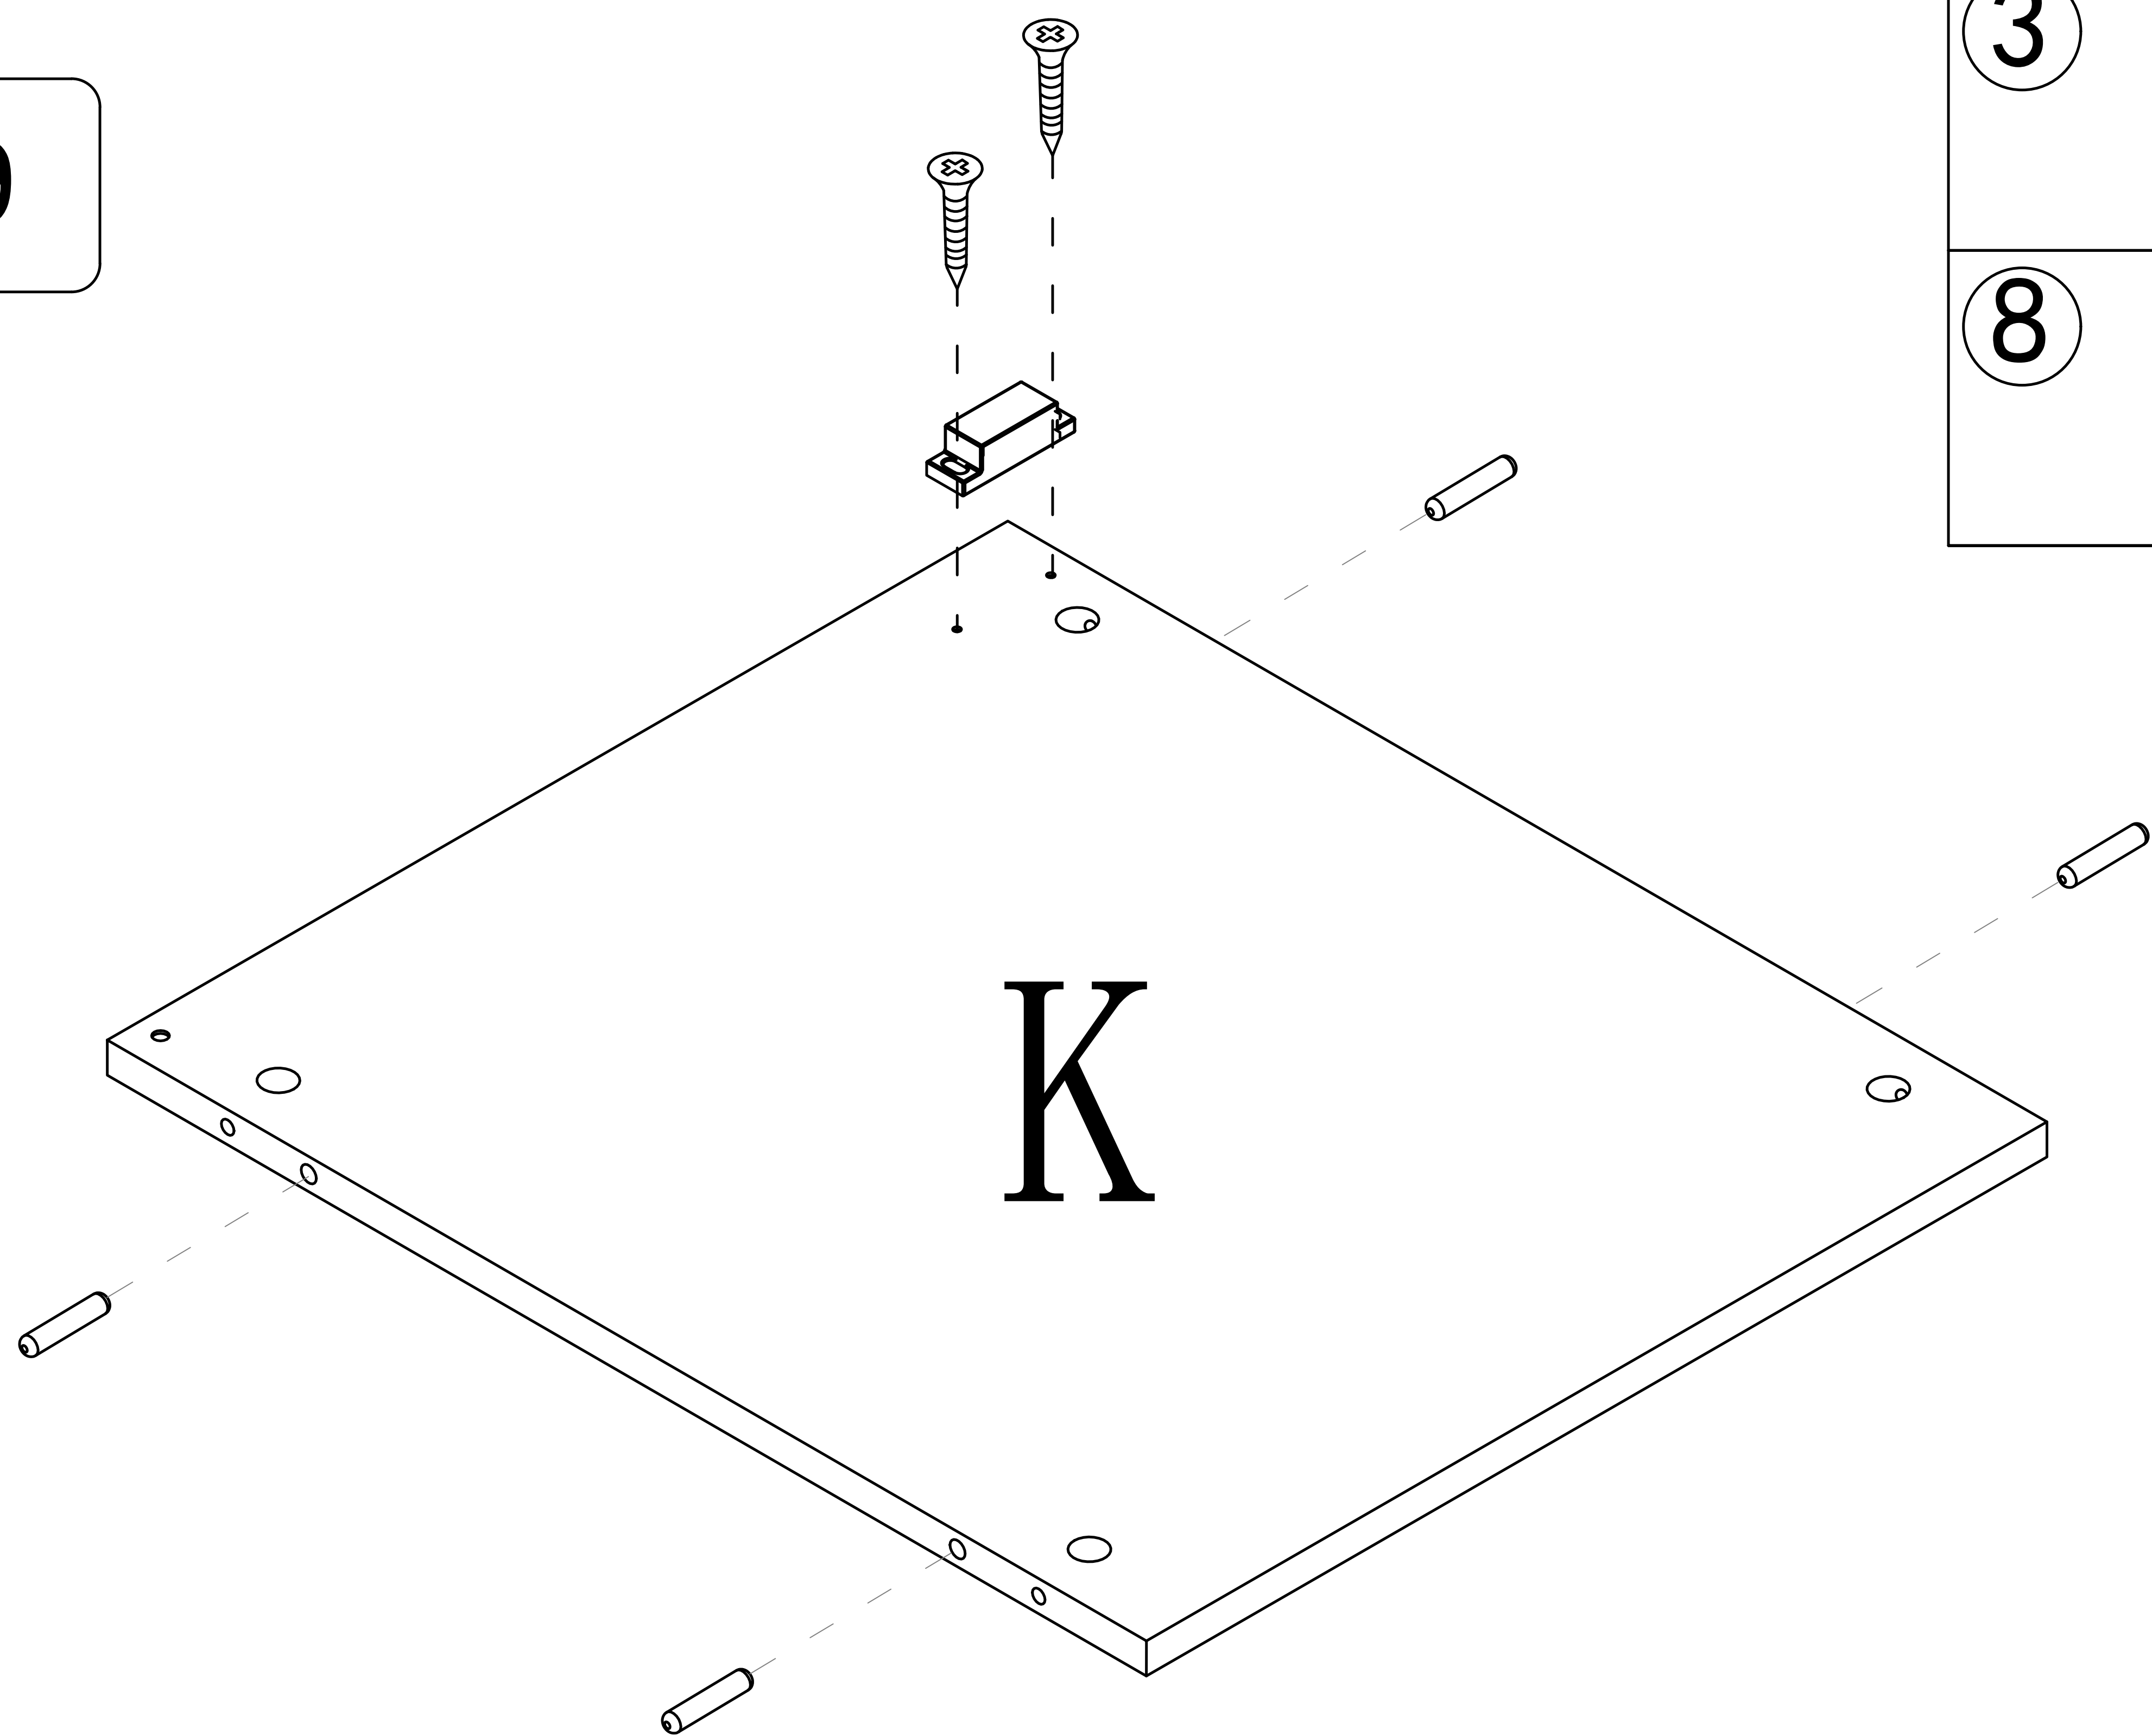


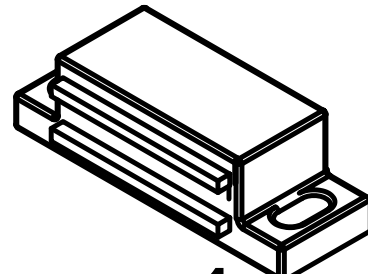- | | | |
|---|---|----|
| 3 |  | x4 |
| 8 |  | x1 |
| |  | x2 |



Step 20

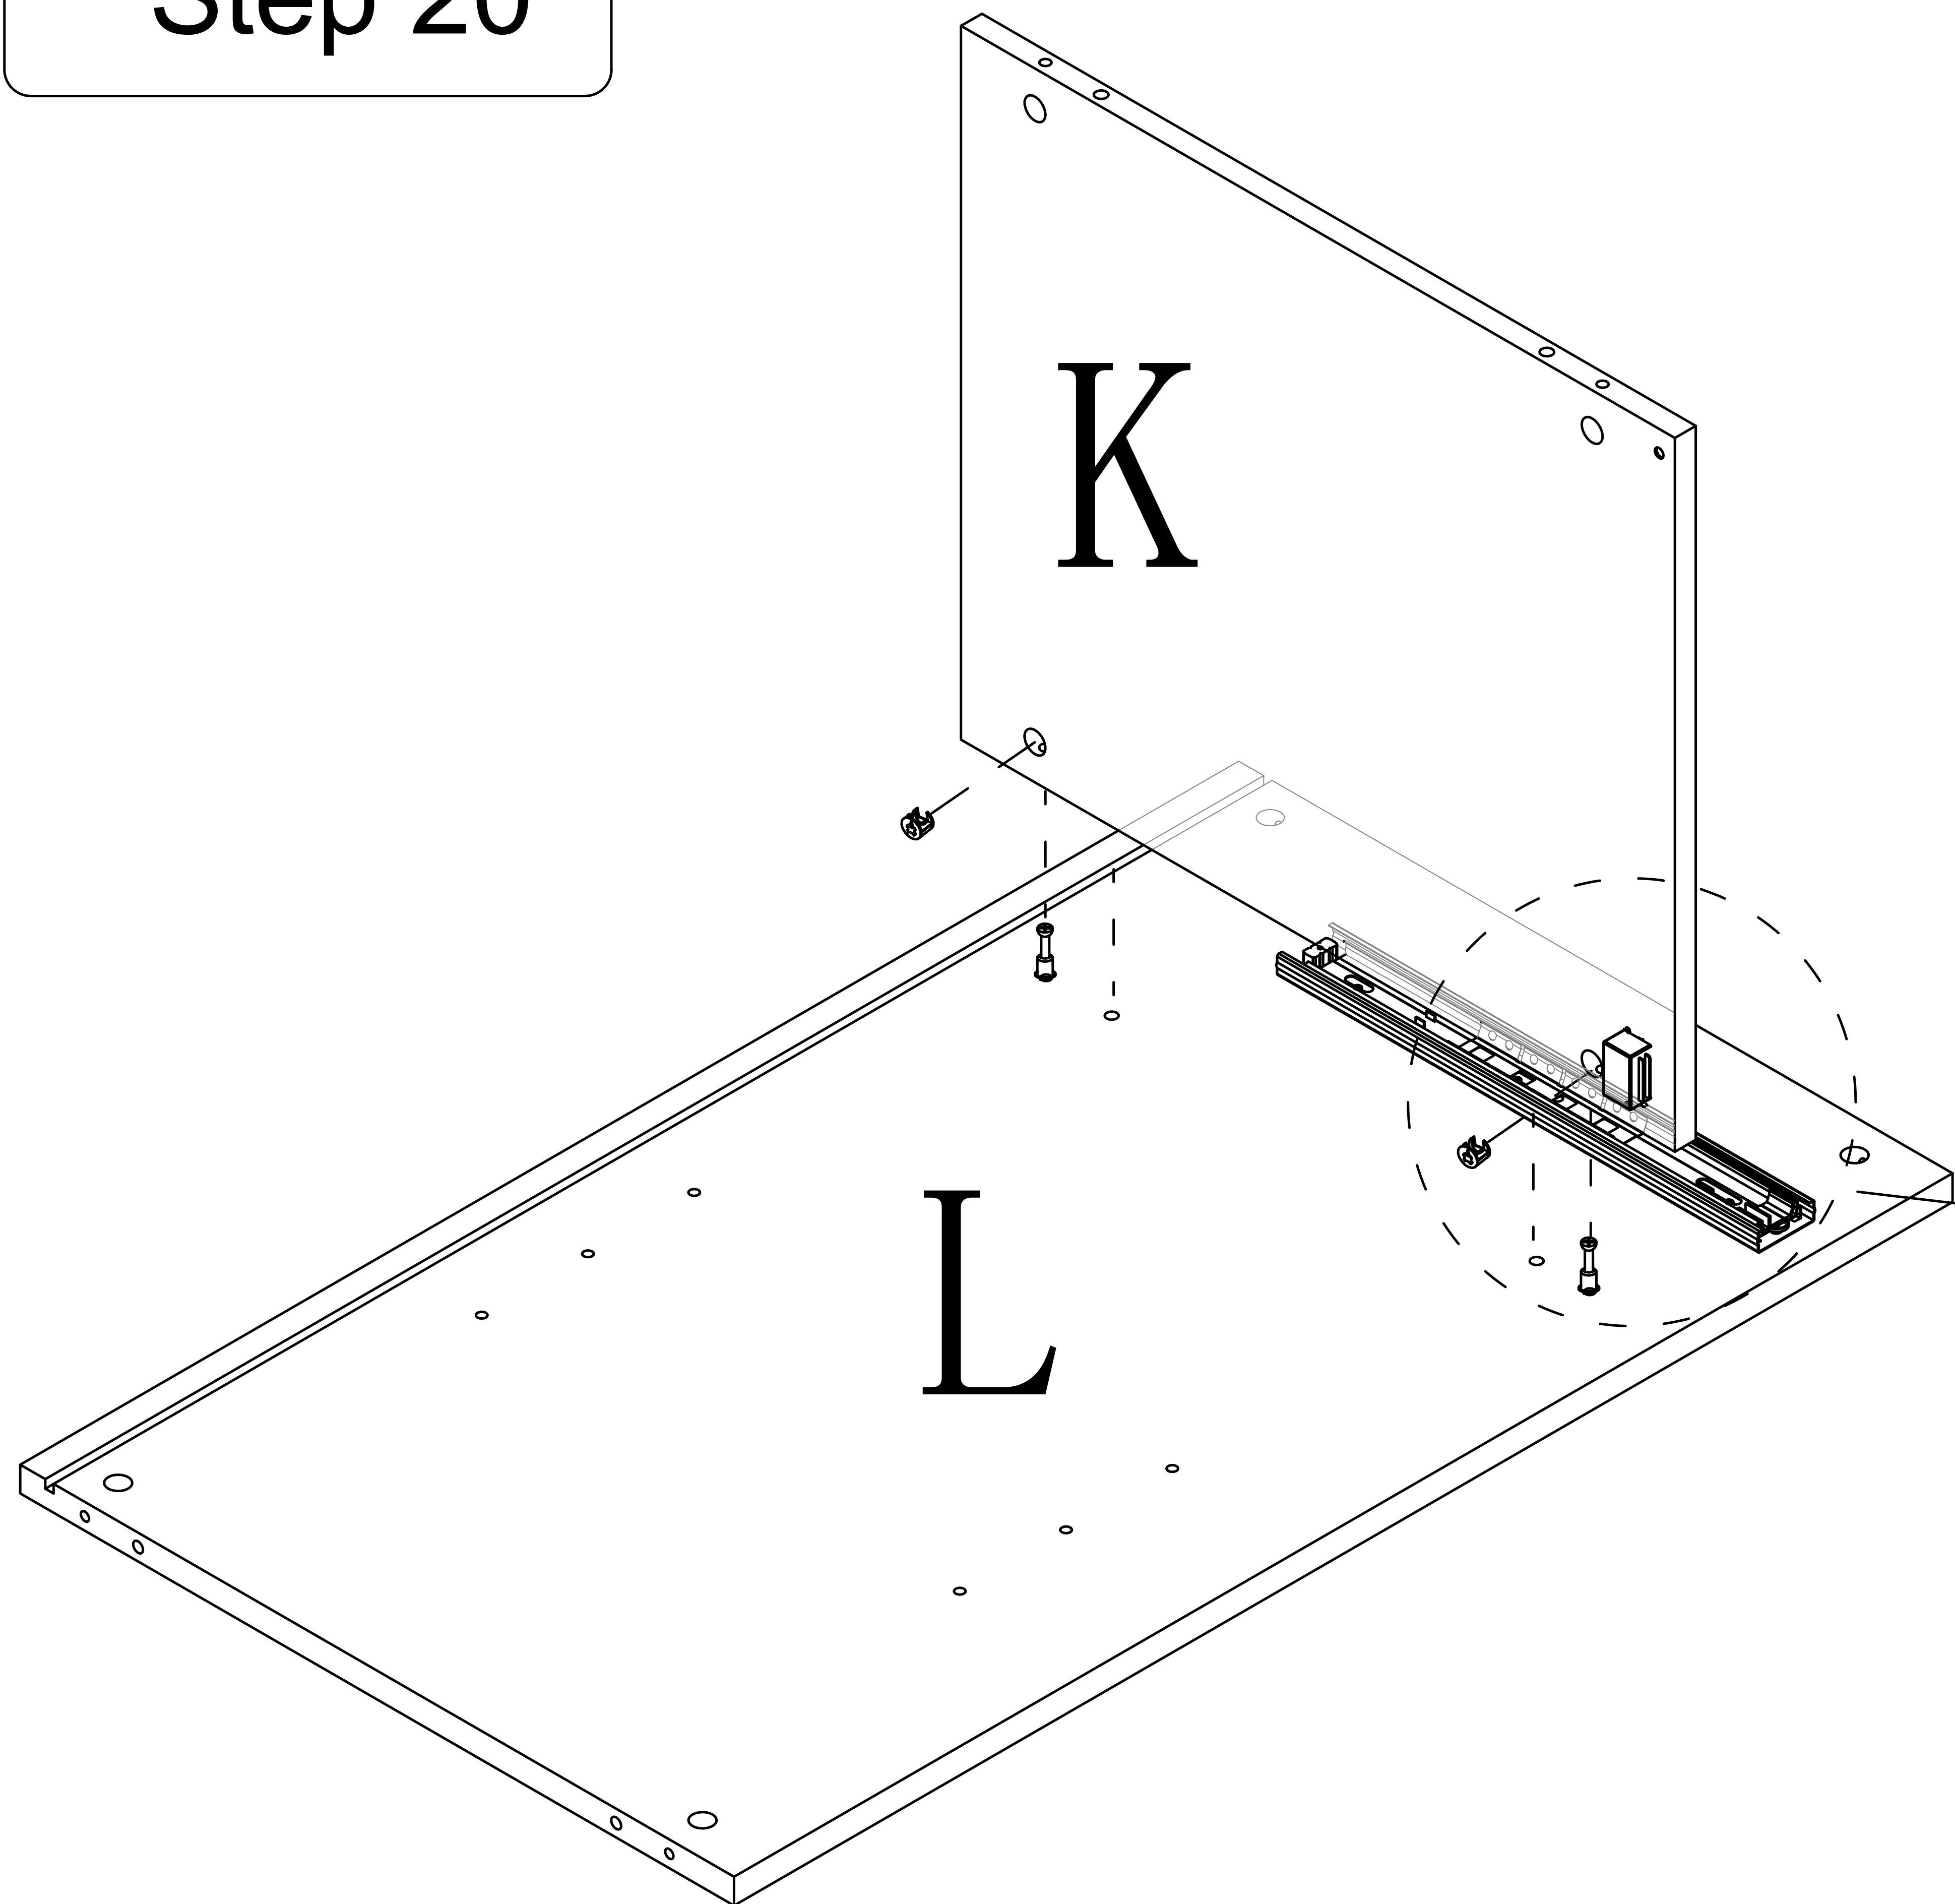



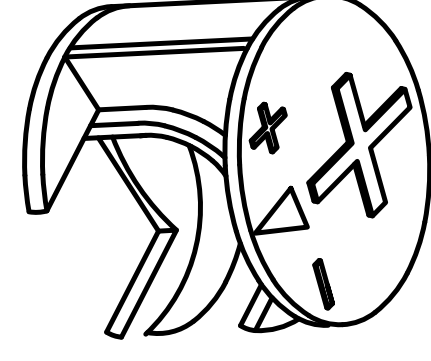
- | | | |
|---|---|----|
| 2 |  | x2 |
|---|---|----|

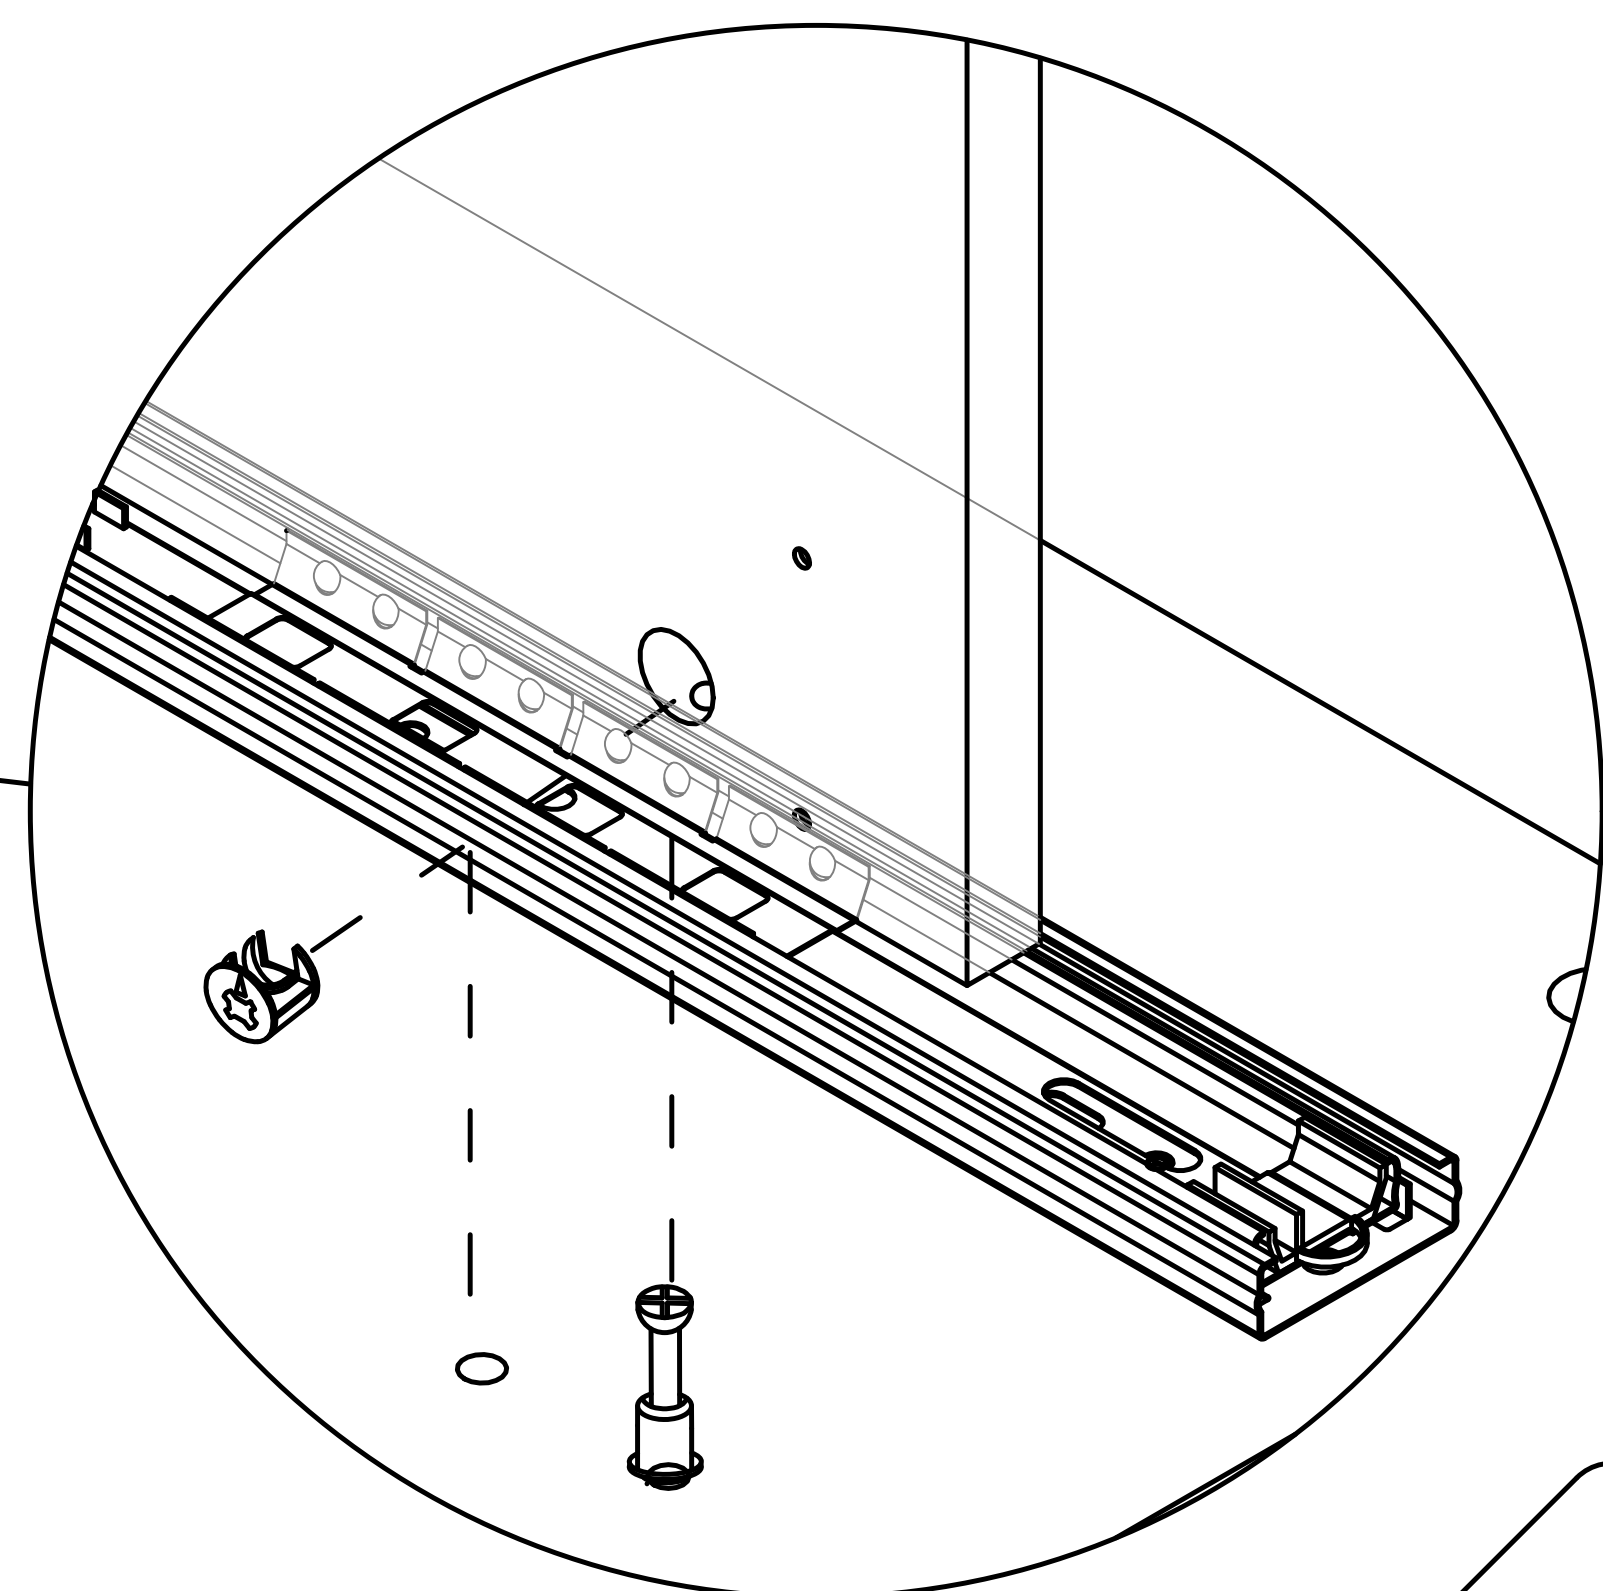


Step 21

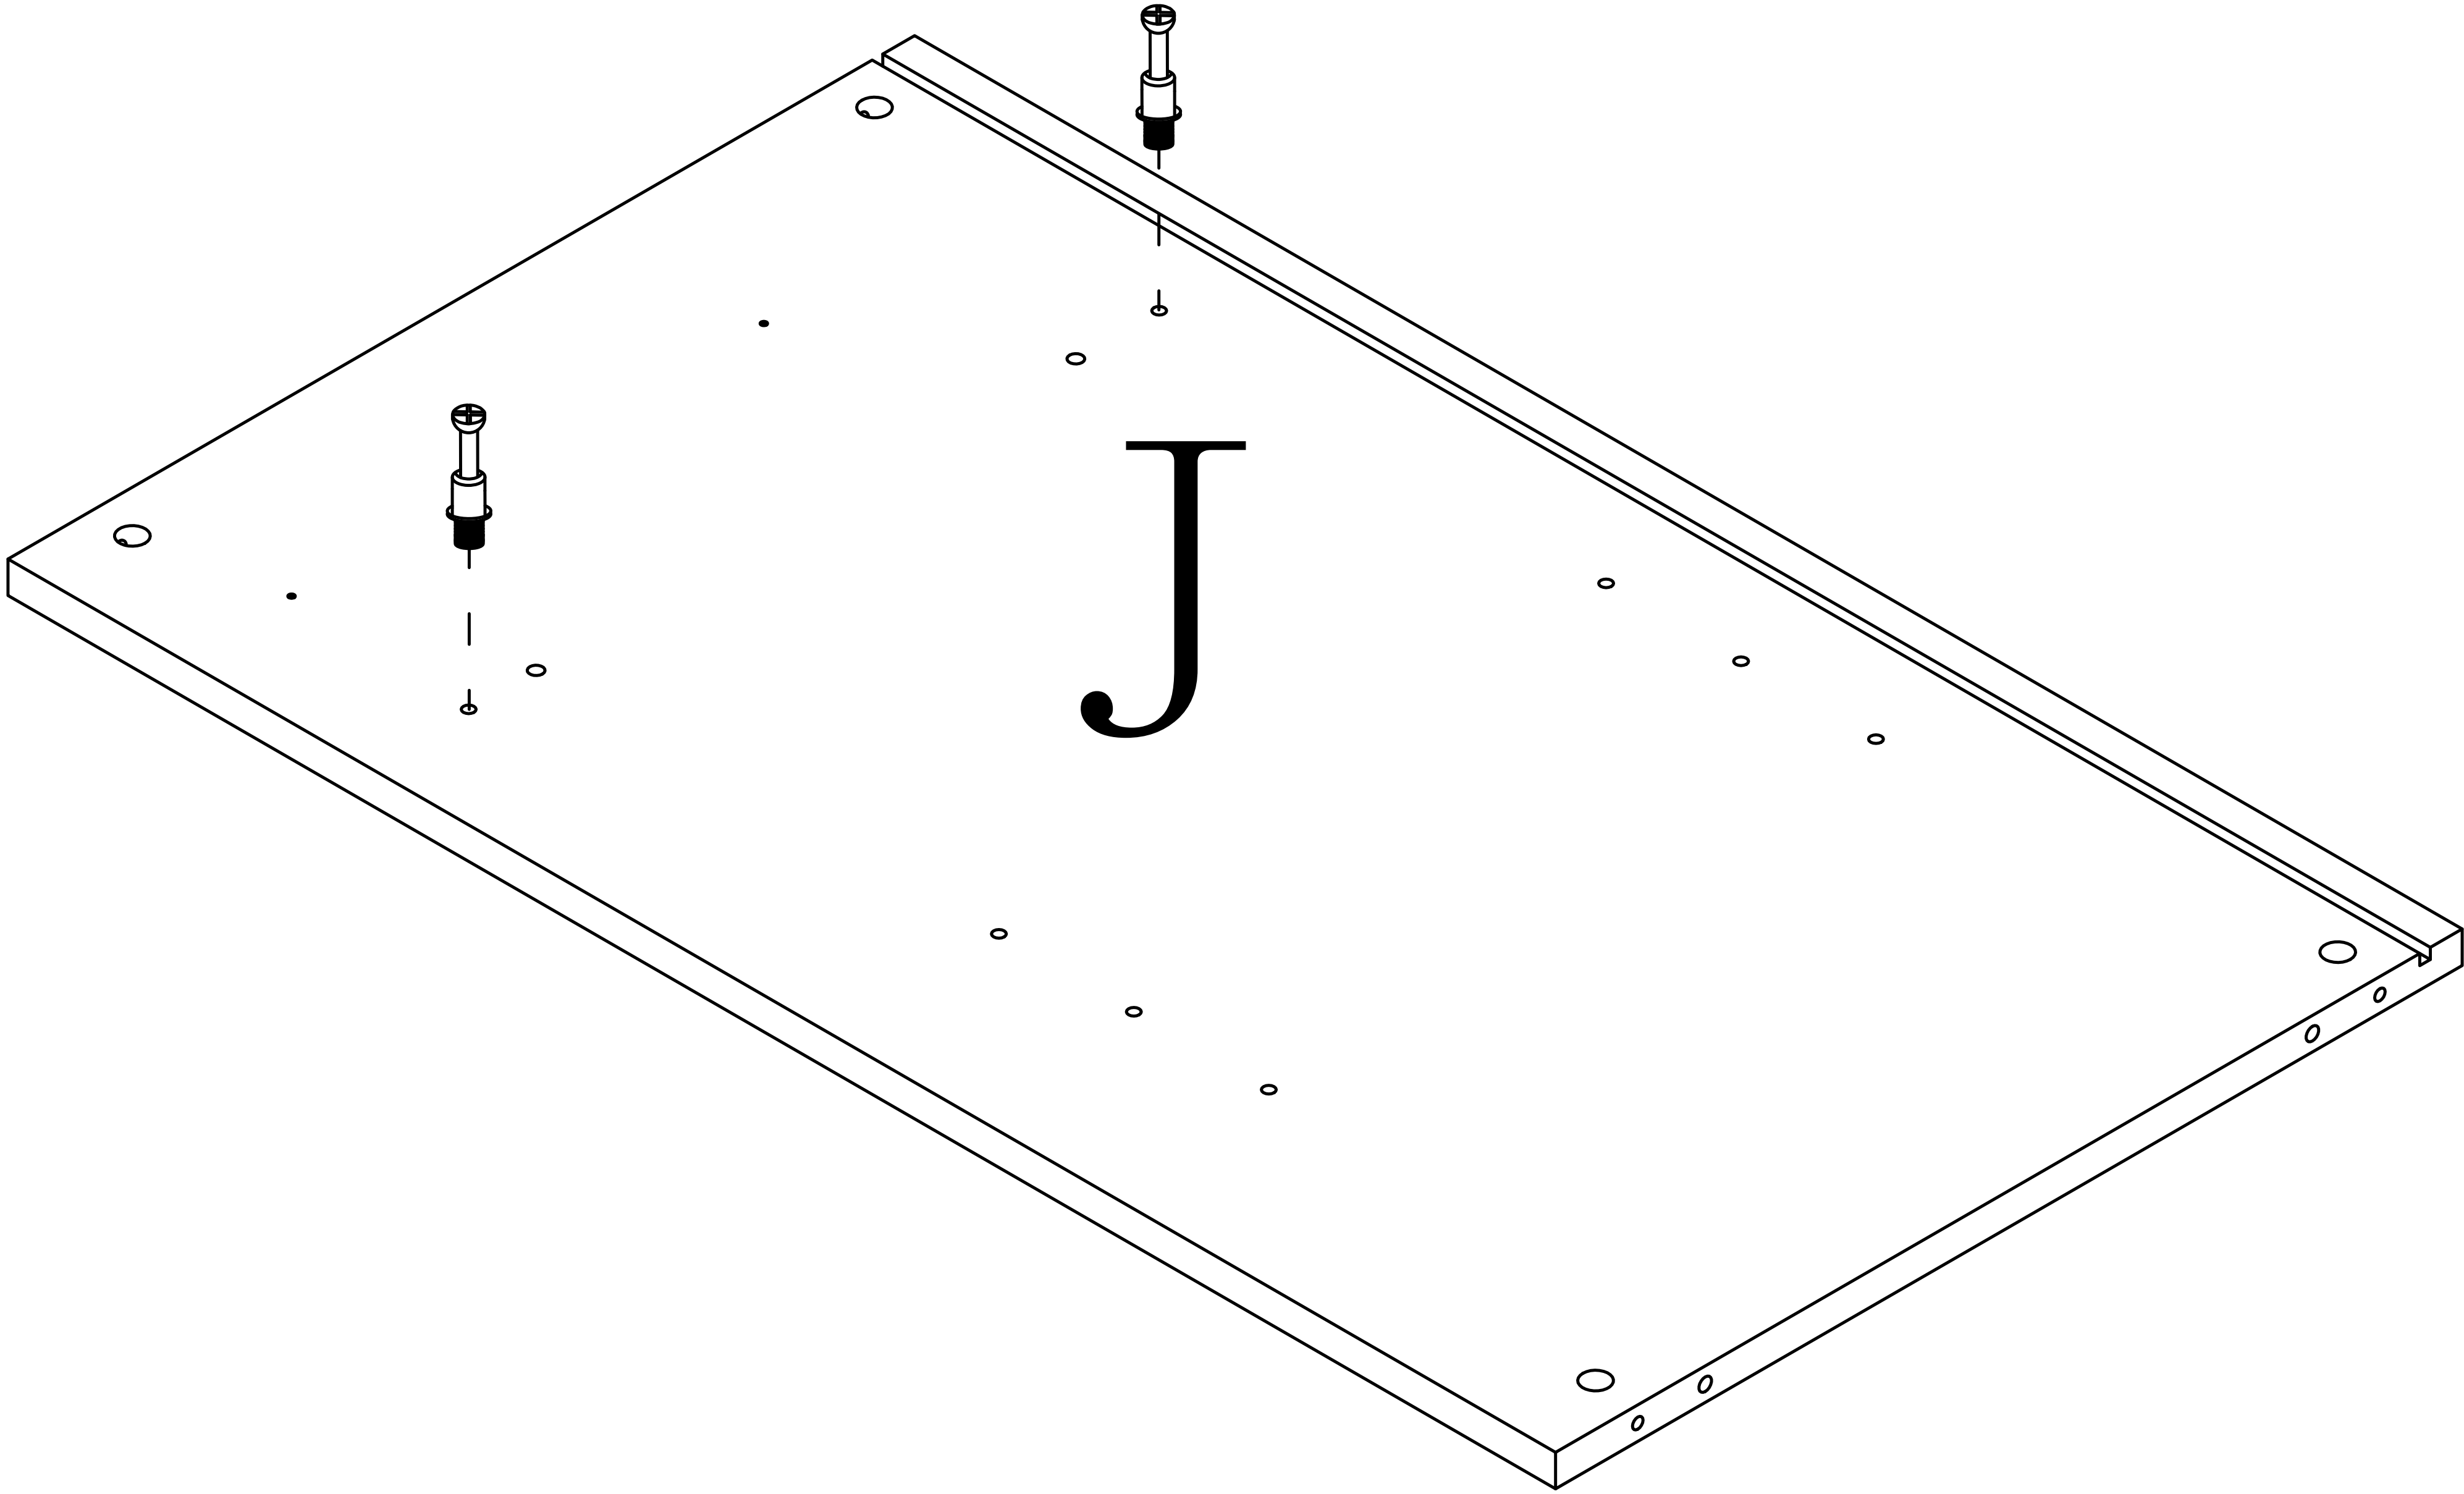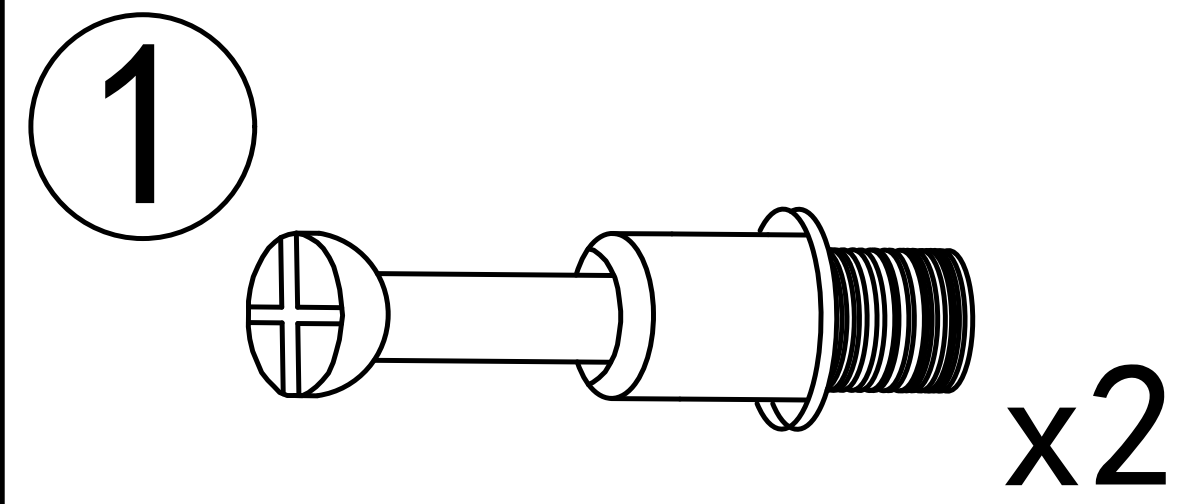



Step 22

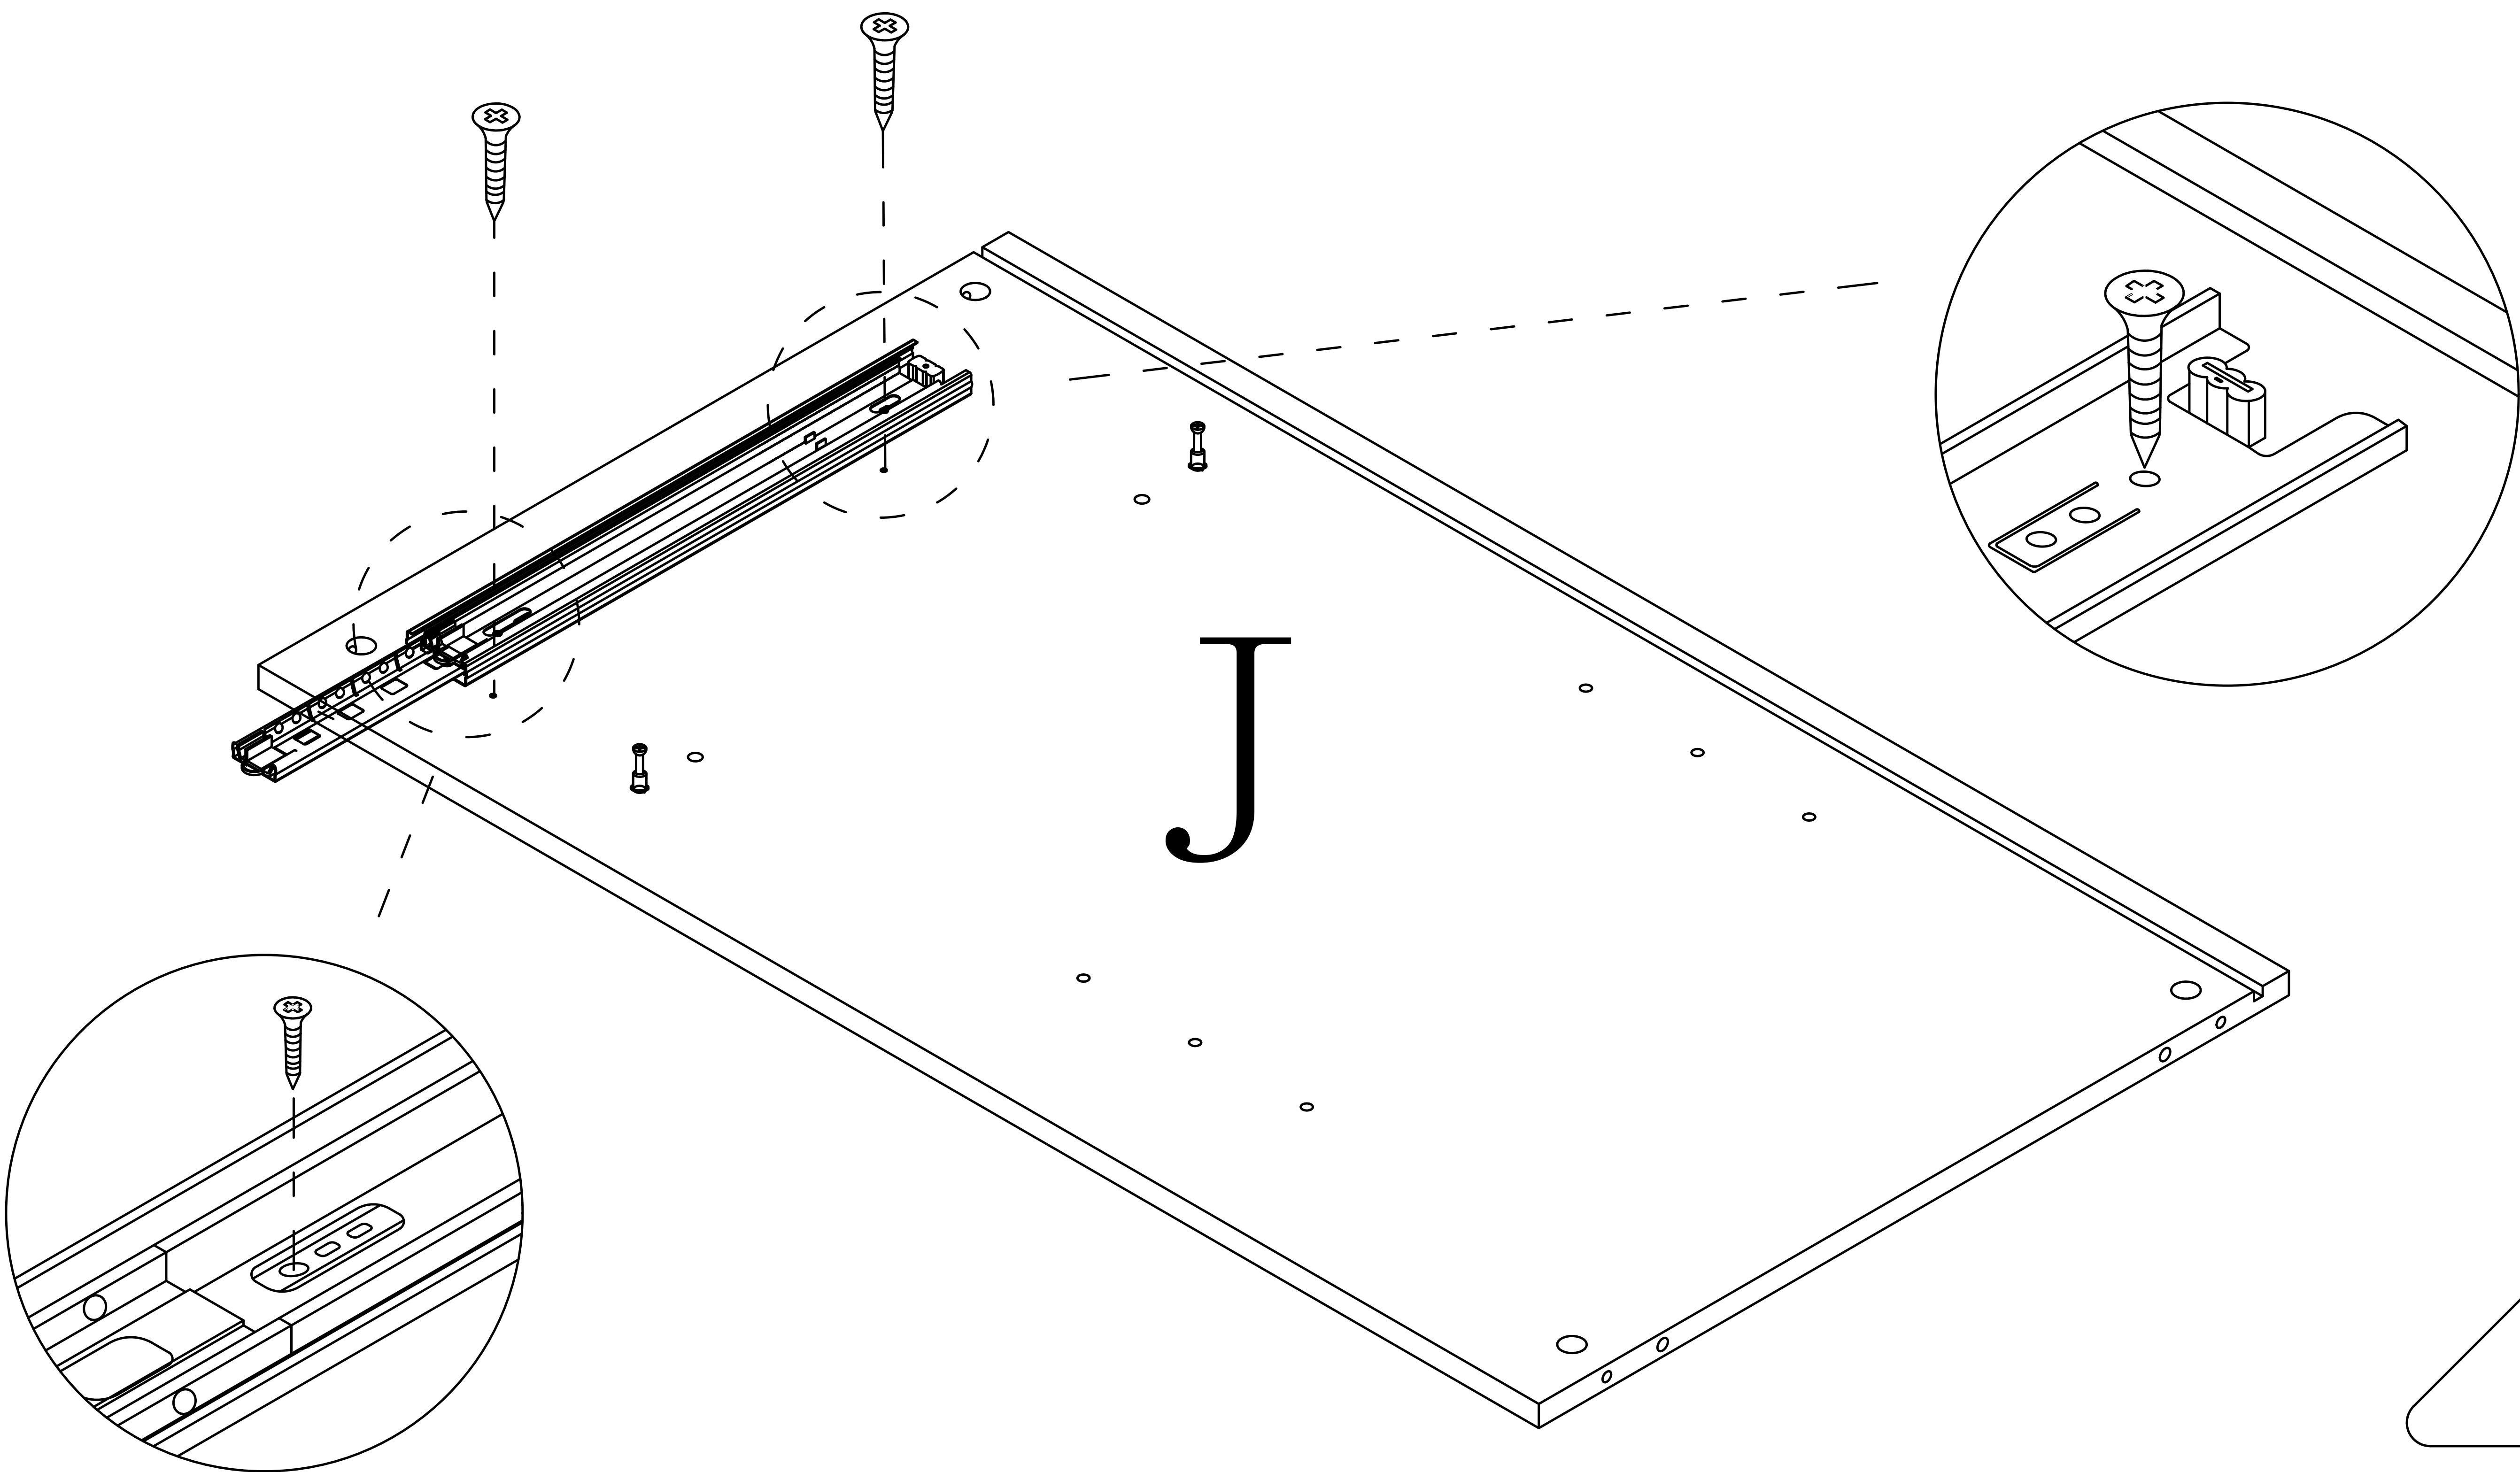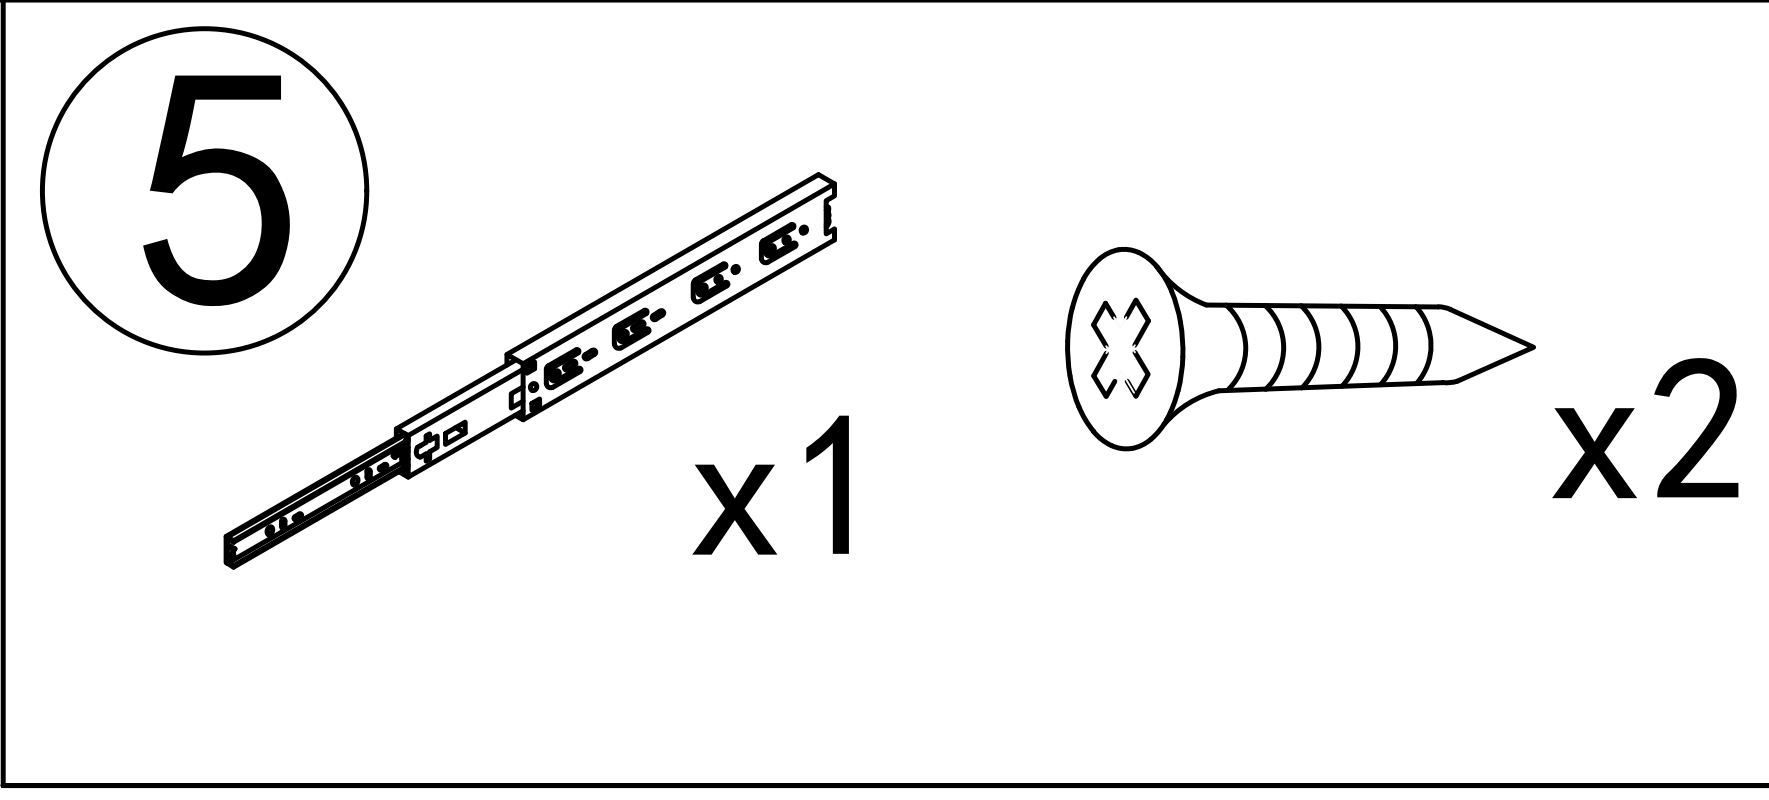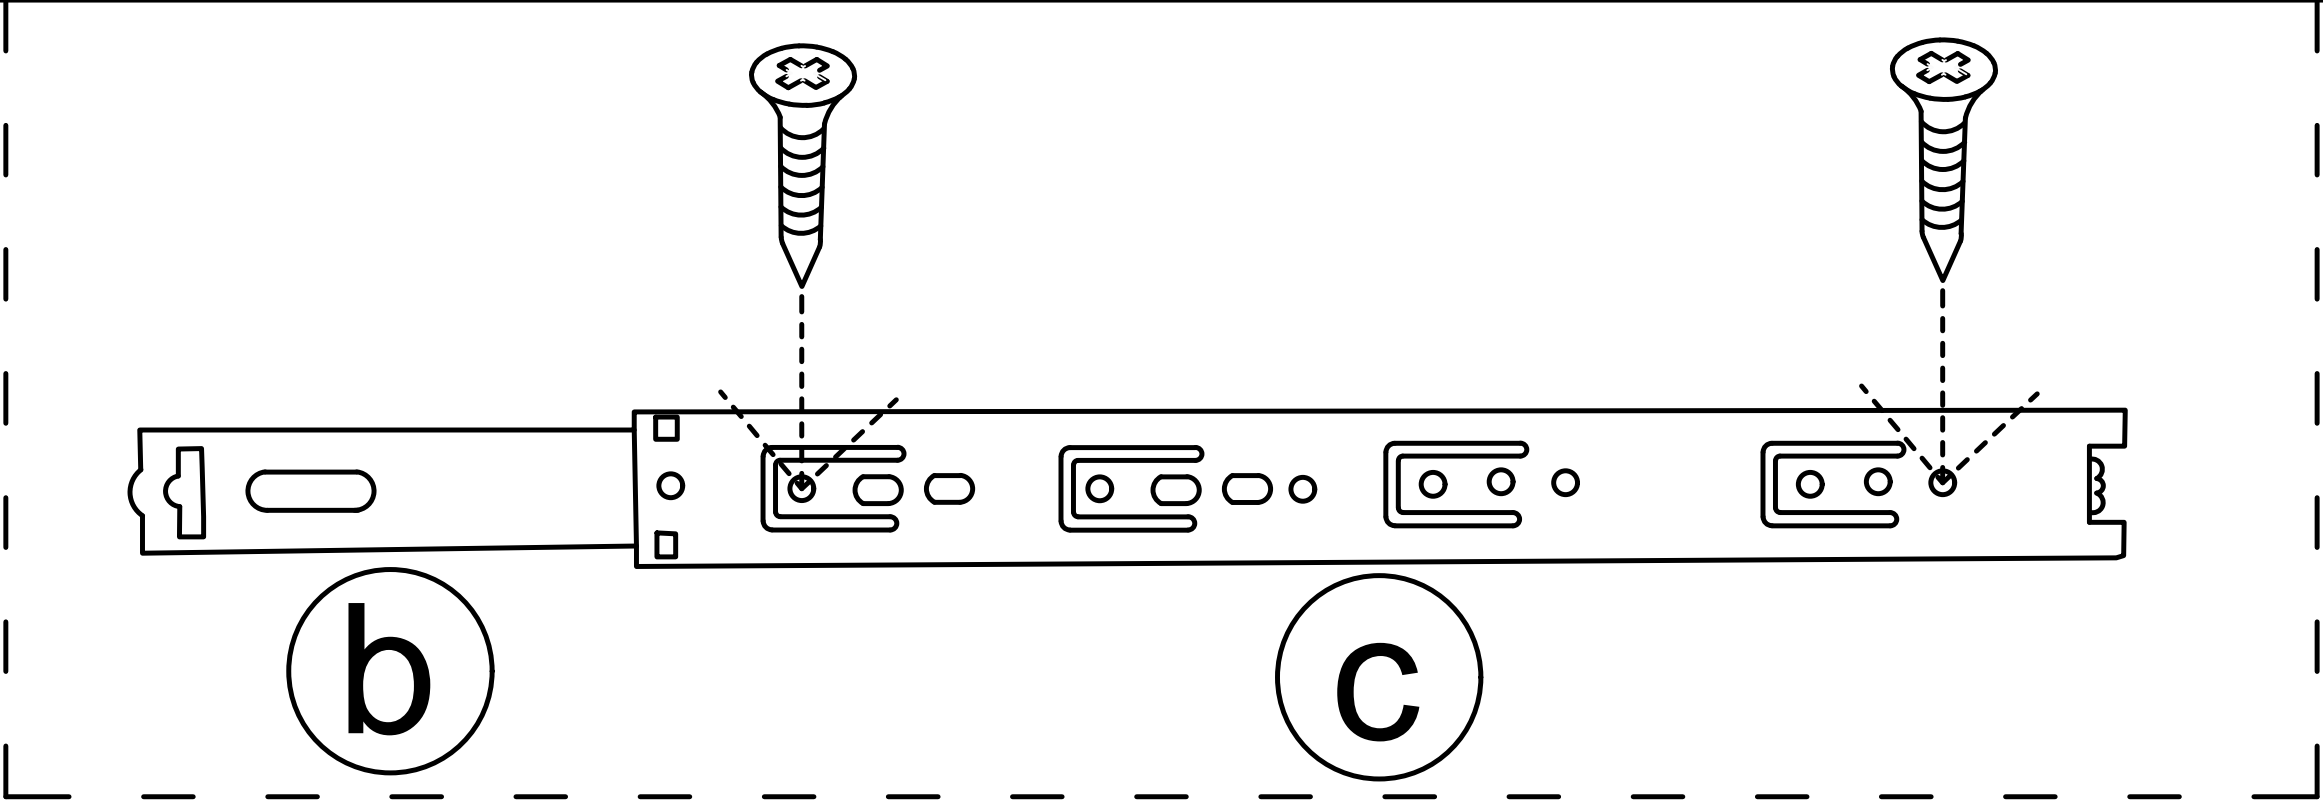

Step 23


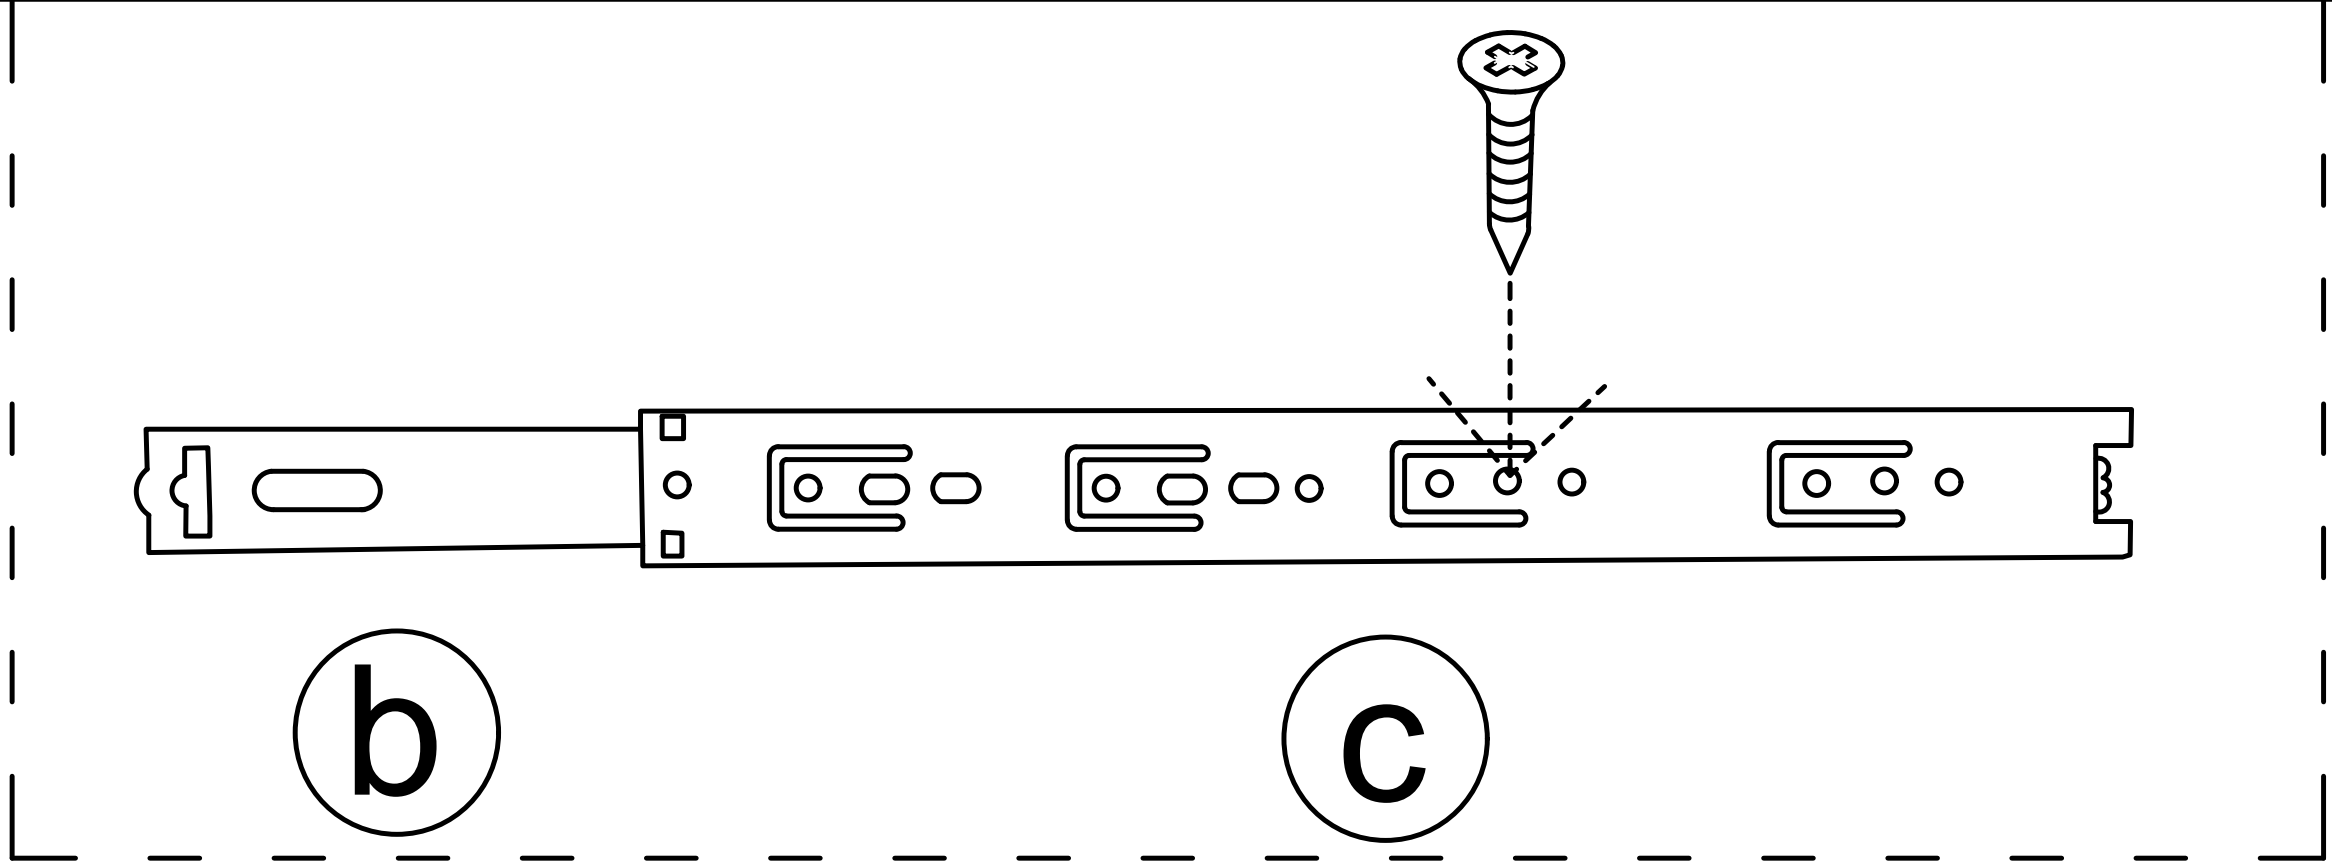


5

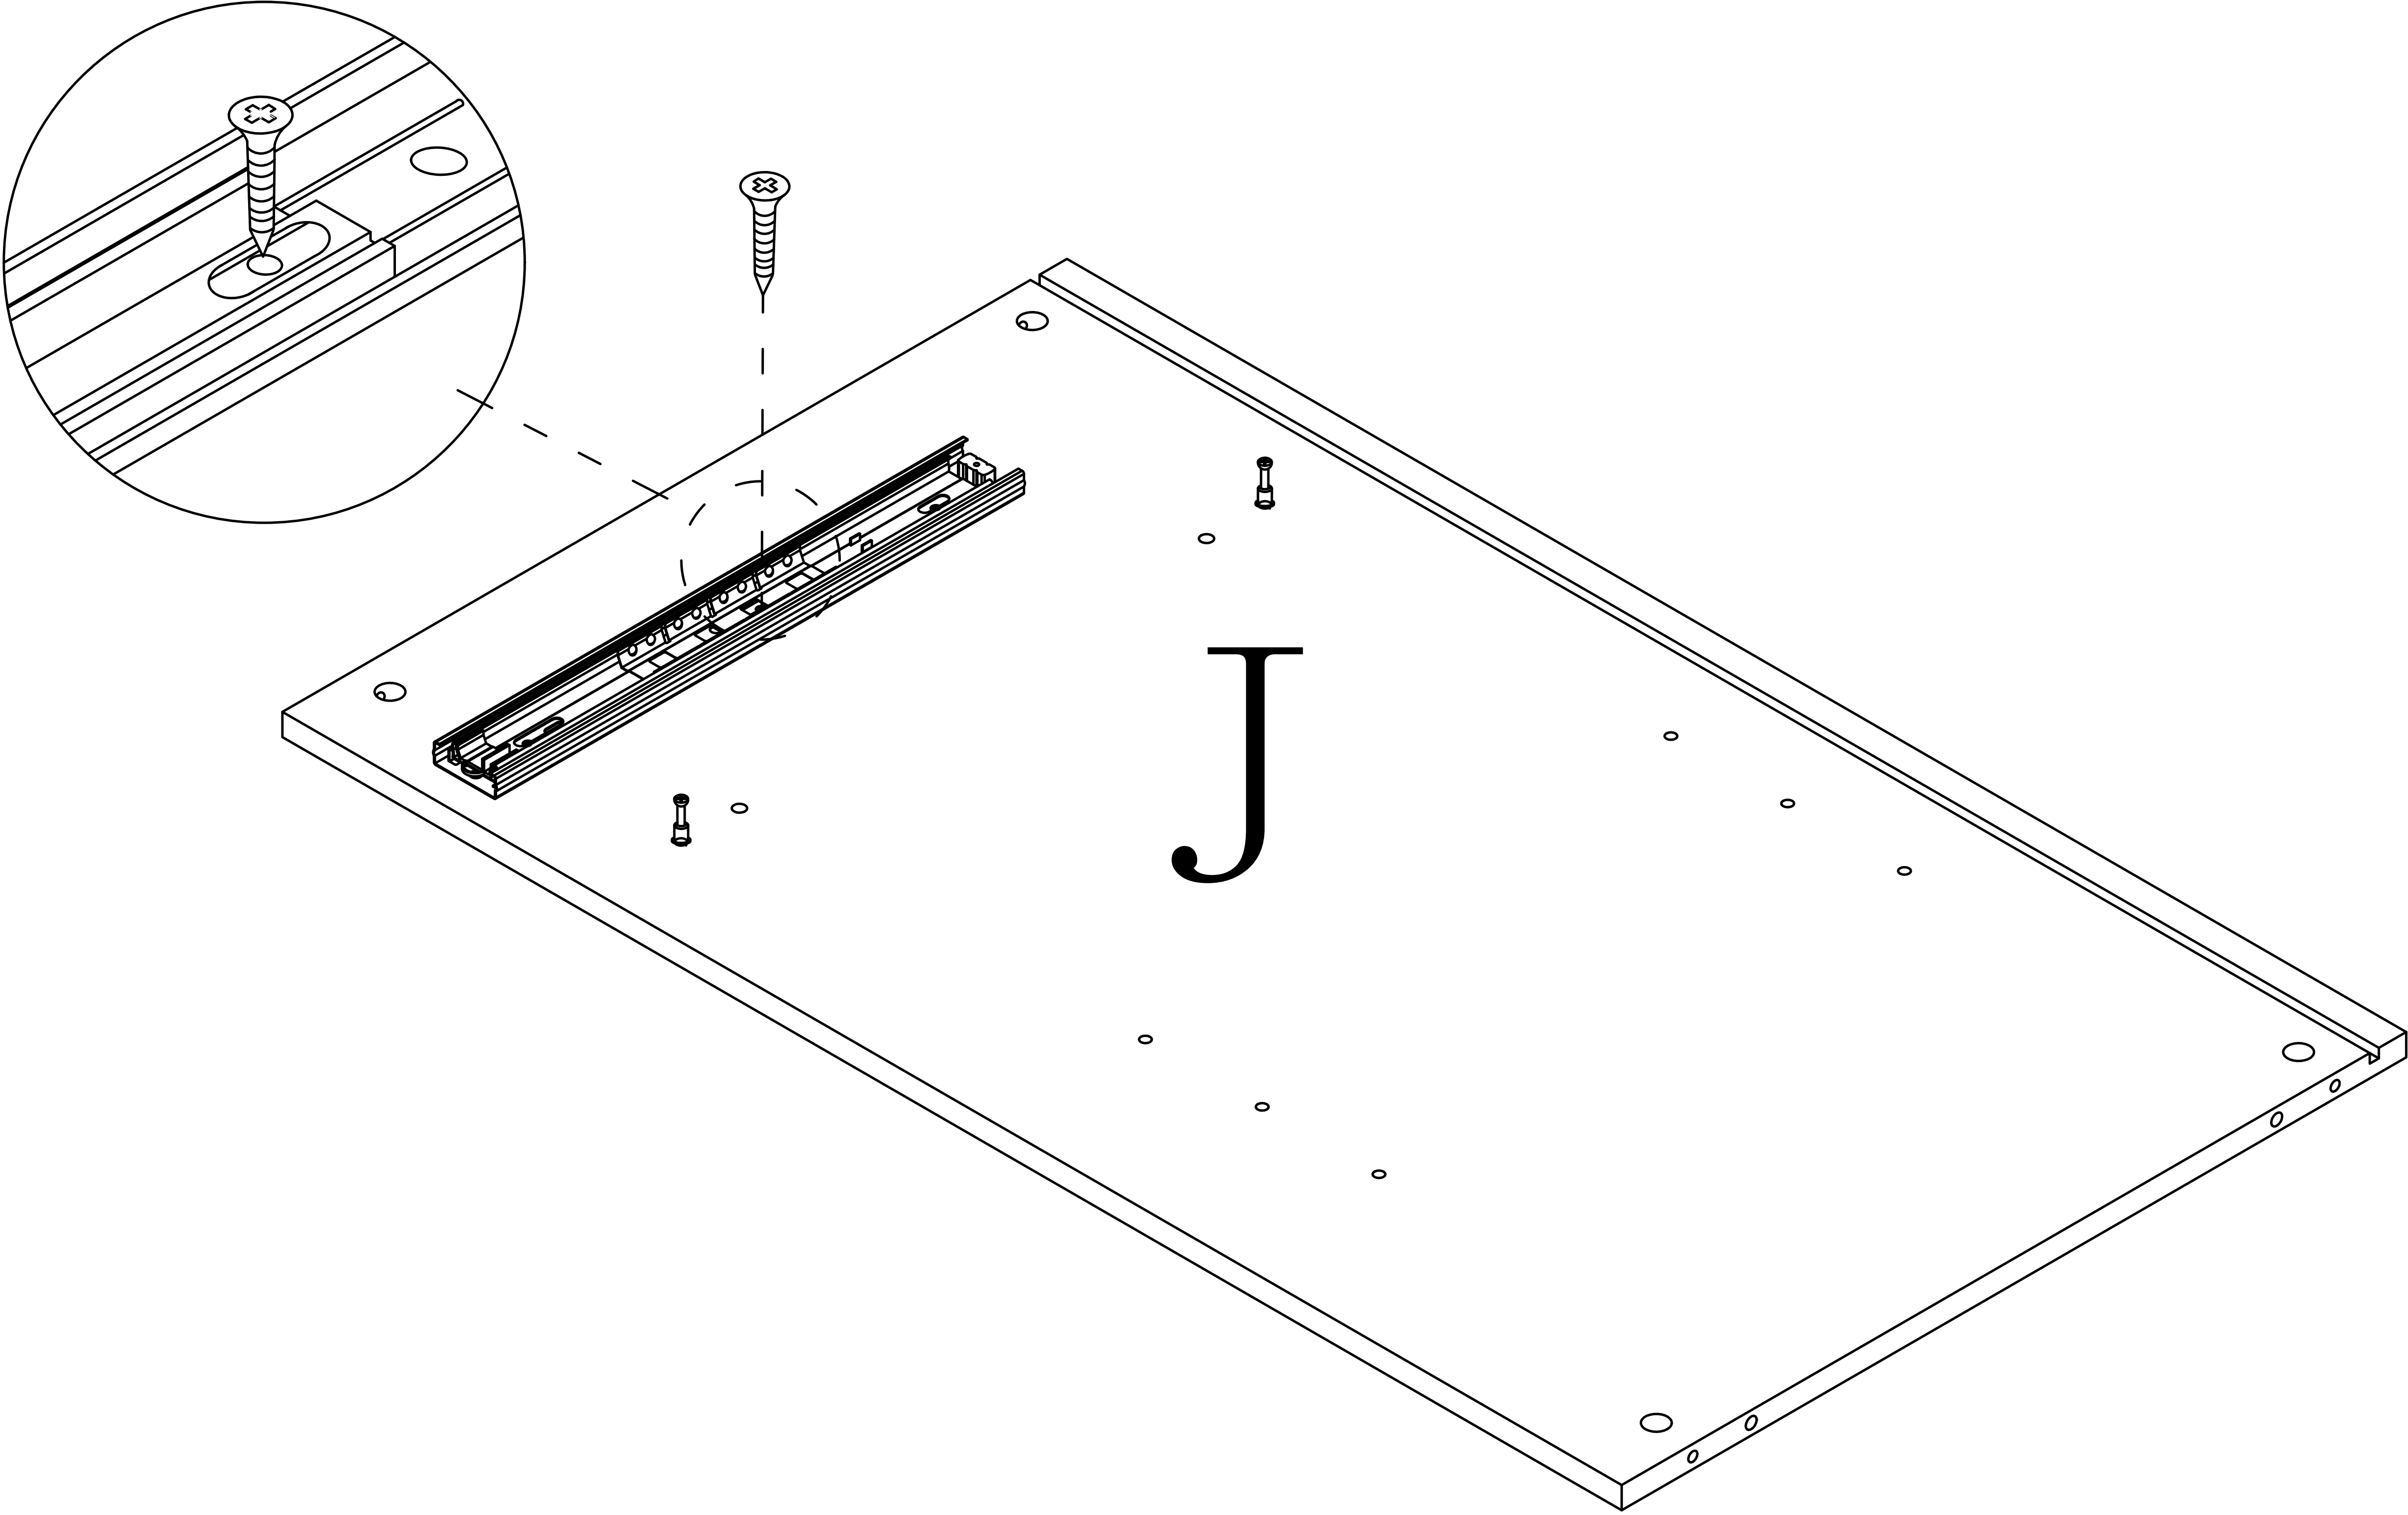
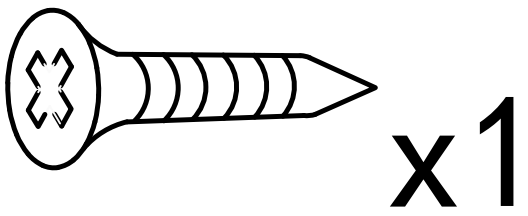


Step 24



2

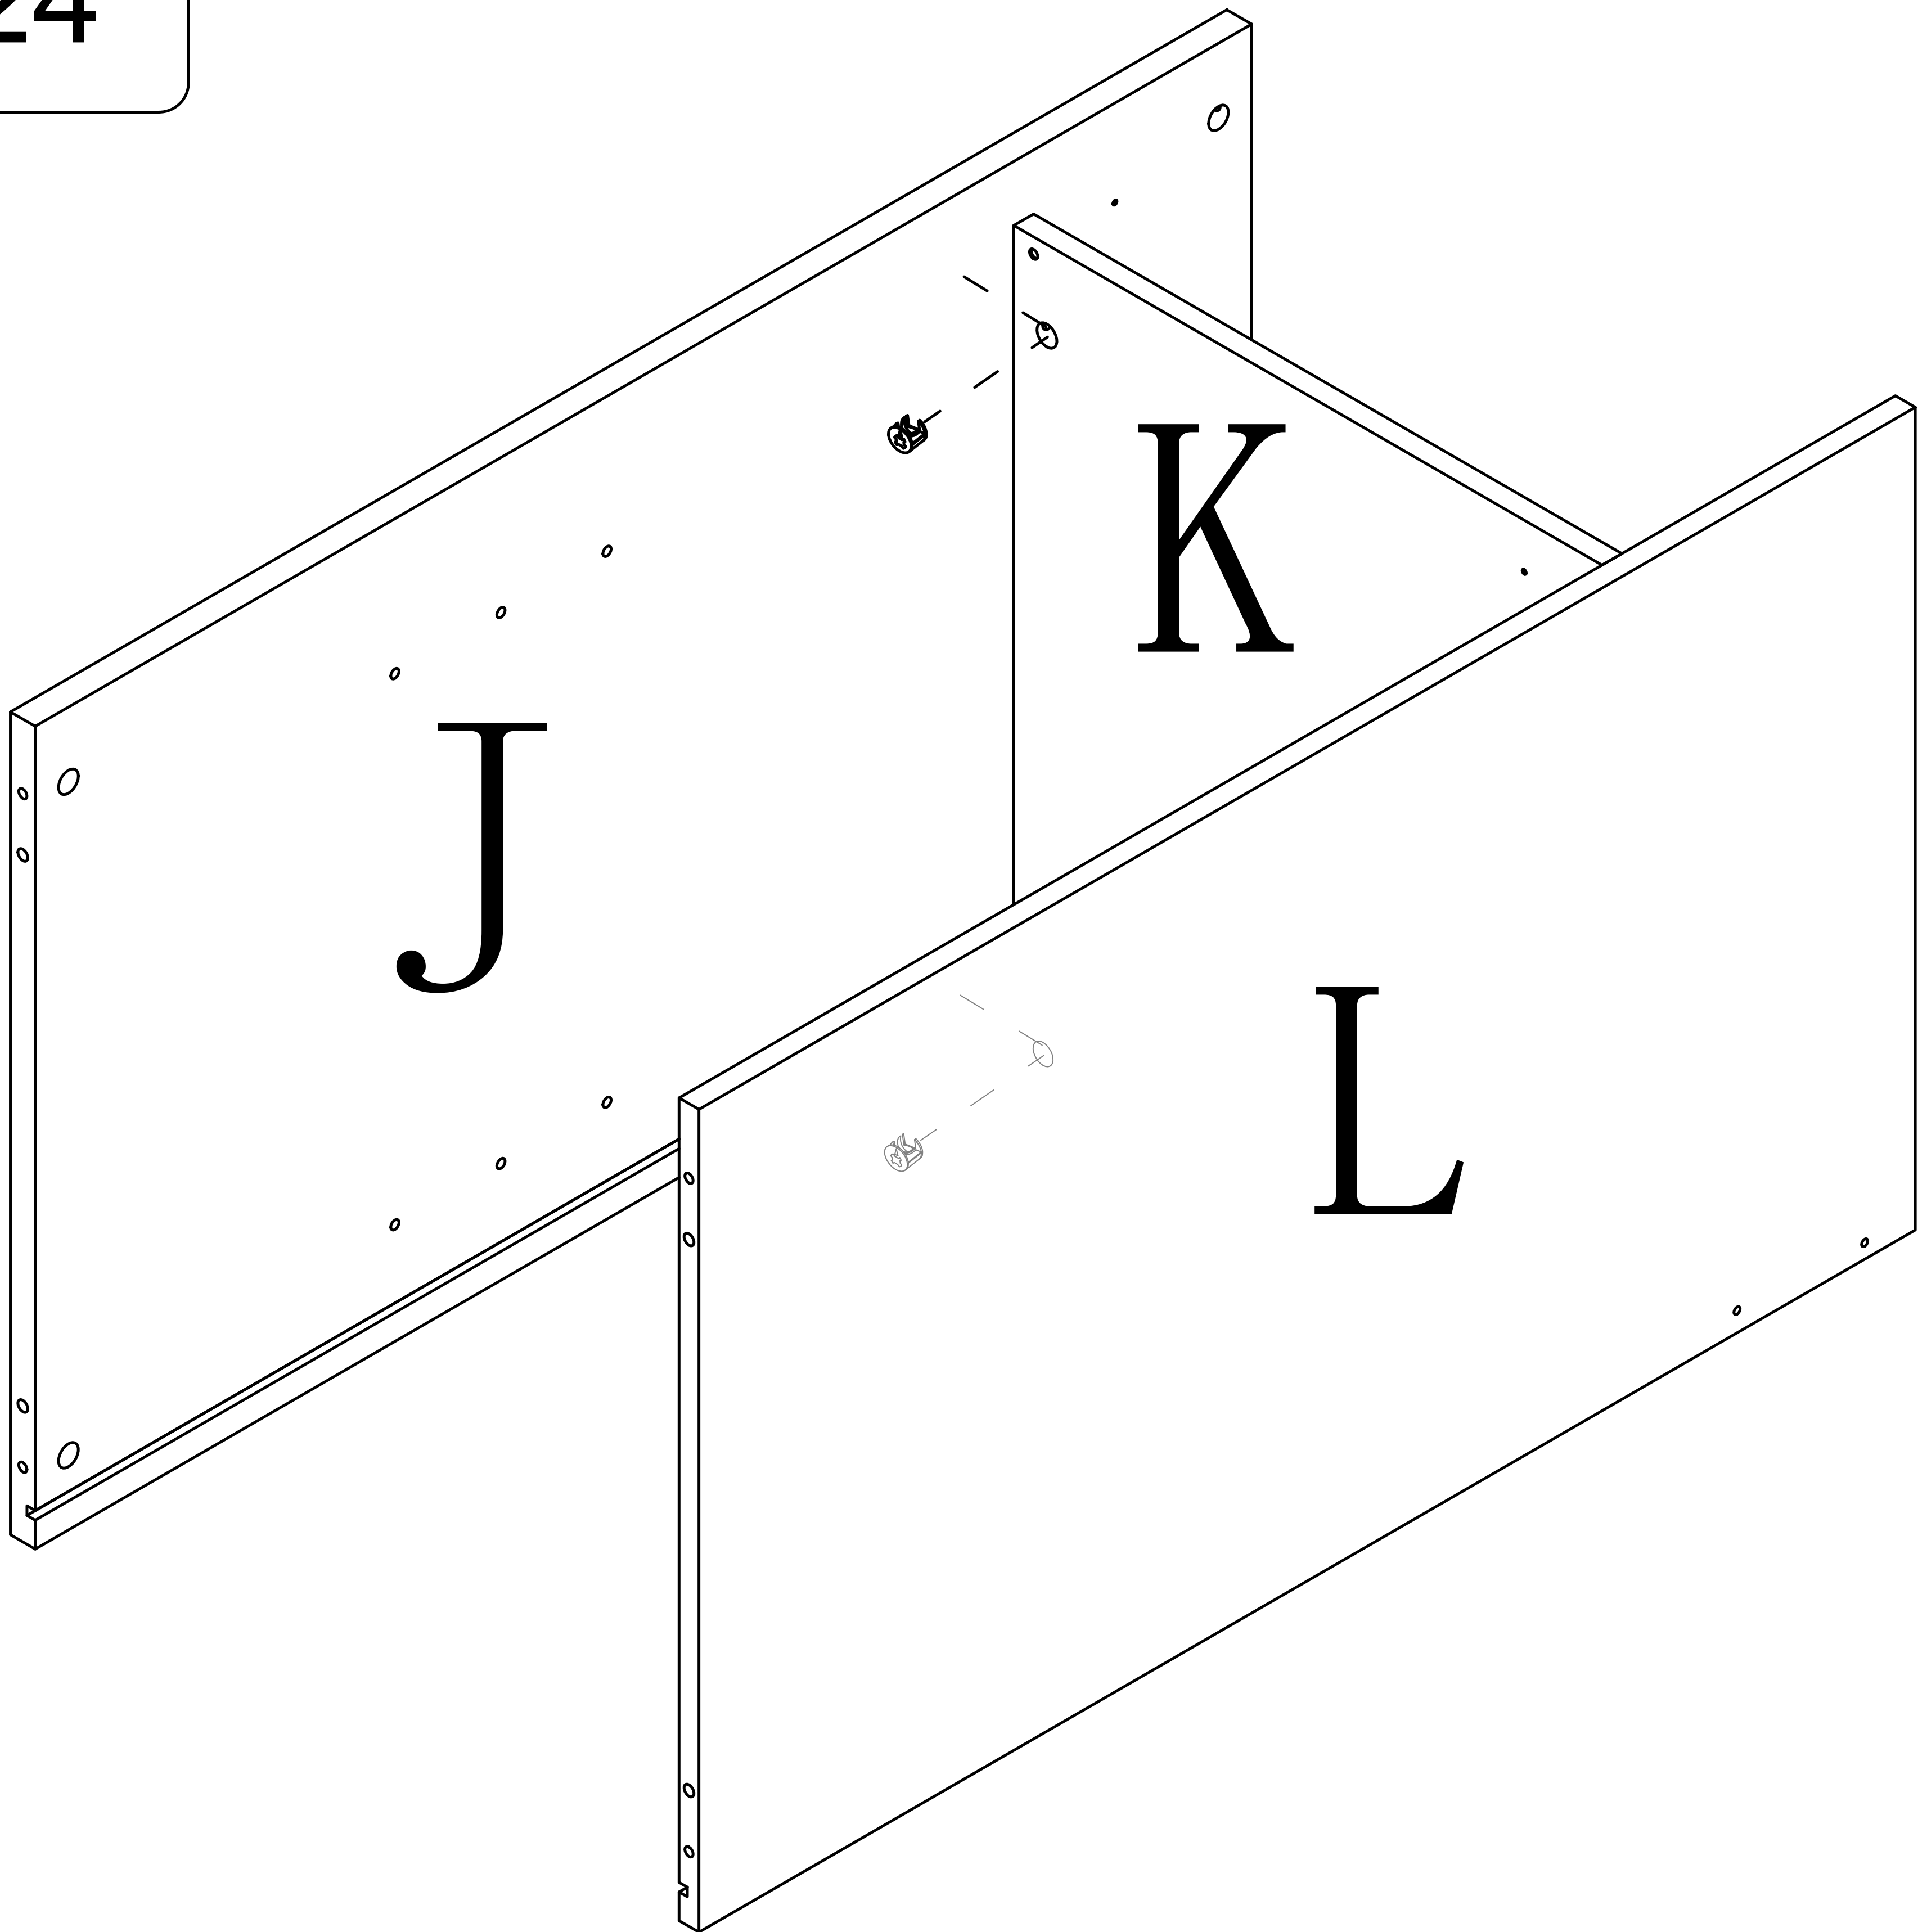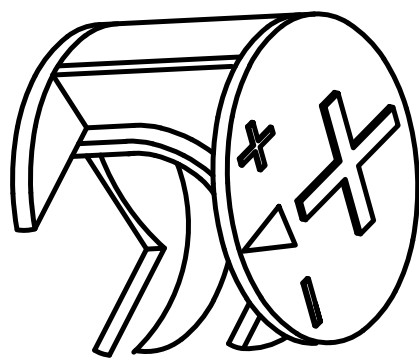




Step 25

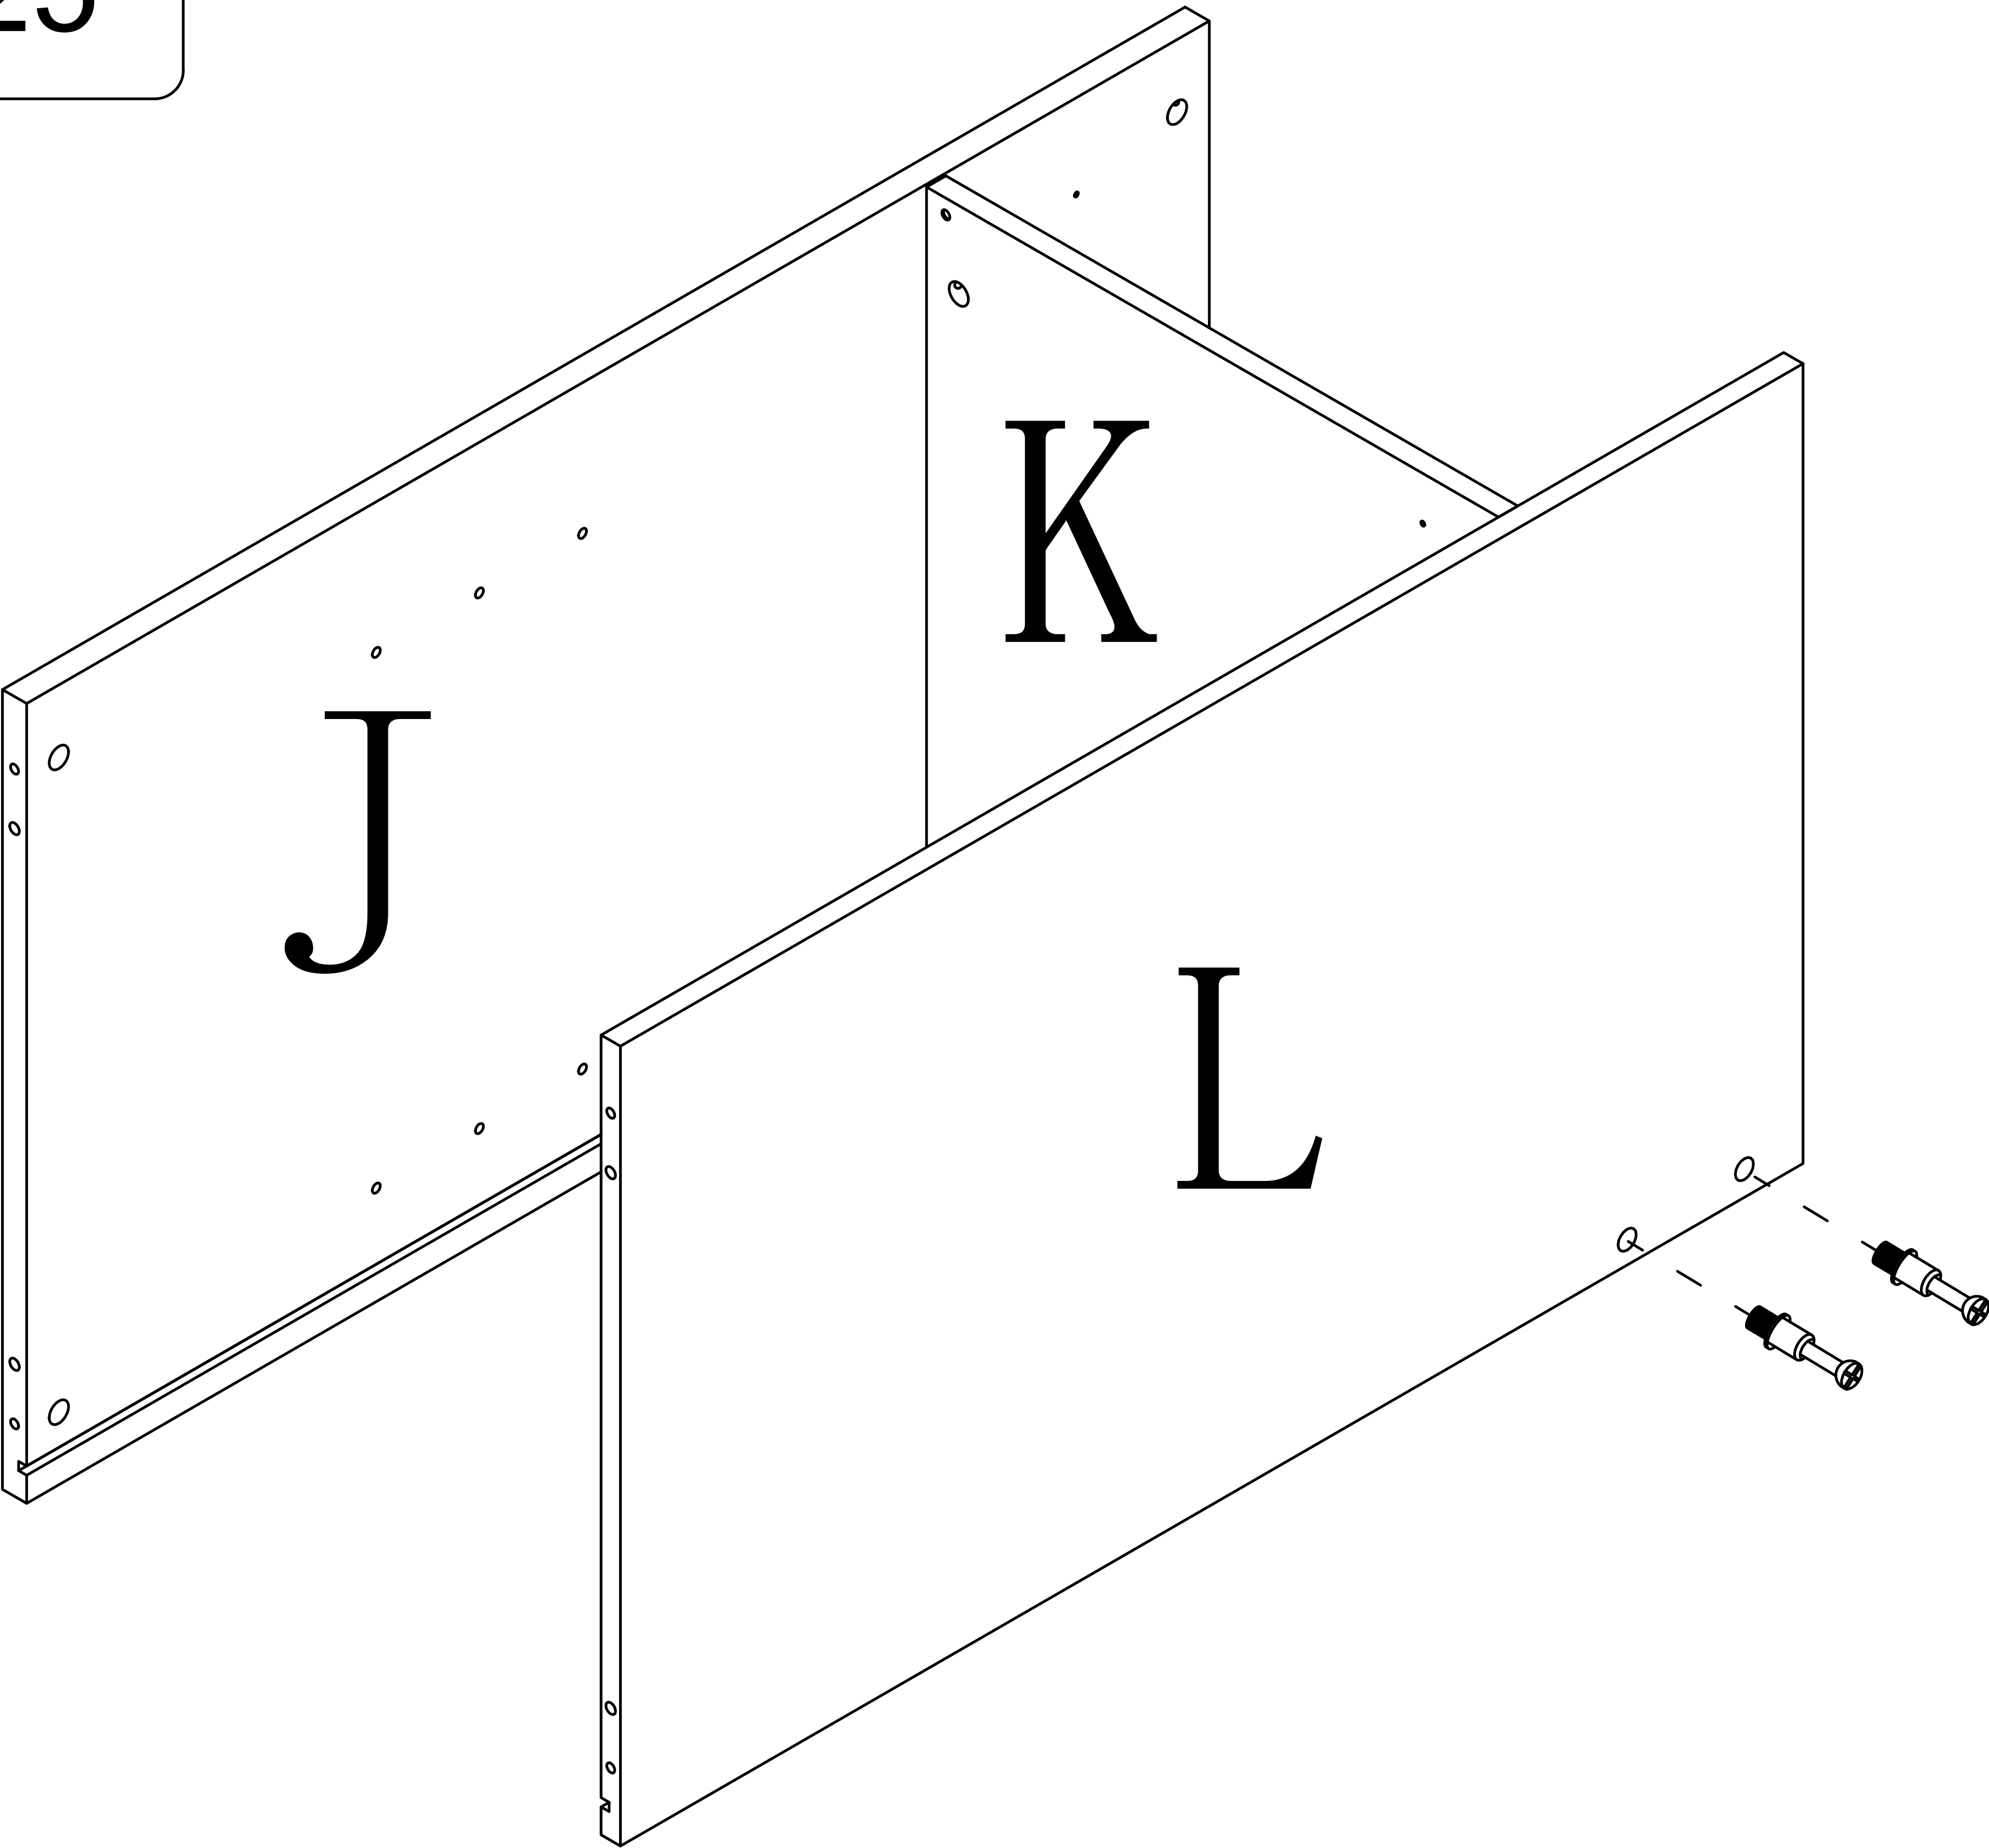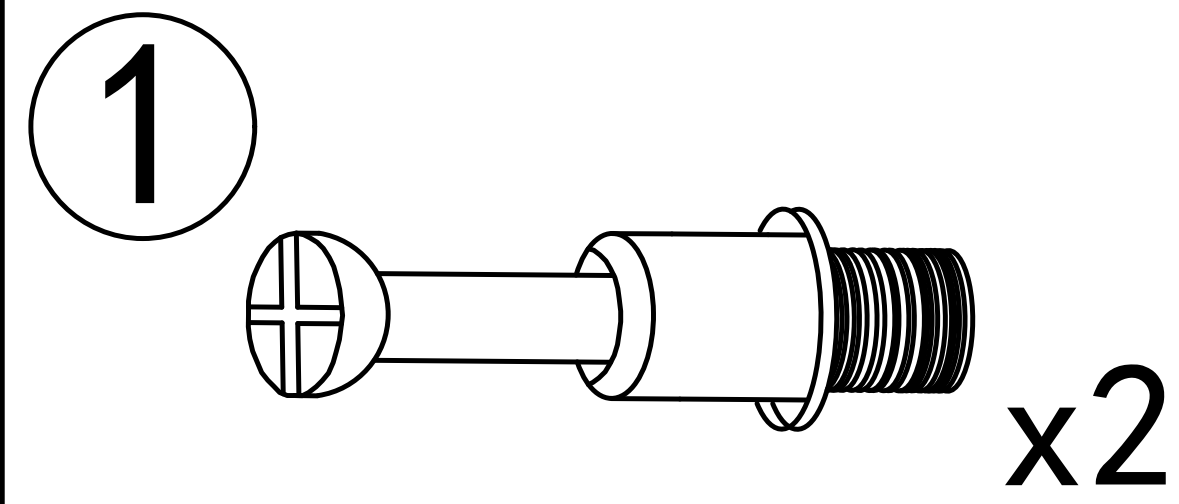




Step 26

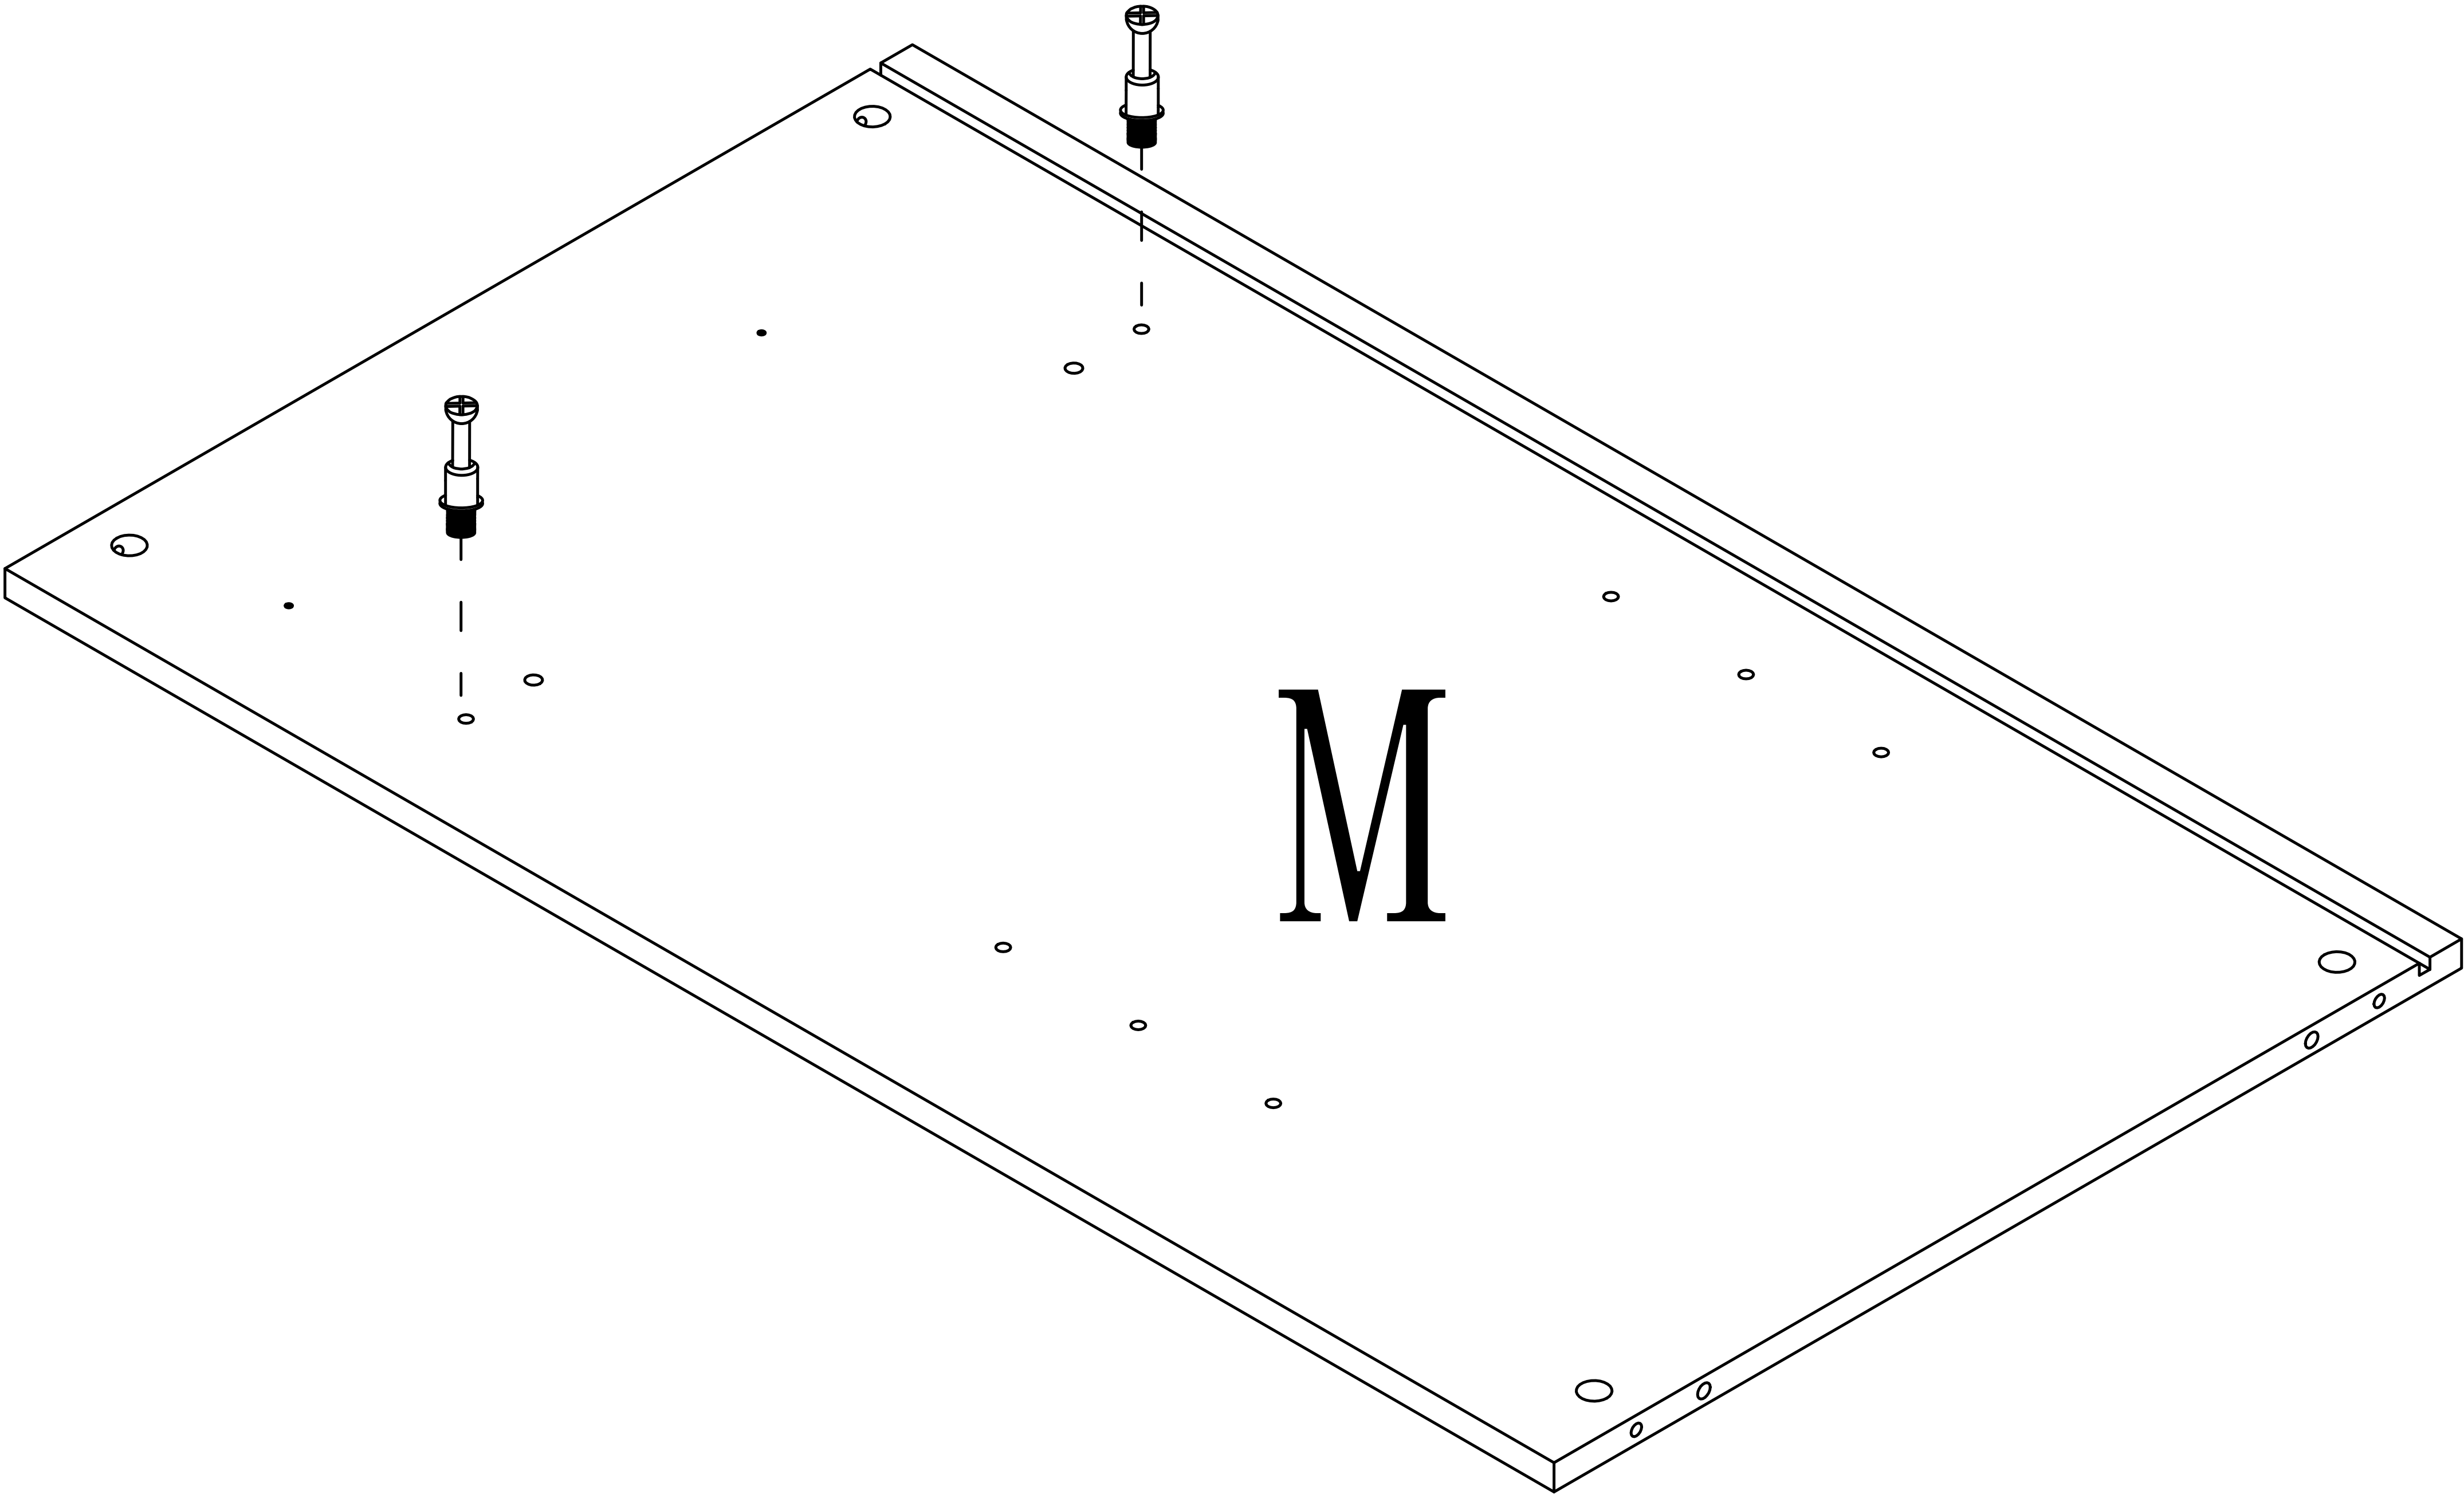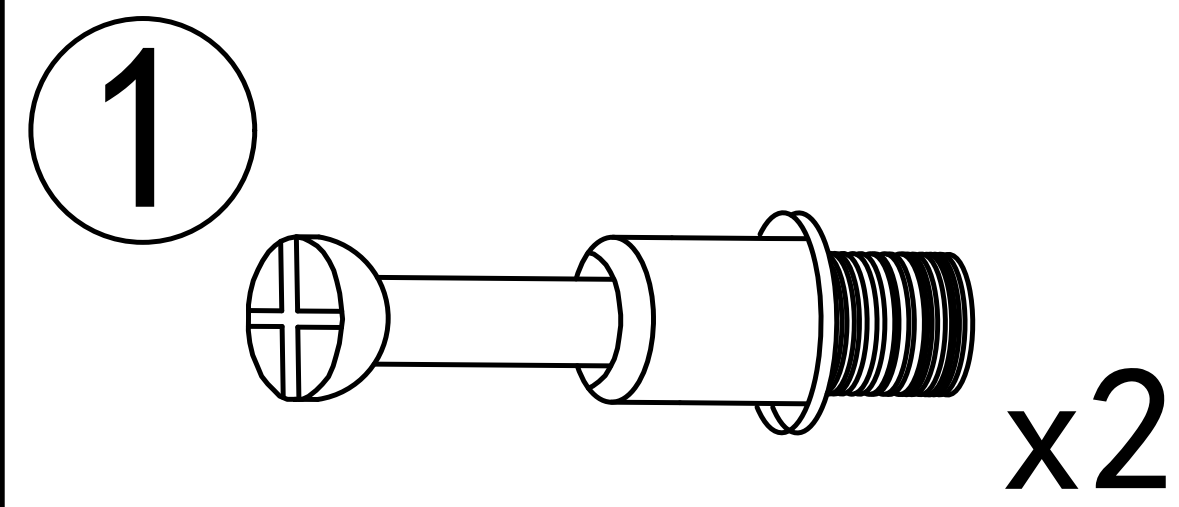



Step 27

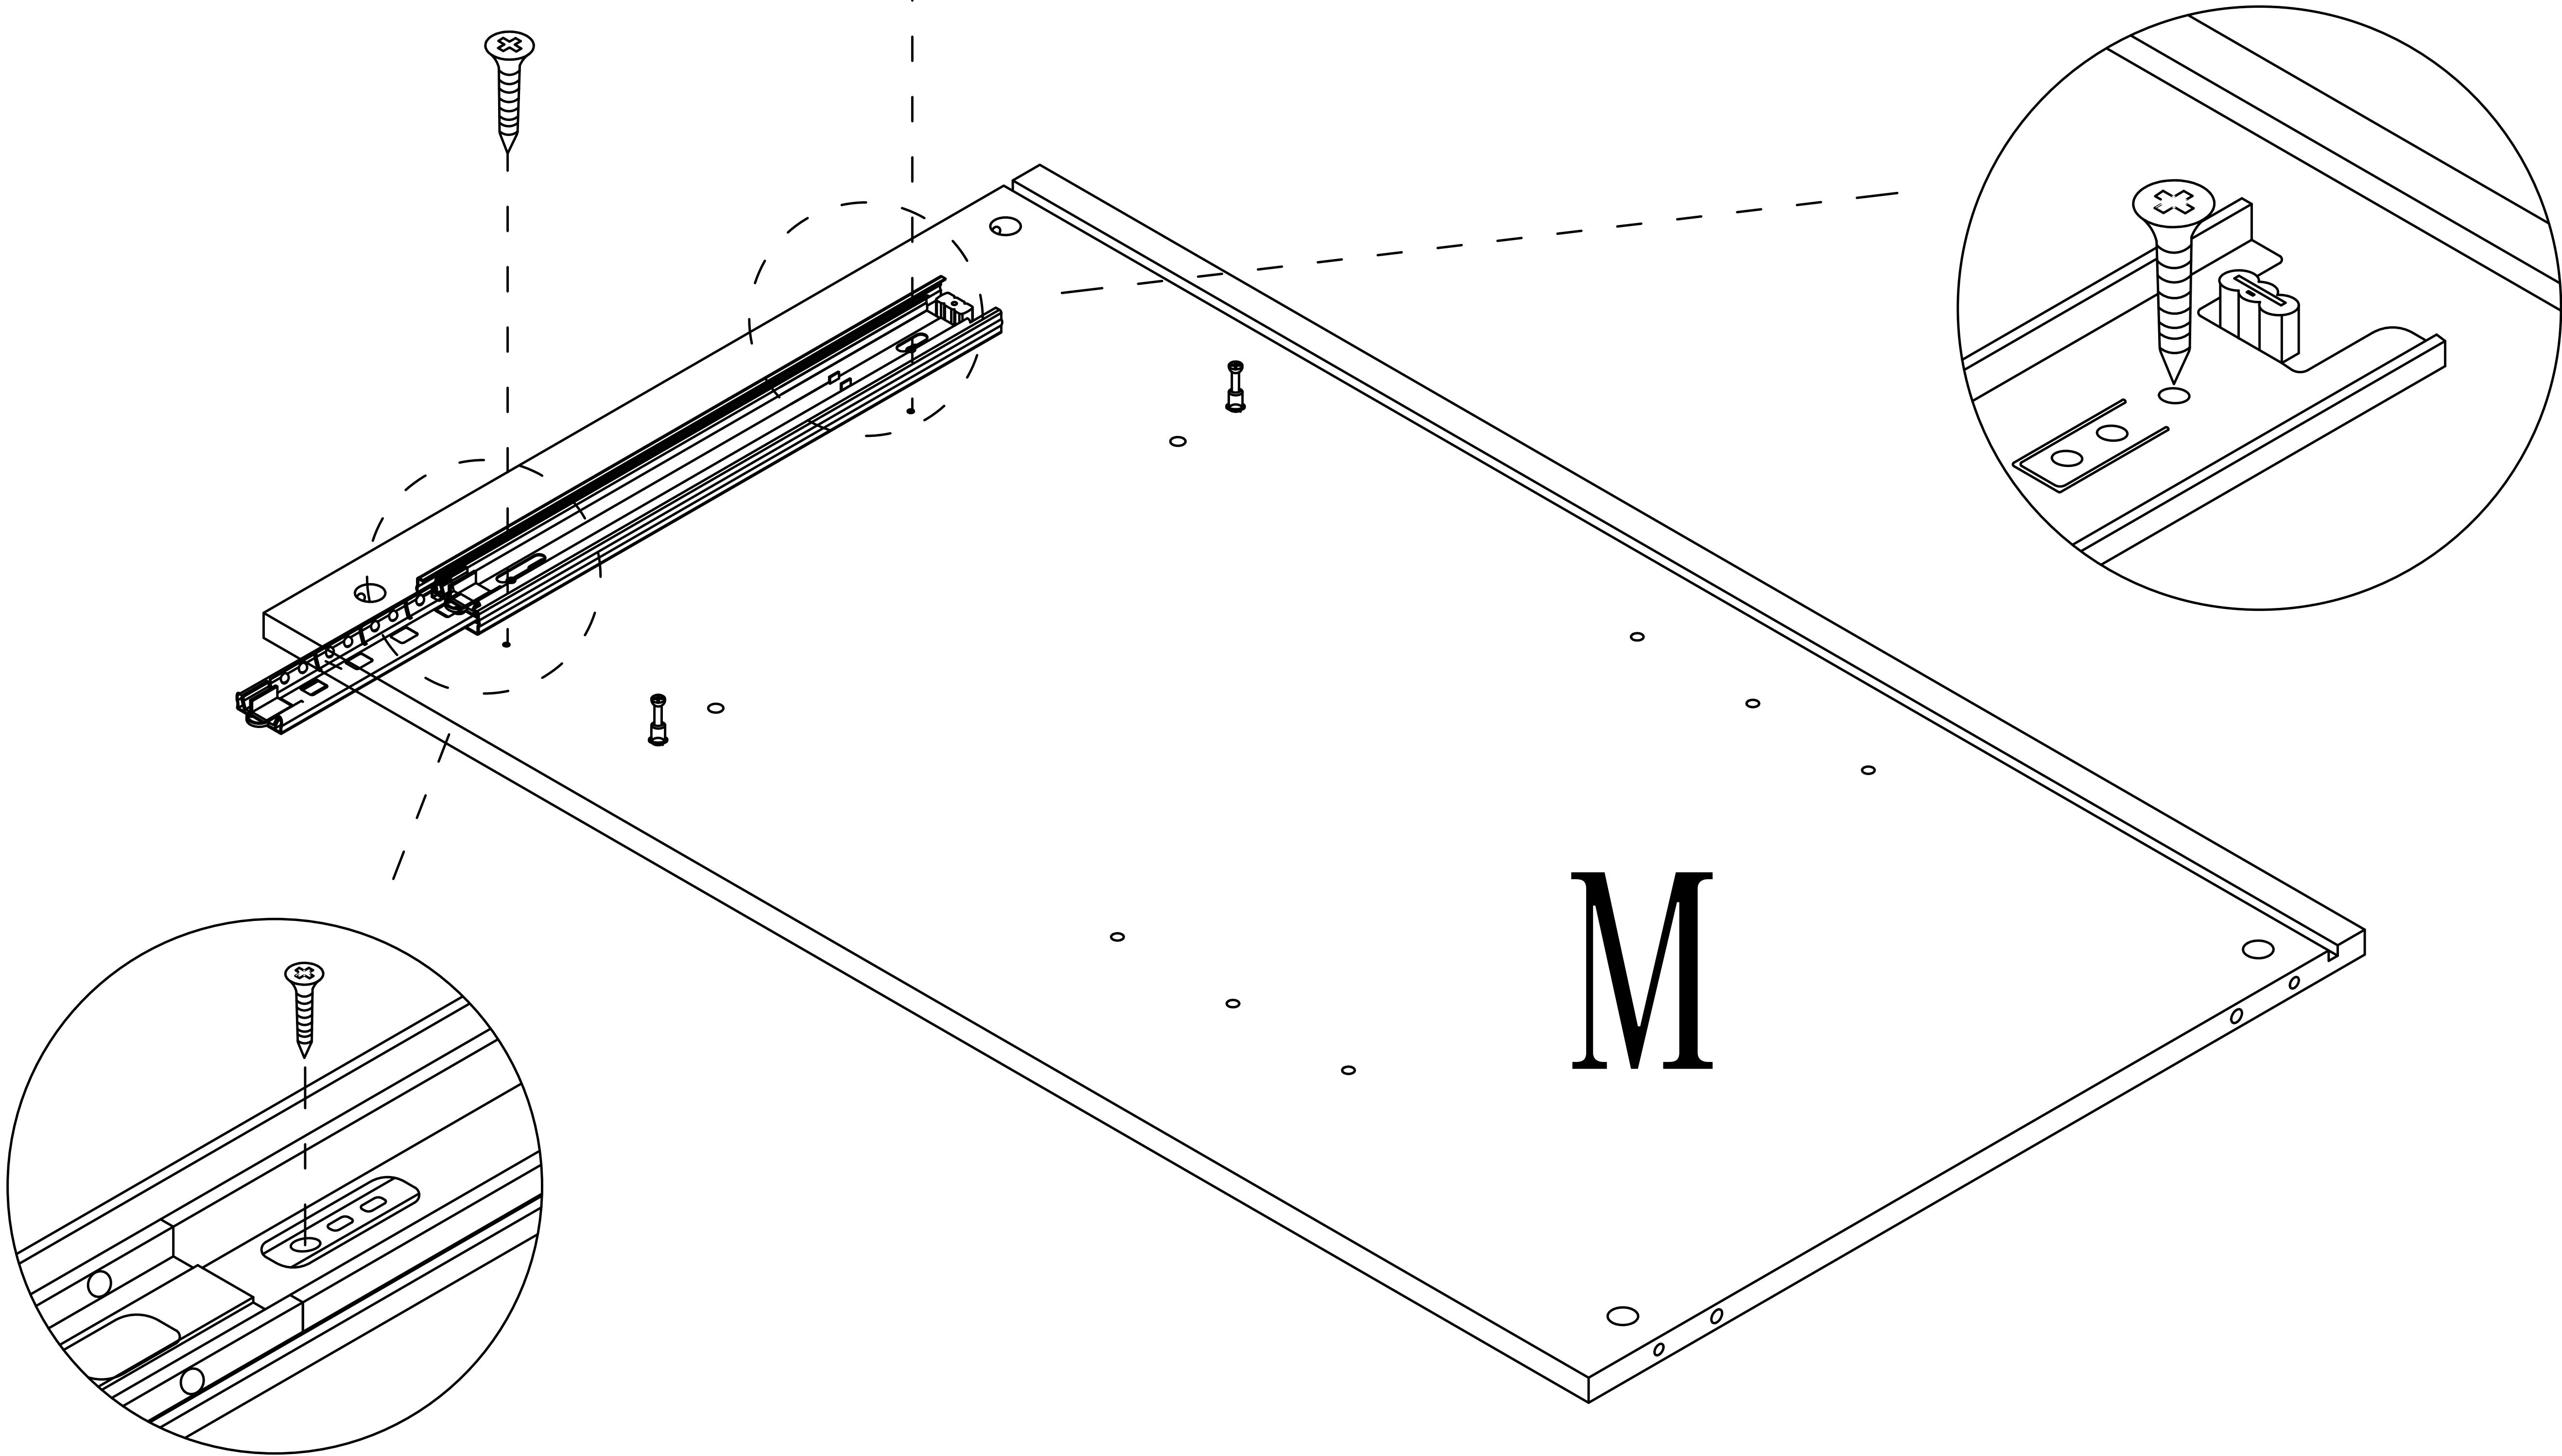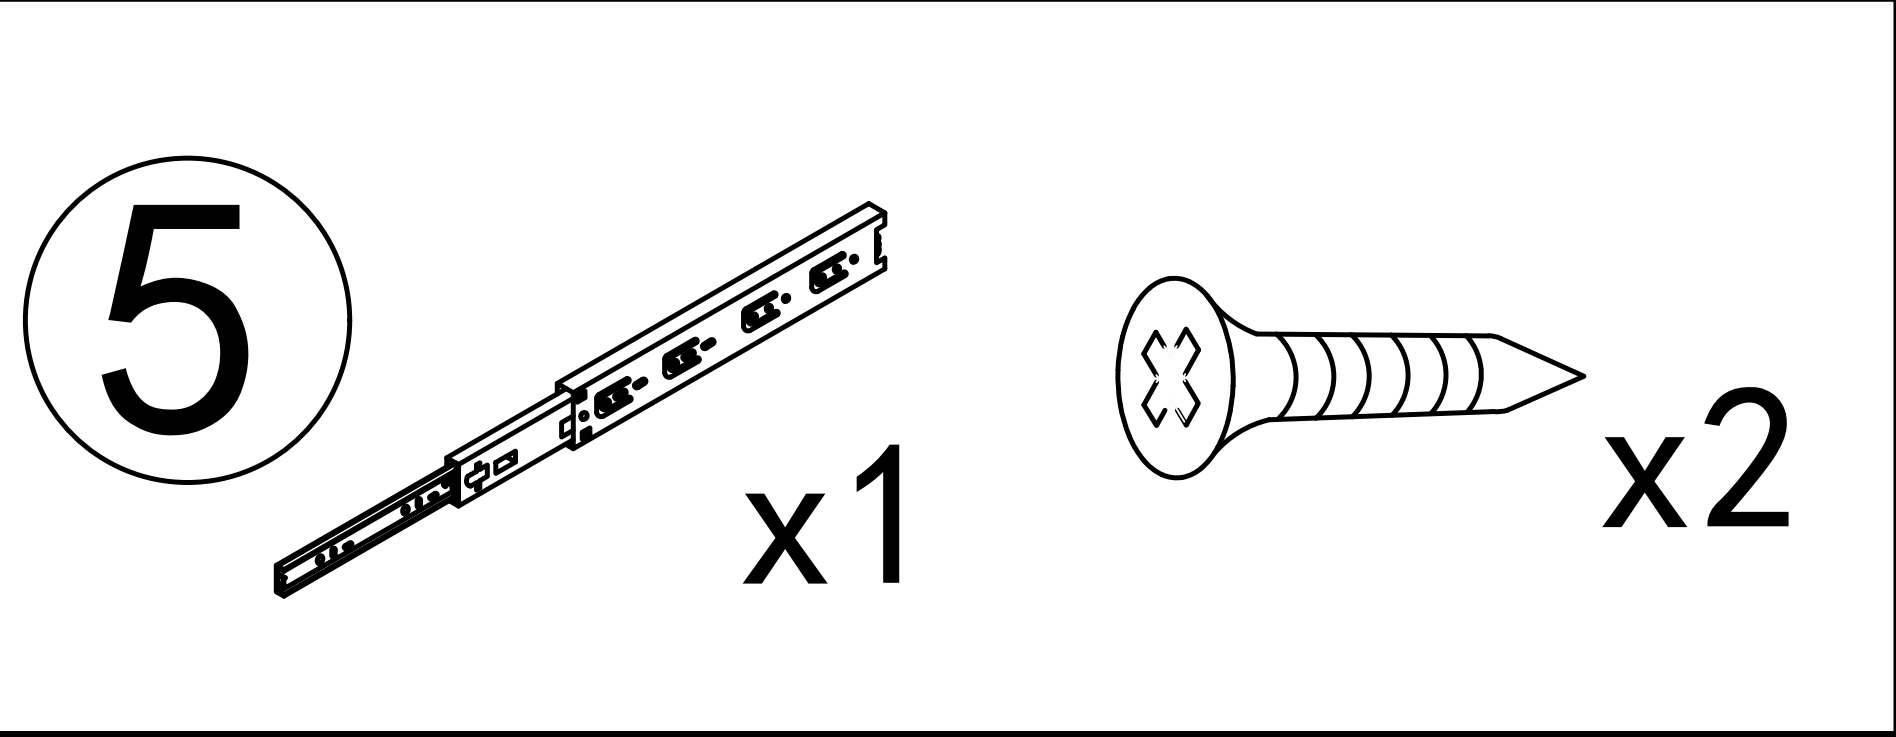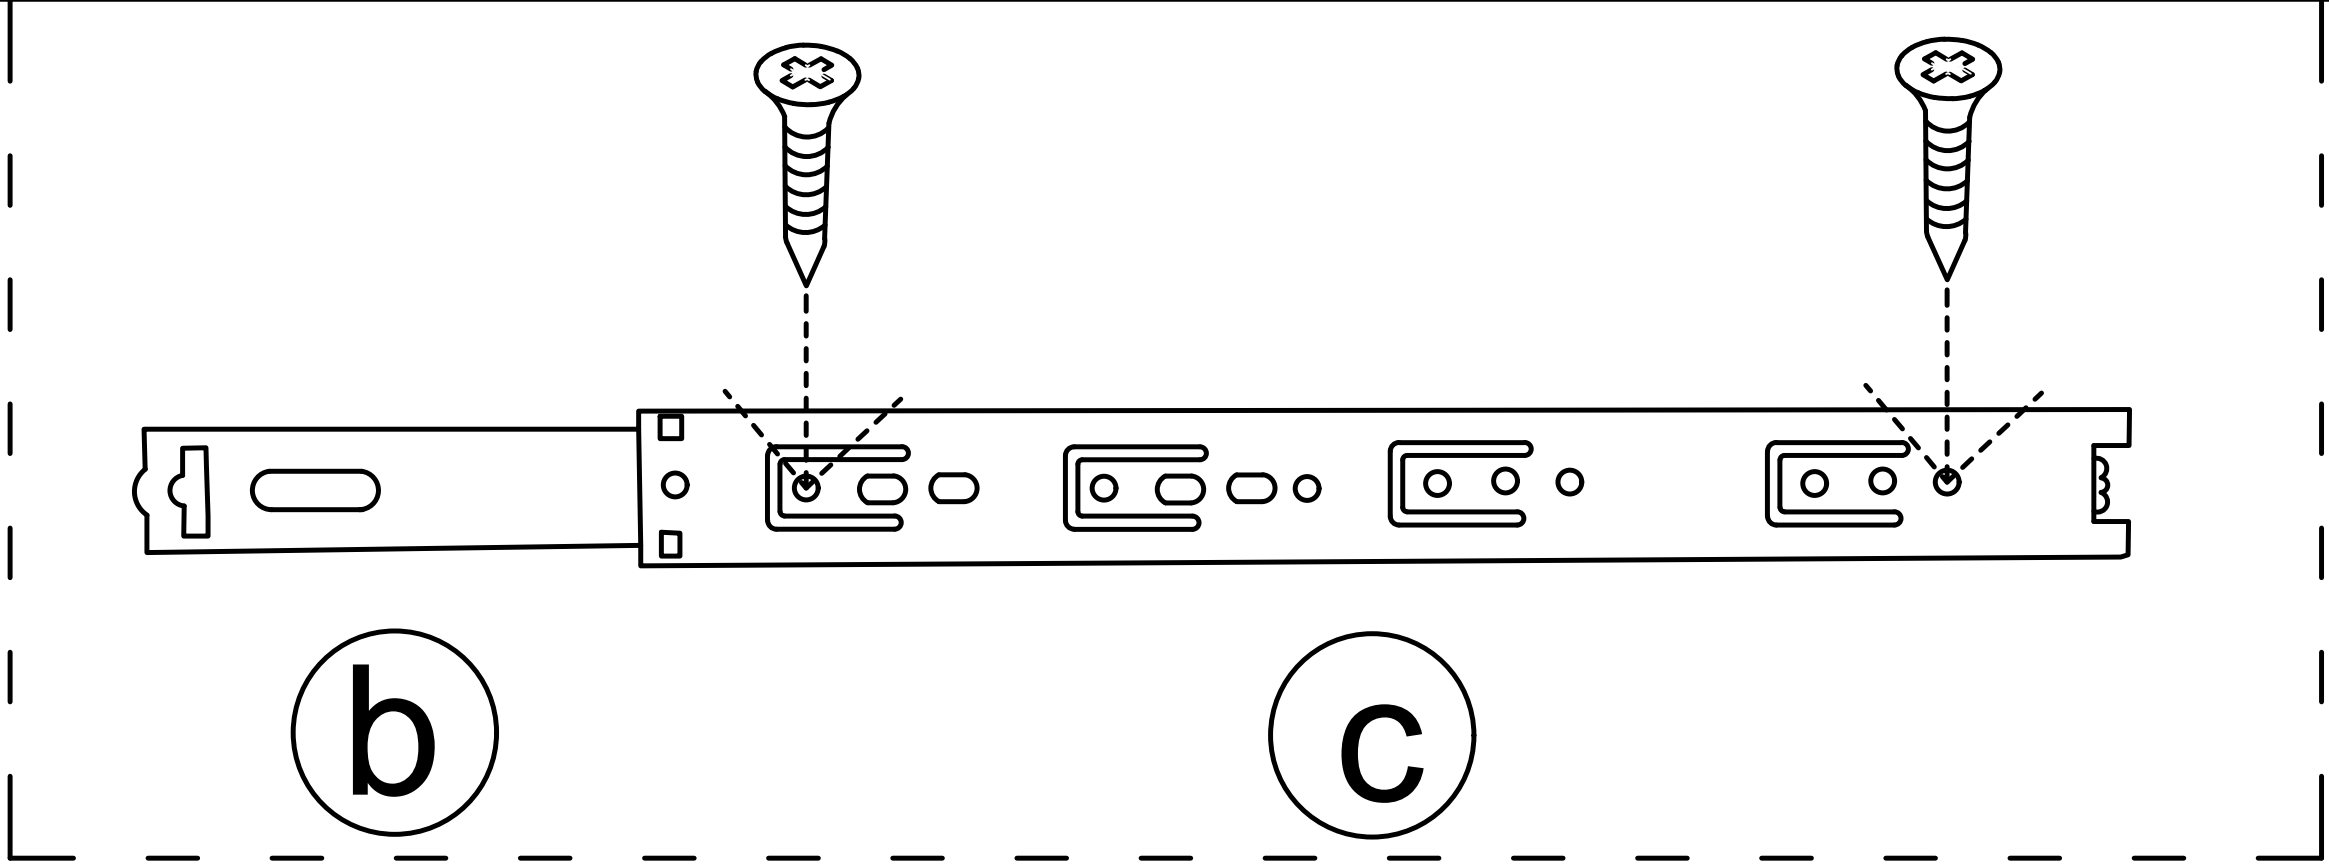


Step 28

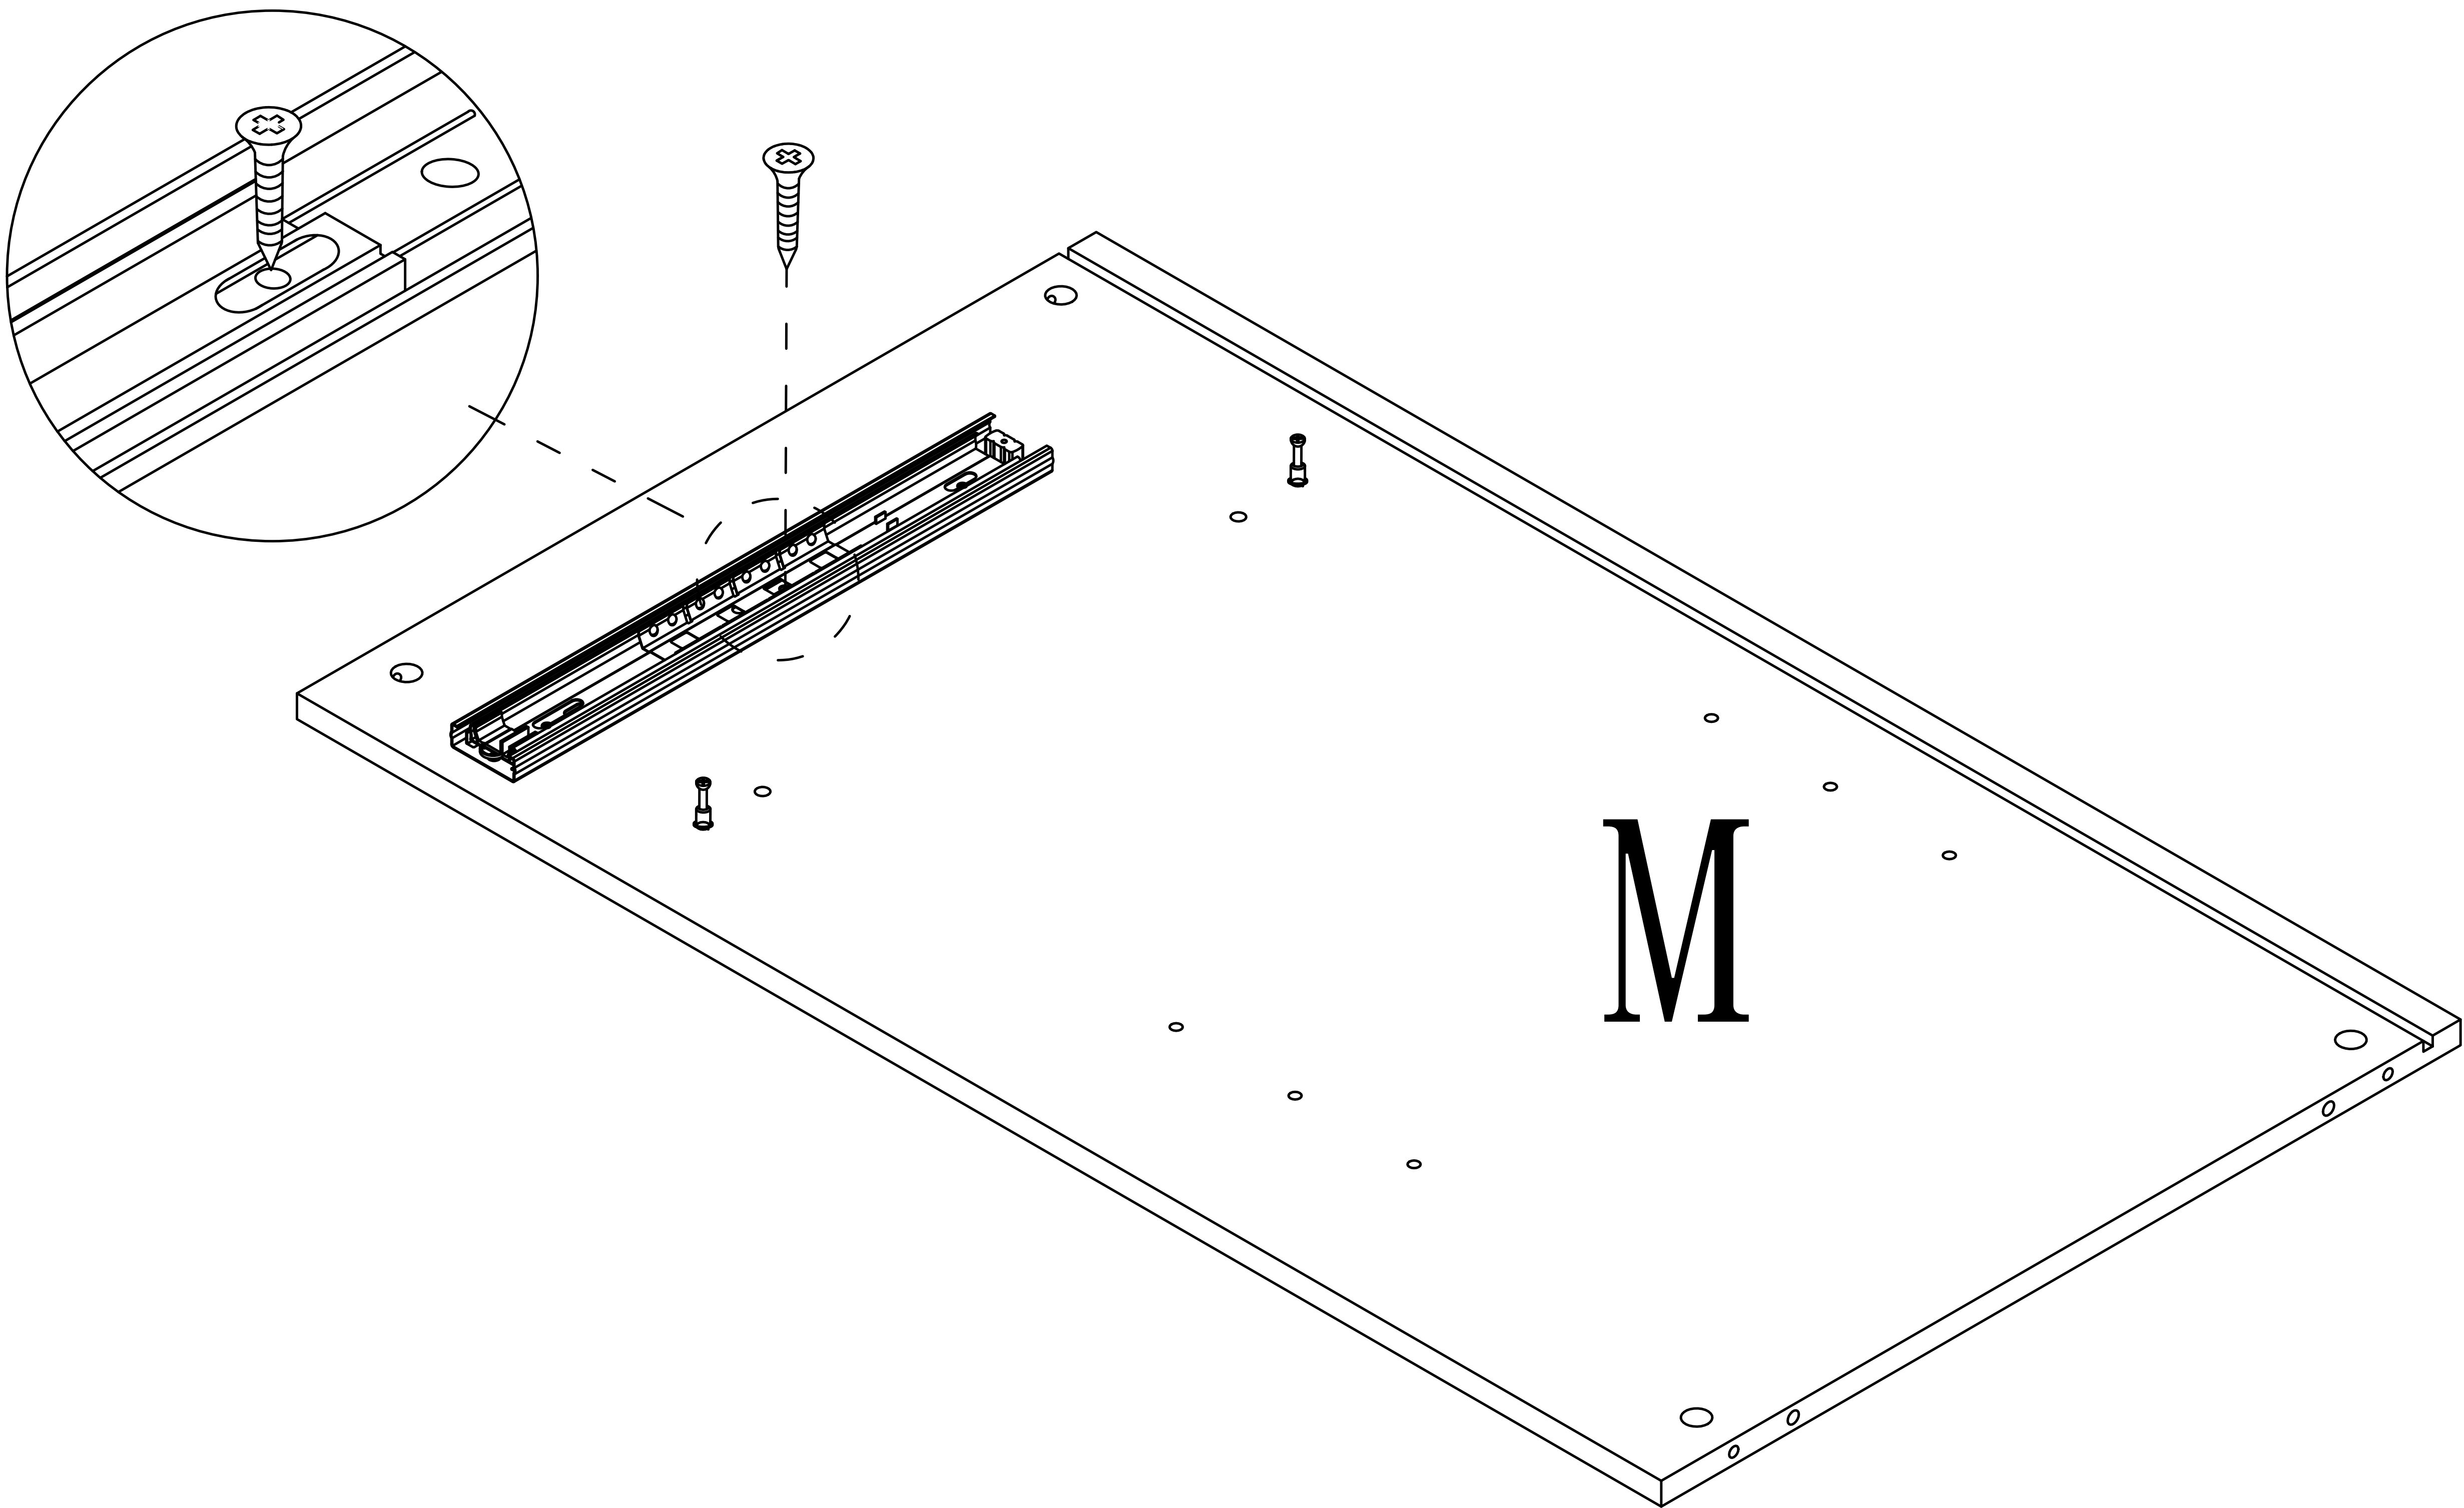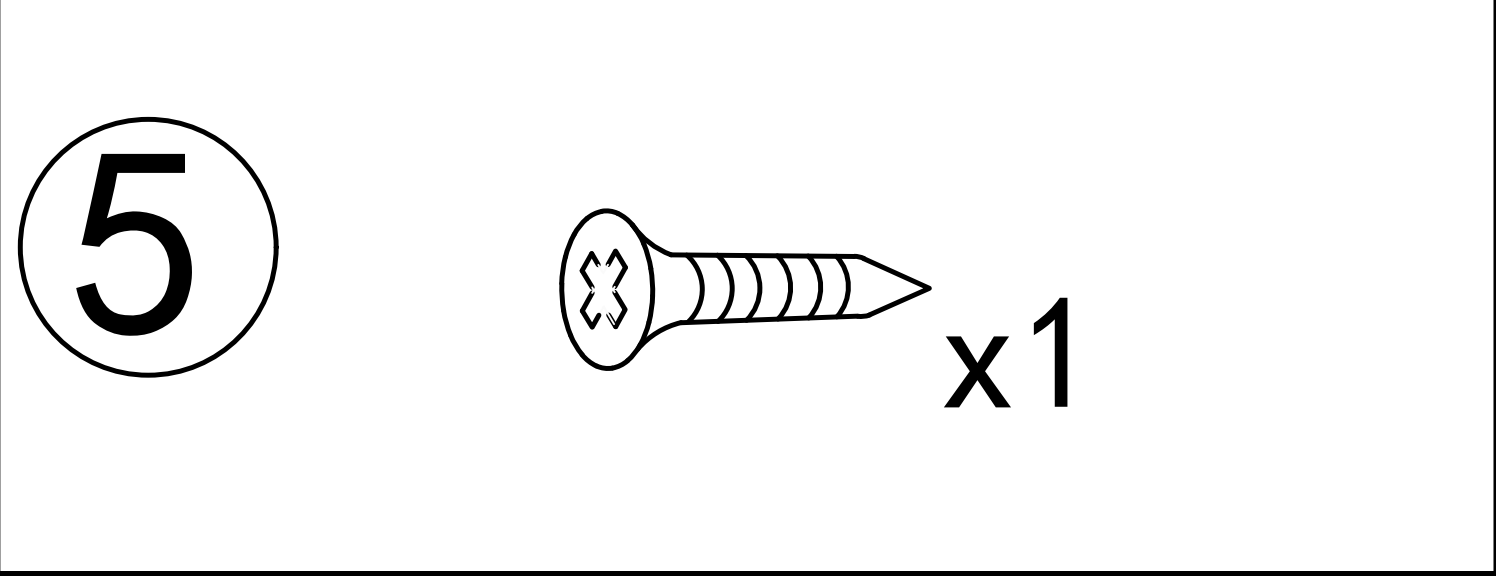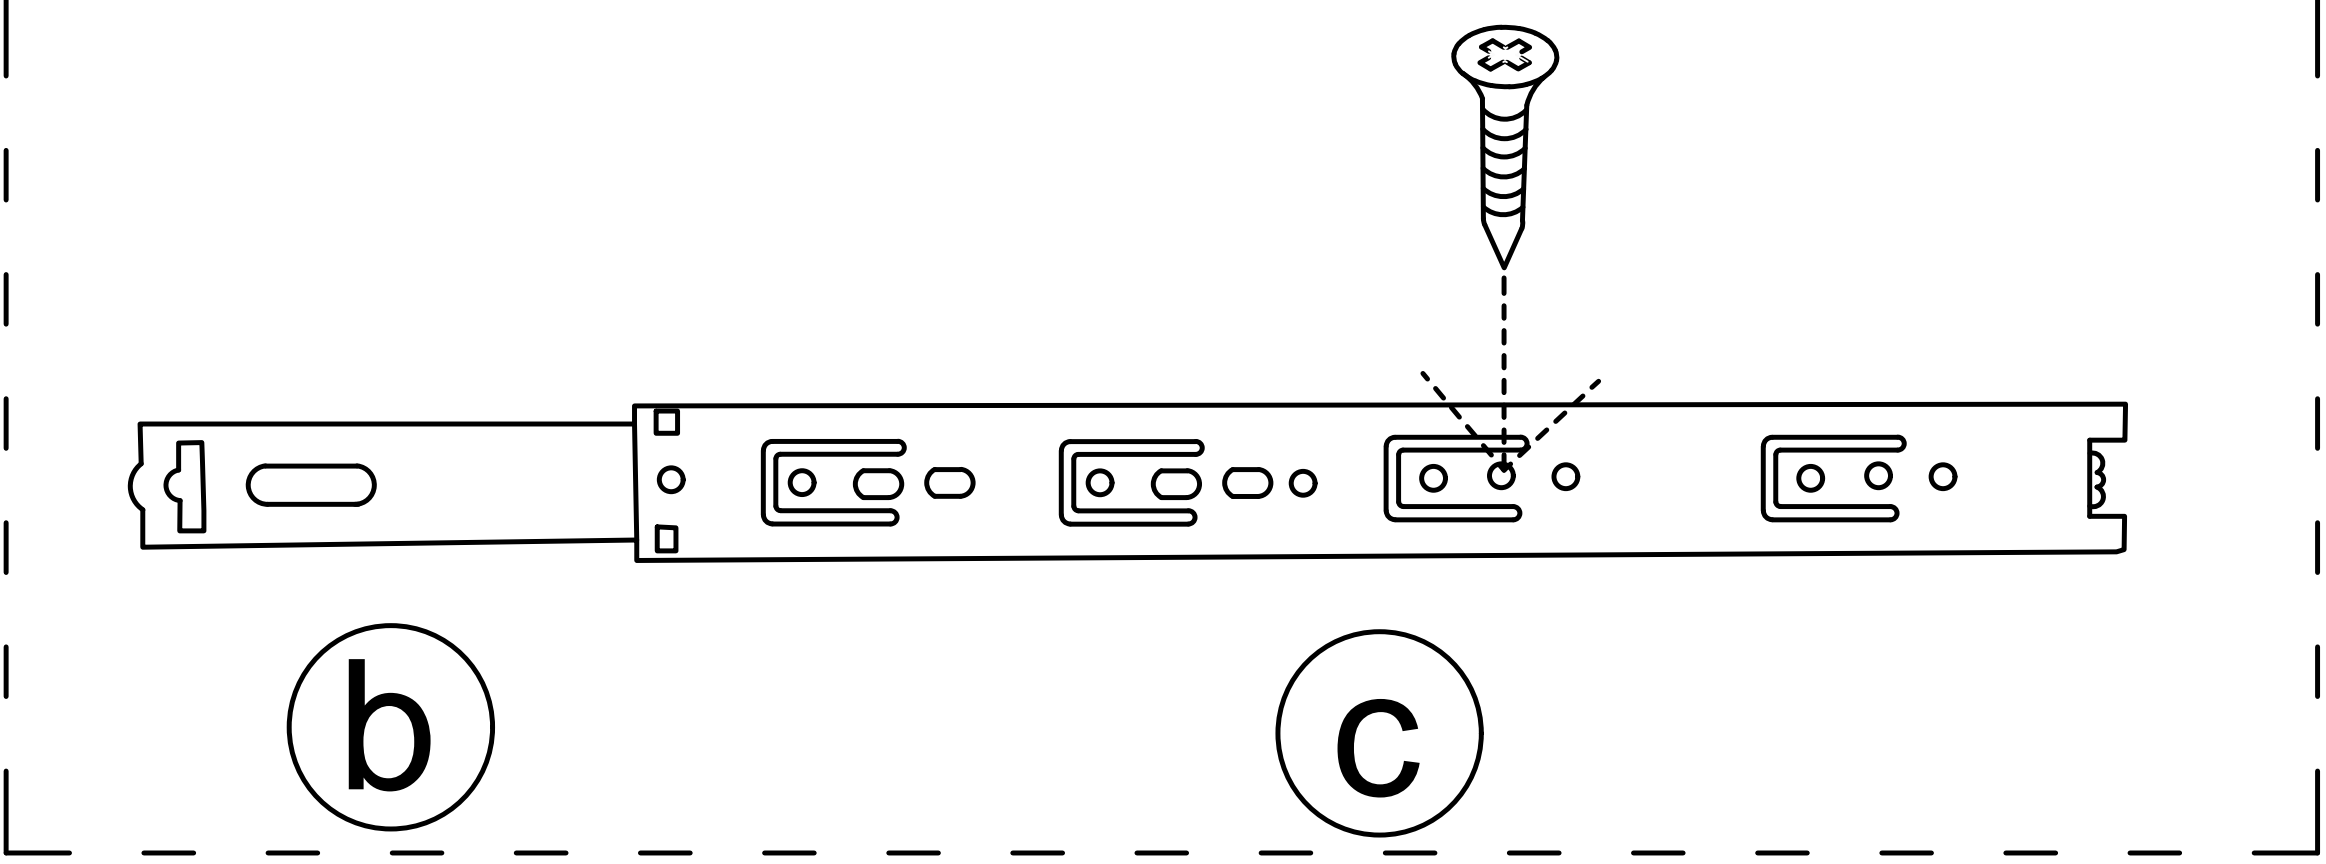




Step 29

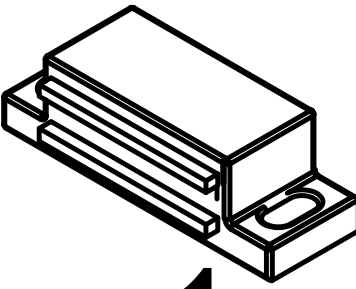- | | | |
|---|---|----|
| 3 |  | x4 |
| 8 |  | x1 |
| |  | x2 |


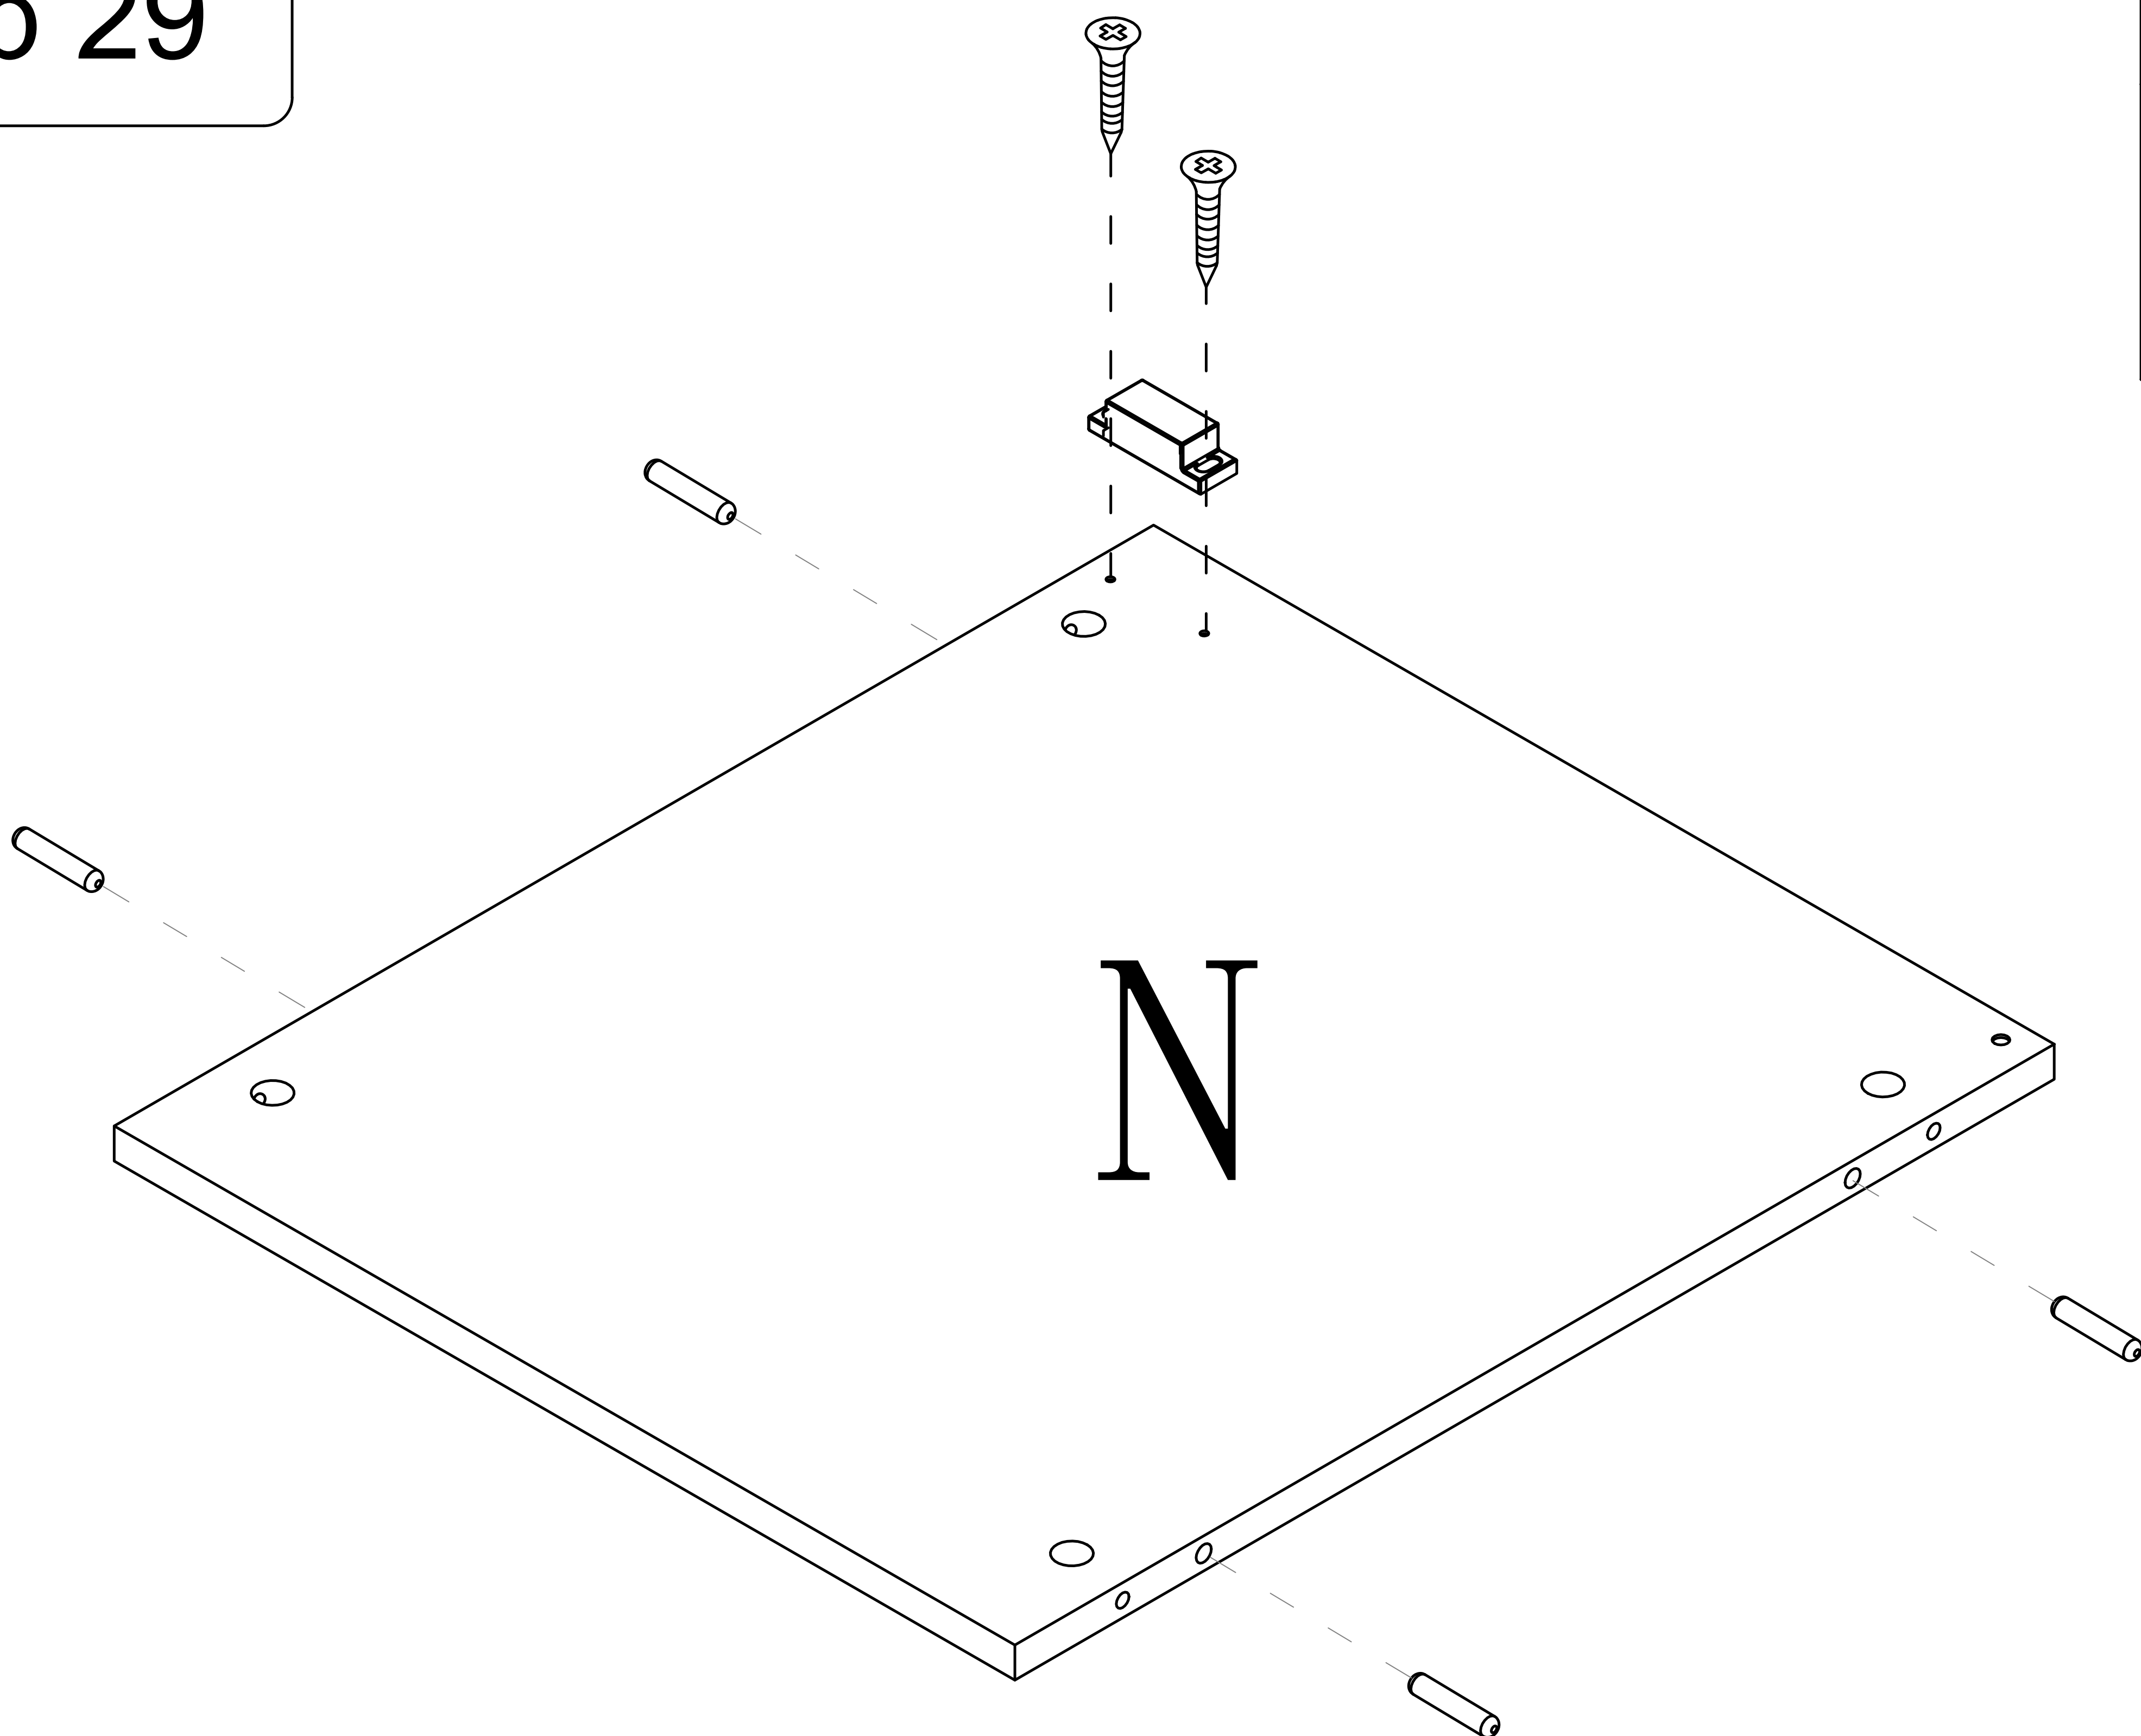


Step 30





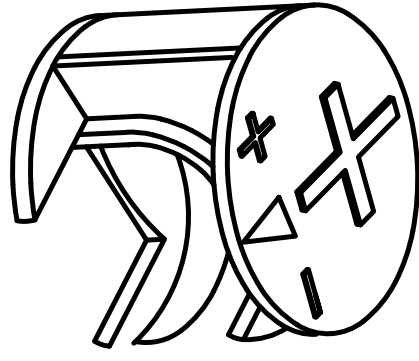
- | | | |
|---|---|----|
| 2 |  | x2 |
|---|---|----|

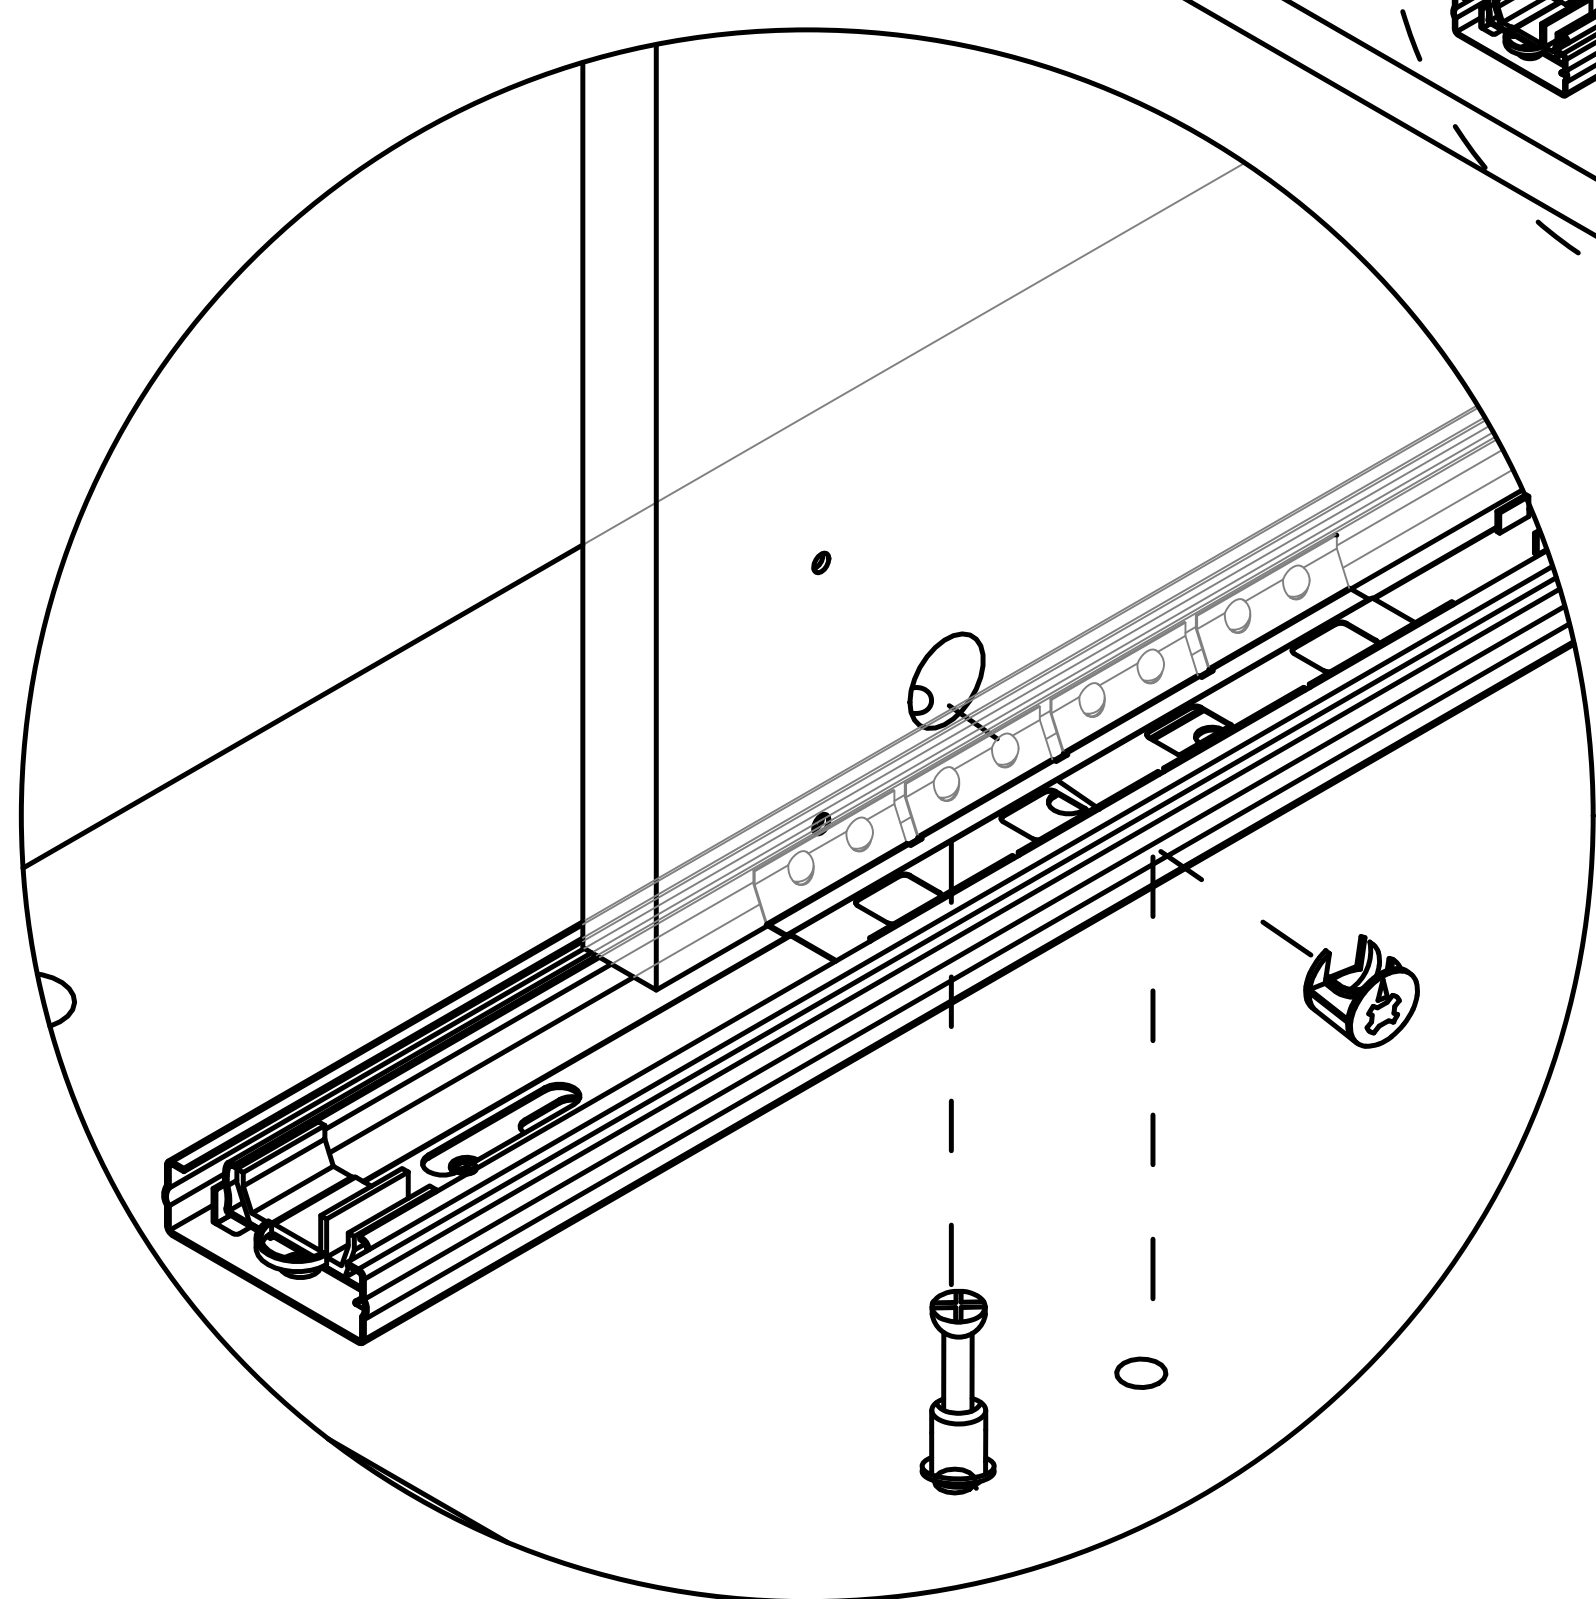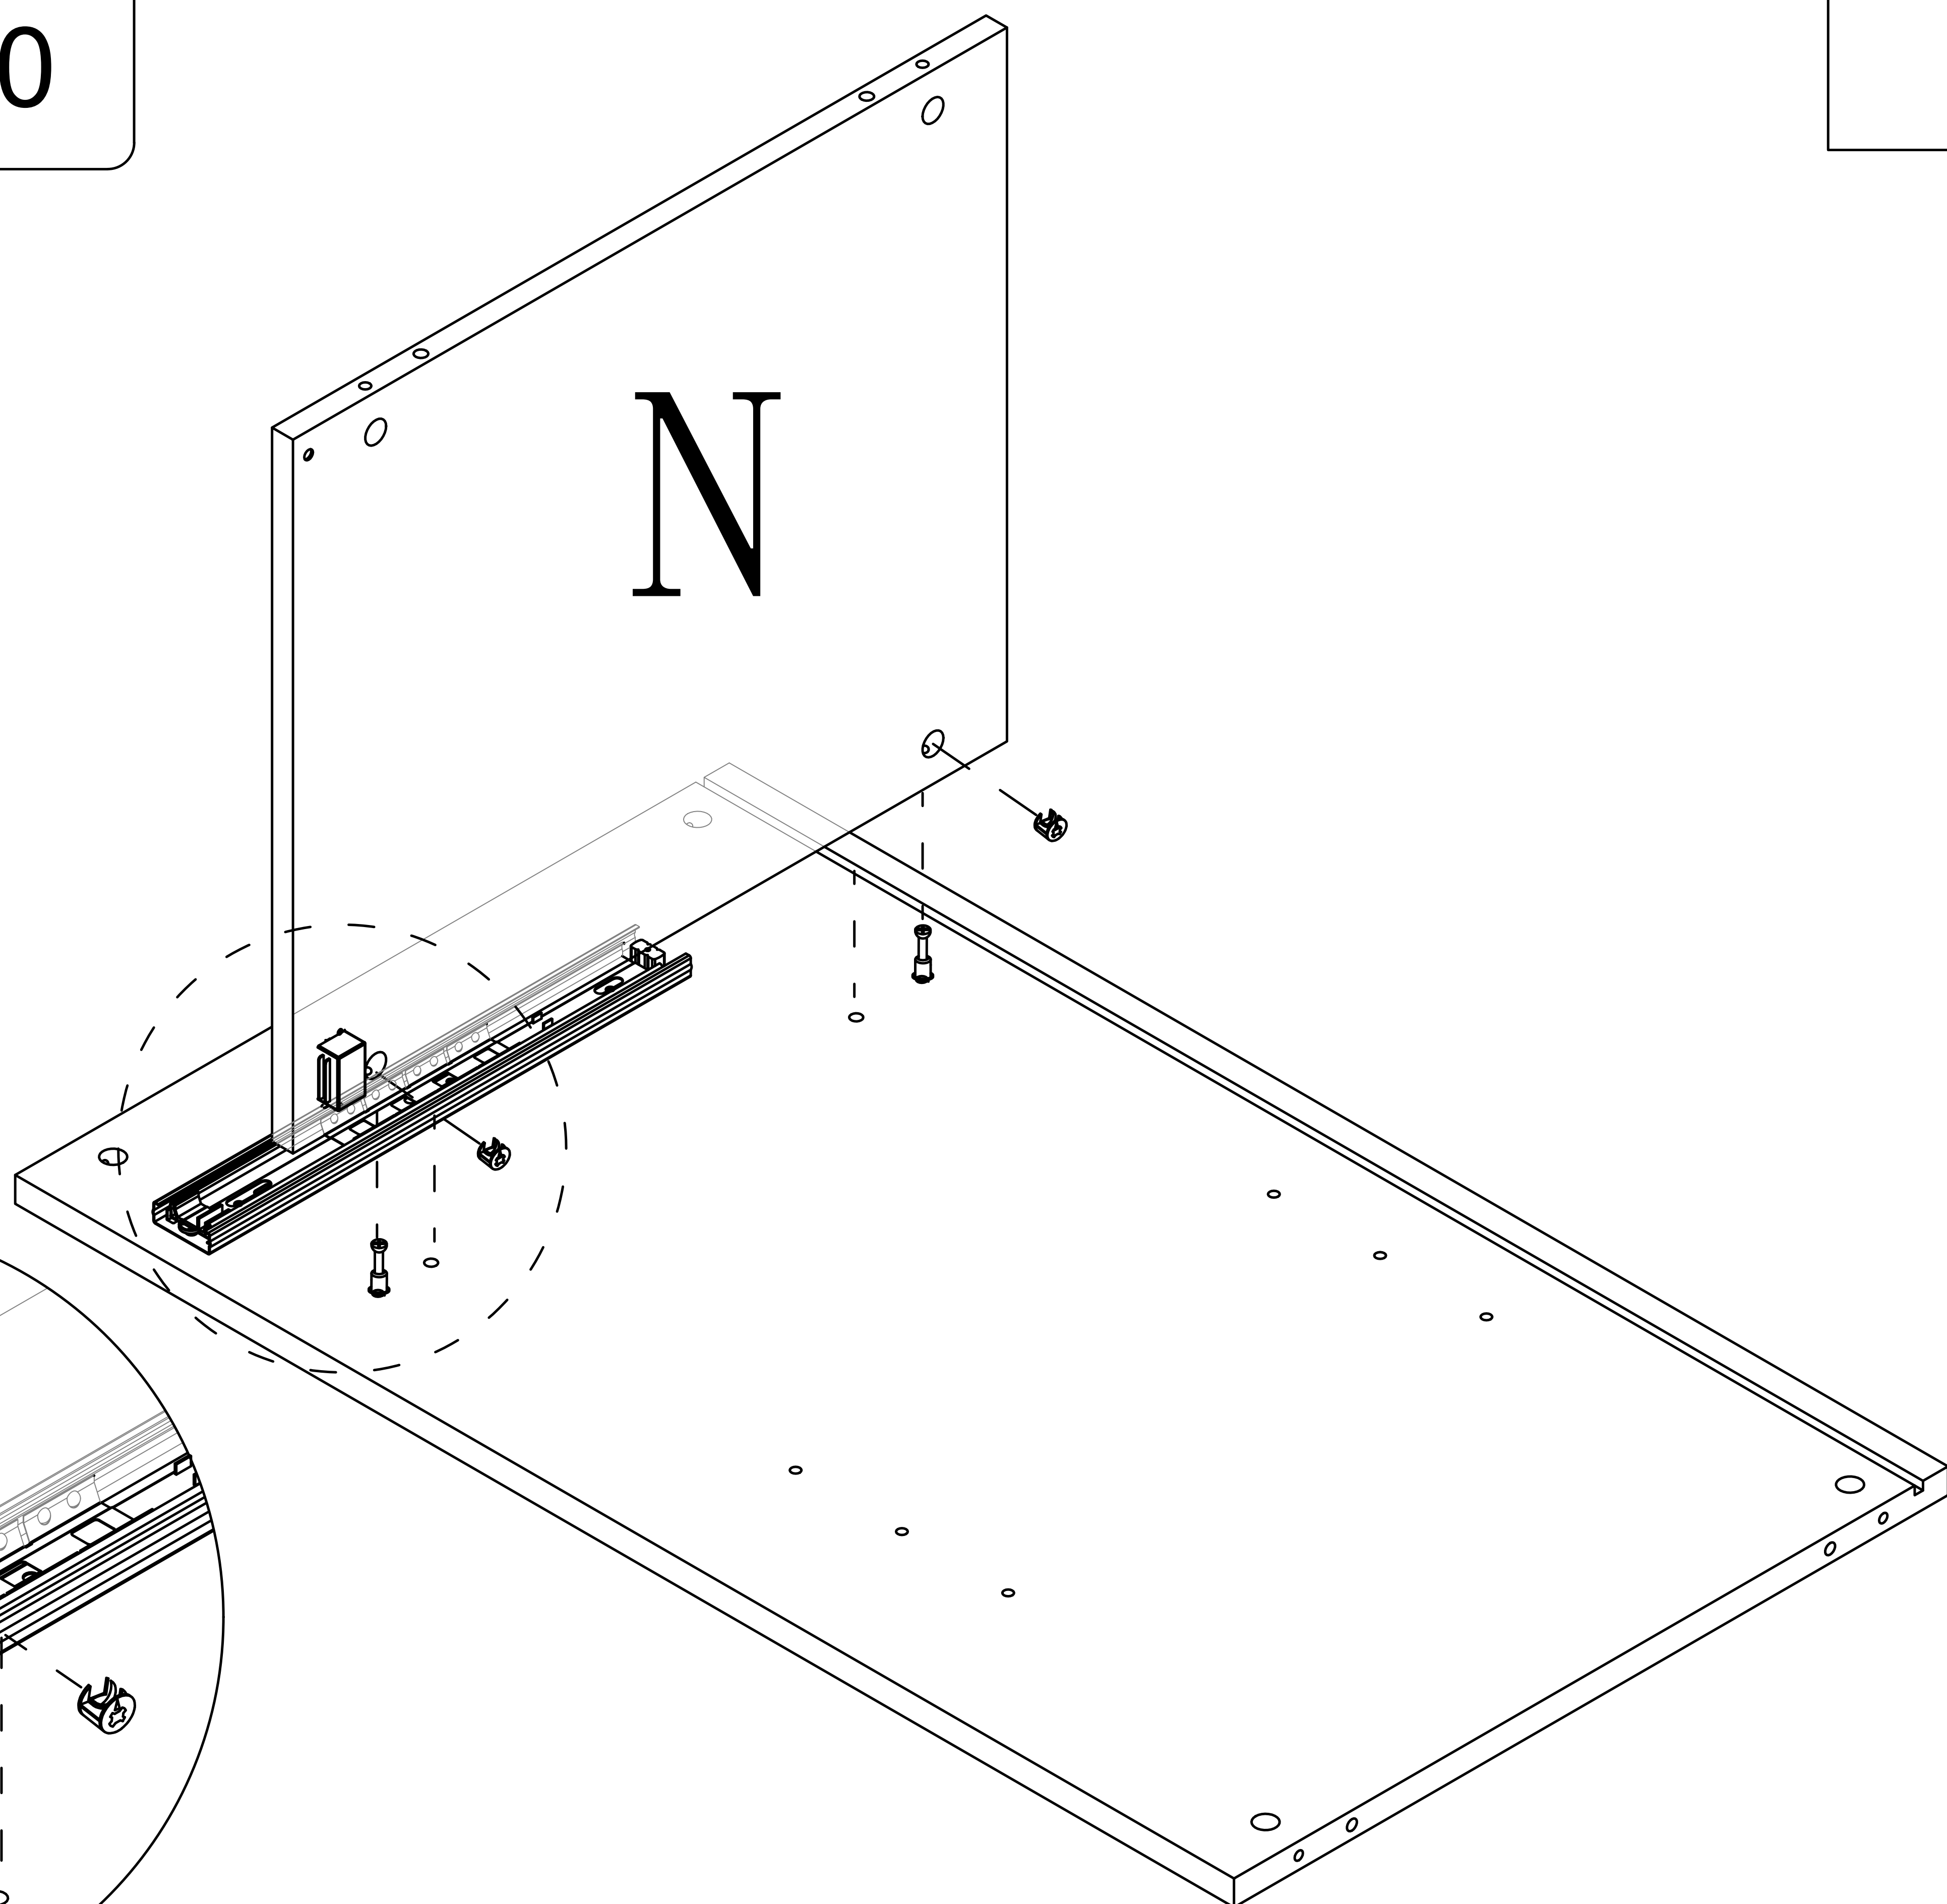


Step 31

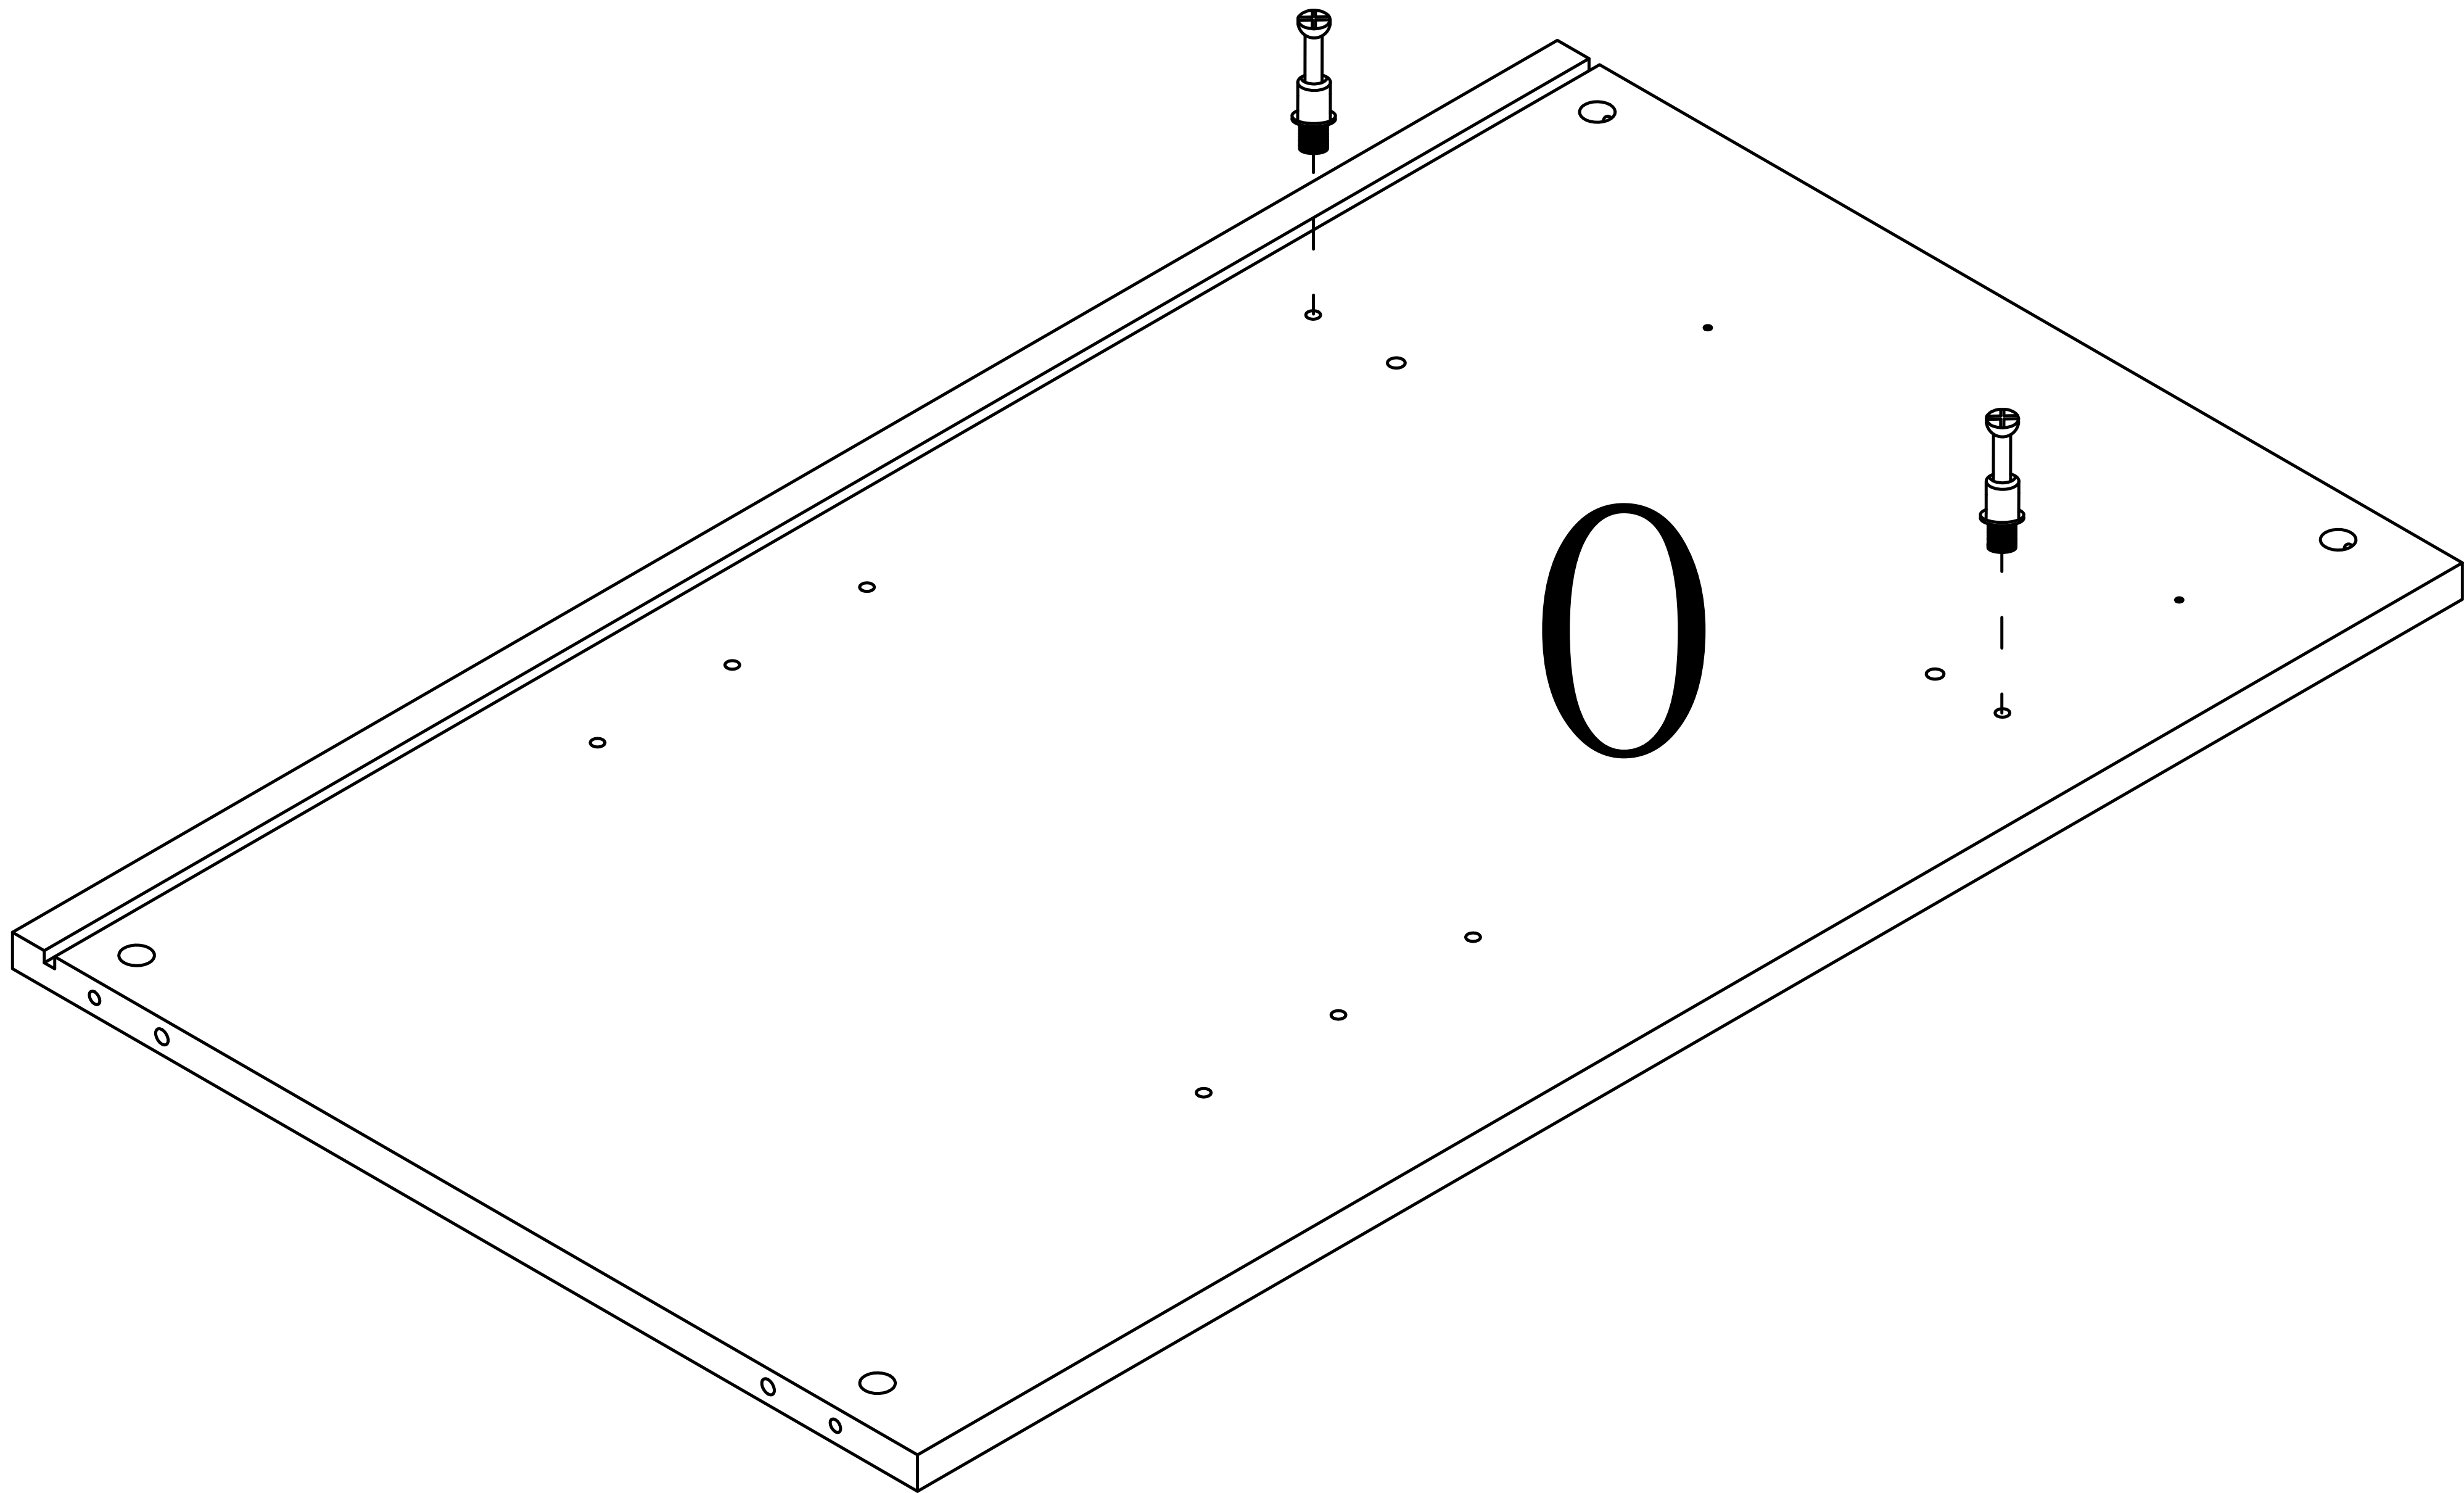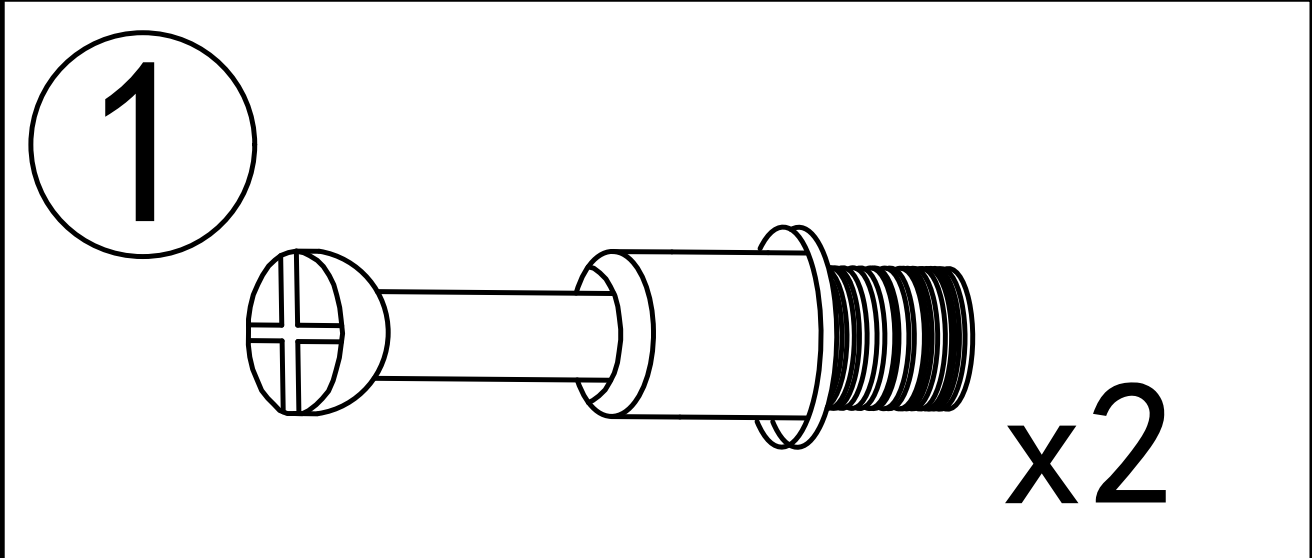



Step 32

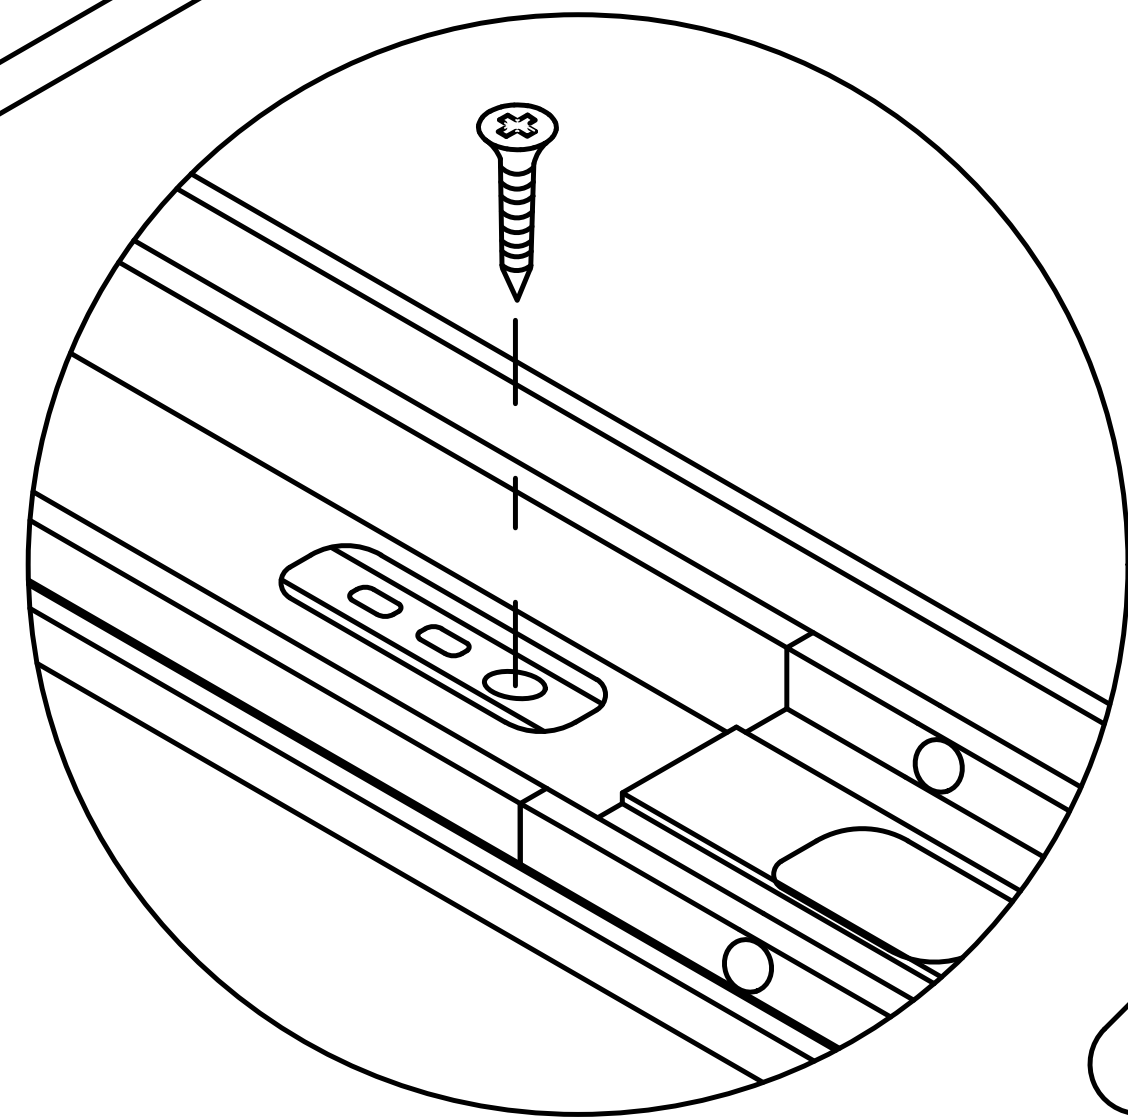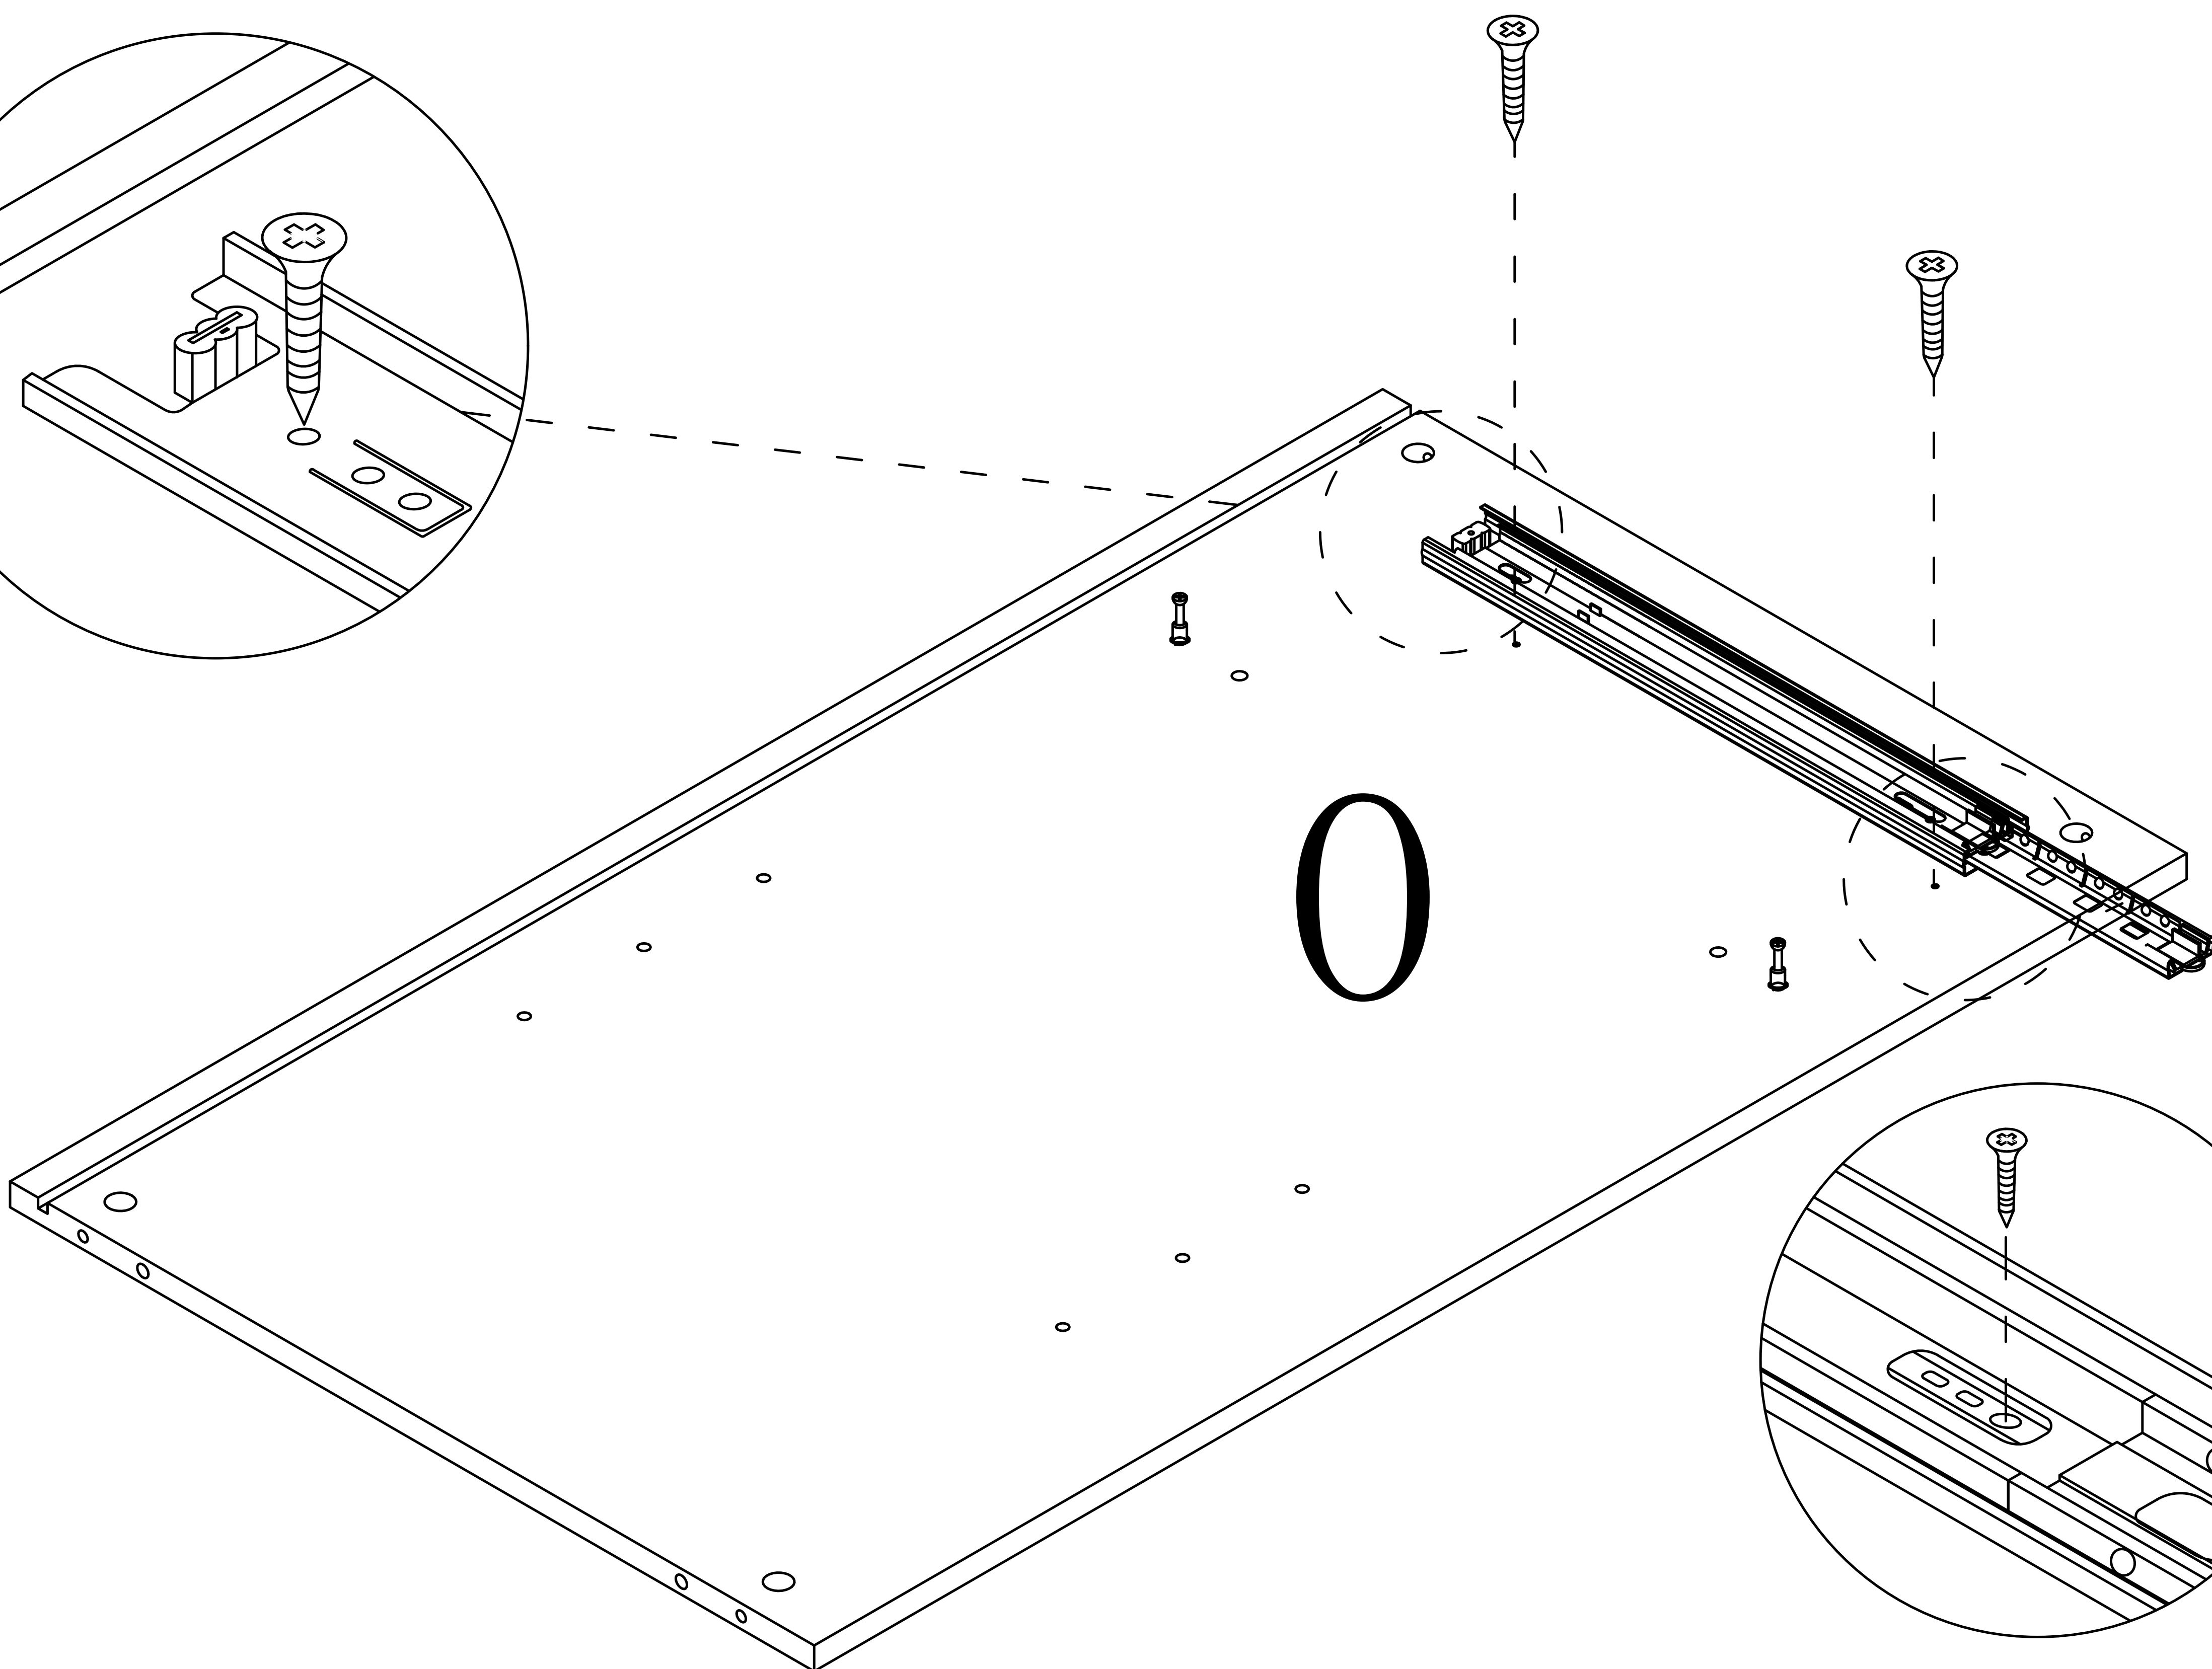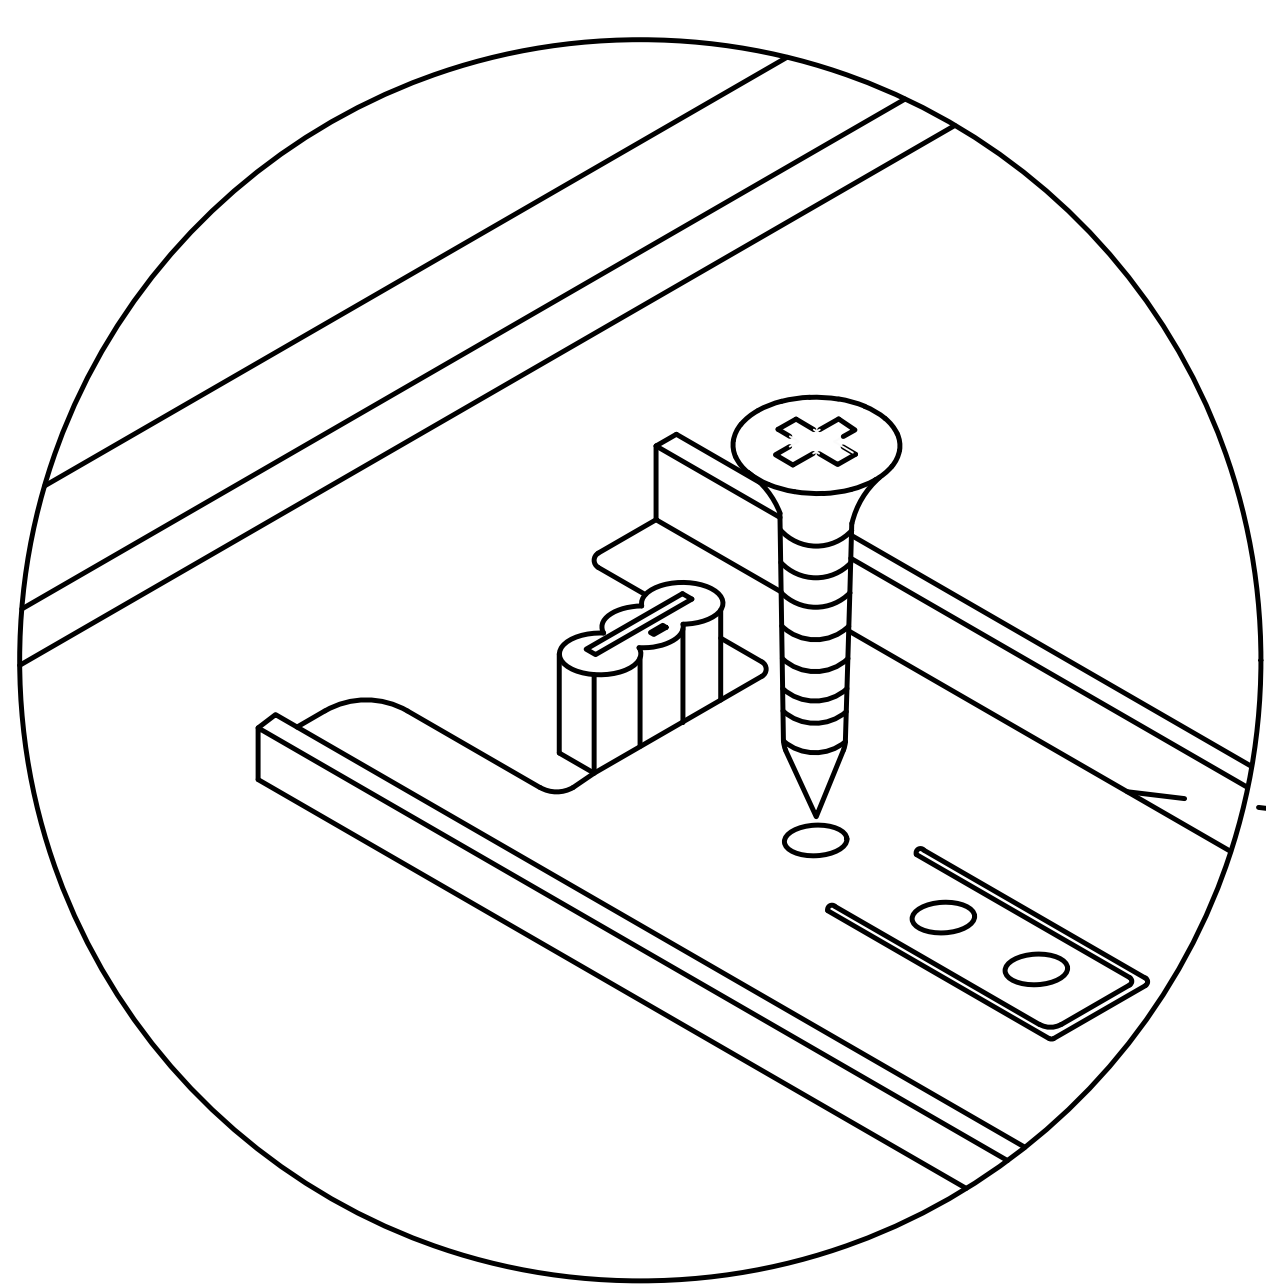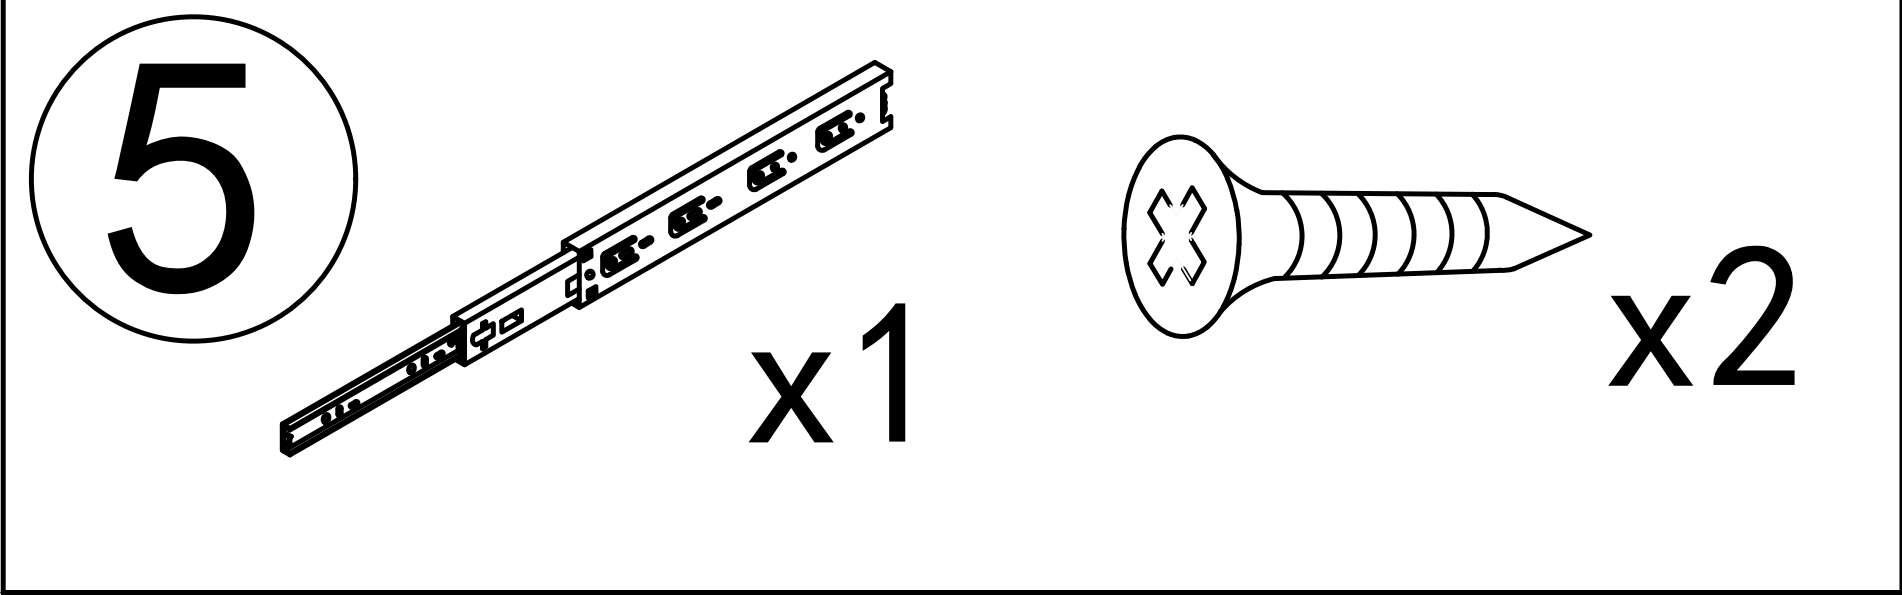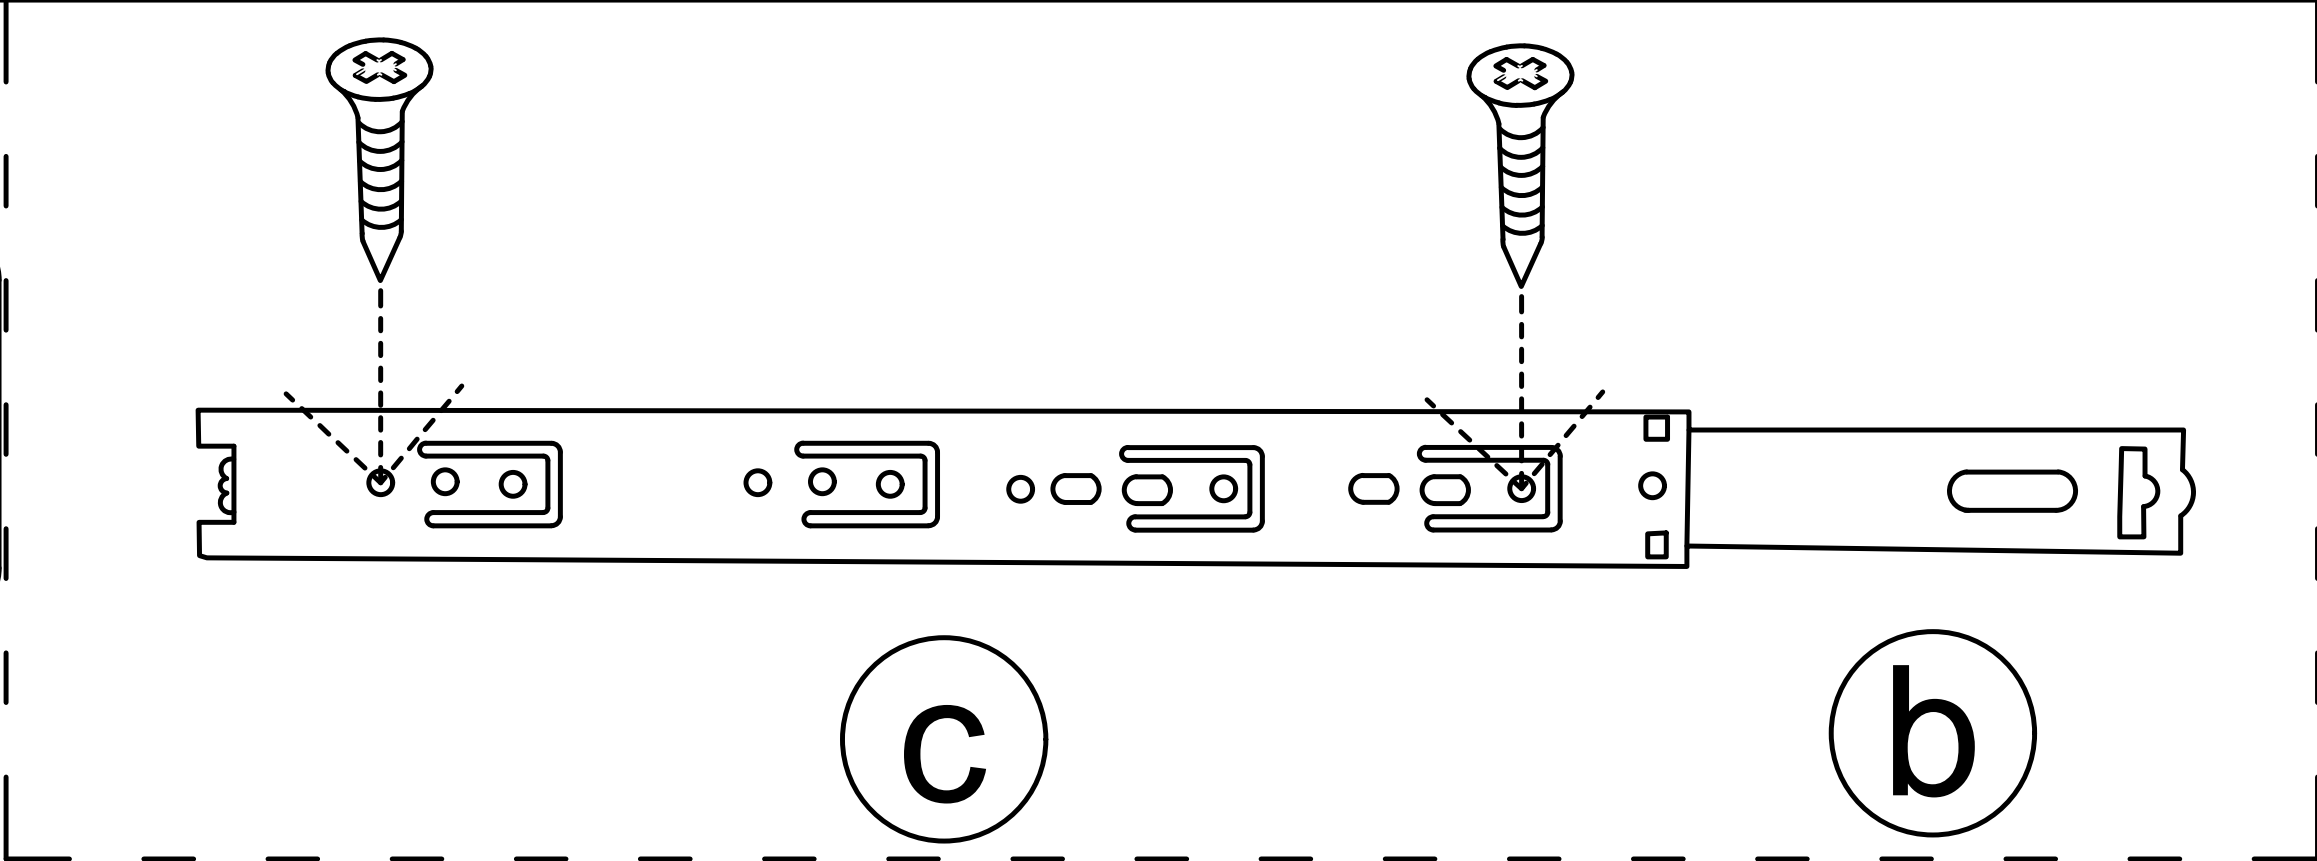

Step 33


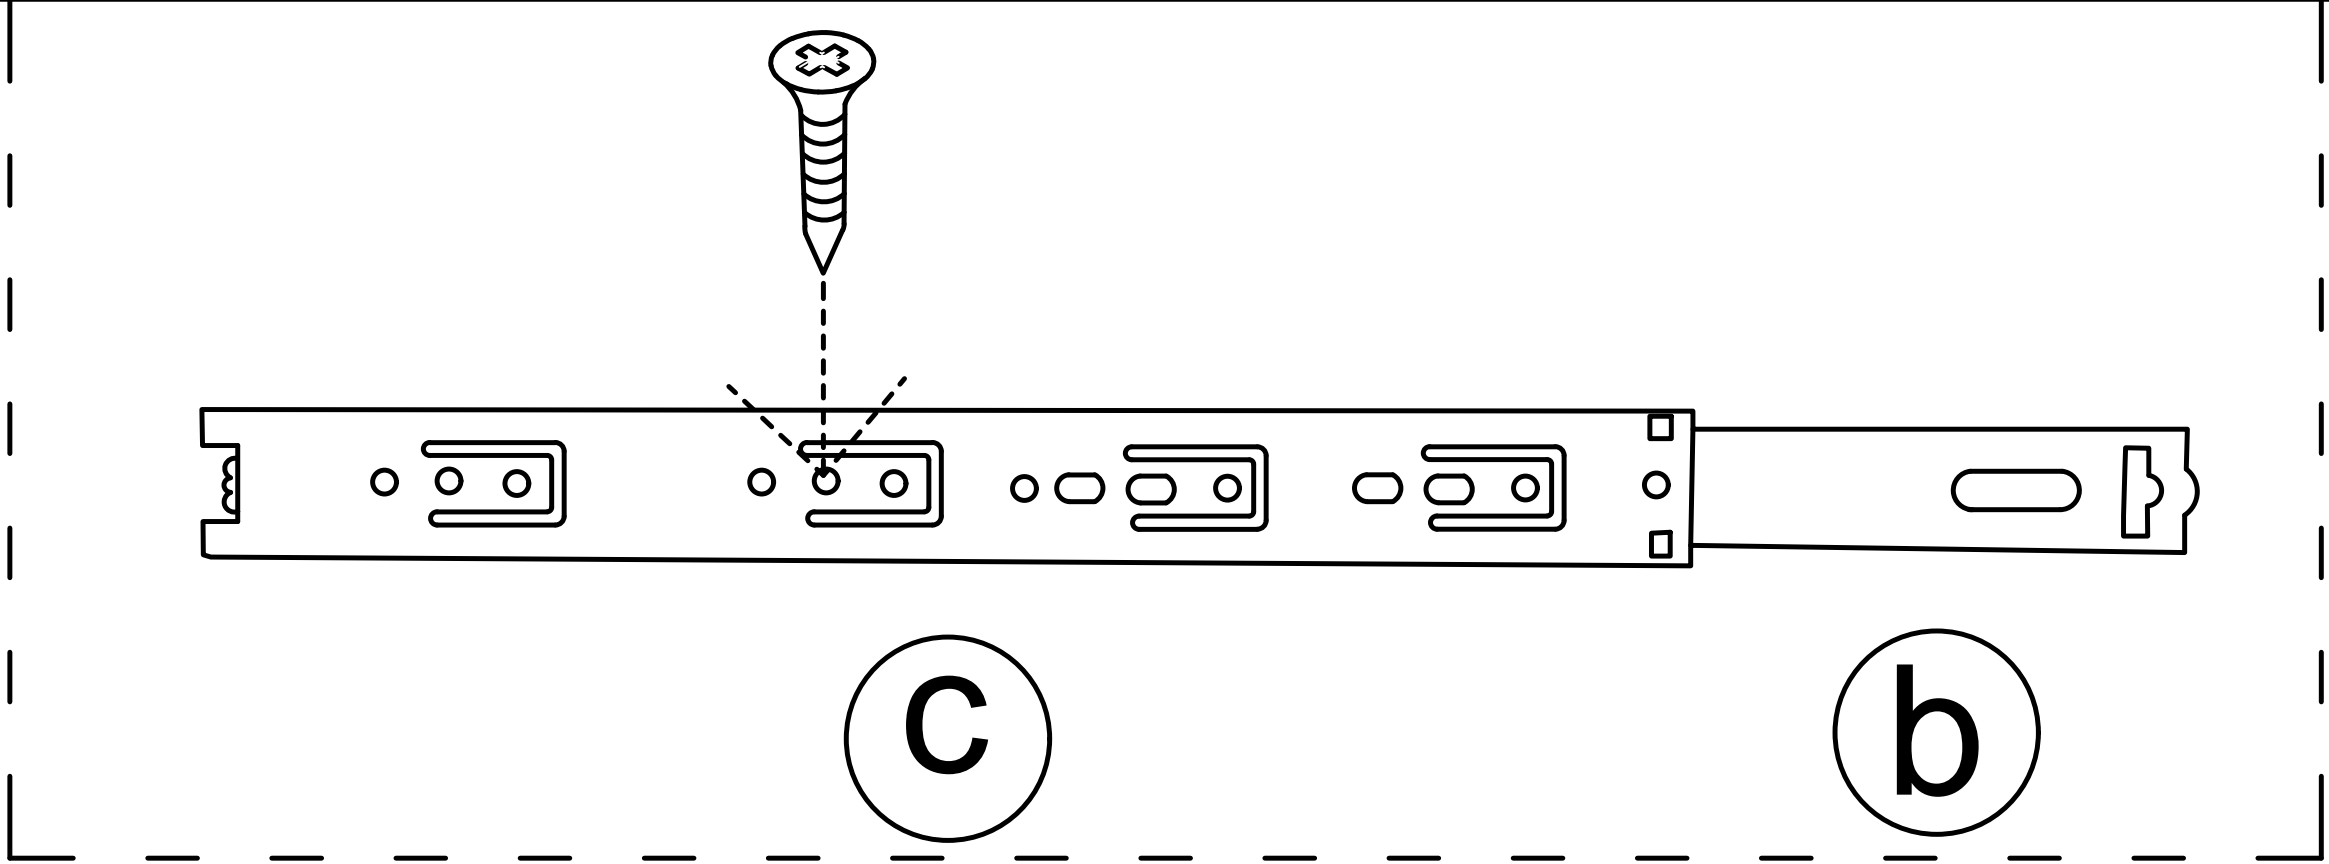


5

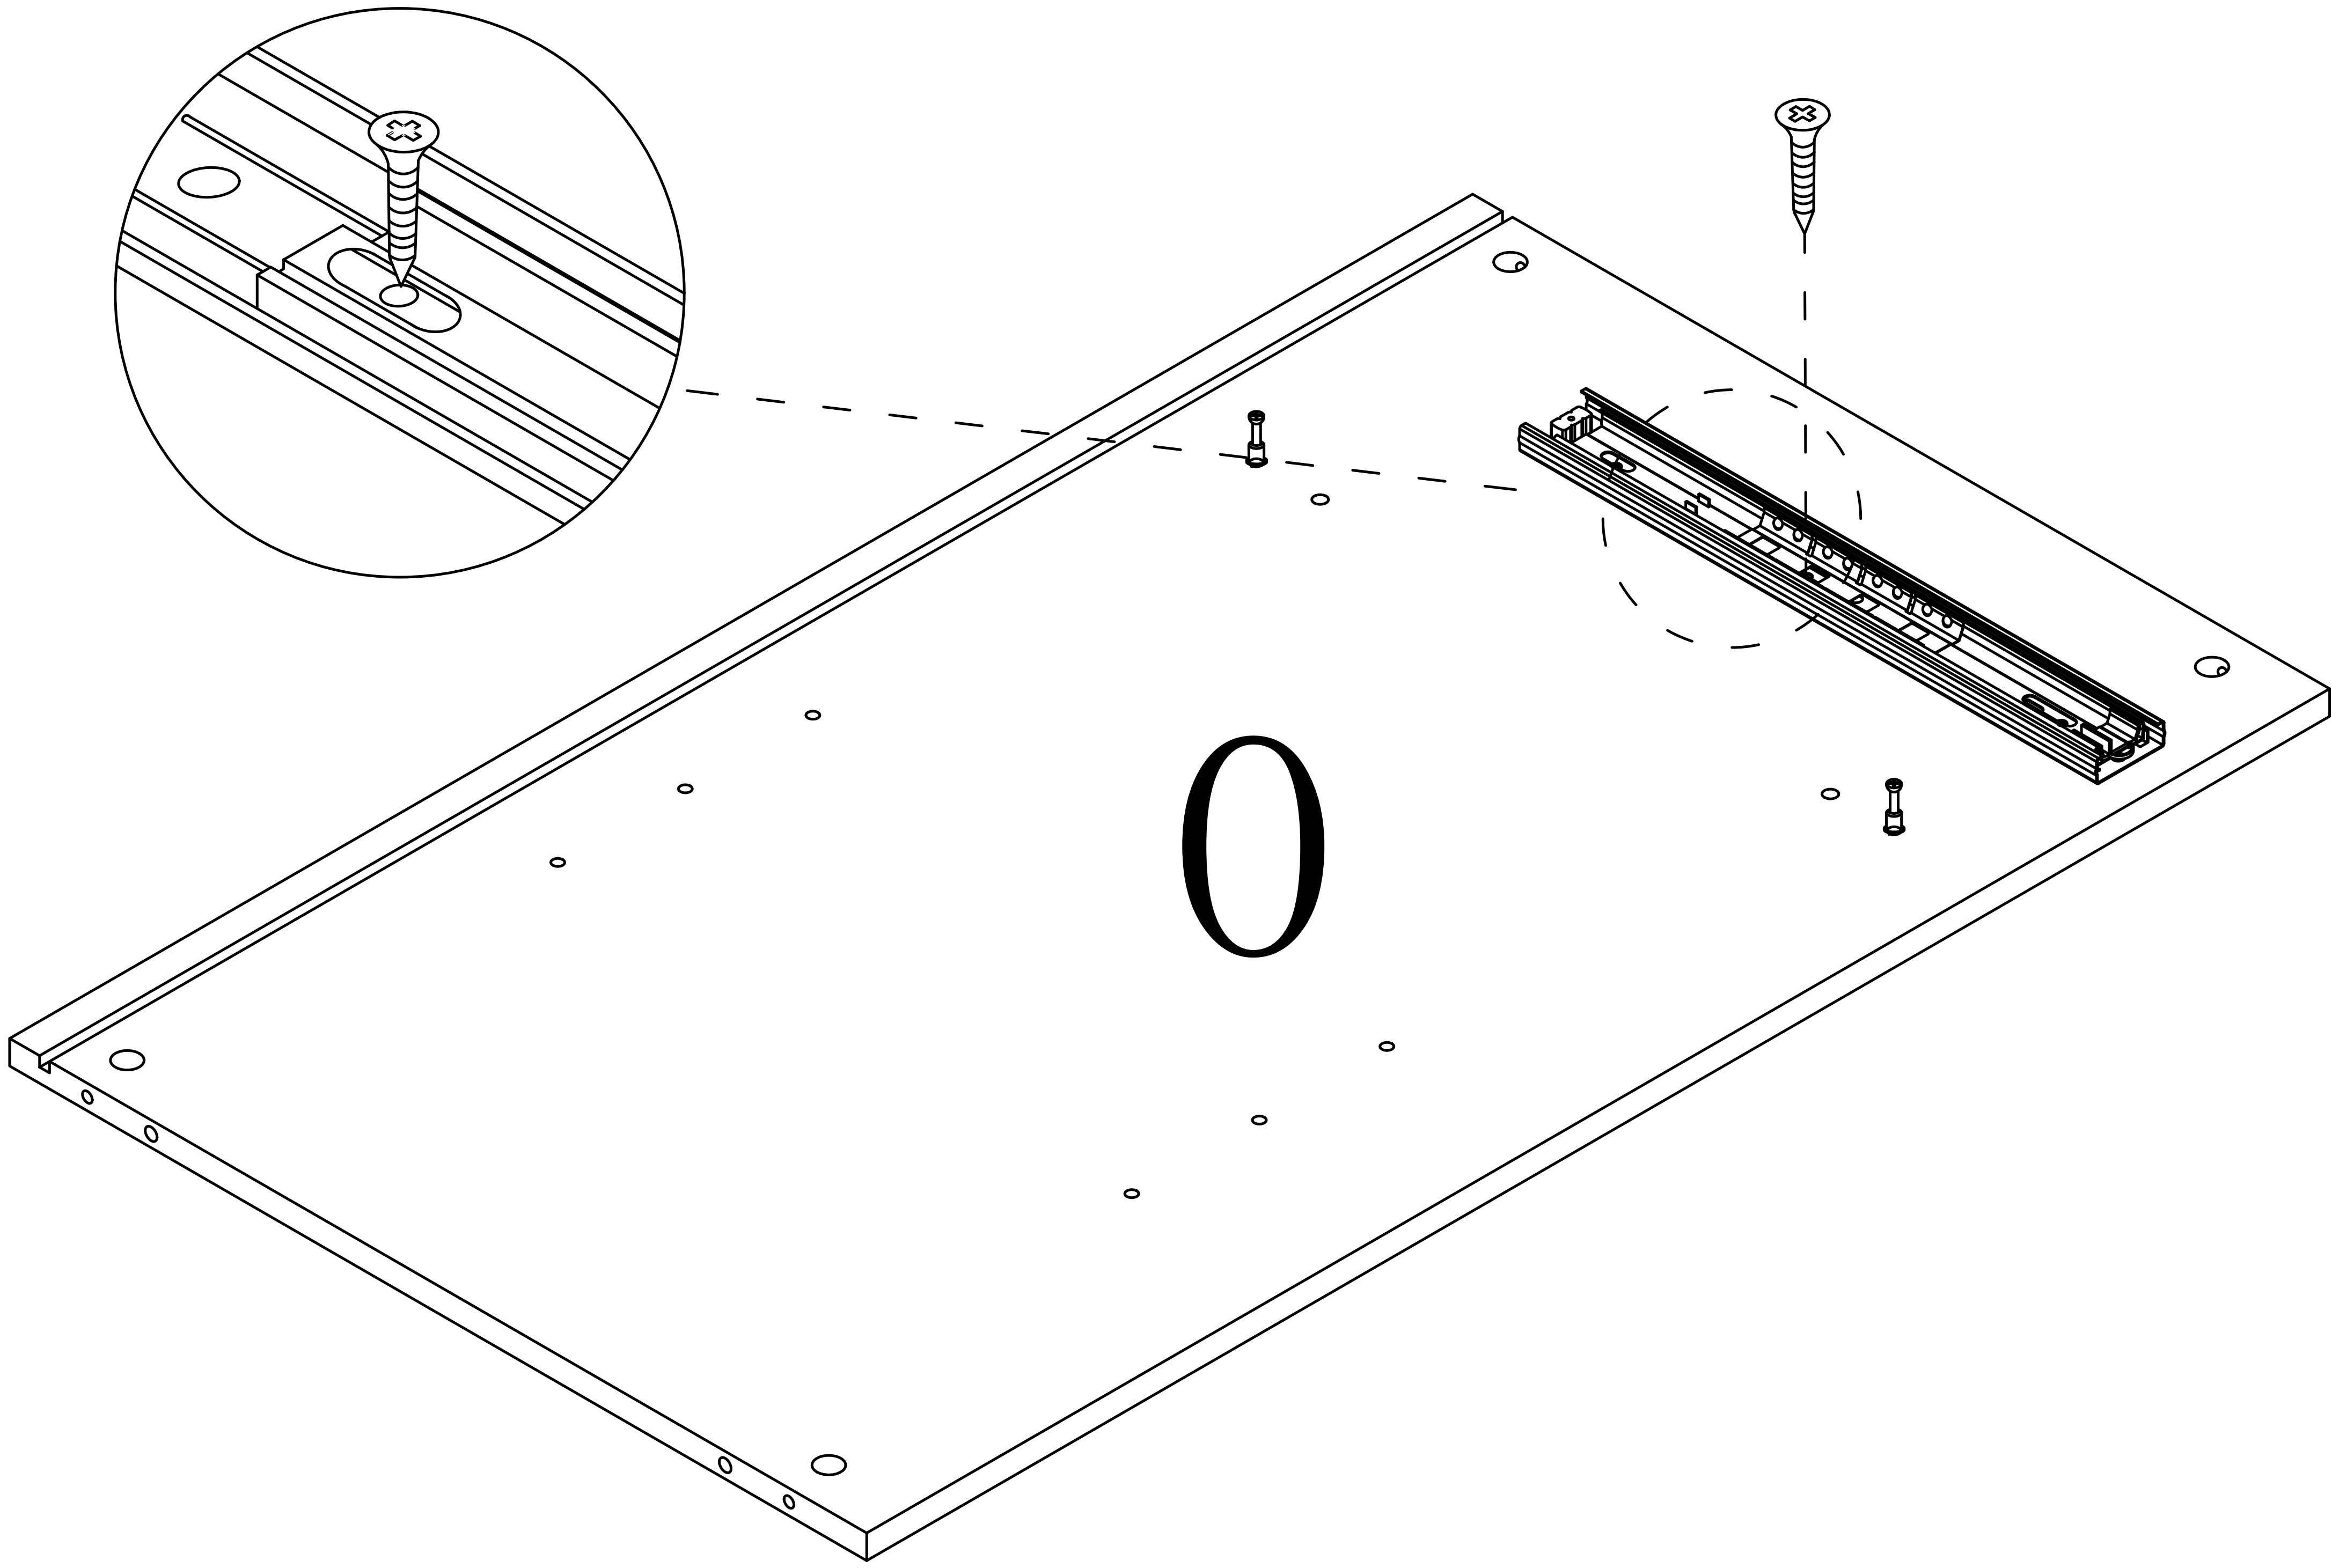
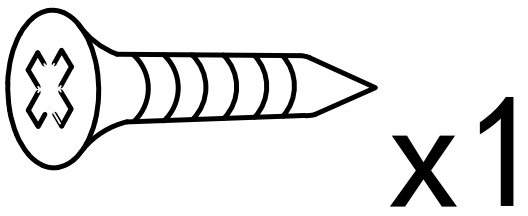


Step 34



2

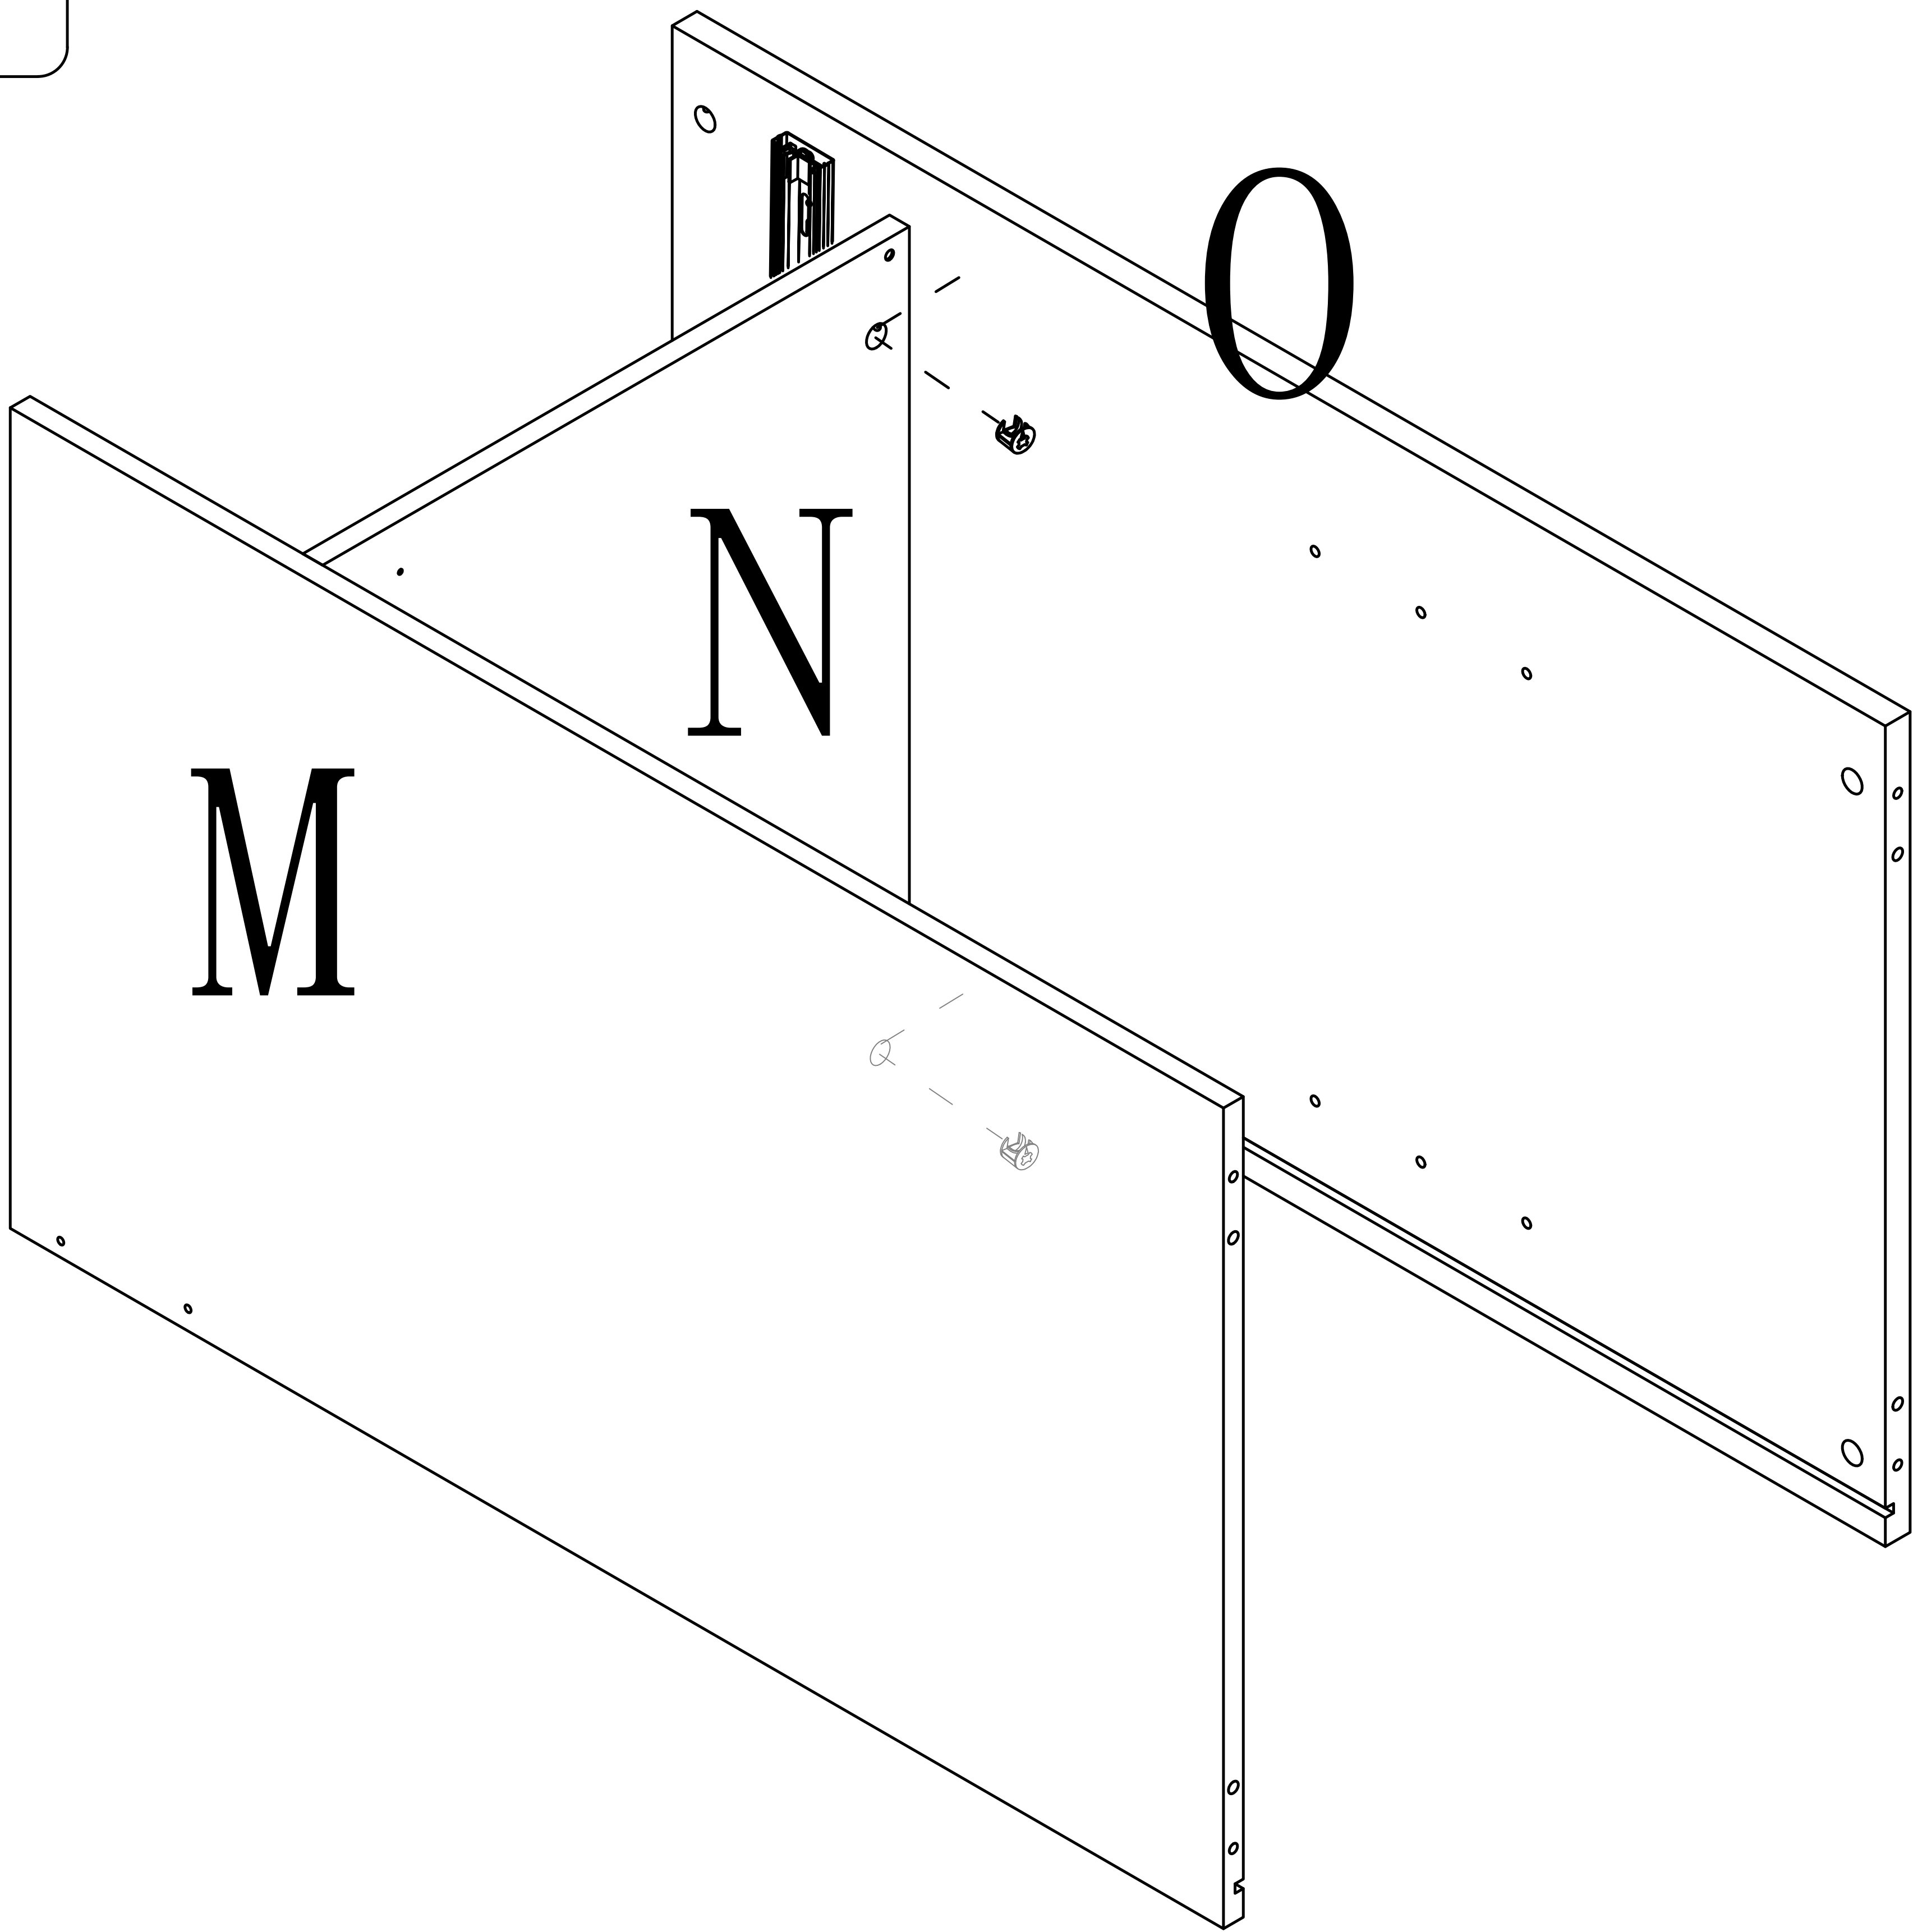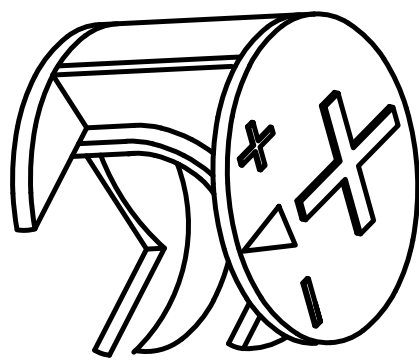

Step 35

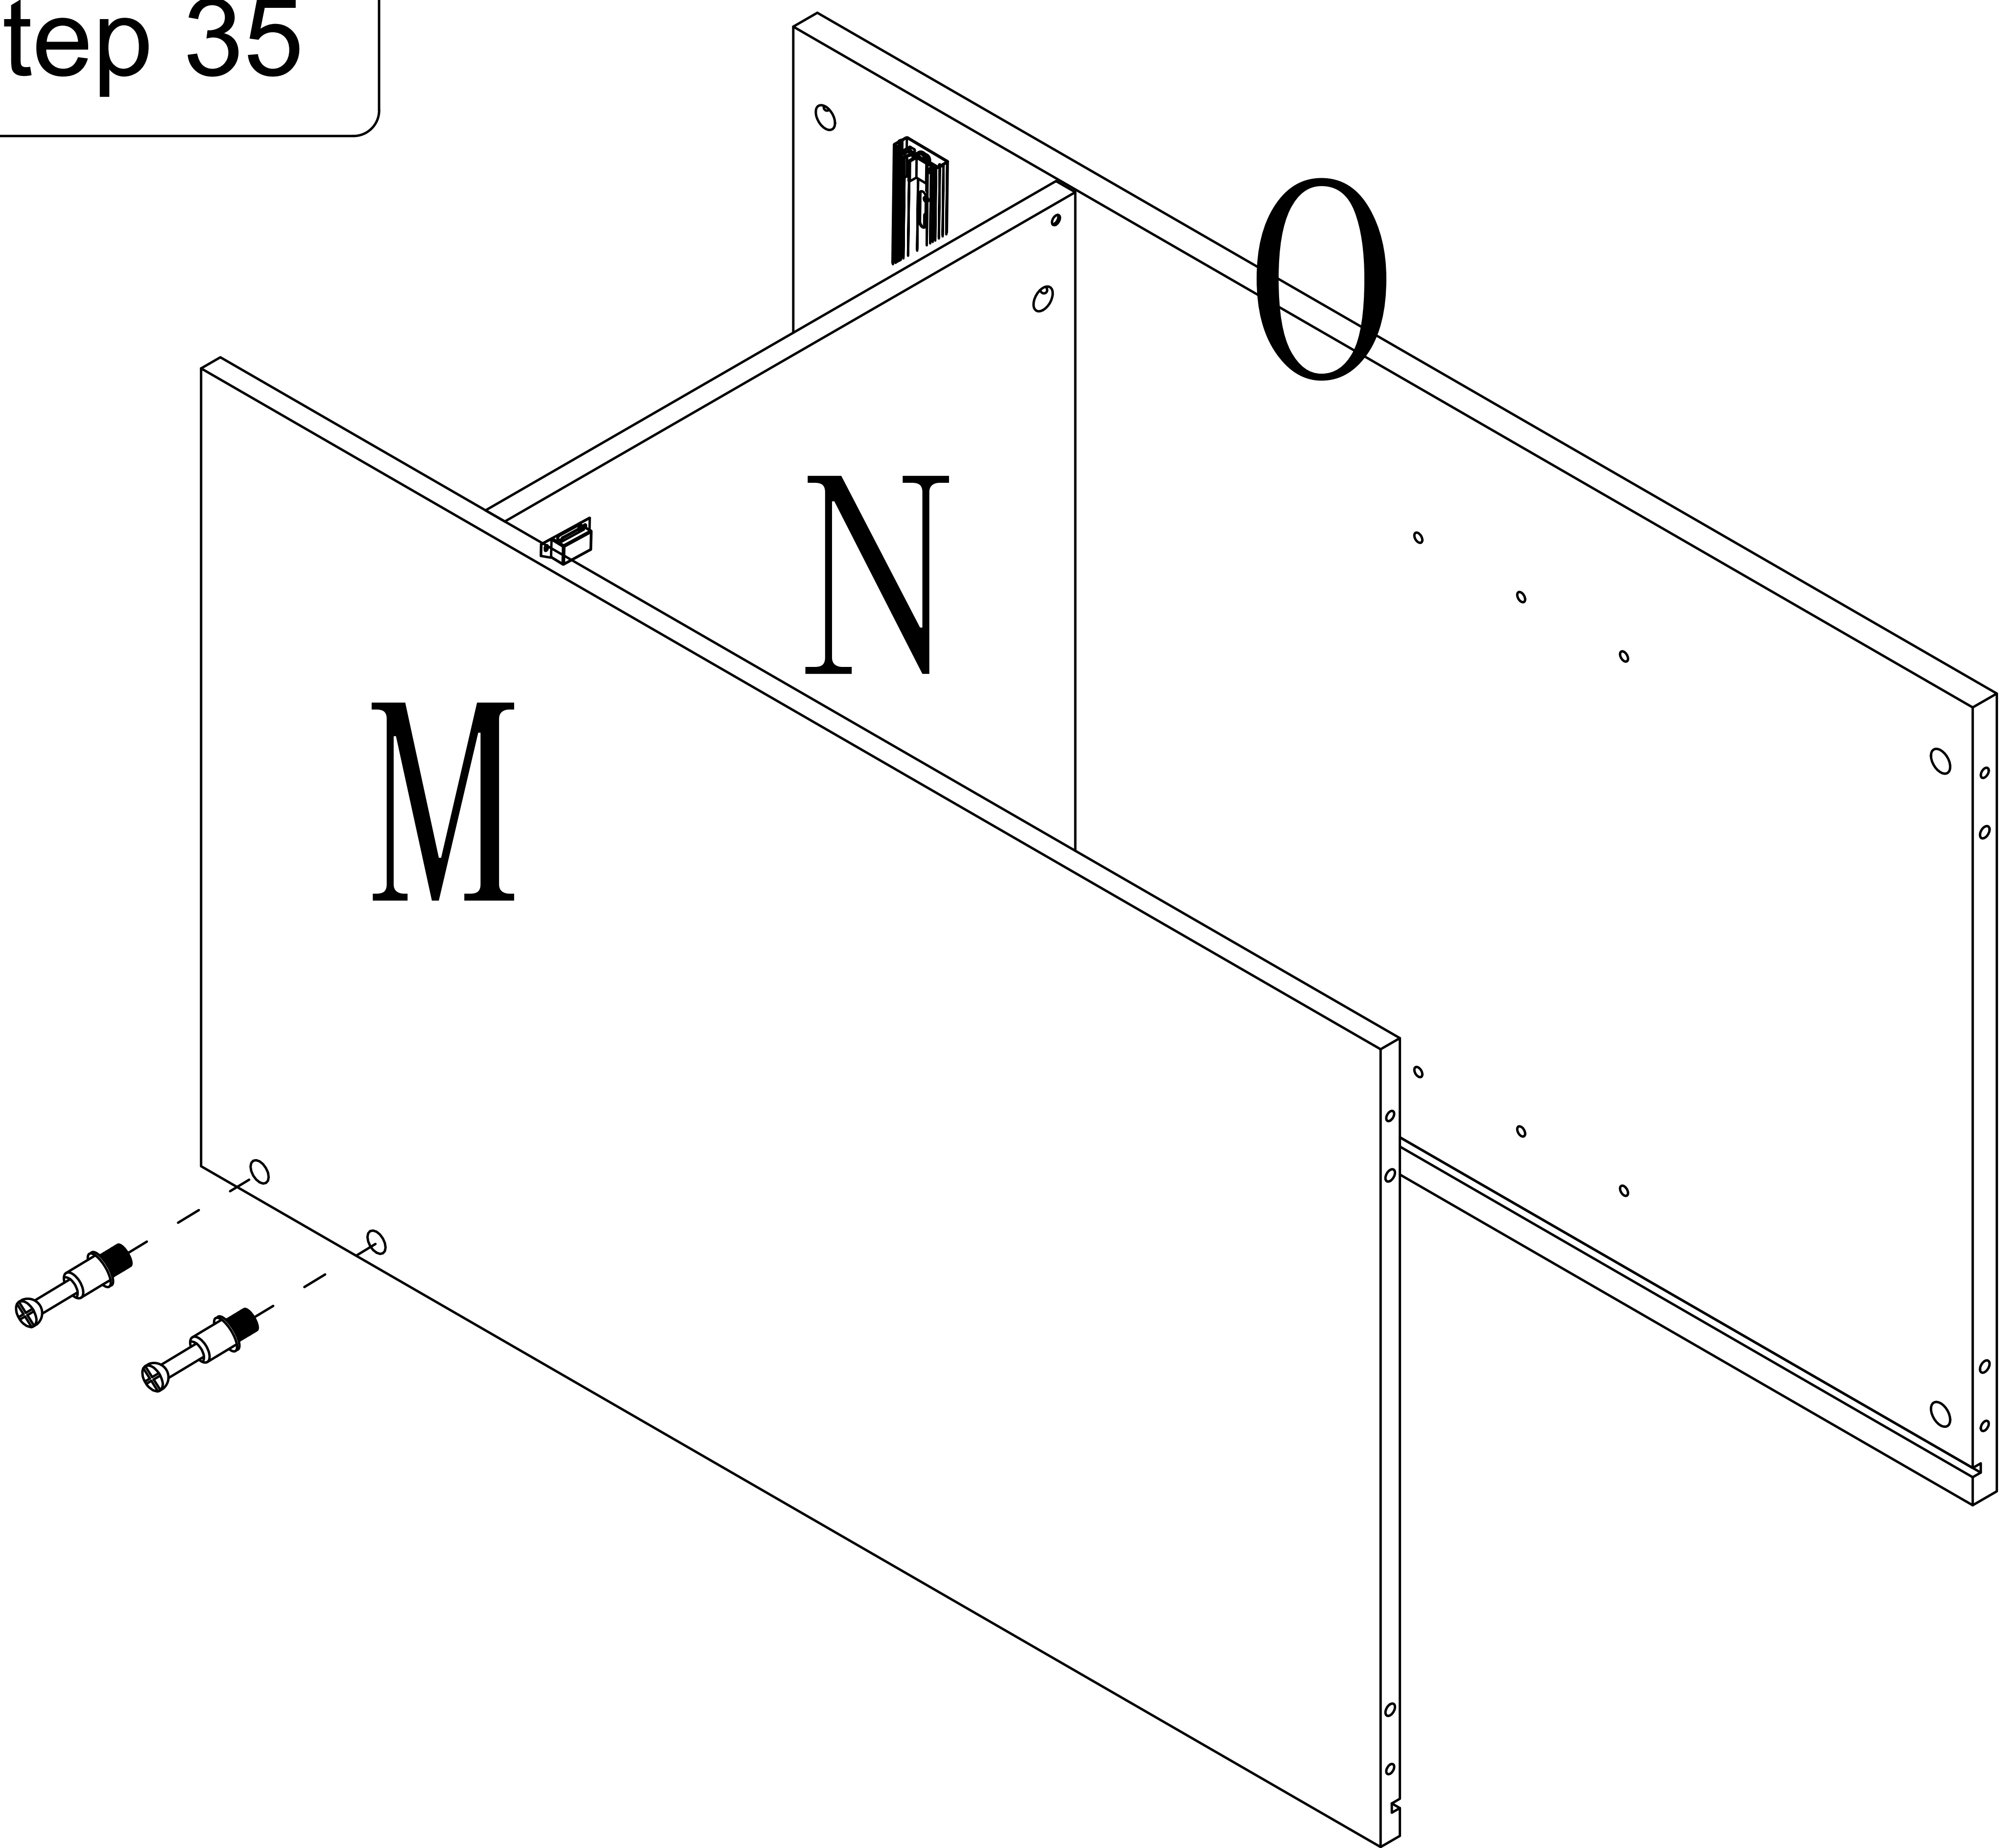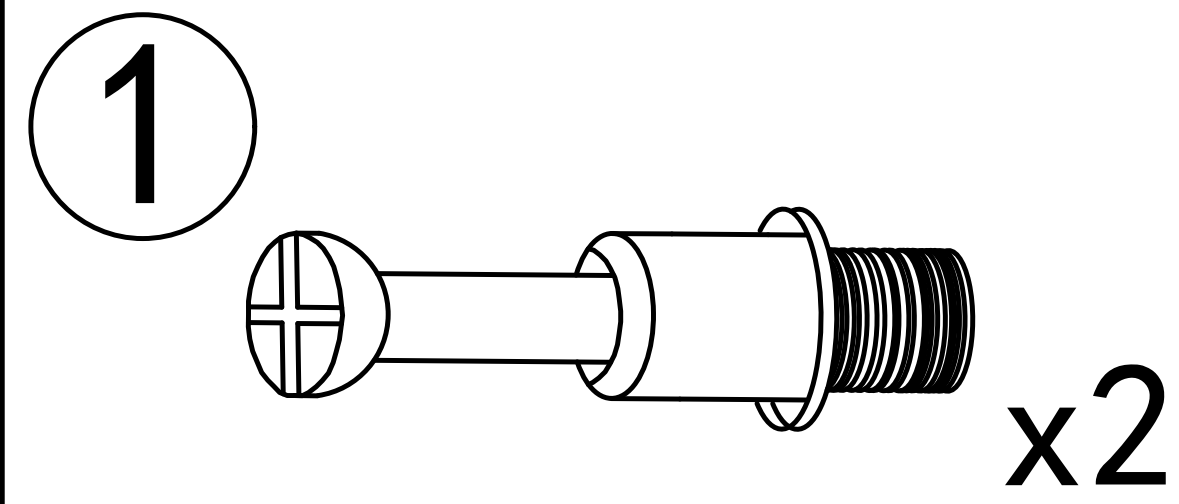


Step 36

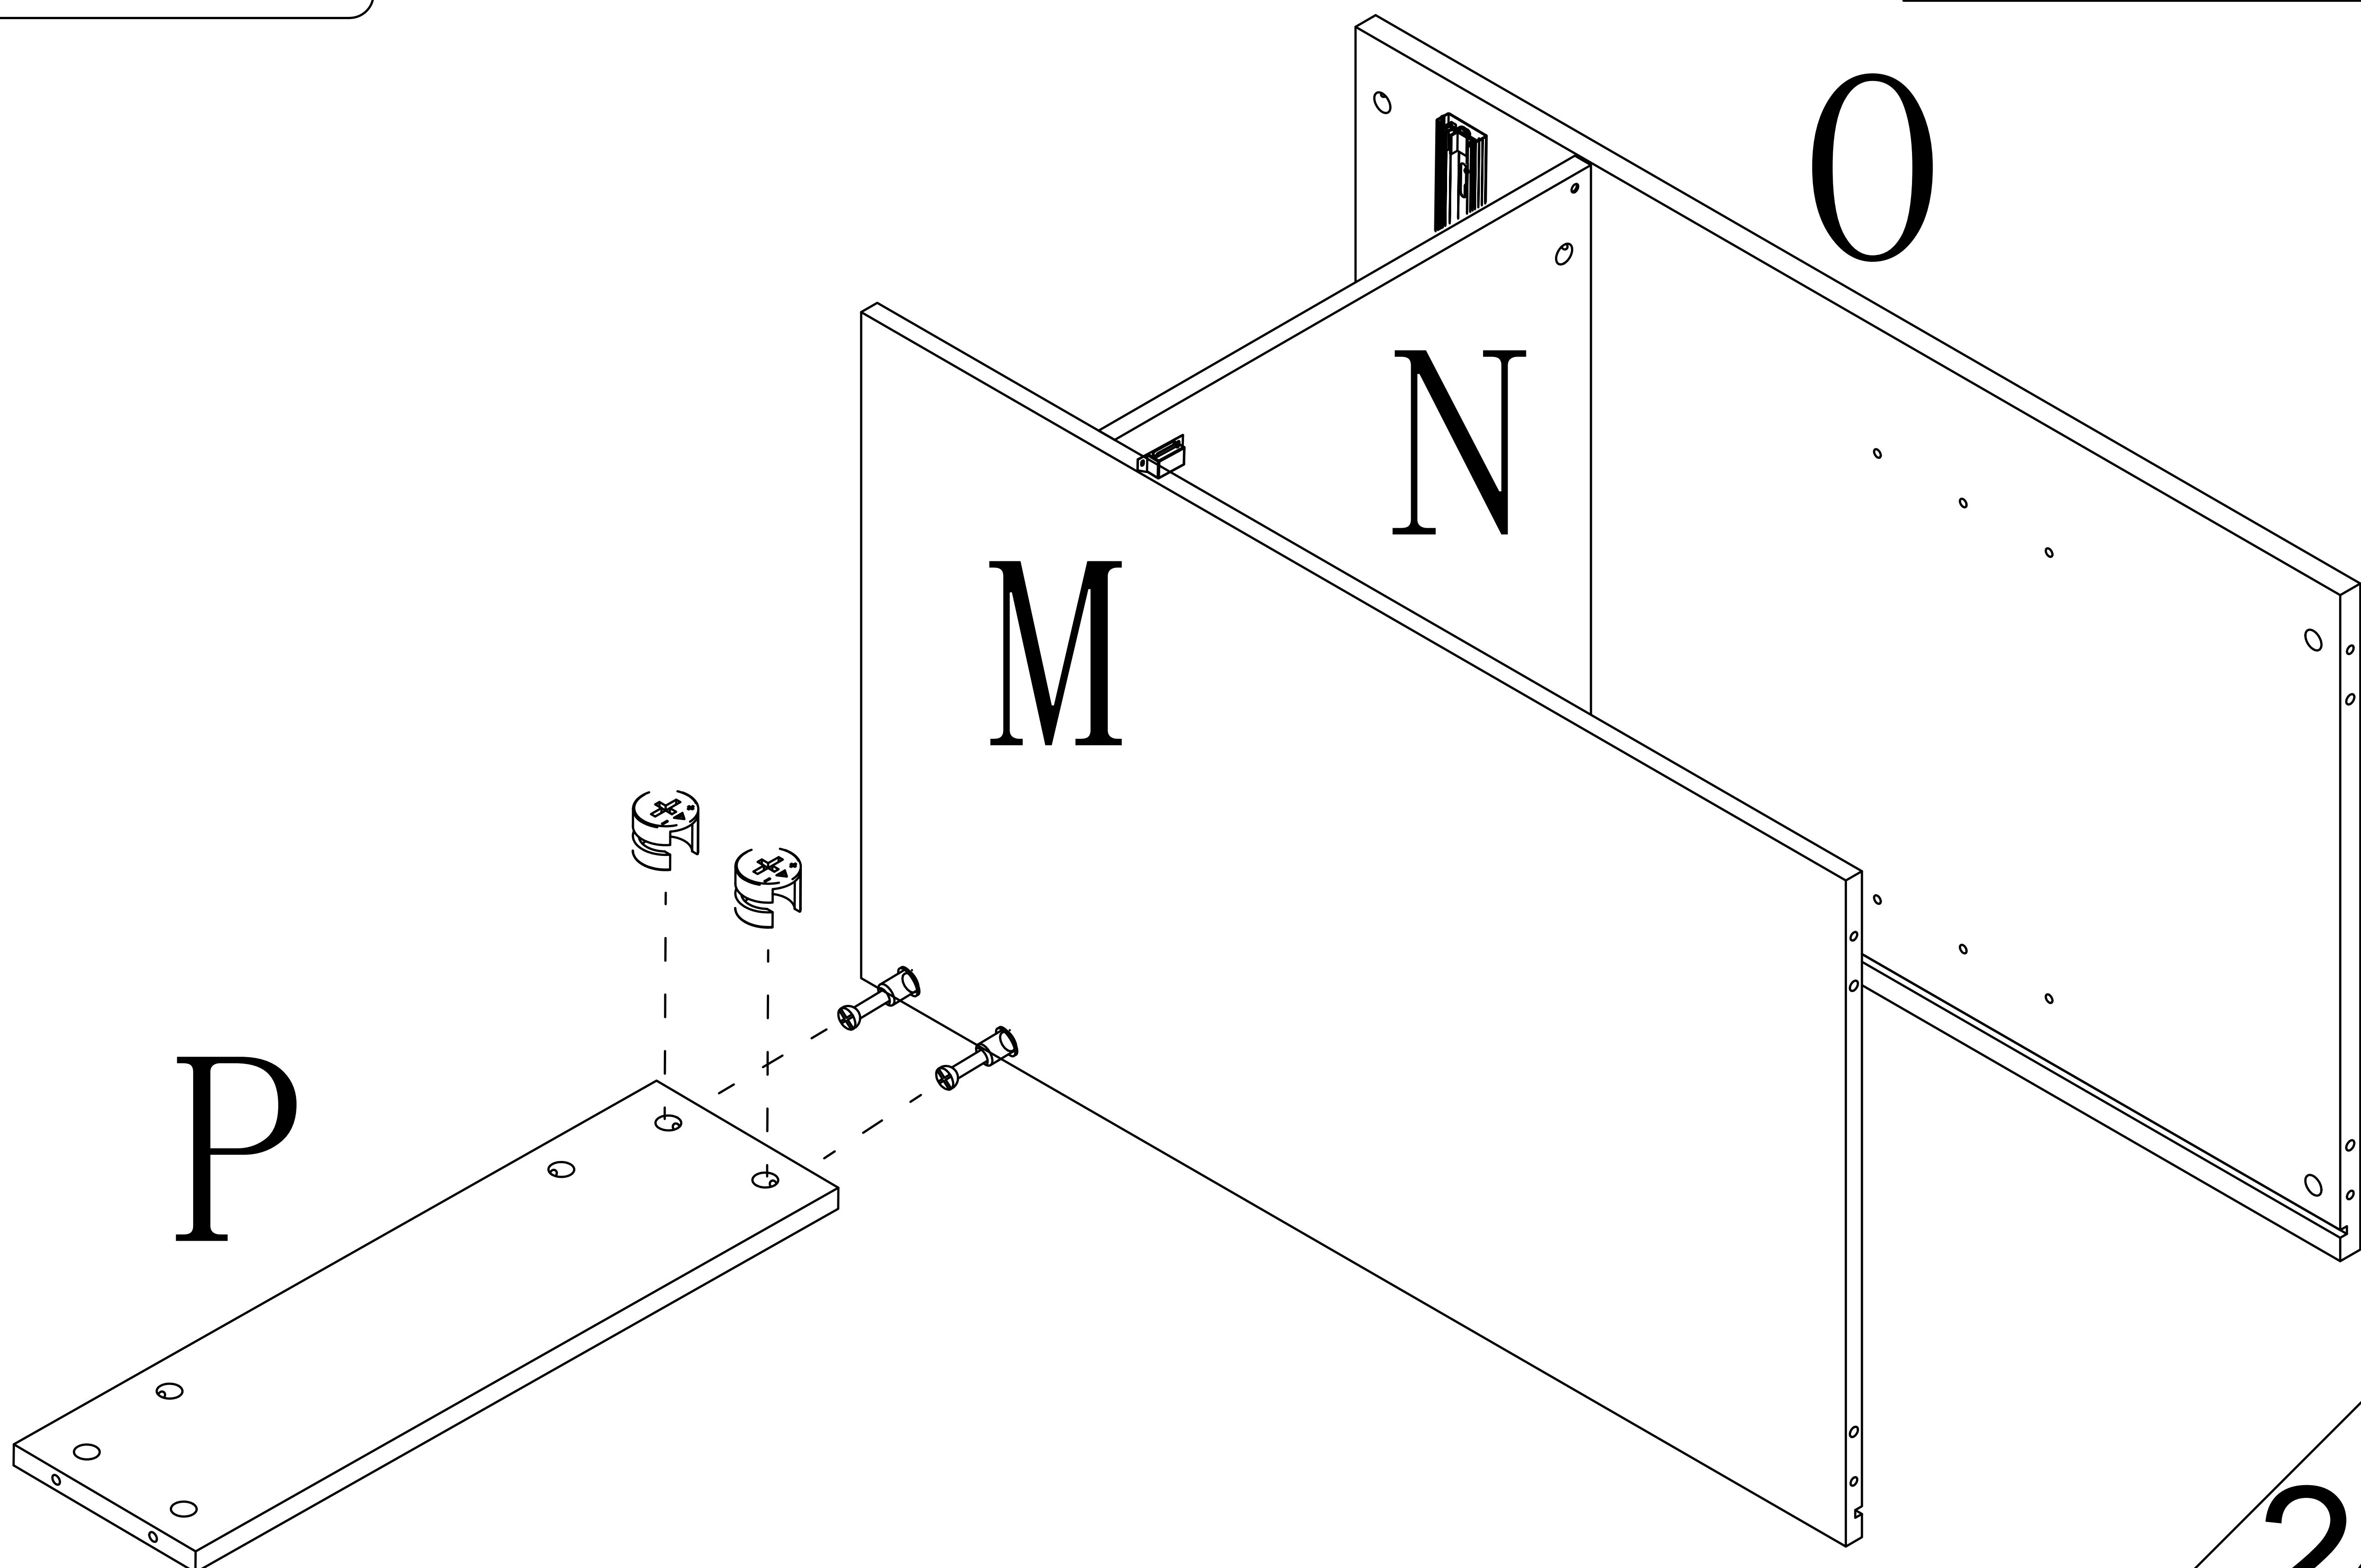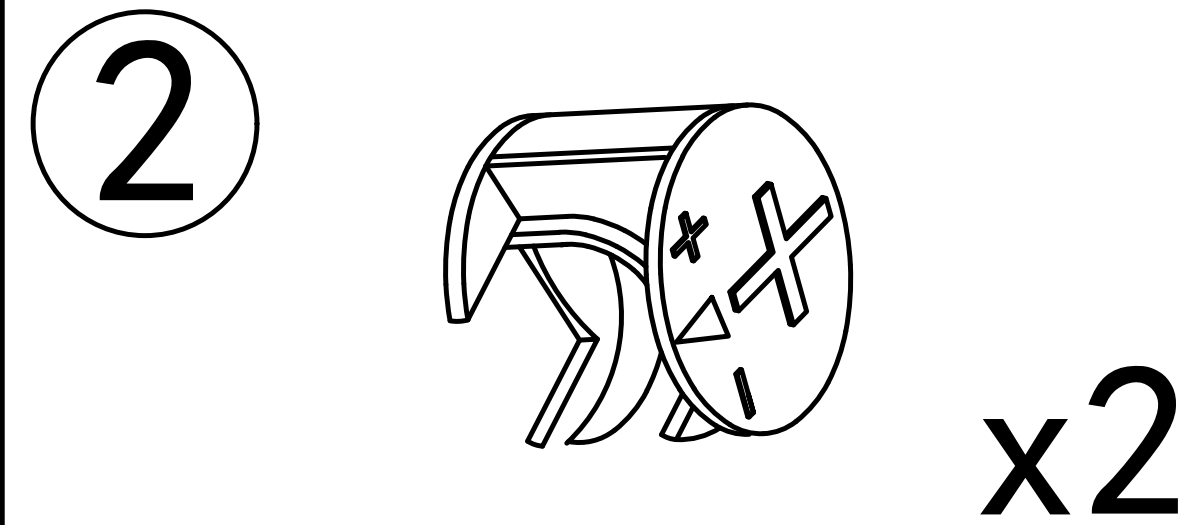


Step 37

2

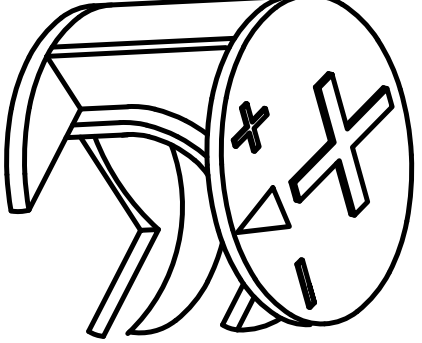

x2

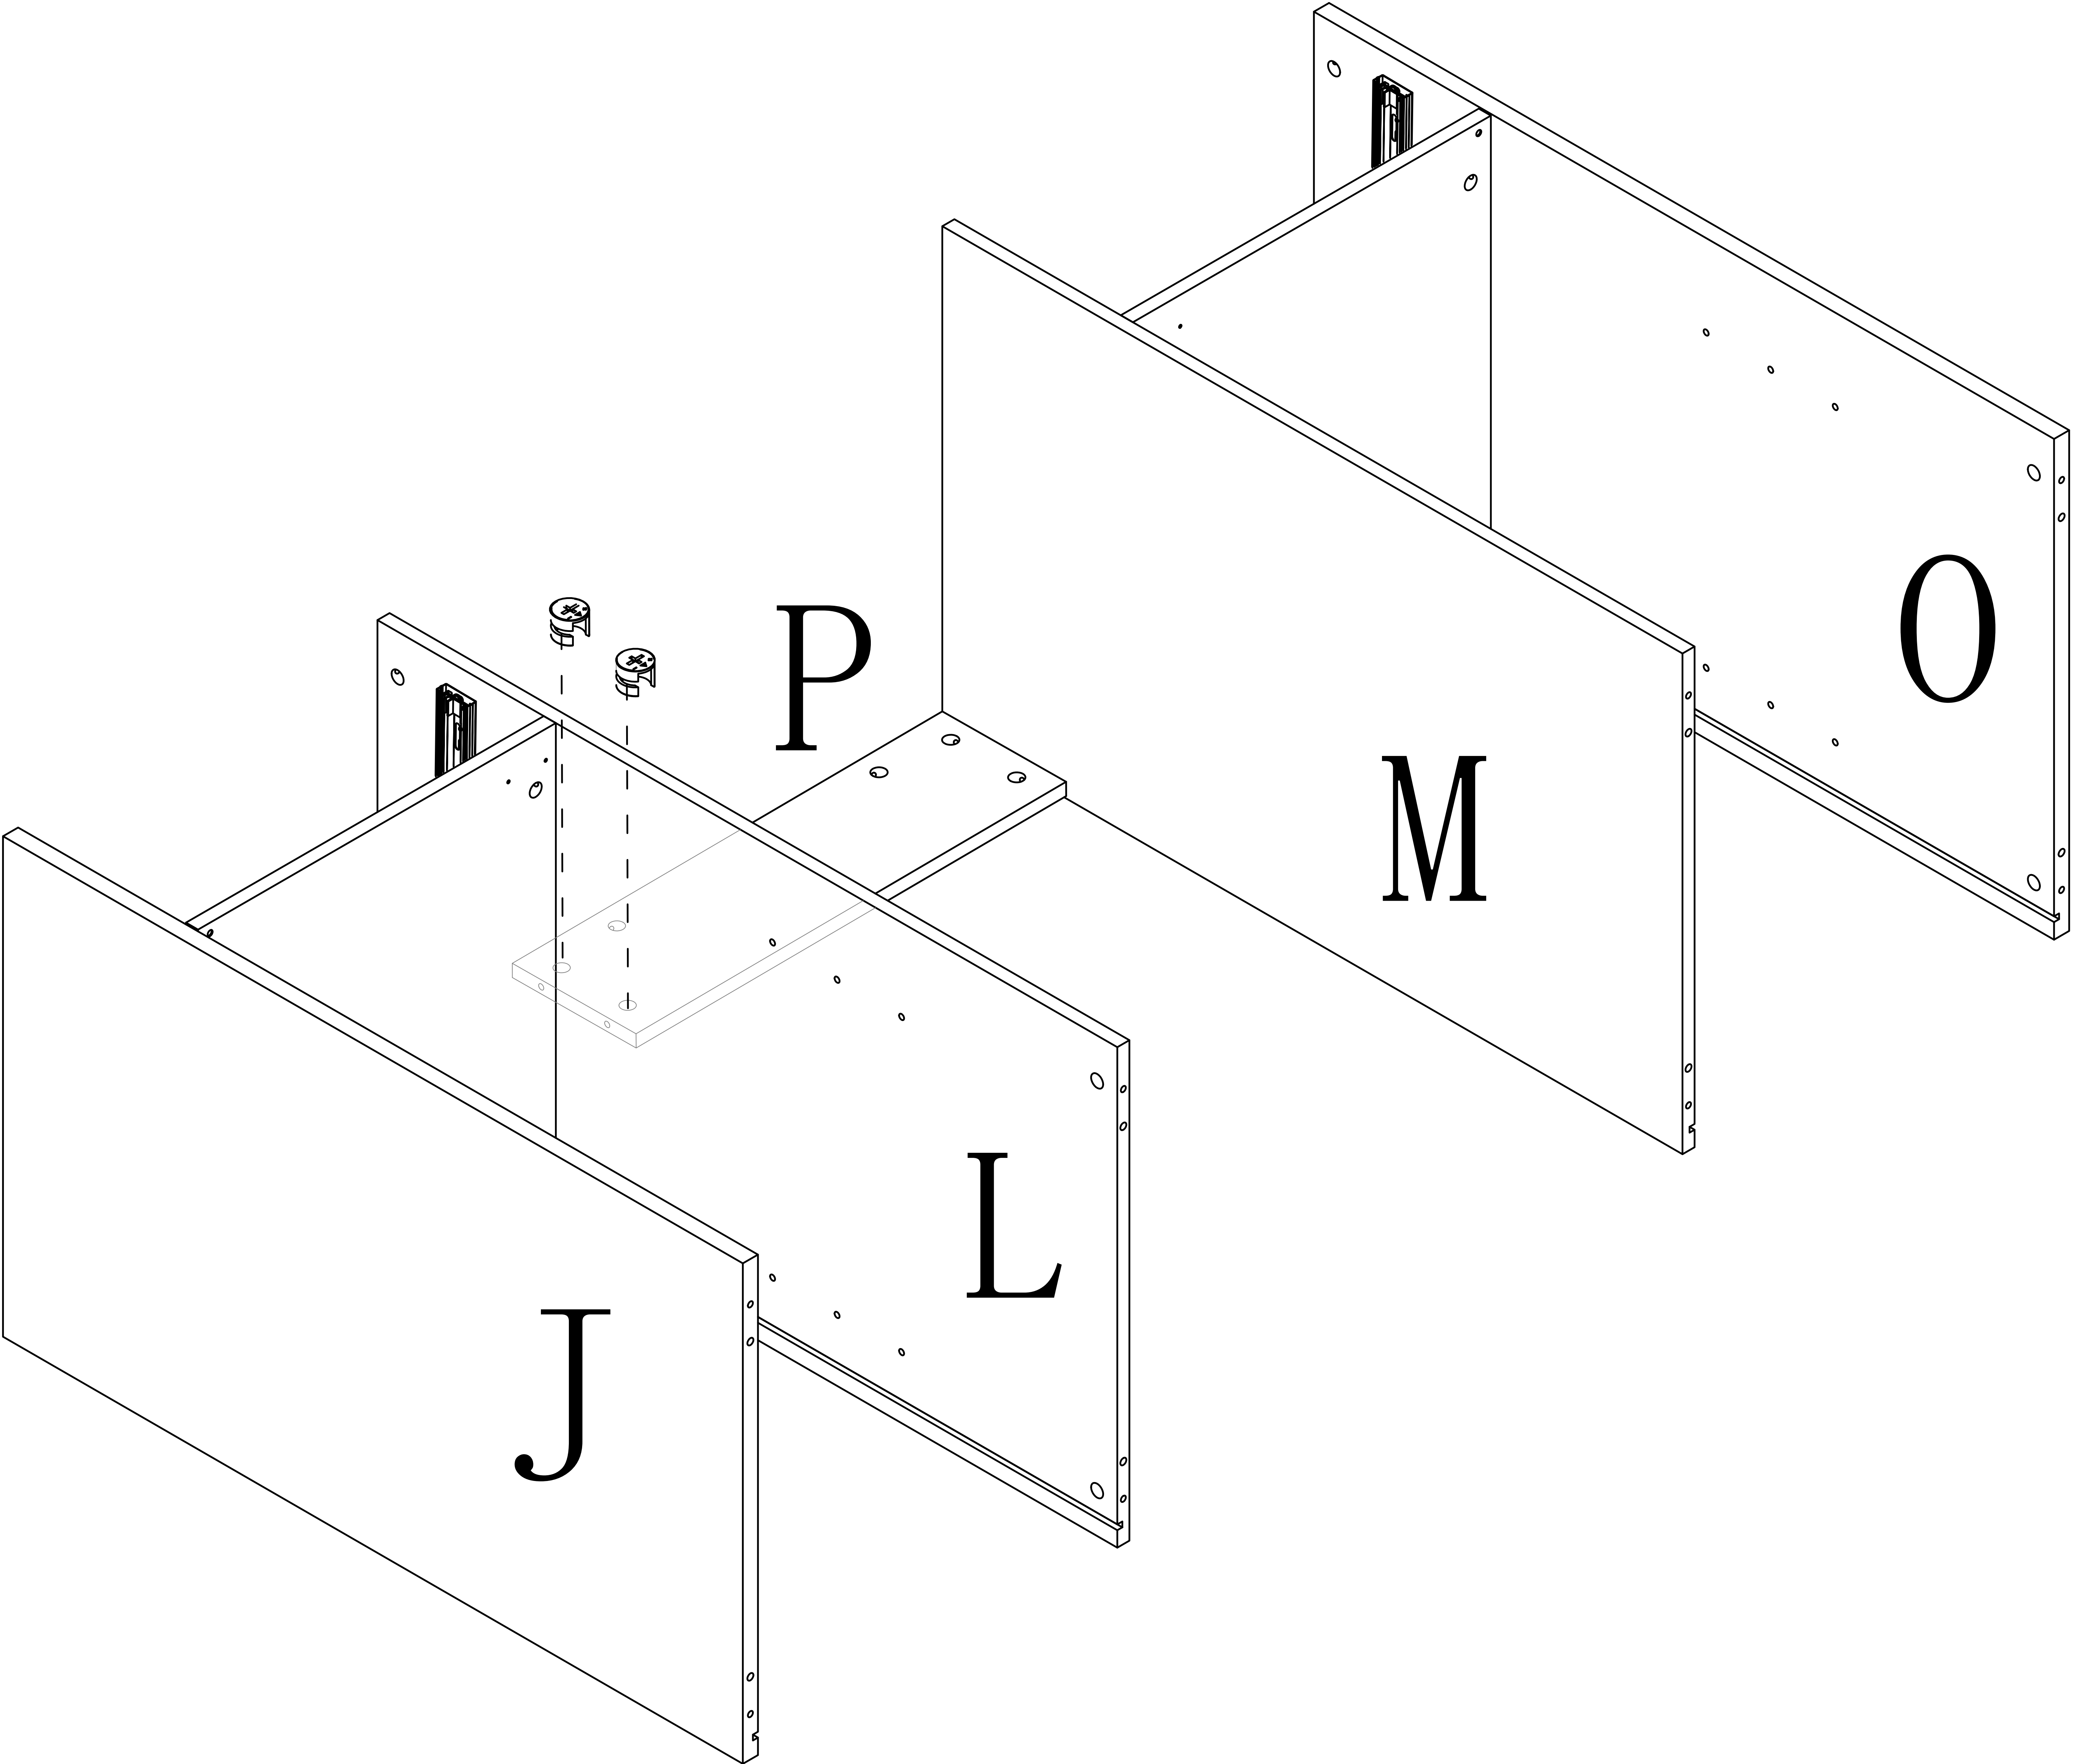


Step 38

3




x8

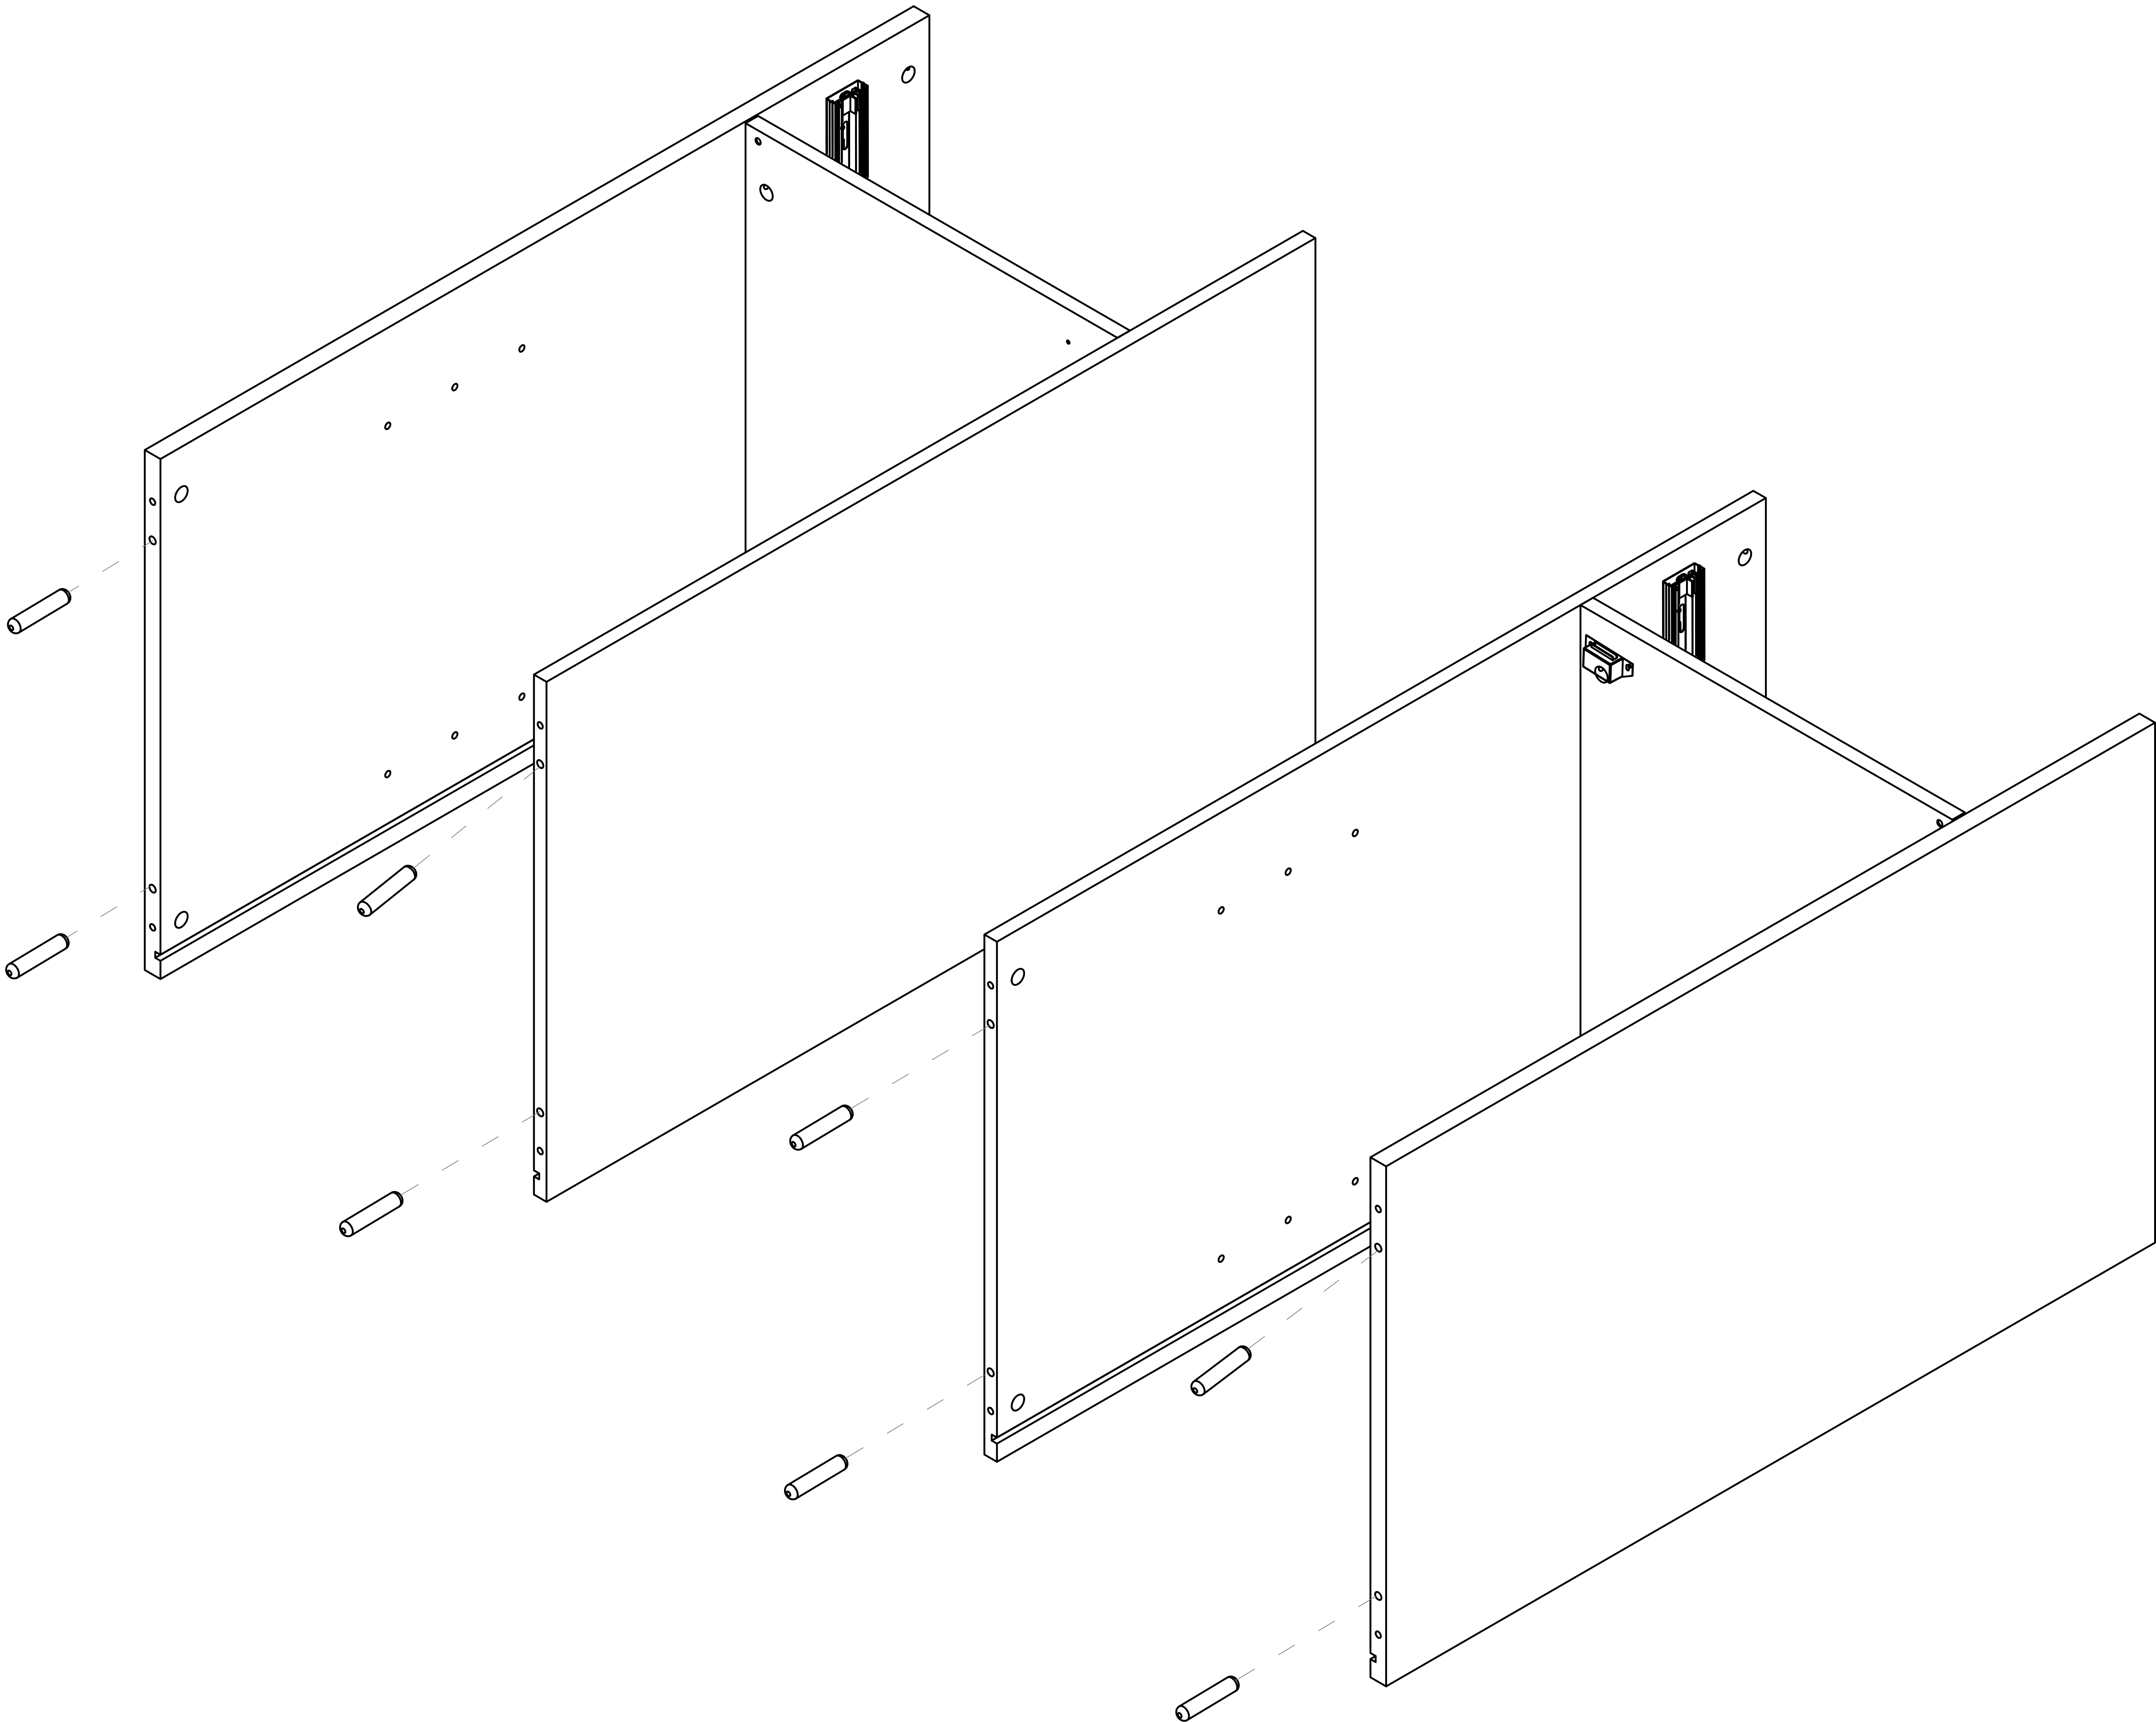


Step 39


2

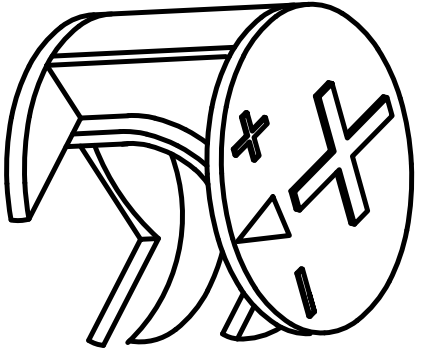

x8

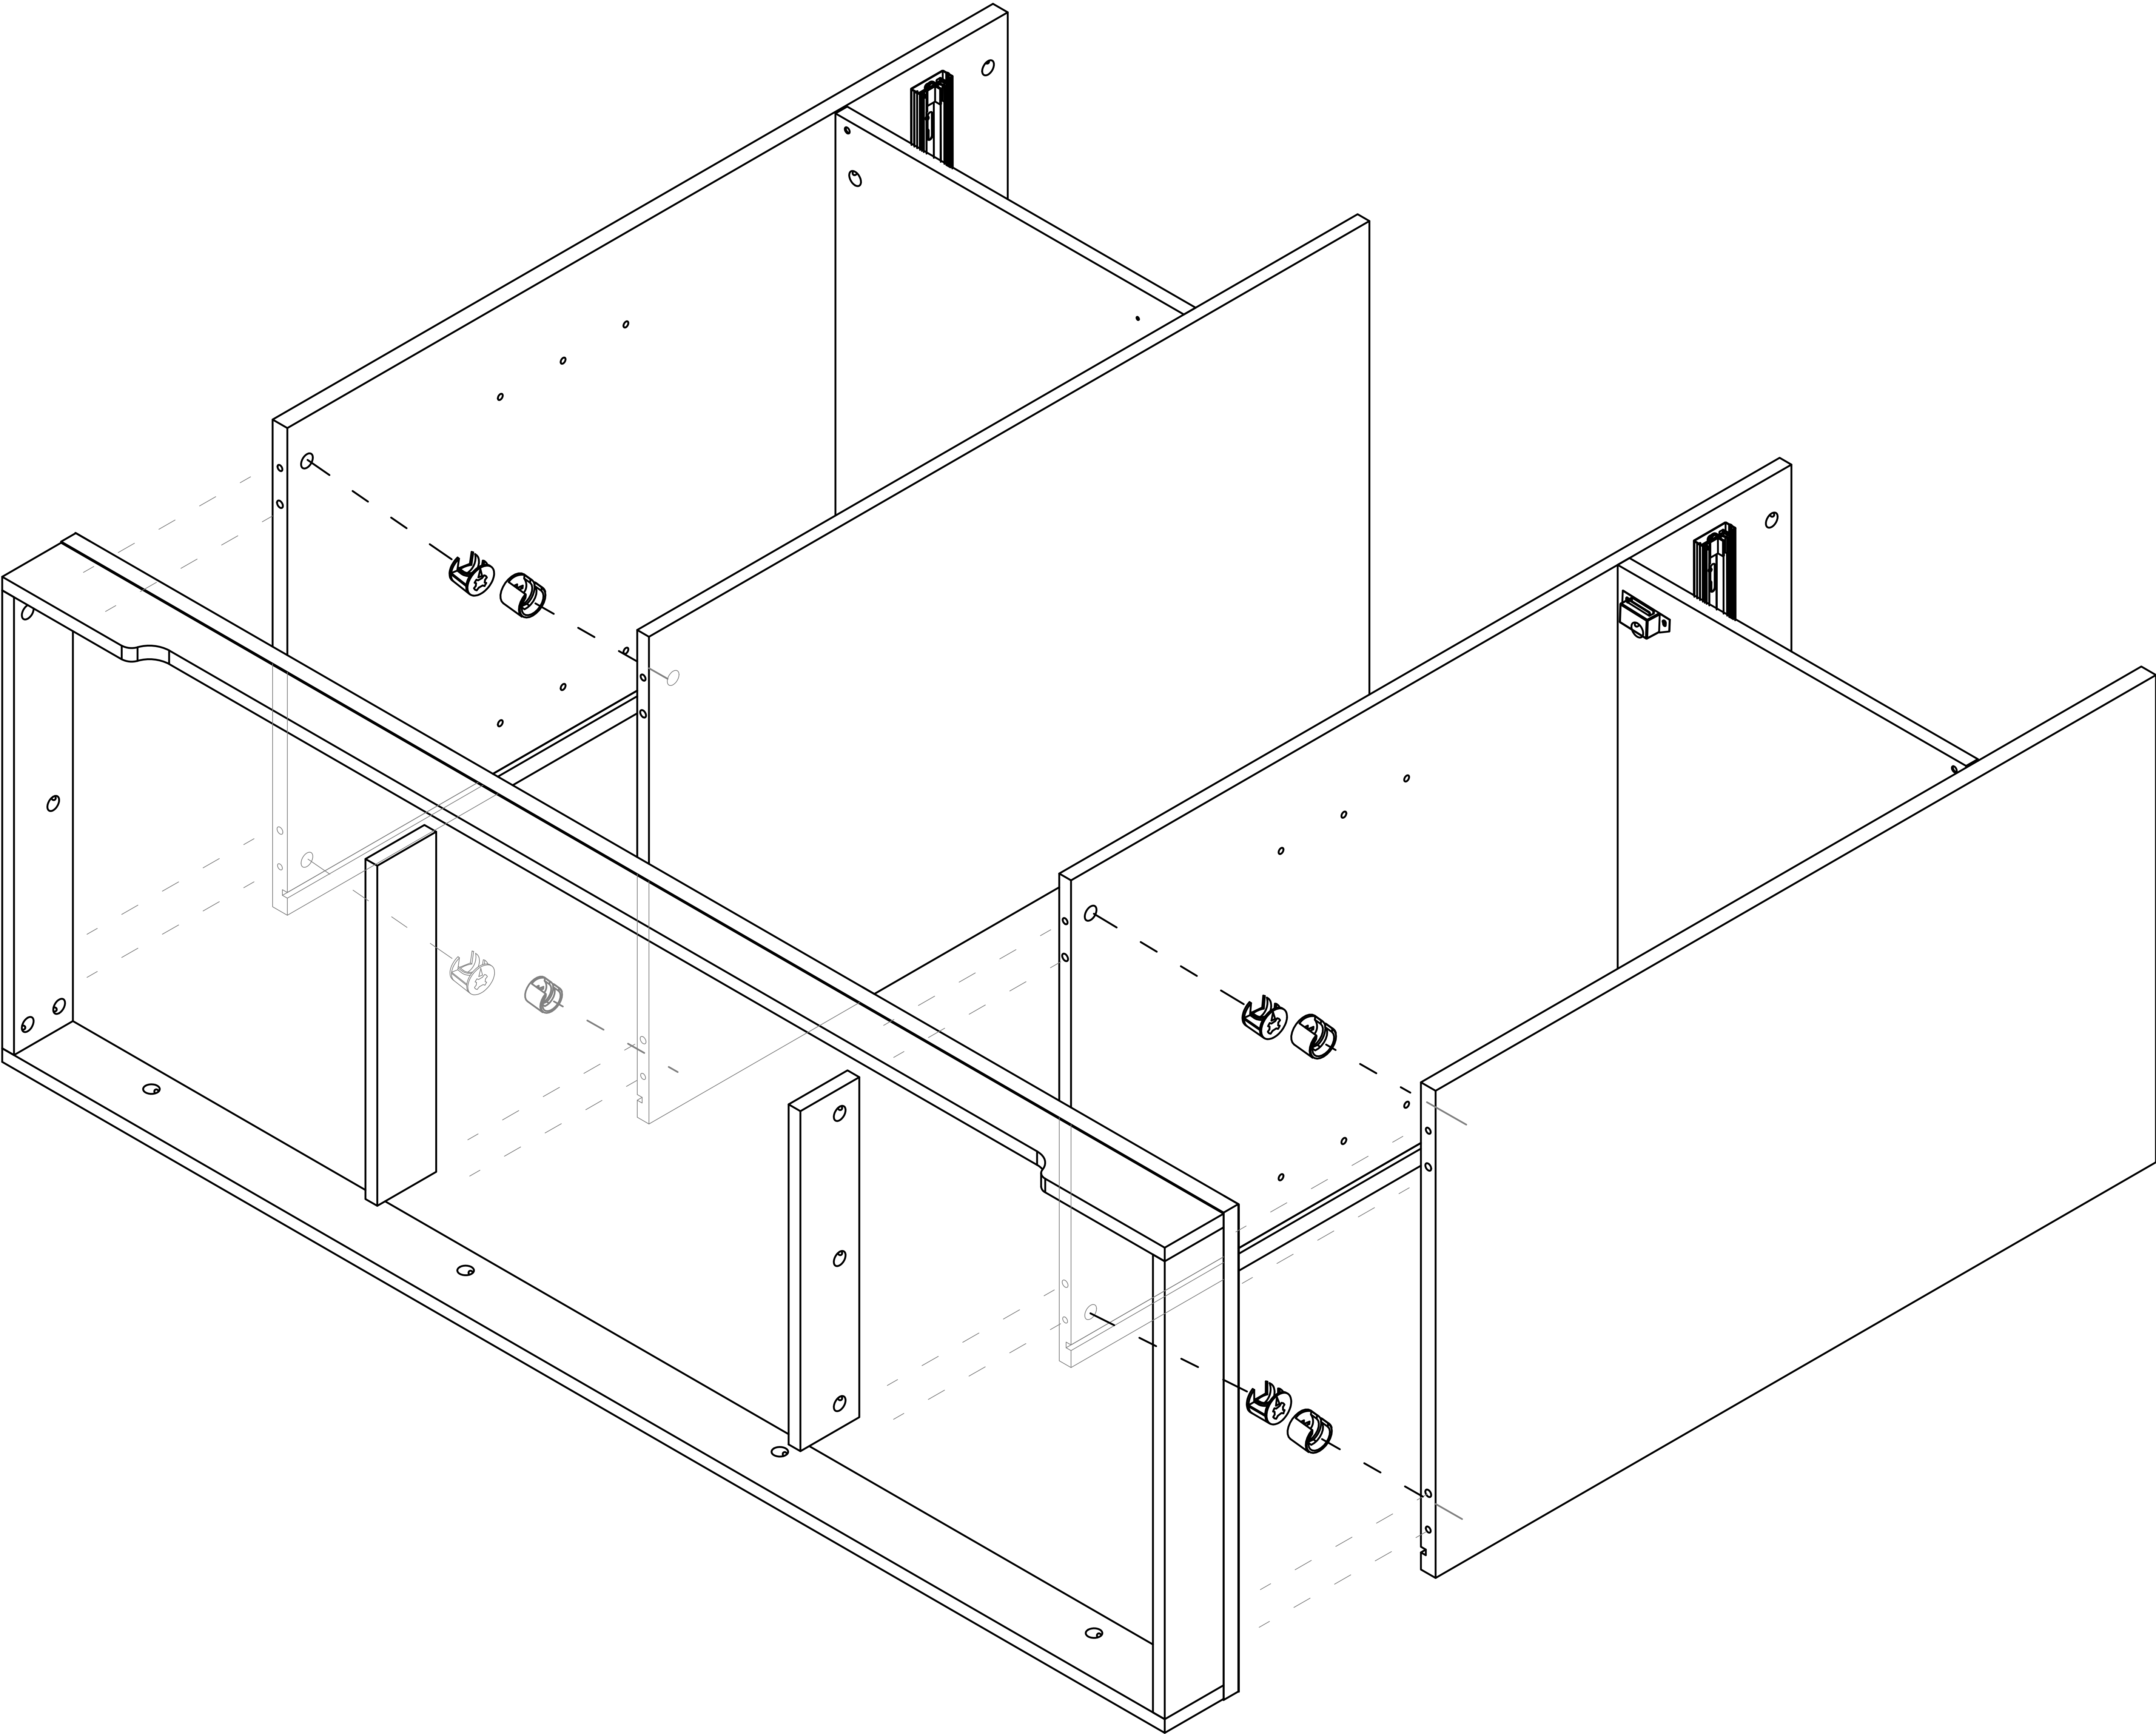

Step 40

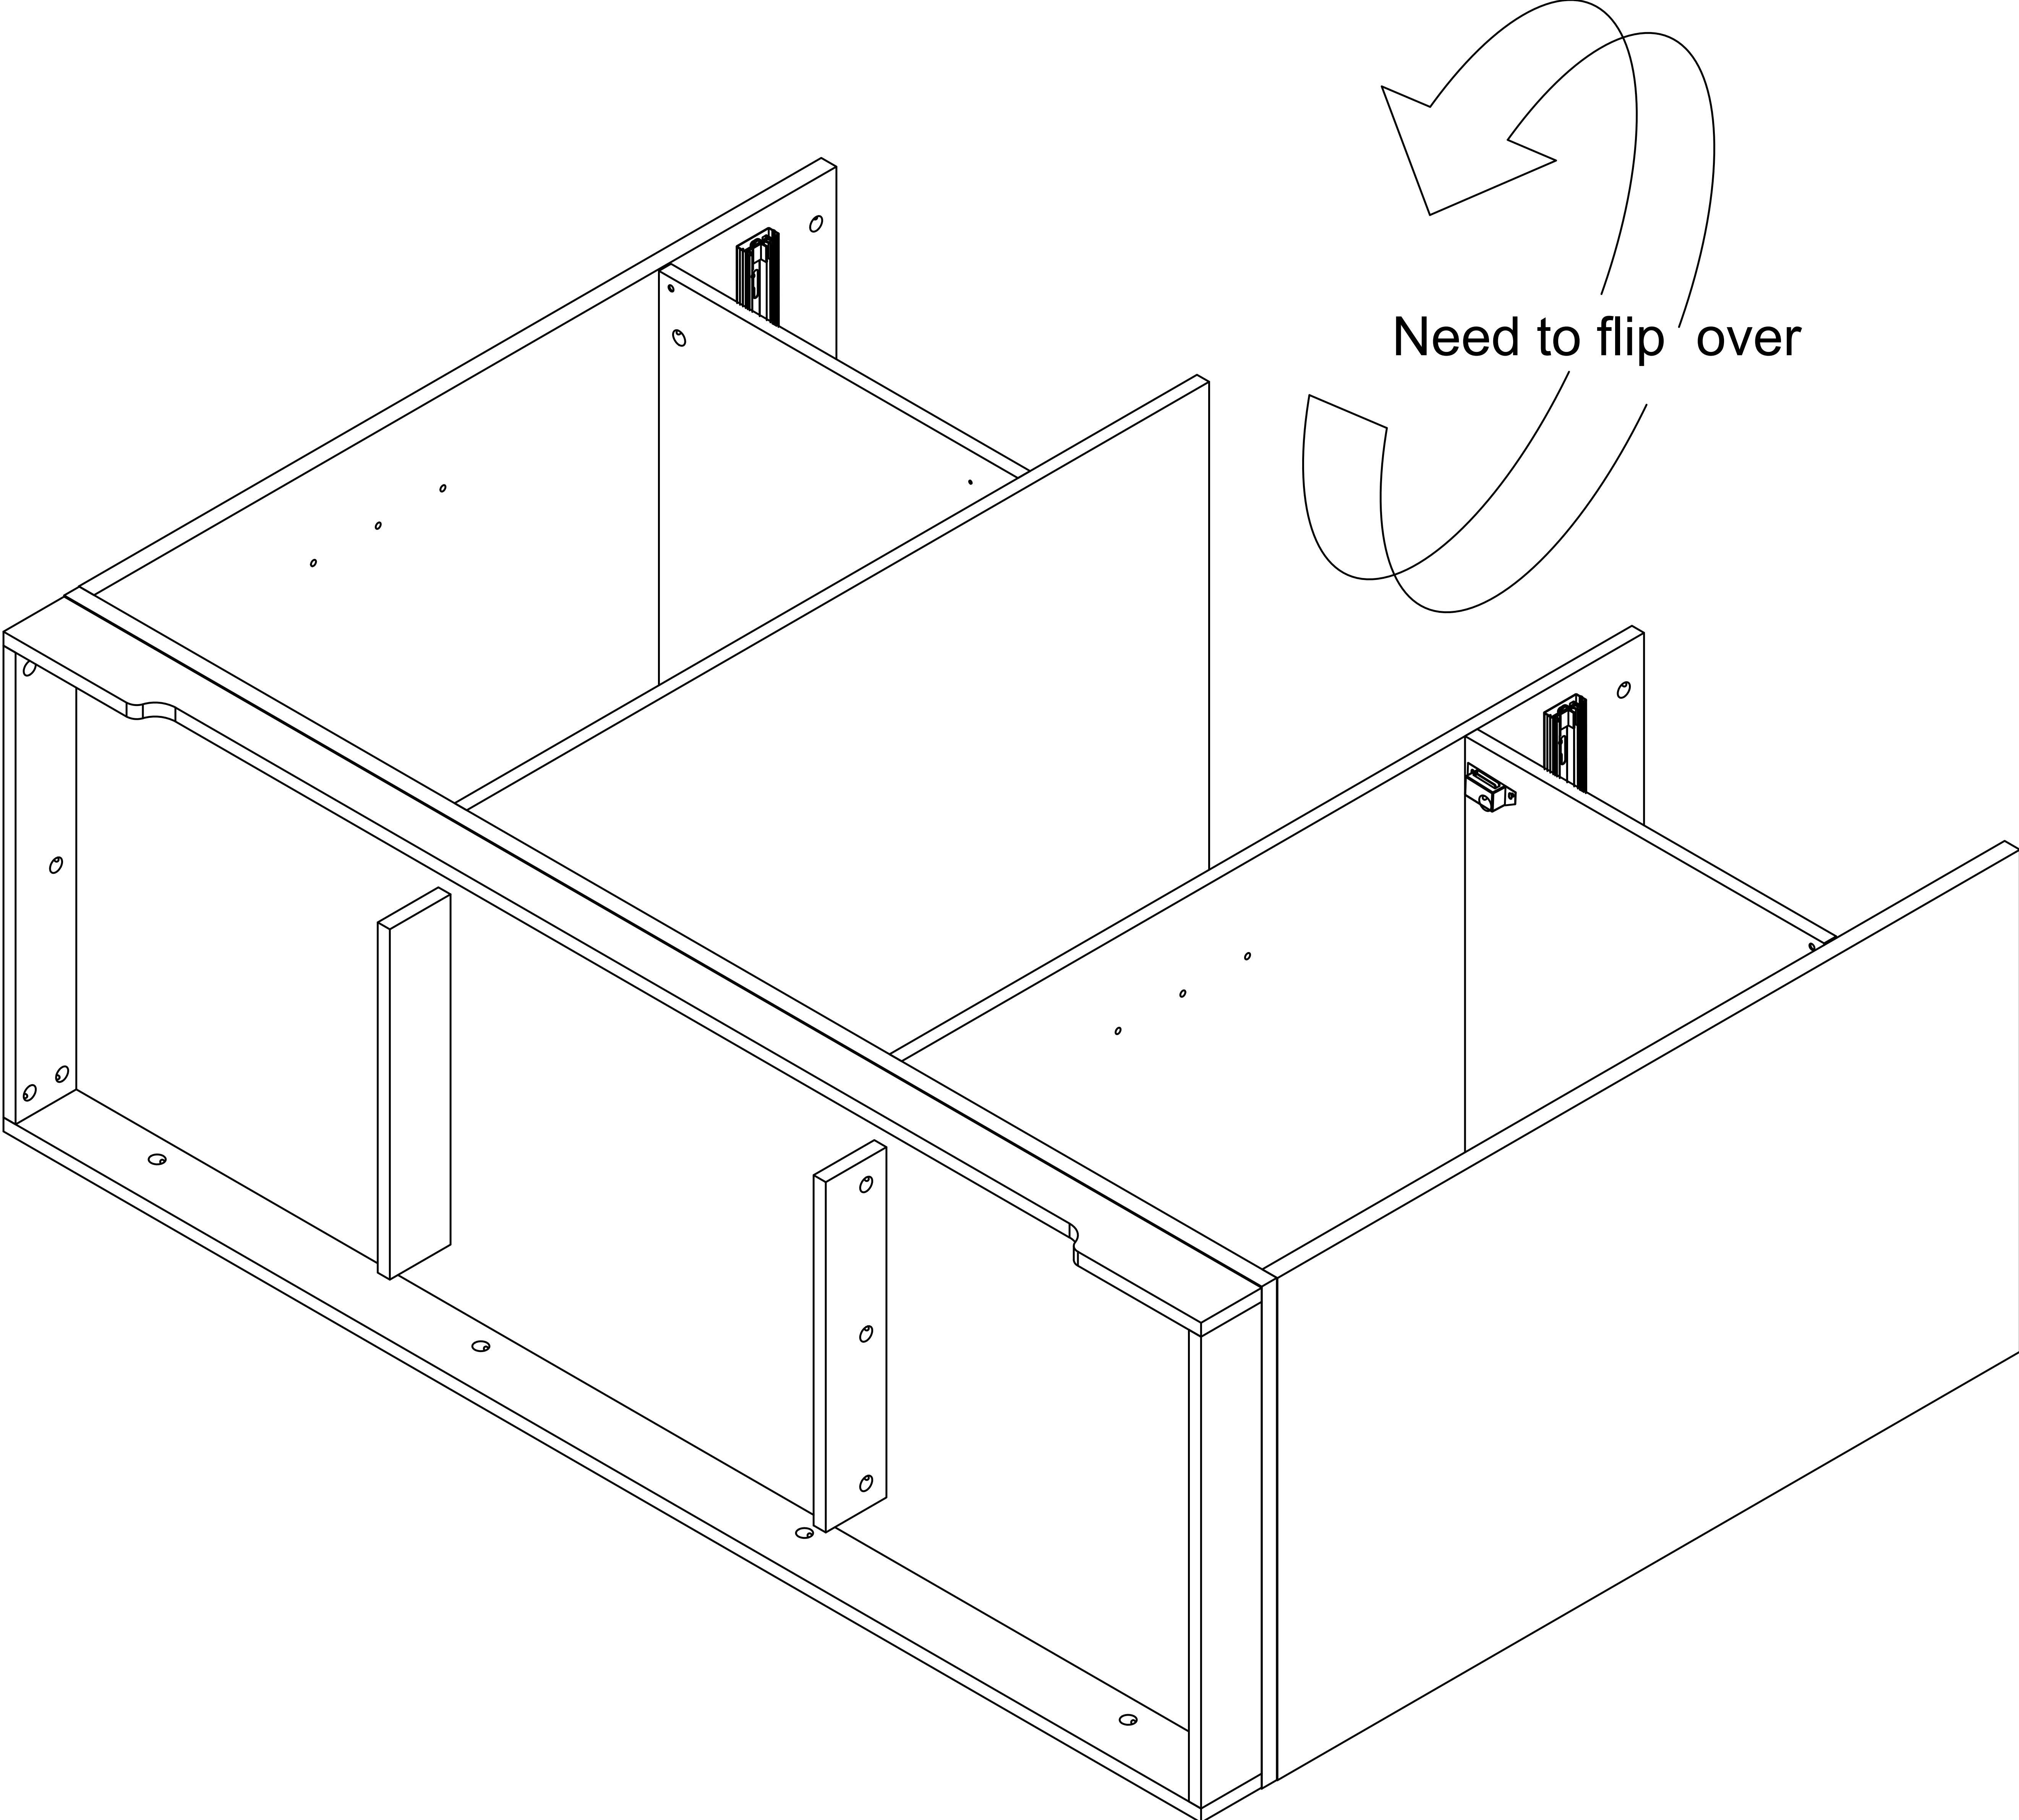


Step 41


3





x8

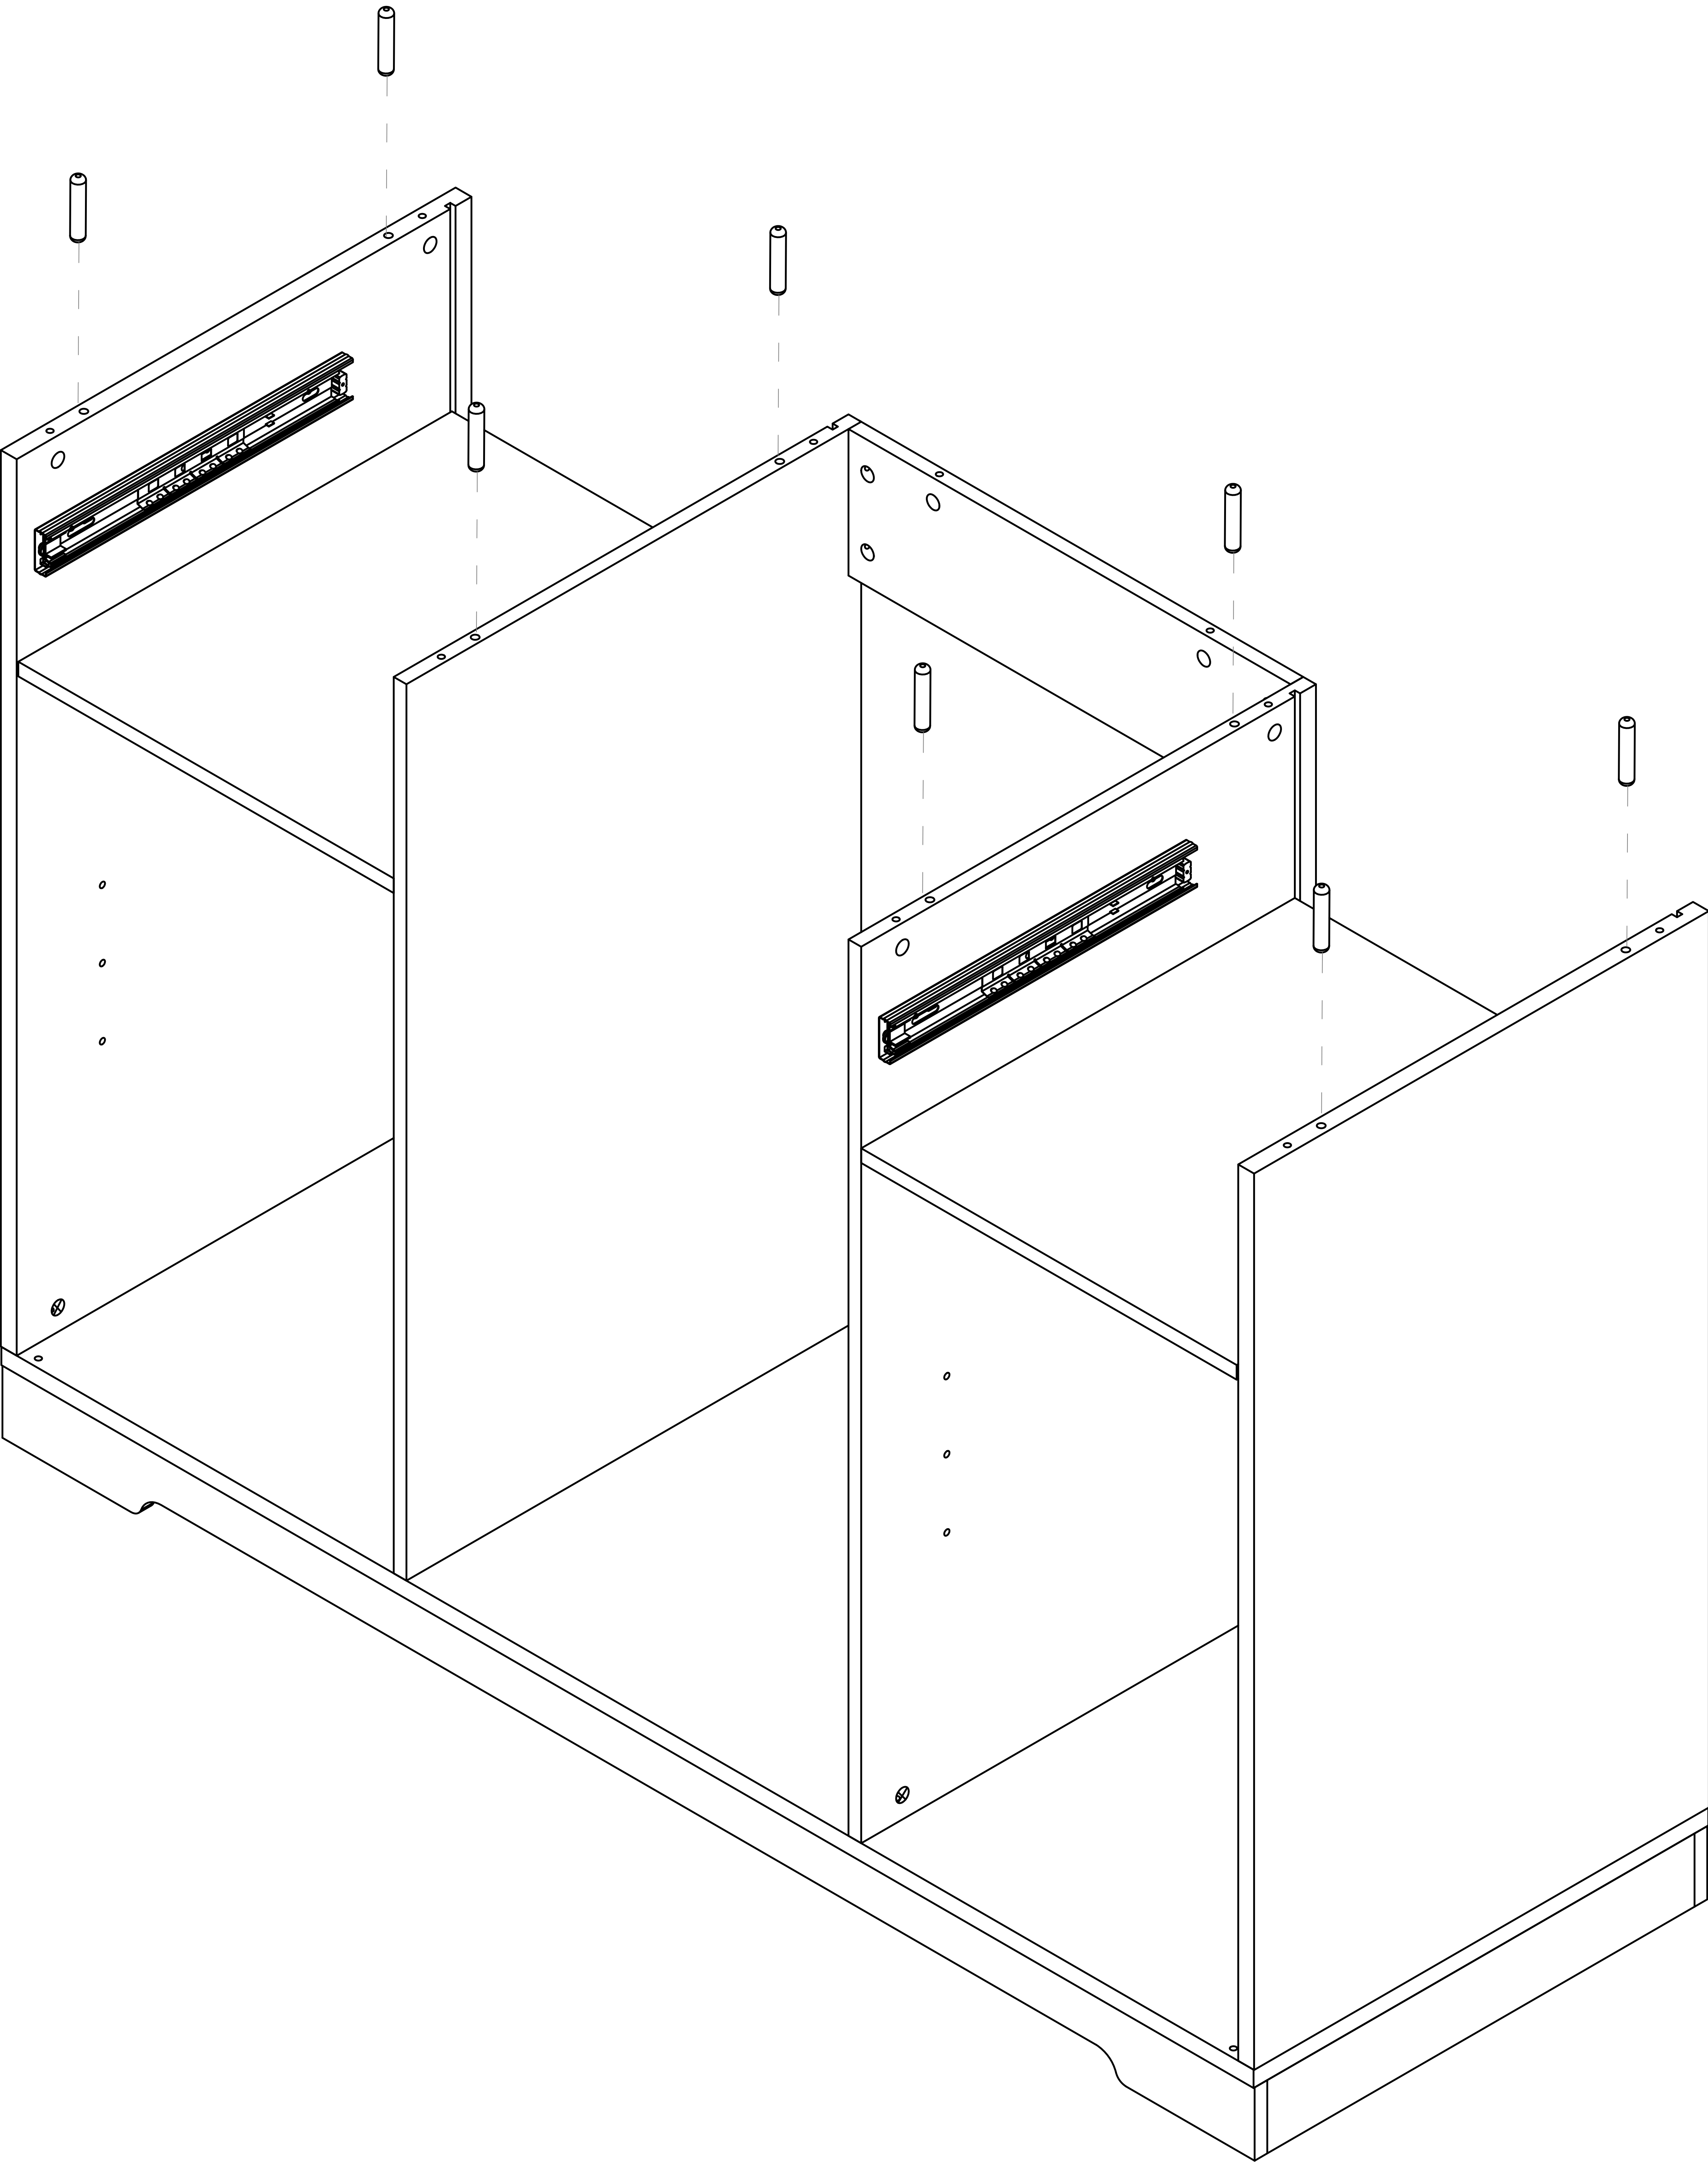

Step 42

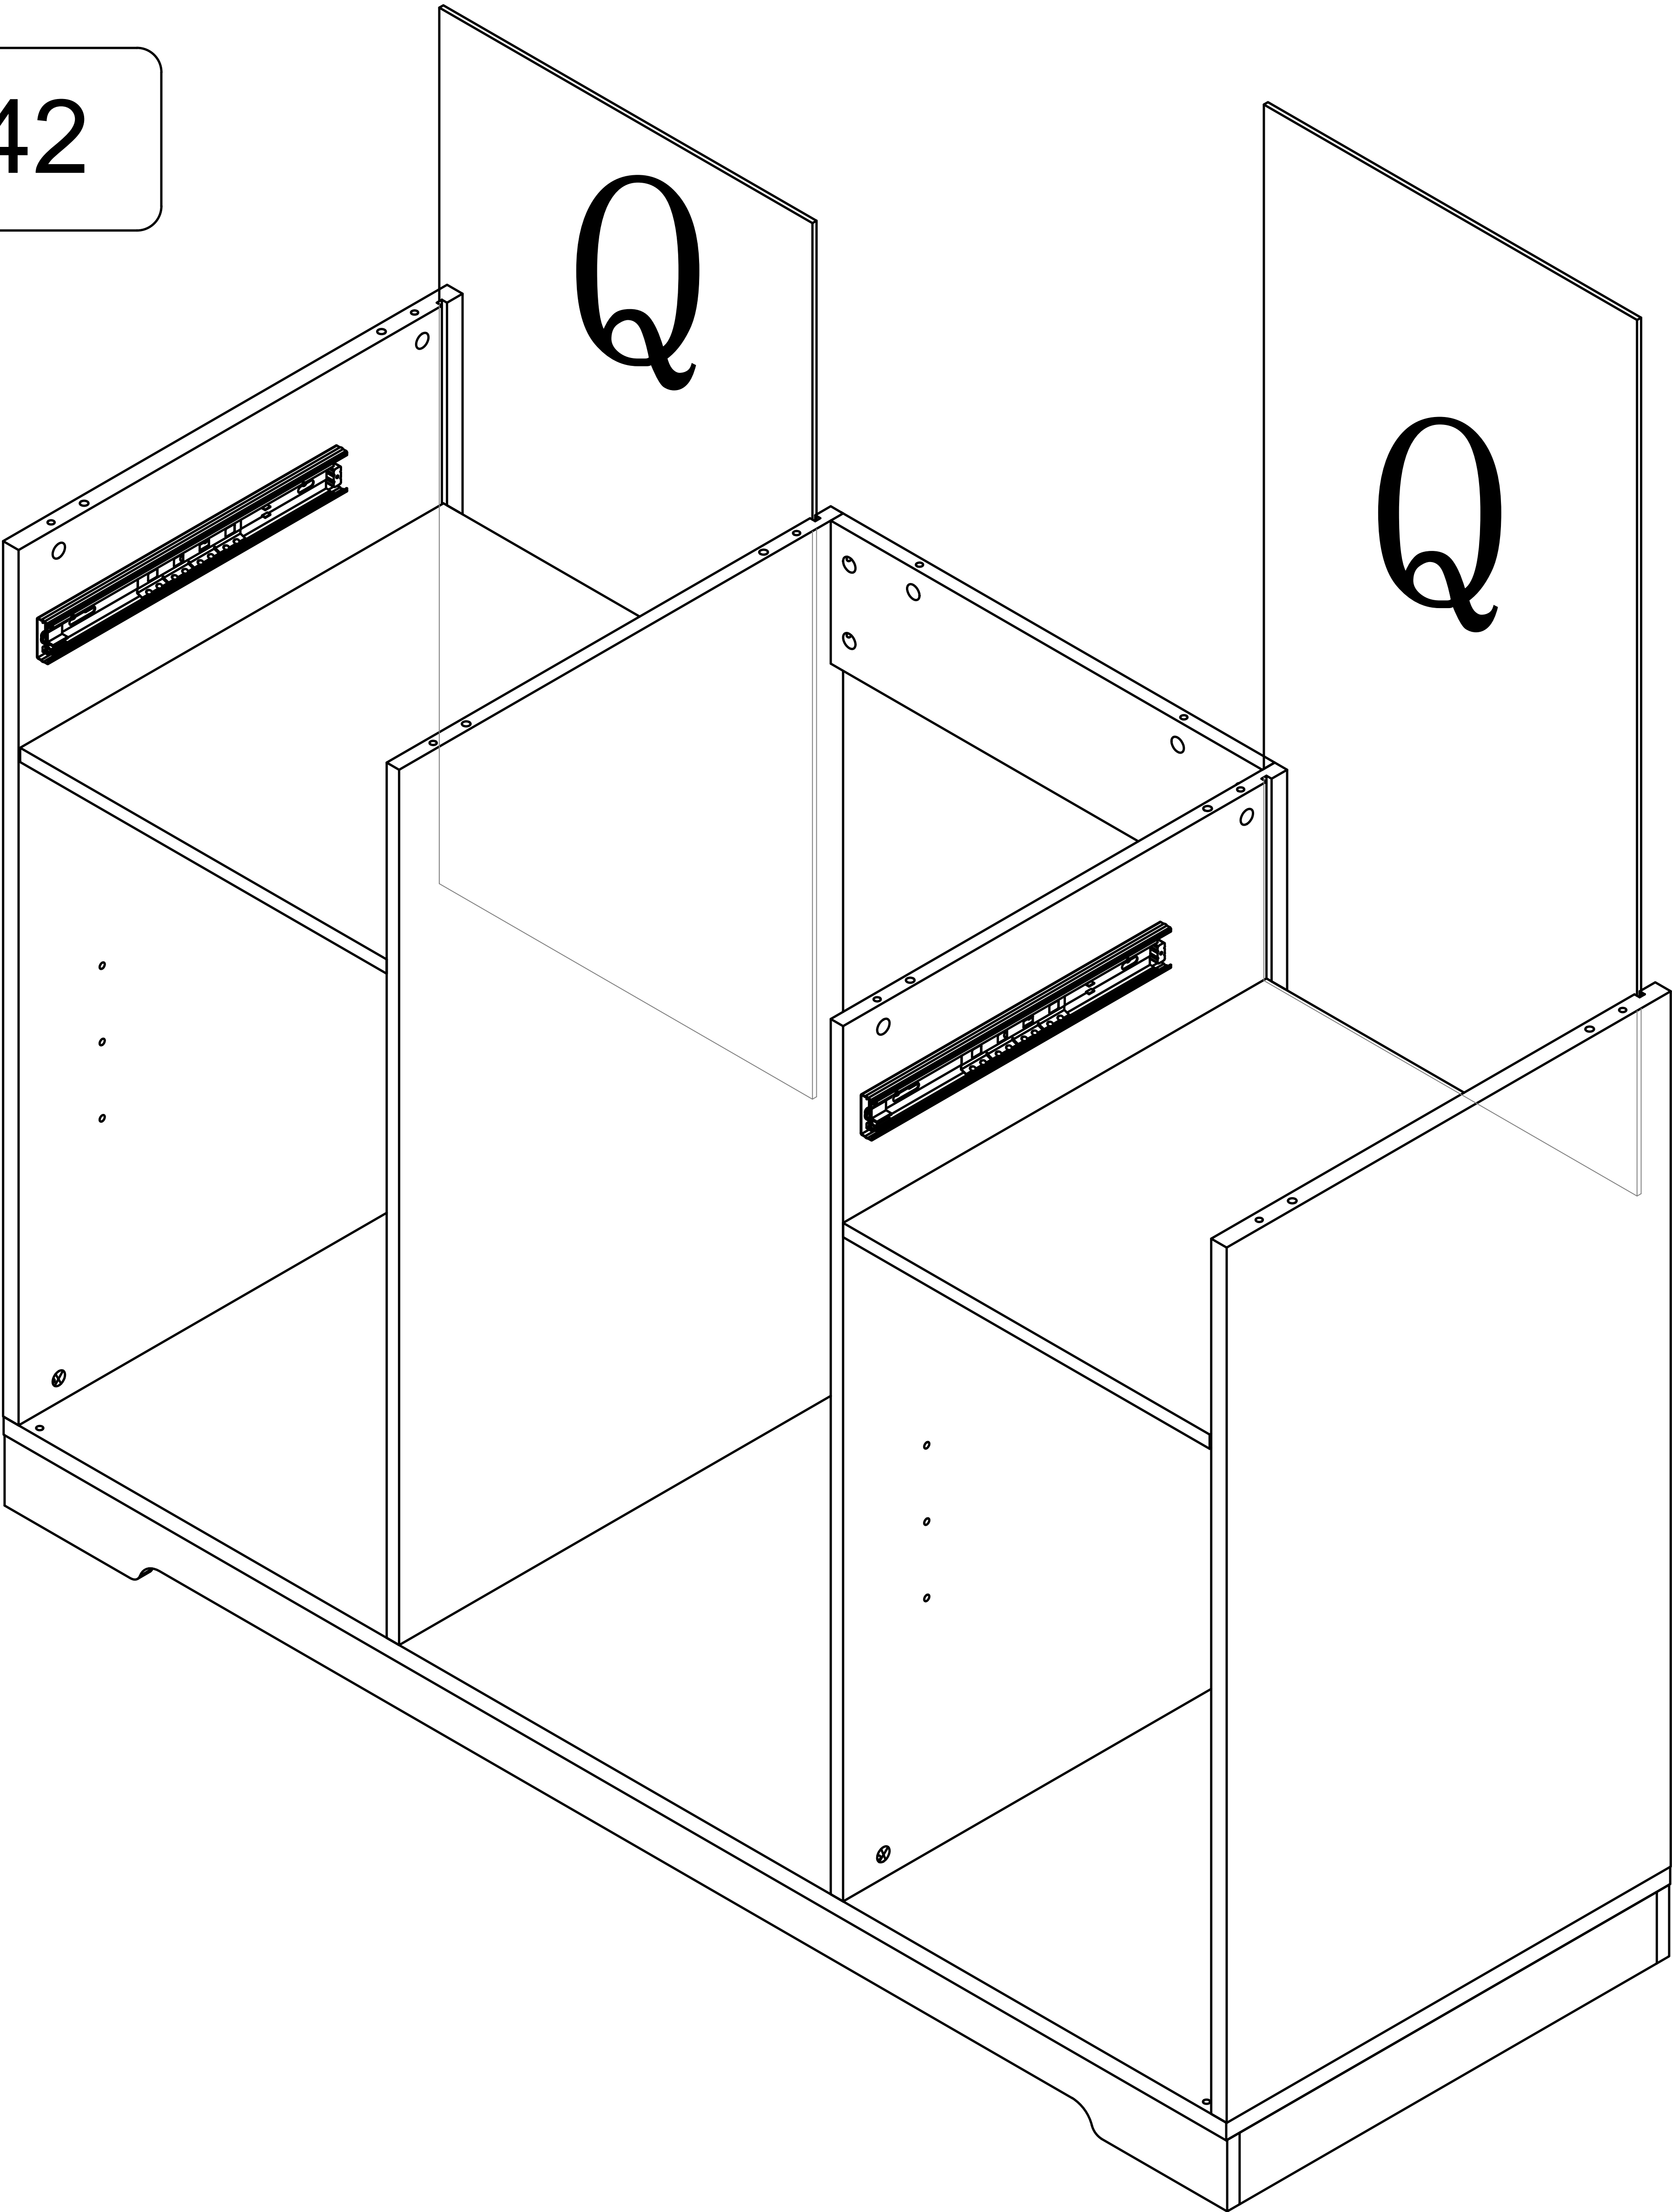


Step 43

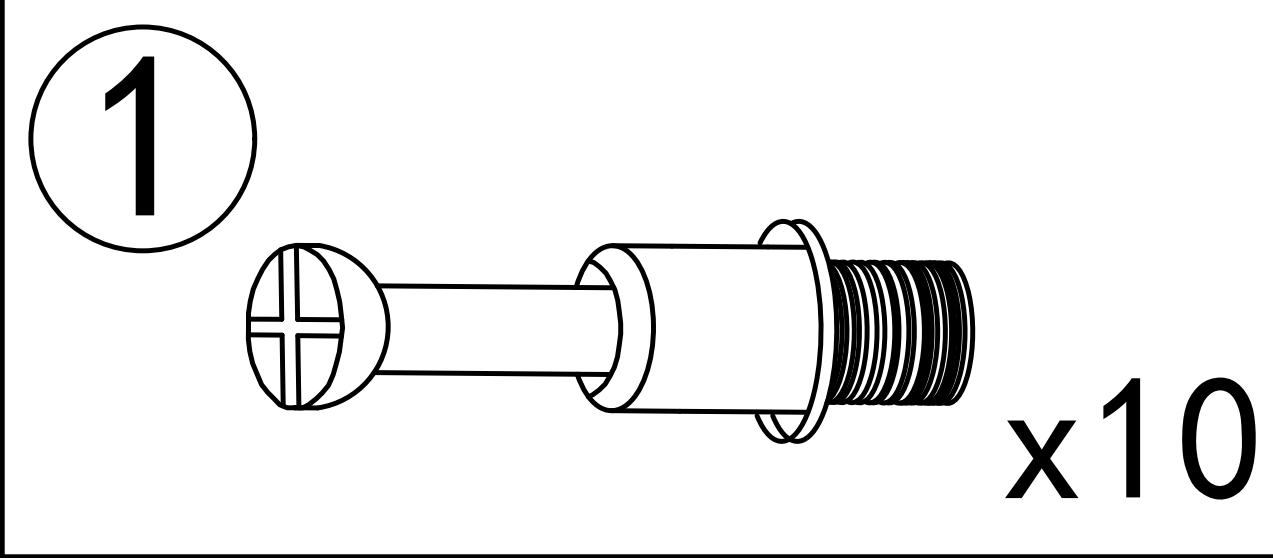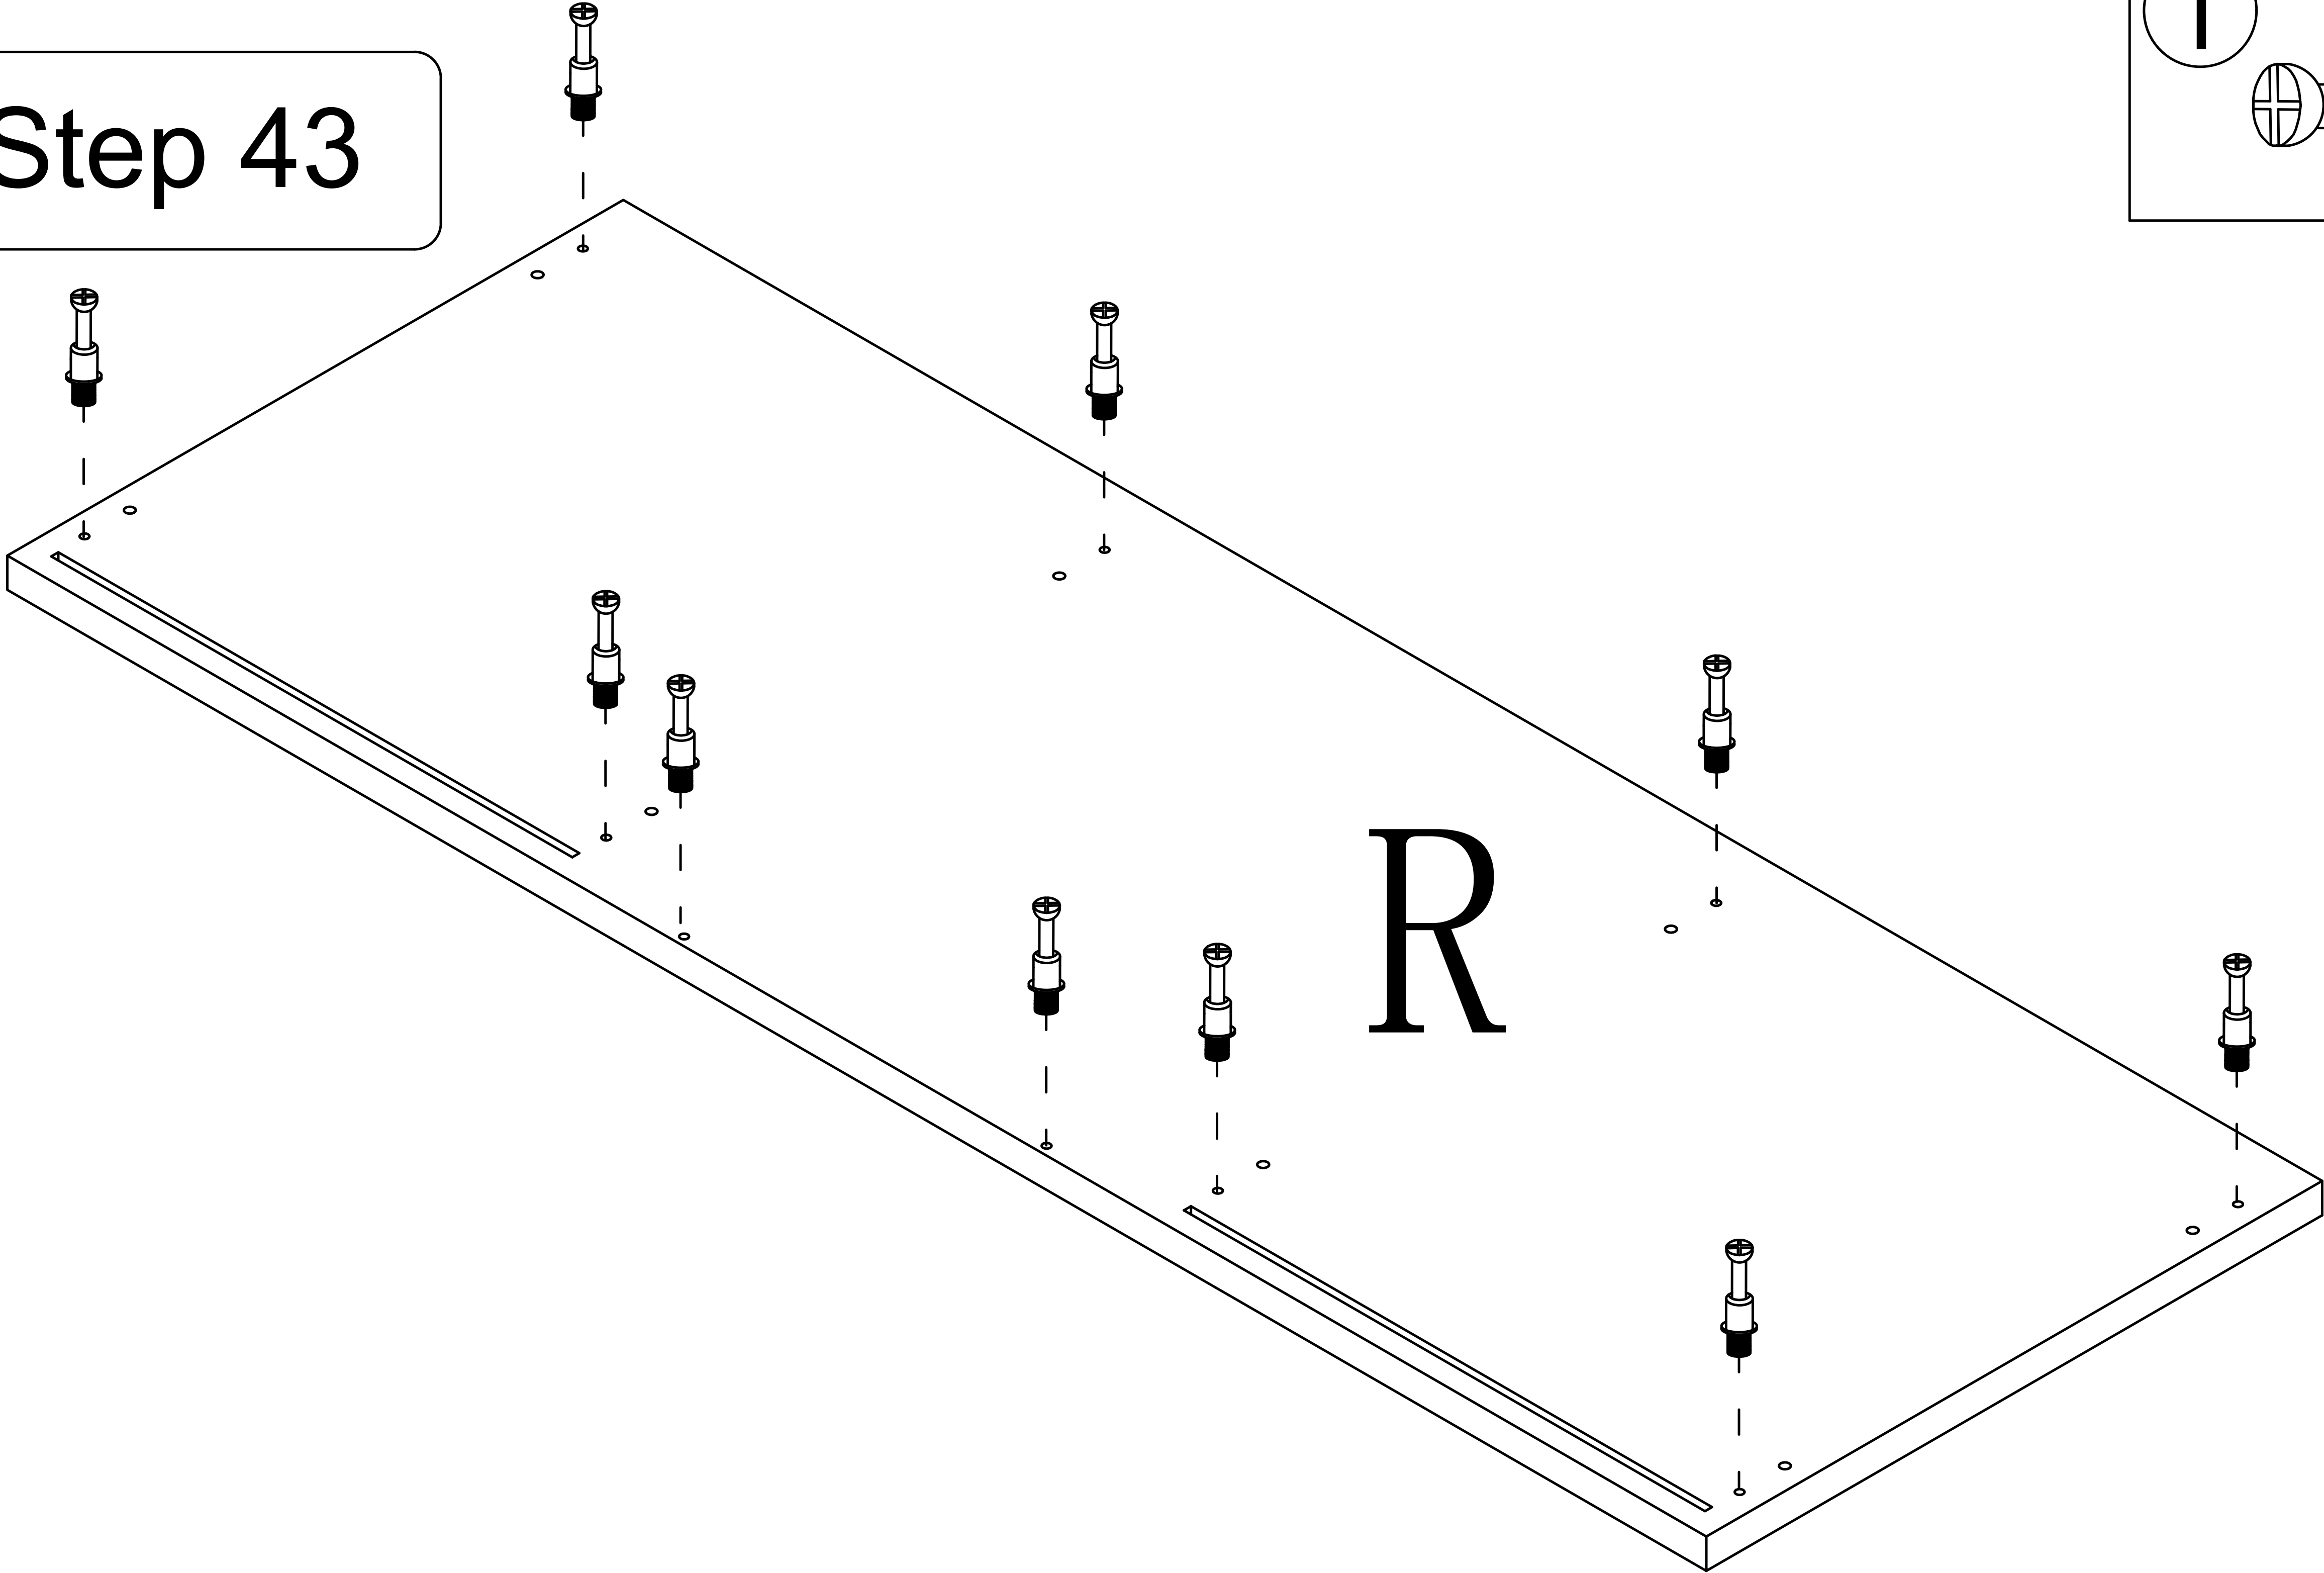


Step 44

2

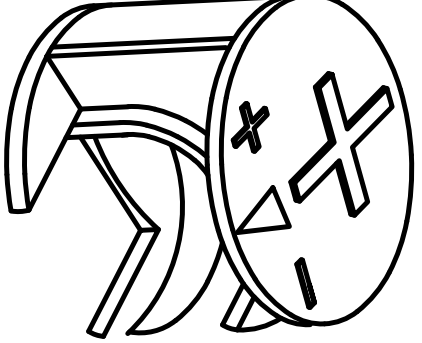


x10


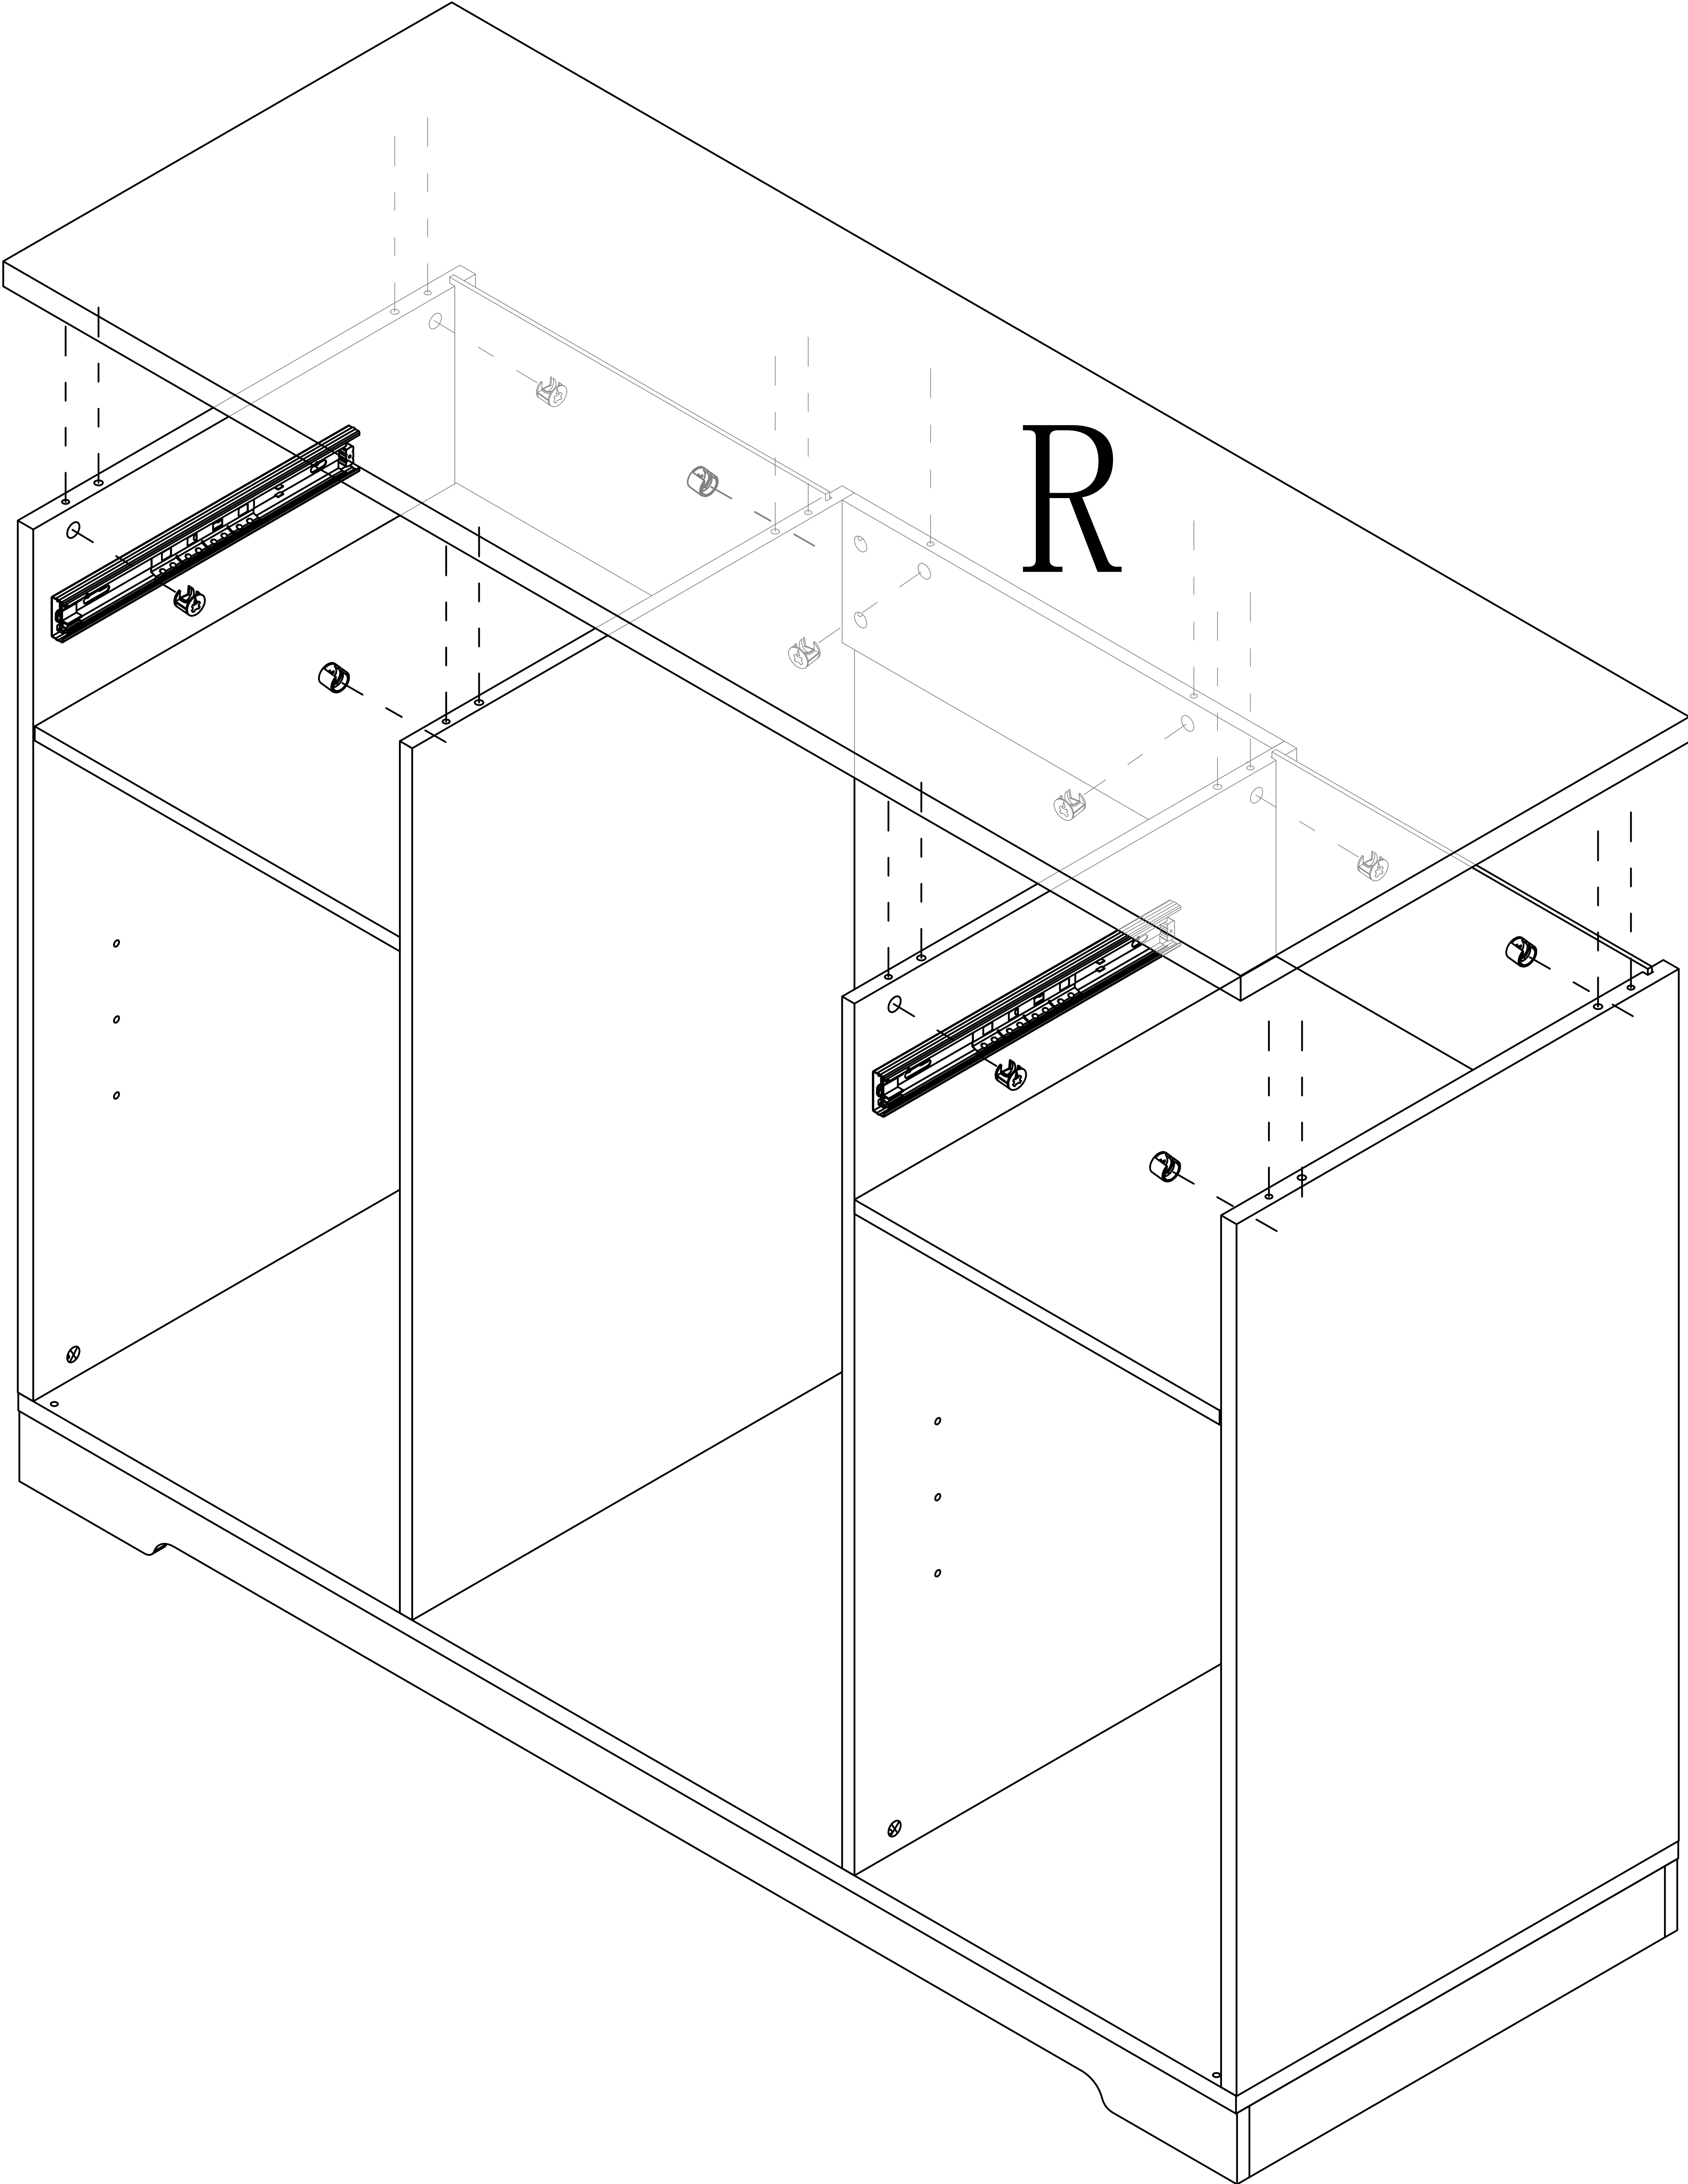


Step 45


7

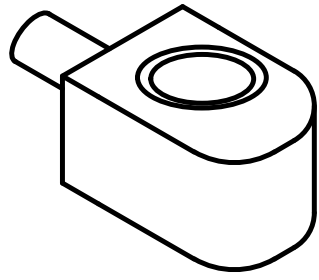

x8

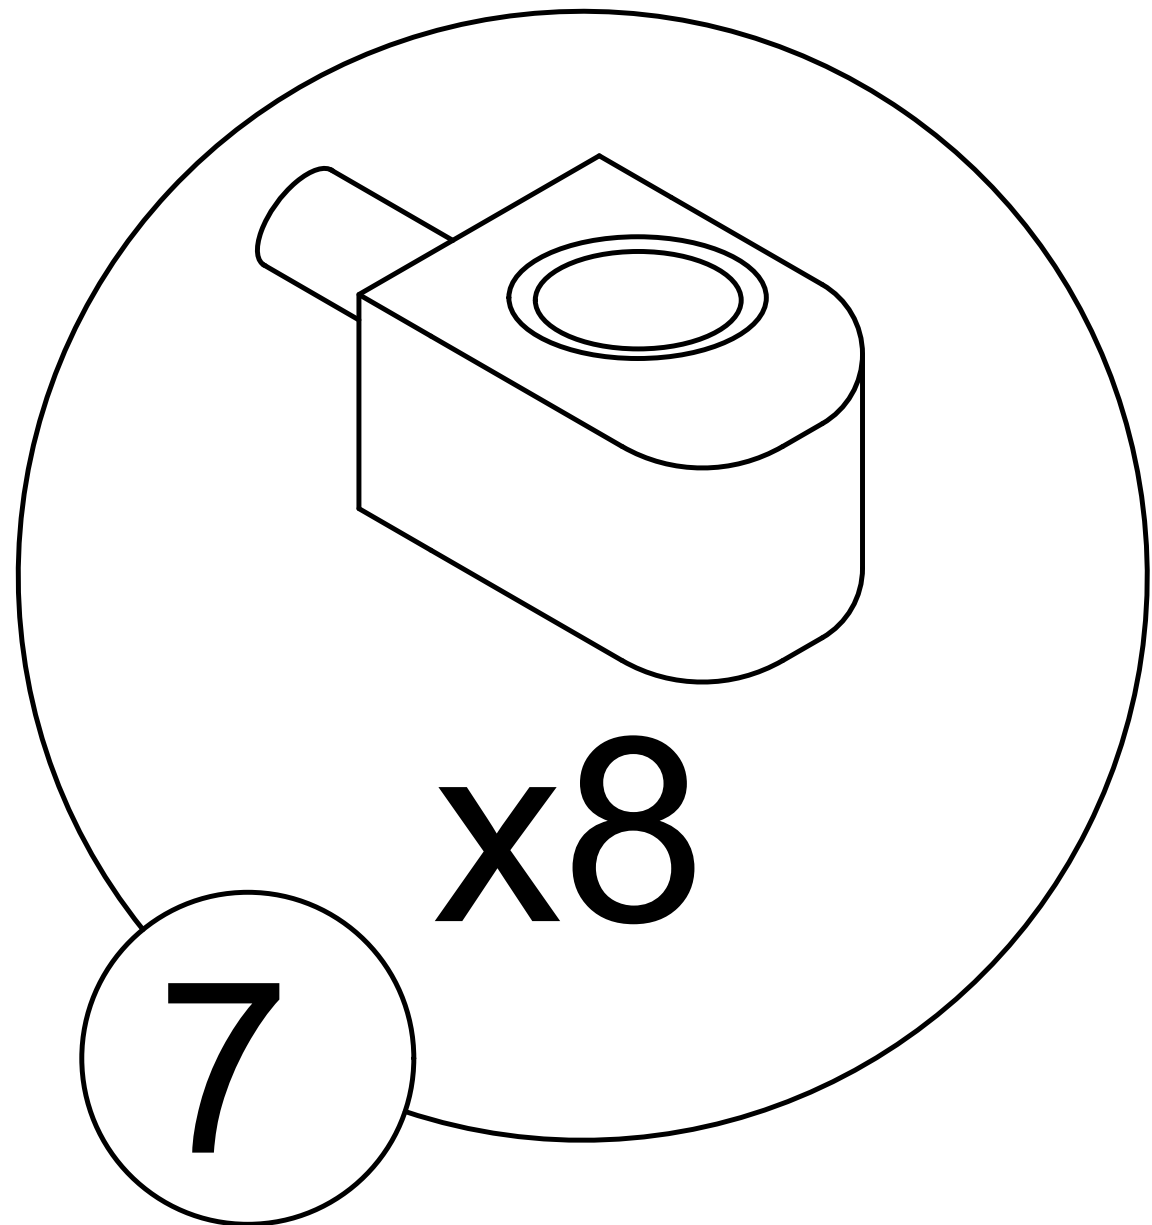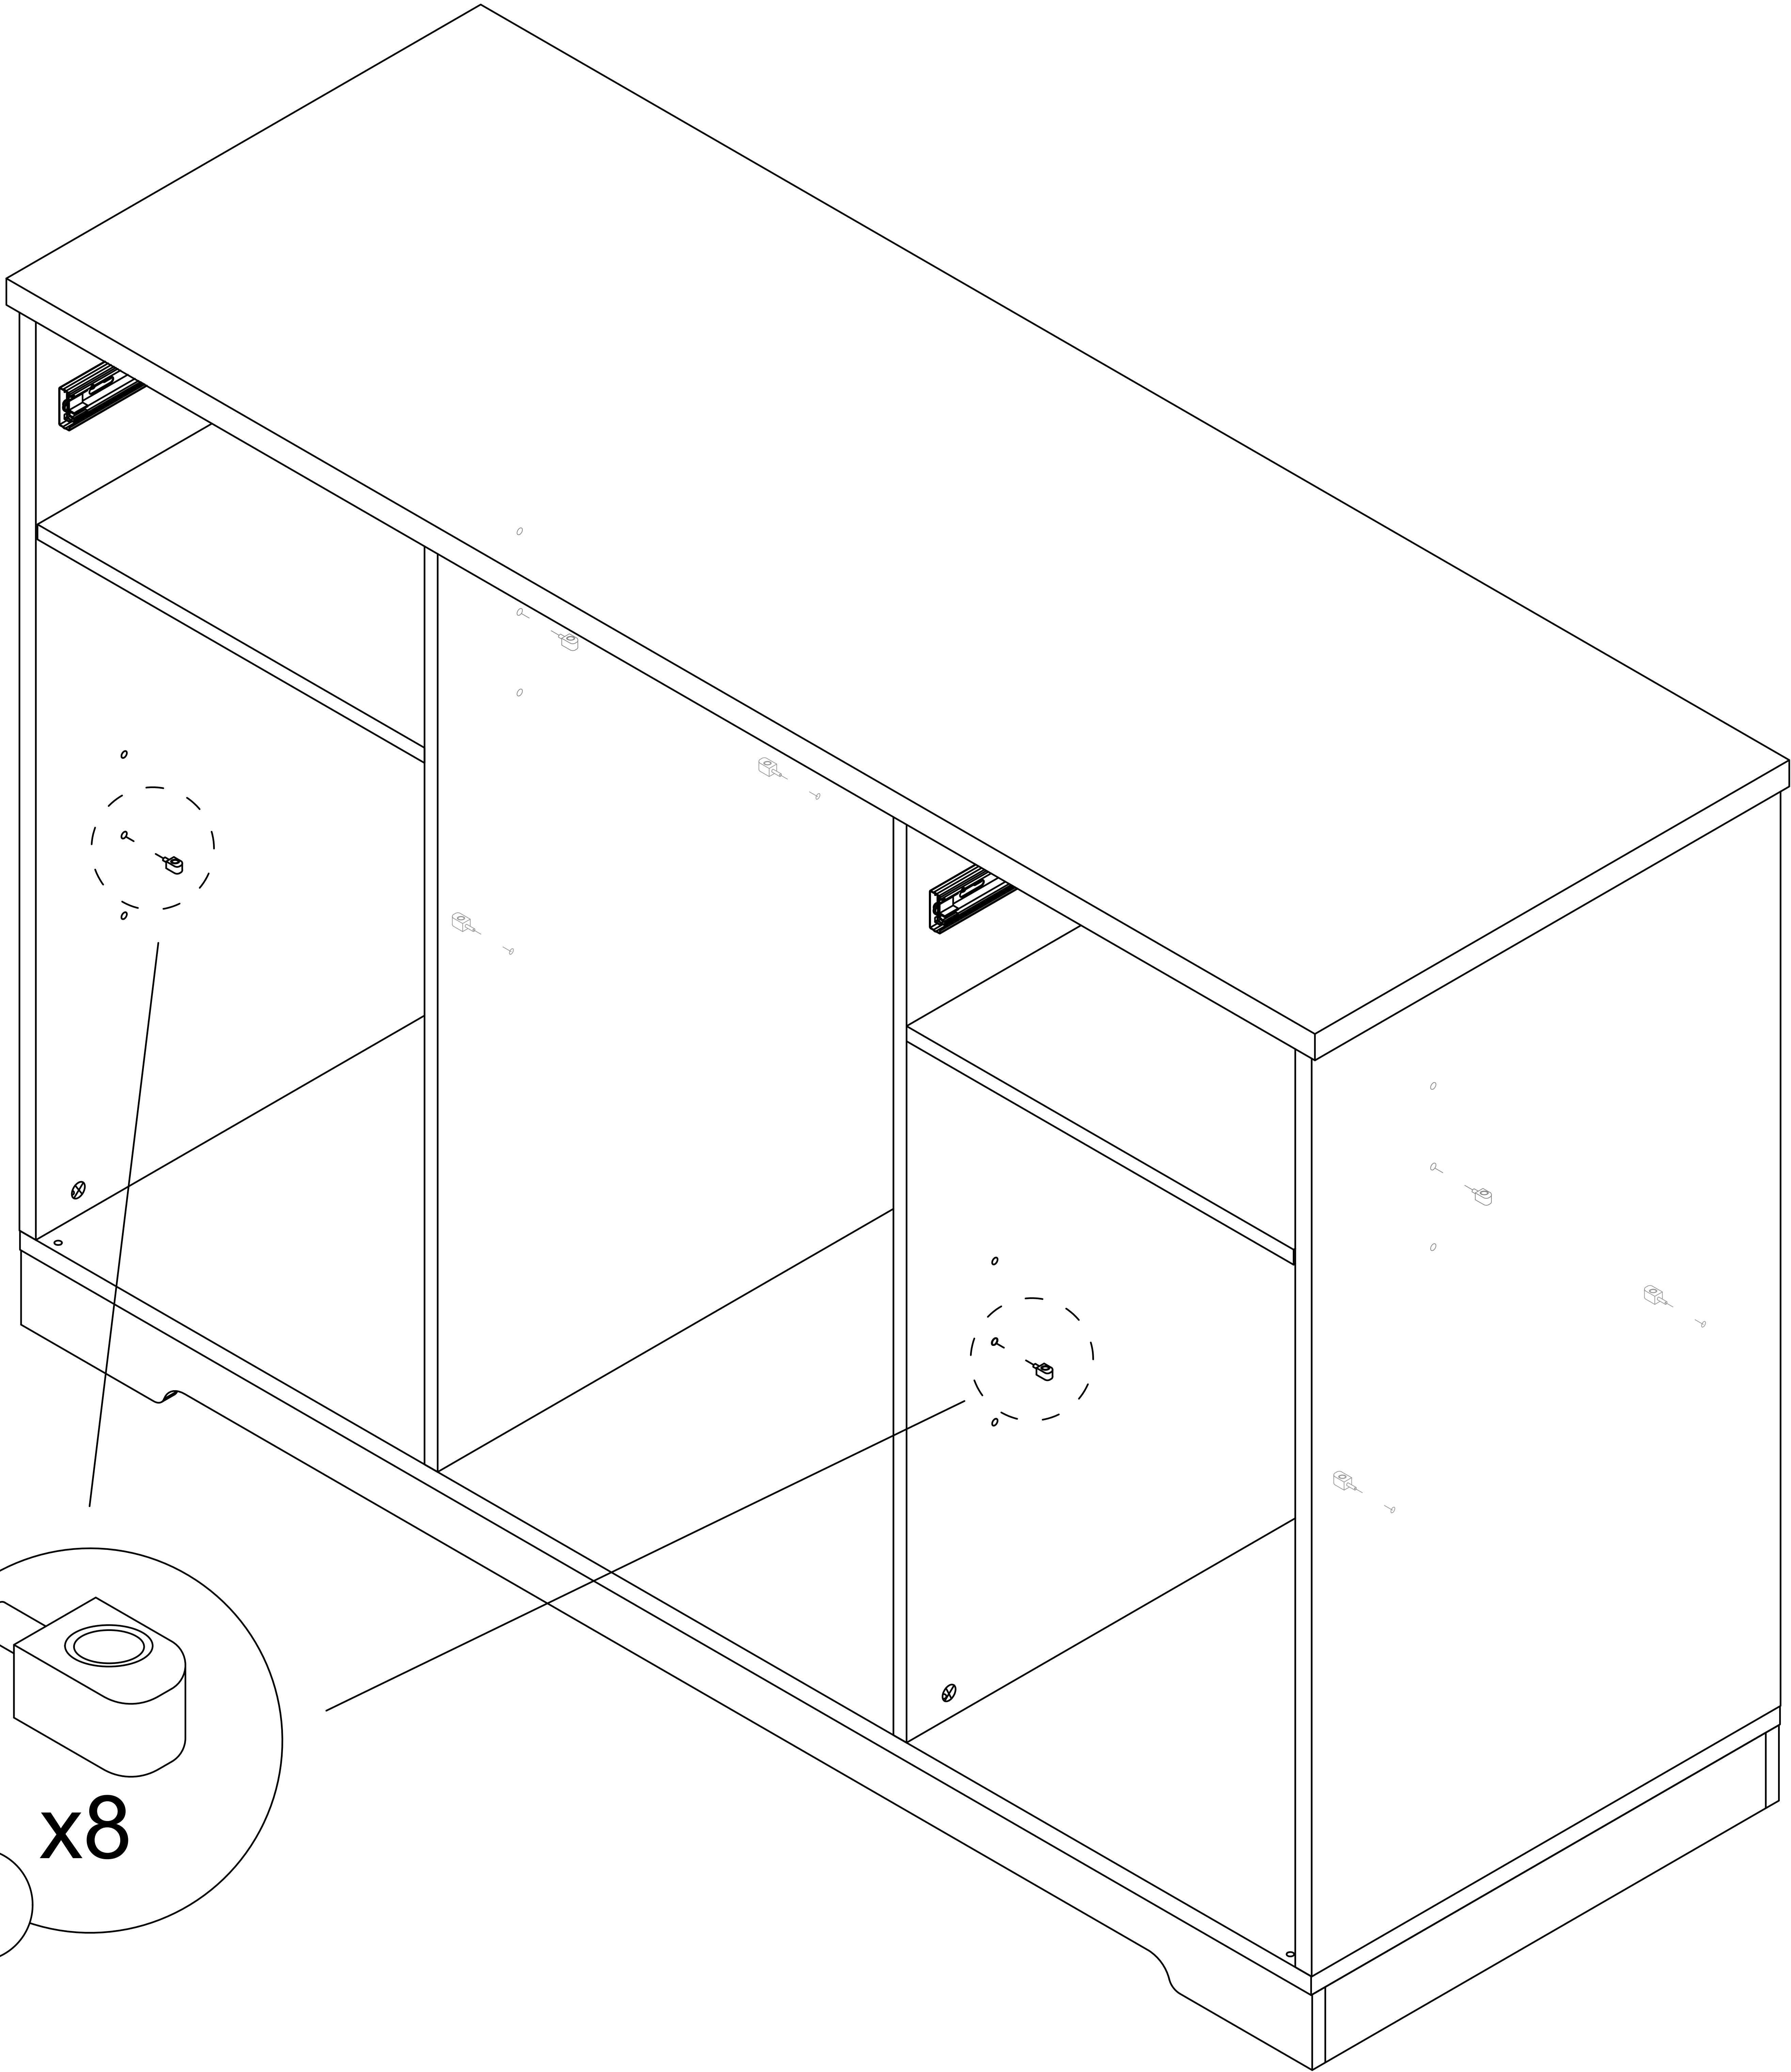



Step 46

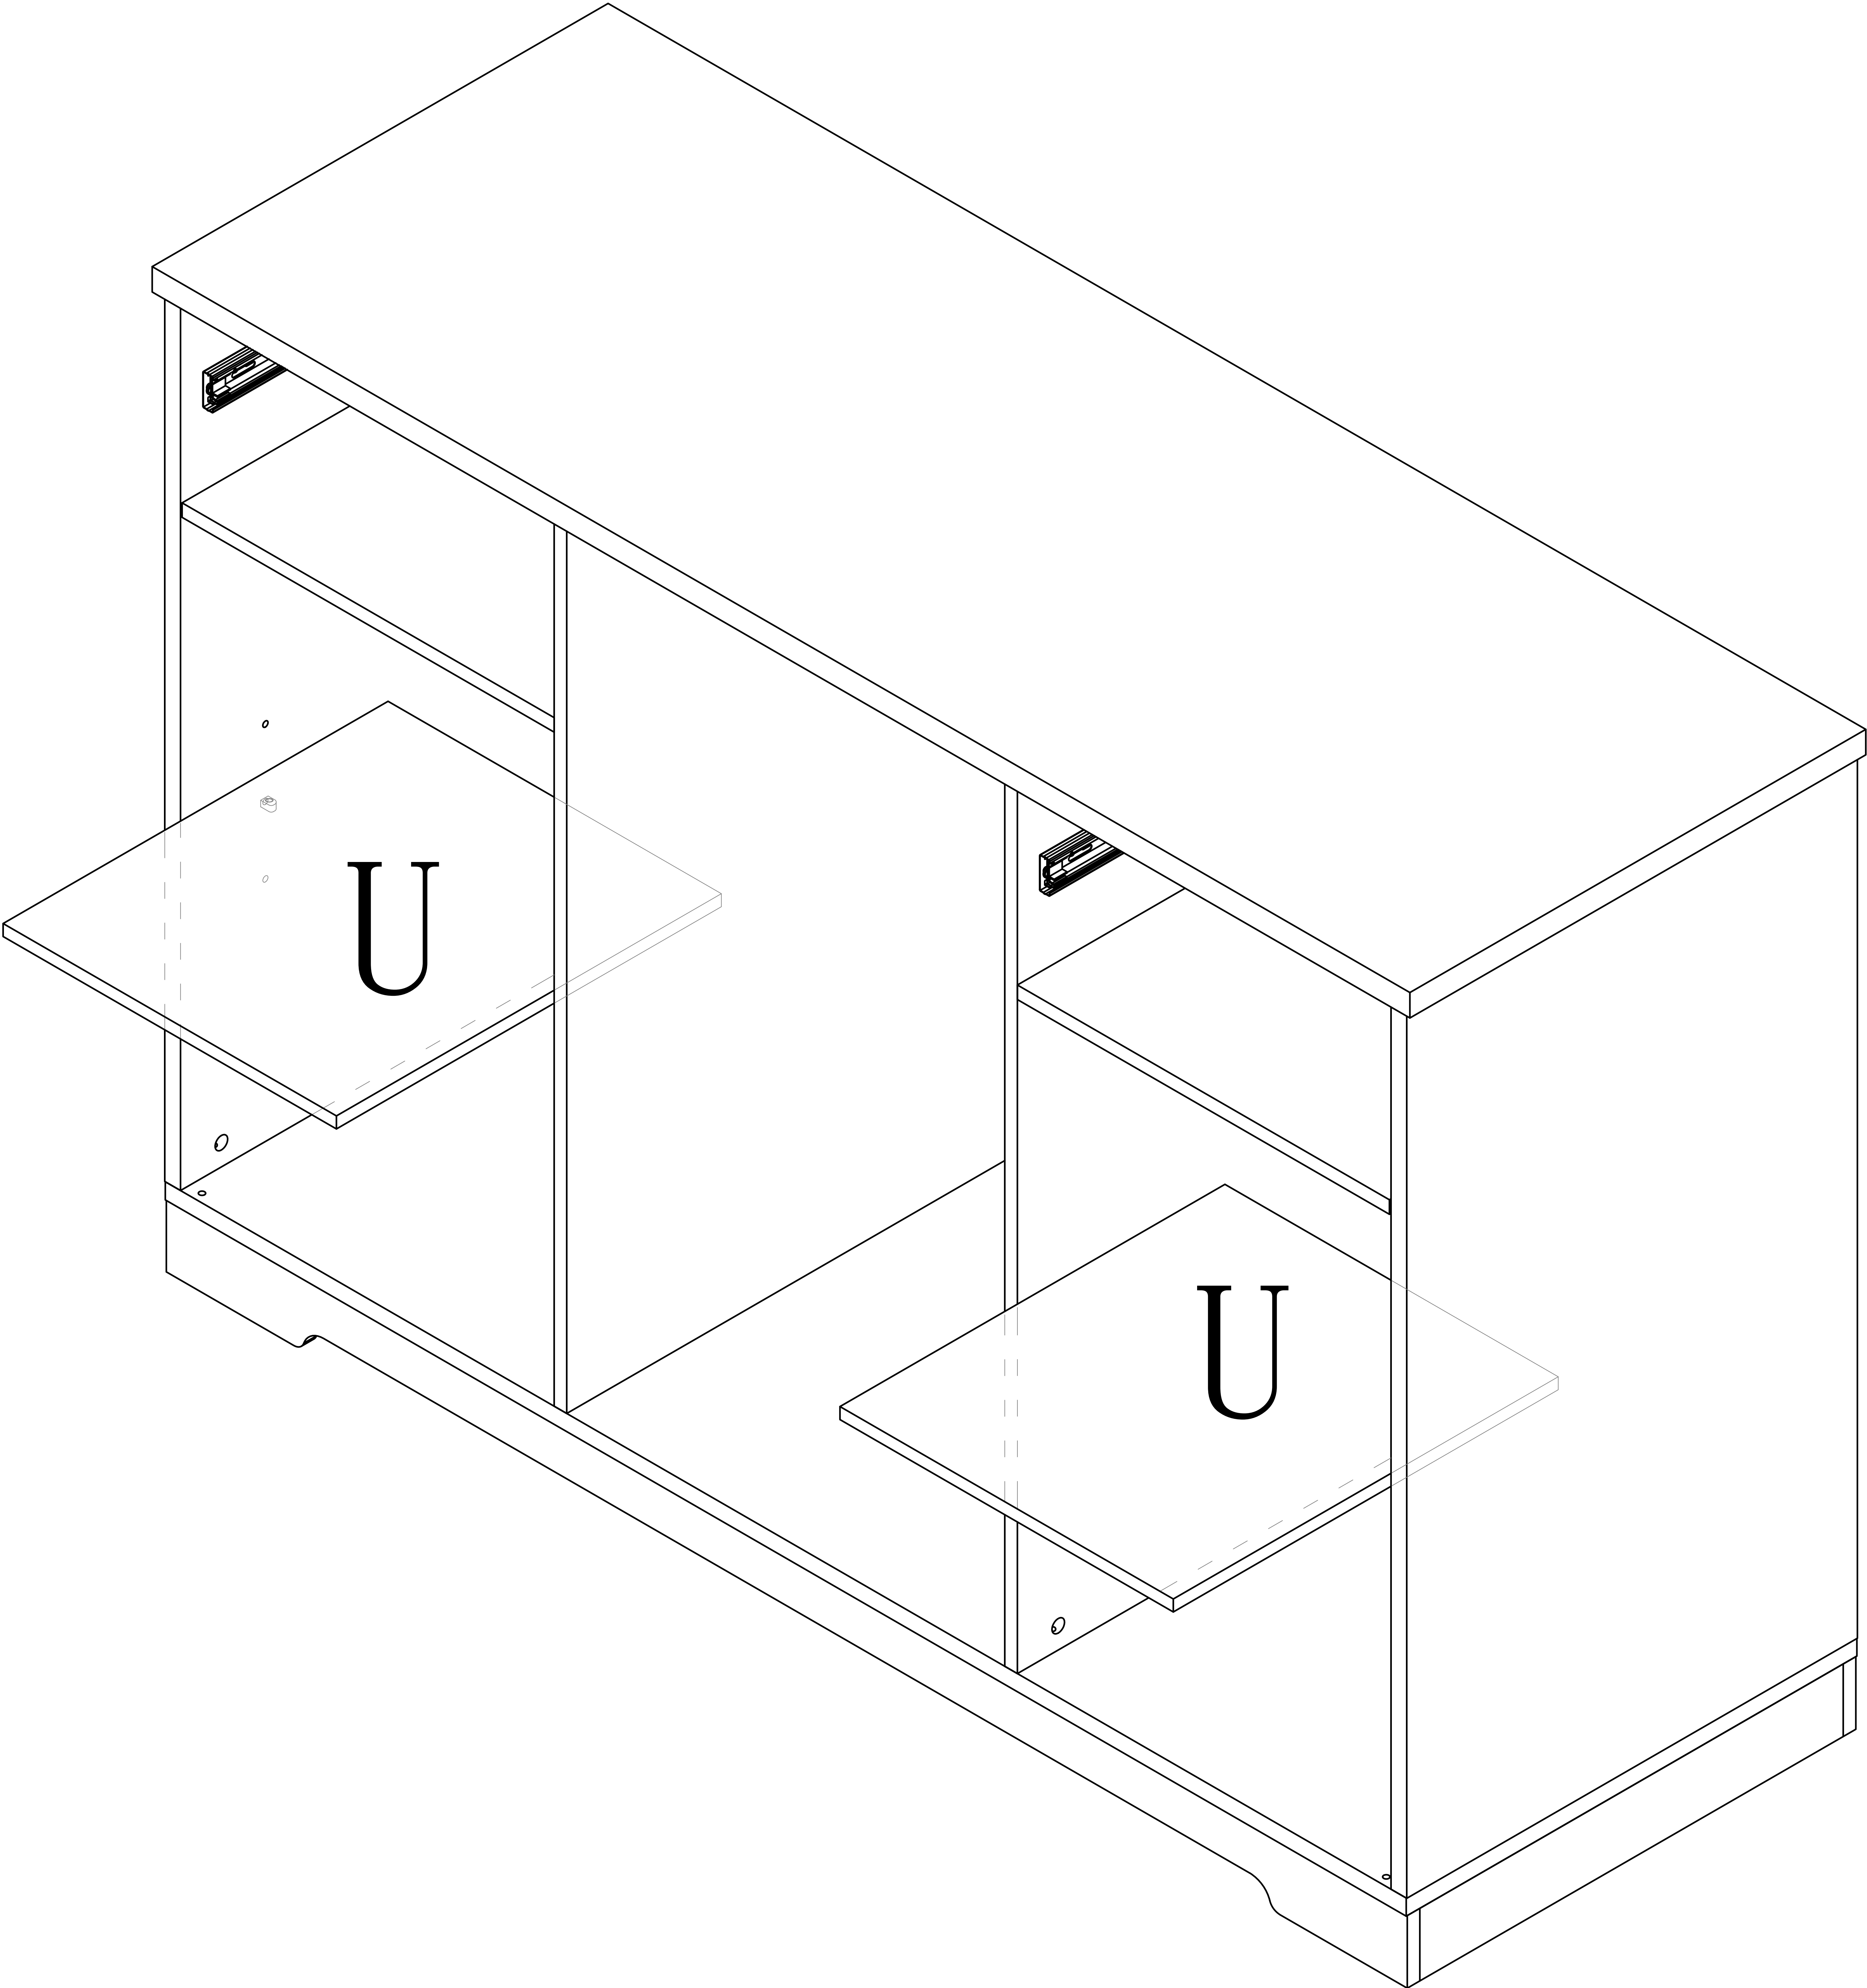


Step 47

8

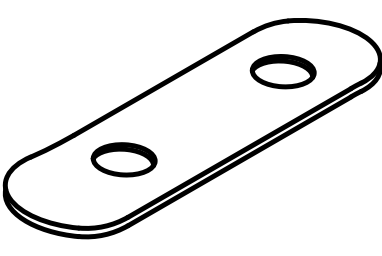

x1

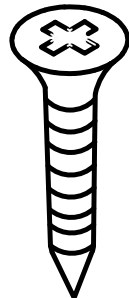

x2

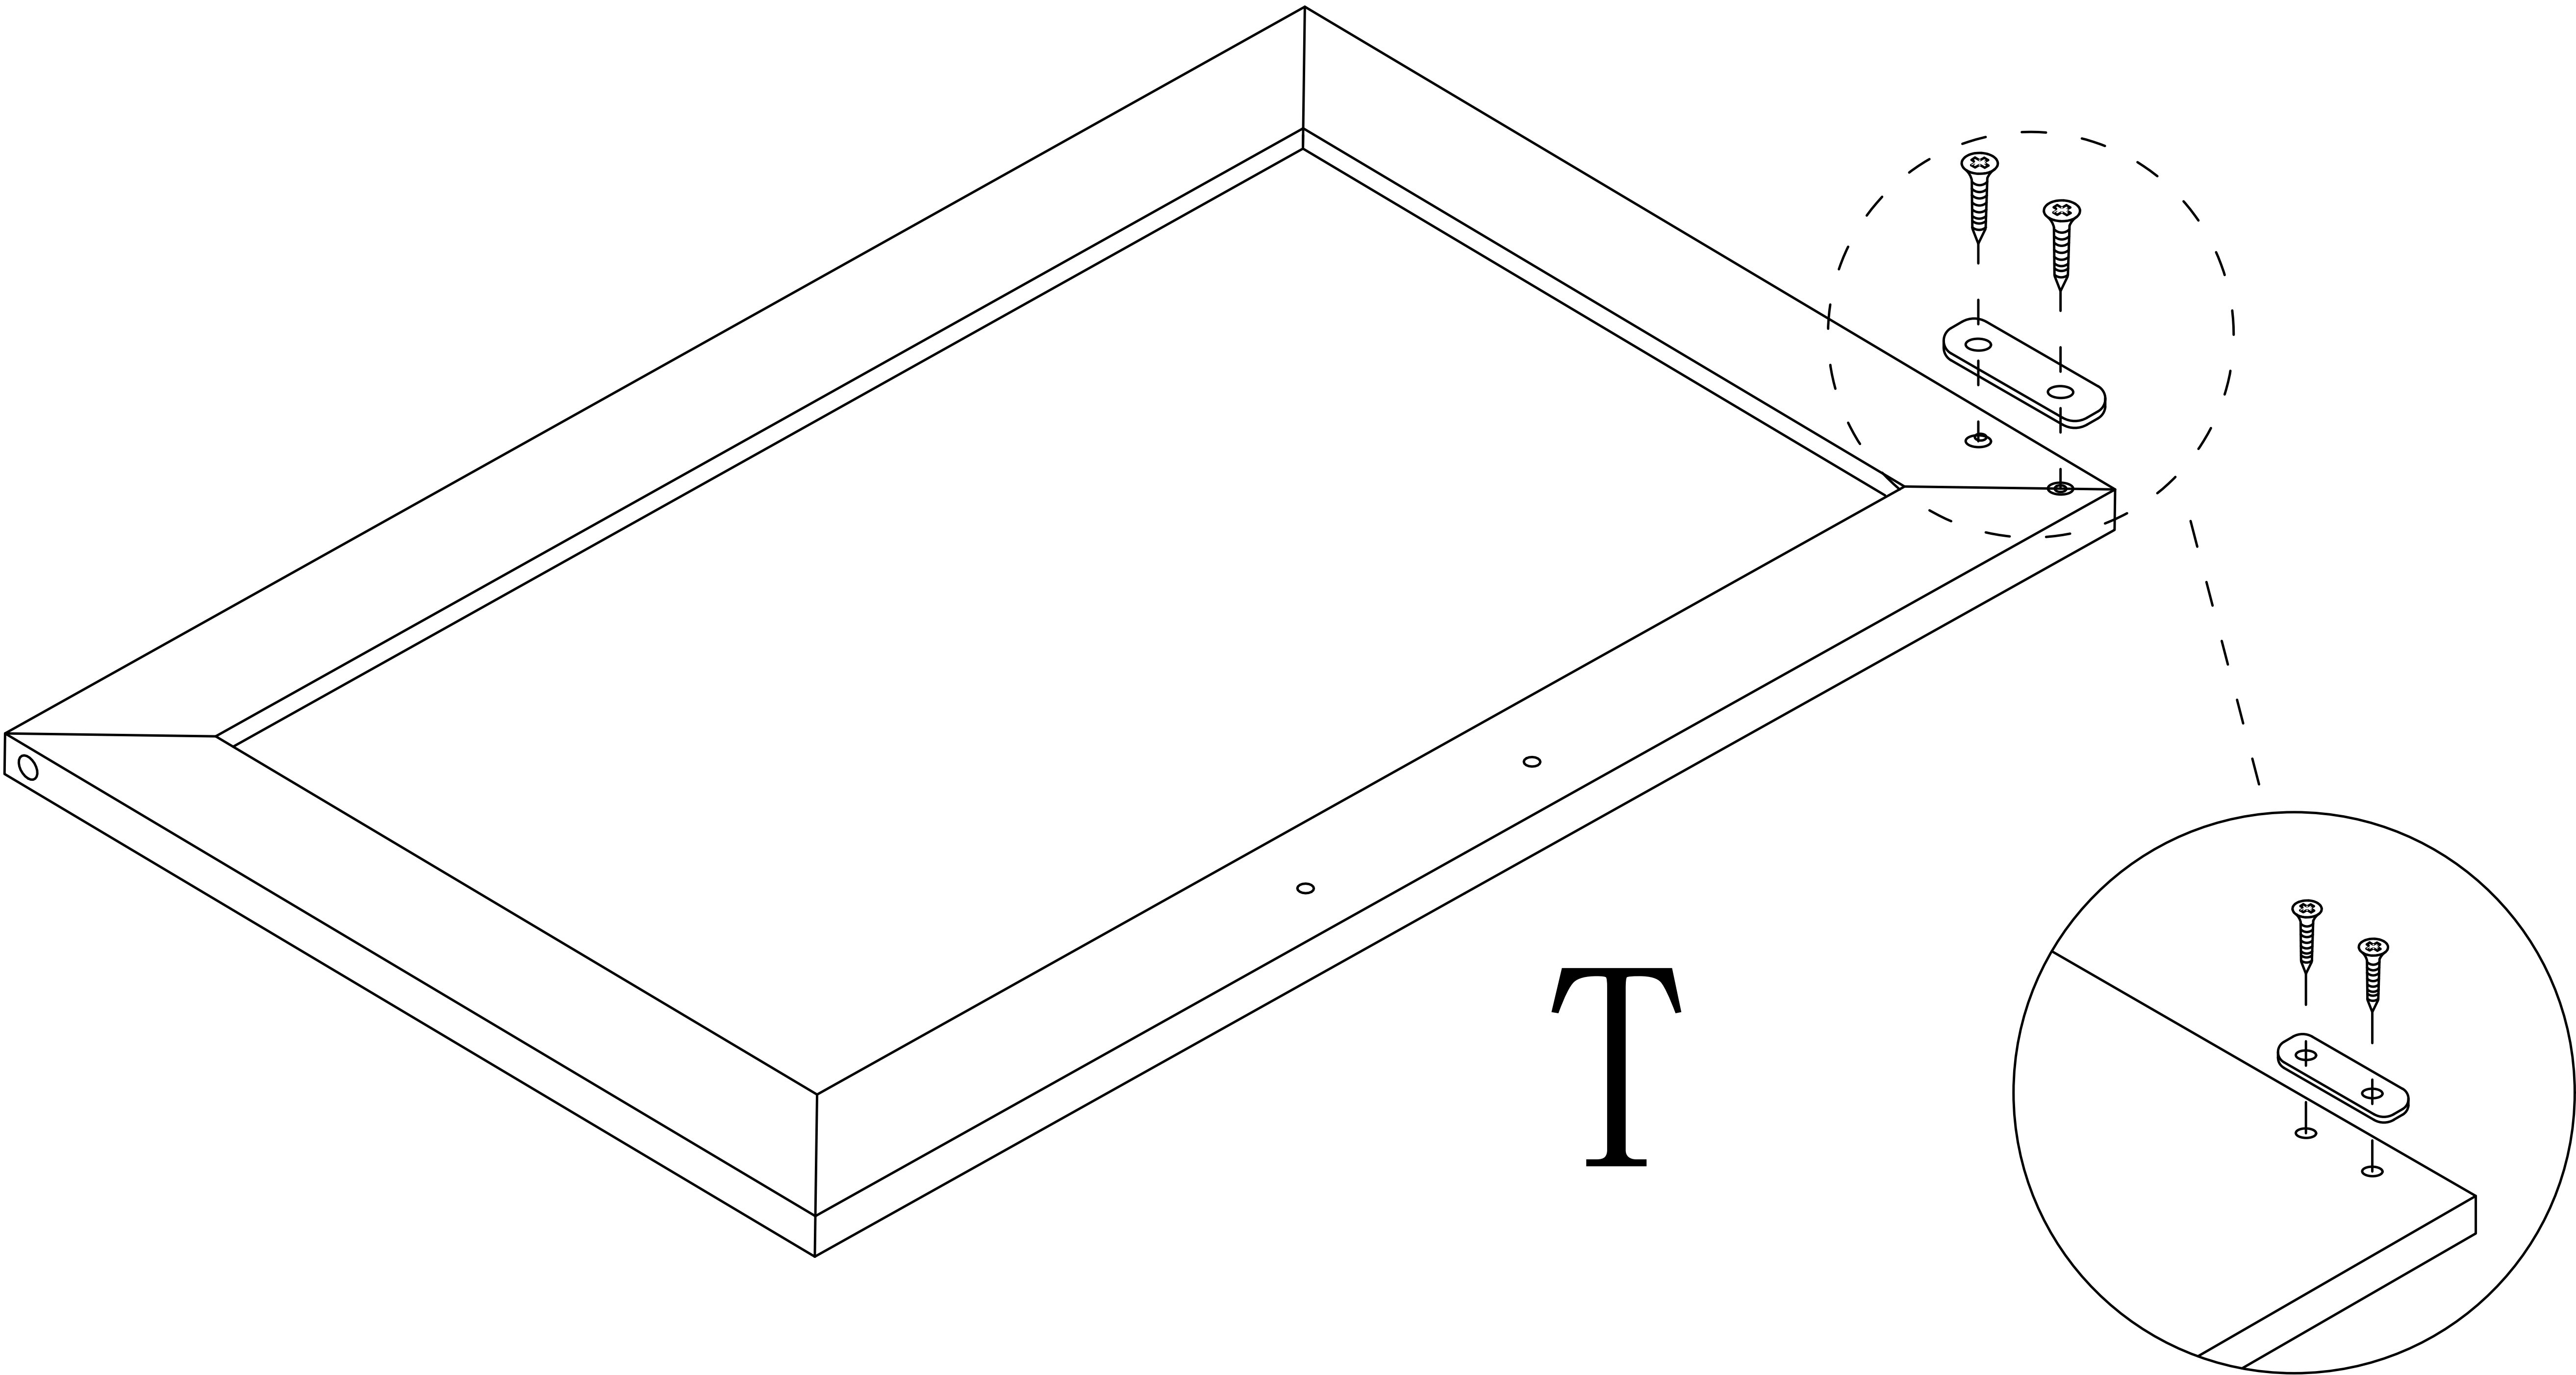


Step 48

8

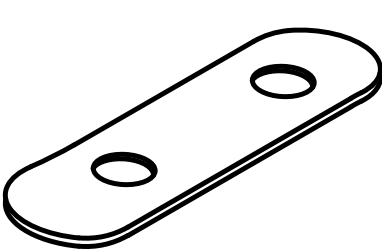

x1

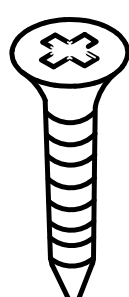
x2

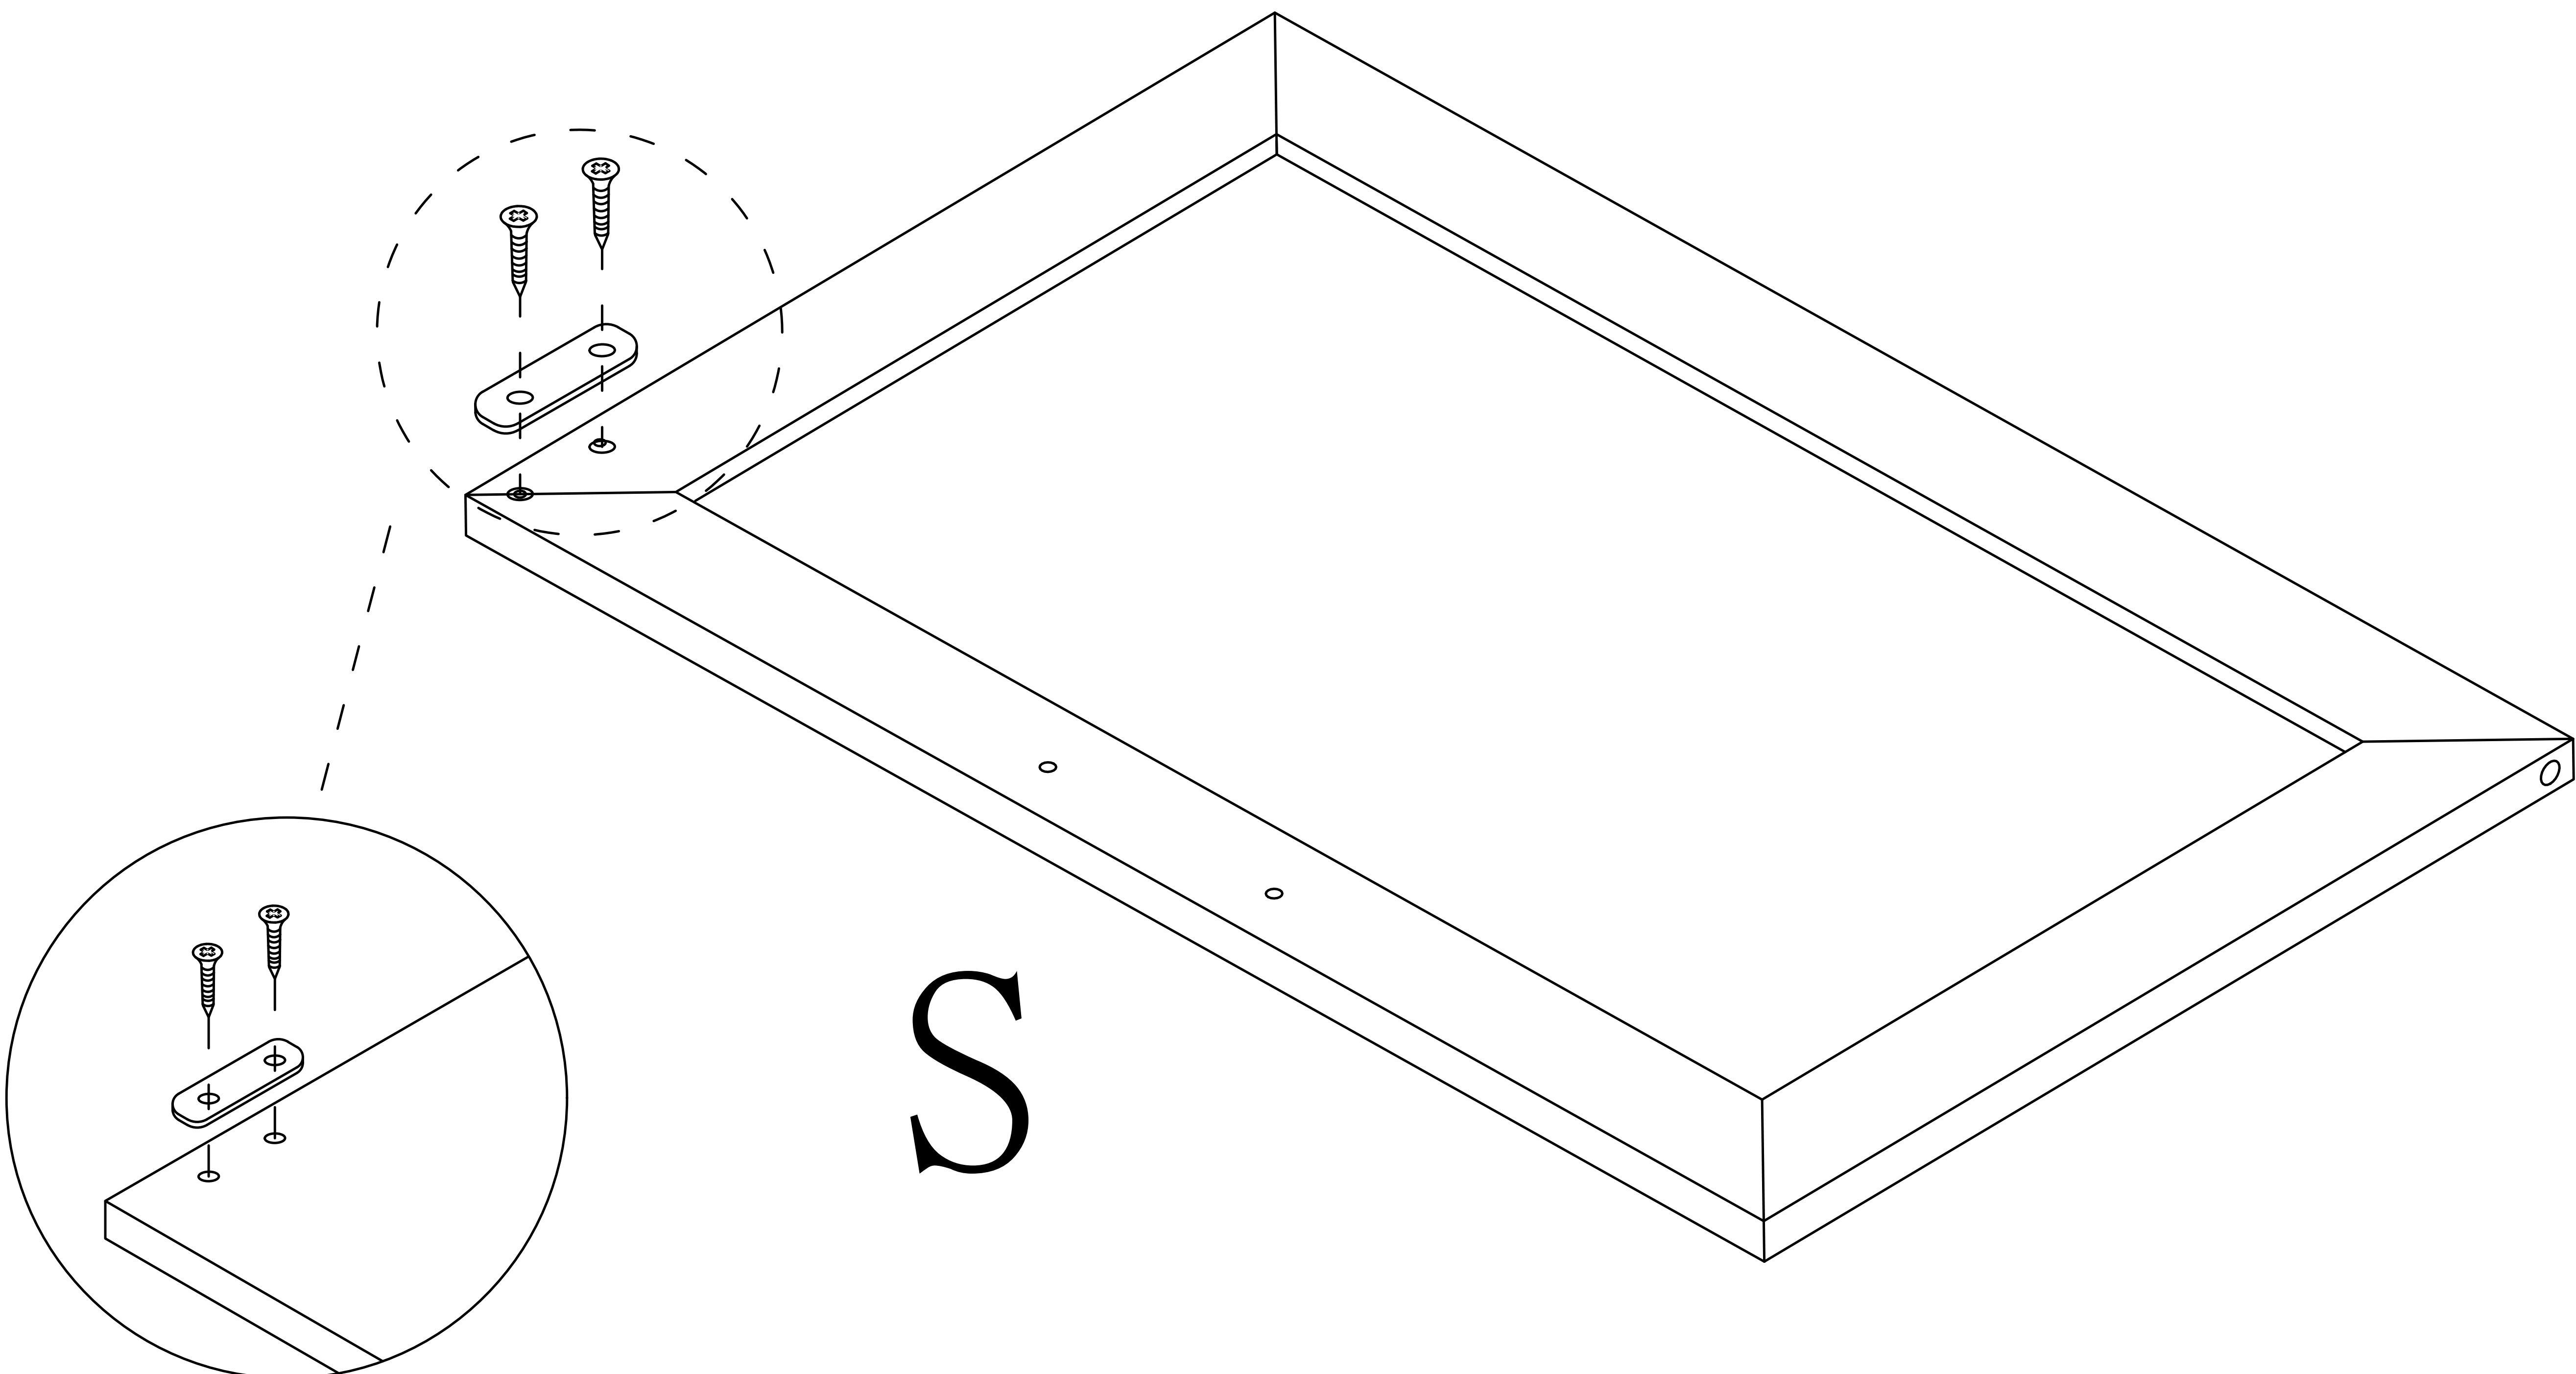


Step 49

9

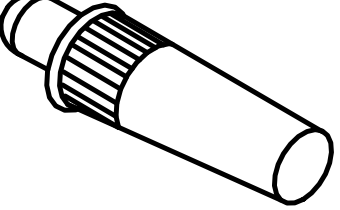


x2

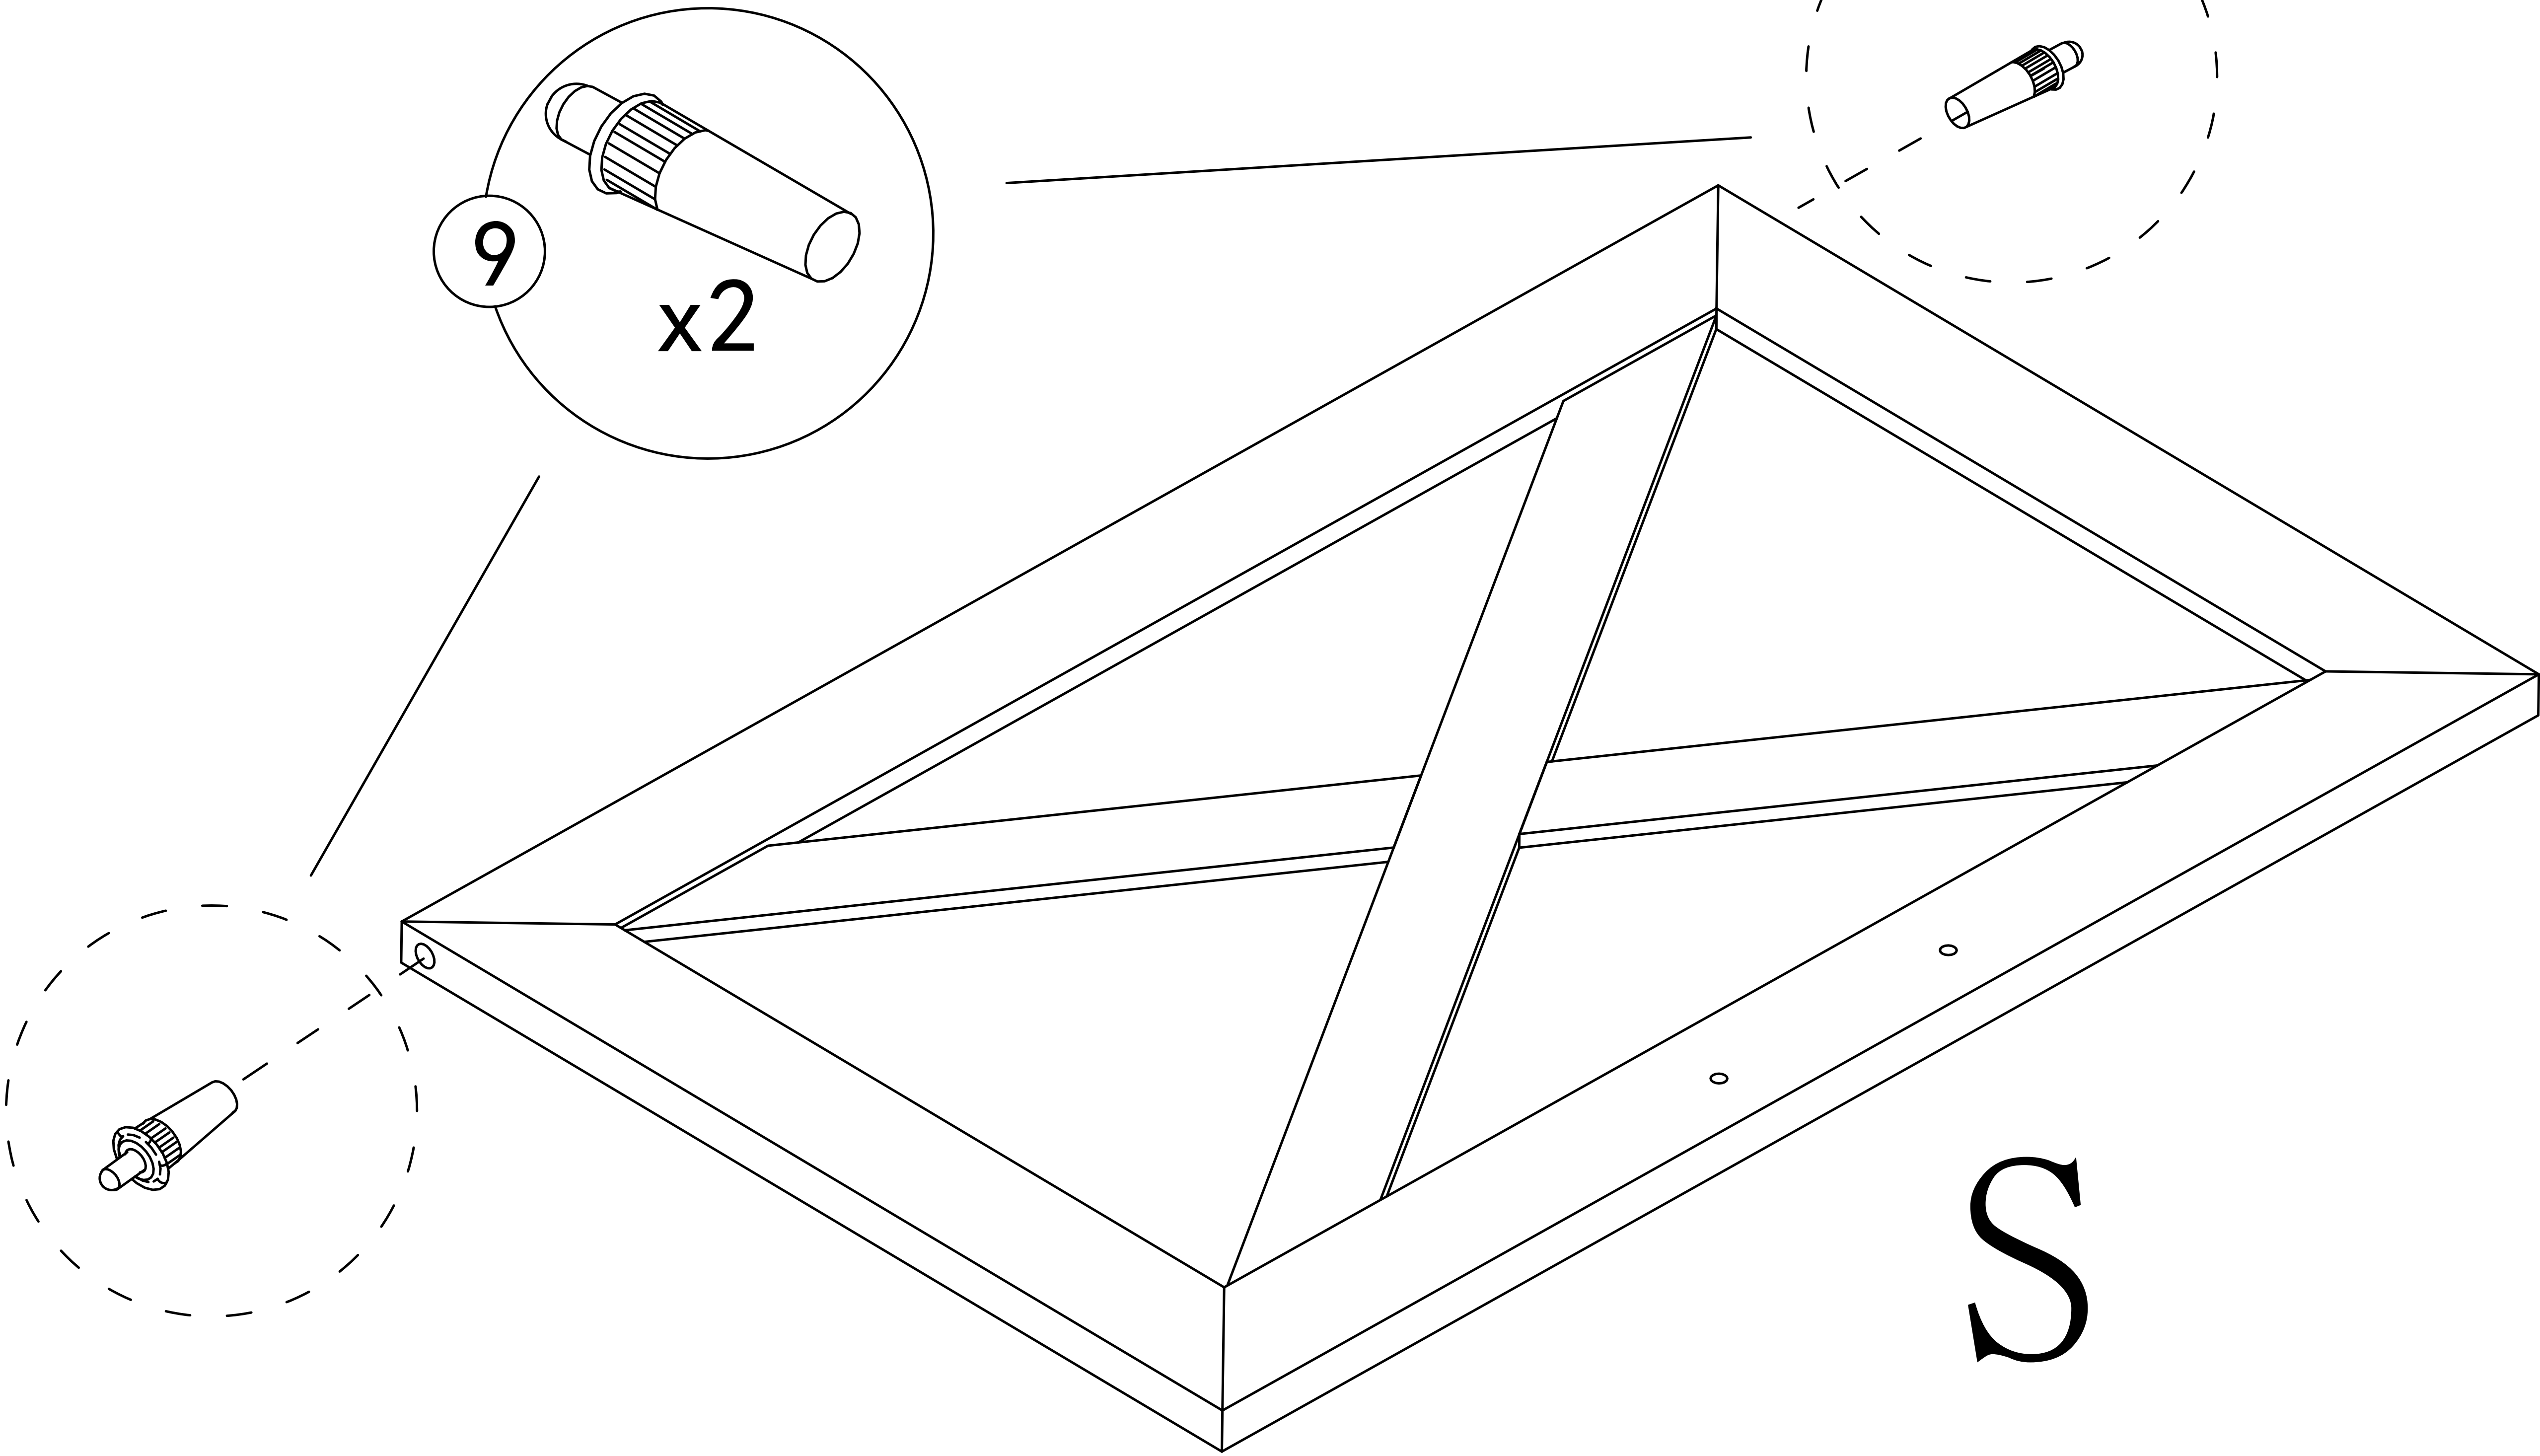


Step 50


12

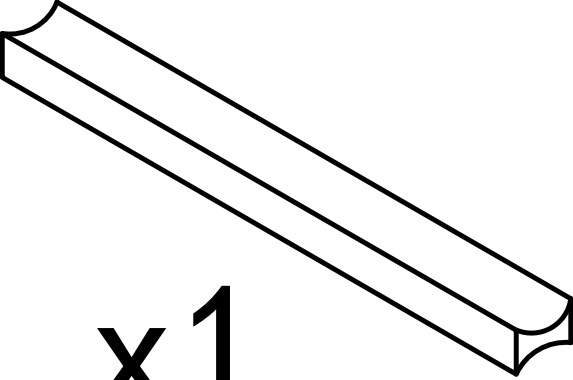

x1

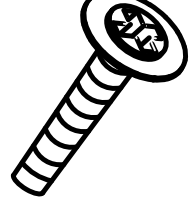


x2

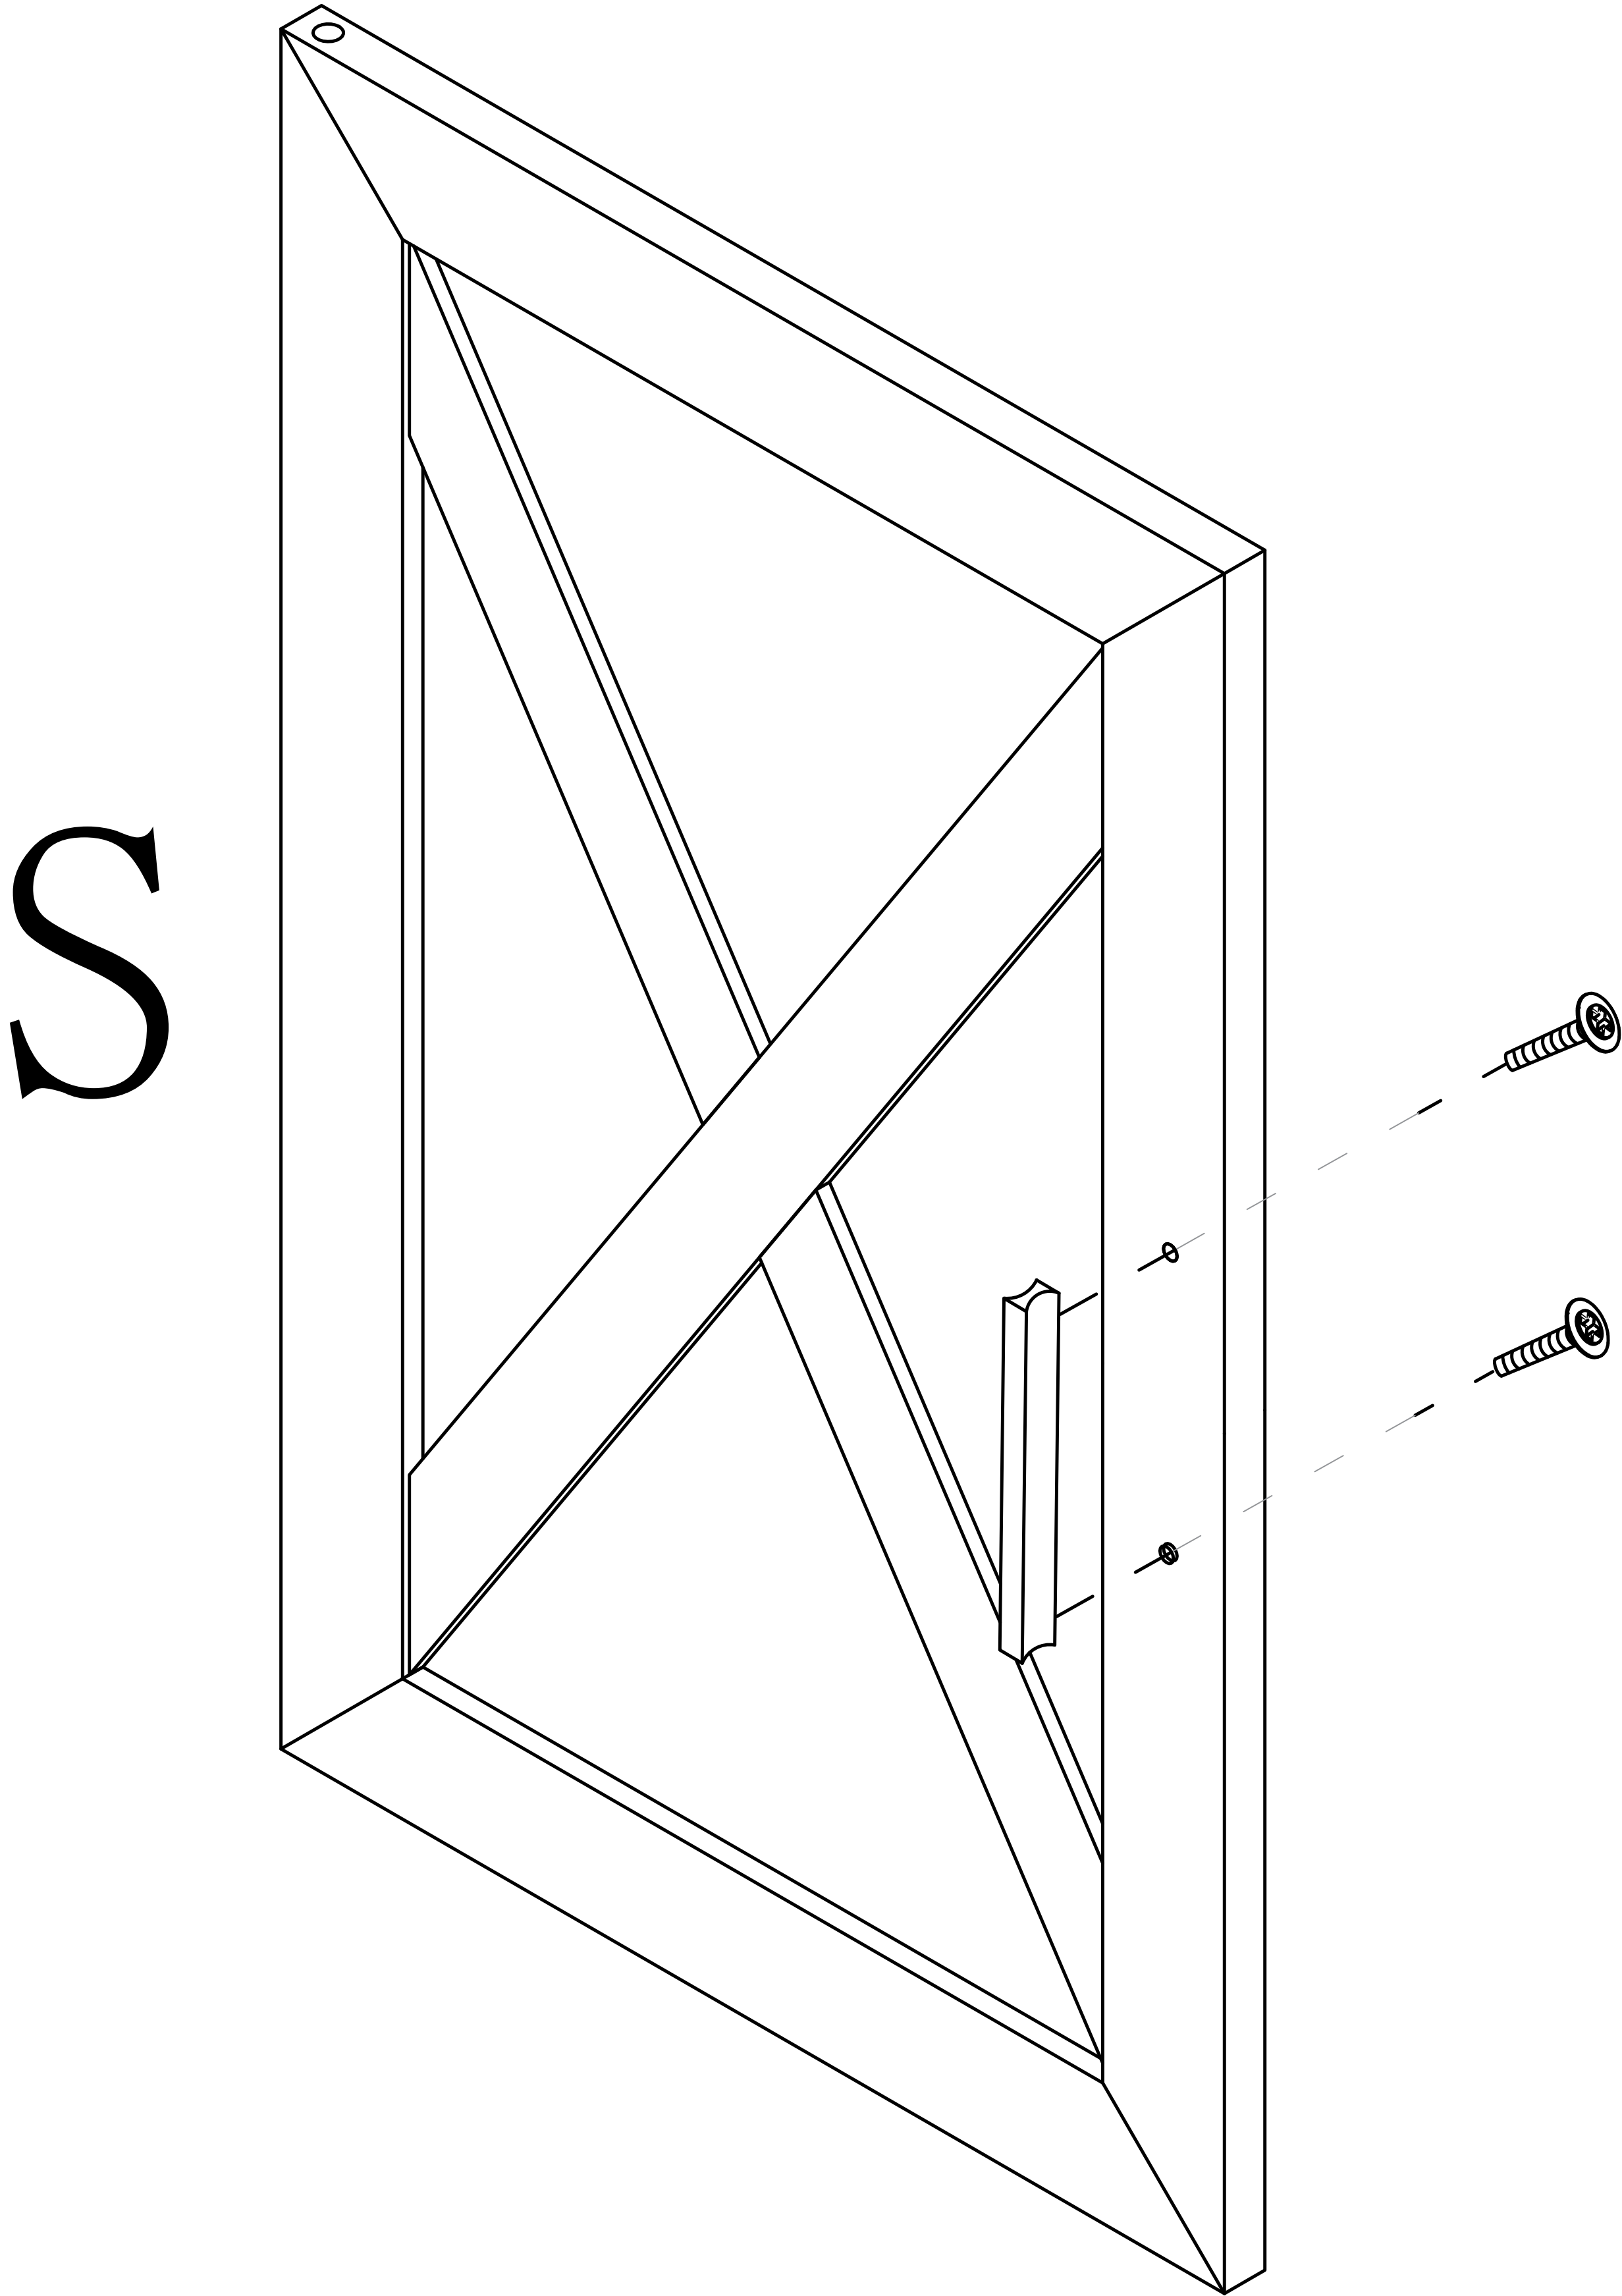


Step 51

9

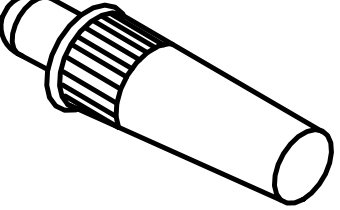


x2

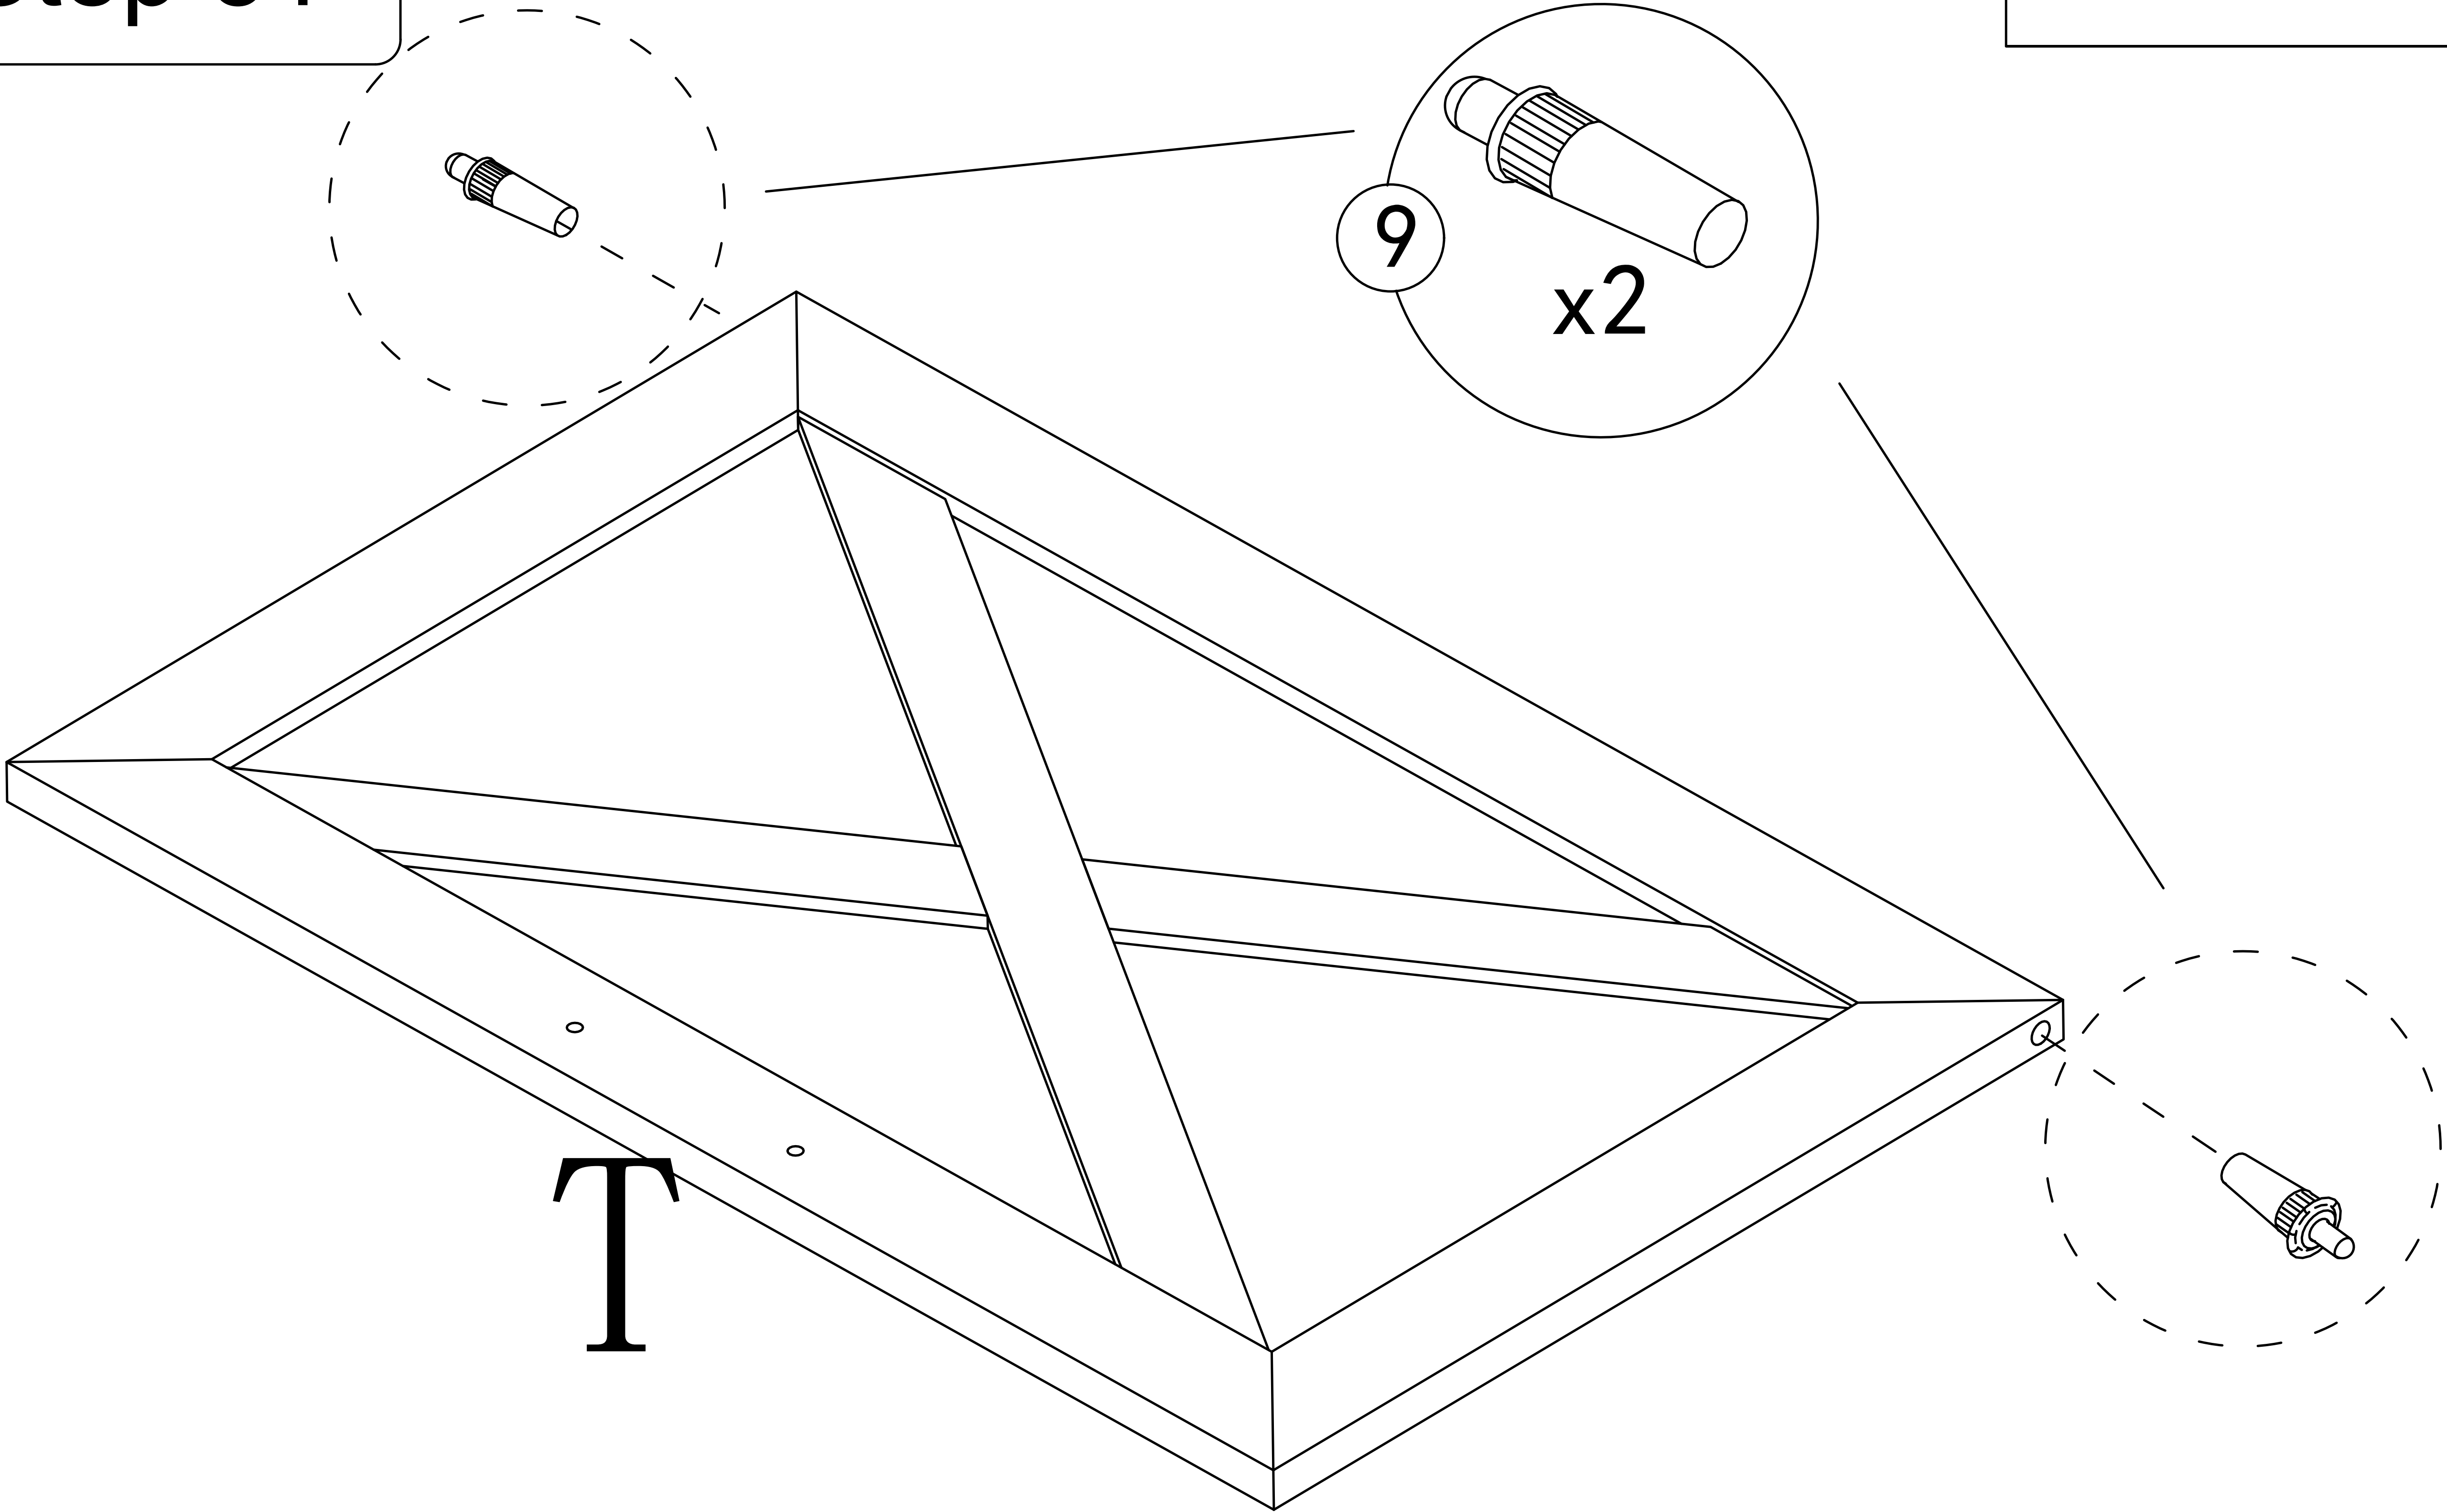


Step 52


12

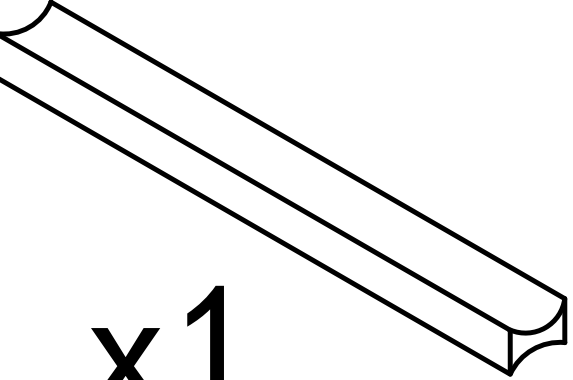



x1

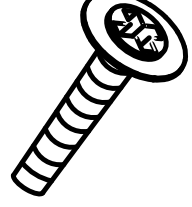



x2

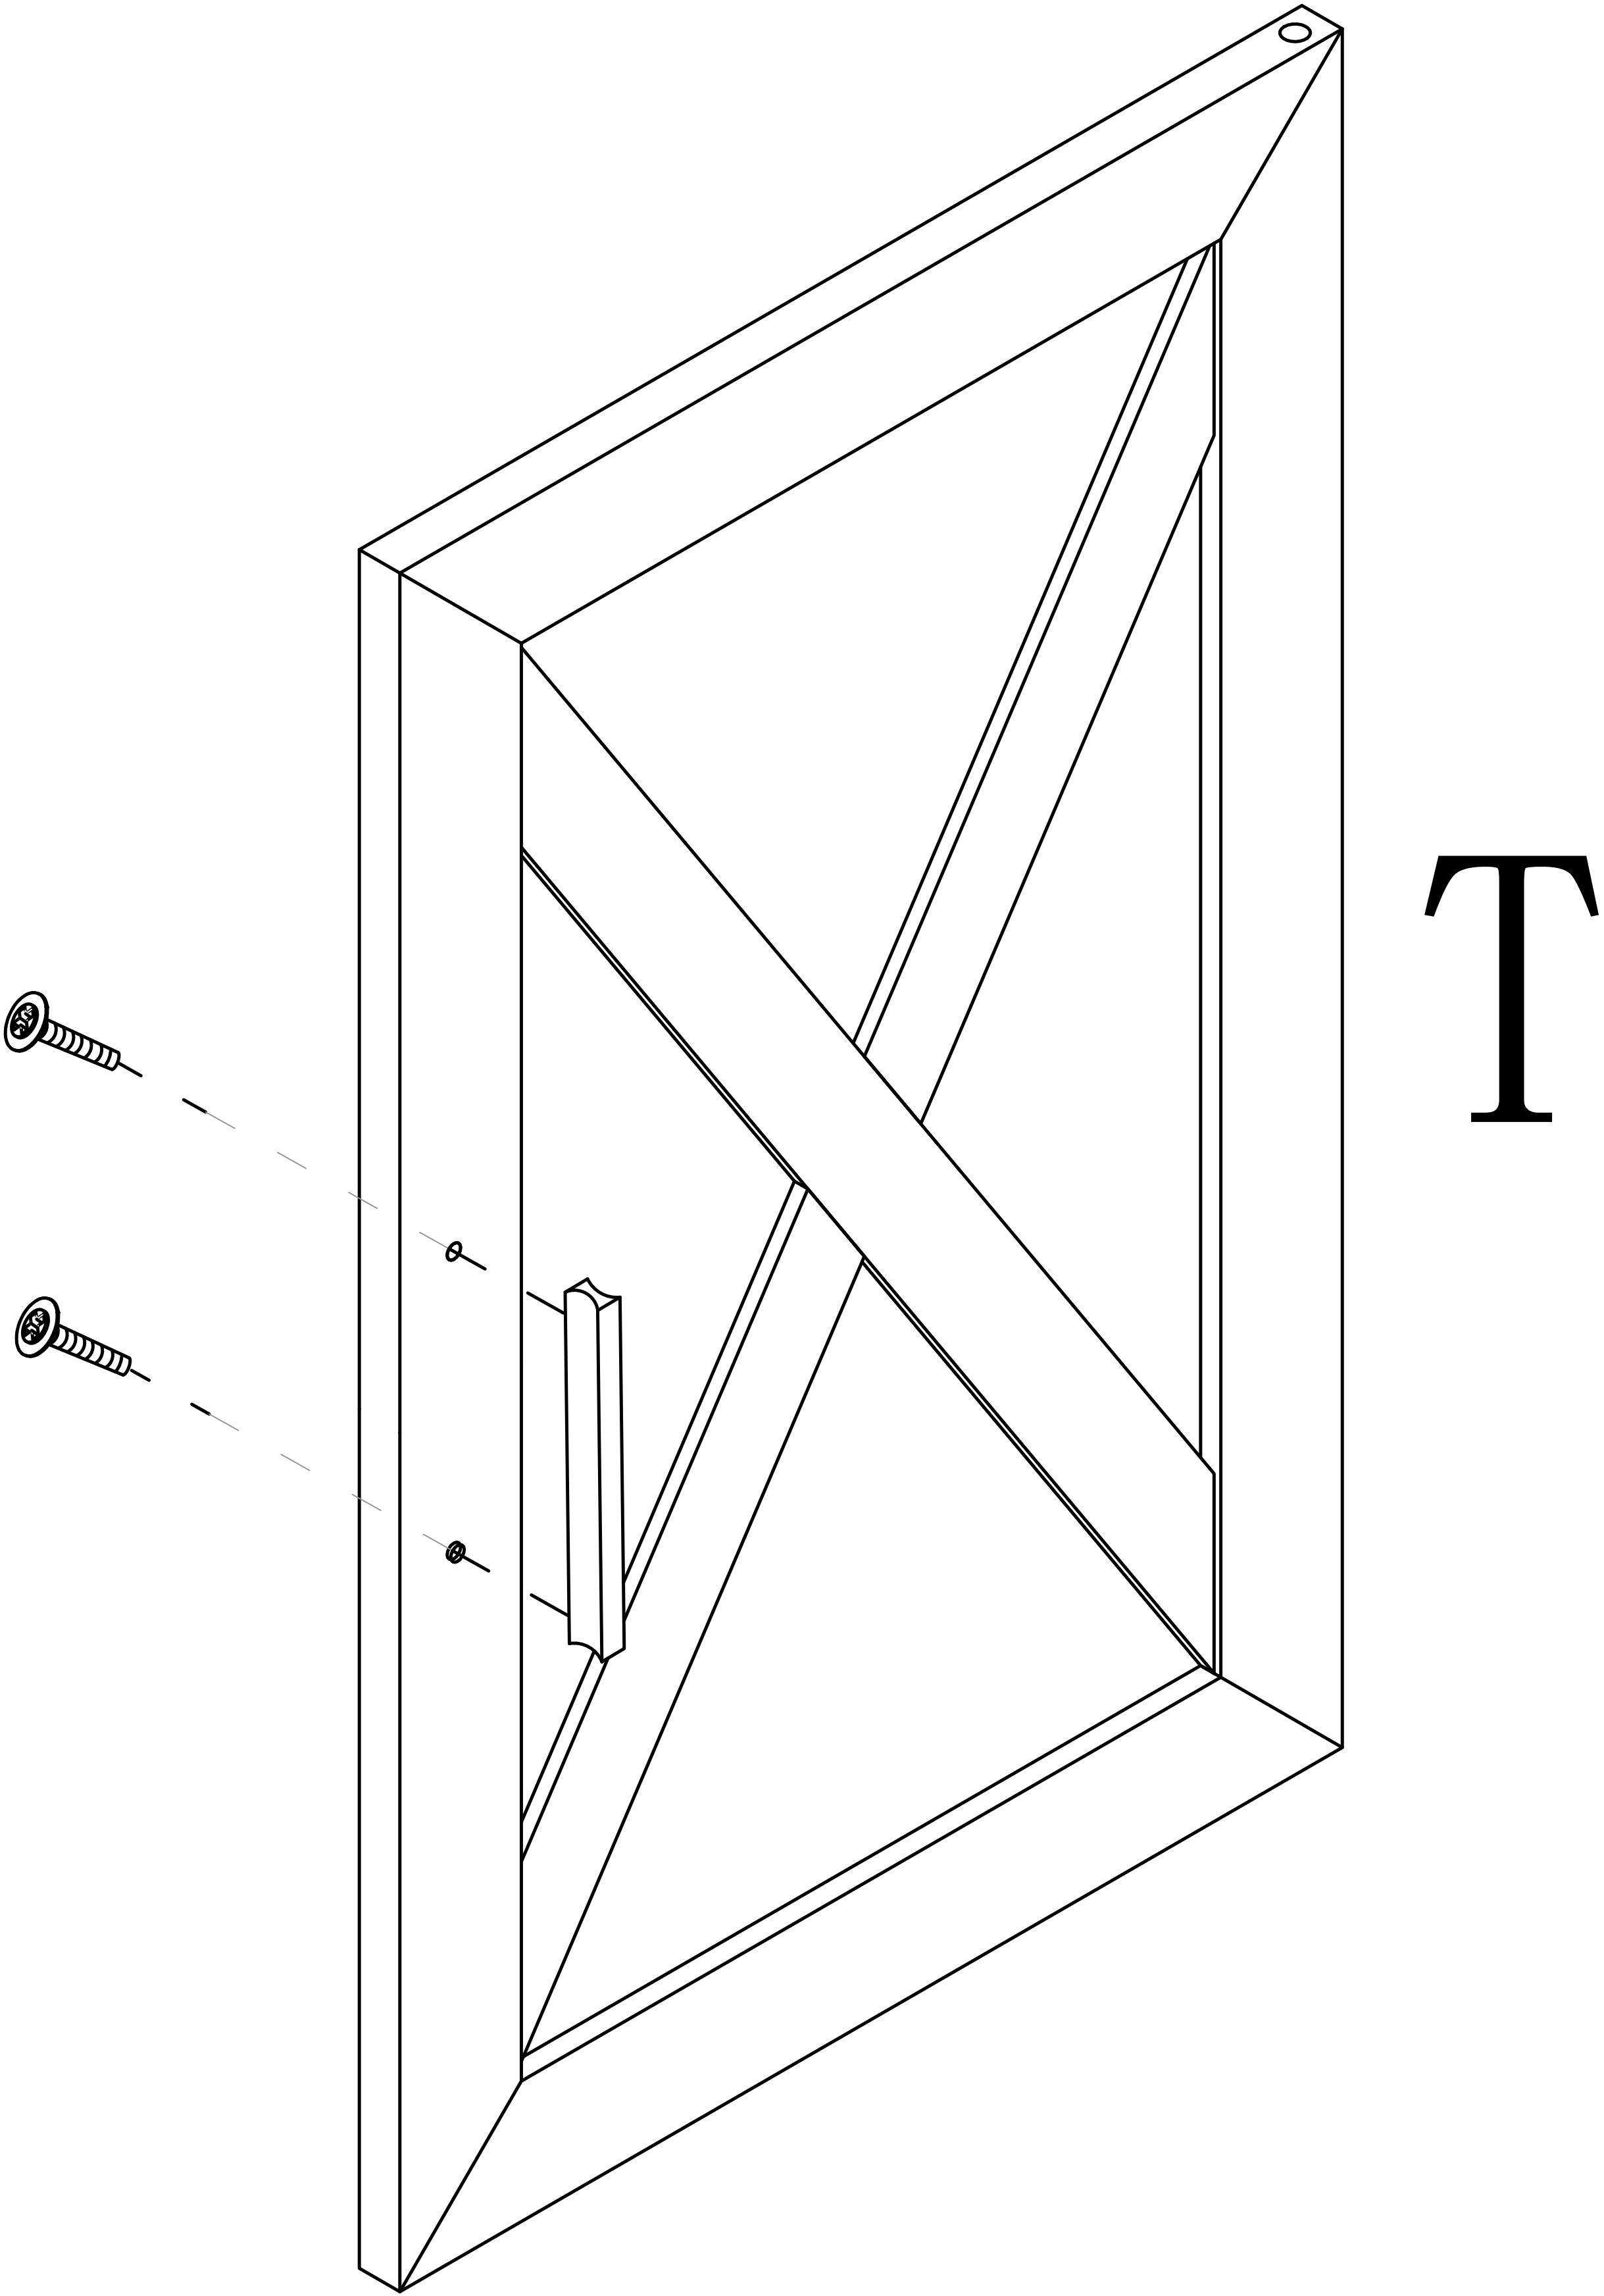

Step 53



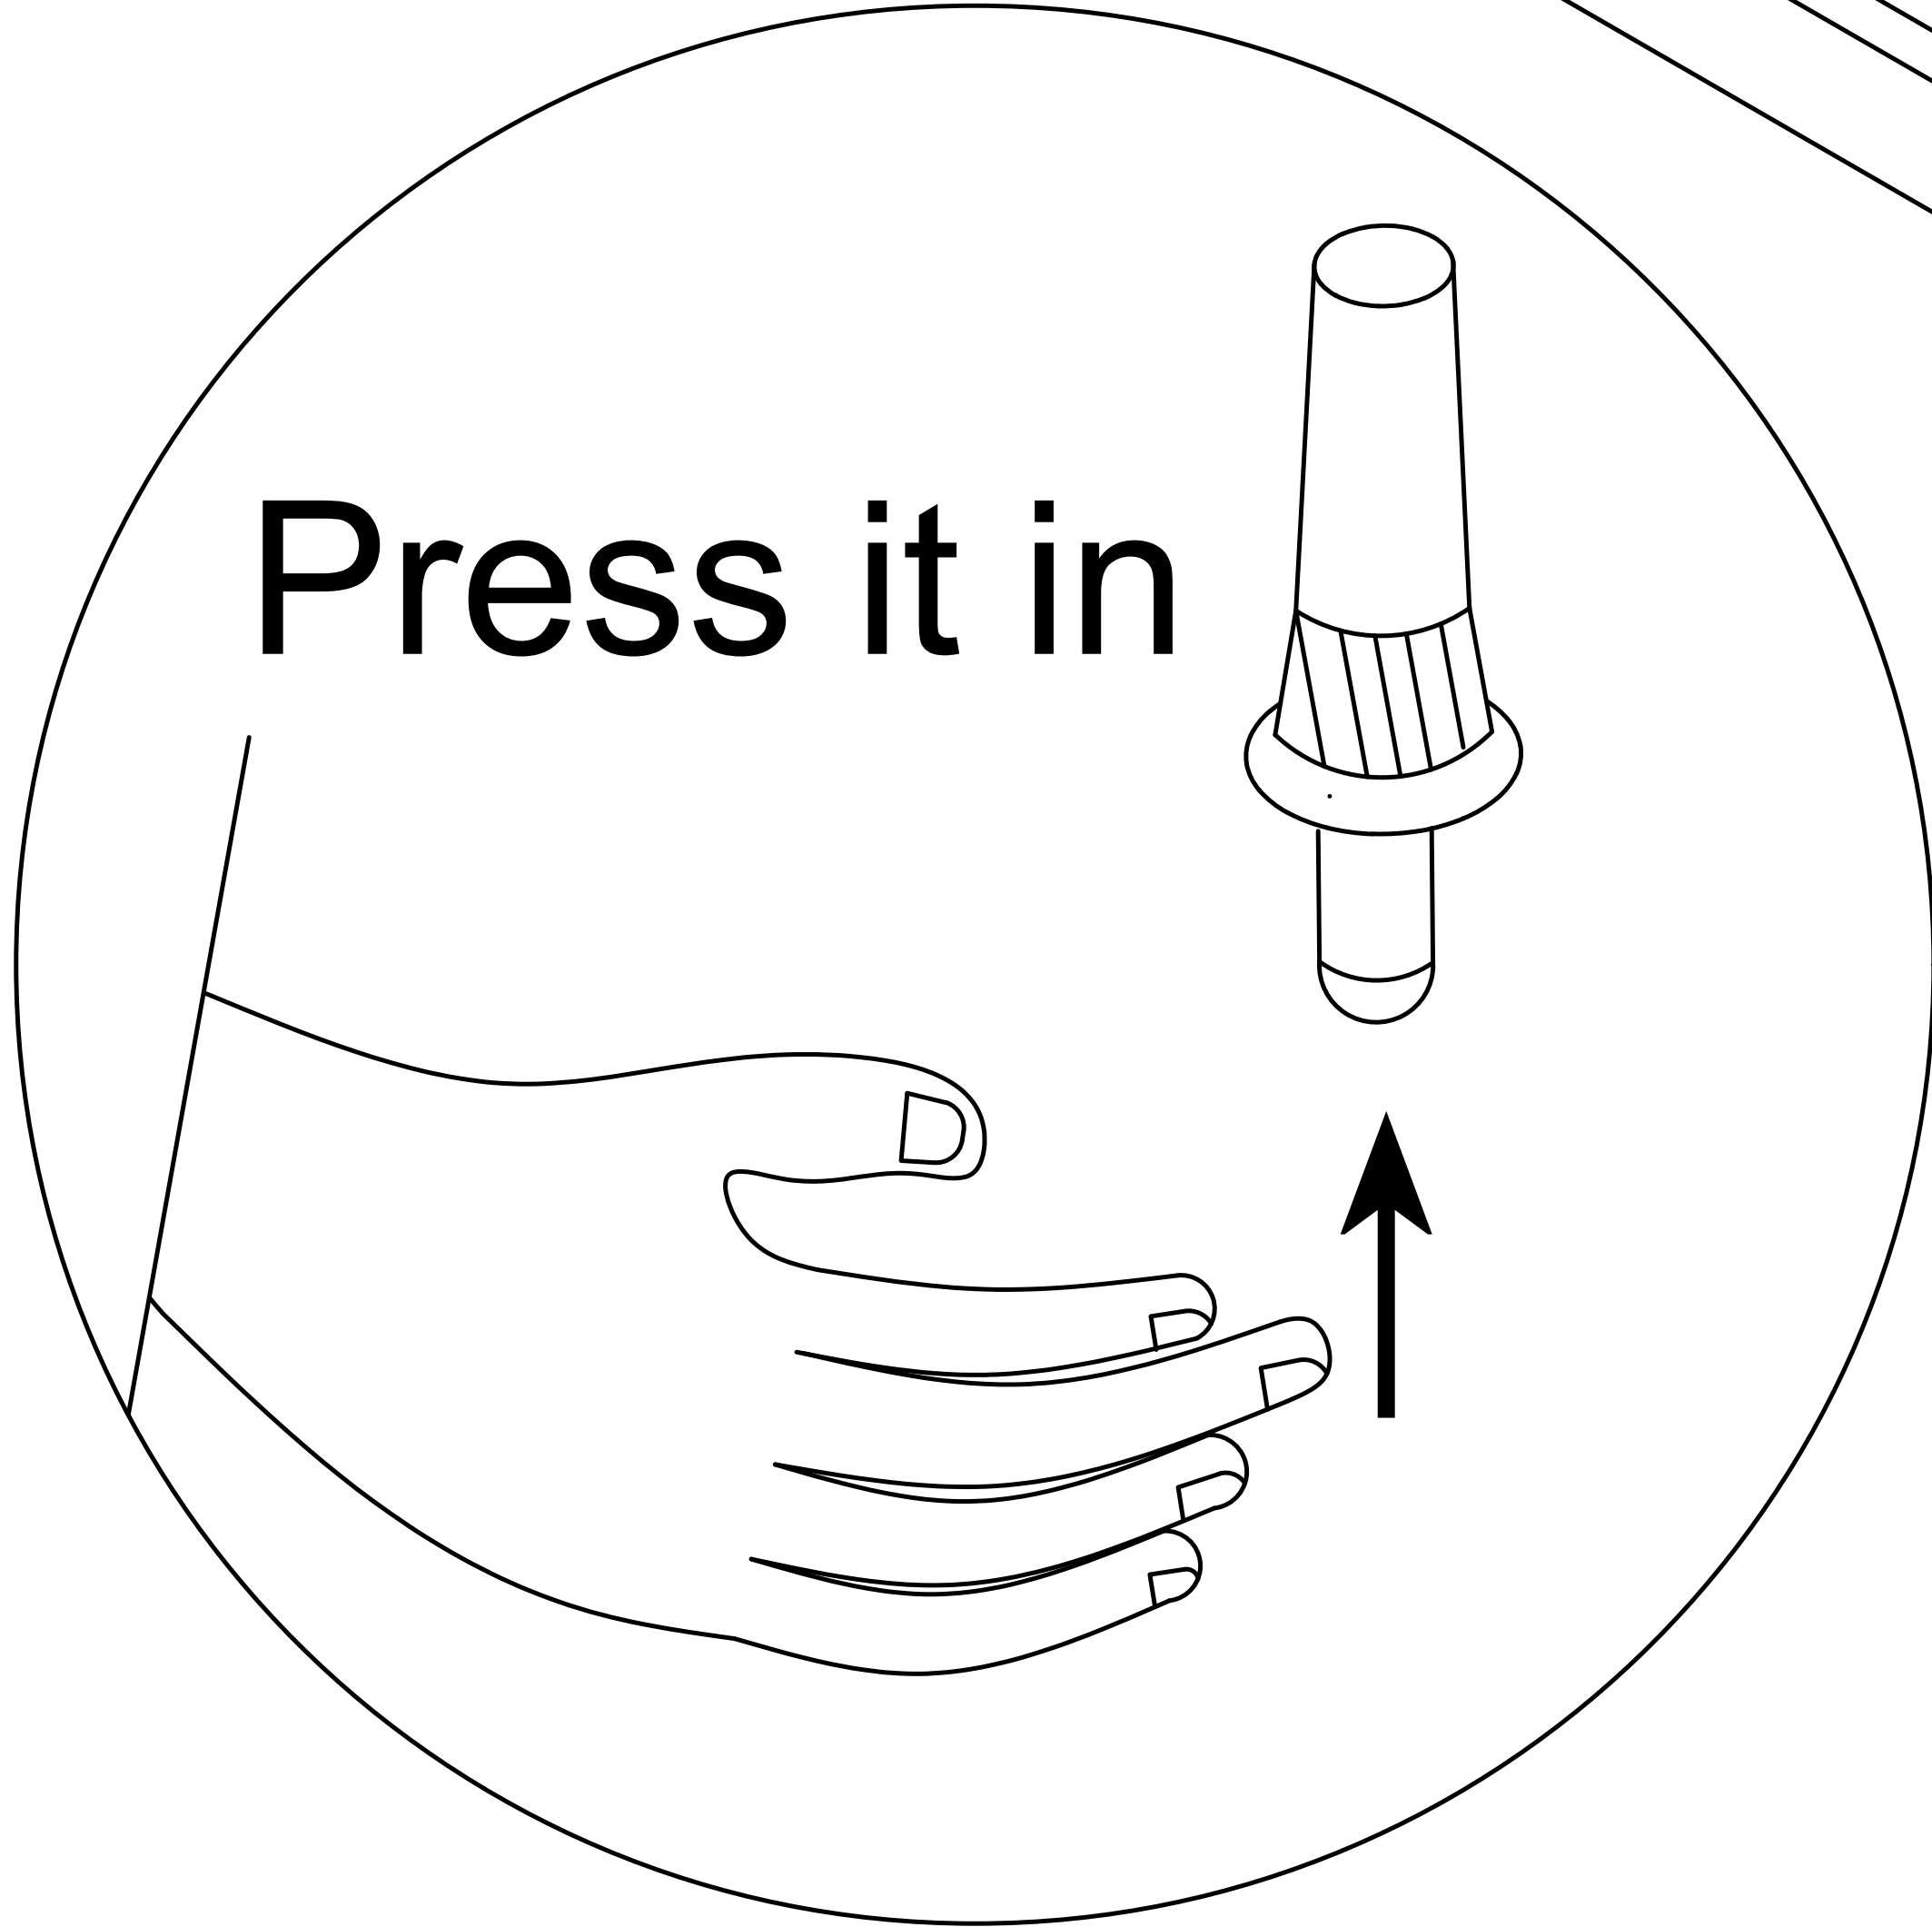
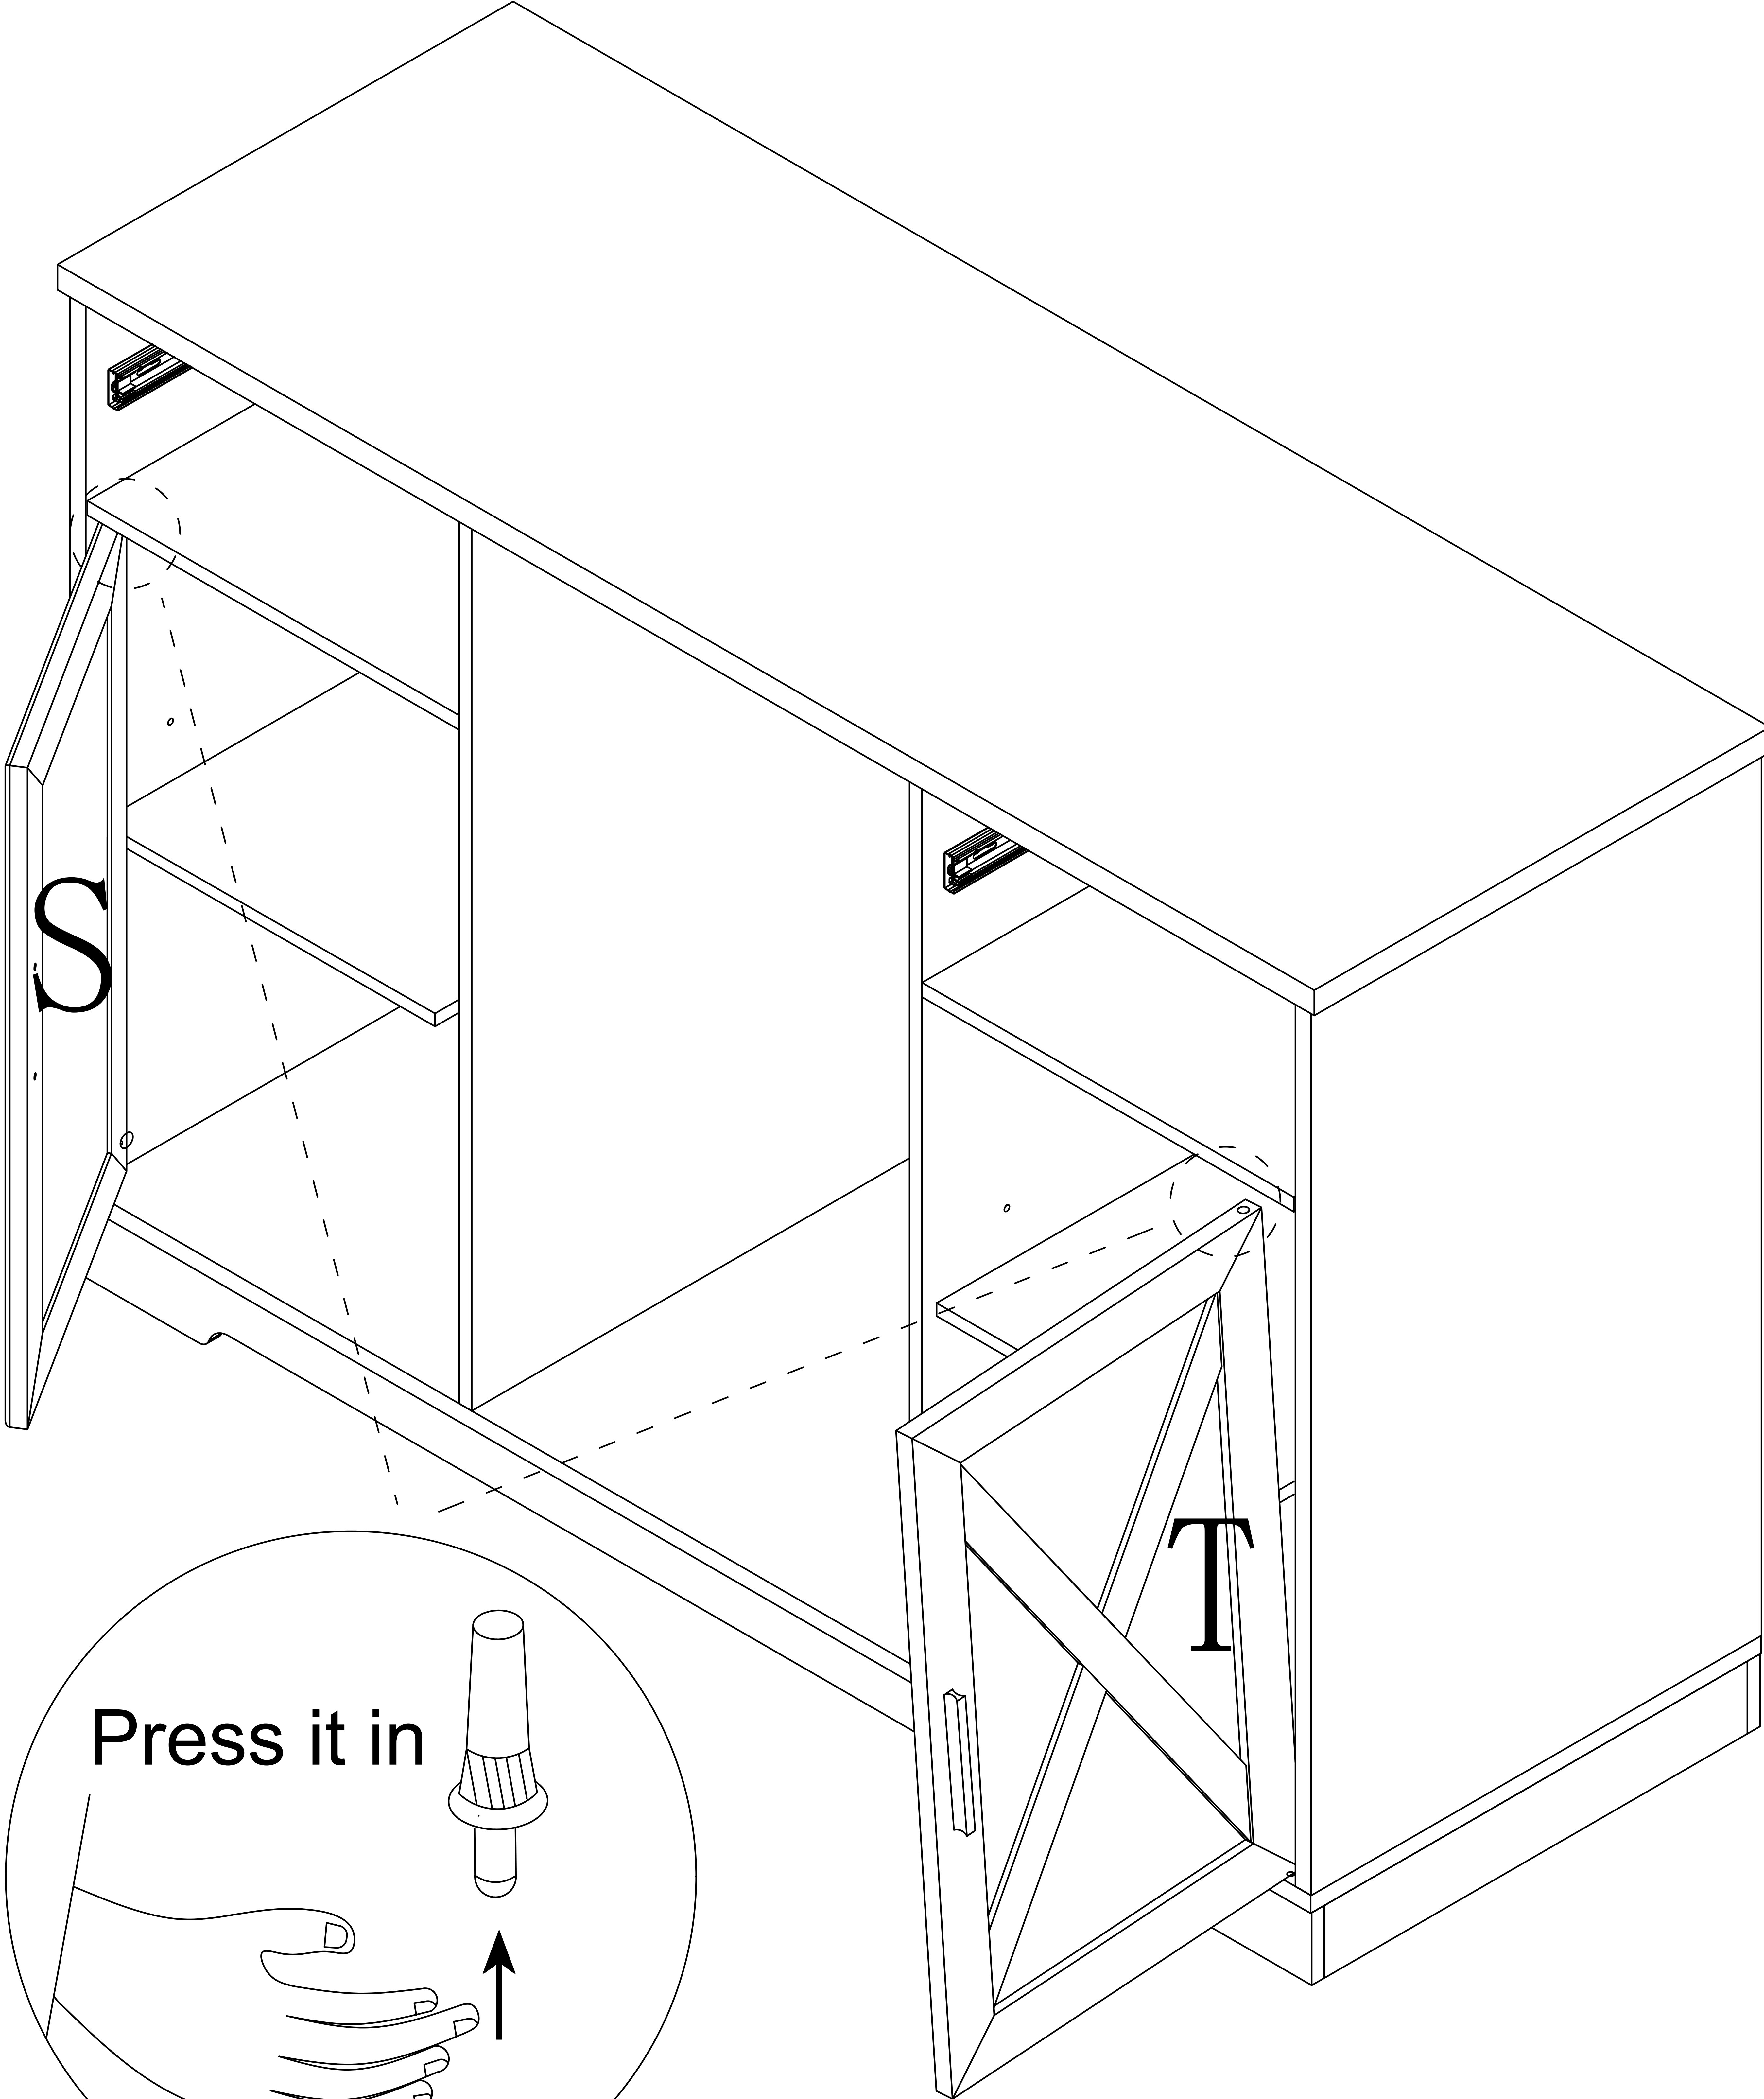


Step 54

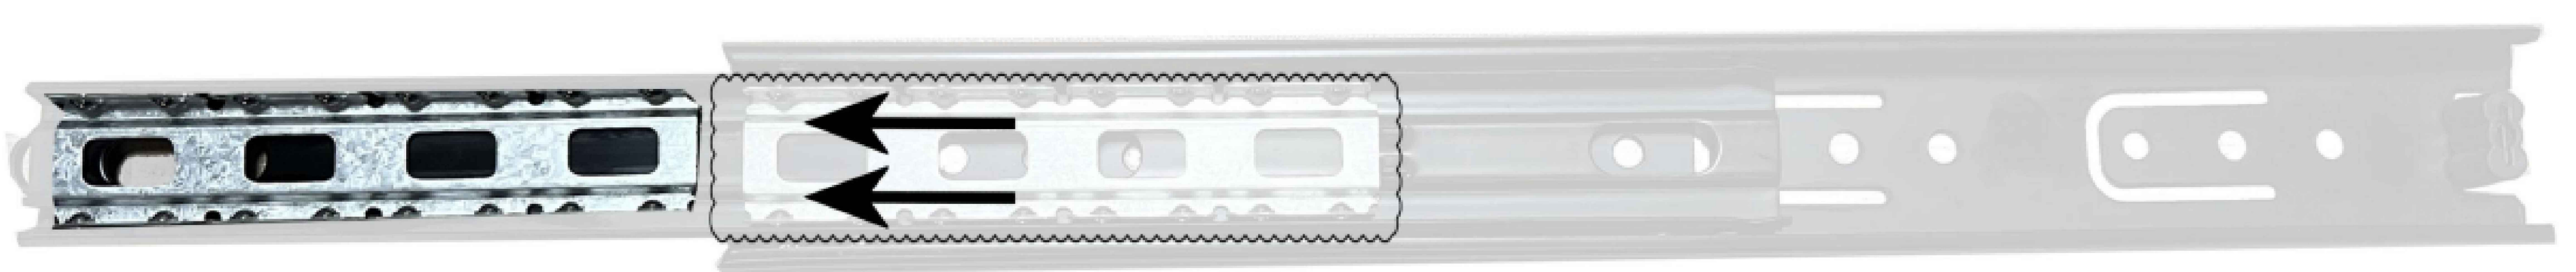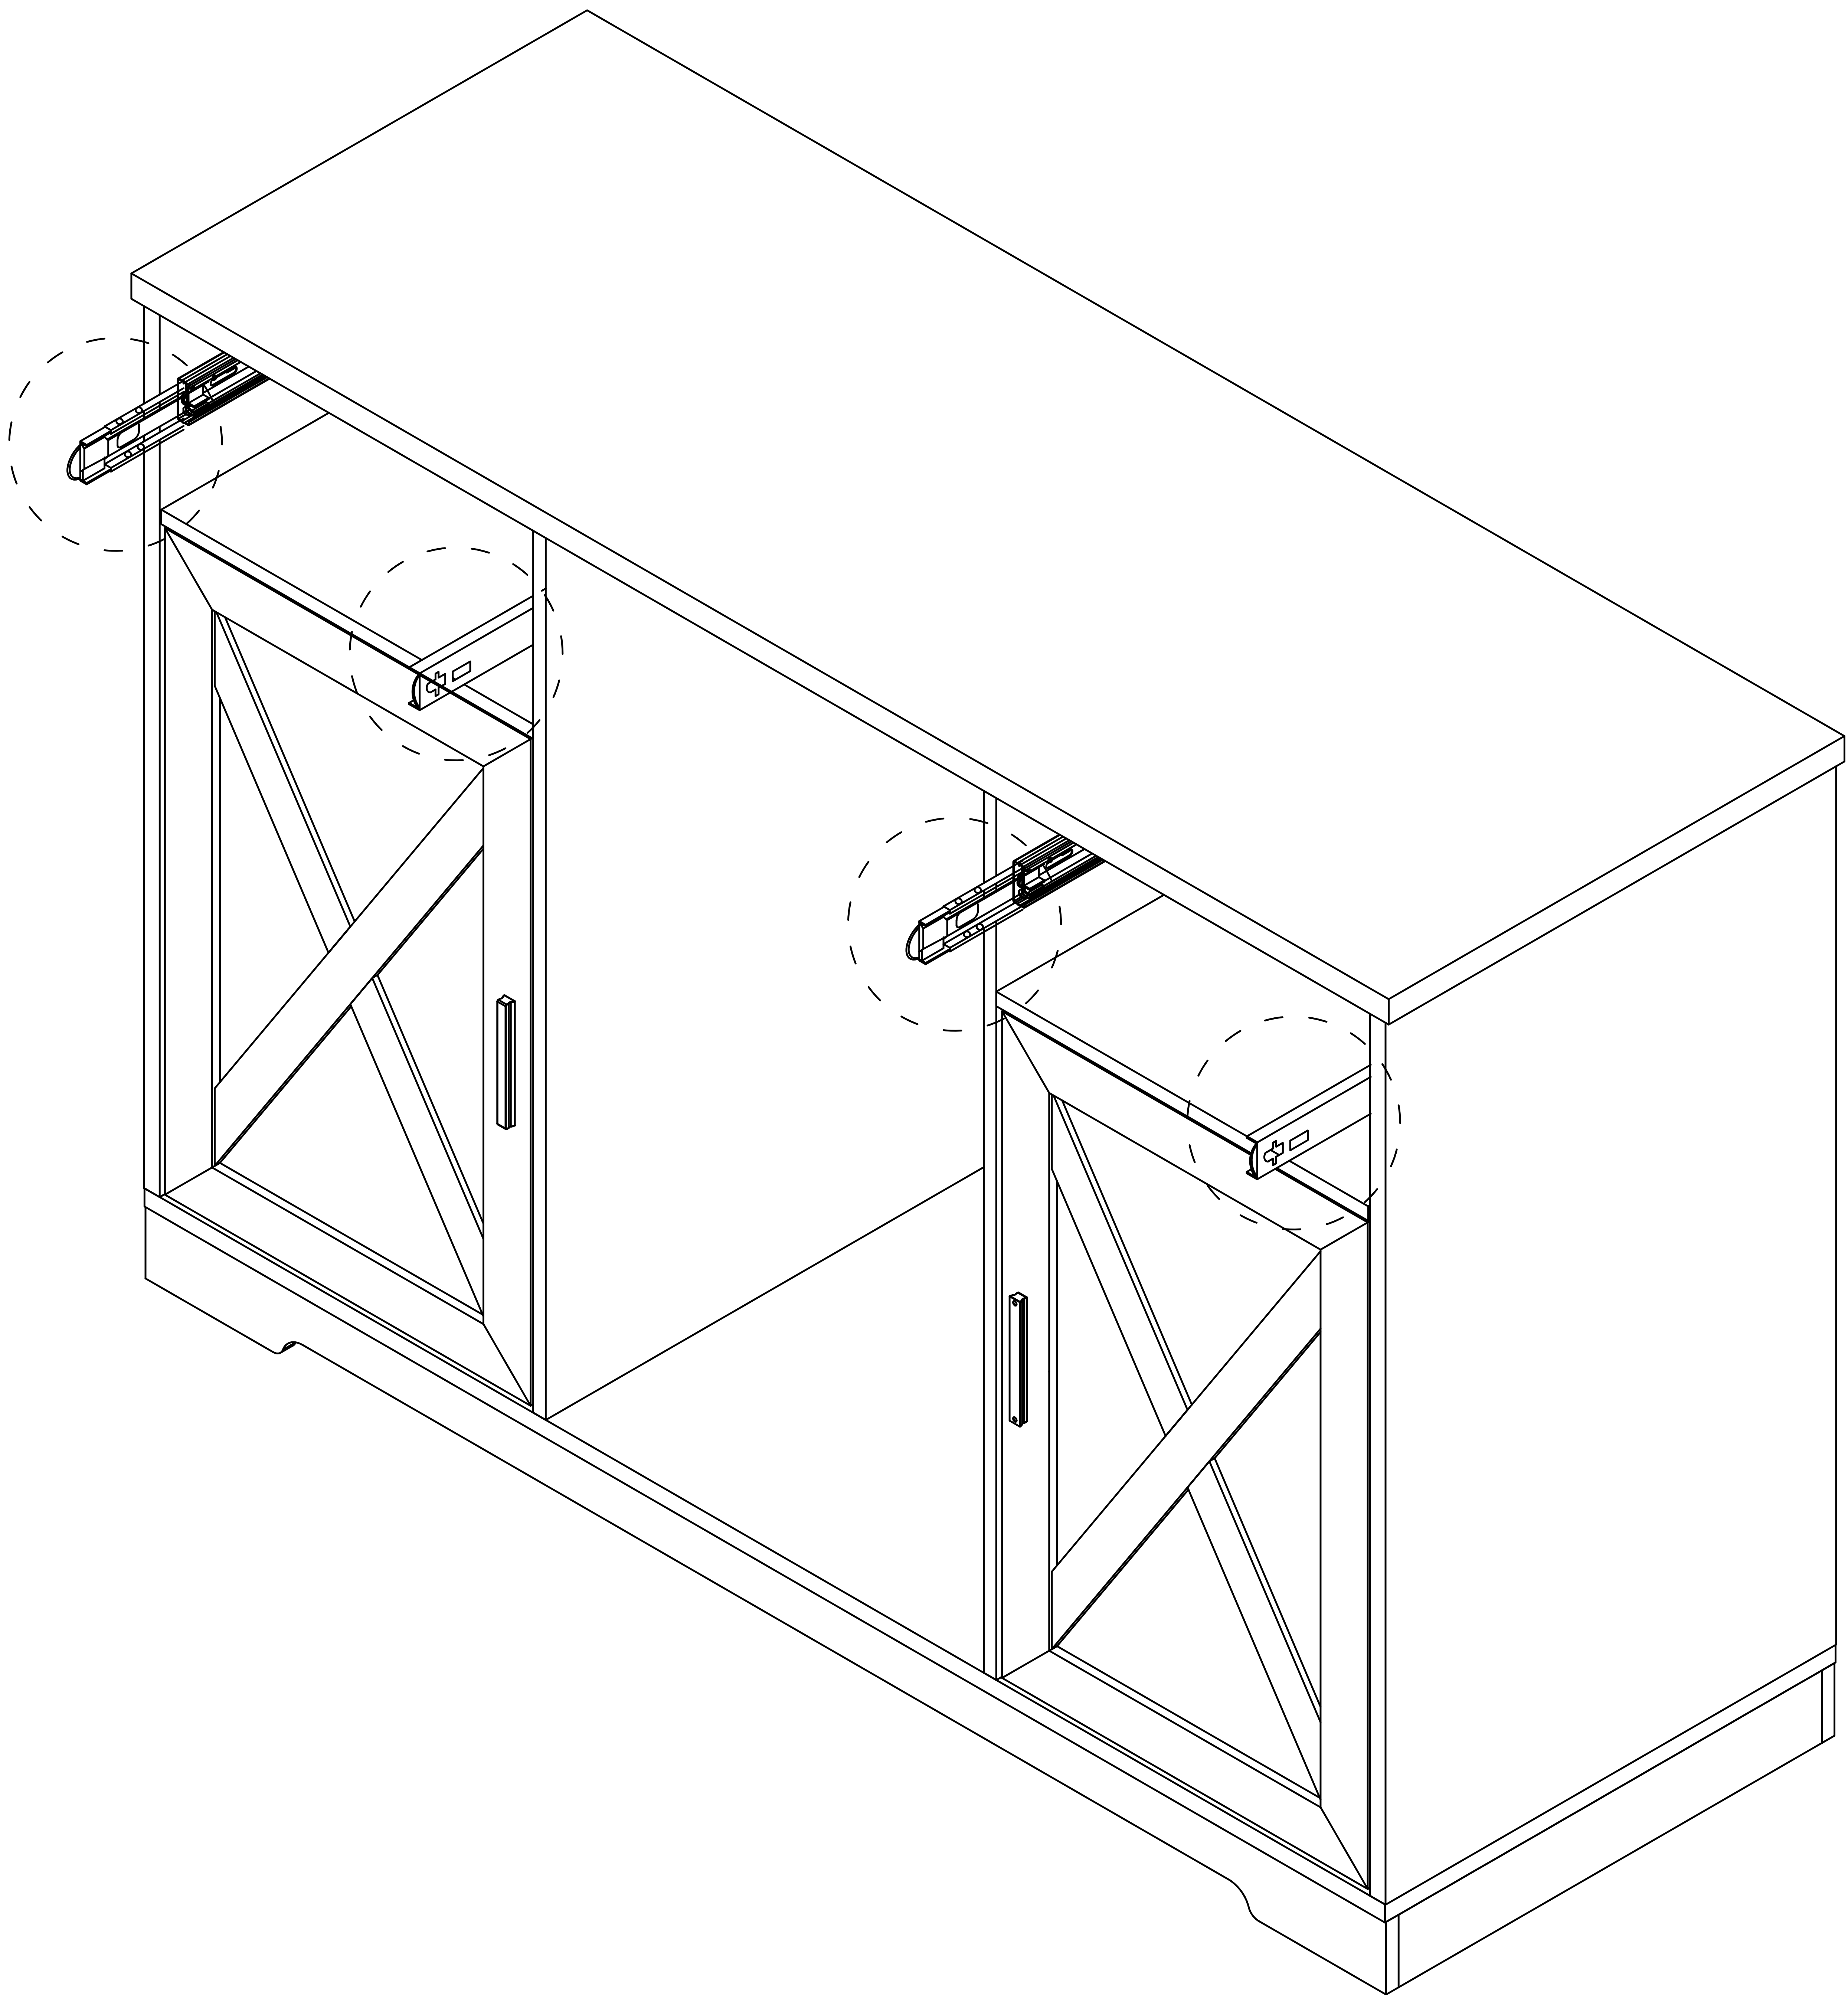

As shown, When installing the drawer,
pull the guide rail out first, Slide beads are also pulled out.


Step 55

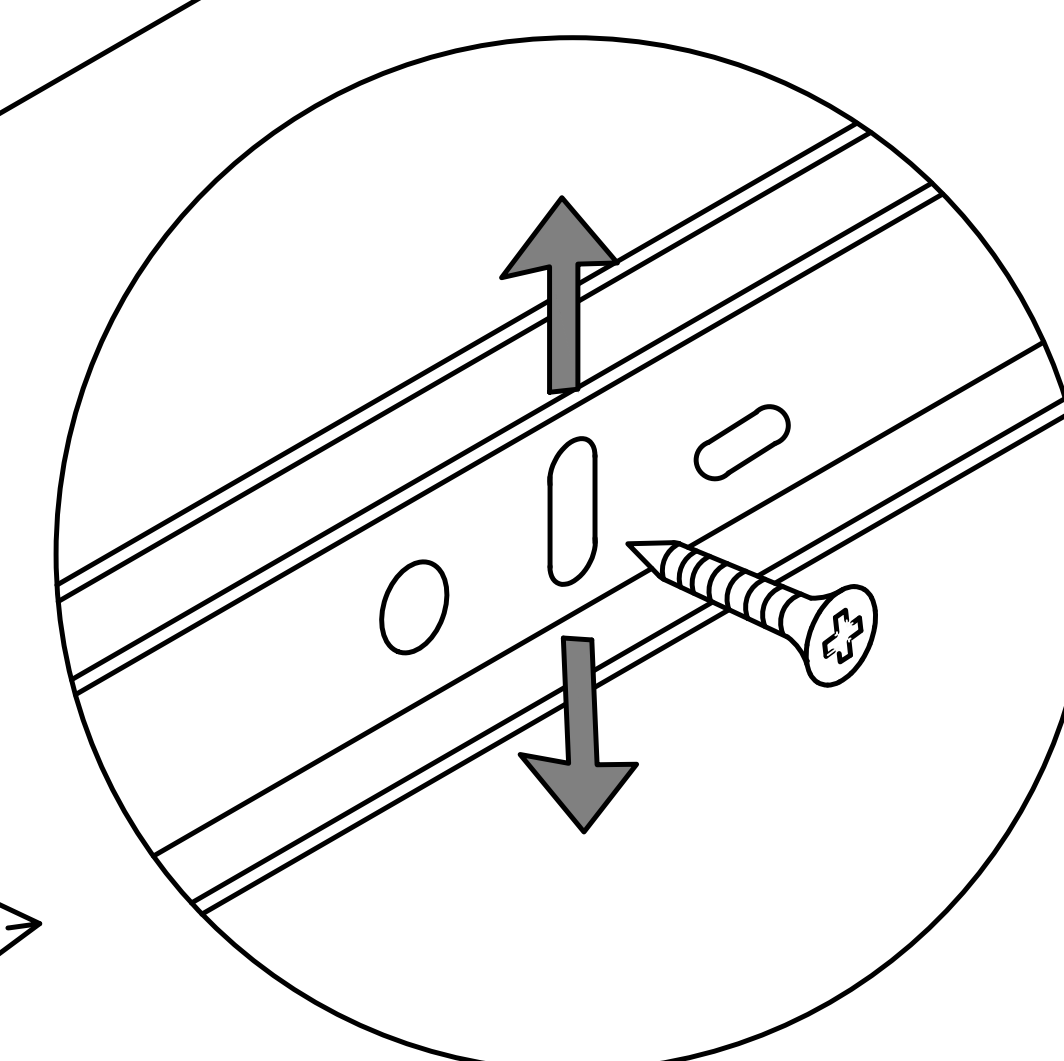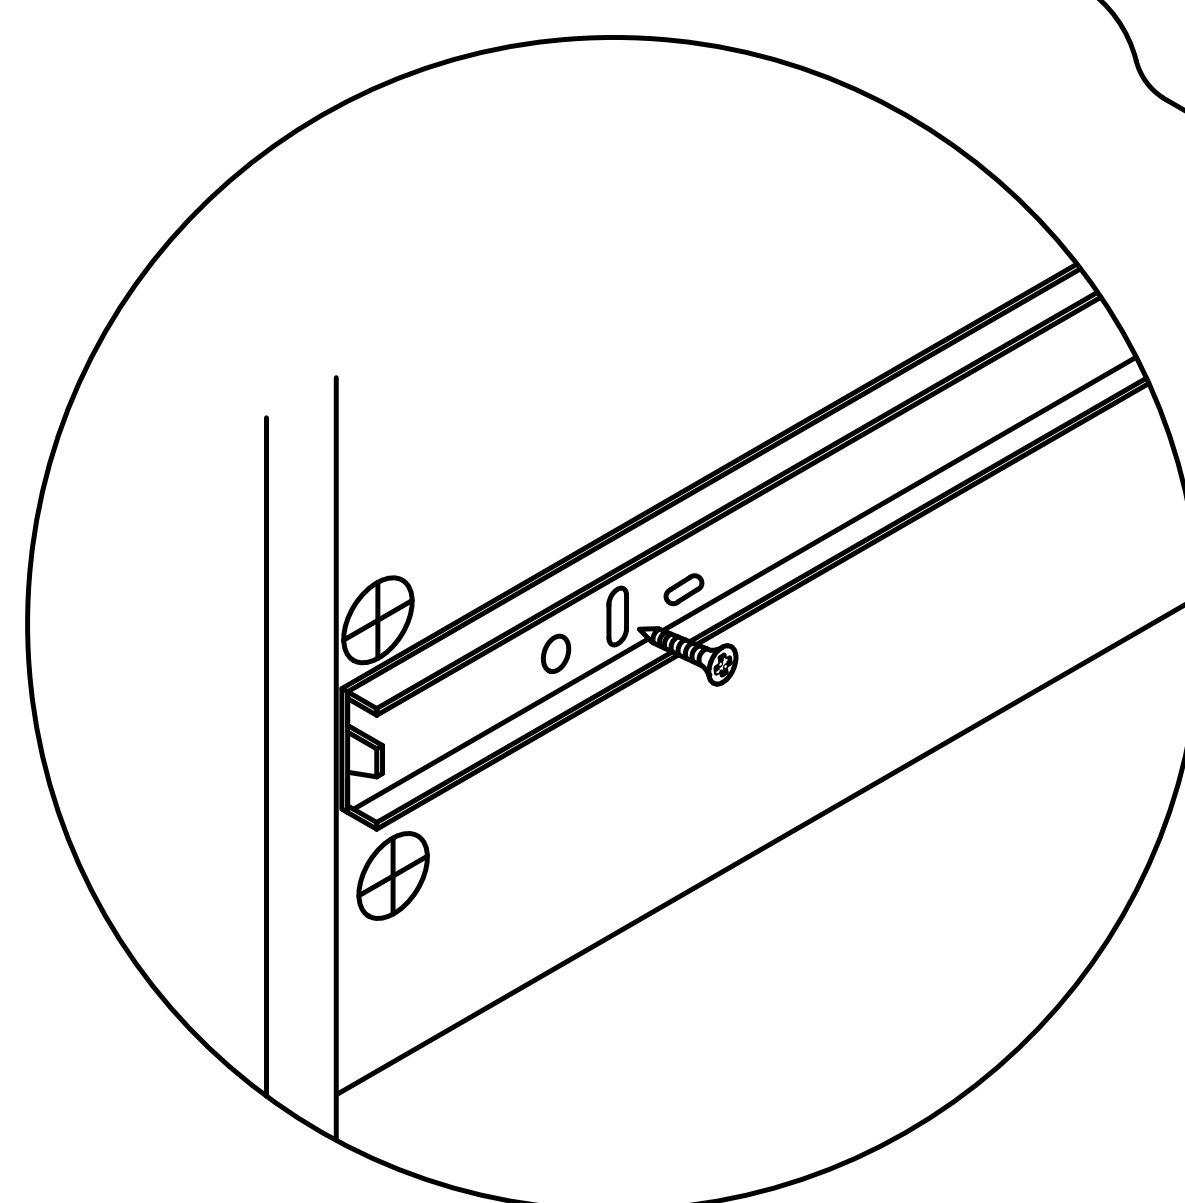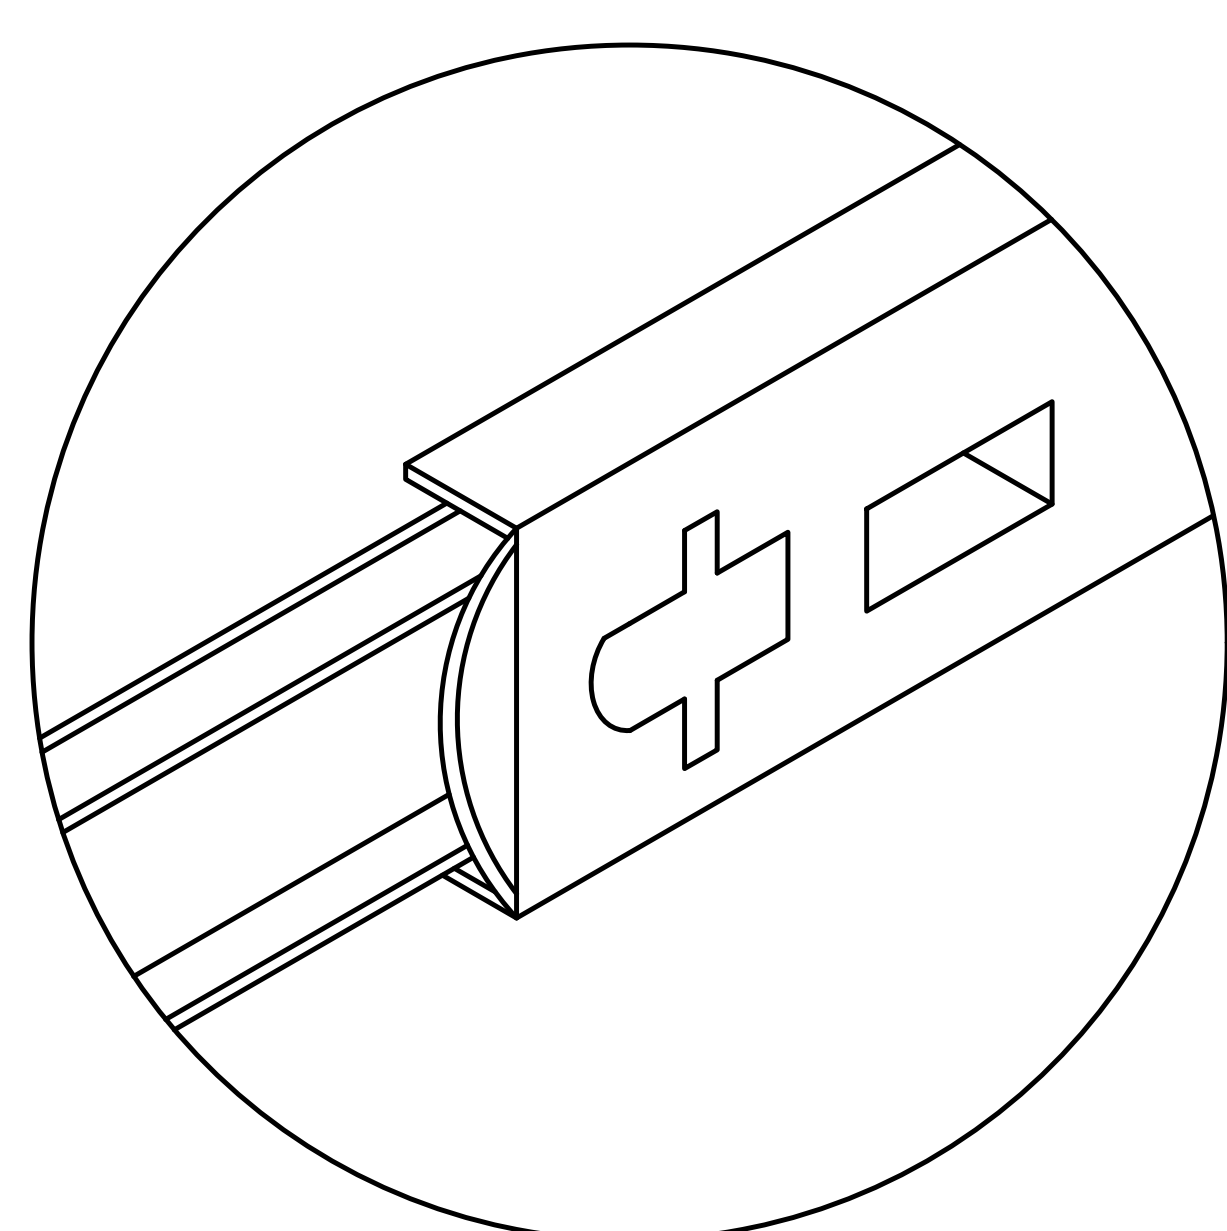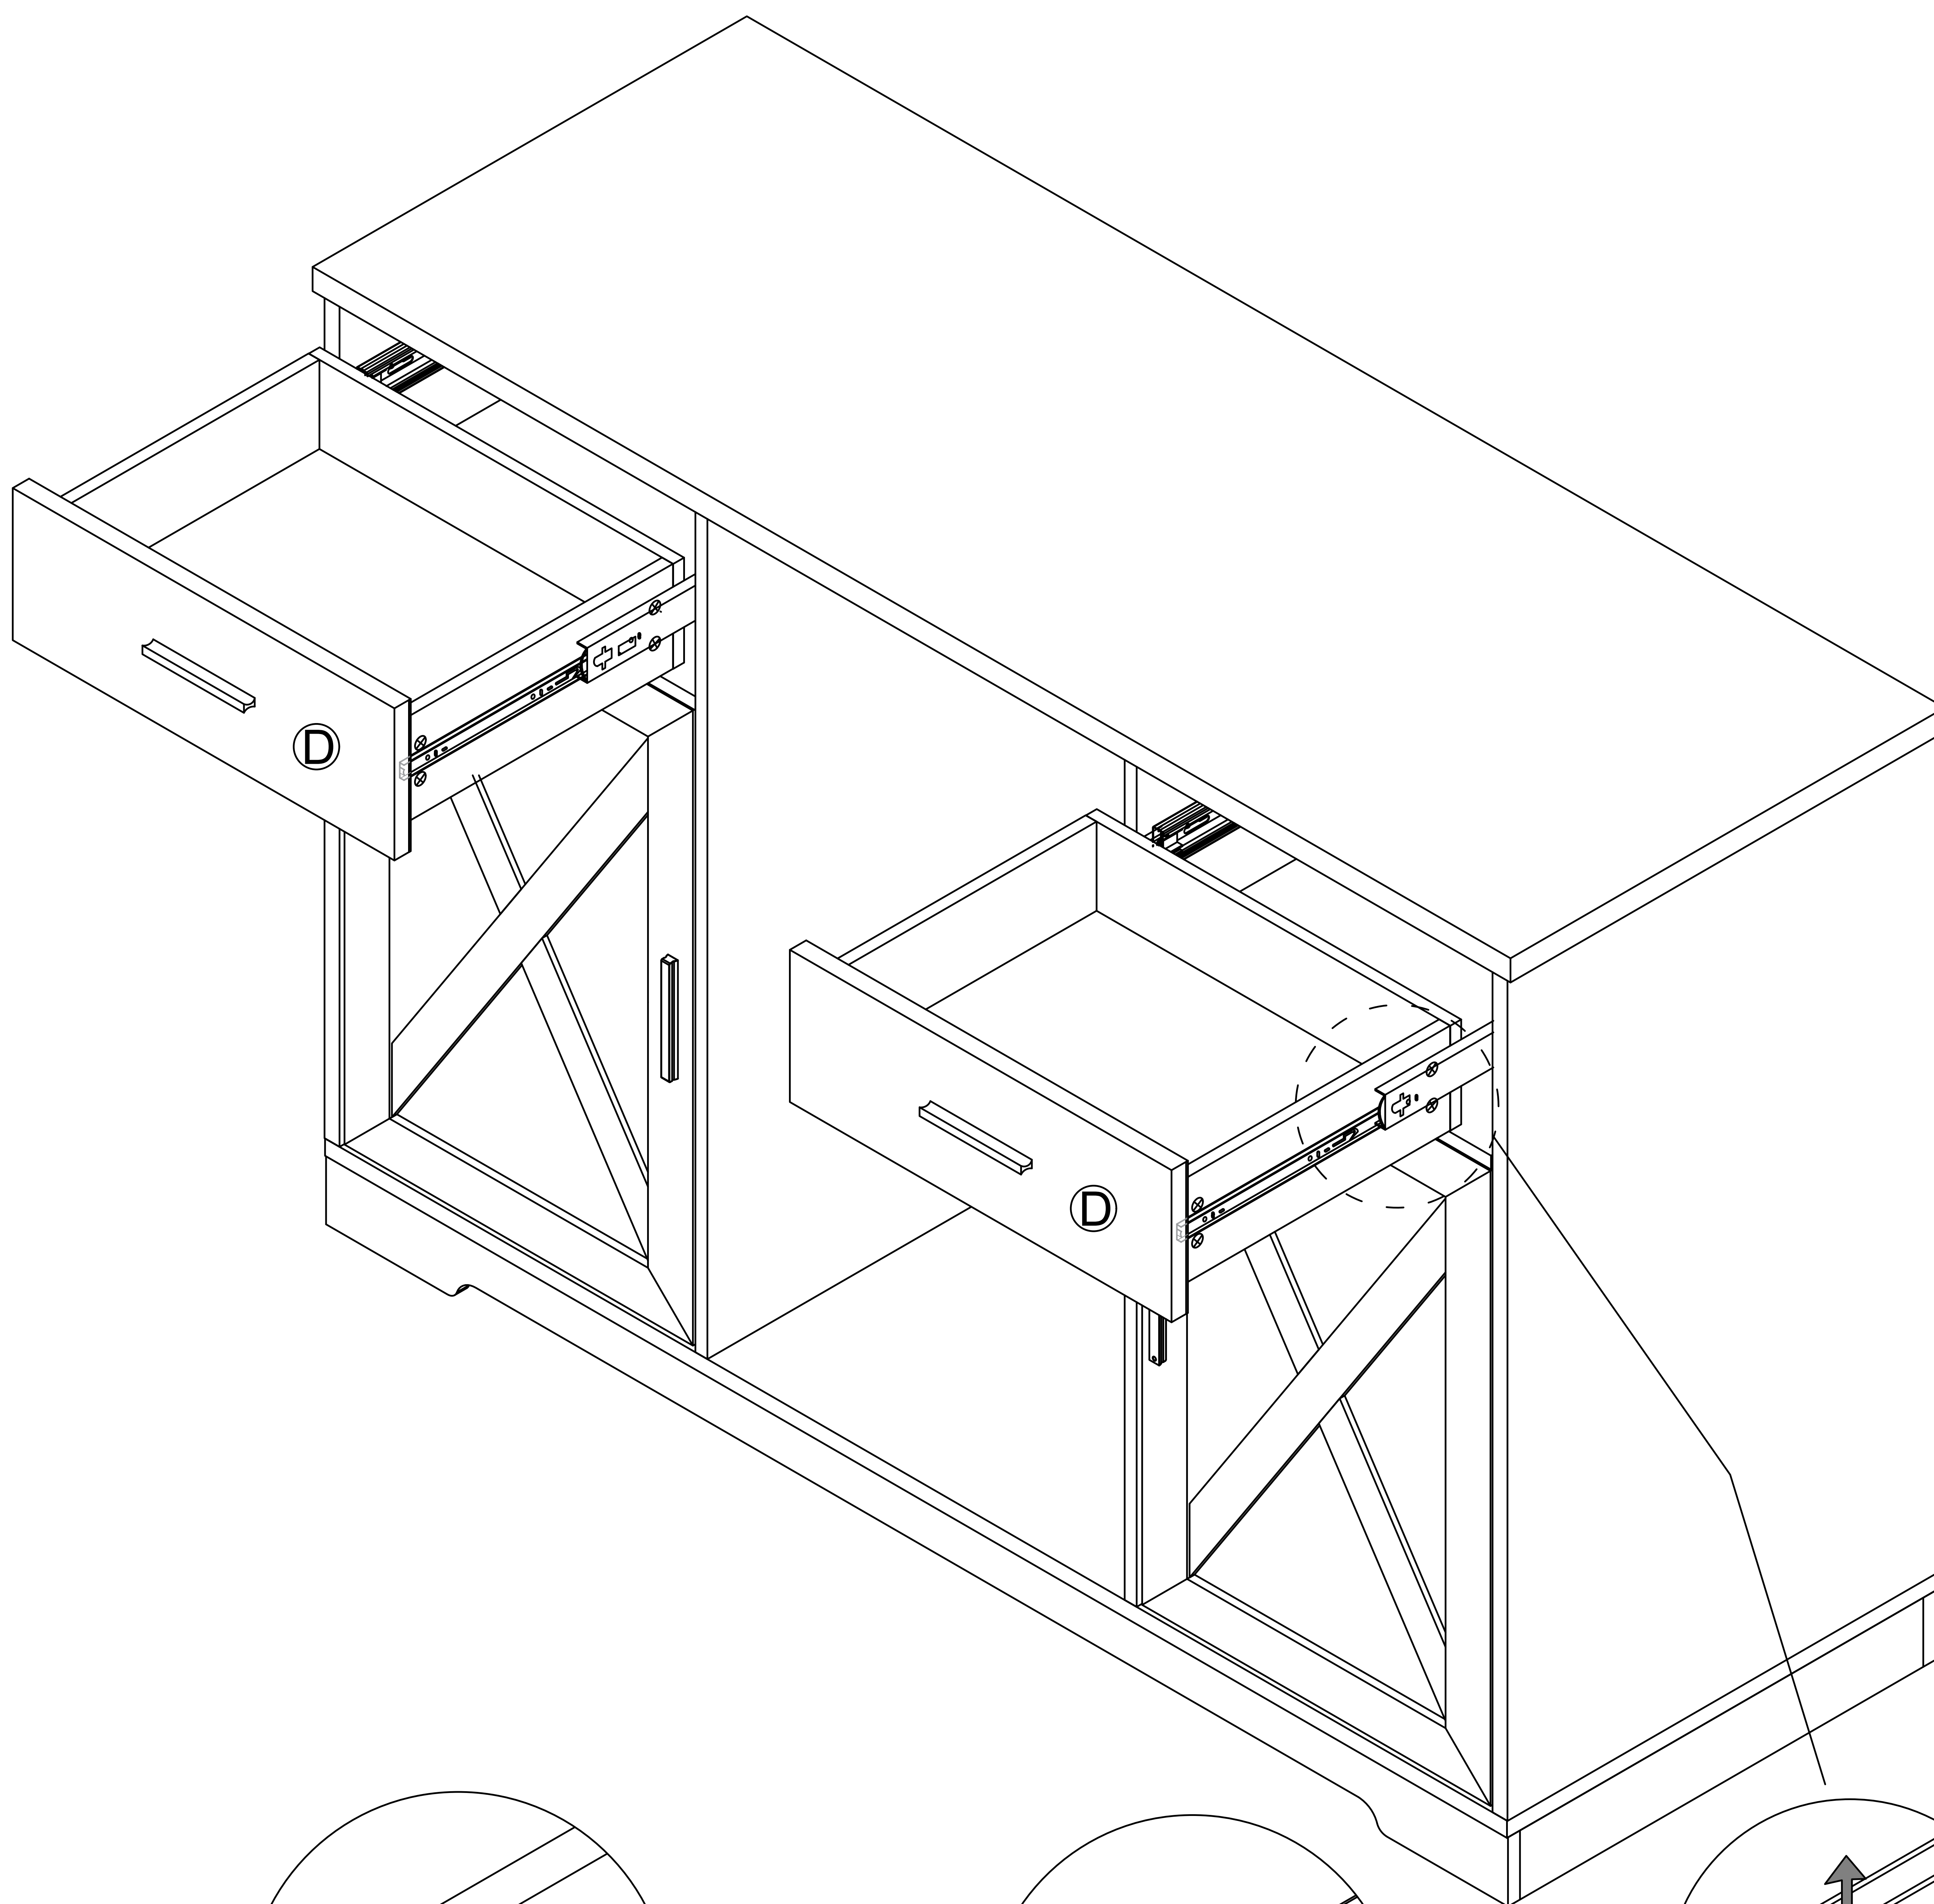


If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap

Step 56

10

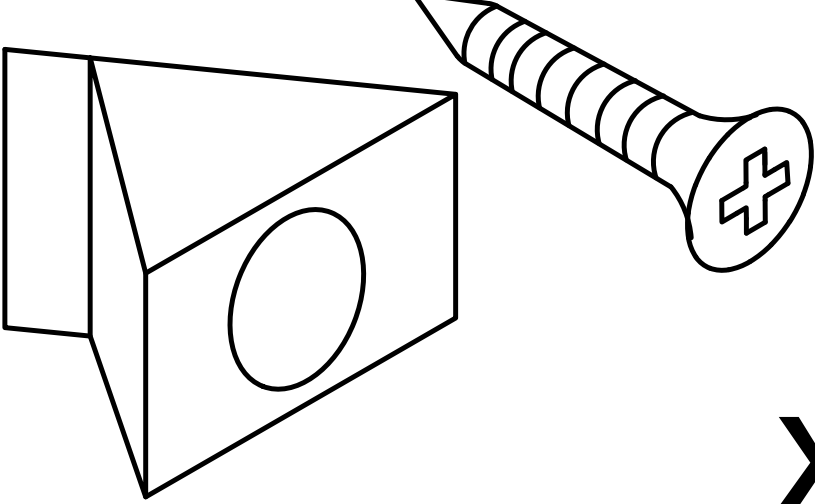


x16

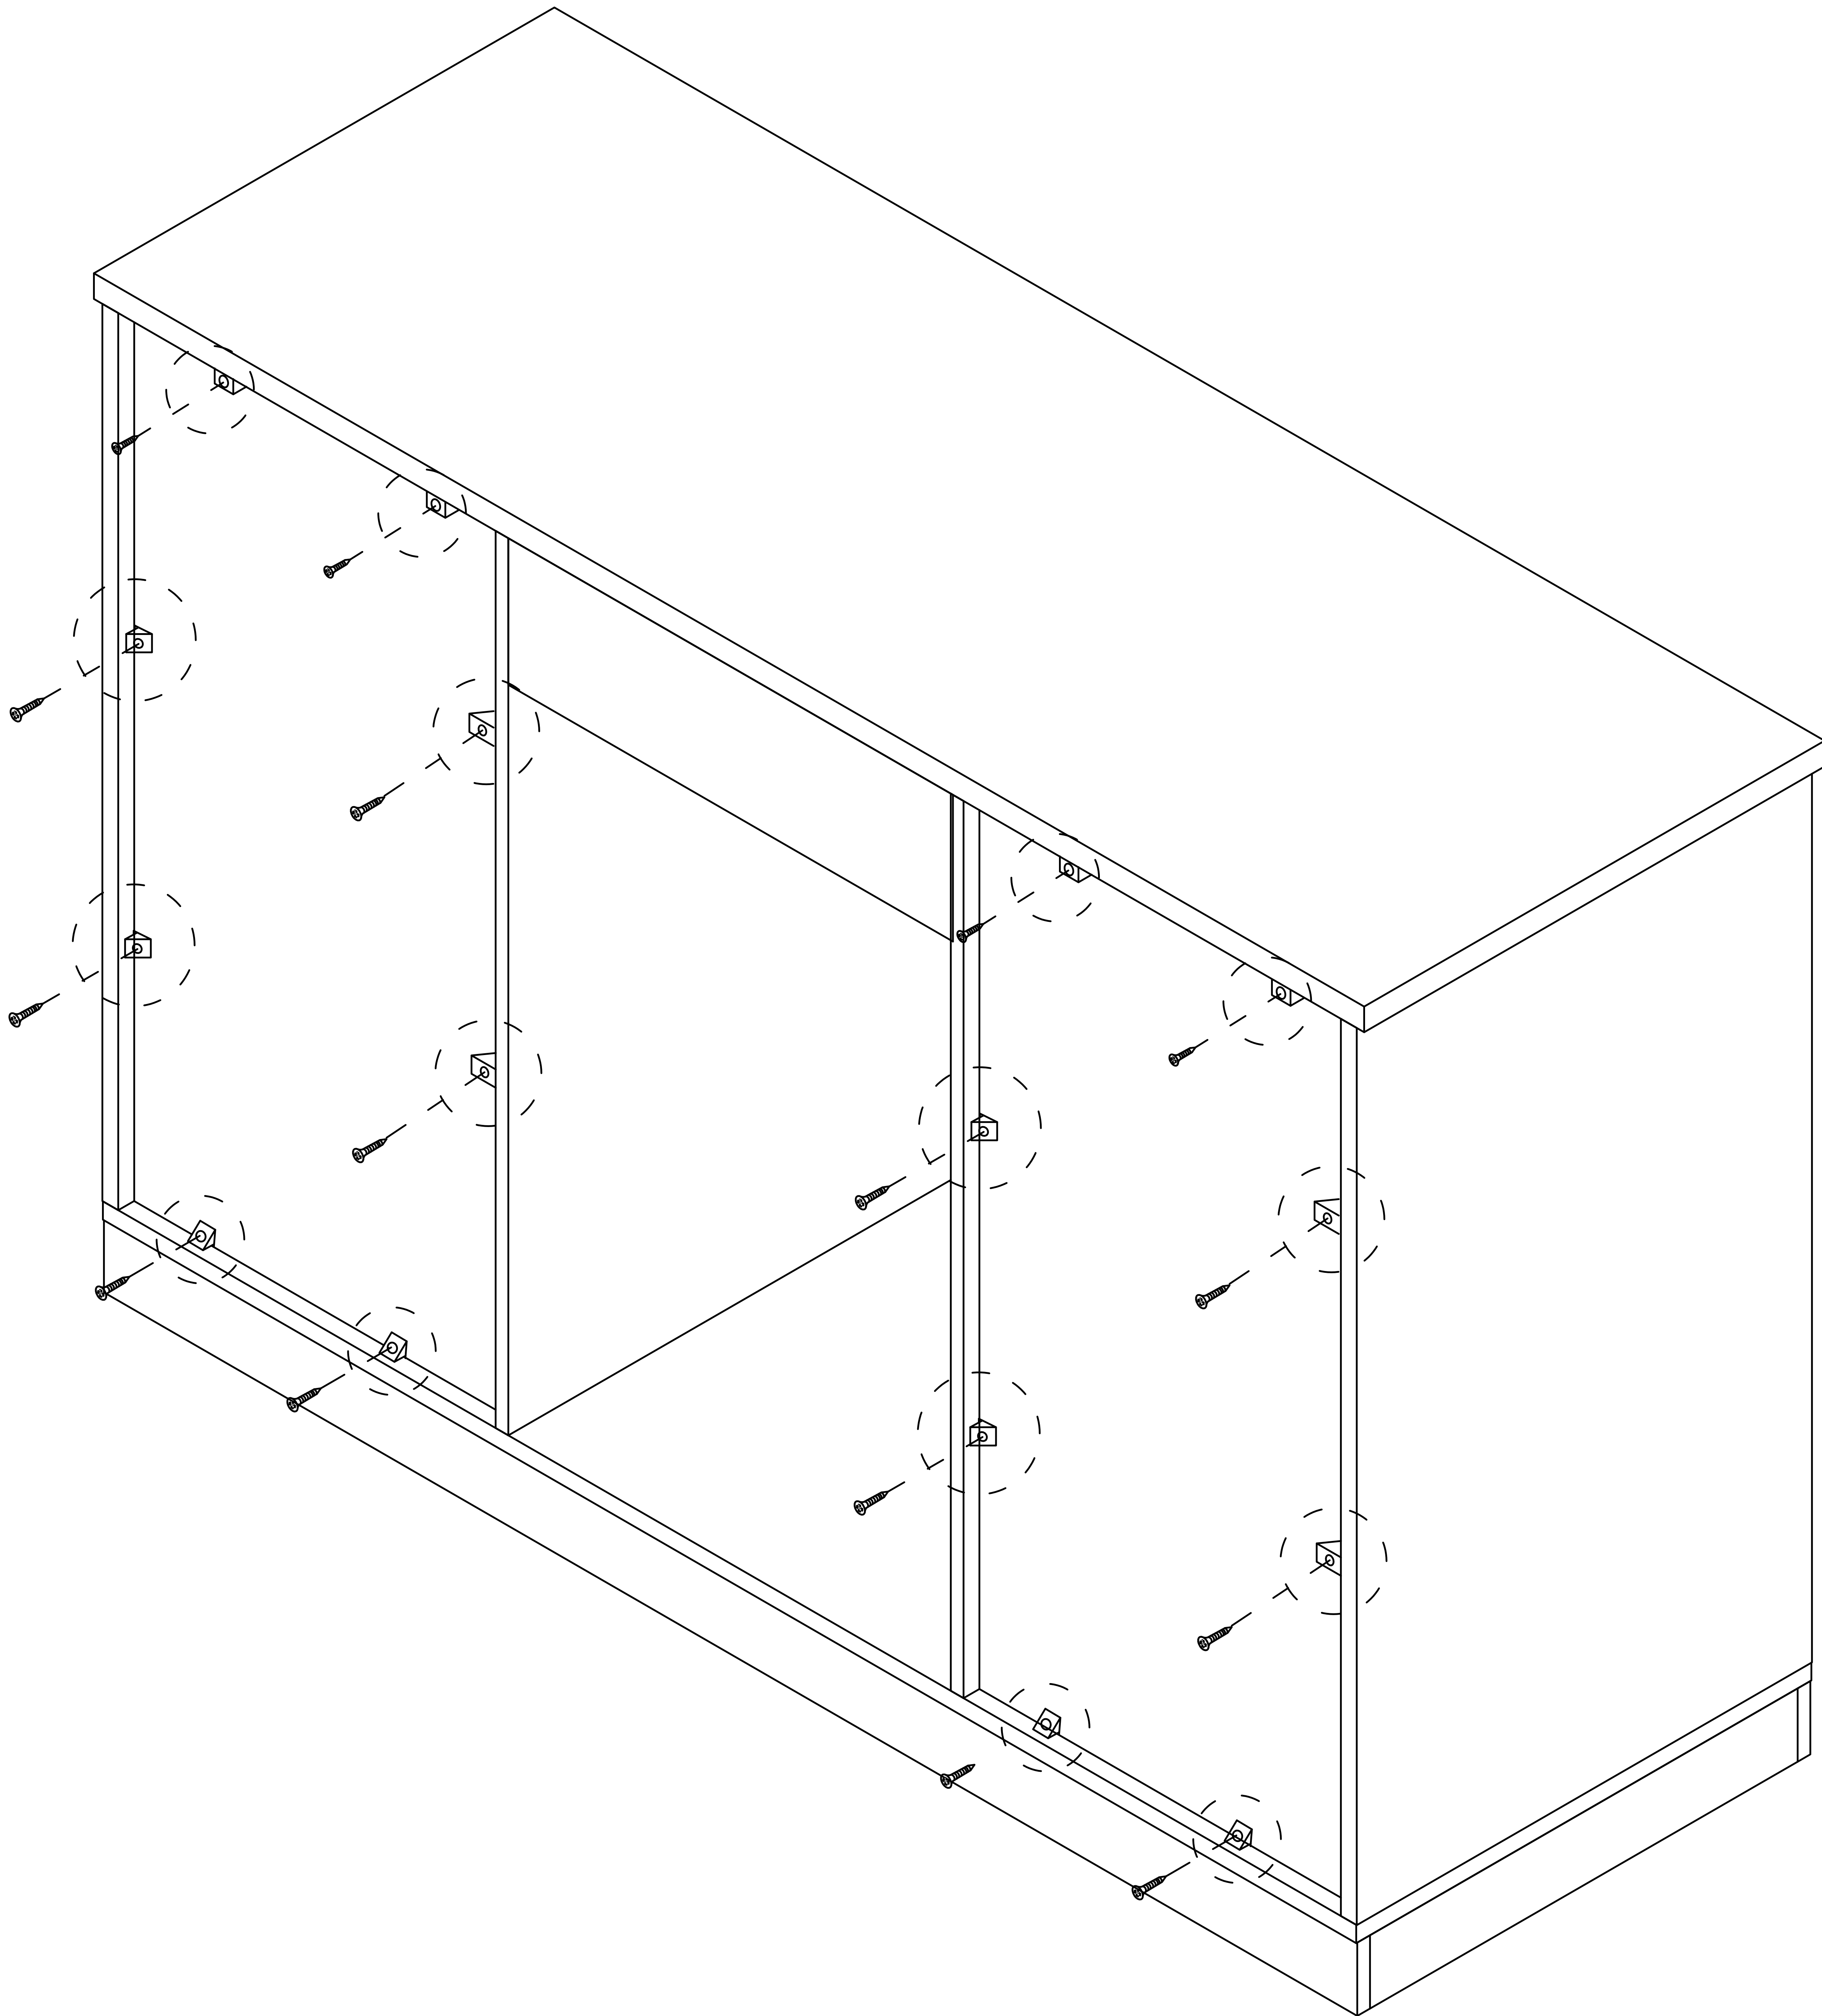


Step 57


11

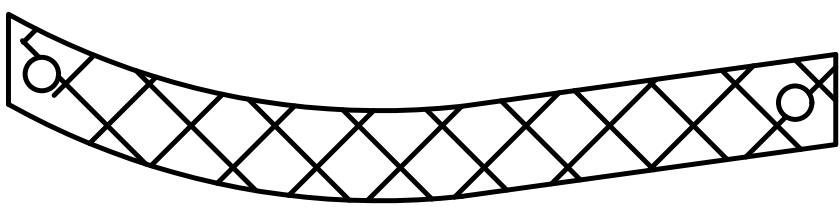


1 pcs

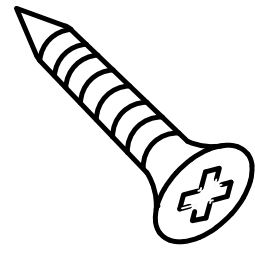

1 pcs


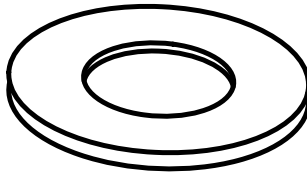


1 pcs

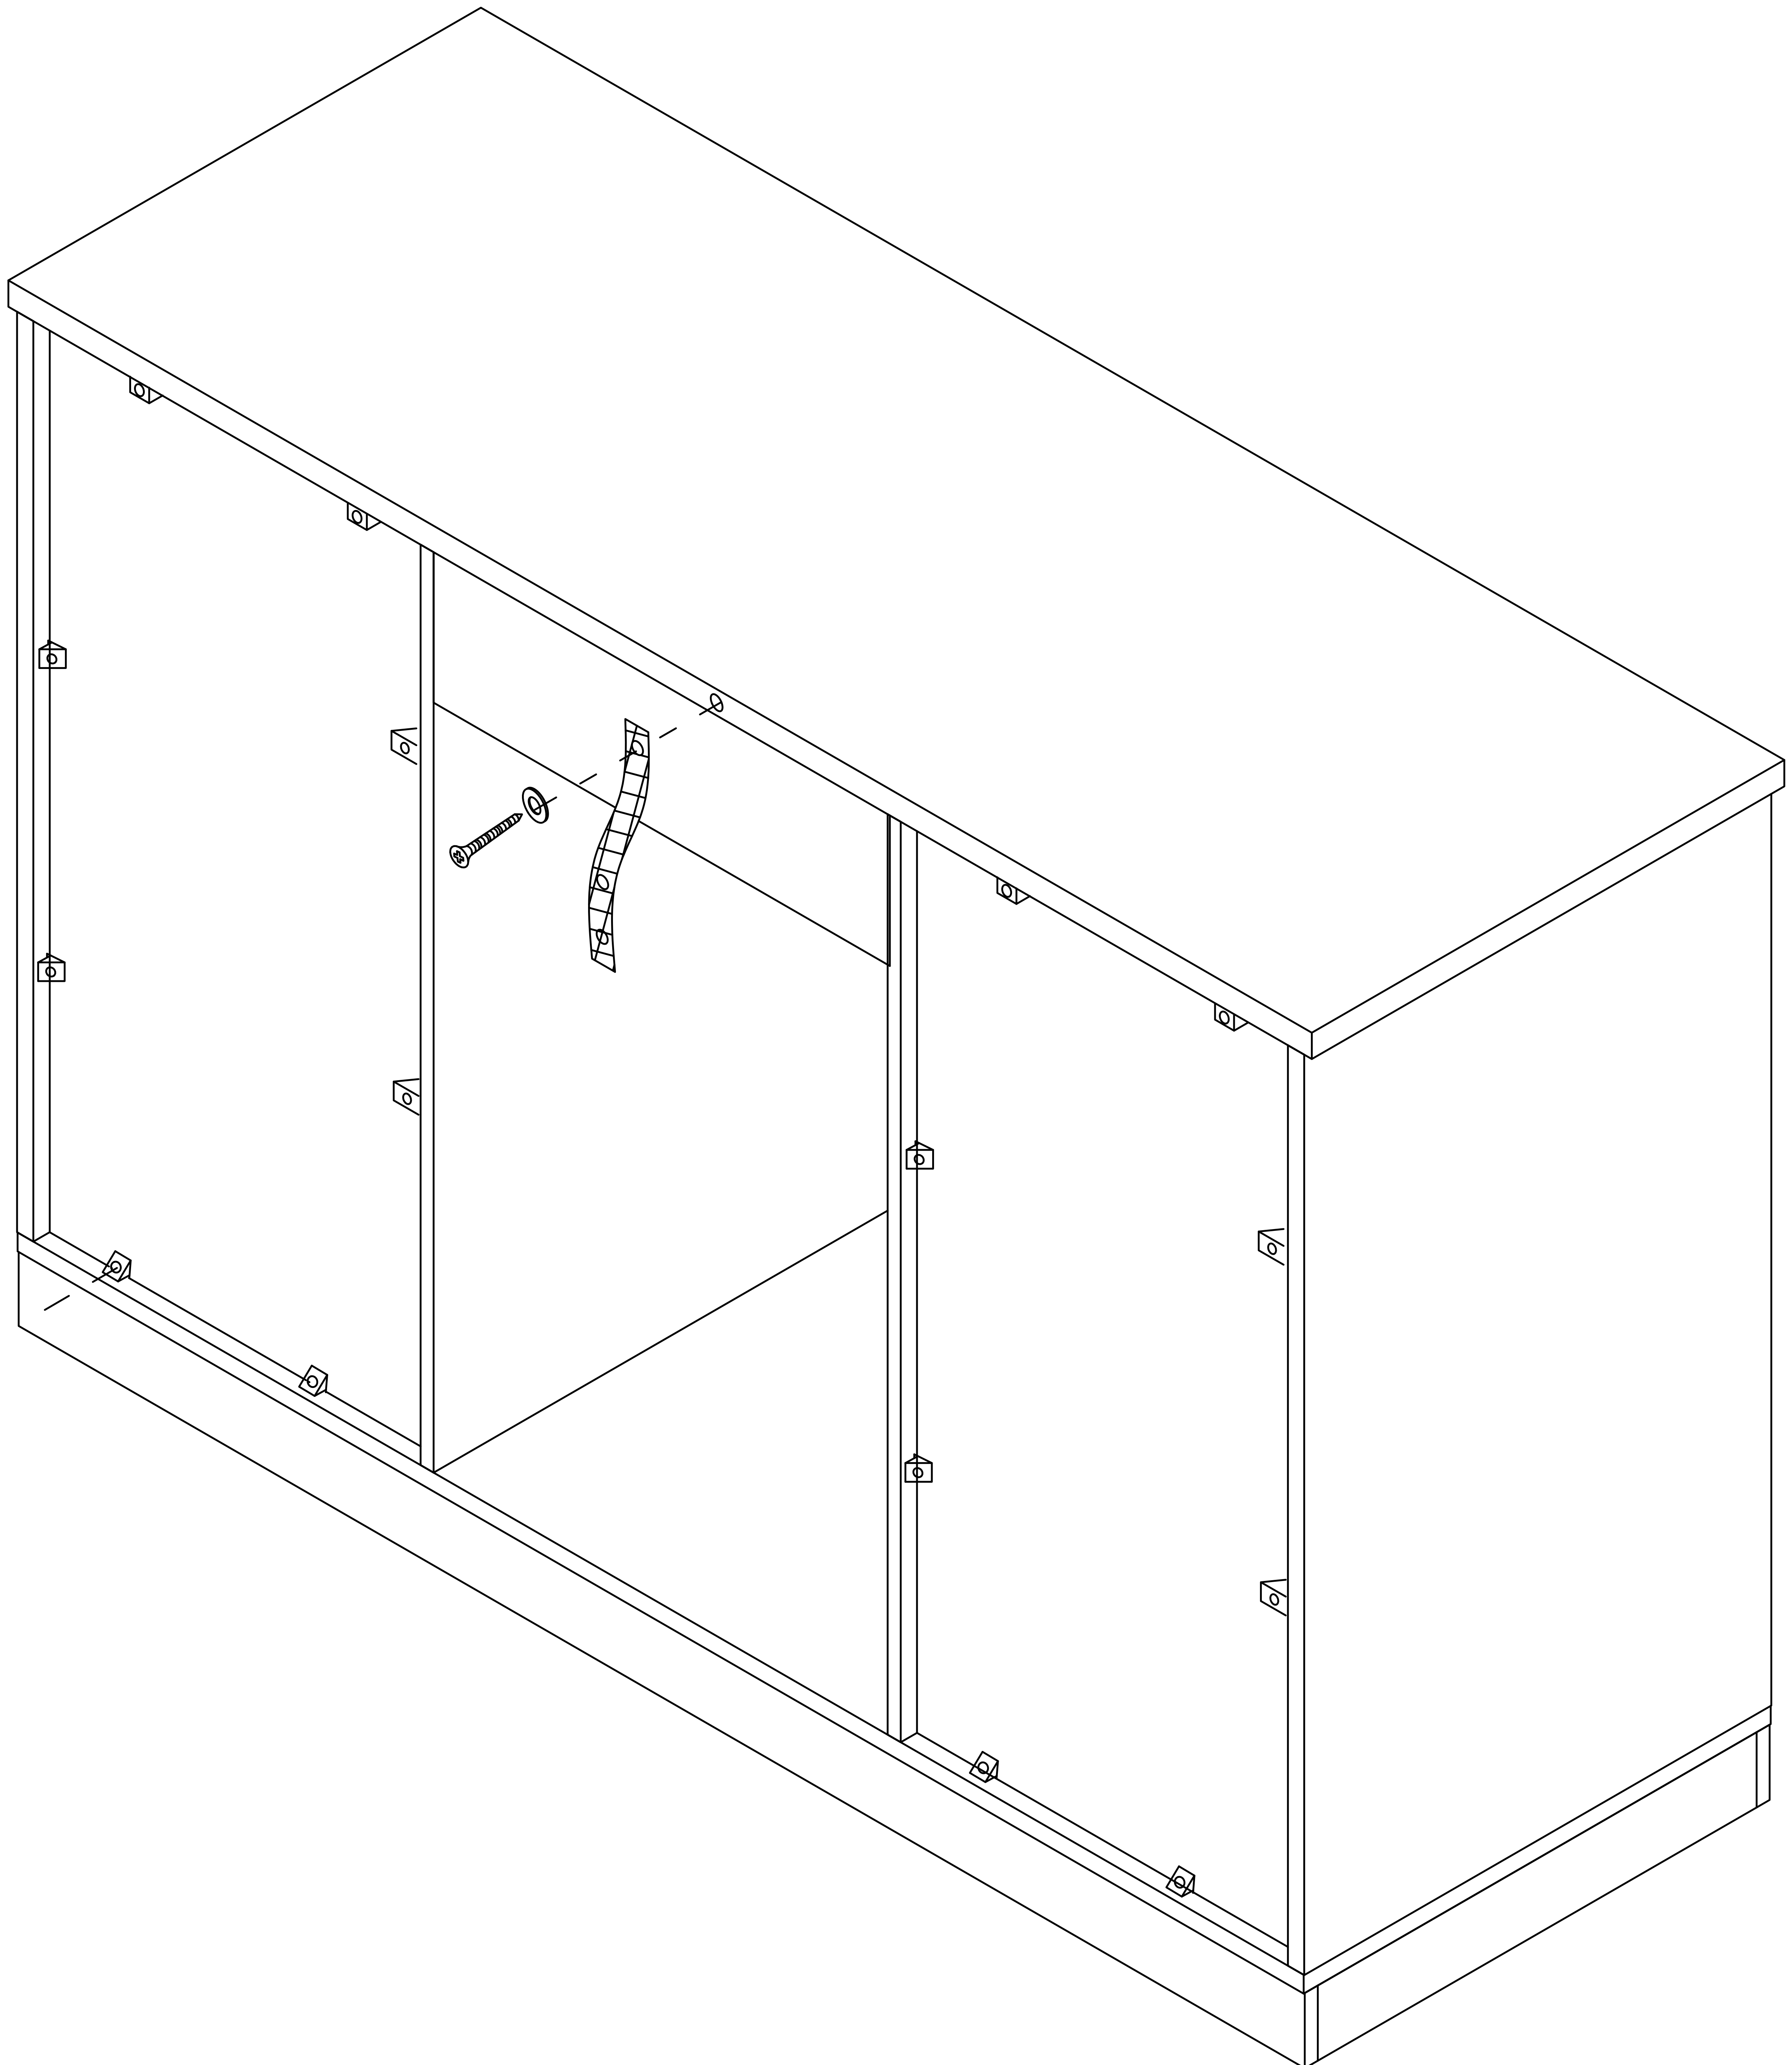

Step 58

use a ruler to measure the approximate height of the product on the wall, and then mark it with a pencil.

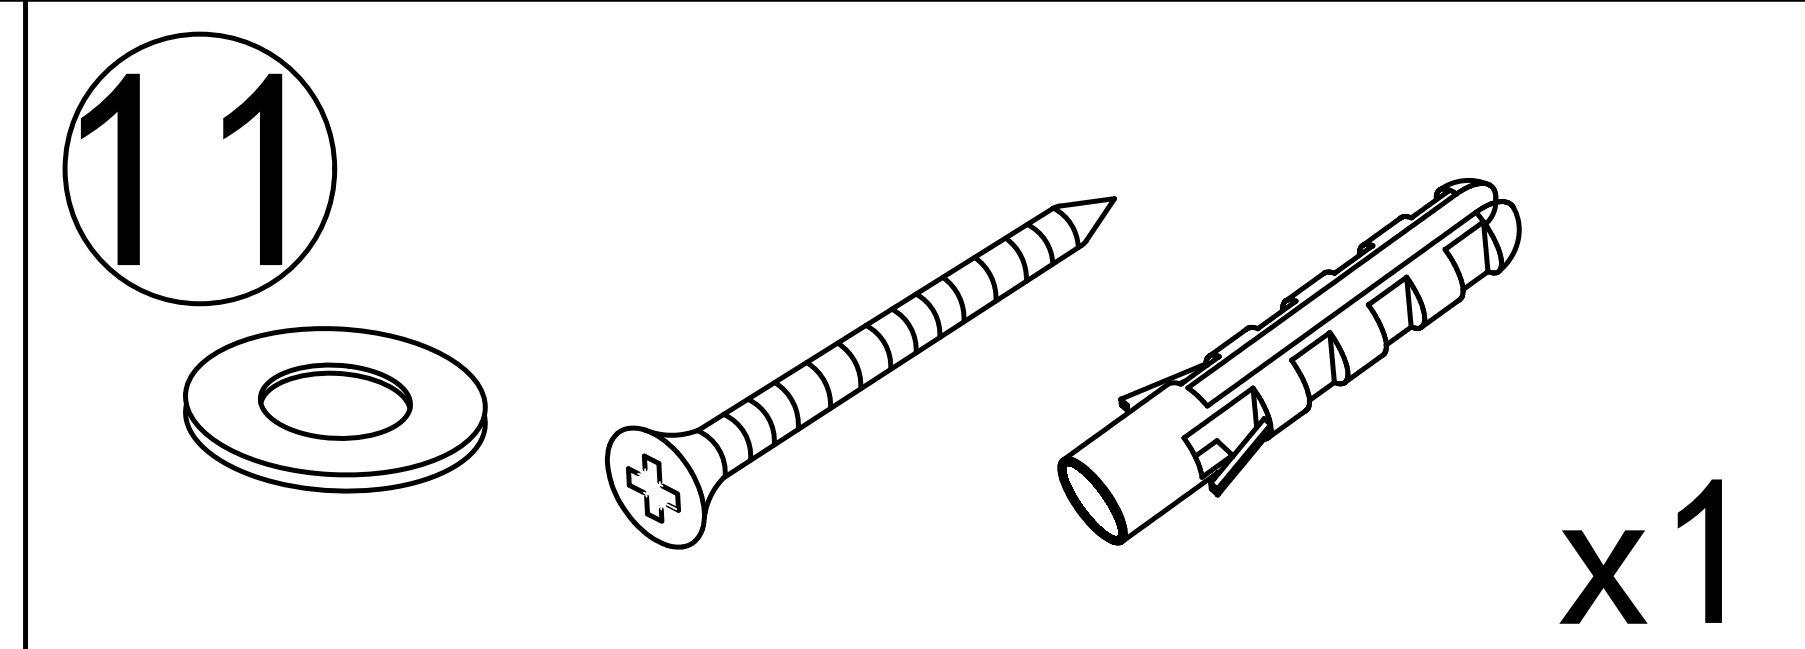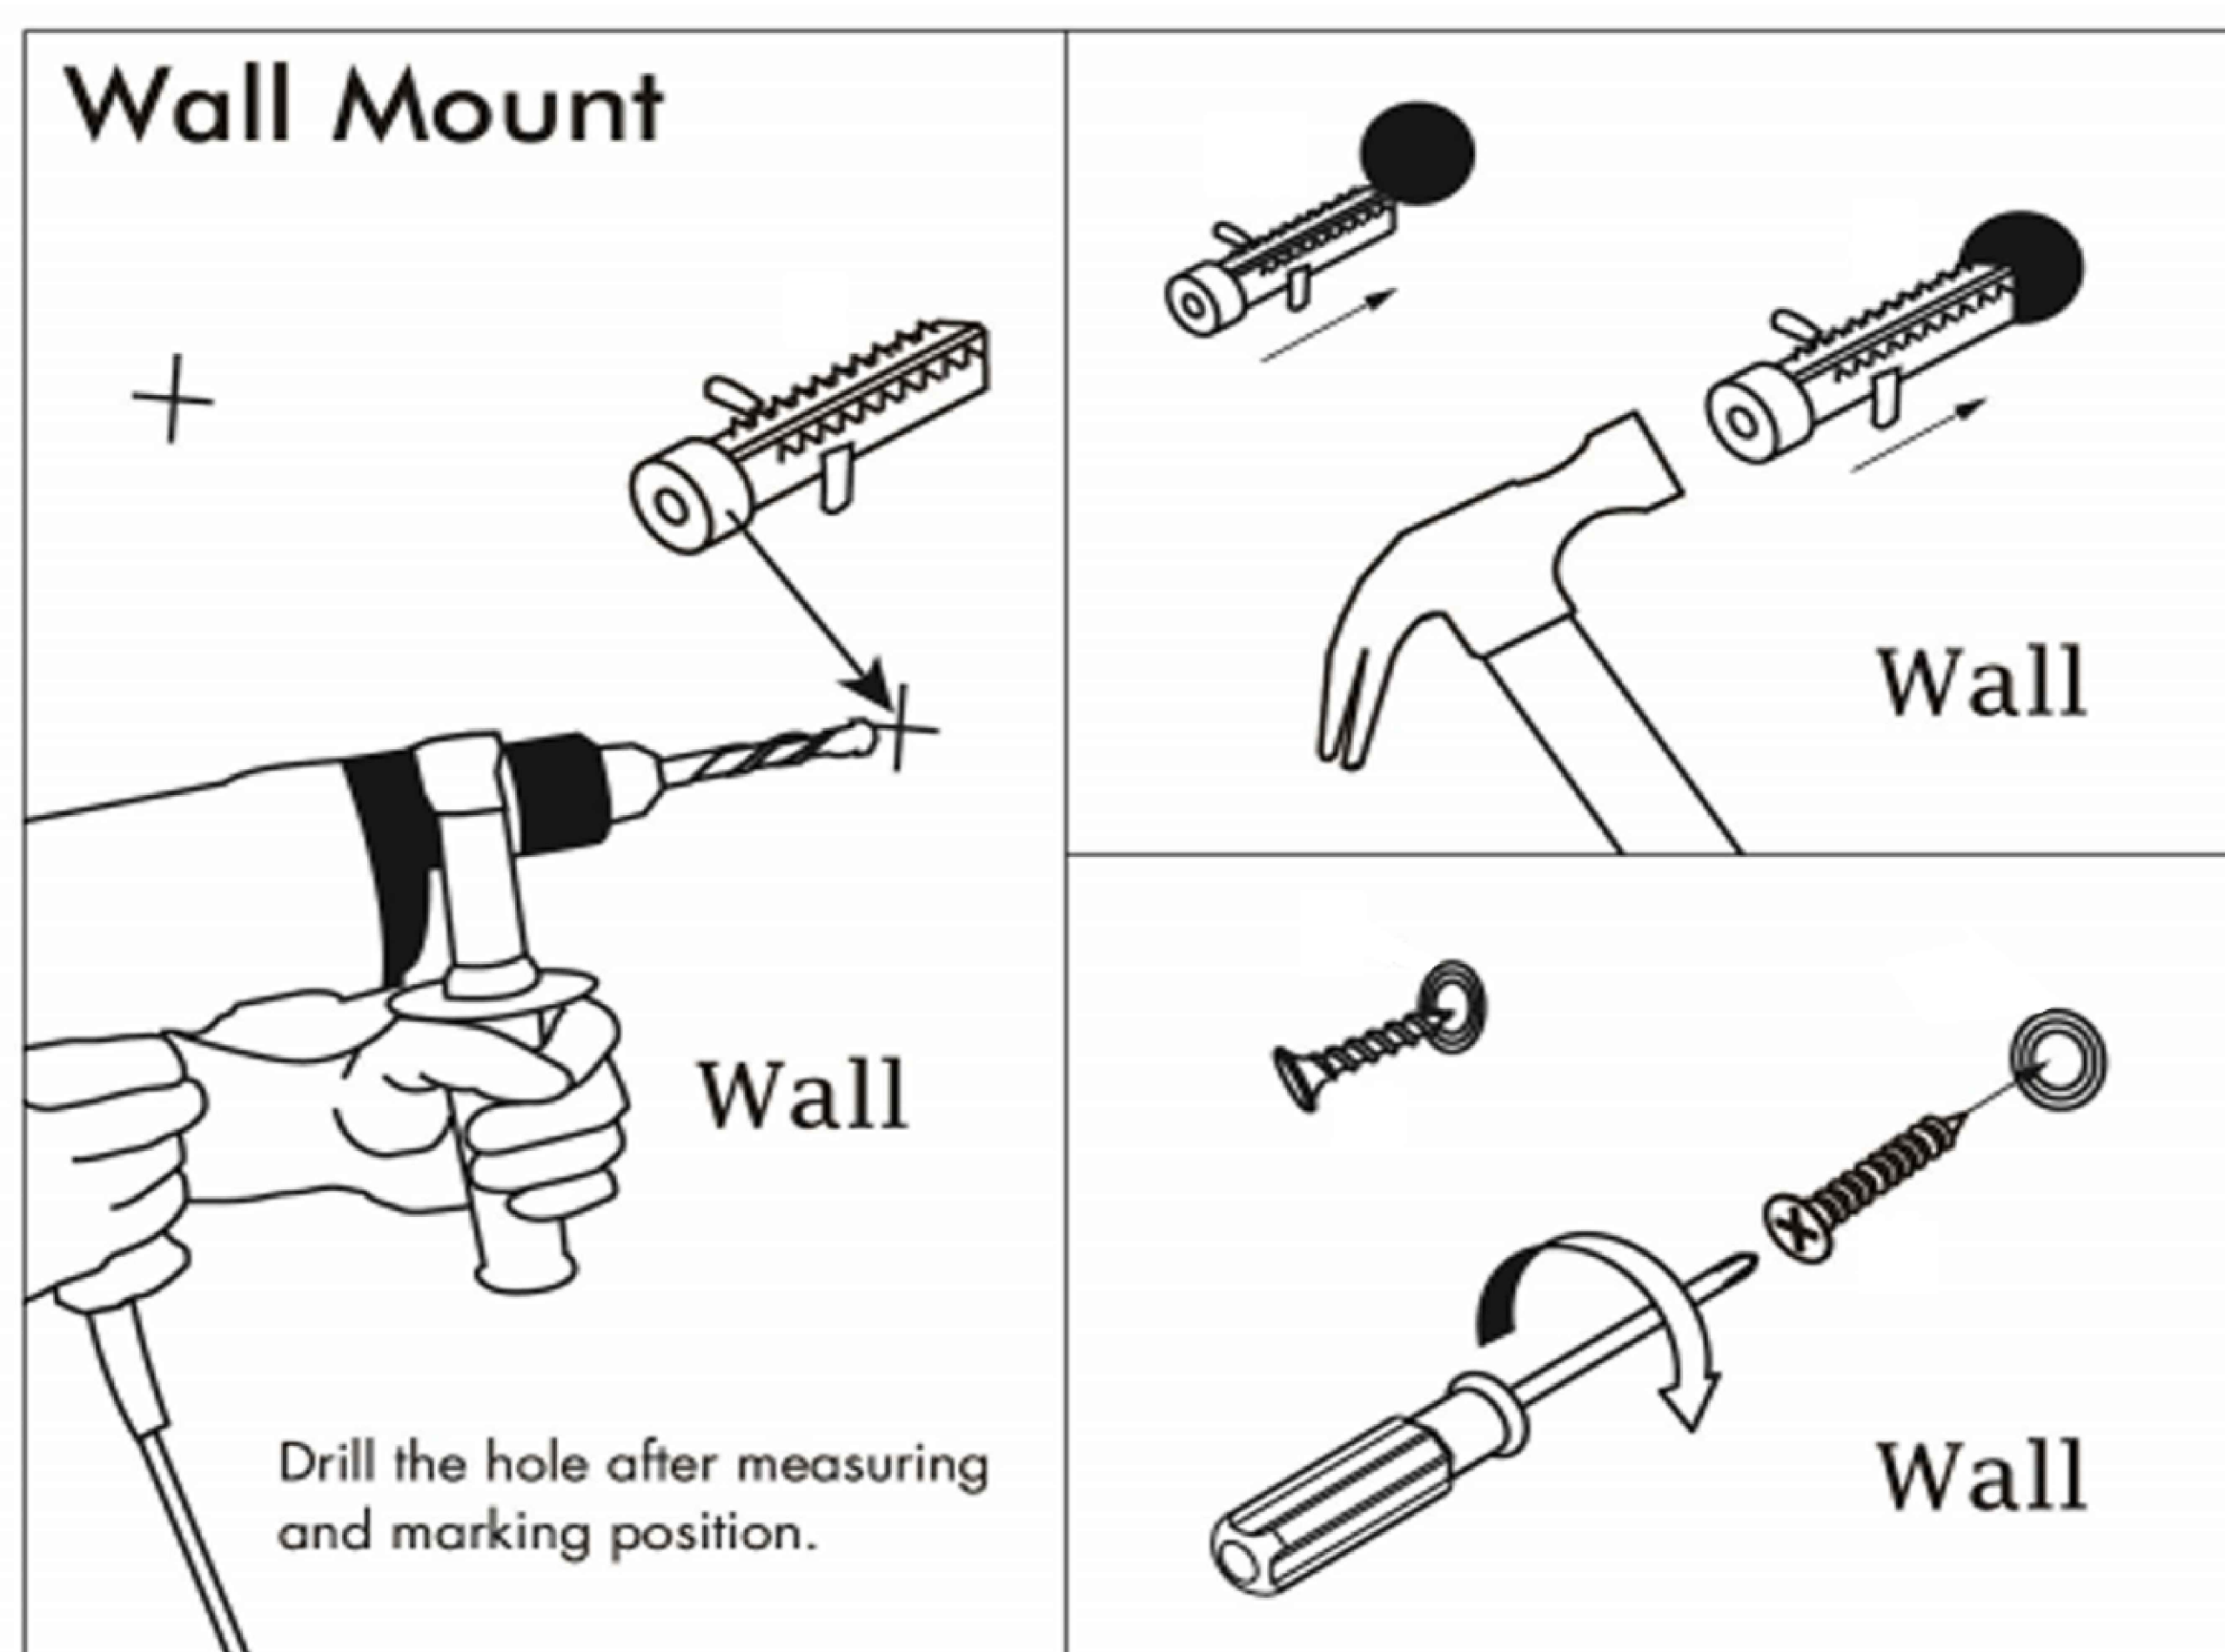

Put the expansion bolt into the hole.

Pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

Use a tape drill to make holes in the wall that are suitable for the product screws.

