



ASSEMBLY INSTRUCTION

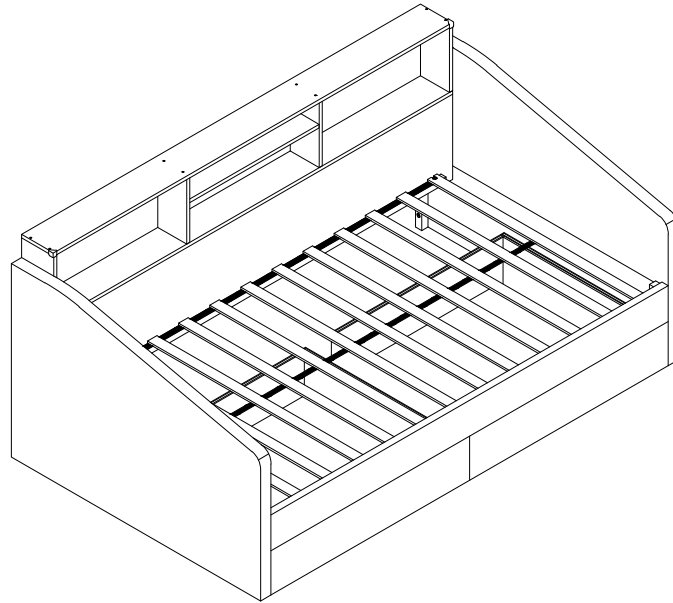


ITEM NUMBER:176

IMPORTANT NOTE



- 1. The bed comes in two packages. Please carefully check the box quantity, When you receive the package. if you receive missing or the same two packages, please contact WAYFAIR customer service or our email:**
2. FOR THE PROTECTION OF YOUR FURNITURE, PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE TO PREVENT ANY DAMAGE.
3. DO NOT USE POWER TOOLS TO ASSEMBLE THE BED.
4. PLEASE PERIODICALLY CHECK ALL FITTINGS AND RE-TIGHTEN AS NECESSARY.
5. DO NOT USE THE BED UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.
6. NEED PARTS OR ASSISTANCE? EMAIL US AT
7. YOU CAN ASSEMBLE IT WITH OUR PACKAGING TOOLS OR WITH A.

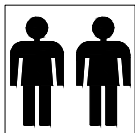

Minimum two
person assembly

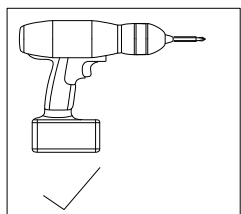


PART LIST

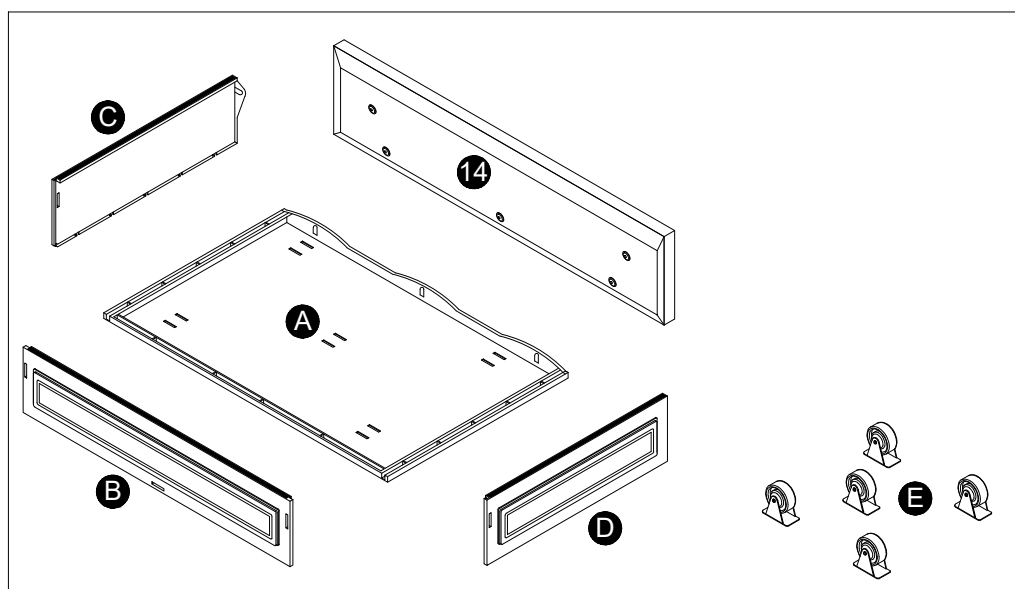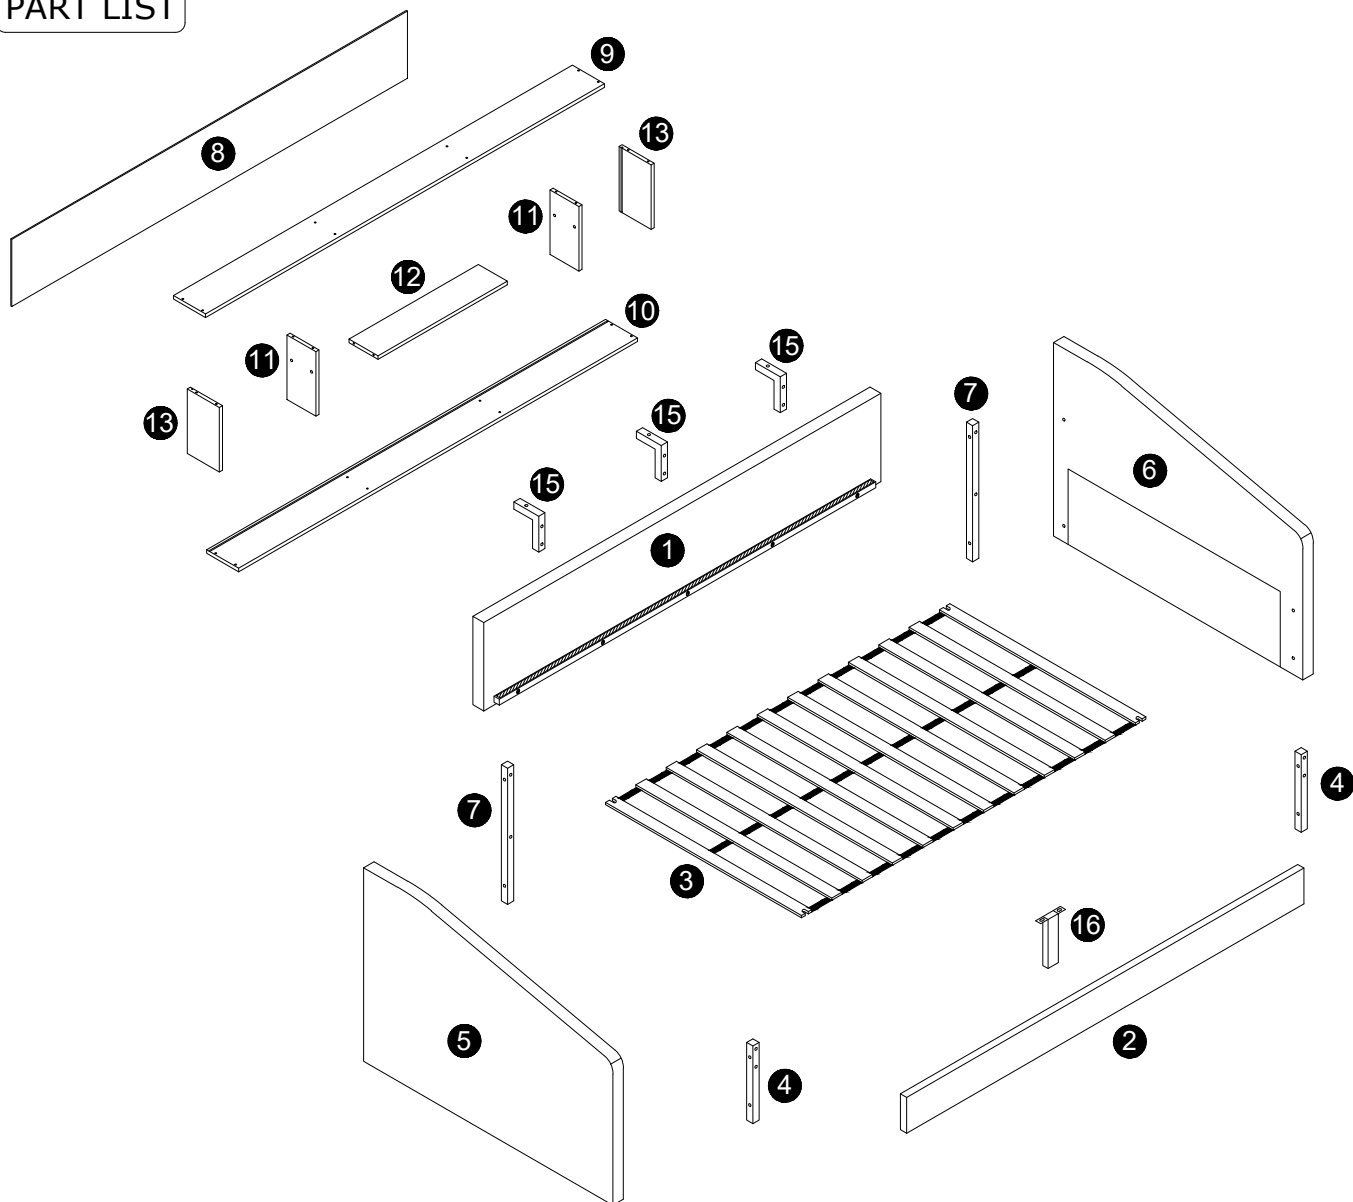


x2

PART LIST


1 x 1pc

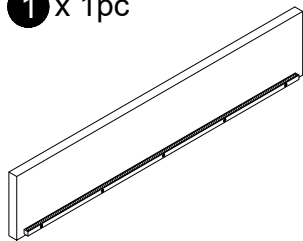

2 x 1pc

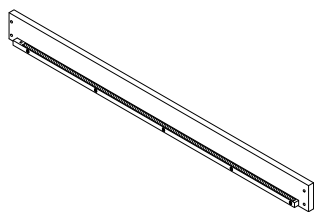


3 x 1pc

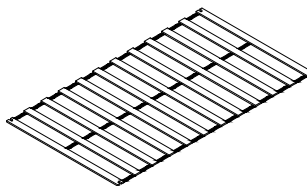


4 x 2pcs



5 x 1pc

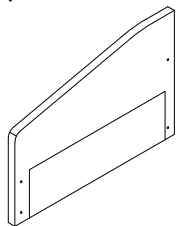


6 x 1pc

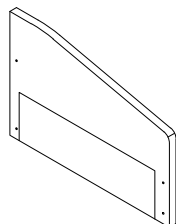


7 x 2pcs




8 x 1pc

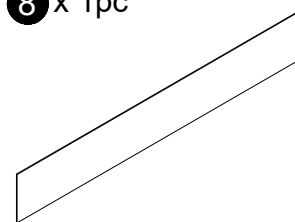

9 x 1pc

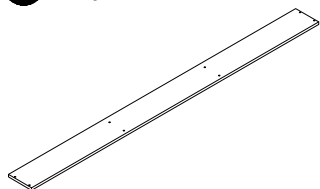


10 x 1pc

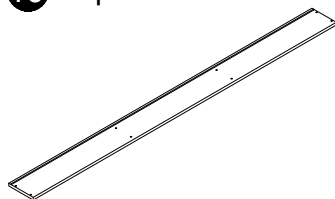


11 x 2pcs




12 x 1pc

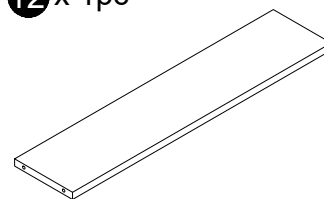


13 x 2pcs




14 x 2pcs

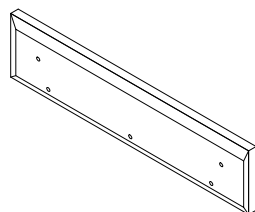


15 x 3pcs




16 x 1pc




A x 2pcs

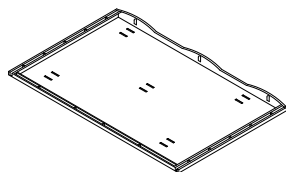


B x 2pcs

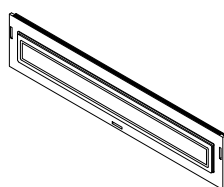

C x 2pcs

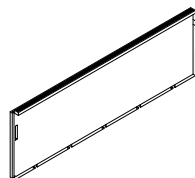

D x 2pcs

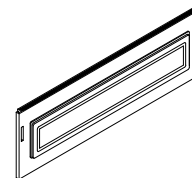

E x 10pcs




HARDWARE LIST



H1 M5 x 1pc



H2 M4 x 1pc



H3 M8x20mm x 2pcs



H4 M8x55mm x 22pcs




H5 M8 x 26pcs



H6 x 2pcs



H7 M8x22mm x 26pcs



H8 M6x45mm x 20pcs



H9 x 6pcs



H10 M6x45mm x 3pcs



H11 M6 x 3pcs



H12 M6 x 3pcs





H13 M6x15mm x 10pcs





H14 M8x40mm x 4pcs


1

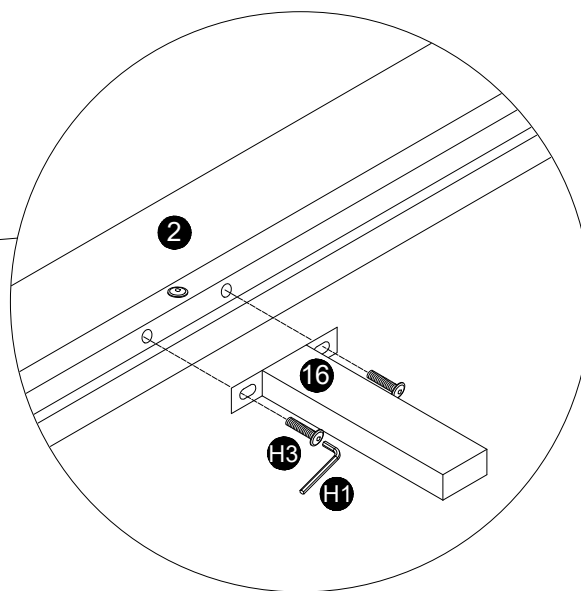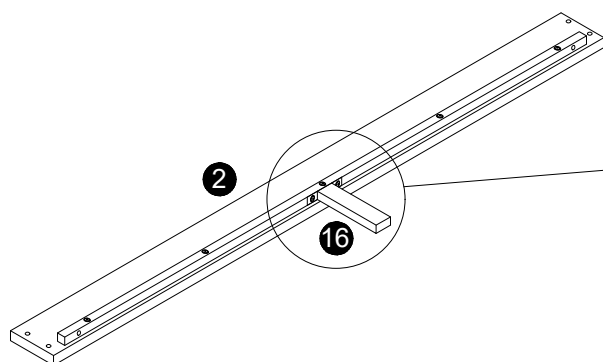


2

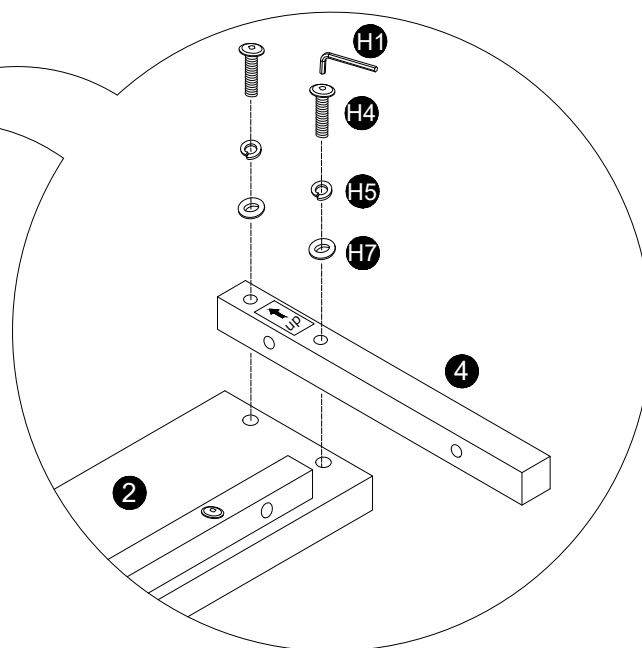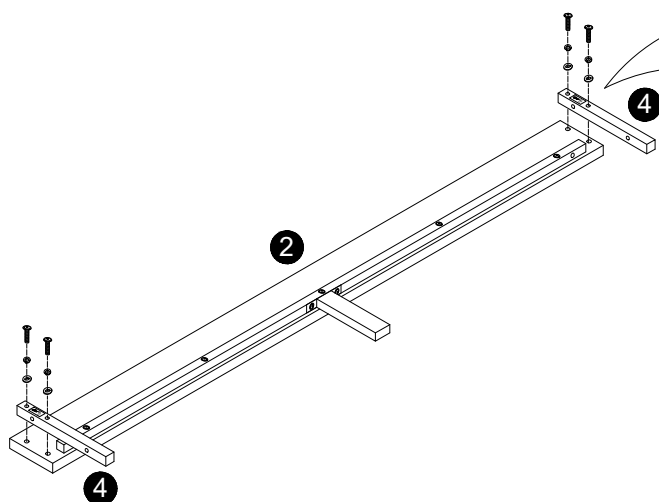


3

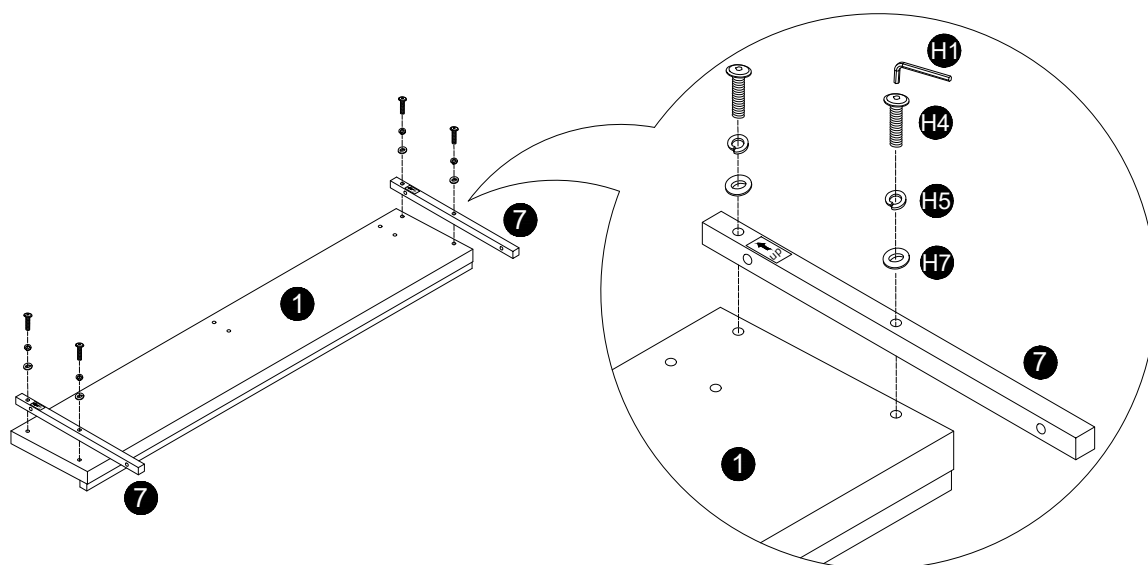


4

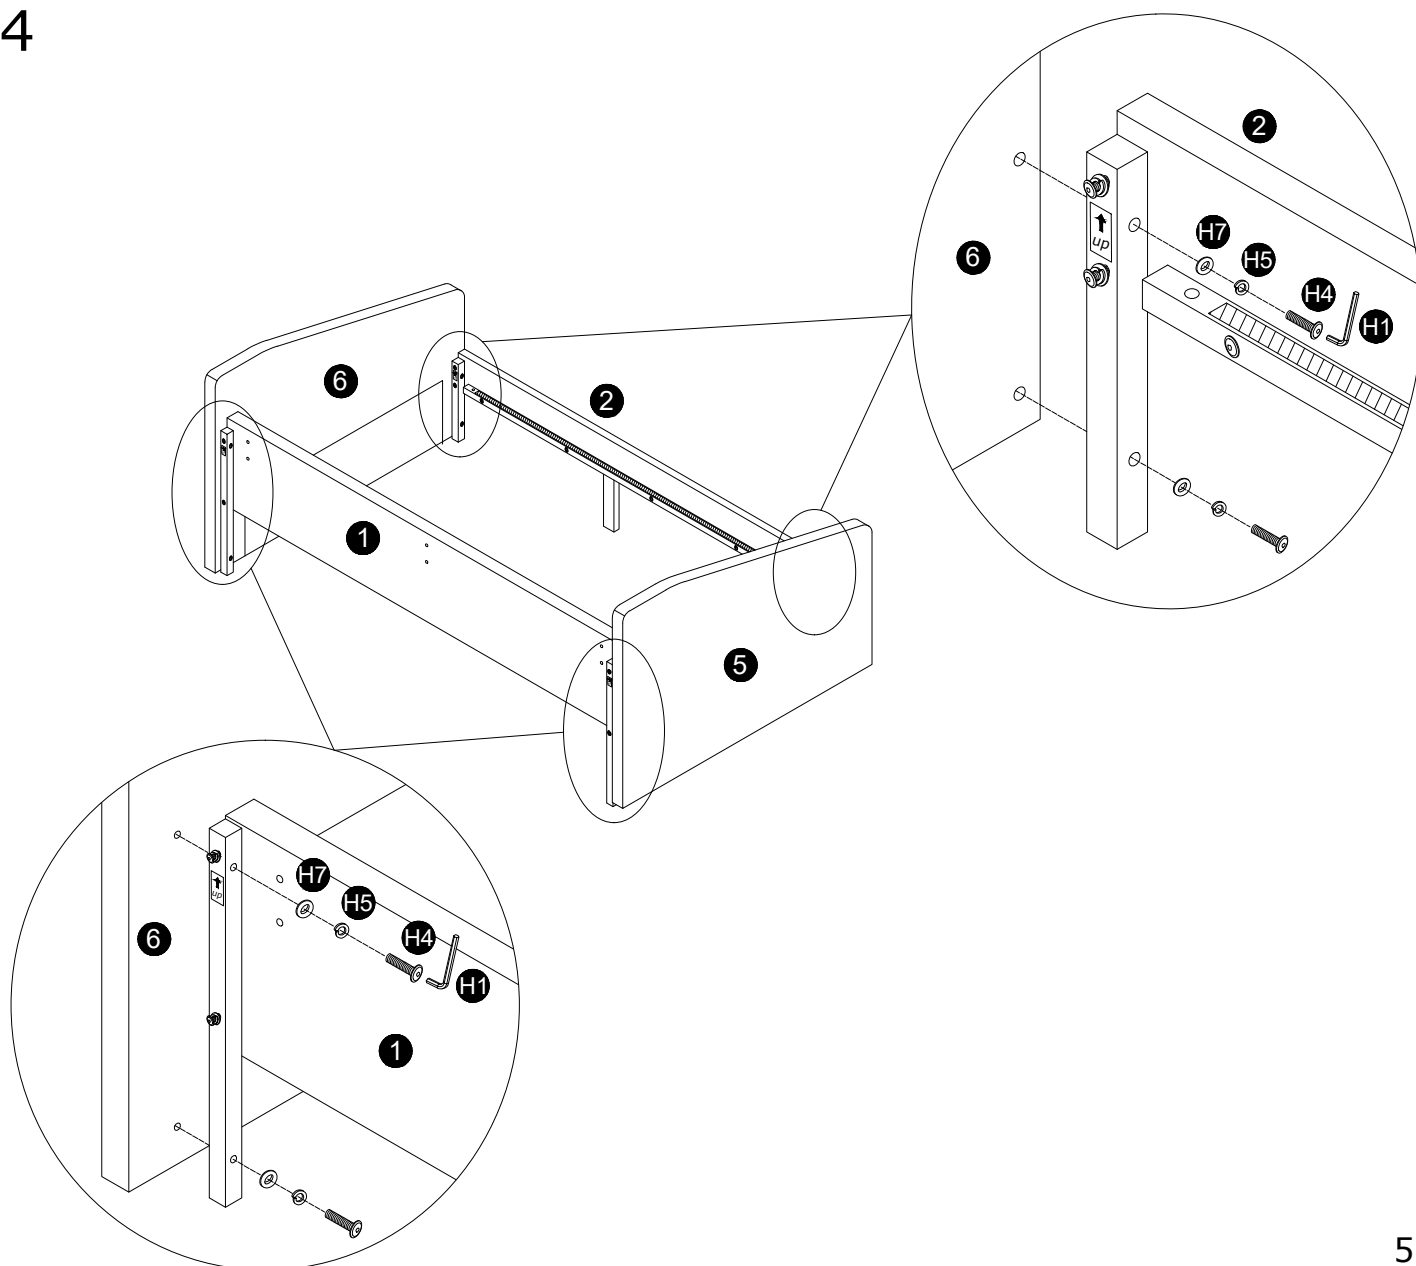


5

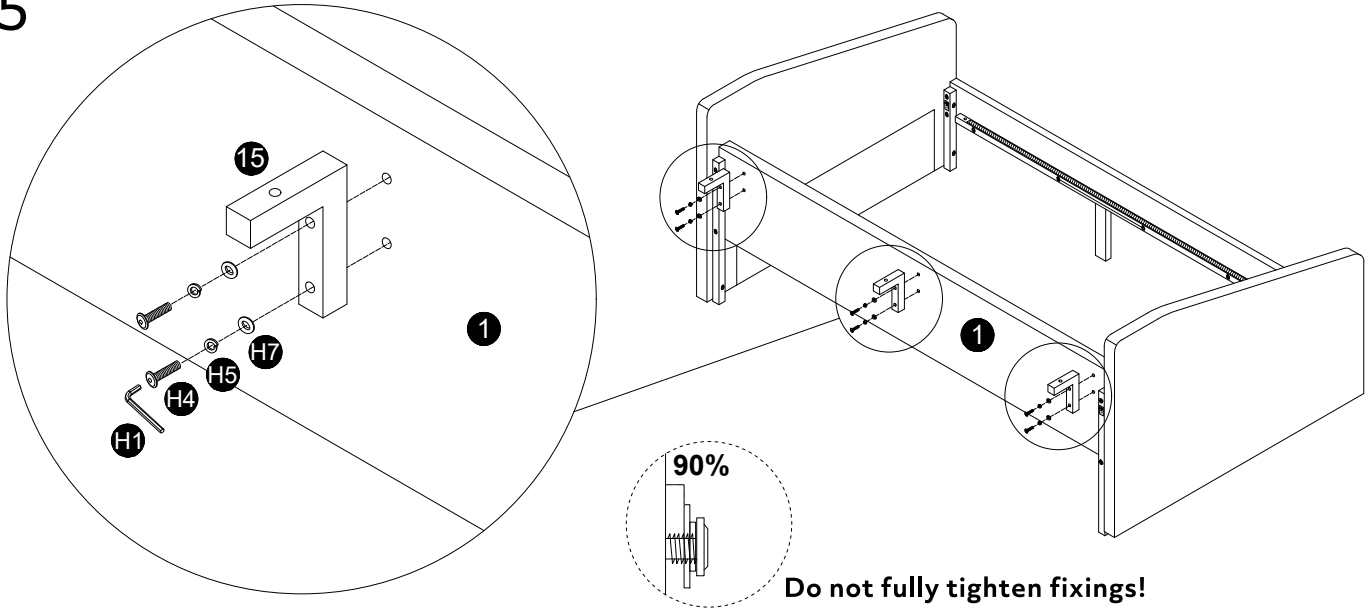


6

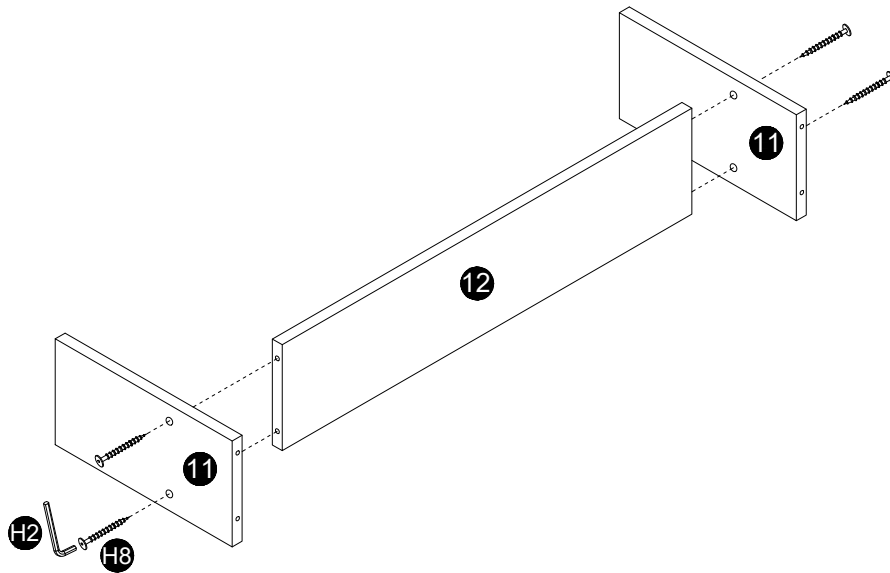


7

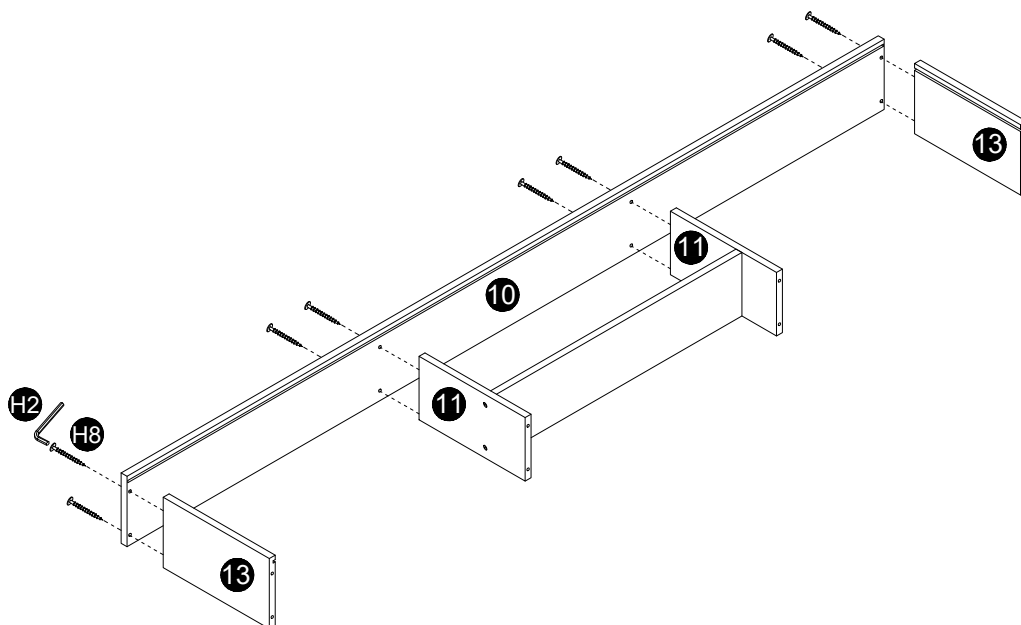


8

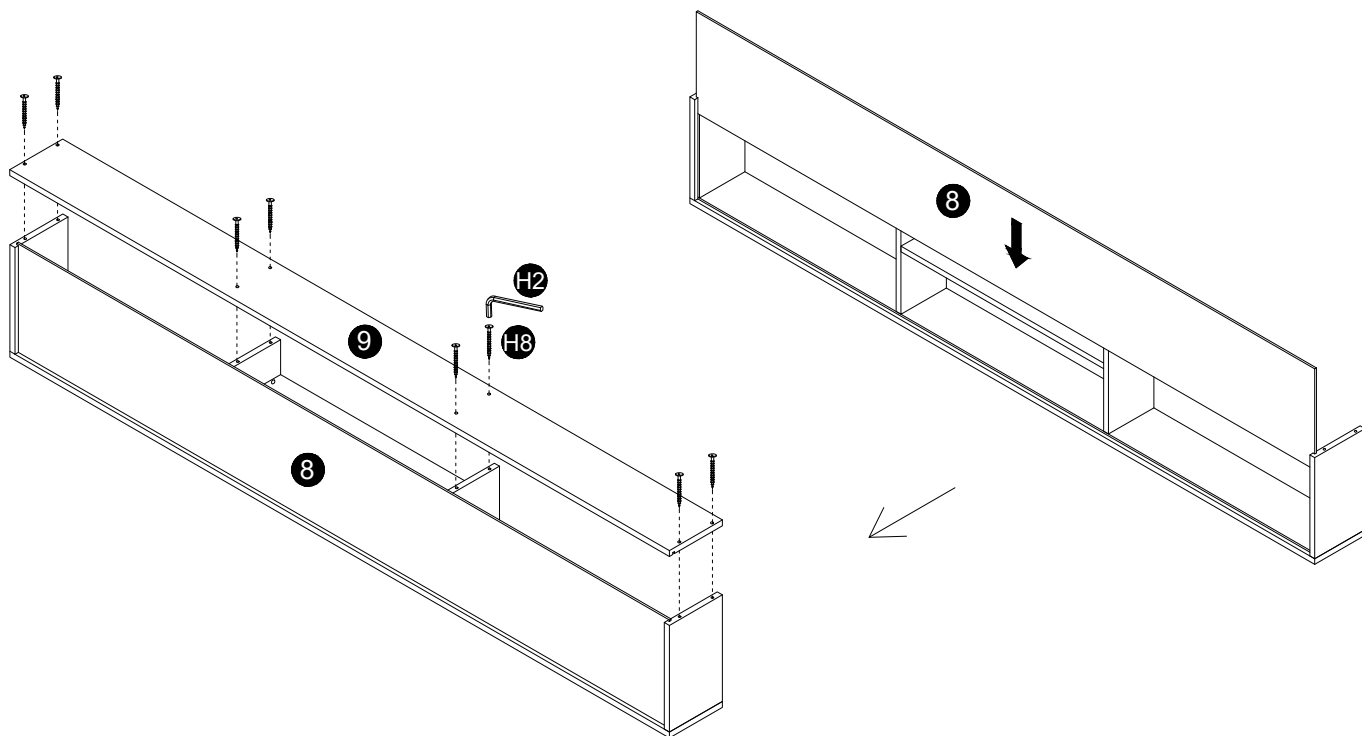




9

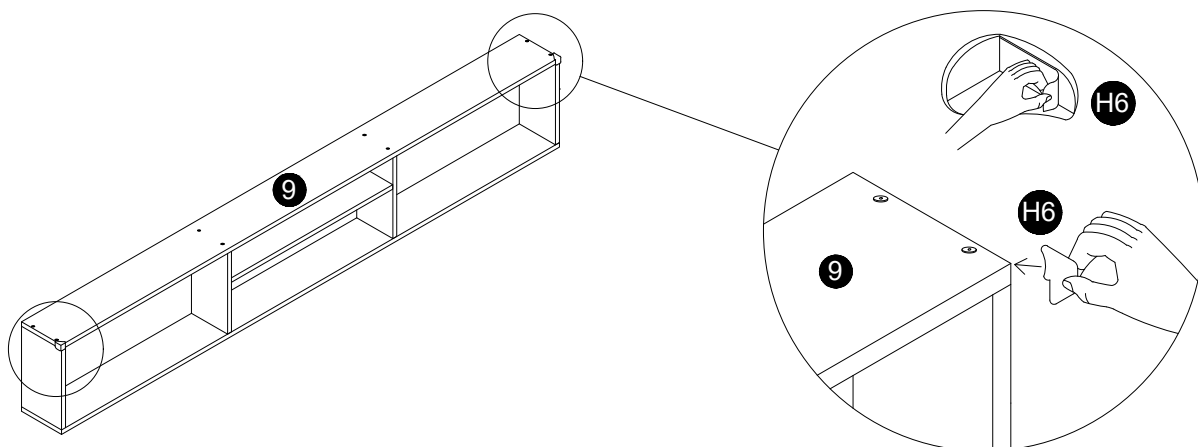

10

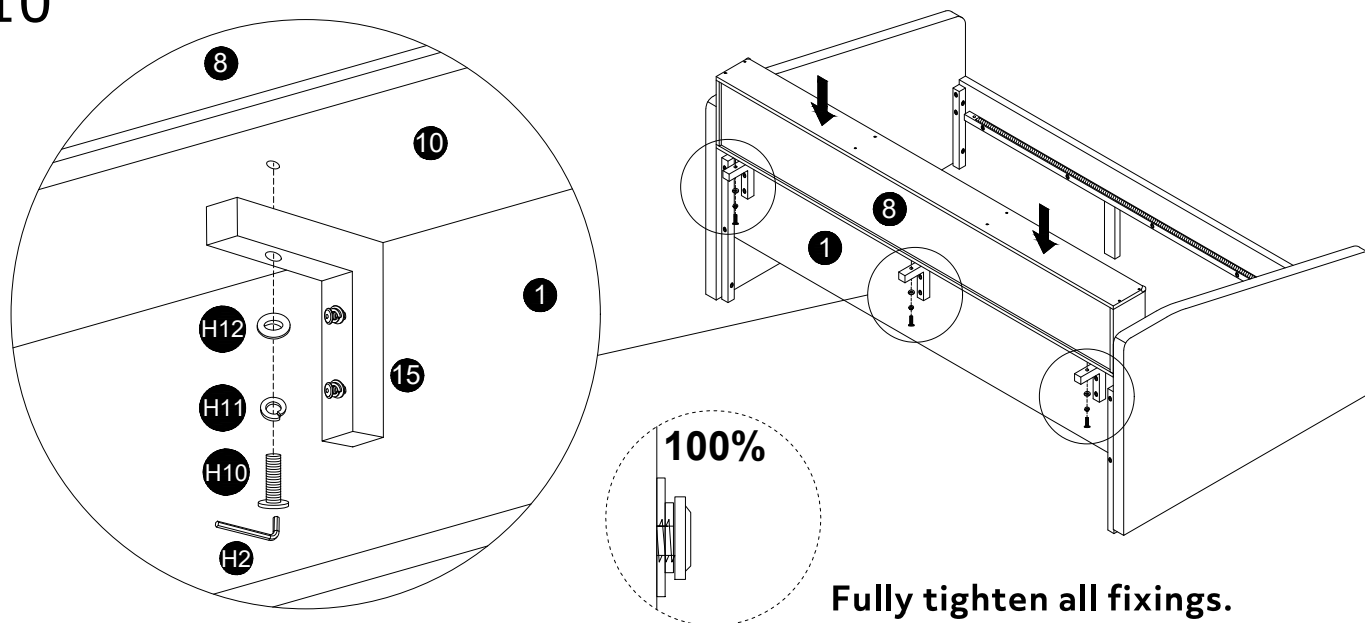



11

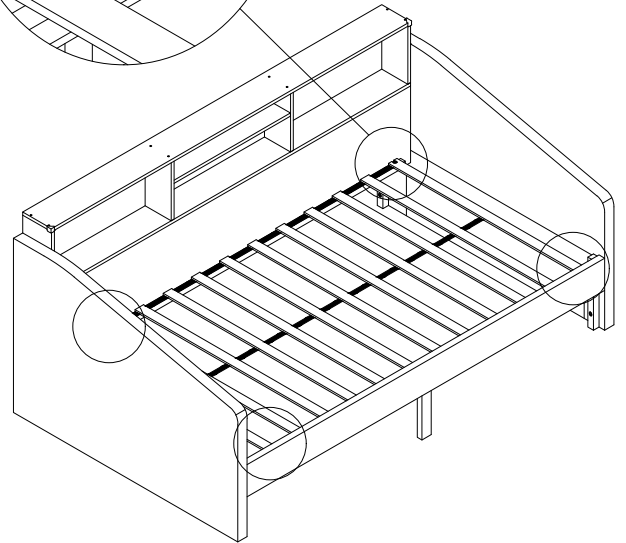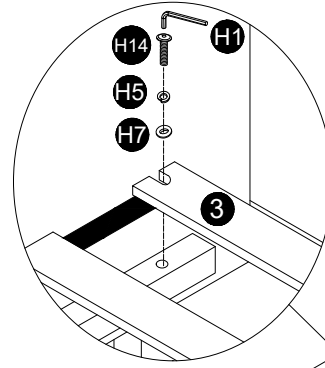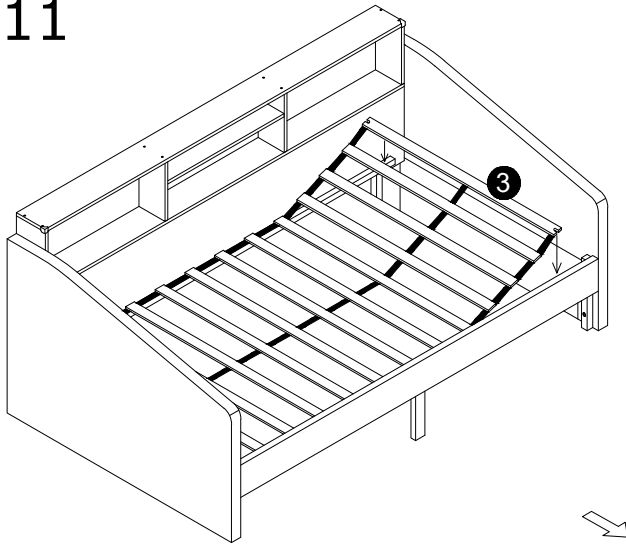

12


x2

Put plastic baseboard (A) flat on the floor, assemble side baffles (C&D), following the assemble picture aligning them inward, ensuring all fit into all slots, and push forcefully until the side panels are flush with the baseboard.

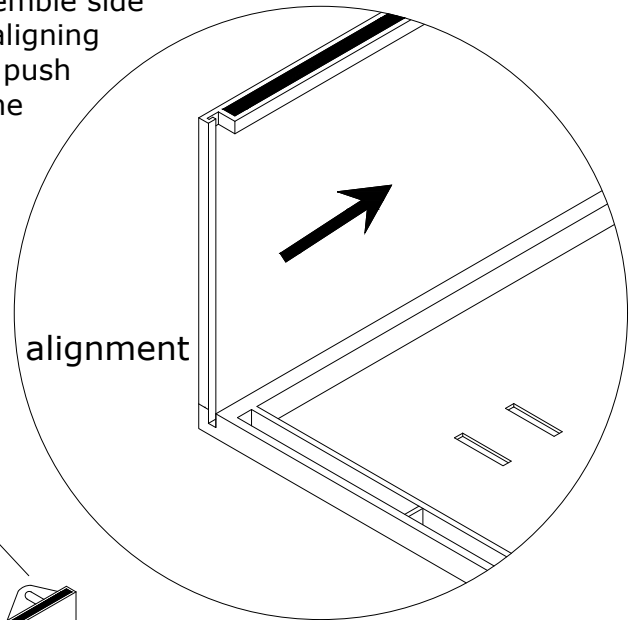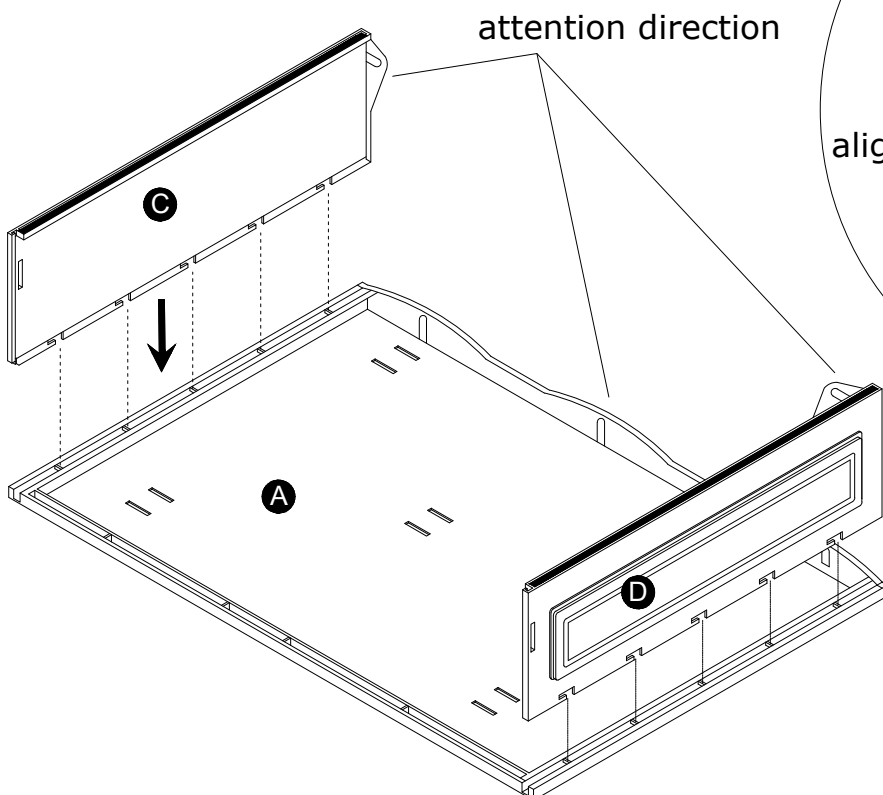

13

x2


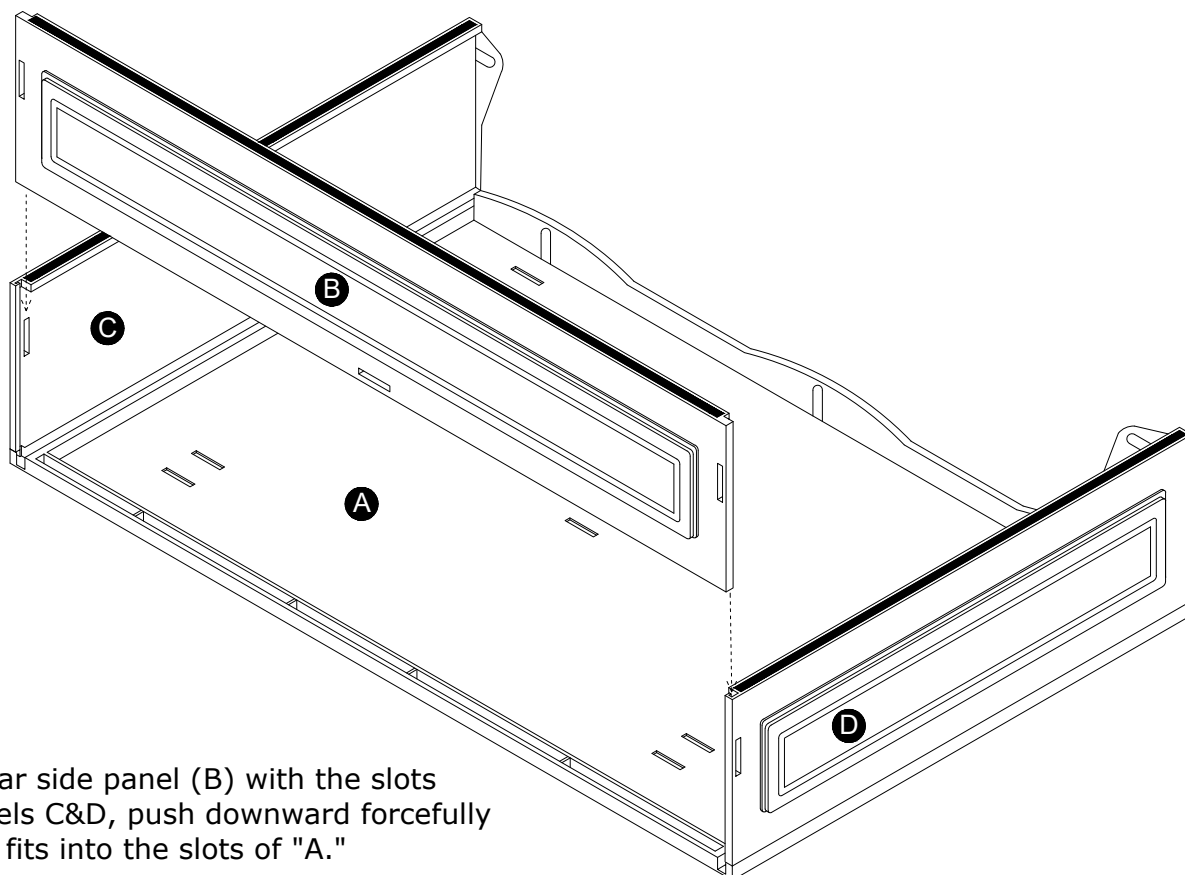


Align the rear side panel (B) with the slots on side panels C&D, push downward forcefully to ensure B fits into the slots of "A."

14

x2


Take clip H9 and secure side panels D&B, B&C, and A&B, ensure the clips fully engage with the slots.

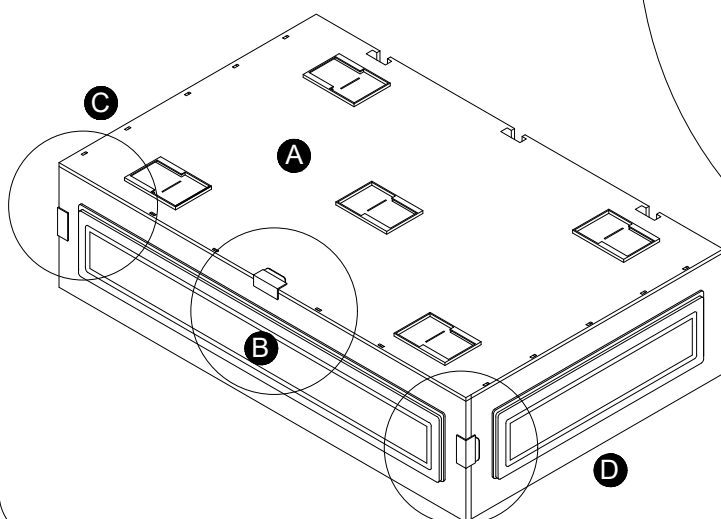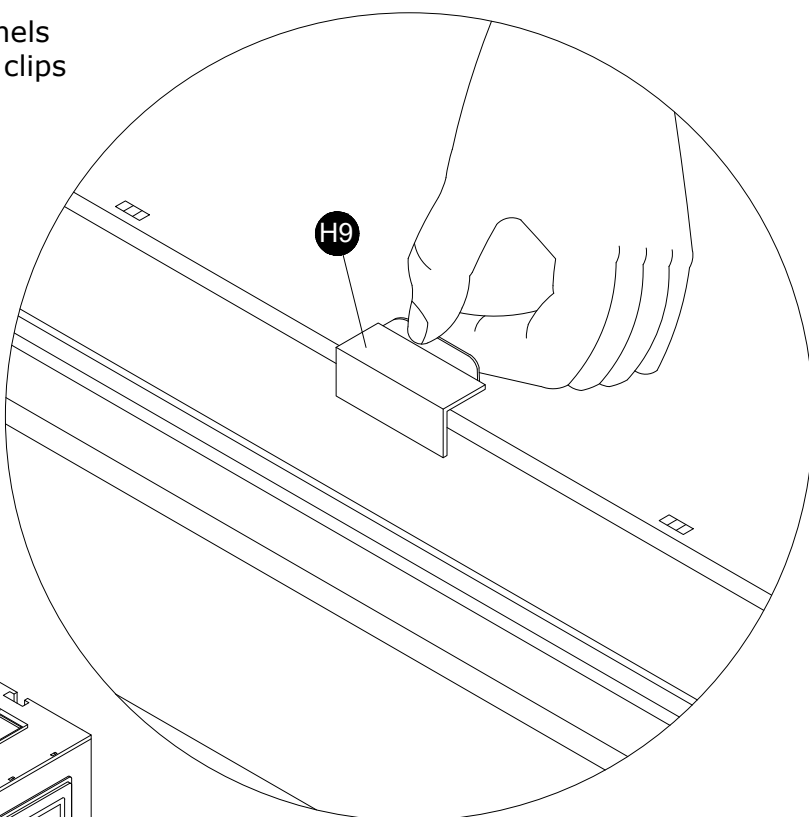

15

x2


Install wheels "E" by forcefully pushing them into the slots; once pushed to the bottom, a protrusion will engage with the metal sheet to prevent them from easily coming off. All five part "E" wheels need to be installed correctly.

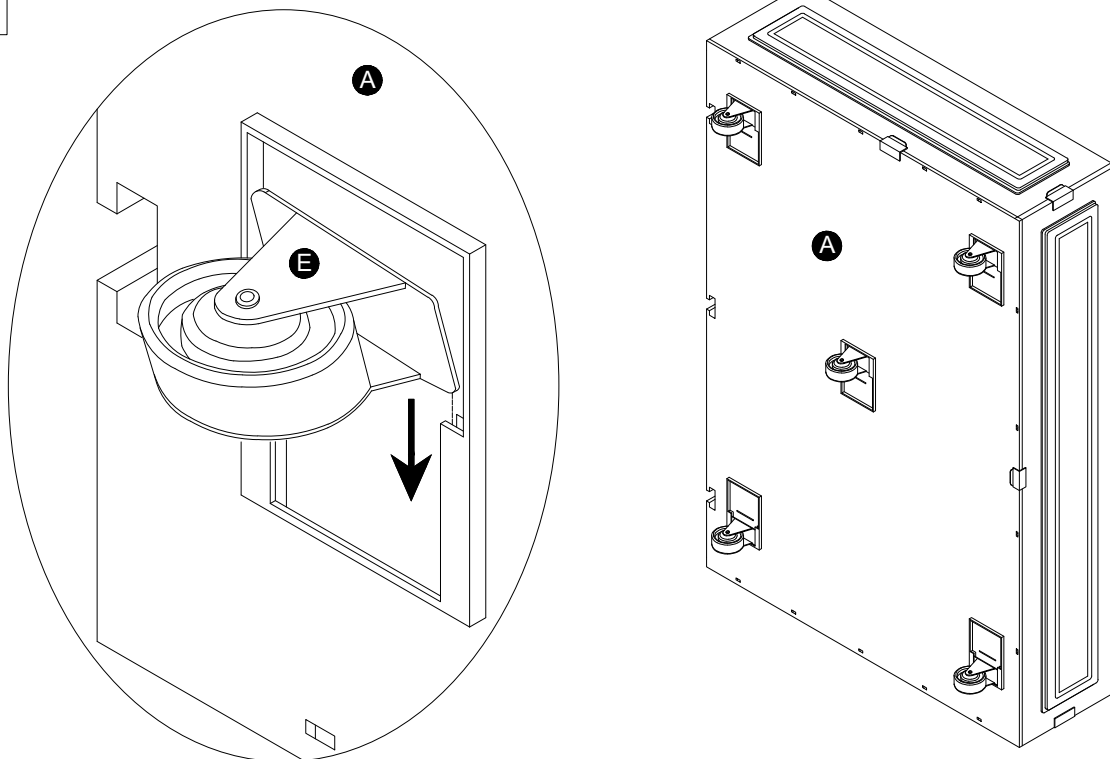

16


x2

Take screw H13, first install it into drawer panel 14, then screw in the bottom 3 screws partially leaving them protruding 8mm (for easy installation). Insert the drawer bottom A into the three screws of the panel, ensuring no distortion of the drawer and panel to prevent plastic parts from breaking during installation.

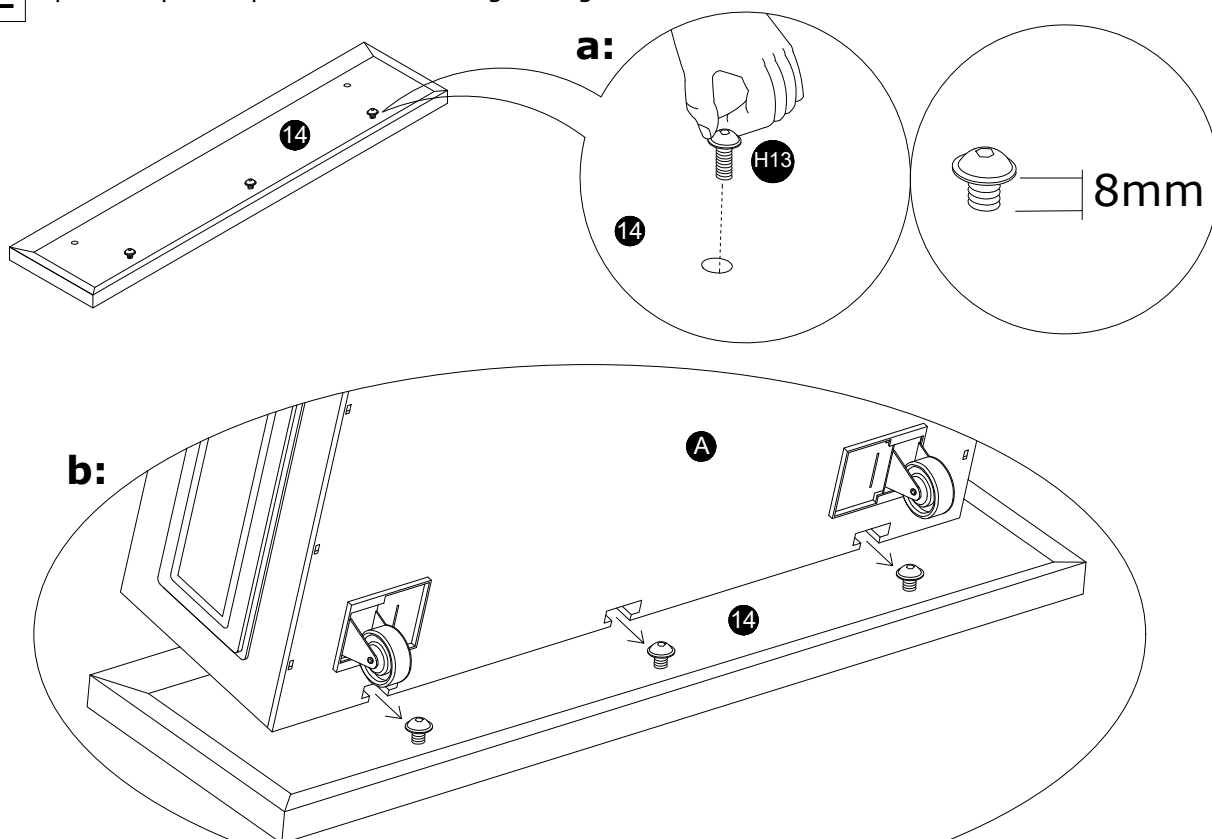


17

x2

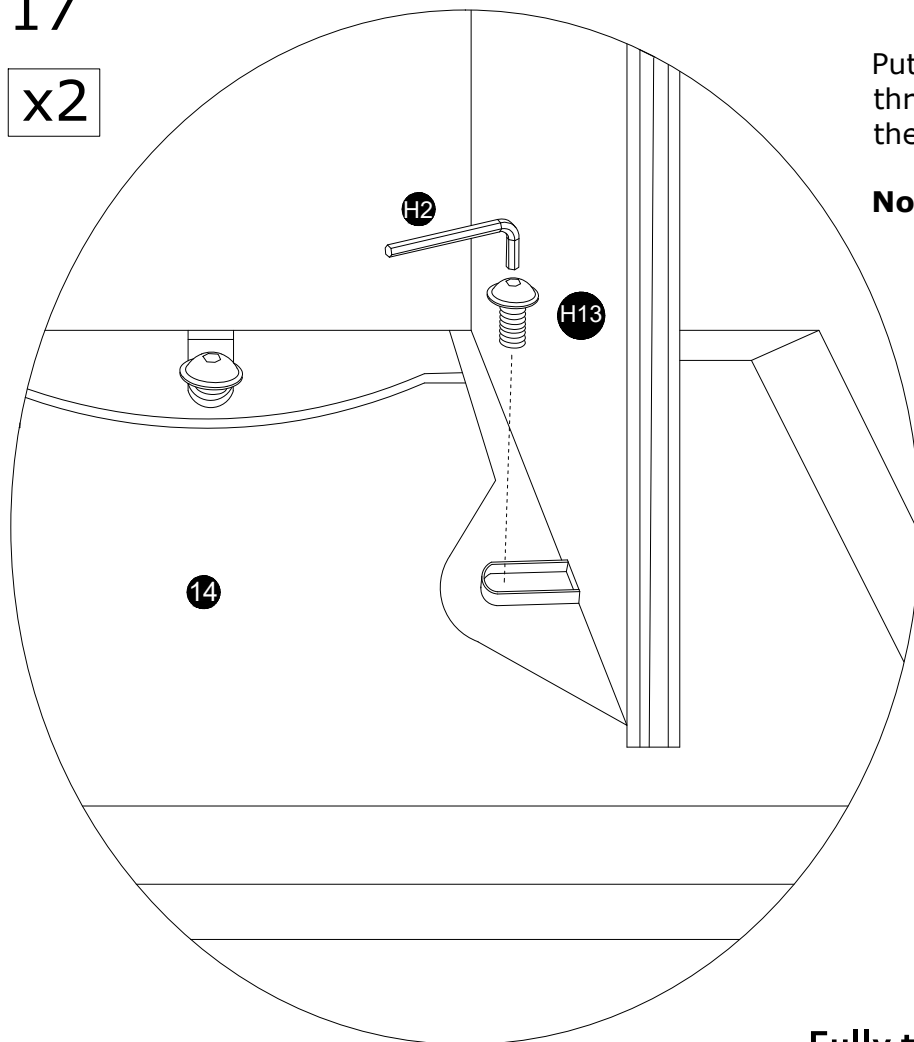


Put the drawer flat, install screw H13 through the holes in drawer sides C&D, then tighten all screws.

Note: Plastic drawers should not be installed with power tools; tightening manually is sufficient.

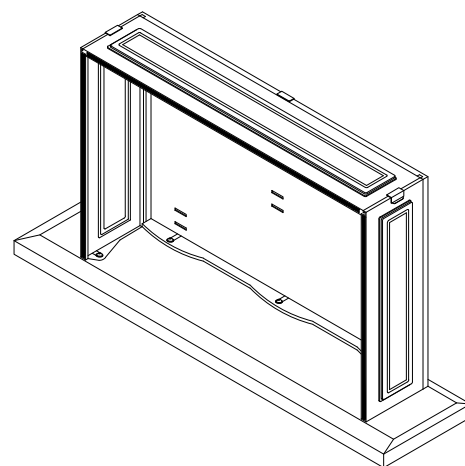

Fully tighten all fixings.

18

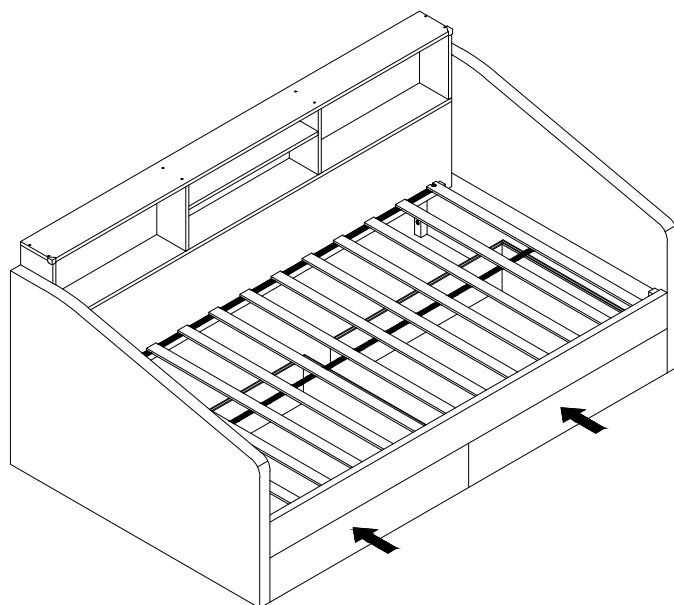

Job Complete !

In the interest of our environment please dispose of all packaging thoughtfully.