
INSTALLATION MANUAL

MN - DE2602

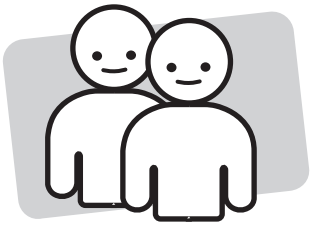

Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

260227-v1

Before You Start


- Please read all instructions carefully.
- Retain instructions for future reference.
- Separate and count all parts and hardware.
- Read through each step carefully and follow the proper order.
- We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- Always place the product on a flat, steady and stable surface.
- Keep all small parts and packaging materials for this product away fr om babies and children as they potentially pose a serious choking hazard.


Assembly Instructions

We have designed our furniture with you,the customer in mind.Our clear, easy to follow step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.




Please do not return to the store
Broken or missing Hardware?
Neen help with Assembly?
If you have any questions just email us at
xhome_service@163.com

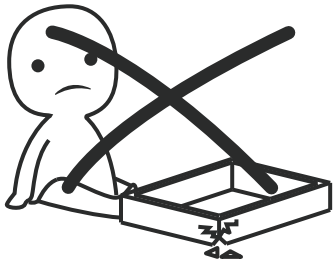


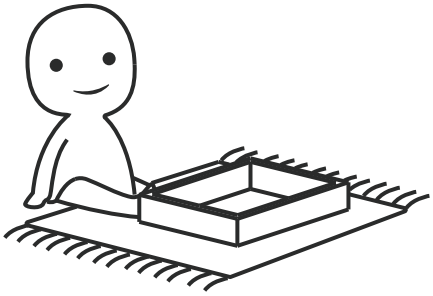

AVOID SCRATCHES!

In order to avoid scratching this furnuture should be assembledon a soft layer-could be a rug.

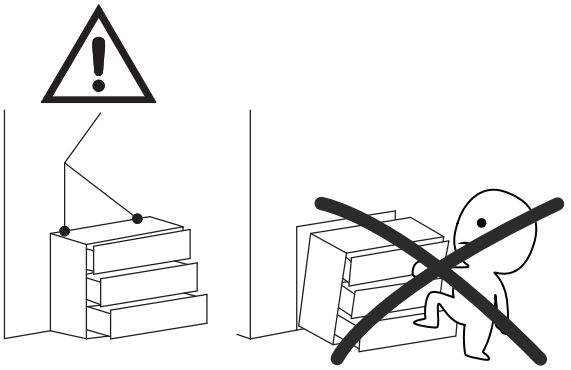

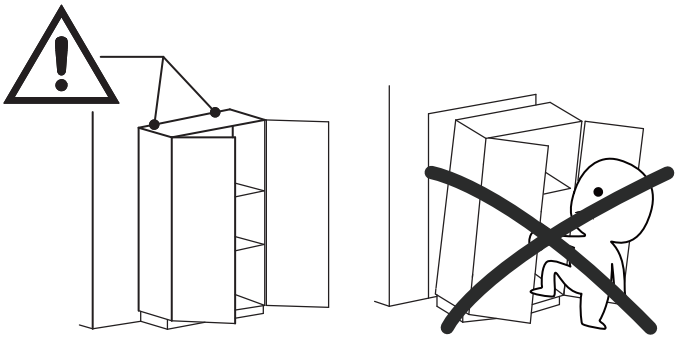

ANTI-TOPPLE WARNING !

Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.


IMPORTANT !

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.


For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag.For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.


Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

Completed Assembly

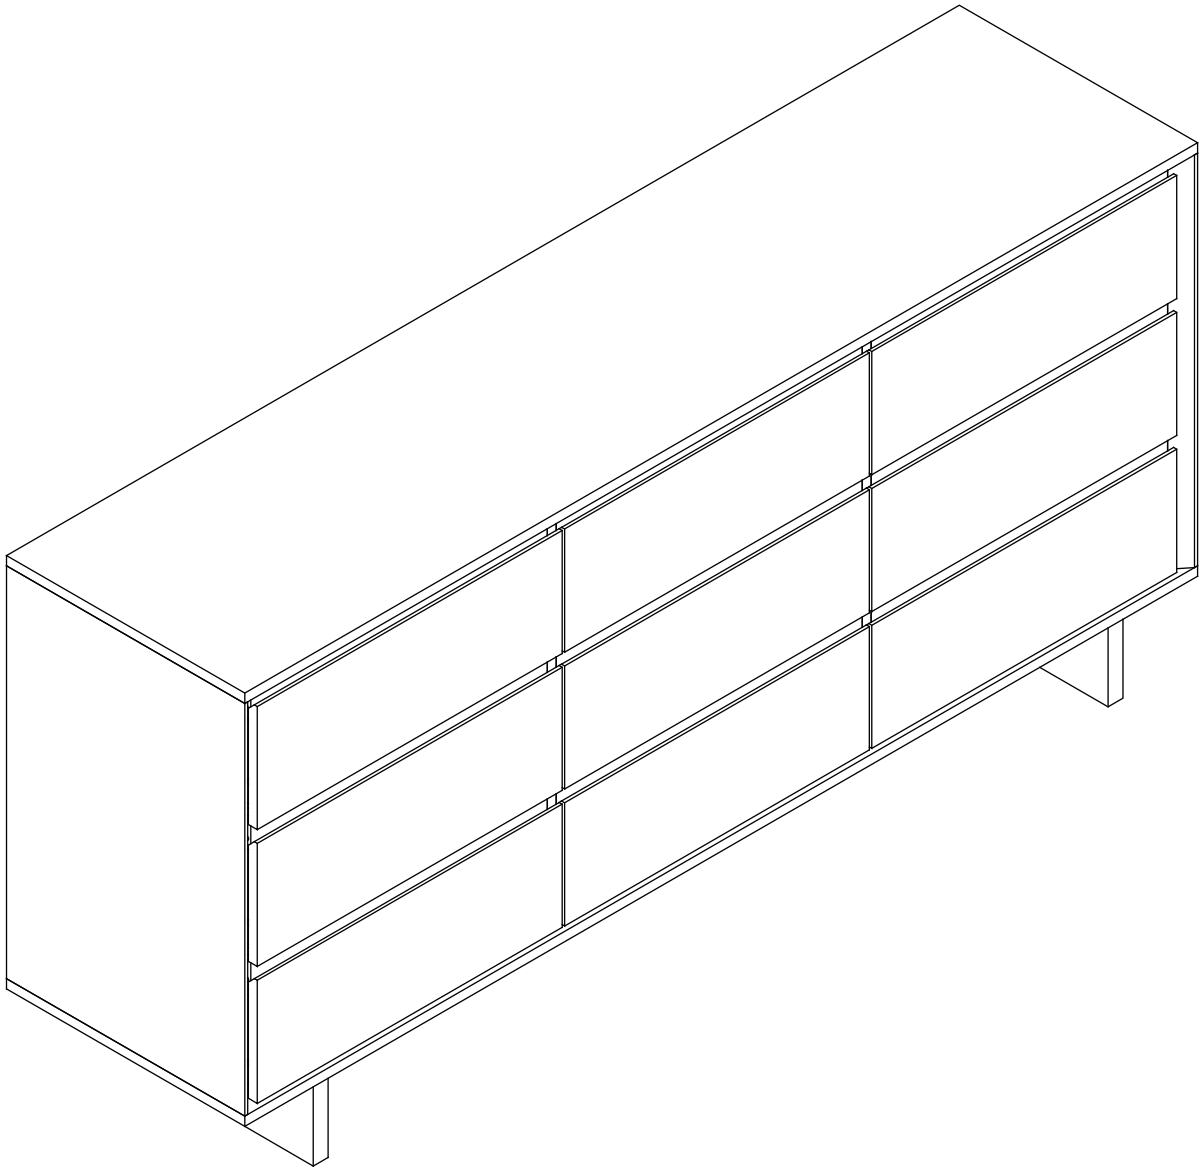


Parts Description

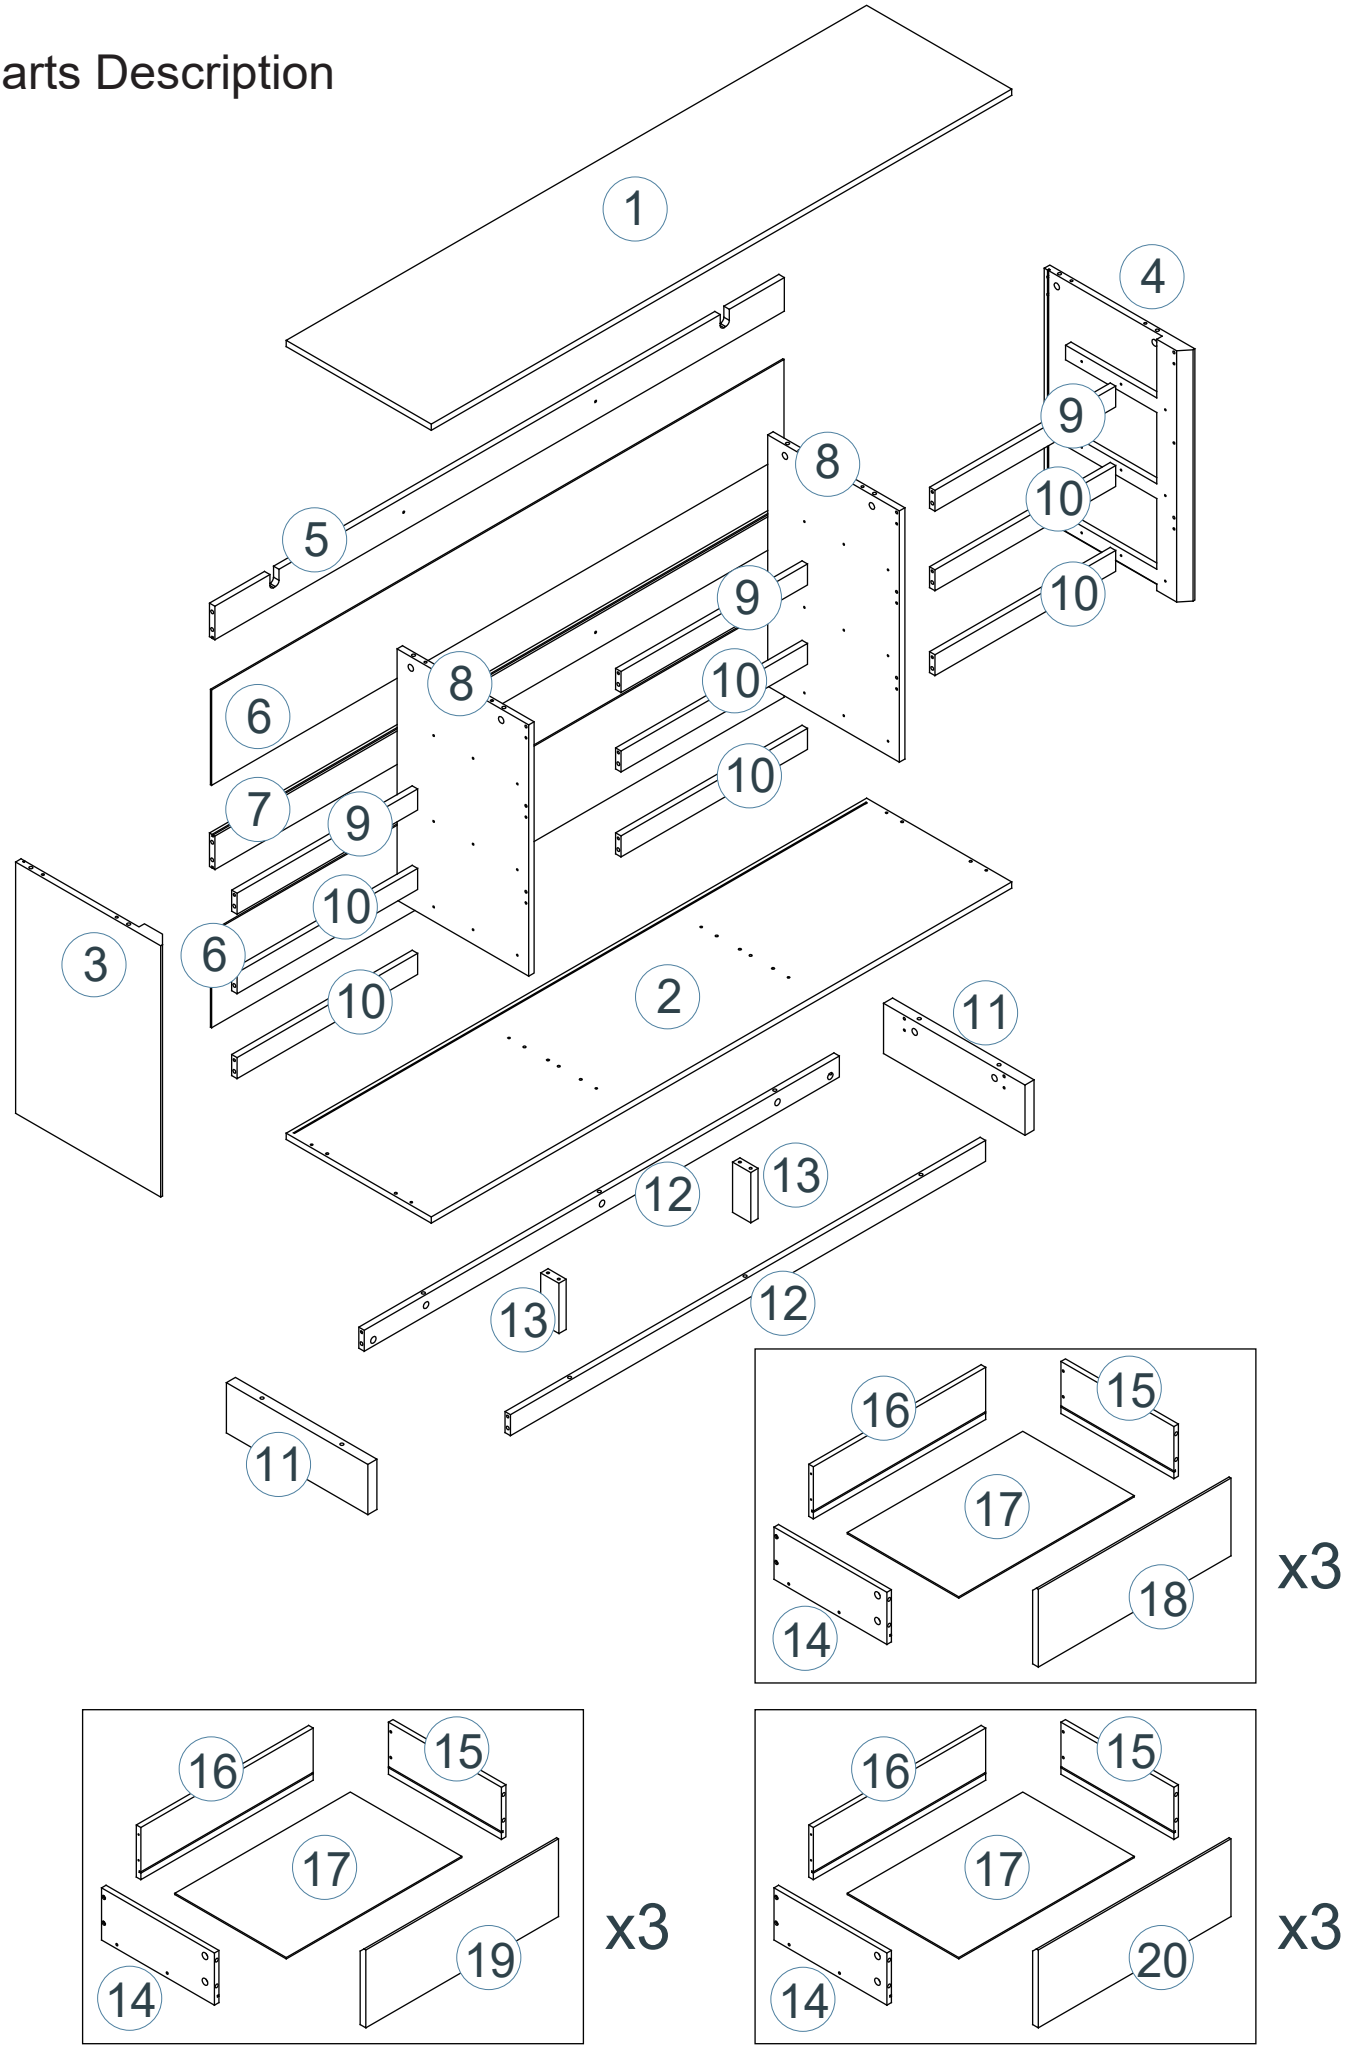


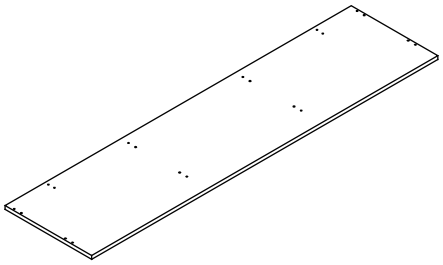


1

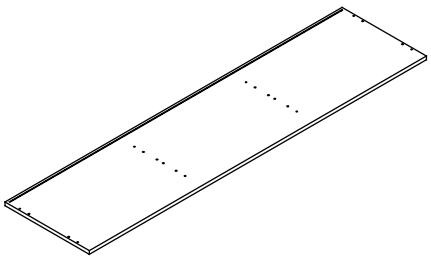


2

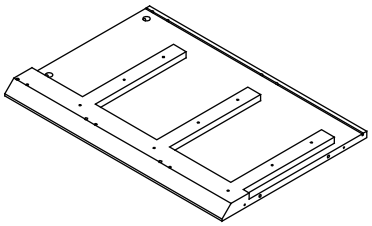


3

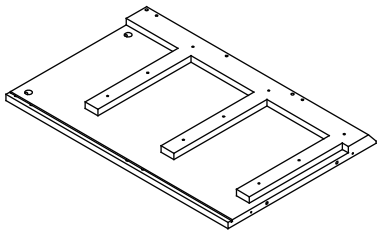


4

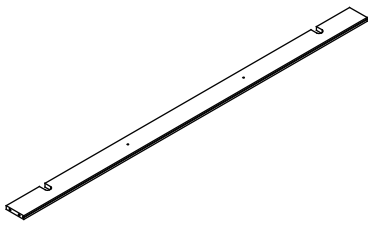


5

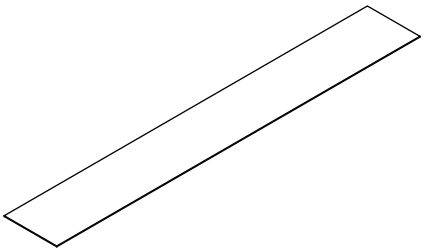


6 x2

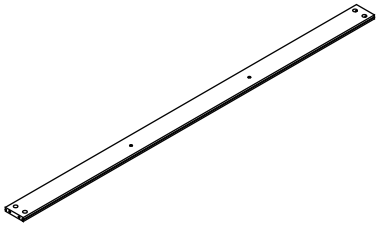


7

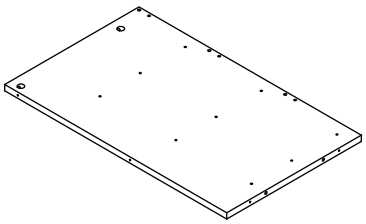


8 x2

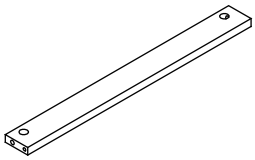


9 x3

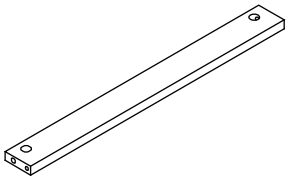

10 x6

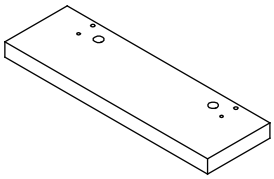


11 x2

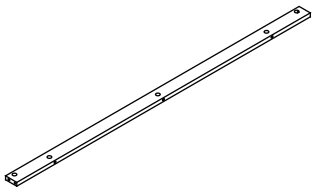


12 x2




13 x2

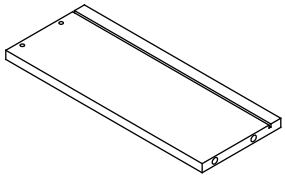


14 x9

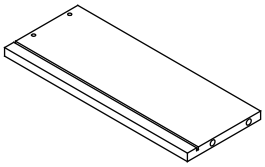


15 x9

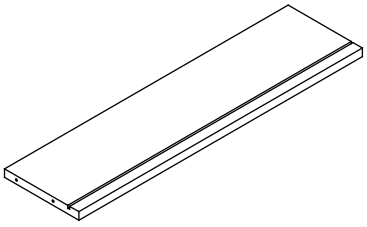


16 x9

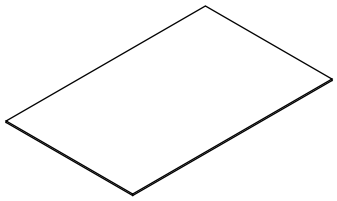


17 x9

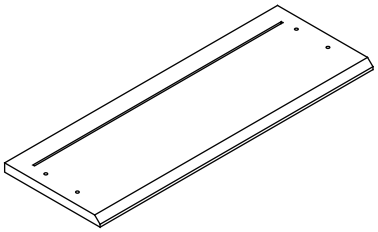















18 x3




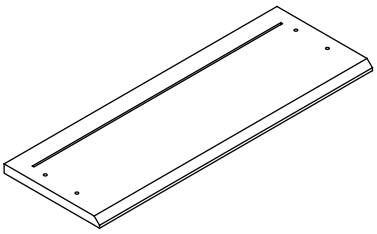


19 x3

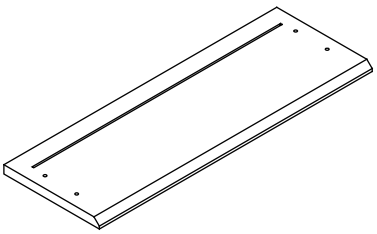

20 x3

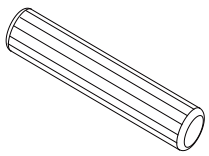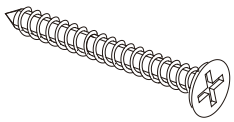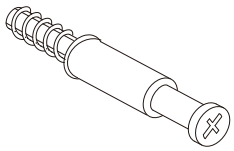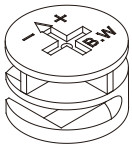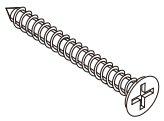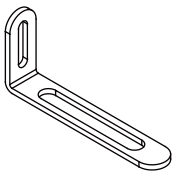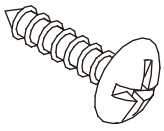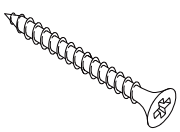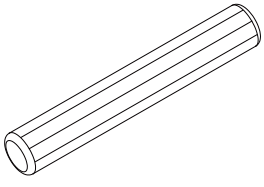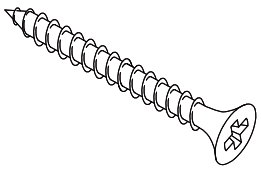A  6 X 30mm Dowel 26pcs	B  4 x 35mm Screw 12pcs	C  Bolt 84pcs
D  Locking Nut 84pcs	E  3 x 12mm Screw 90pcs	F  4 x 30mm Screw 36pcs
G  Wedge 8pcs	H  3 x 16mm Screw 8pcs	I  Plastic Glide 4pcs
J  Bracket 2pcs	K  4 x 14mm Screw 4pcs	L  Wall Anchor 2pcs
M  Wall Screw 2pcs	N  6x50mm Long Dowel 6pcs	O  4 x 40mm Screw 4pcs

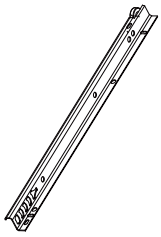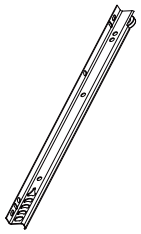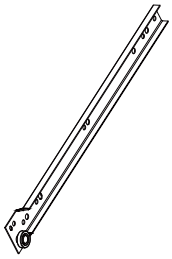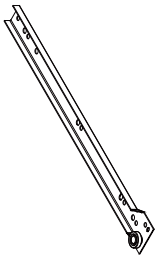P  Adjuster 2pcs	DL  300mm Slide Rail 9pcs	DR  300mm Slide Rail 9pcs
CL  300mm Slide Rail 9pcs	CR  300mm Slide Rail 9pcs	



Note: Please do not use any power tools. Use of power tools may cause damage and void manufacture warranty.

Instructions For Fastening Cam Bolt and Cam Lock




CAM BOLT




CAM LOCK


Cam Bolt


Place Cam Bolt on the designated pre-drilled hole on the panel. Use a Phillips Screwdriver to screw in Cam Bolt vertically until shoulder is snug and flushed with panel. Do not over-tighten or under-tighten Cam-bolt. See illustrations below.

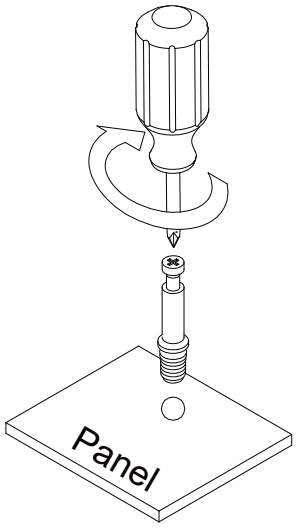

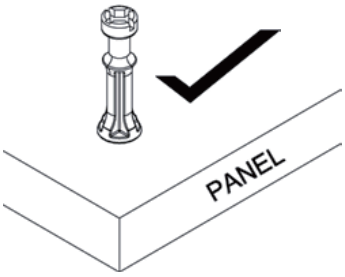


Shoulder is flushed (on the same level) with the panel.

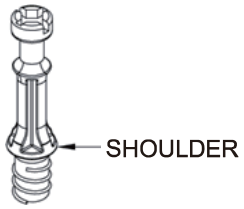


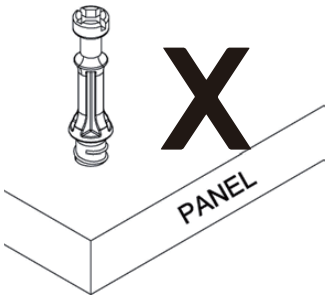

Shoulder is above the panel.


CAM-LOCK
Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock.

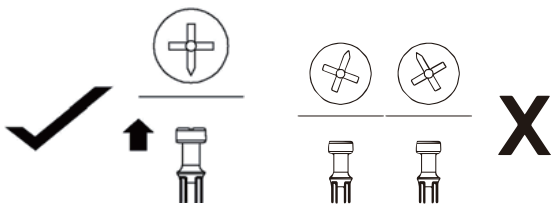

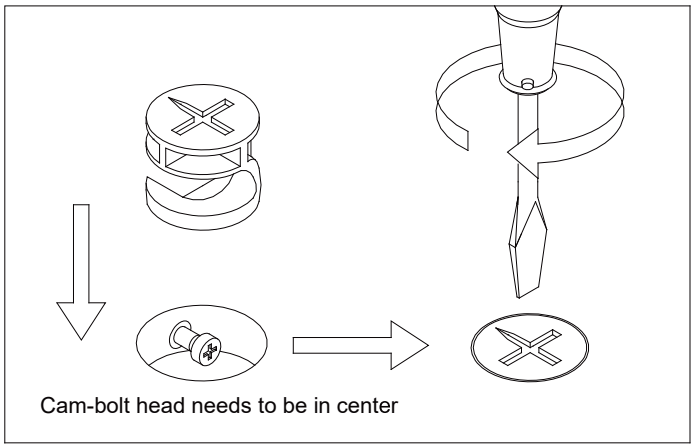


Use a Flat-head Screwdriver to turn Cam Lock clockwise to lock onto the head of the Cam Bolt. Turn until it is snug (about a half turn) – over-tightening could damage Cam Lock and/or Cam Bolt.

Step 1

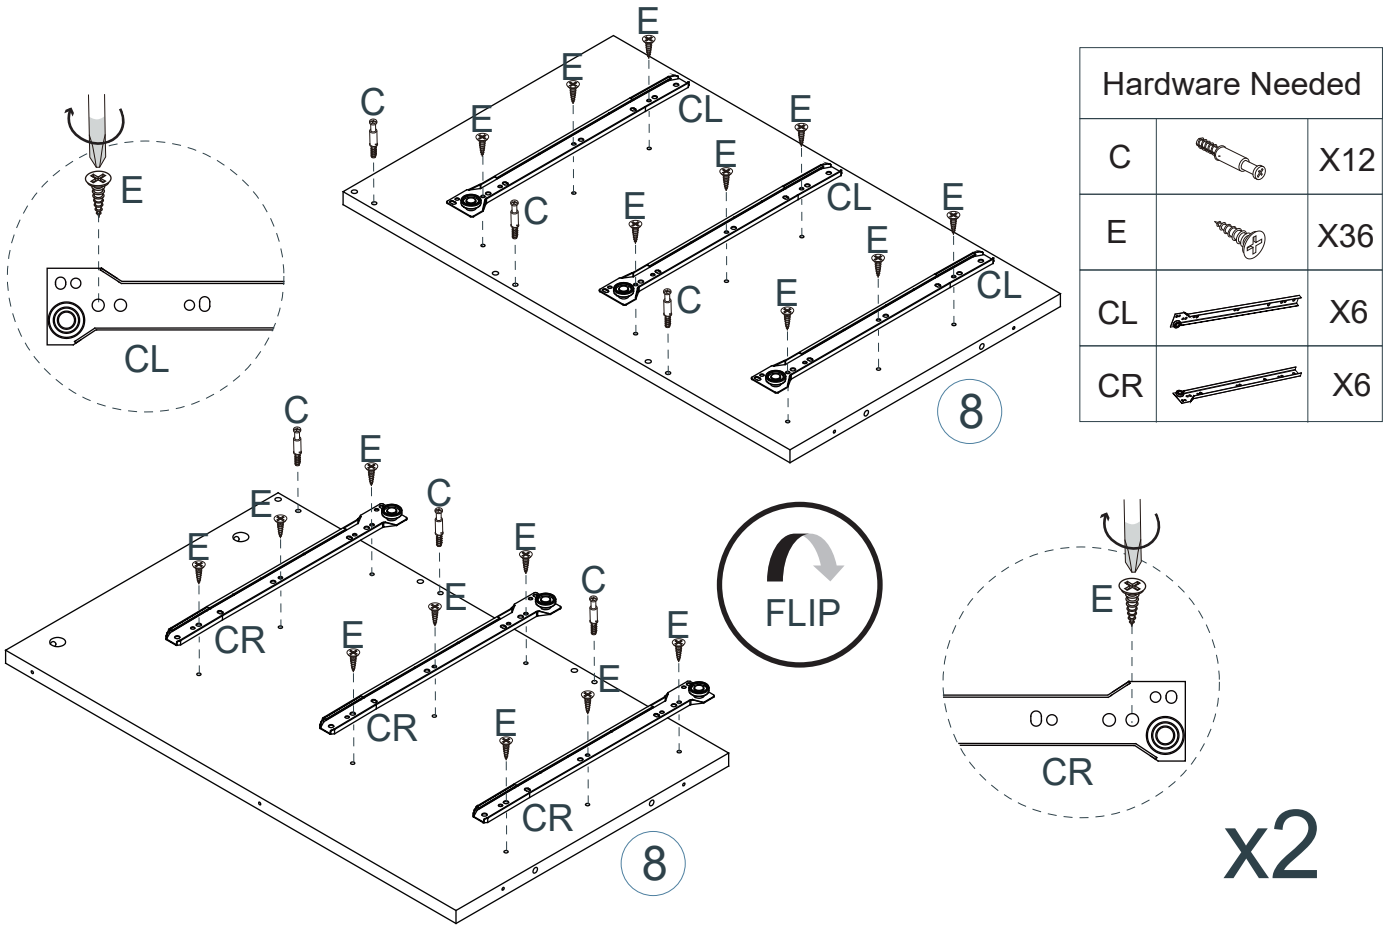

Hardware Needed		
C		X12
E		X36
CL		X6
CR		X6


Step 2

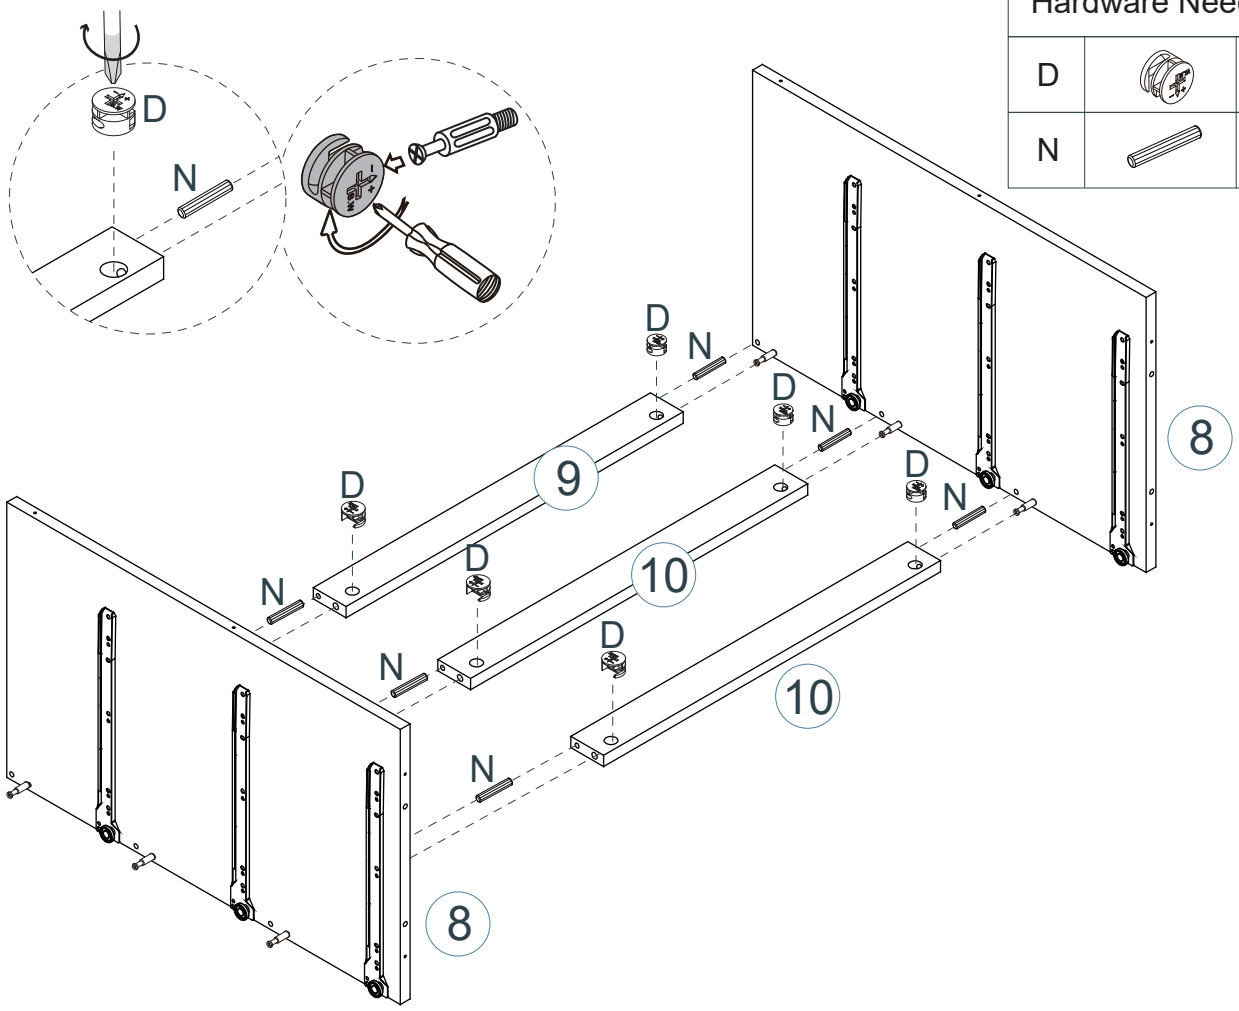

Hardware Needed		
D		X6
N		X6

Step 3


Hardware Needed		
D		X6

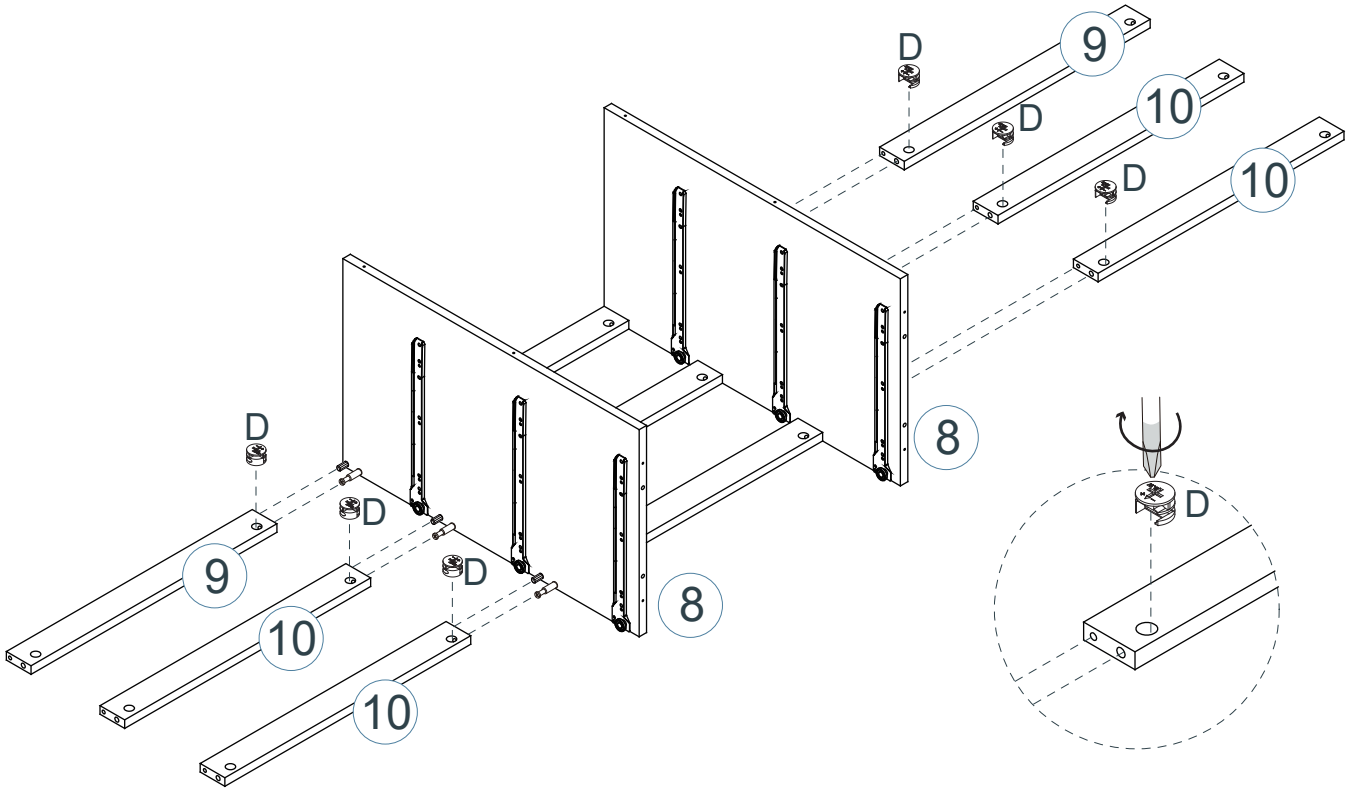

Step 4


Hardware Needed		
B		X4

Step 5

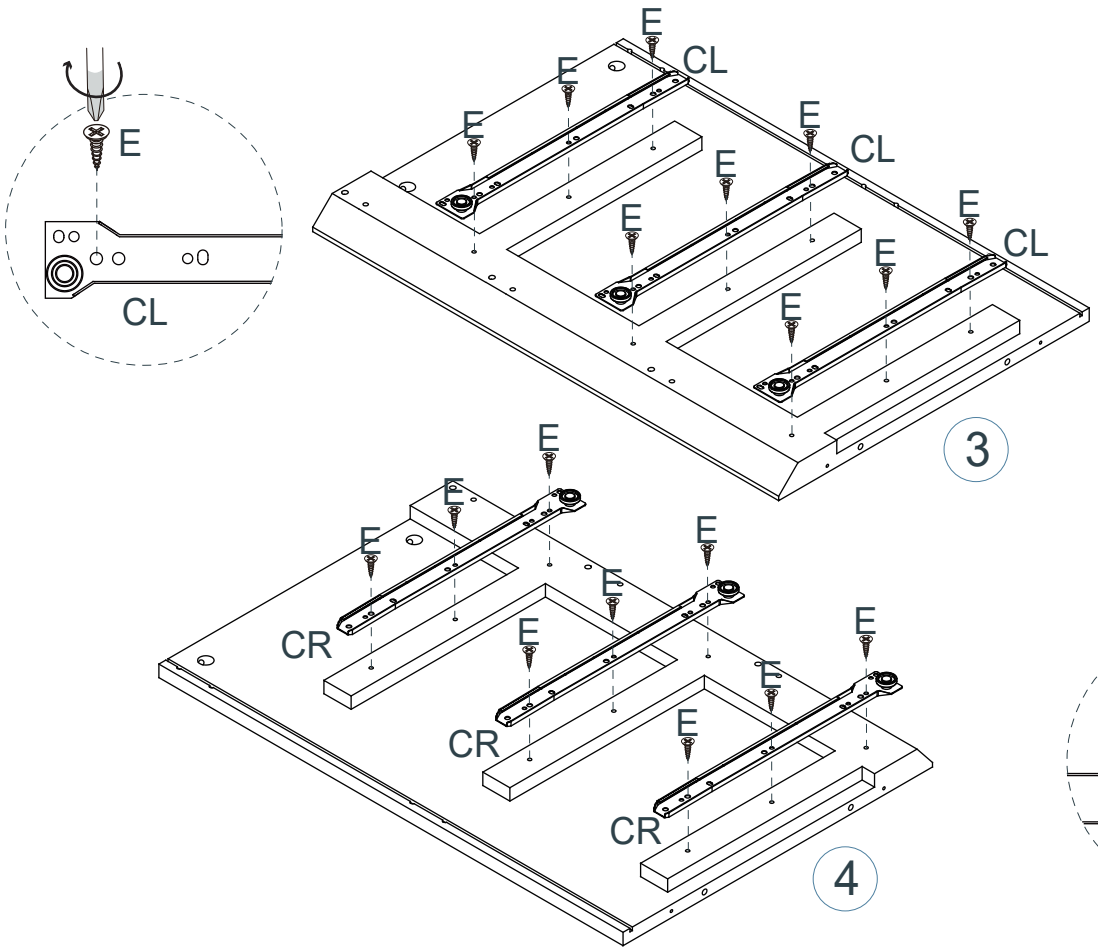

Hardware Needed		
E		X18
CL		X3
CR		X3

Step 6

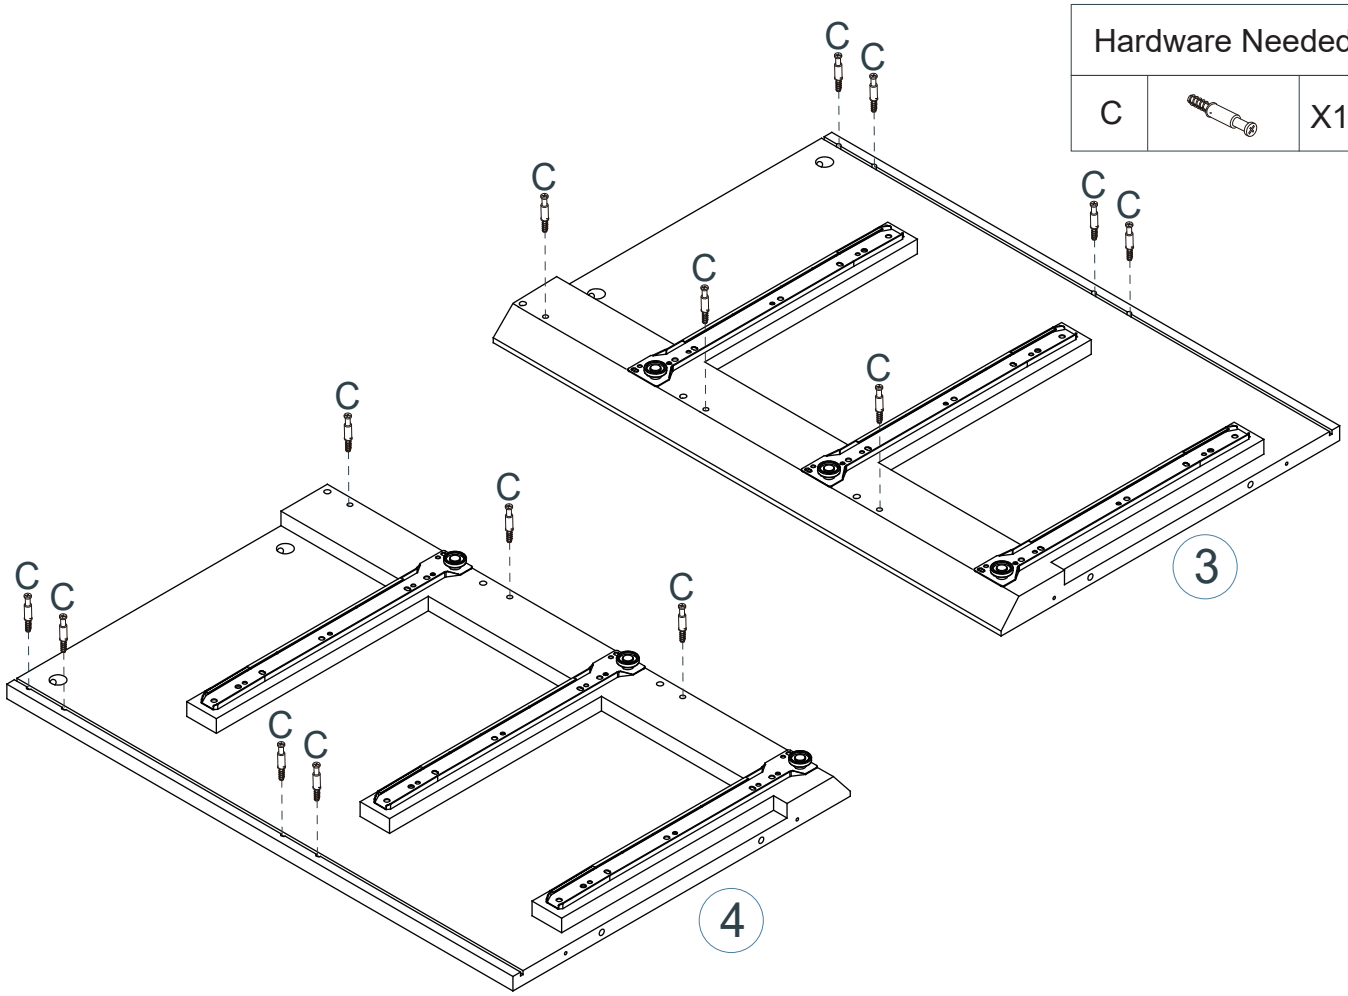


Hardware Needed		
C		X14

Step 7


Hardware Needed		
A		X3
D		X7

Step 8

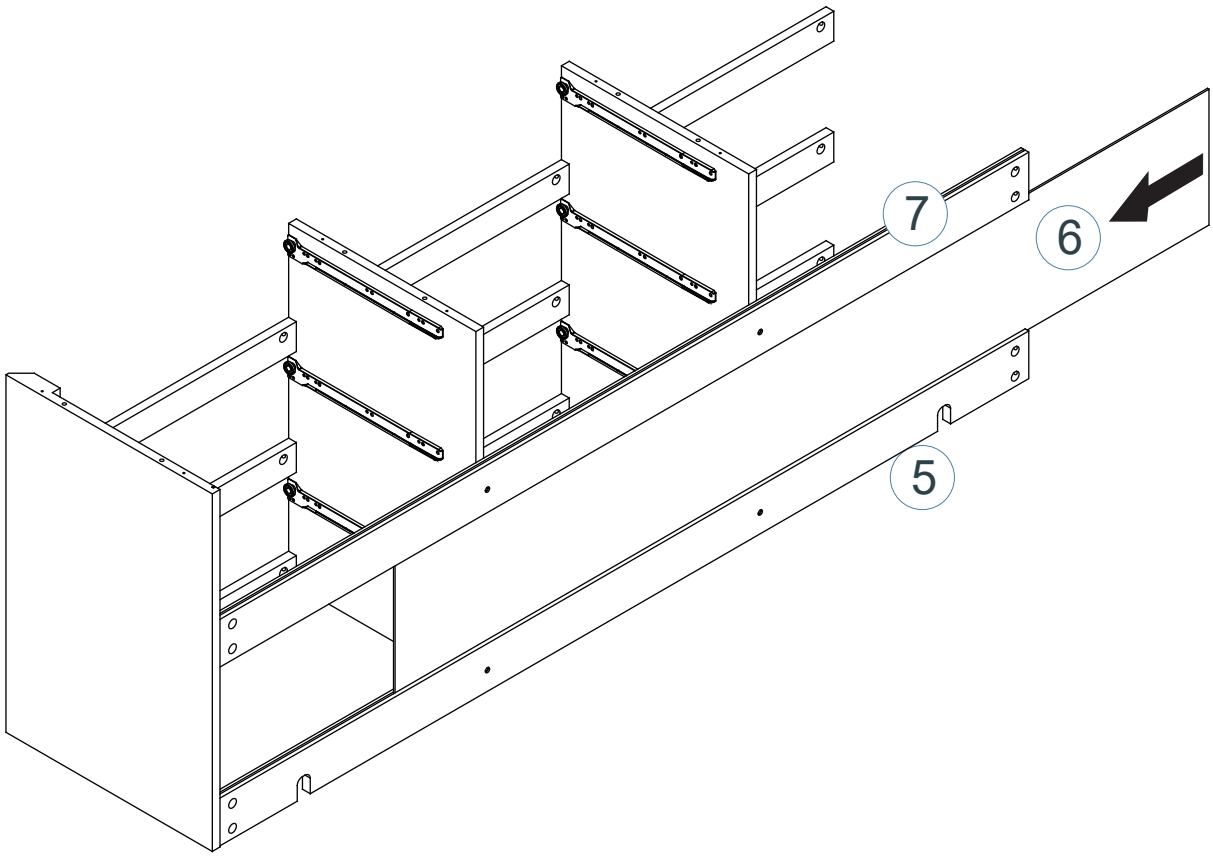


Step 9

Hardware Needed		
A		X3
D		X7

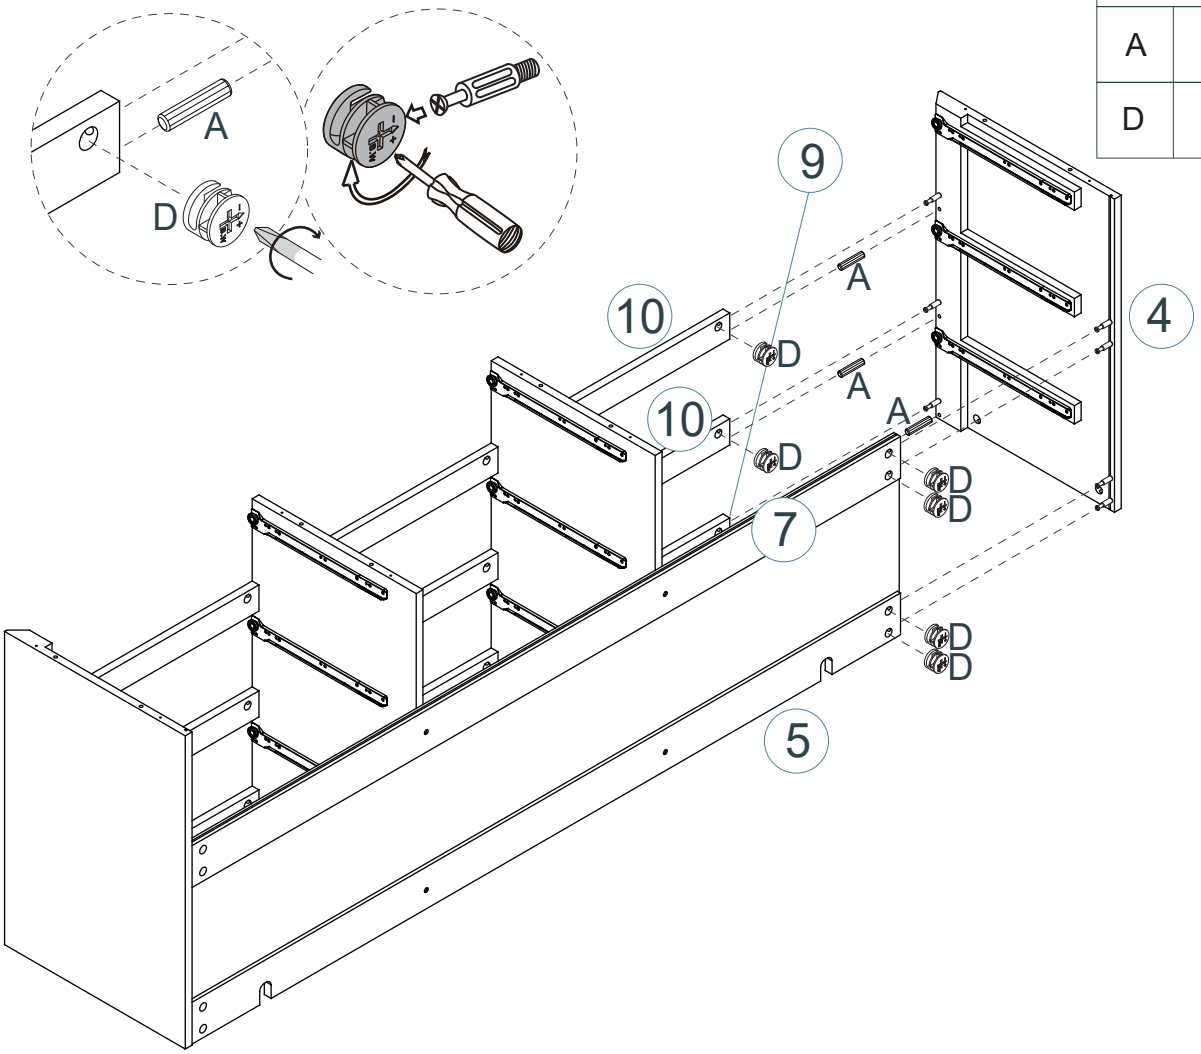


Step 10

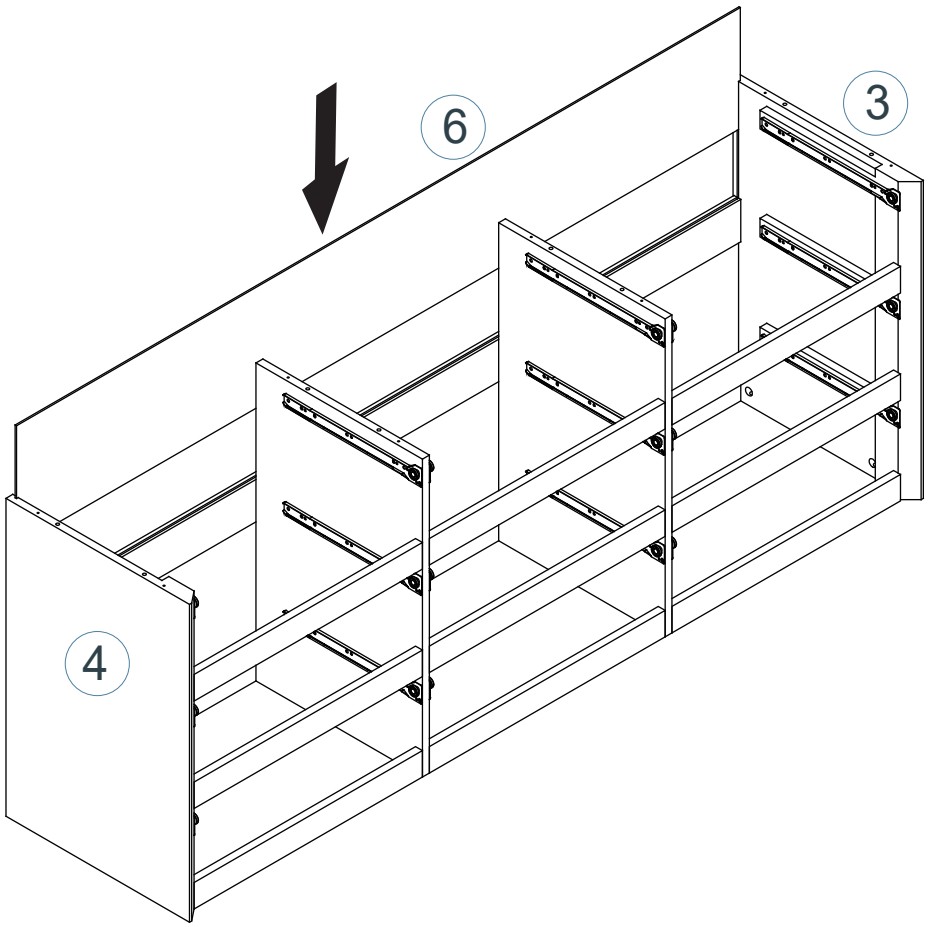


Step 11

Hardware Needed		
C		X10

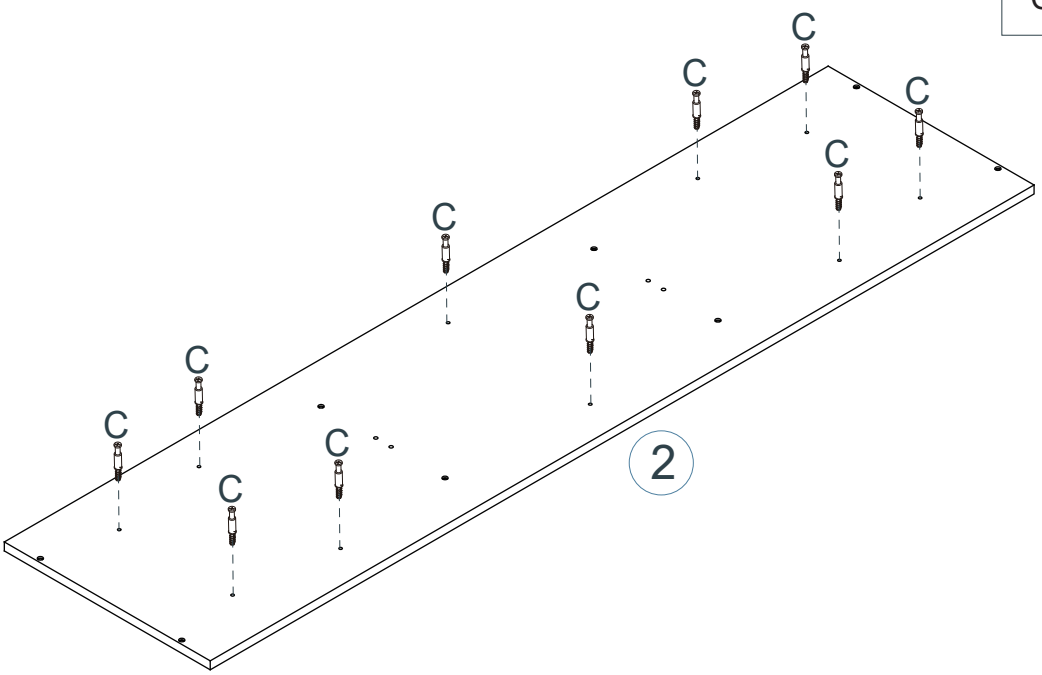


Step 12

Hardware Needed		
O		X4

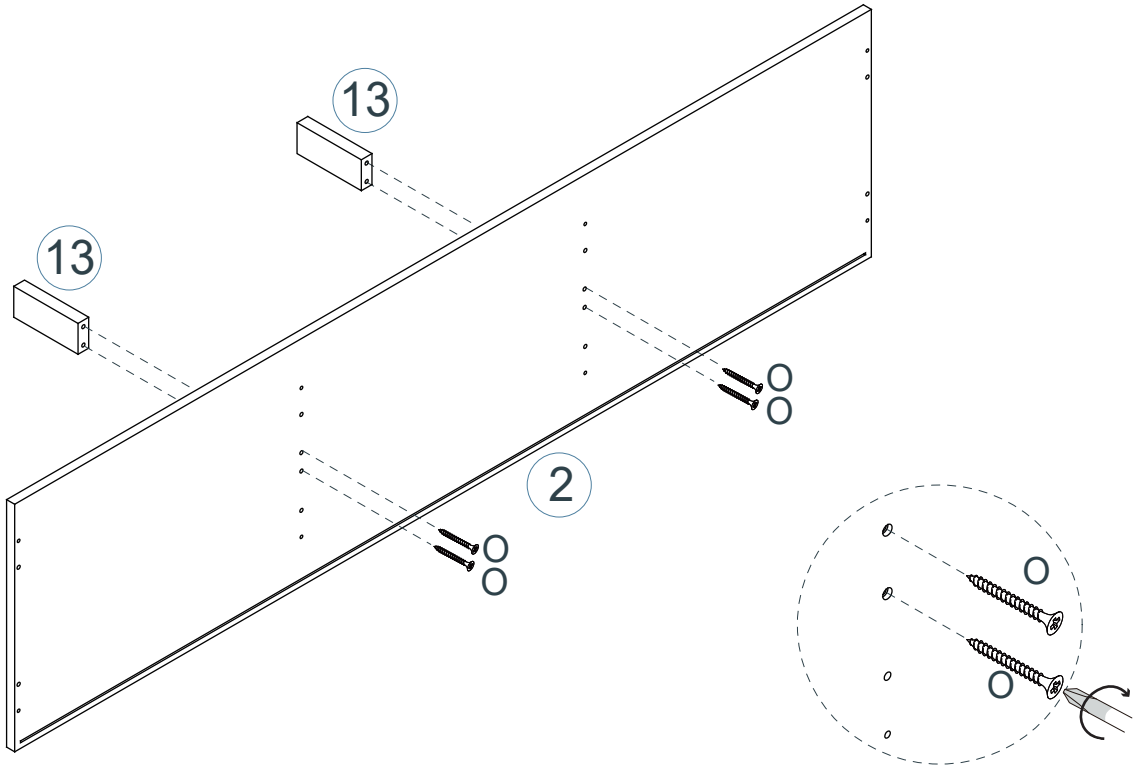


Step 13

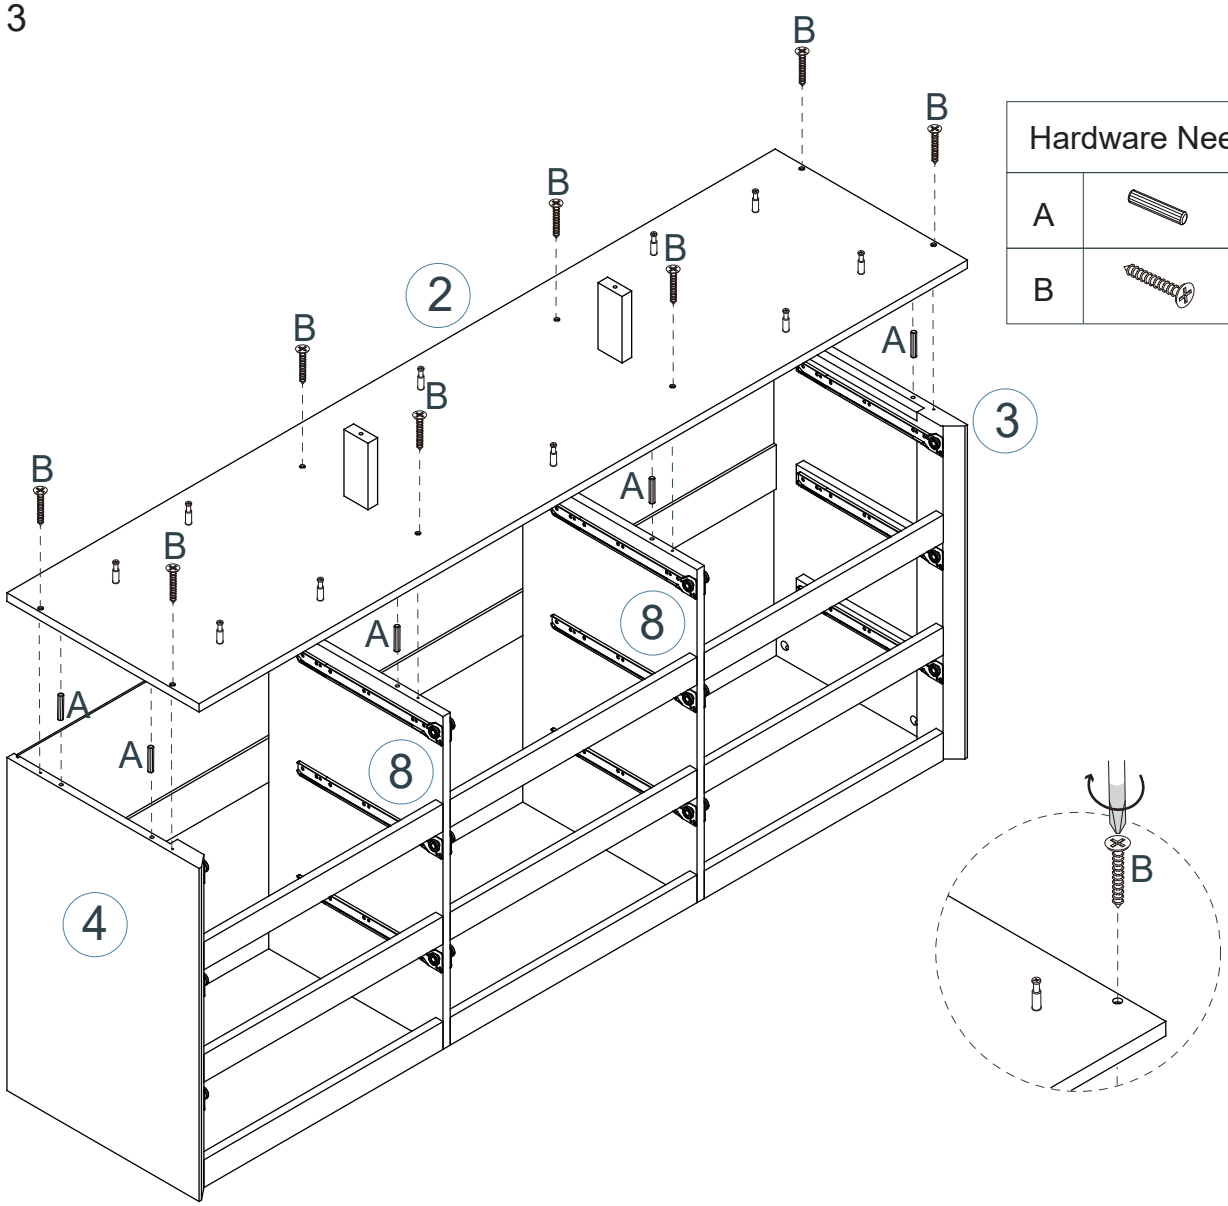


Hardware Needed		
A		X8
B		X8

Step 14

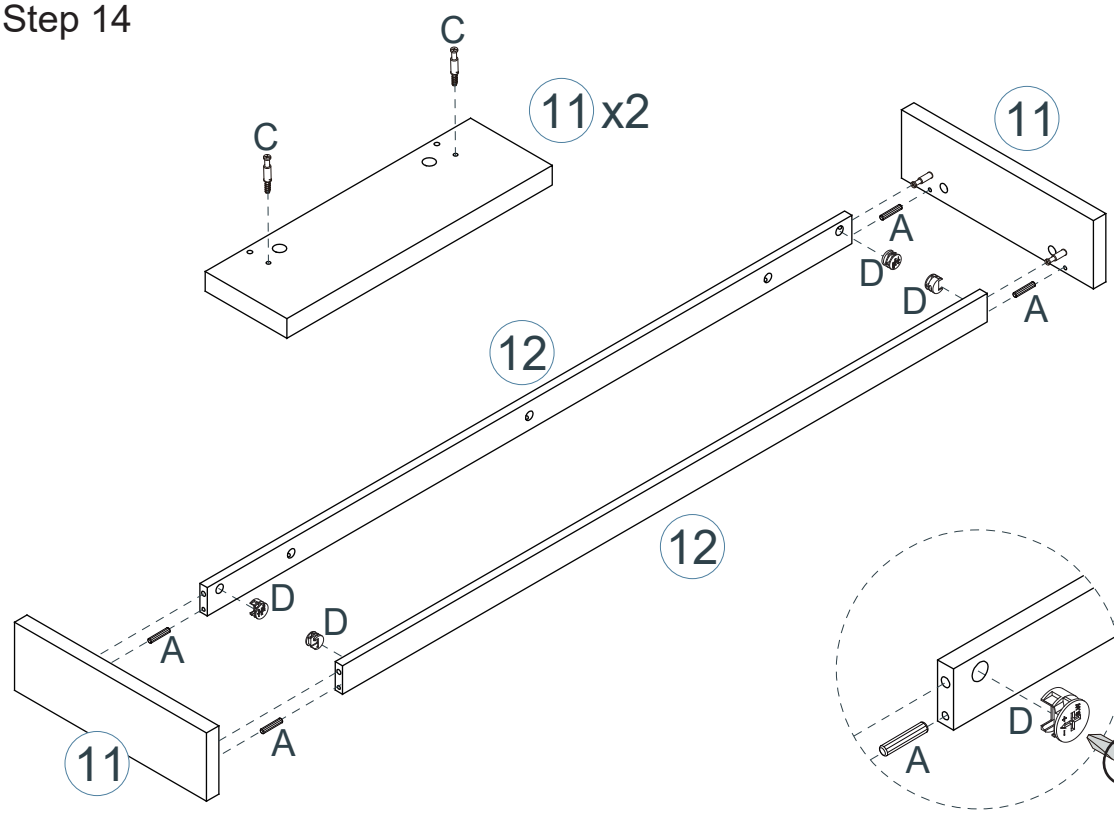


Hardware Needed		
C		X4
A		X4
D		X4

Step 15

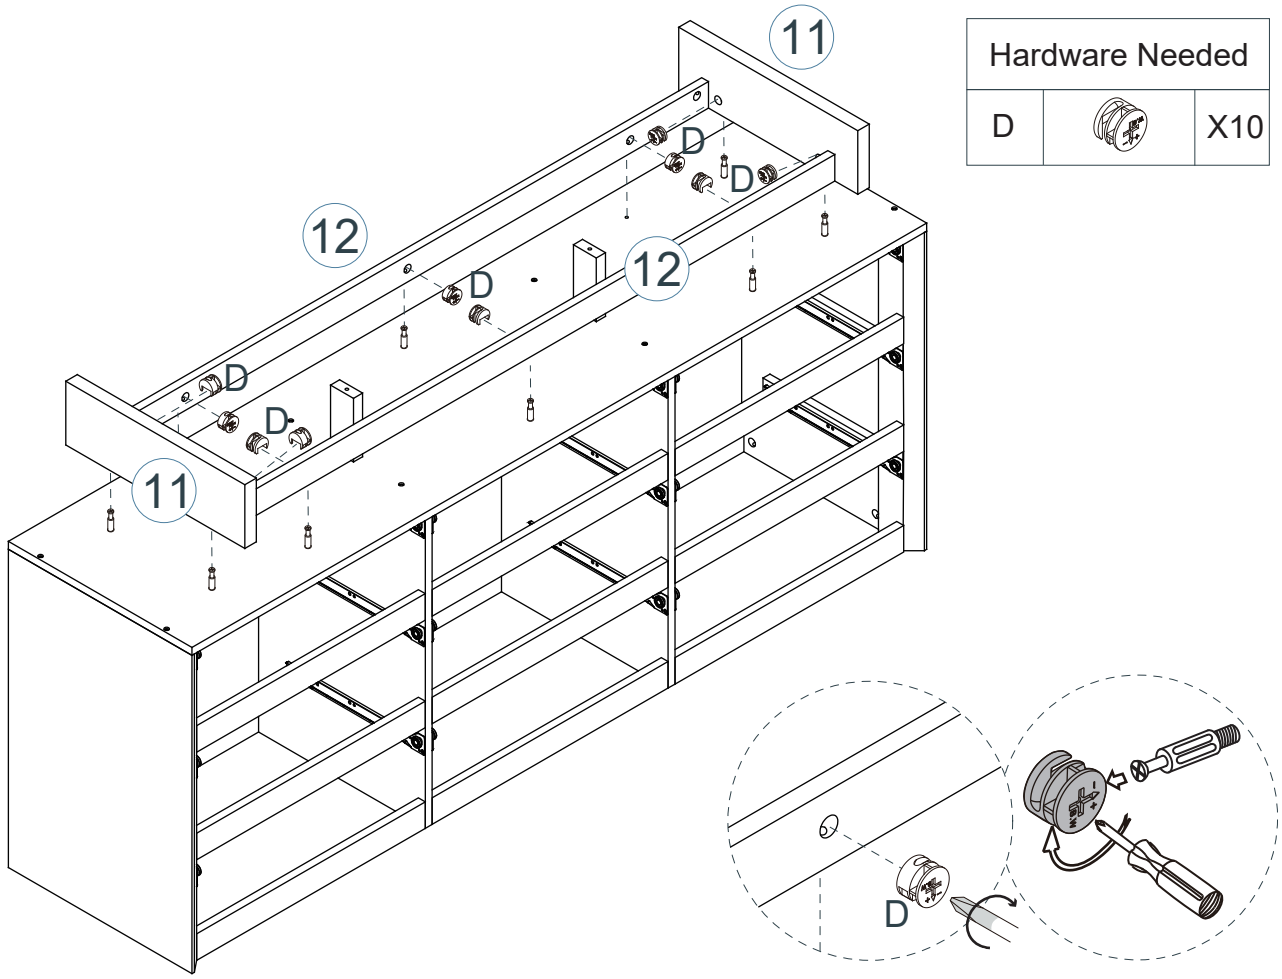

Hardware Needed		
D		X10


Step 16

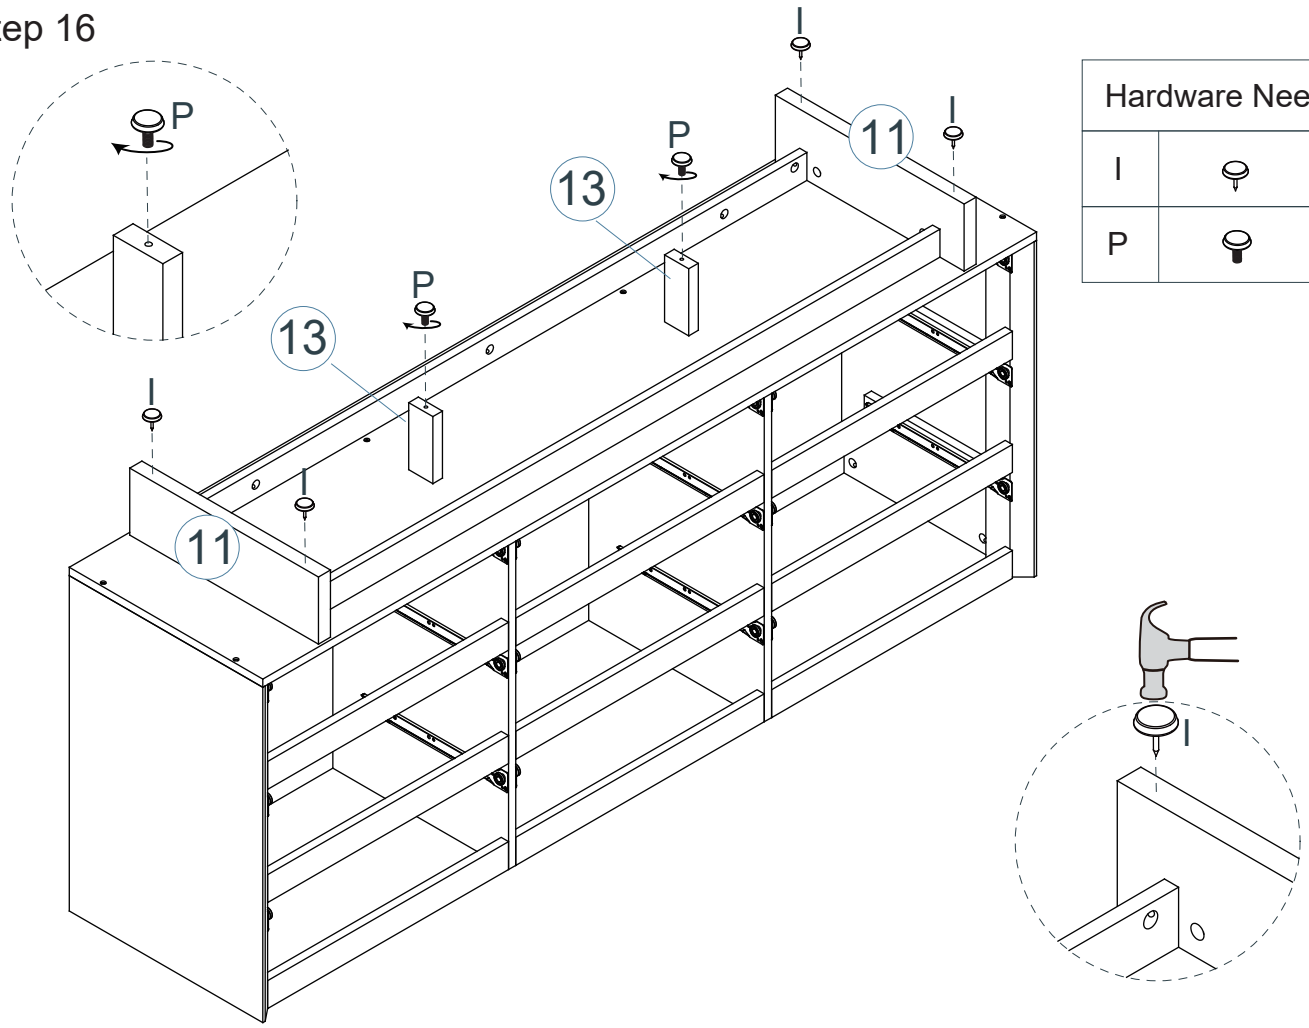

Hardware Needed		
I		X4
P		X2


Step 17

Hardware Needed		
A		X8

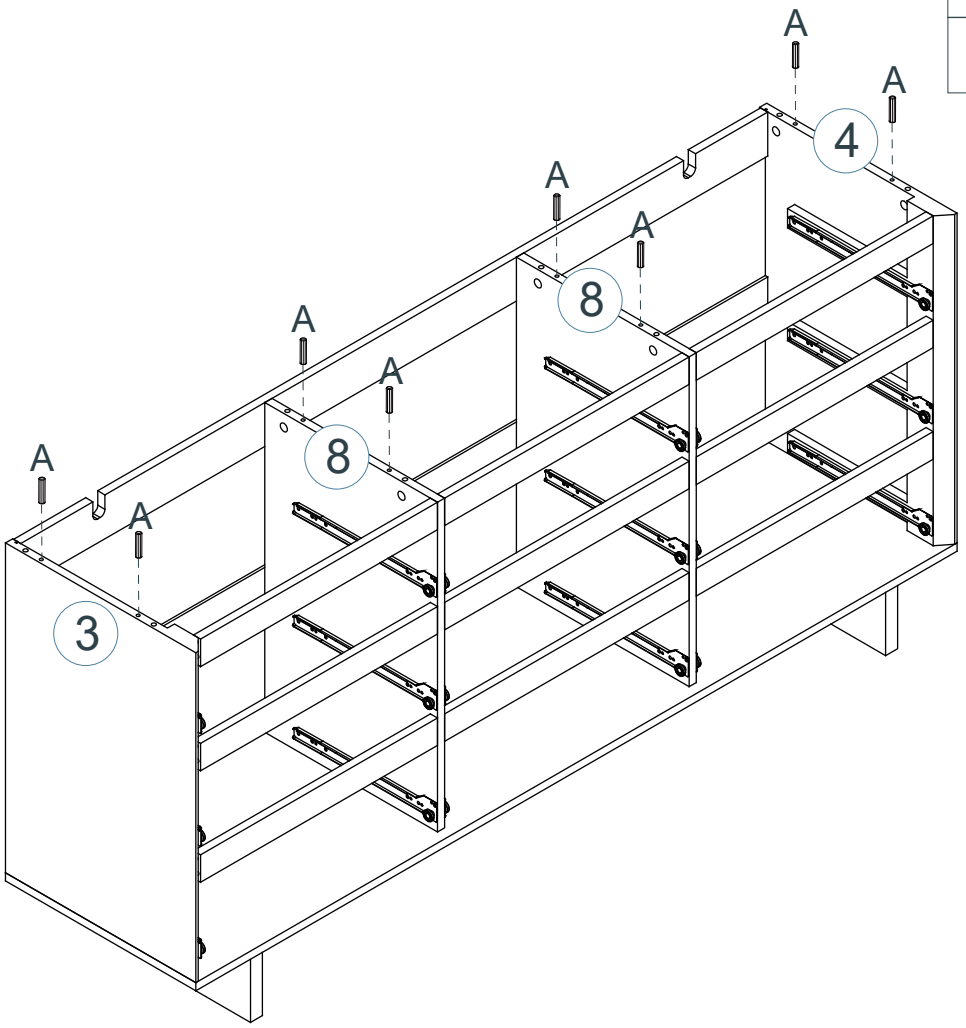


Step 18

Hardware Needed		
C		X8
J		X2
K		X4

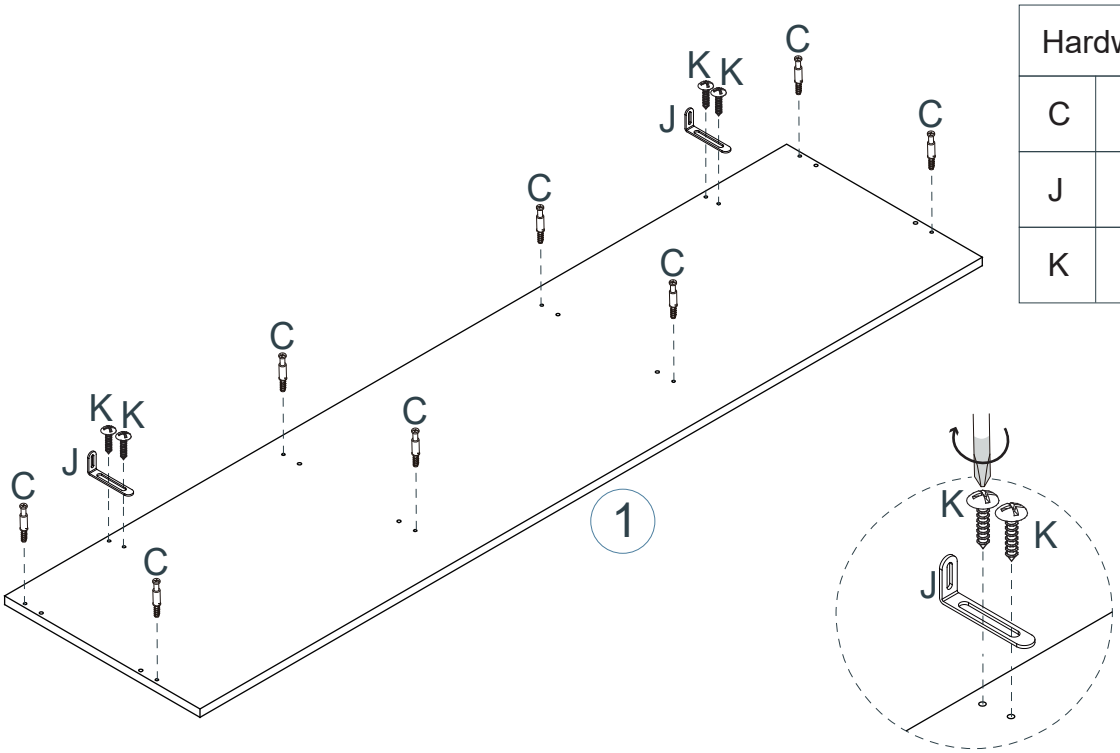


Step 19

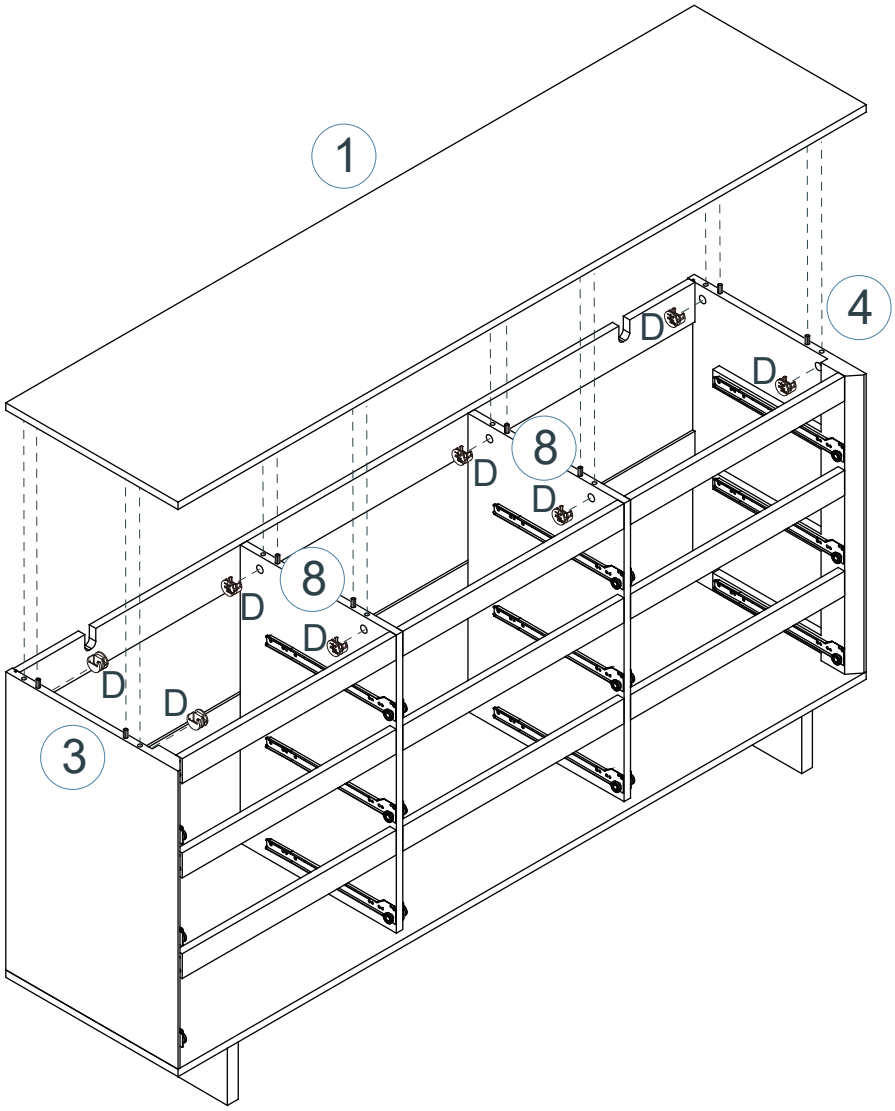


Hardware Needed		
D		X8

Step 20

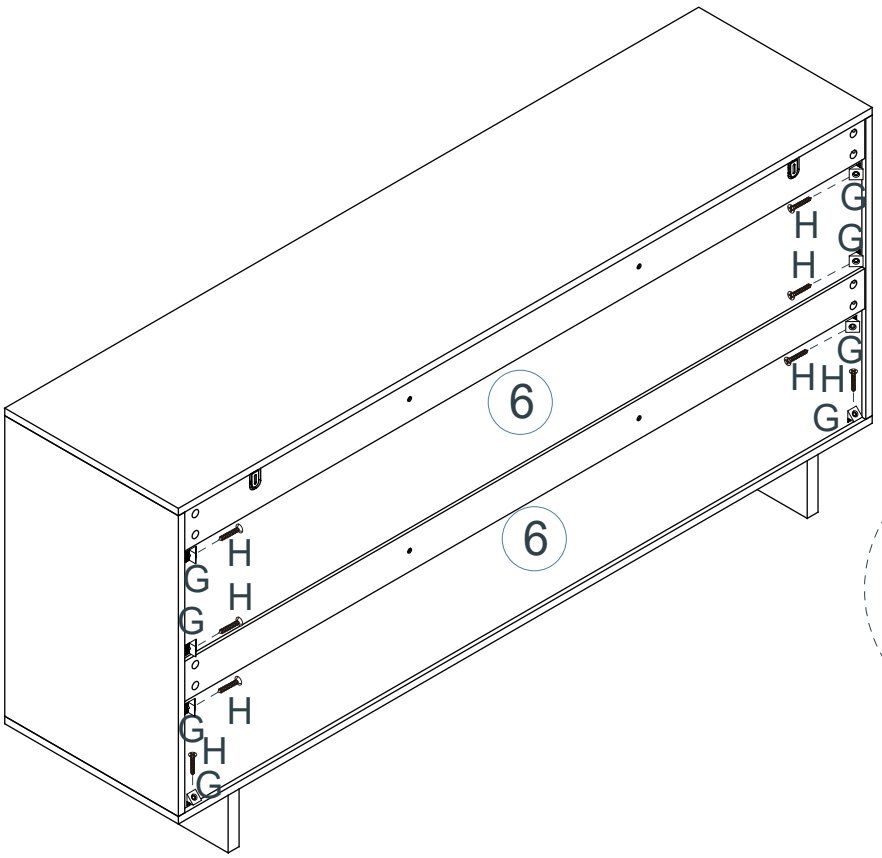

Hardware Needed		
G		X8
H		X8

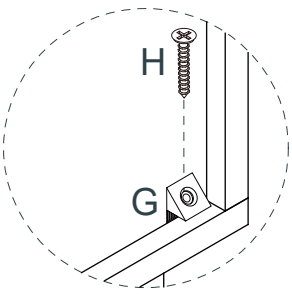



Step 21


1. Mark the drilling positions on the wall, drill holes, and insert the wall anchors (L).

2. Pass the screws (M) through the brackets (J) and fasten the cabinet securely to the wall to prevent tipping.

Hardware Needed		
L		X2
M		X2

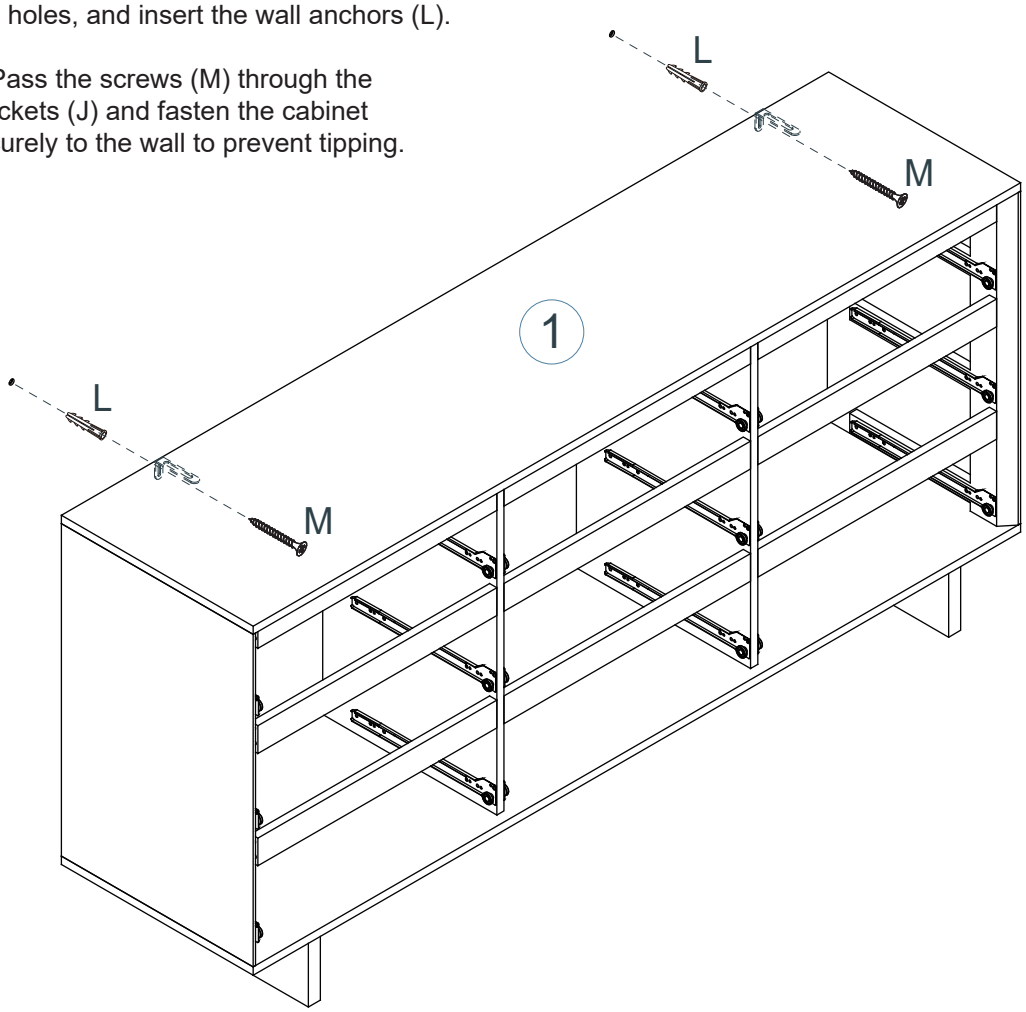

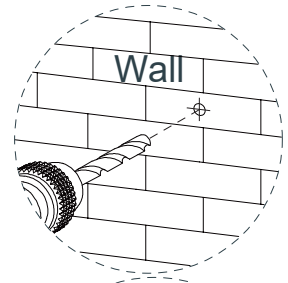

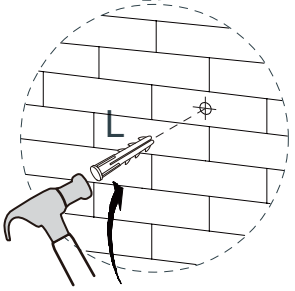


Step 22

Hardware Needed		
C		X36

Drawer x9


Step 23

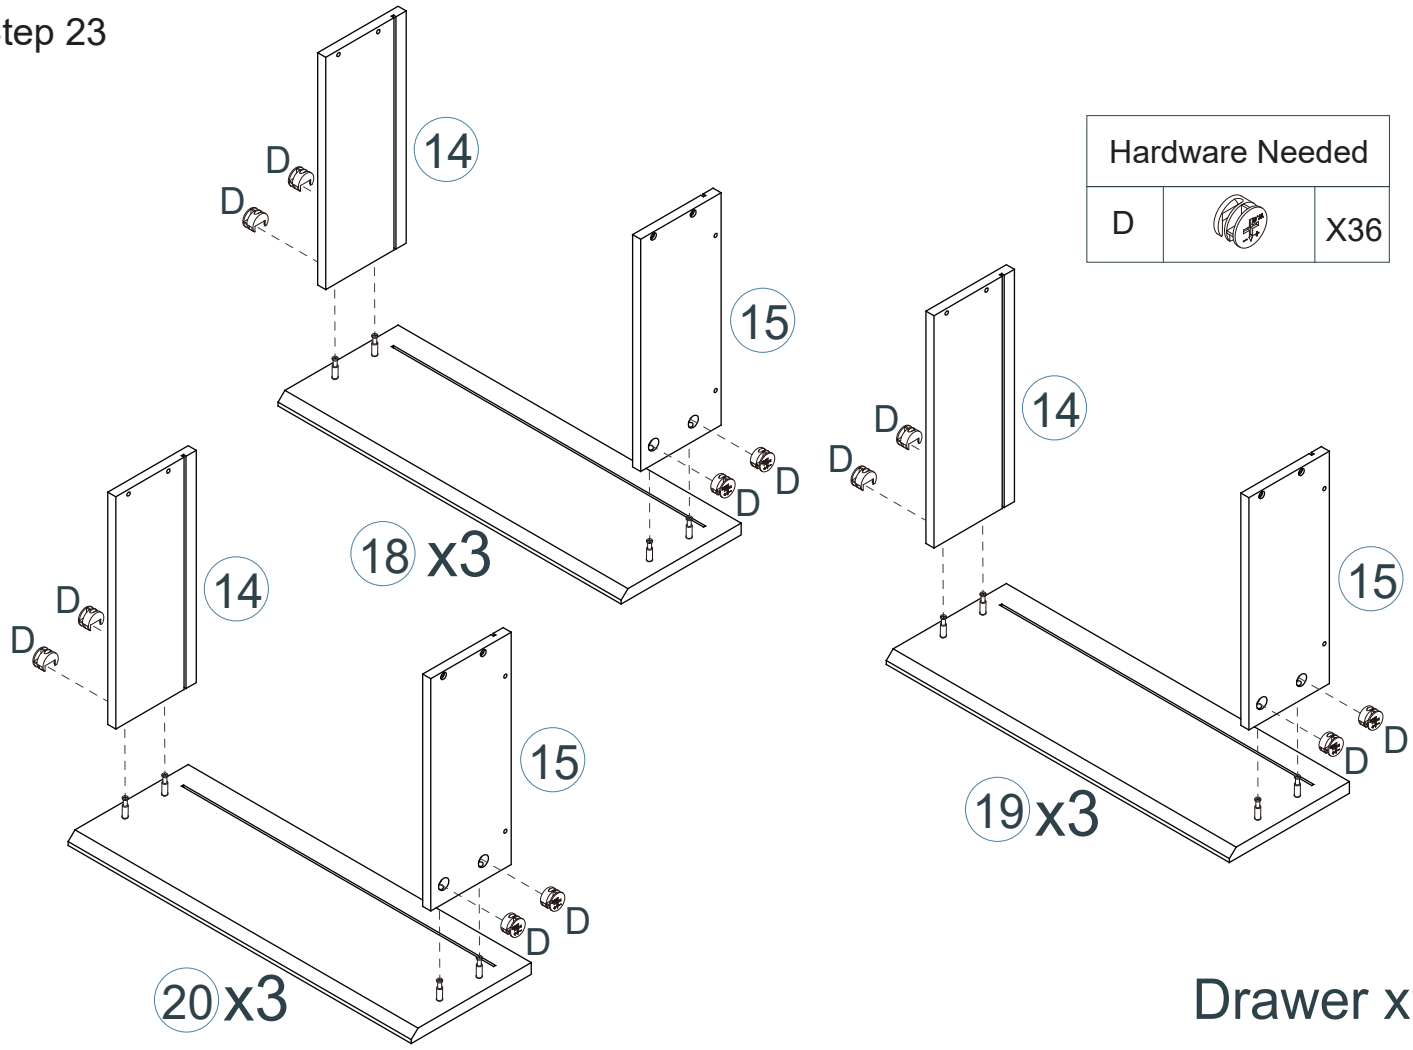

Hardware Needed		
D		X36


Drawer x9


Step 24

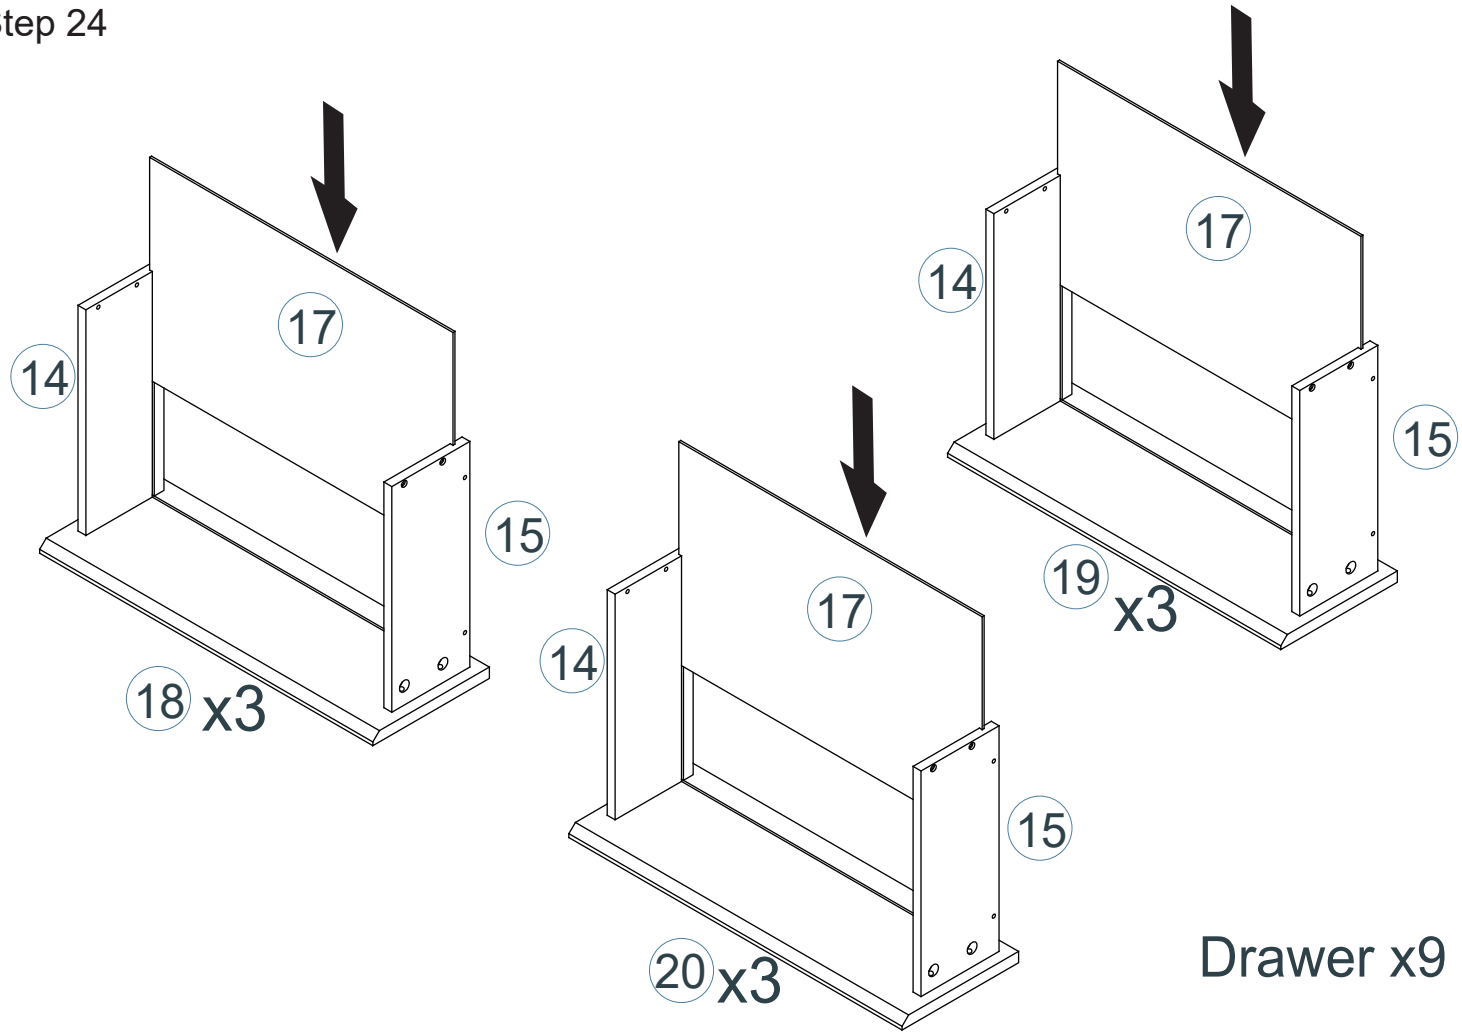


Drawer x9

Step 25

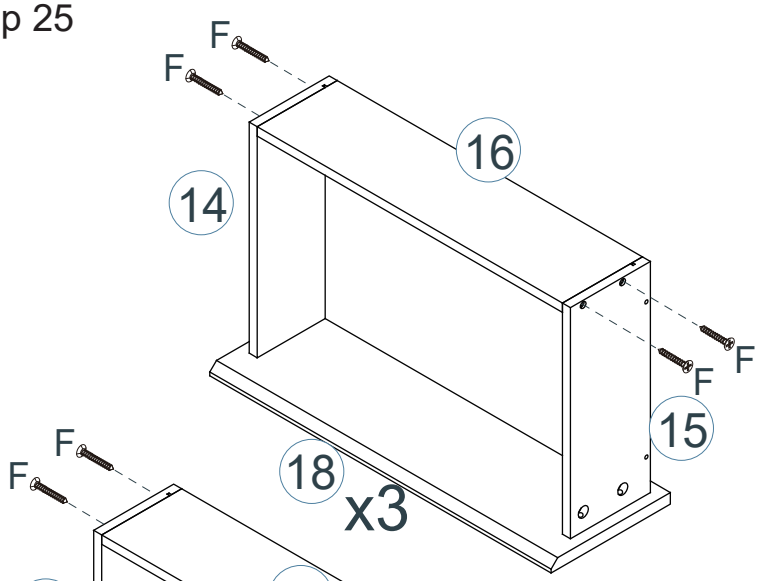

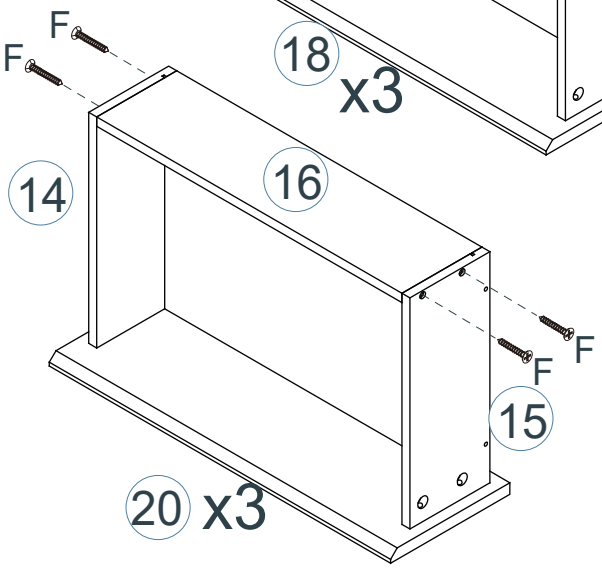



Hardware Needed		
F		X36

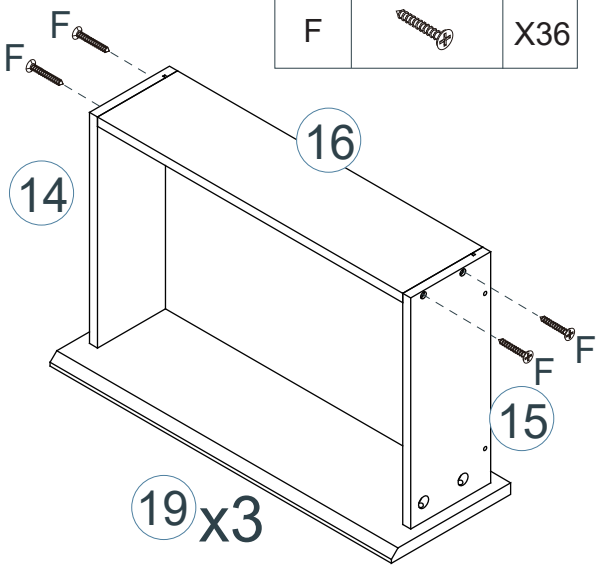


Drawer x9

Step 26

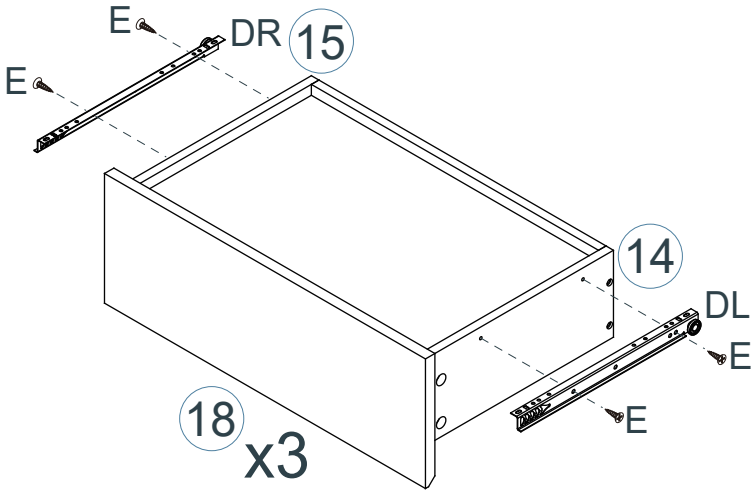


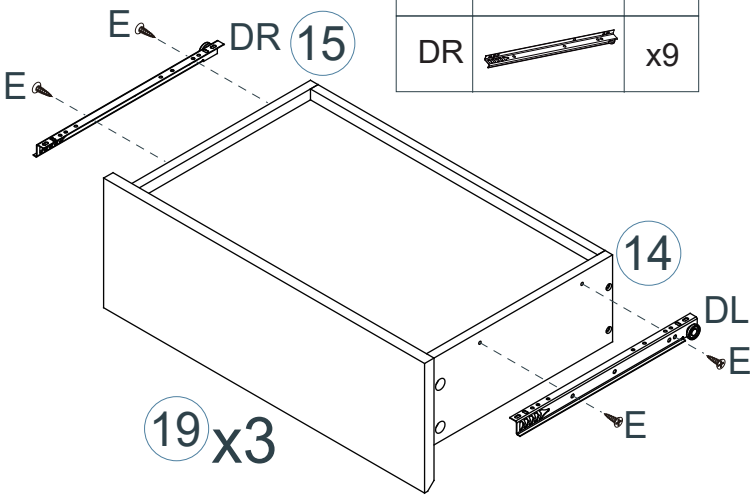

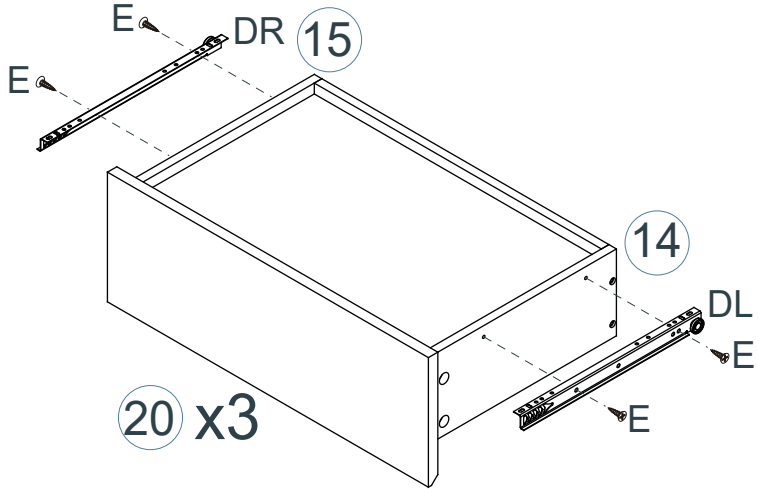


Hardware Needed		
E		x36
DL		x9
DR		x9

Drawer x9

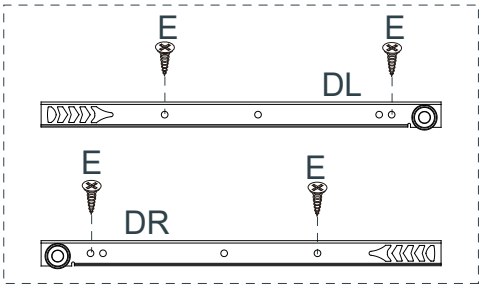

Step 27

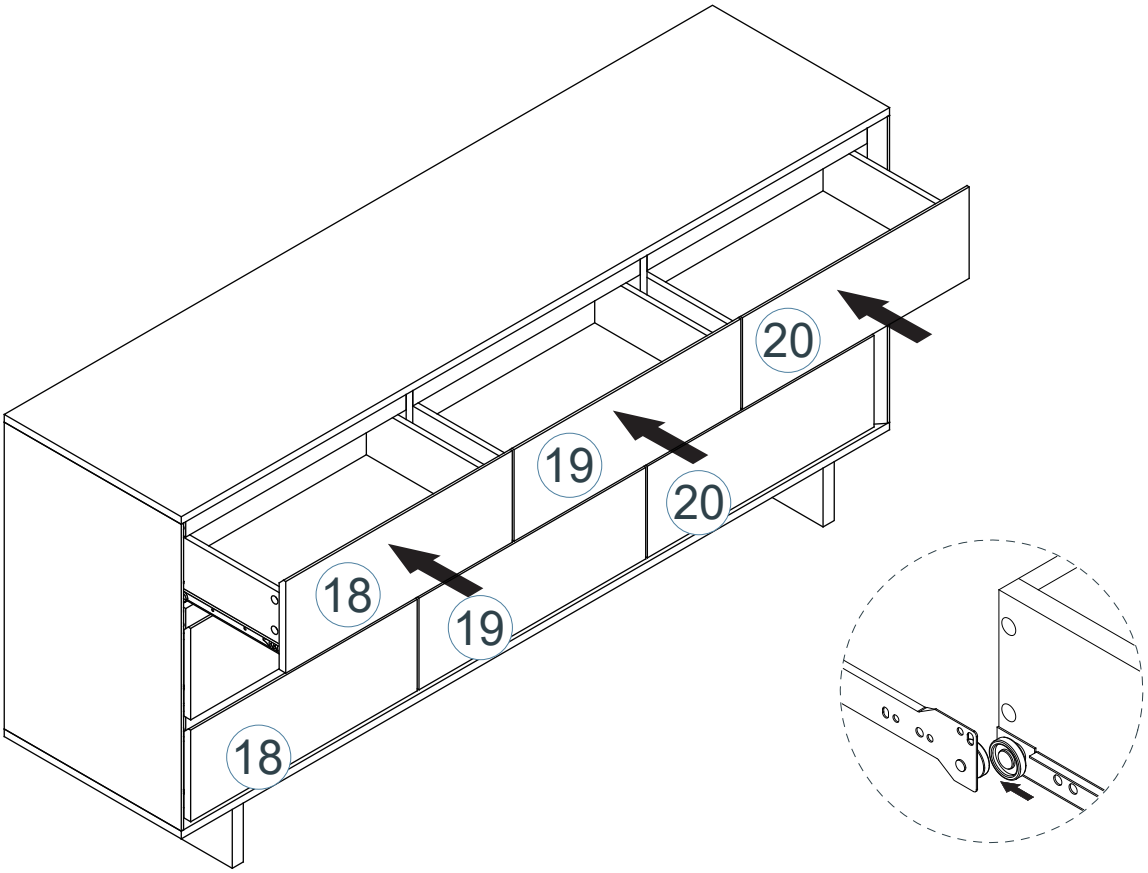

Step 28

