
## Laurent C/E King Assembly Instructions

Hardware List includes factory installed bolts and washers for side rails attachment.

A	В	С	D	Е	F	G	I	J	K	R	T
<b>⑤</b> (Φ6*15MM	@30MM	@MMM @8*60MM	<b>Ο</b> φ6ΜΜ	<b>Θ</b> <sub>φ8MM</sub>			φ8MM	9	Φ8*80MM	@1000000 @8*70MM	<b>⊚</b>
8PCS	0 PCS	4PCS	16PCS	14PCS	4PCS	4PCS	1PC	8PCS	2PCS	8PCS	8PCS

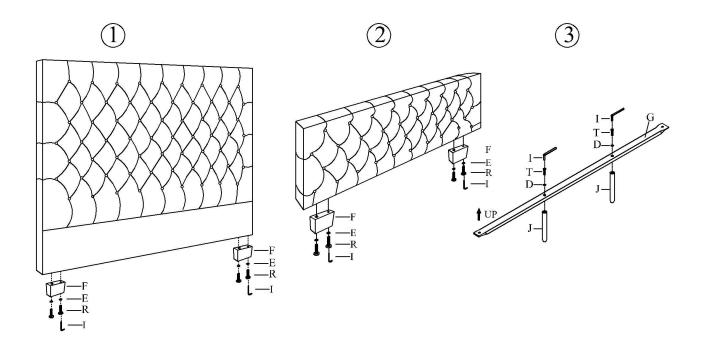

### Step#1

Retrieve feet and hardware from HB in zipper. Attach bed feet (F) to the headboard using Wrench (I), Bolt (R) and Washer (E).

## Step#2

Attach bed feet (F) to the footboard using Wrench (I), Bolt (R) and Washer (E).

### Step#3

Attach steel center support legs (J) to the metal slat (G) using Wrench (I), Bolt (T) and Washer (D). Center support legs (J) are cable tied to the center support rails during shipment.


#### CONGRATULATIONS ON YOUR NEW BED PURCHASE

~Warning: do not move bed after final assembly as it may result in damages to floor and/or bed.~

# Laurent C/E King Assembly Instructions

Hardware List includes factory installed bolts and washers for side rails attachment.

A	В	С	D	Е	F	G	Ι	J	K	R	T
<b>⊚</b>	@JJJJJJ @8*30MM	@8*60MM	<b>©</b> Ф6ММ	MM8®			φ8MM	9	©8*80MM	@IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	<b>⊚</b>
8PCS	0PCS	4PCS	16PCS	14PCS	4PCS	4PCS	1PC	8PCS	2PCS	8PCS	8PCS

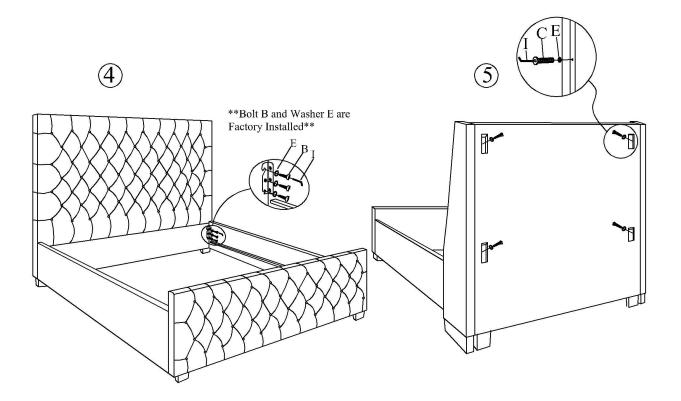

## Step#4

Attach side rails to headboard and footboard using Wrench (I), Bolt (B) and Washer (E).

## Step#5

Attach wings through HB finger tight, using Bolt (C) and Washer (E).

#### CONGRATULATIONS ON YOUR NEW BED PURCHASE


~Warning: do not move bed after final assembly as it may result in damages to floor and/or bed.~

## Laurent C/E King Assembly Instructions

Hardware List includes factory installed bolts and washers for side rails attachment.

A	В	С	D	Е	F	G	I	J	K	R	T
@IIII @6*15MM	●8*30MM	@8*60MM	<b>©</b> Ф6ММ	MW8®			Φ8ΜΜ	9	©8*80MM	@11111111 @8*70MM	<b>⊚</b>
8PCS	0PCS	4PCS	16PCS	14PCS	4PCS	4PCS	1PC	8PCS	2PCS	8PCS	8PCS



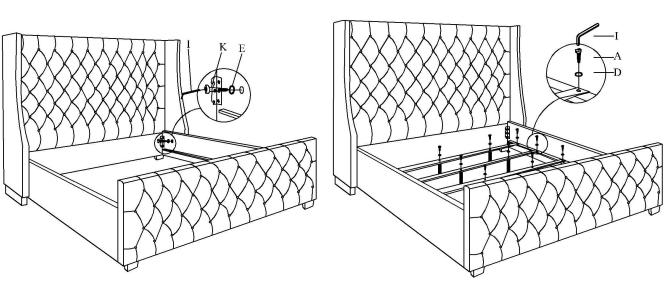

## Step#6

Attach wings through side rail finger tight, using Bolt (K) and Washer (E). Tighten/secure wings(6 bolts) with Allen Wrench until snug.

#### Step#7

Move/place bed into final position in bedroom.

Attach steel slat support system to full length steel side rail support cleats (flat side facing up).

Verify center support legs are perpendicular to the floor for full support.

#### CONGRATULATIONS ON YOUR NEW BED PURCHASE

~Warning: do not move bed after final assembly as it may result in damages to floor and/or bed.~