






# Installation Instructions


Please read the installation details carefully and confirm whether you have received all the accessories. If there are no problems, let’s start installing it!

## Package Contains

Shade Width				
20"-47"	x2	x2	x4	x2
48"-72"	x3	x3	x6	x3

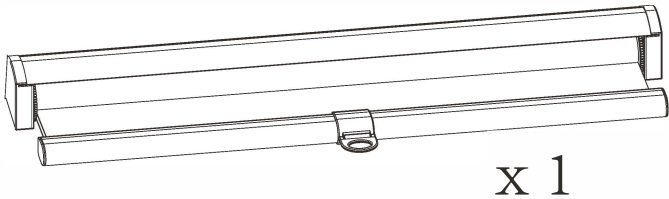


## Confirm installation method

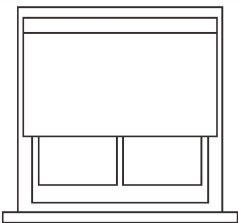


Inside Mount

OR

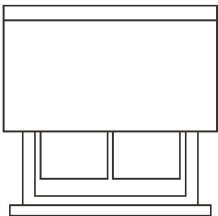


Outside Mount

You can choose "Inside Mount" or "Outside Mount" according to your preferences.

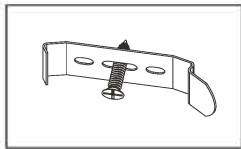

Installed on the top

OR


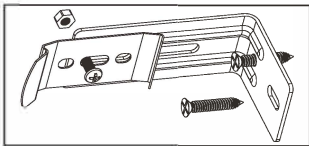


Installed on the wall

If you choose "Inside Mount", you can take the top or wall installation method.  
If you choose "Outside Mount", you can only take the wall installation method.


## Attach the blind

The bracket should be no more than 6 inches from the two sides of the headrail.

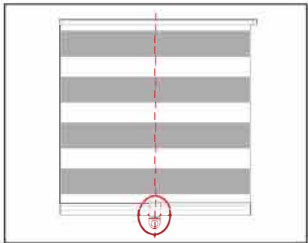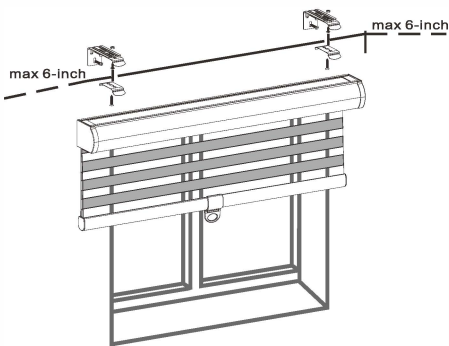


Transparent Hand holder is better put at the middle of bottom rail.

## Tension Ajustment

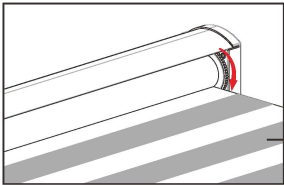

To decrease tension, rotate bearing counter clockwise.

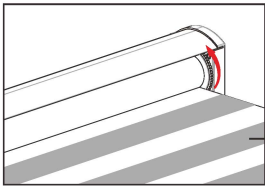

Rotate bearing clock-wise while holding the Aluminum tube.

Care: Wipe the spot with a clean damp cloth, or gently scrub with cold water, not machine washable.

Finally, congratulations on completing the installation.