



HANDLE X1



BRACKETS X2

STOPPERS X4



SCREWS X4




INSTALLATION INSTRUCTION X1



CORDLESS ROLLER SHADE X1

What's in the package

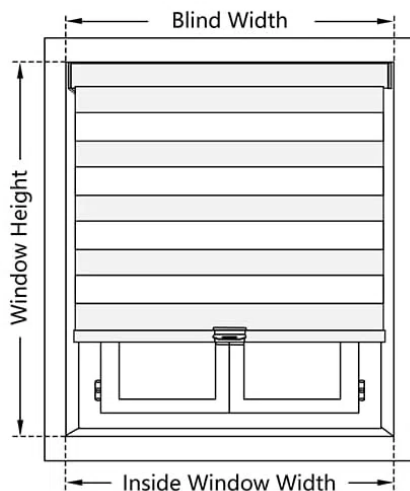

inside Mount

Measurement:

Measure window inner Frame width and length

Mount:

Order Width = Exact window width (or 0-1 inch less)

Shade Height: Works for window less than 72" high

Fabric Width: 1 inch shorter than the order width

Window depth ≥ 3 inch

Example your window meas 23" width and you choose inside mount

Shade Width = $23" + 4"$

Outside Mount

Measurement:


Measure window outer Frame width and length

Mount:

Shade Width = window width + 4" or more

Shade Height: Works for window less than 72" high

Example your window meas 23" width and you choose outside mount Shade Width = $23" + 4"$

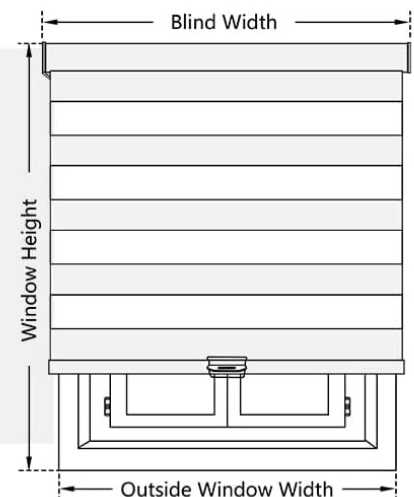

How to choose the size of shades