


Double unit frame kit

Step 1. Begin by locating the base spacers, These spacers will have the holes drilled in them to mount down to the base of the cabinet. The front spacer will have a rounded edge. Start by aligning the spacer to the pre drilled holes on the side panels in the bottom corners. Repeat this step with the top spacers. **(Bag A) X 8 screws**


Top spacers x2

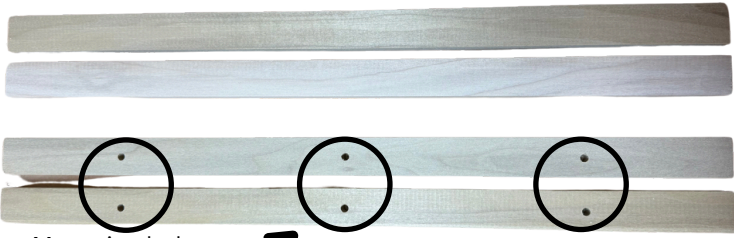

Mounting holes to fasten frame to base of cabinet

Bottom spacers x2

Side panels x2

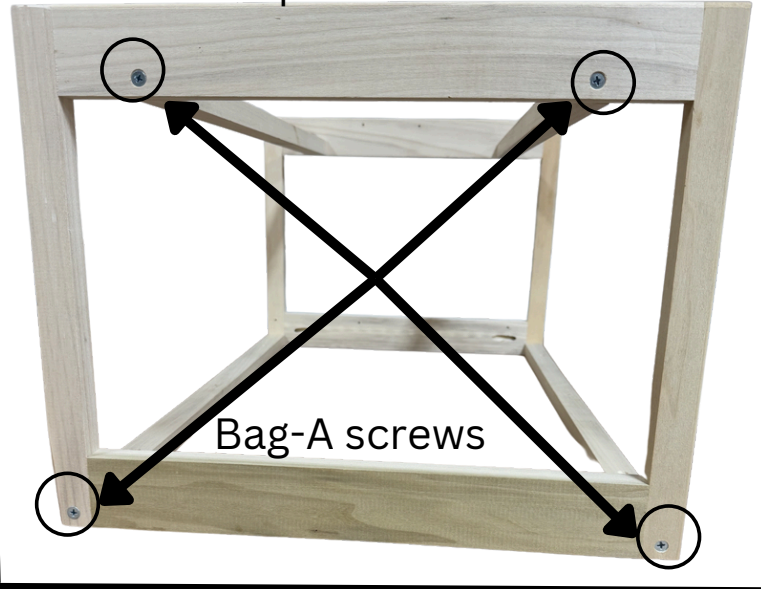

Bag-A screws

Step 2. Drawer guide installation

The drawer guides are located on the drawers, to remove guides from the drawers, start by pulling the guide all the way open, locate the small black lever on each side, one side will pull up while the other side pushes down, while compressed, pull the guide out to release from the drawer. Attach the bottom drawer guides with provided screws, 3 on each side in any of the slotted holes, front, middle, and back **(Bag B)**. There are no pre drilled holes. Fasten screws directly into the wood. Place drawer guide on top of the spacers, up against the side panel. Line up the front of the drawer guide with the back of the rounded edge at the front of the frame. Repeat top and bottom. **See illustration below**



Release lever

Do not use very front hole during guide installation




Step 3. Once drawer guides are attached to the frame, you are ready to place the frame in the cabinet. Using the pre drilled holes in the base spacer, fasten down with the provided screws from **Bag C**

(Short screws in front, long screws in back)

Top spacers

No mounting holes

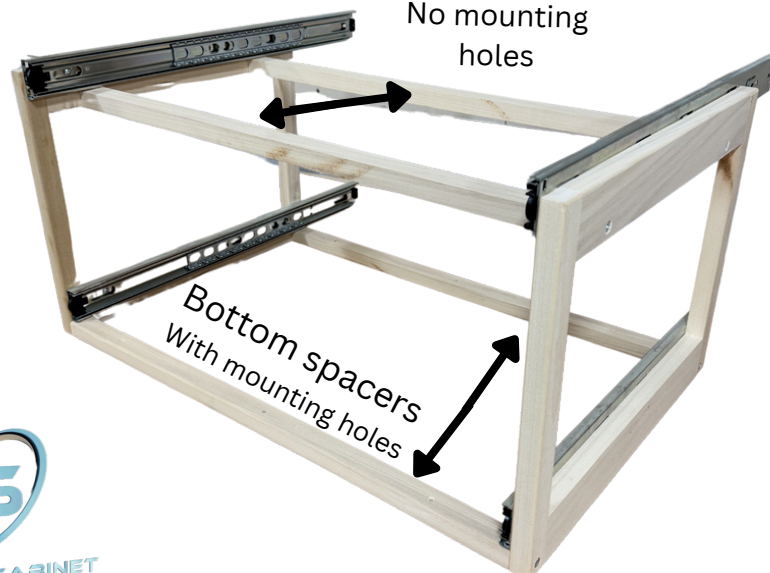

Bottom spacers
With mounting holes

*For assistance with assembly reach out to us at 936-588-3402
Watch our assembly video on Interiorcabinetsolutions.com*