



Sideboard

Assembly Instructions

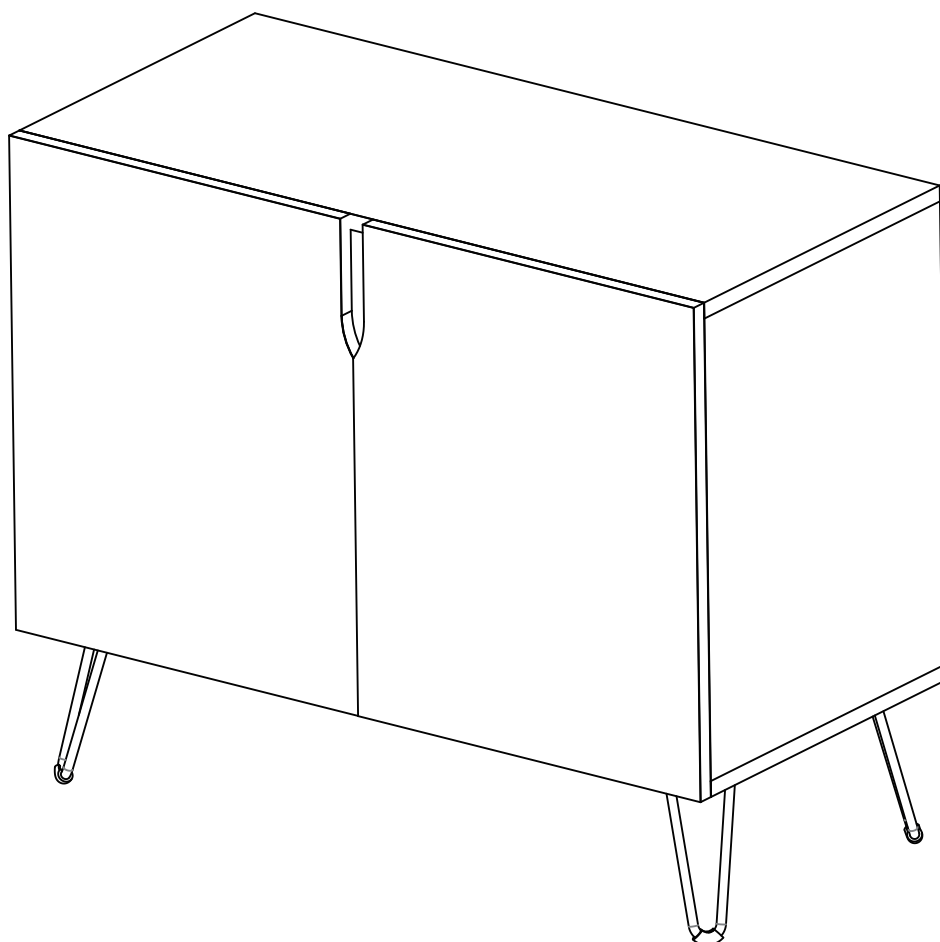


General Assembly Guidelines











- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The two main types of hardware used to assemble this product are screws and bolts.
- V. A Phillips head screwdriver is required for the assembly of this product.

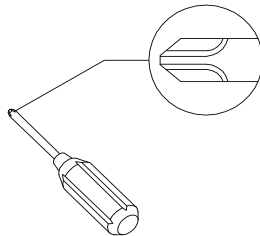







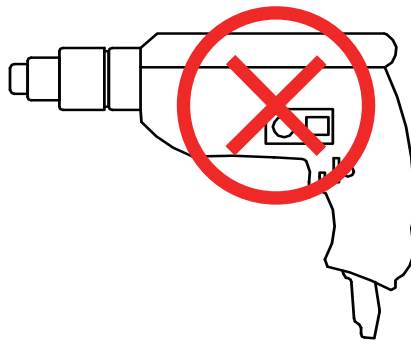







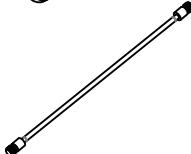
- VI. Power tools should not be used to assemble this product.

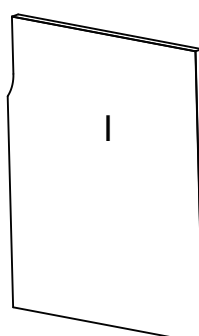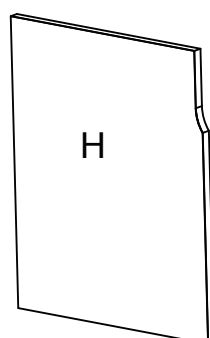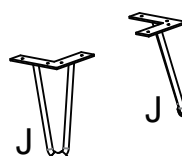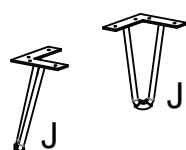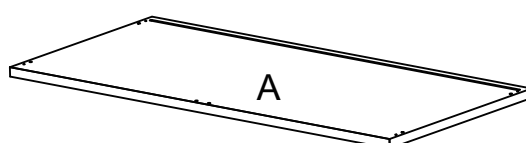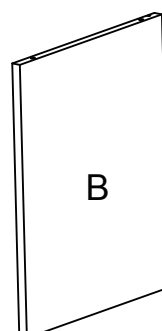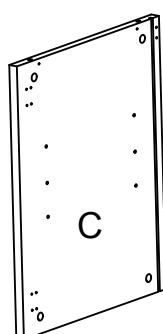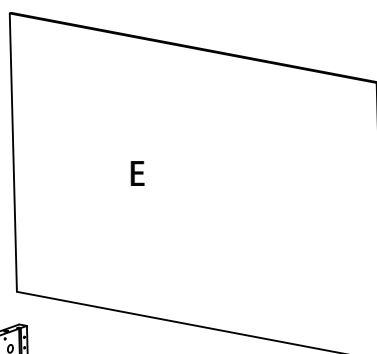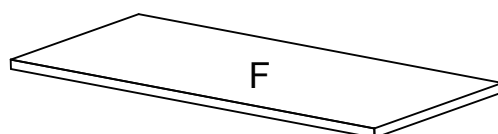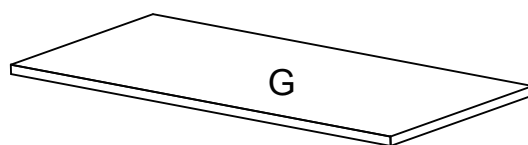


Parts List



Hardware List

1		Ø6x41mm	Cam bolt	12 pcs
2		Ø15x11mm	Cam lock	12 pcs
3			Corner Brace	4 pcs
4			Door Hinge	4 pcs
5		Ø4x16mm	Screw	32 pcs
6		Ø6x10mm	Bolt	16 pcs
7		M 4	Hex Key	1 pcs
8		Ø4x30mm	Screw	16 pcs
9		10.5x16mm	Shelf holder	1 pcs
10		Ø3x15mm	Corner Brace	4 pcs
11		Ø4x18mm	Screw	4 pcs
12			Ball Bolt	4 pcs
13		Ø6x52mm	Screw	4 pcs
14		Ø8mm	Plastic Expansion Bolt	4 pcs
15			Wire	2 pcs

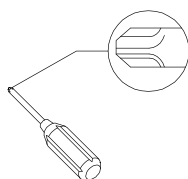


**Philips head screwdriver required for assembly
(not included)**

The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.


Step 1

Install the cam bolt of the base plate and panel with the grooved side up on the floor.

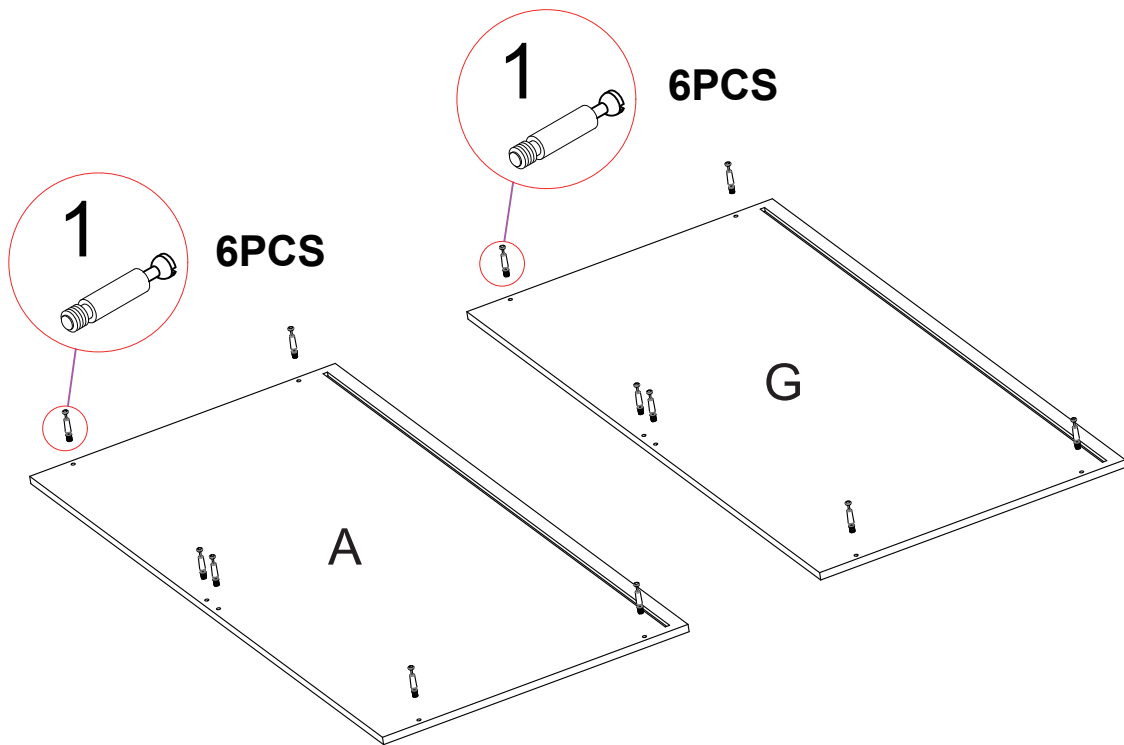


Step 2

Place the holes in the side panel and front bezel with the cam bolt on the bottom plate, then from the side install the cam lock, the arrow of the cam lock is in the opposite direction to the screw hole.

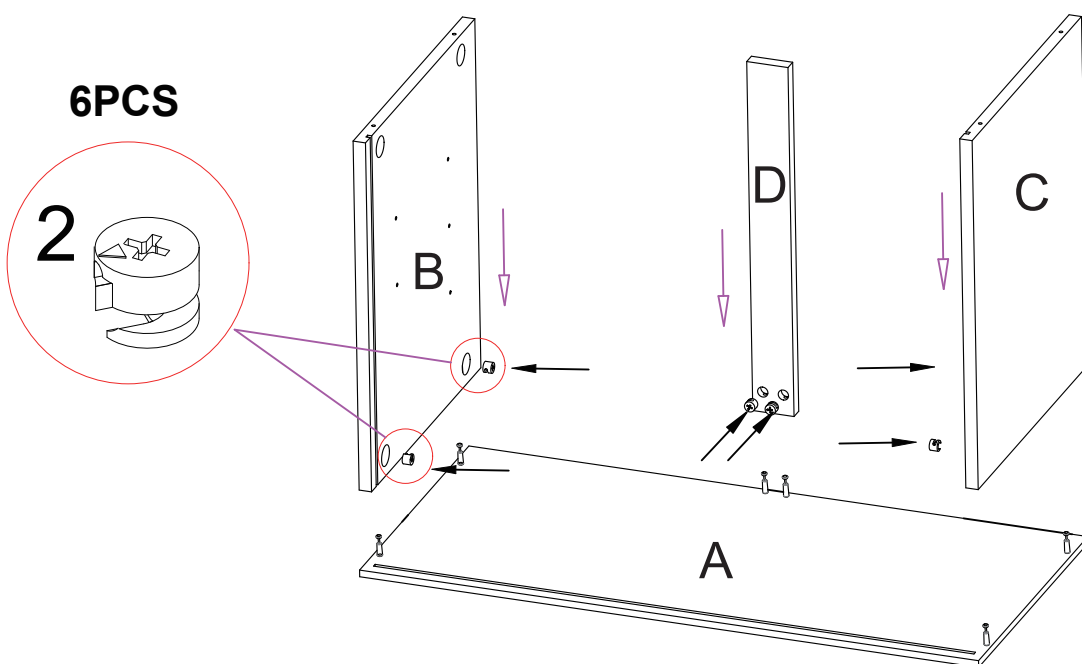


Step 3

Gently insert the back panel along the groove of the side panel, align the slots on the bottom plate and push them all the way in.

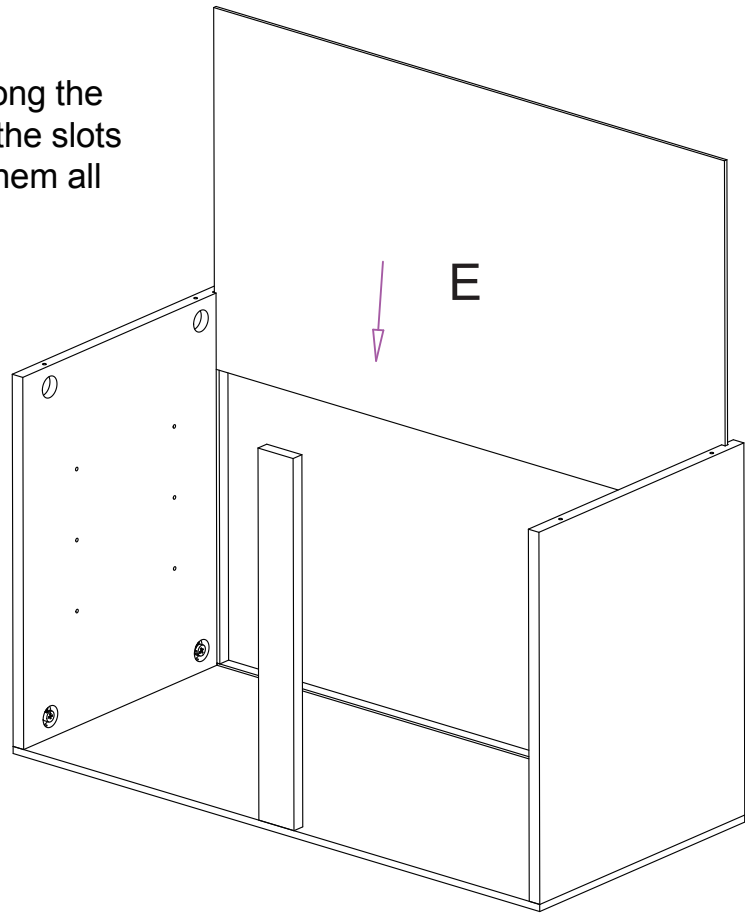


Step 4

Push the round end of the shelf holder into the hole at the same level as the side plate and insert it into the shelf plate.

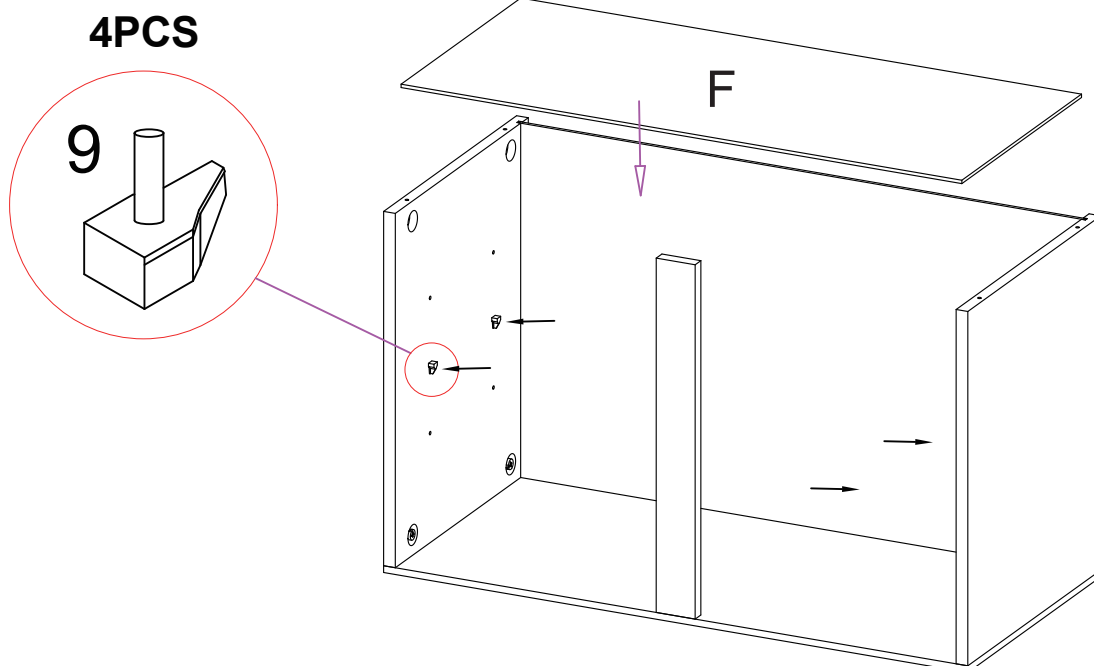


Step 5

Align the holes of the panel with the side panels and the cam bolt of the front bezel, press down gently to align the slot the back plate is pressed into the end. Then locate the marked holes in the side panels and install right angle connection buckle.

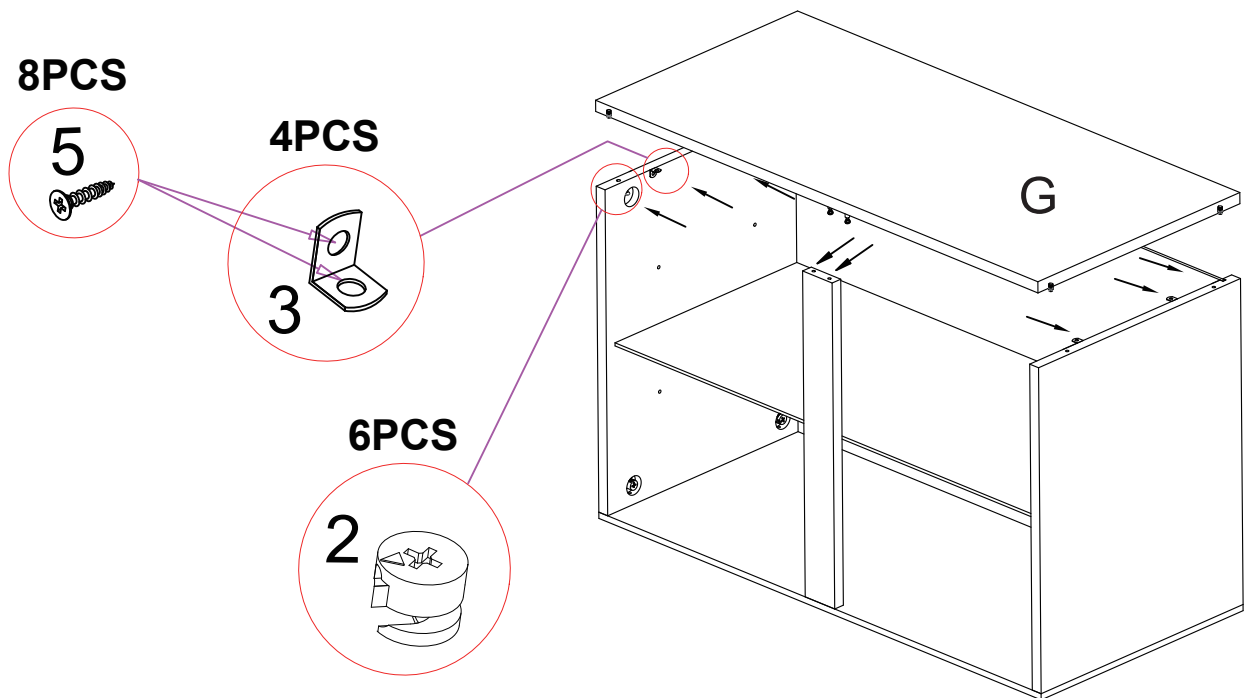

Step 6


Install one side of the door hinge with the large hole in the door panel, then align the marked hole position of the side panel and install the other side.

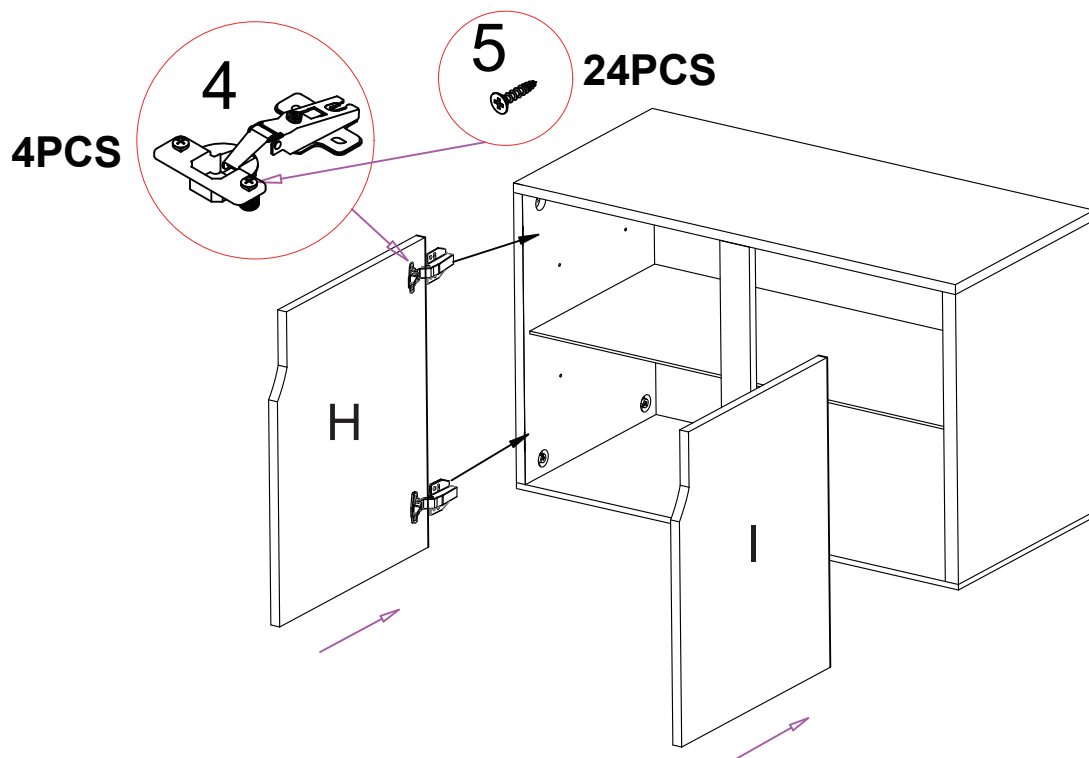

Step 7


Turn the cabinet over to make the bottom side is facing up, and the L-shape the feet are placed in the corresponding metal holes, screws silk, after completing the installation of the feet.

Locate the bottom plate on both sides four holes, mounting reinforcement screws, and then reset cabinet orientation.

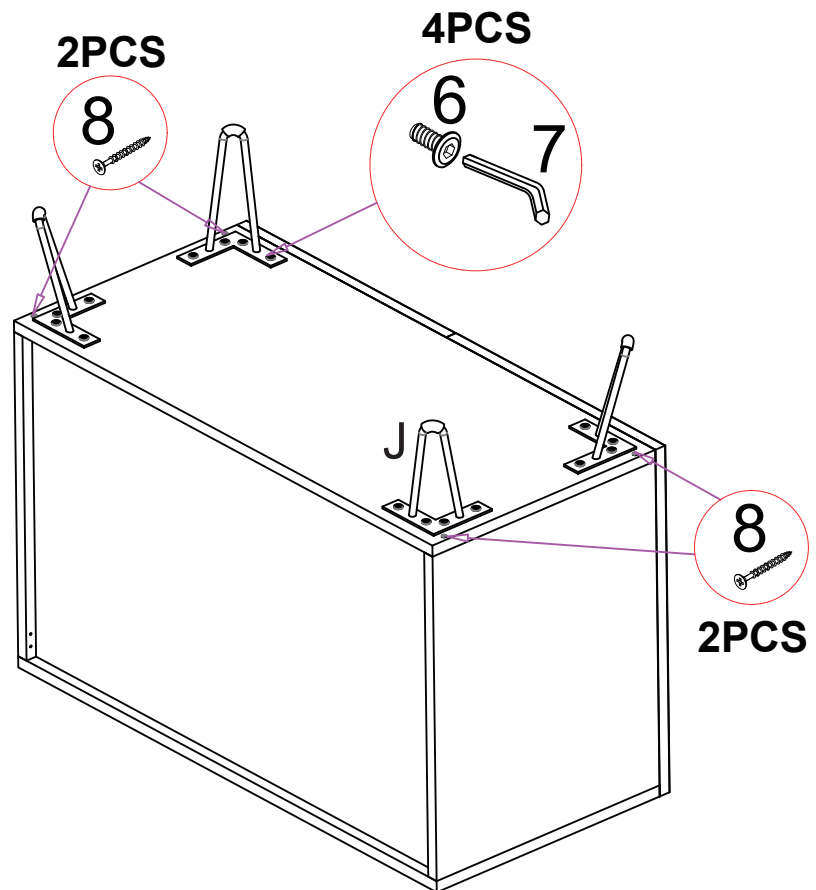

Step 8

1. The ball nut is screwed on one end of the WIA rope through the fixing baseplate, and then the fixing baseplate is installed in the marked hole of the side panel.
2. The other end of the WIA rope passes through the fixed bottom plate and screws on the ball nut. According to the hole spacing of the fixed base plate, open it in advance on the wall 8 mm hole, drive in the expansion pellet, and use screws to mount the fixed bottom plate on the wall.

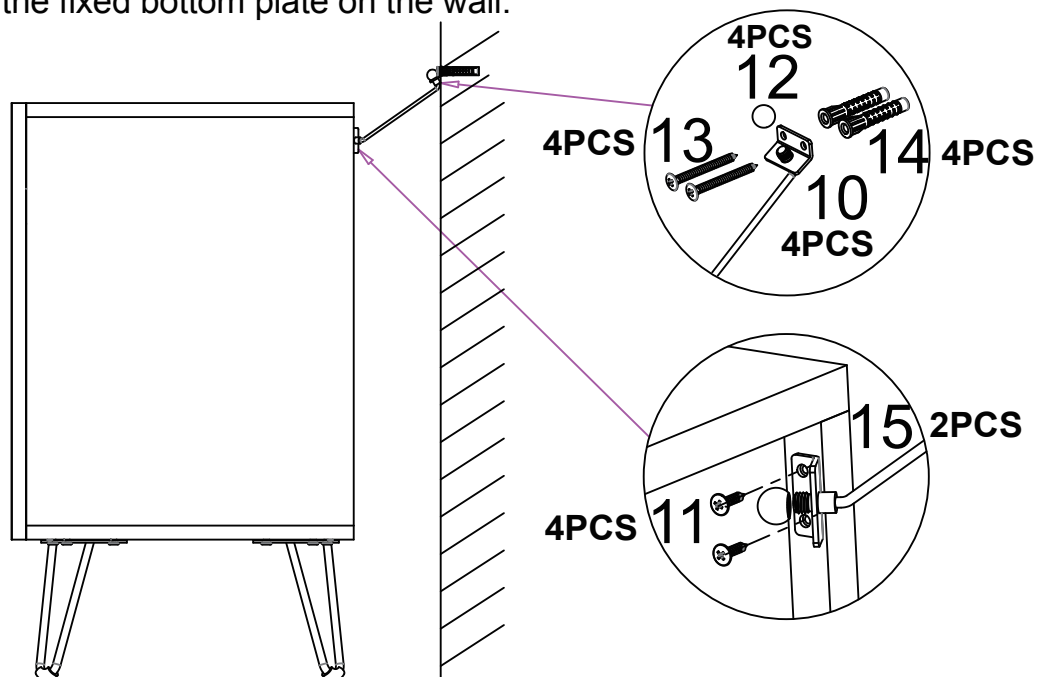

Step 9

Final Assembly

