


Day Bed With Front Guard Rail Twin Size - Panel - With Drawers

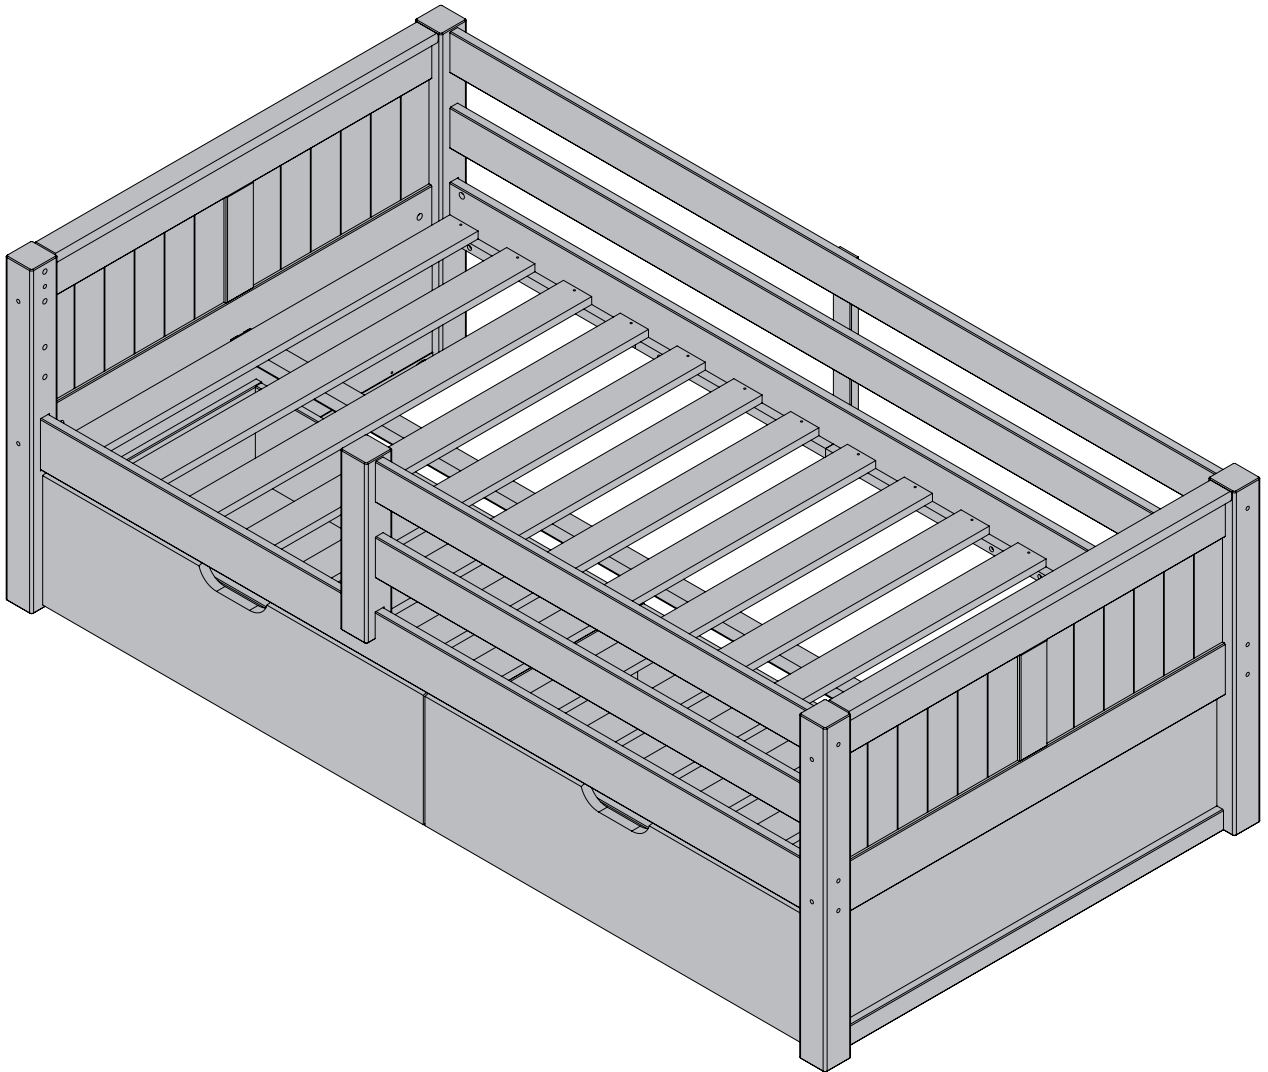

Assembly
02 people



Time
1:30 hours approximately




Tools
philips key, rubber hammer



Volume quantity
01 boxes




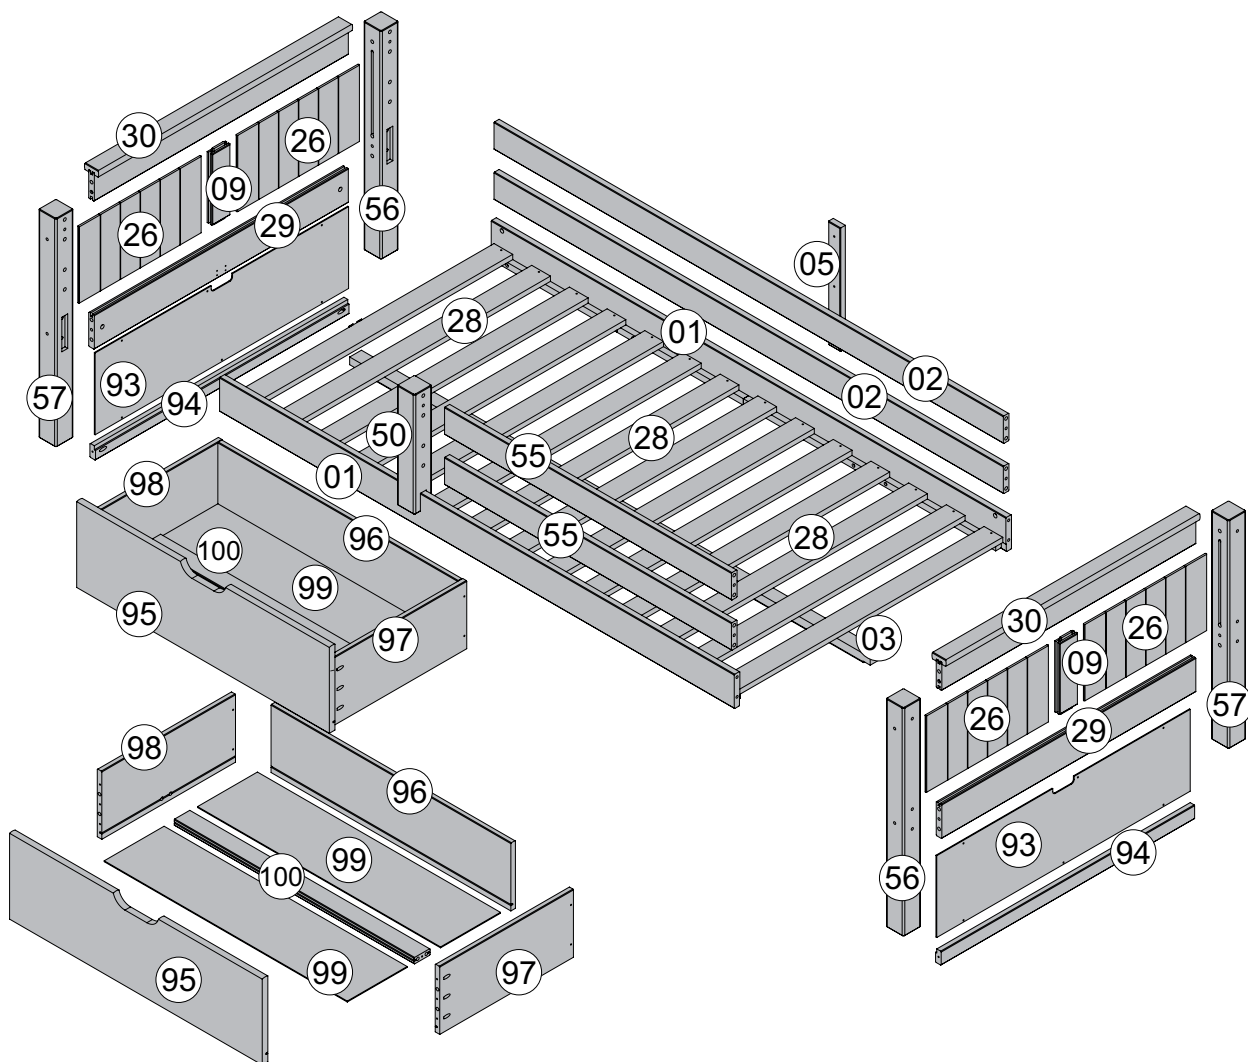








Parts list for assembly. Please confirm all parts available before assembly




ATTENTION


- * Read and observe carefully all the assembly instructions before beginning assembly.
- * The assembly of the product must be done on a clean and flat surface. We suggest to use the packaging to cover the floor to avoid damages.
- * The screws must be tightened periodically.
- * Avoid contact with sharp objects.
- * Avoid banging pieces together.

Hardware list for assembly.
Please confirm all hardware available before assembly



				SPARE	
A		$\varnothing 3/8" \times 1' 9/16"$	44x	+	02x
B		$\varnothing 1/4" \times 4' 1/4"$	16x	+	01x
D		$\varnothing 5/16"$	02x	+	01x
E		$\varnothing 3/8"$	08x	+	01x
F			01x	+	01x
G		$\varnothing 1/4" \times 3' 7/8"$	04x		
I		$\varnothing 1/8" \times 1' 3/8"$	61x	+	04x
J			02x		
M		$\varnothing 1/8" \times 3/4"$	40x	+	03x
T		$1' 5/16"$	08x		
AA		$\varnothing 1/4" \times 7/16"$	16x	+	02x
BH		$2' 3/4"$	02x		

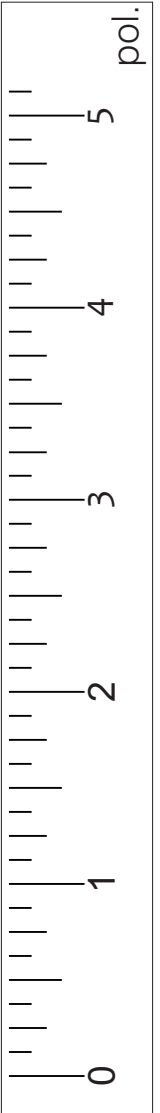


Step - 01

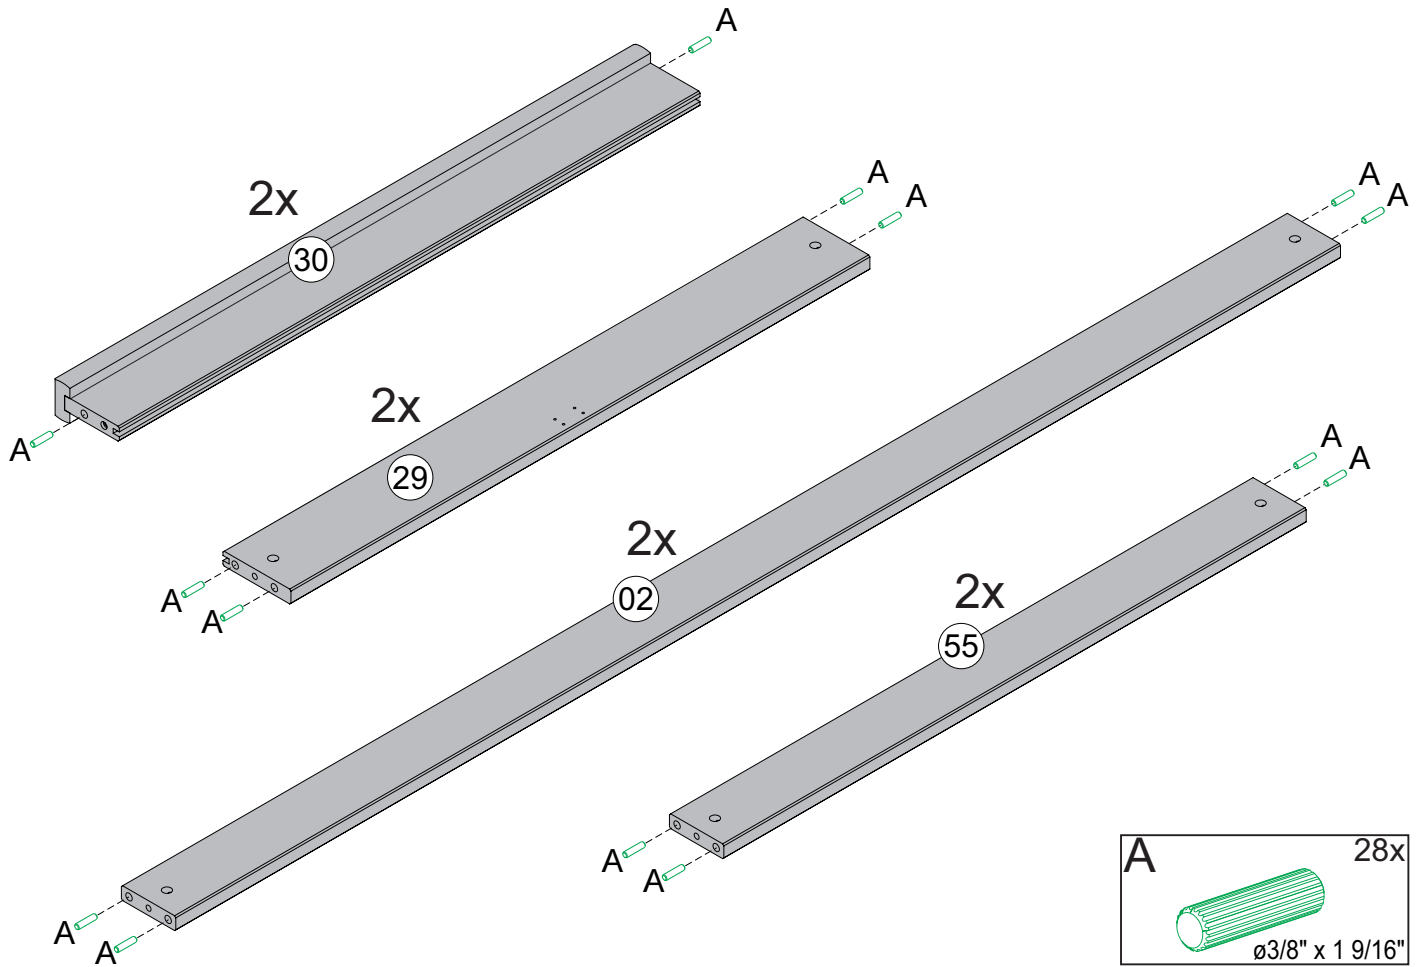


Step - 02

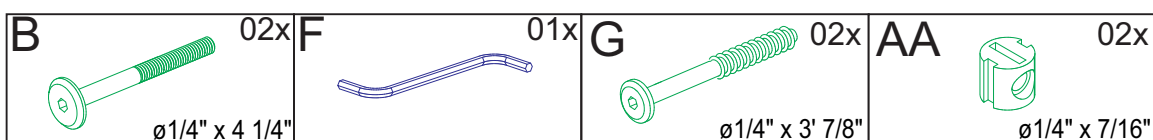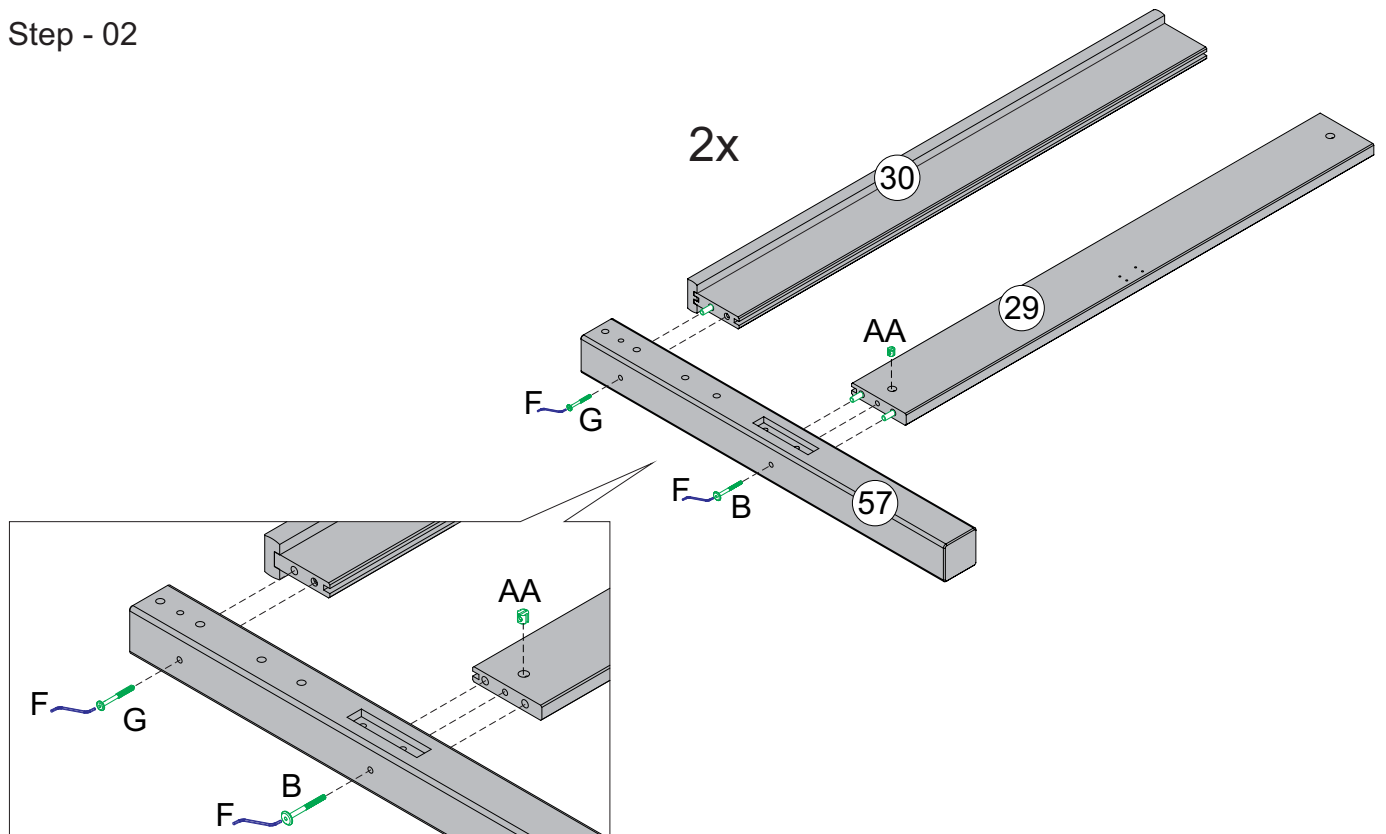




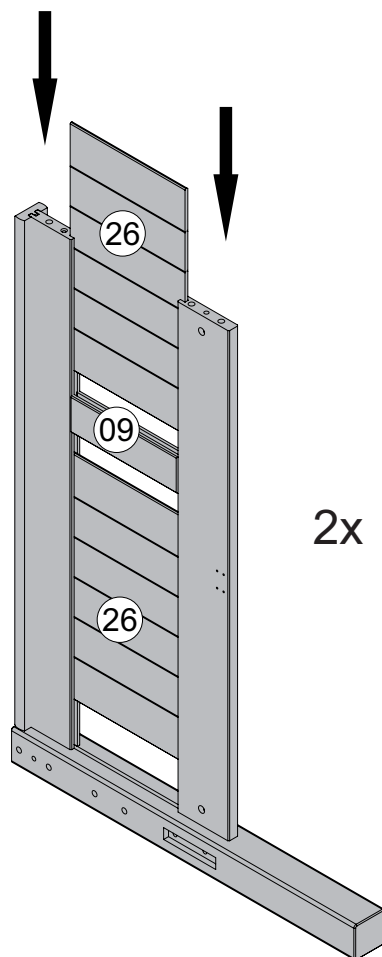


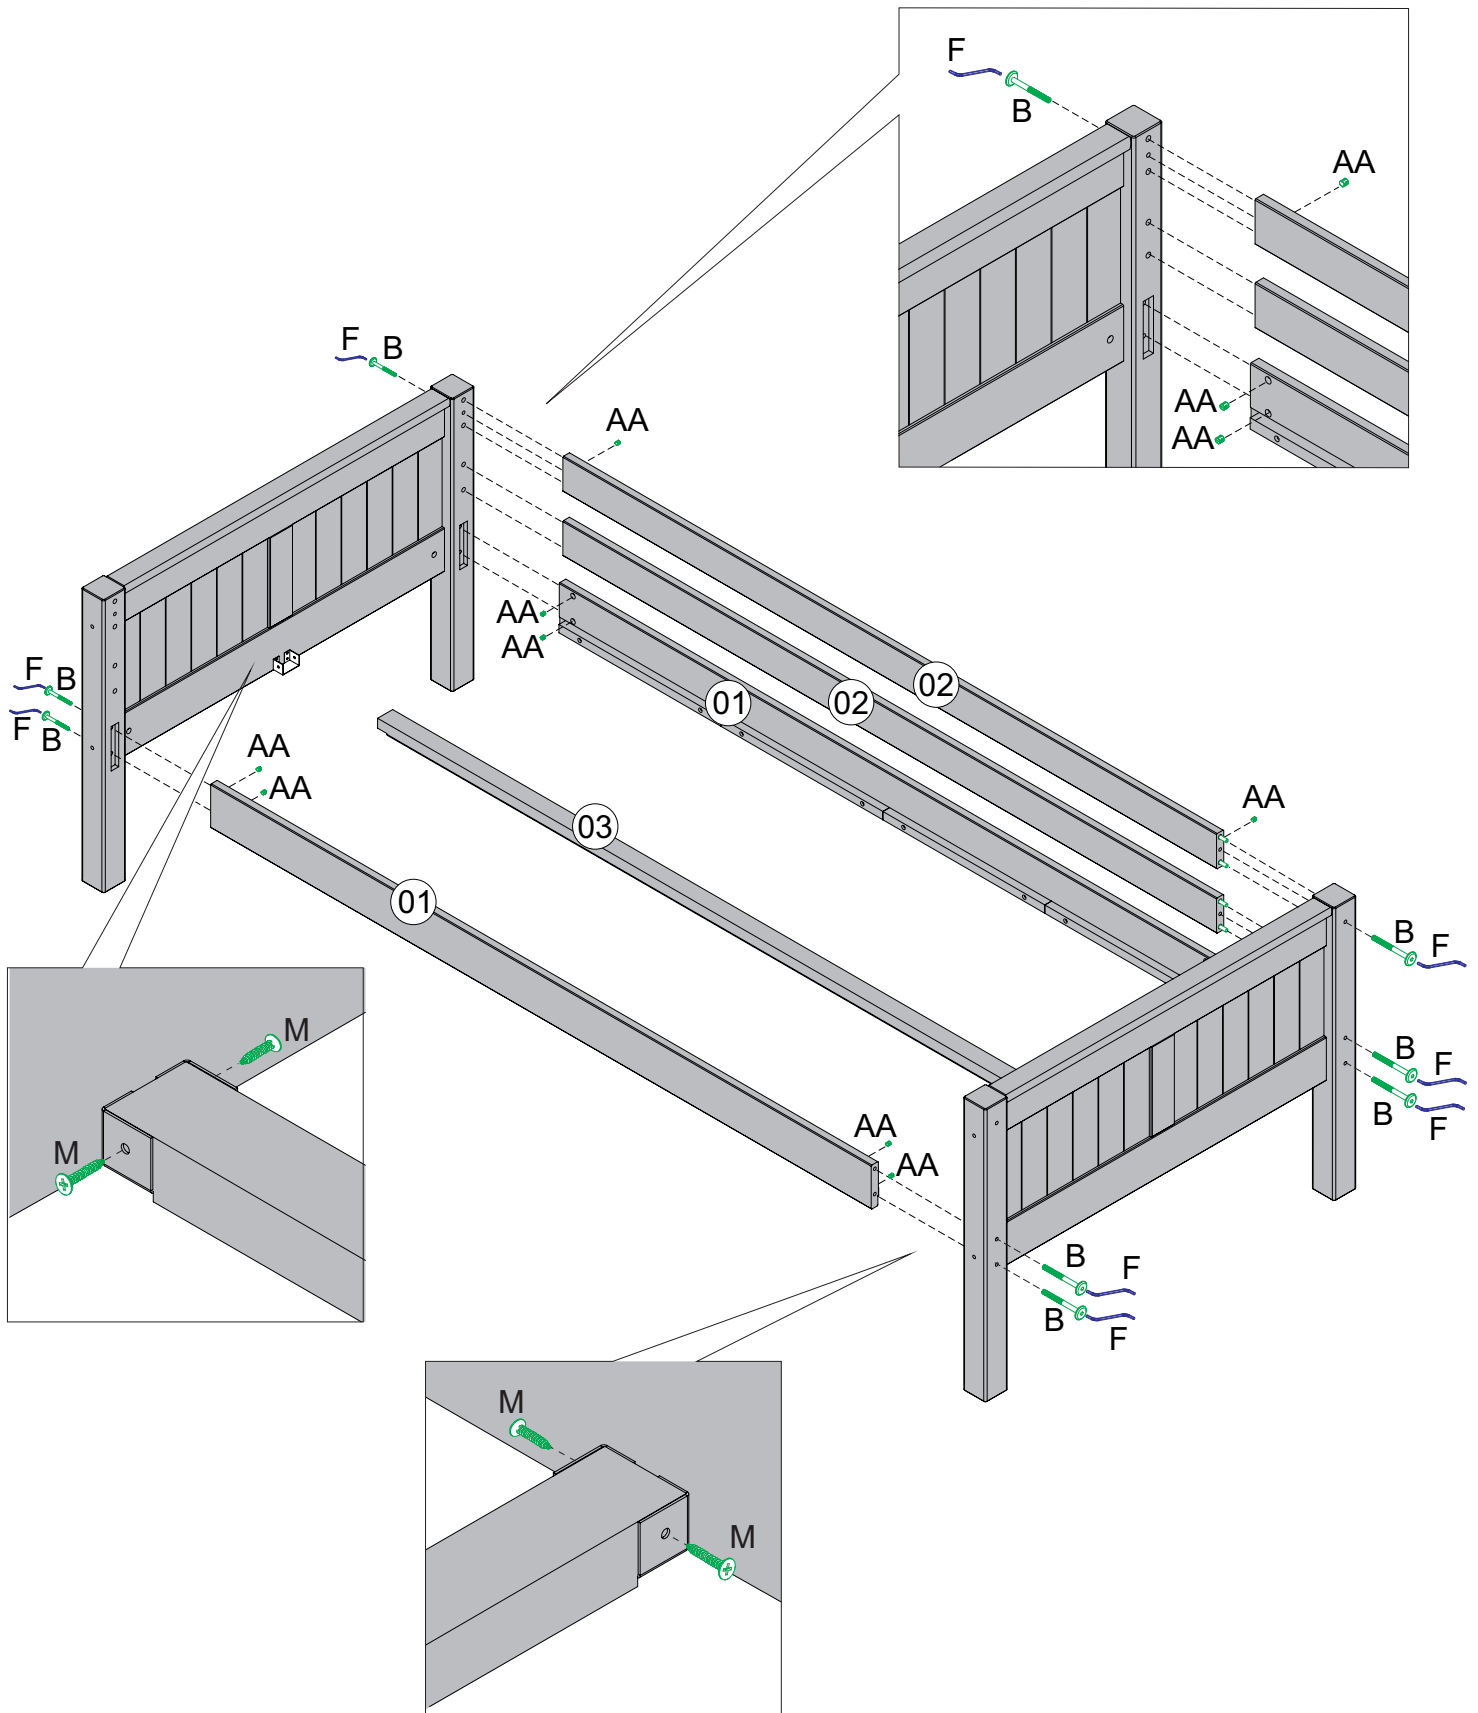
Step - 03




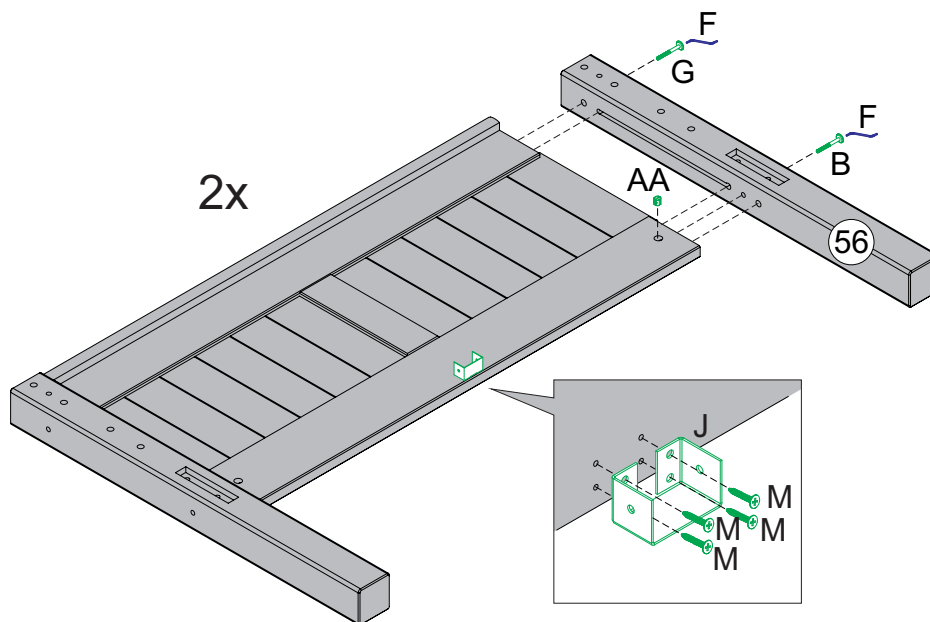


Step - 04





<p>B 02x</p>  <p>Ø1/4" x 4 1/4"</p>	<p>F 01x</p> 	<p>G 02x</p>  <p>Ø1/4" x 3' 7/8"</p>
<p>J 02x</p> 	<p>M 08x</p>  <p>Ø1/8" x 3/4"</p>	<p>AA 02x</p>  <p>Ø1/4" x 7/16"</p>





B  10x $\phi 1/4" \times 4 1/4"$	F  01x 	M  04x $\phi 1/8" \times 3/4"$	AA  10x $\phi 1/4" \times 7/16"$
---	--	---	---


Step - 06

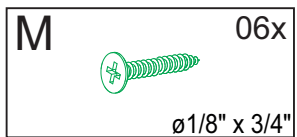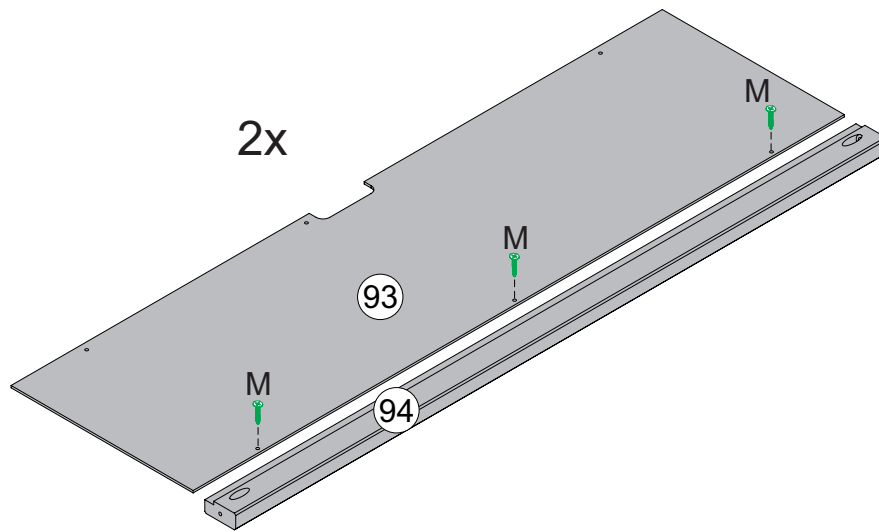


Step - 07

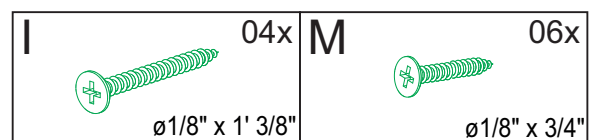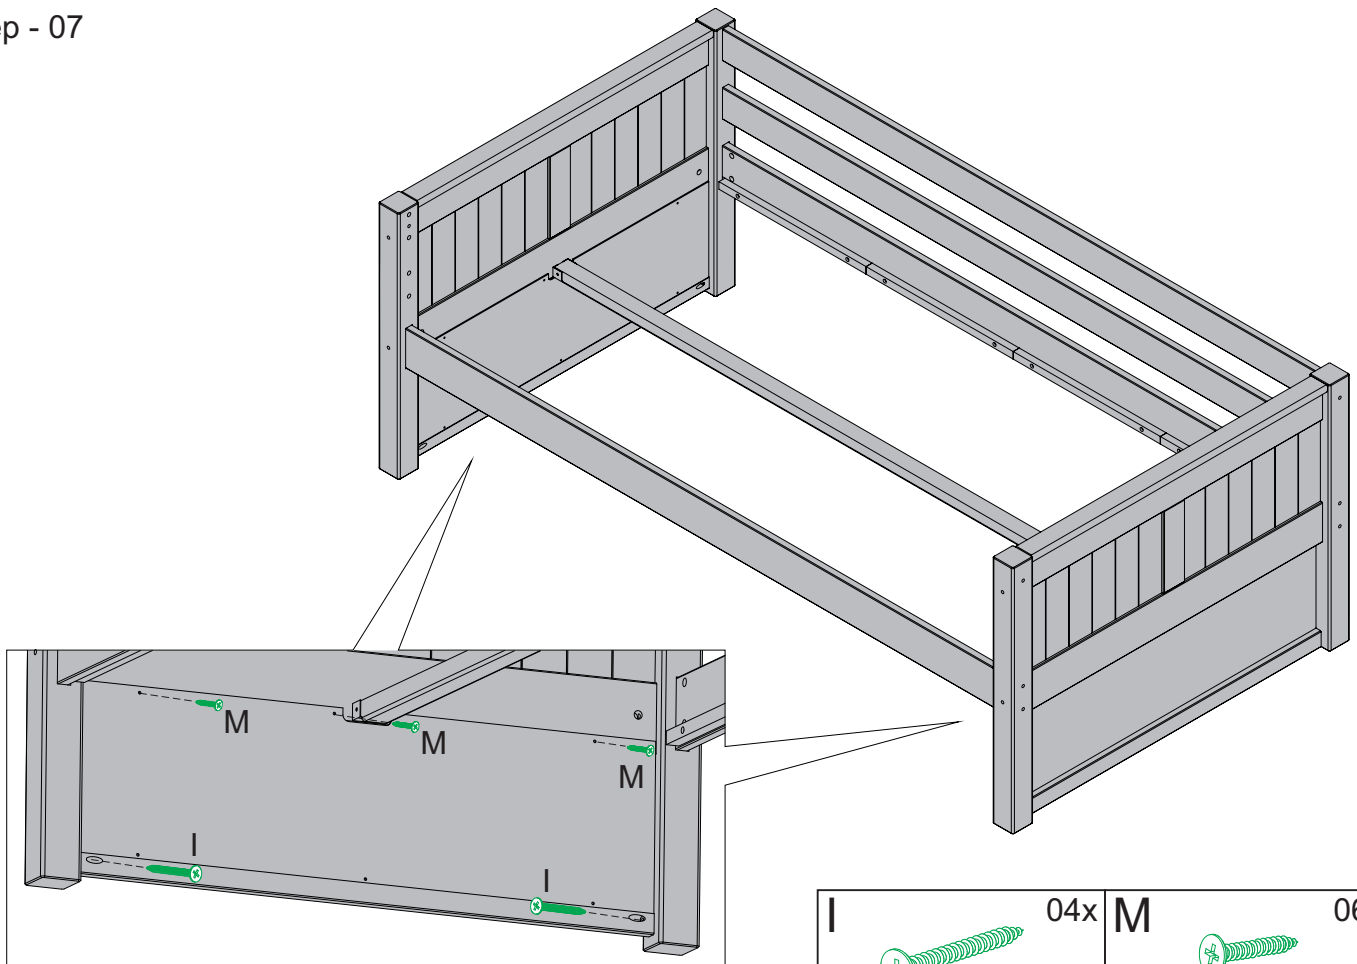



Step - 08

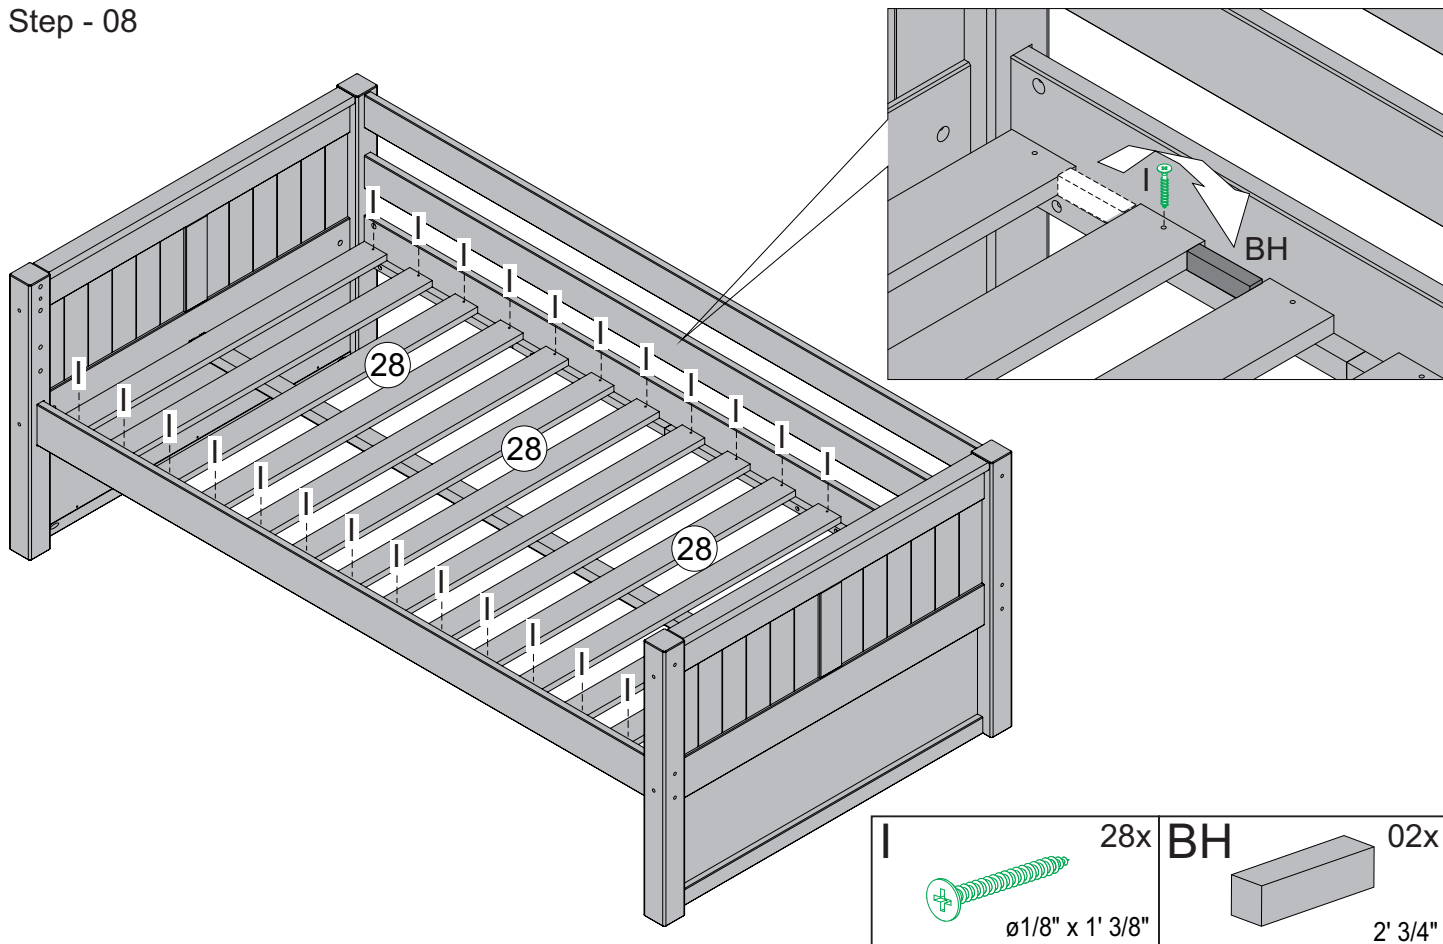



Step - 09

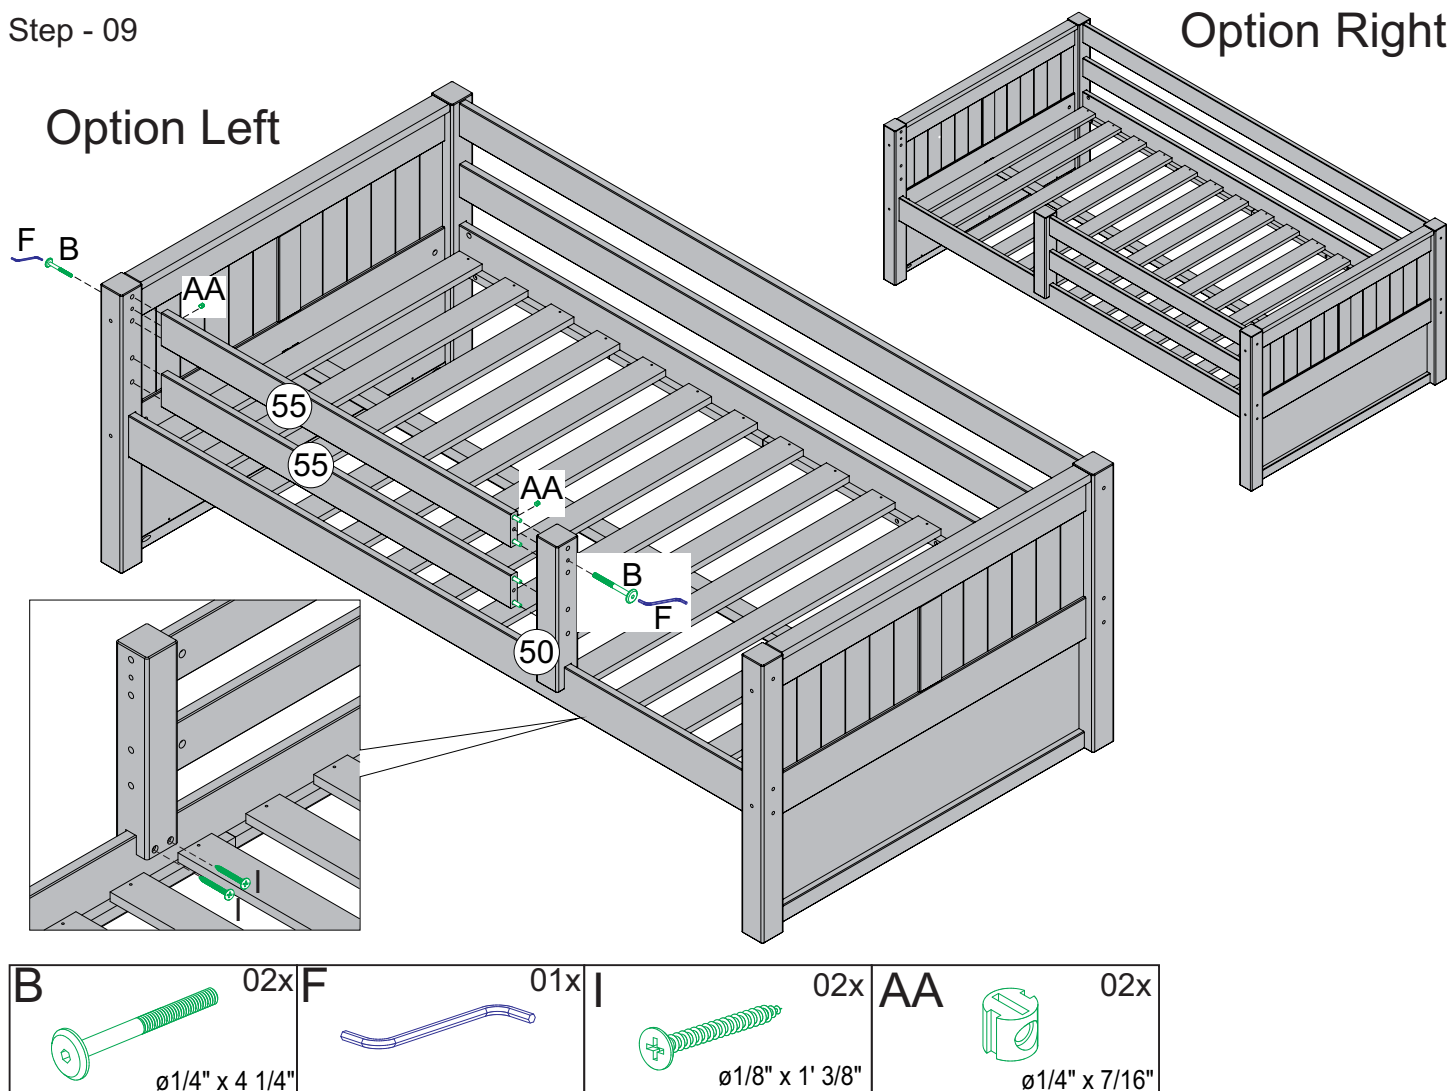



Step - 10

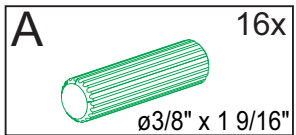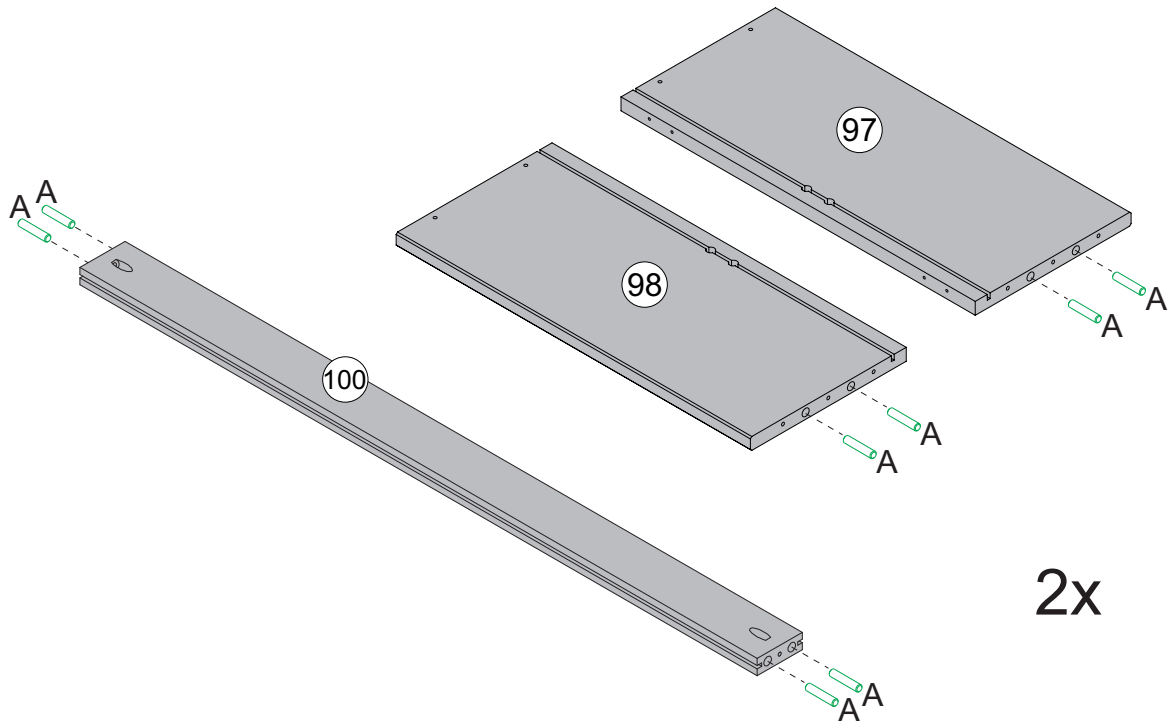



Step - 11

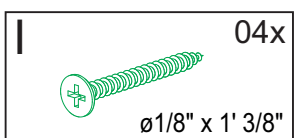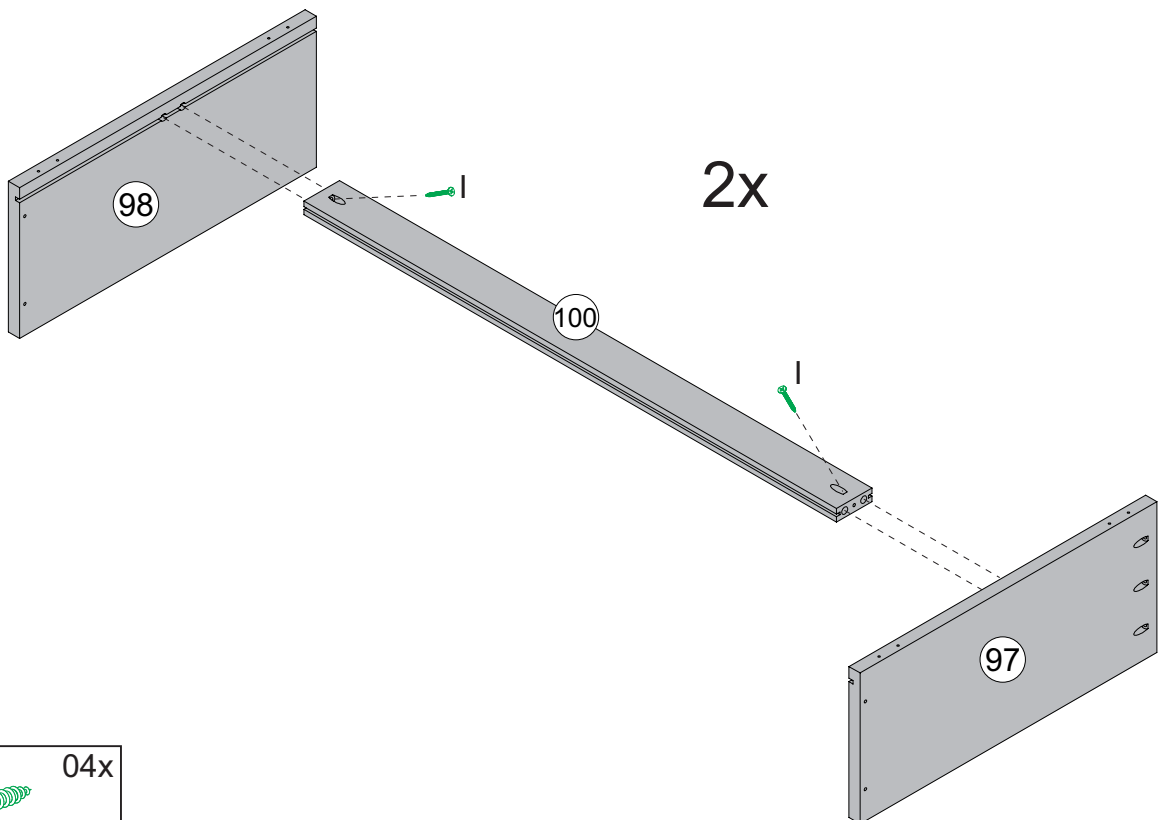


Step - 12

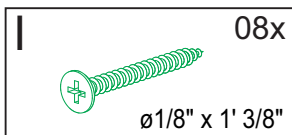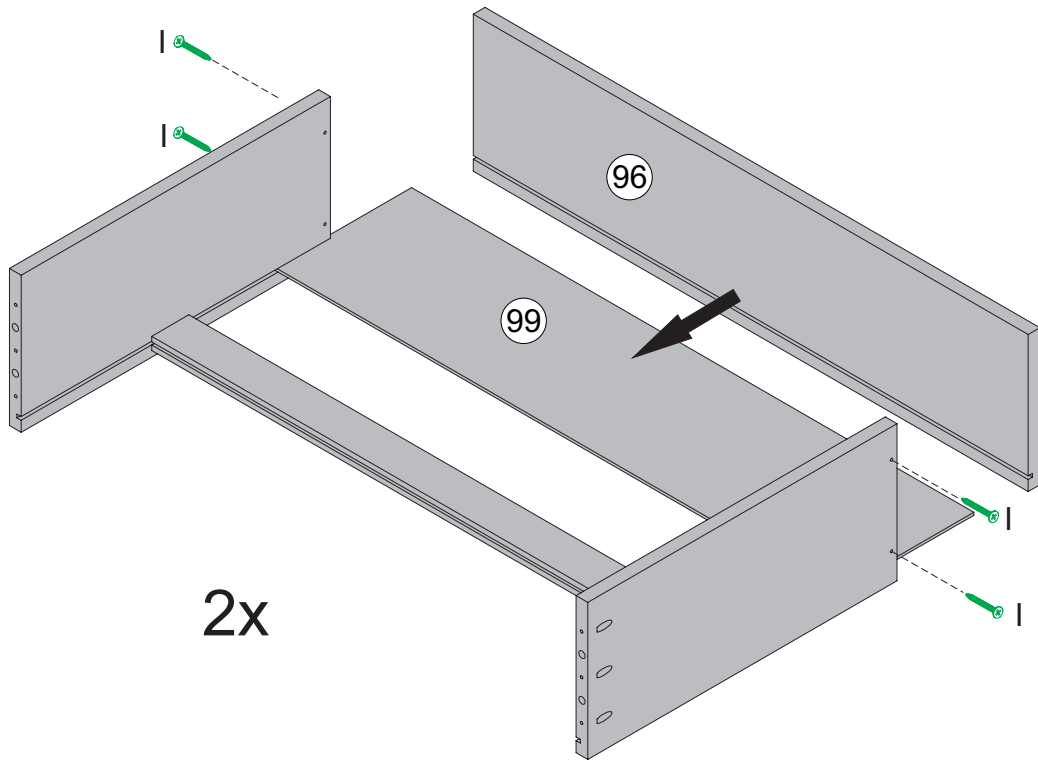

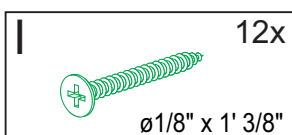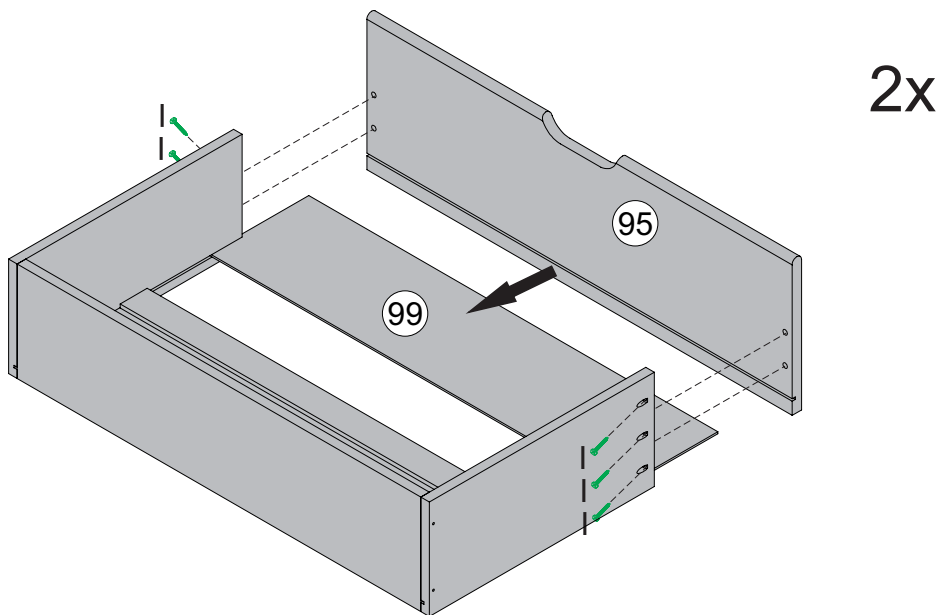

Step - 13




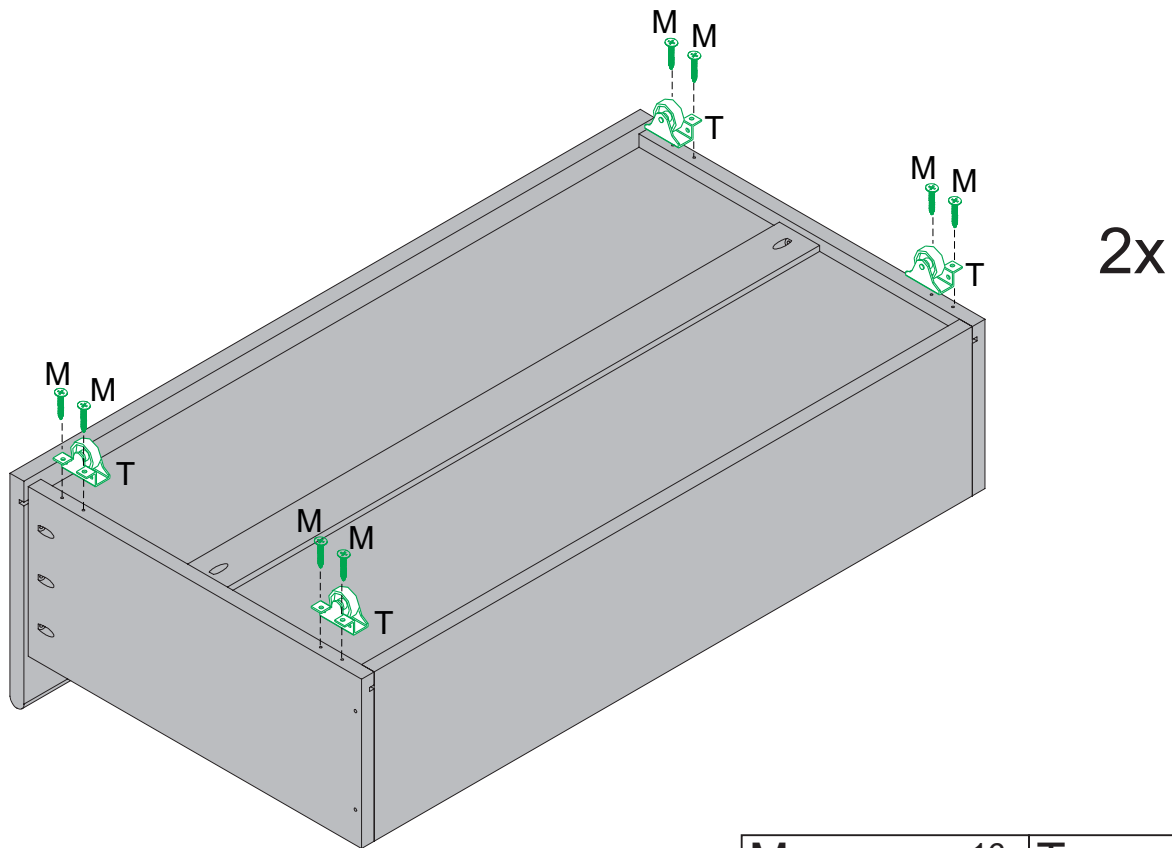


Step - 14



M		16x ø1/8" x 3/4"	T		08x 1' 5/16"
----------	--	---------------------	----------	--	-----------------

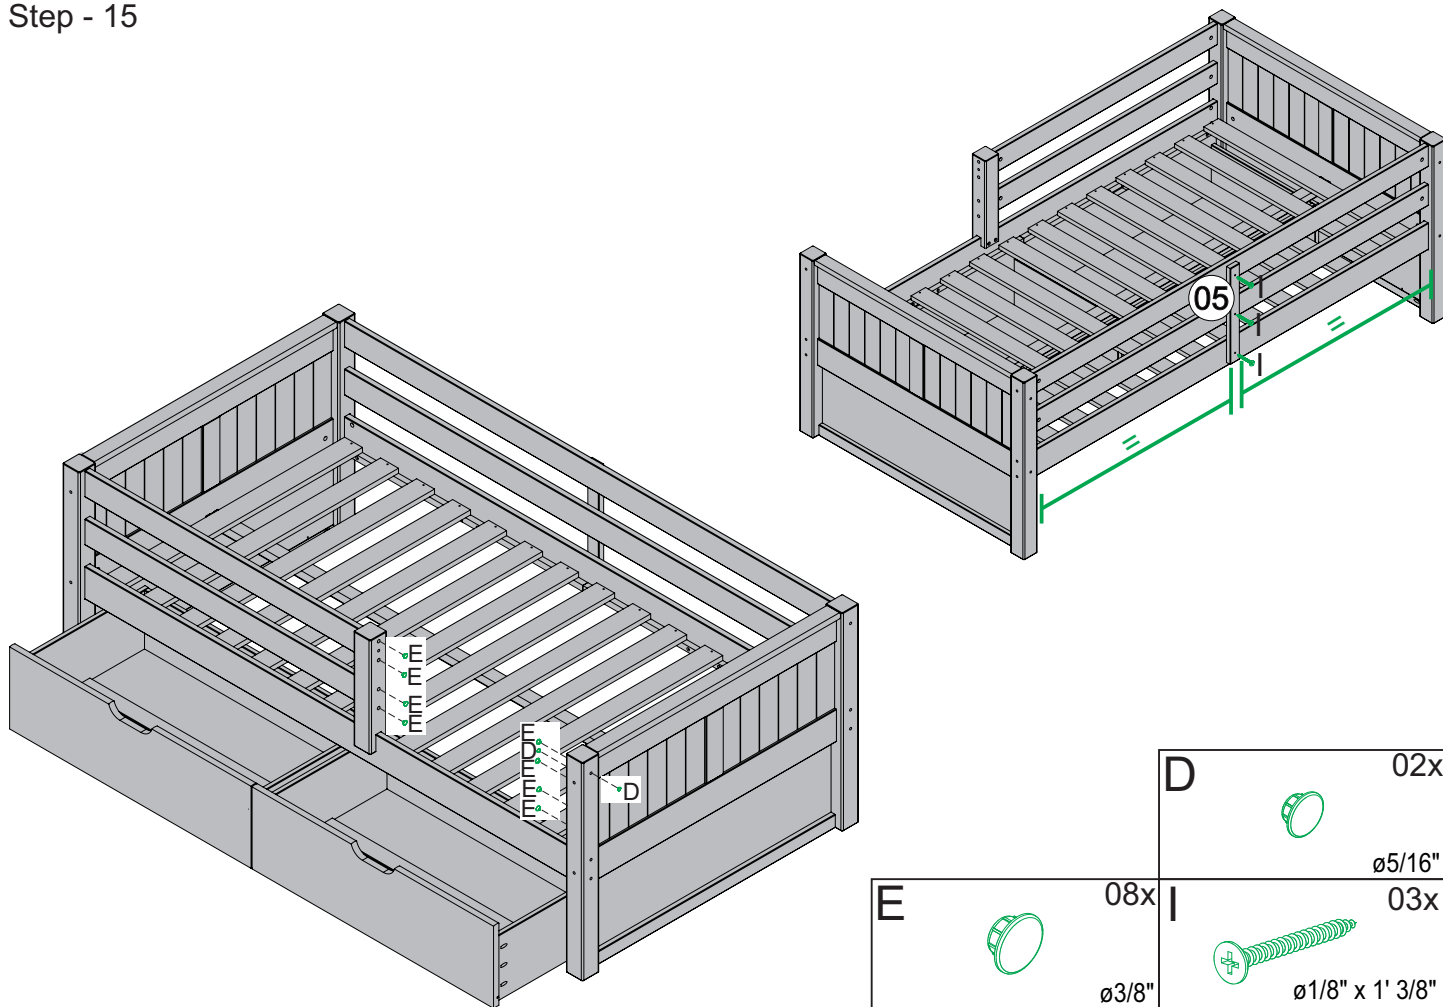Step - 15



E		08x ø3/8"	D		02x ø5/16"
			I		03x ø1/8" x 1' 3/8"