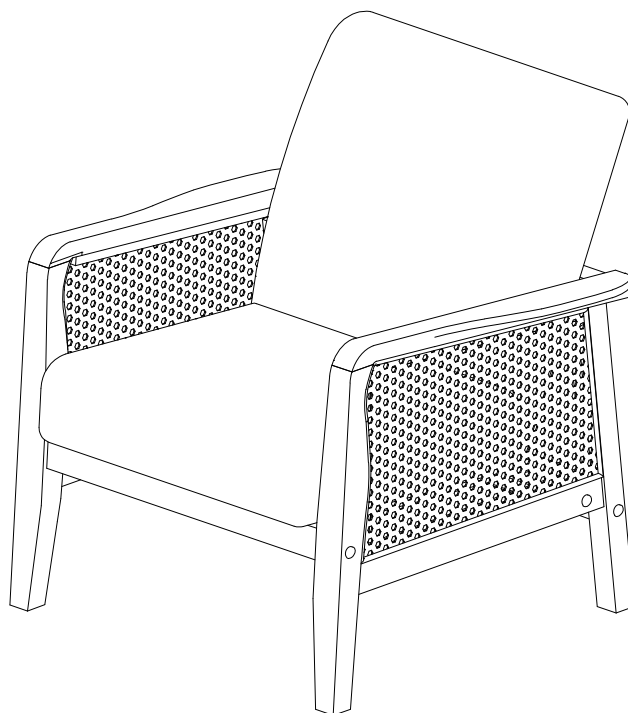



ASSEMBLY INSTRUCTIONS

ITEM NO. WF300568 - ARM CHAIR












IMPORTANT NOTE:

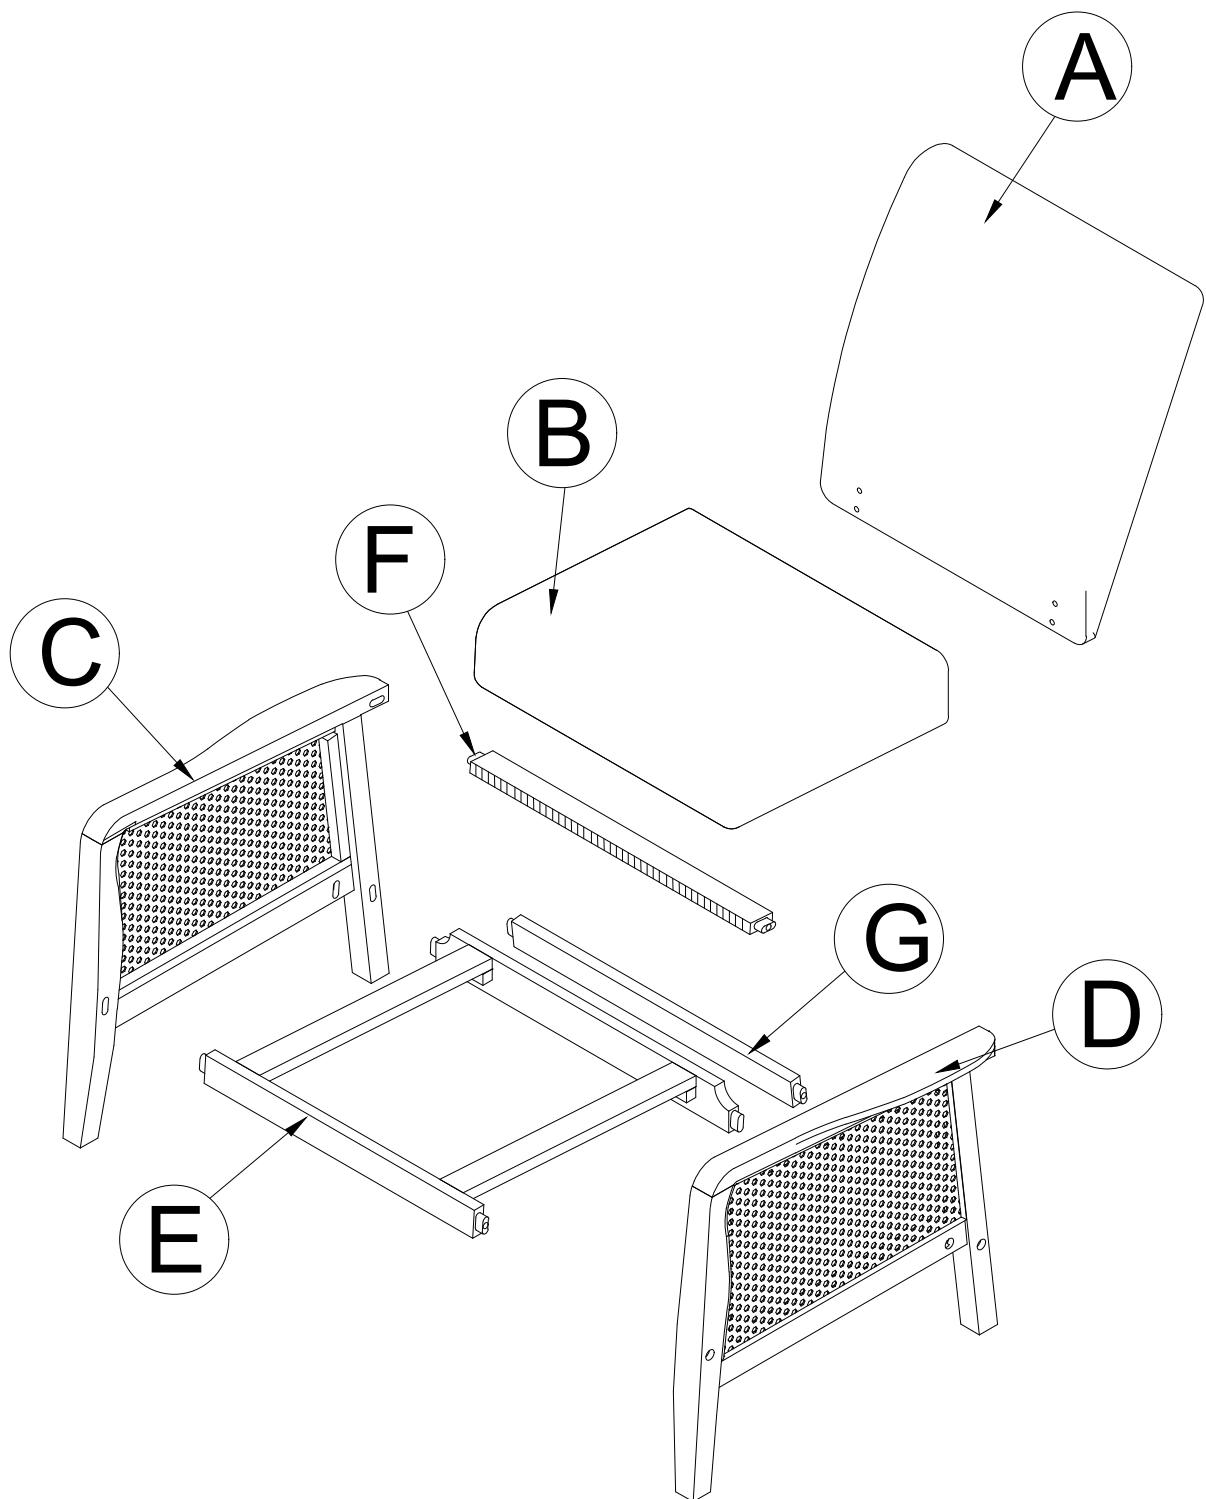- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.



Part List

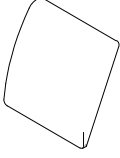
Hardware List

Ⓐ  BACK CUSHION (1 PC)	①  Ø 1/4" x 50mm BOLT (8 pcs)
Ⓑ  SEAT CUSHION (1 PC)	②  Ø 1/4" x 12*10mm NUT (8 pcs)
Ⓒ  ARM CHAIR-LEFT (1 PC)	③  Ø 5/16" x 13mm FLAT WASHER (4 pcs)
Ⓓ  ARM CHAIR-RIGHT (1 PC)	④  Ø 5/16" x 19mm LOCK WASHER (4 pcs)
Ⓔ  APRON FRAME (1 PC)	⑤  4mm ALLEN KEY (1 pc)
Ⓕ  BACK STRETCHER (1 PC)	⑥  SCREW £4*30mm (4 pcs)
Ⓖ  TOP BACK RAIL (1 PC)	⑦  WOOD PLUG (6 pcs) ⑧  BOLT 5/16 x 60mm (4 pcs)

STEP 1: Assembly Base Frame


Firstly attach the side frames (D) to the apron frame (E) and top back rail (G) by the nuts (2), then put the bolts (1) into the hole using allen key (5) to tighten.

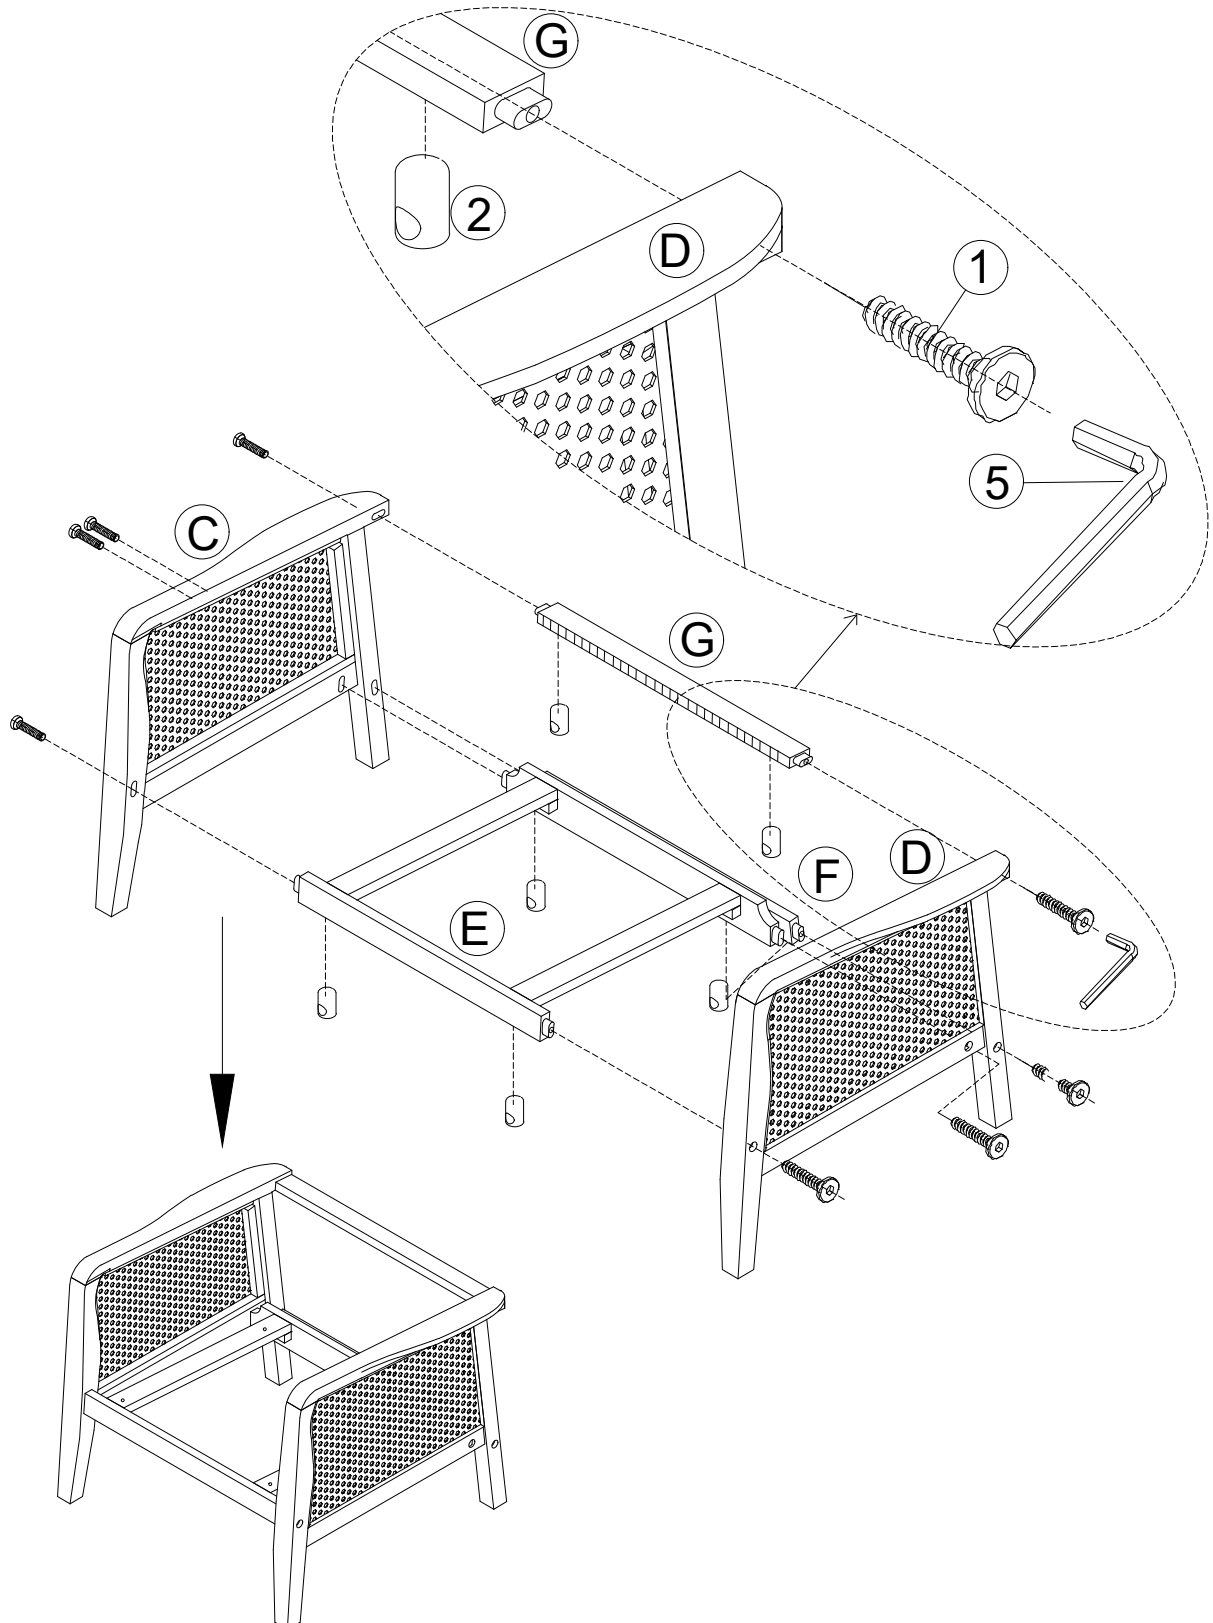second attach the side frames (C) same as (D)




STEP 2: Assembly Cushion Frame

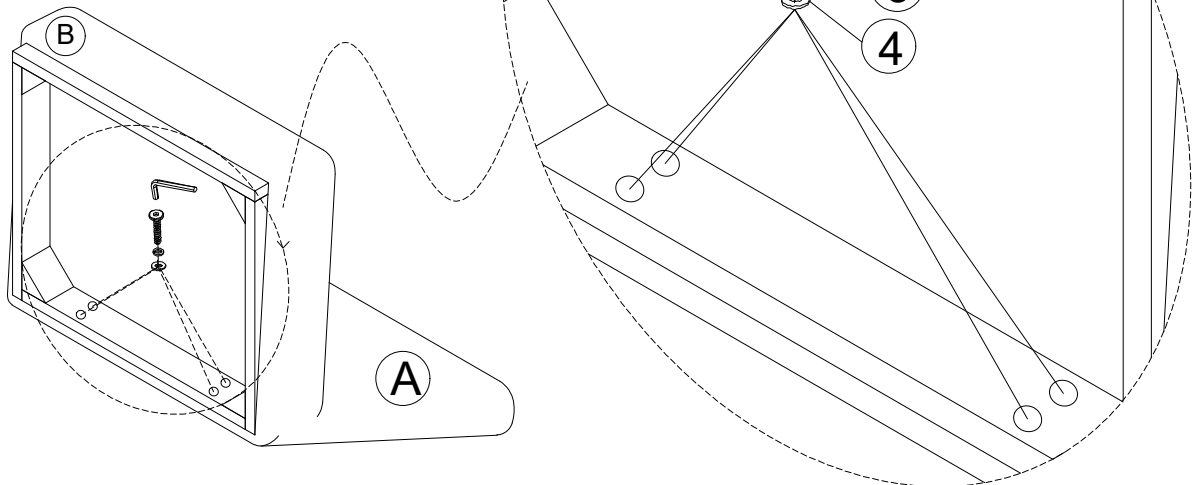Attach the seat cushion (A) to the back cushion (B) by the bolts (1), flat washer (3), lock washer (4), use allen key (5) to tighten



STEP 3:

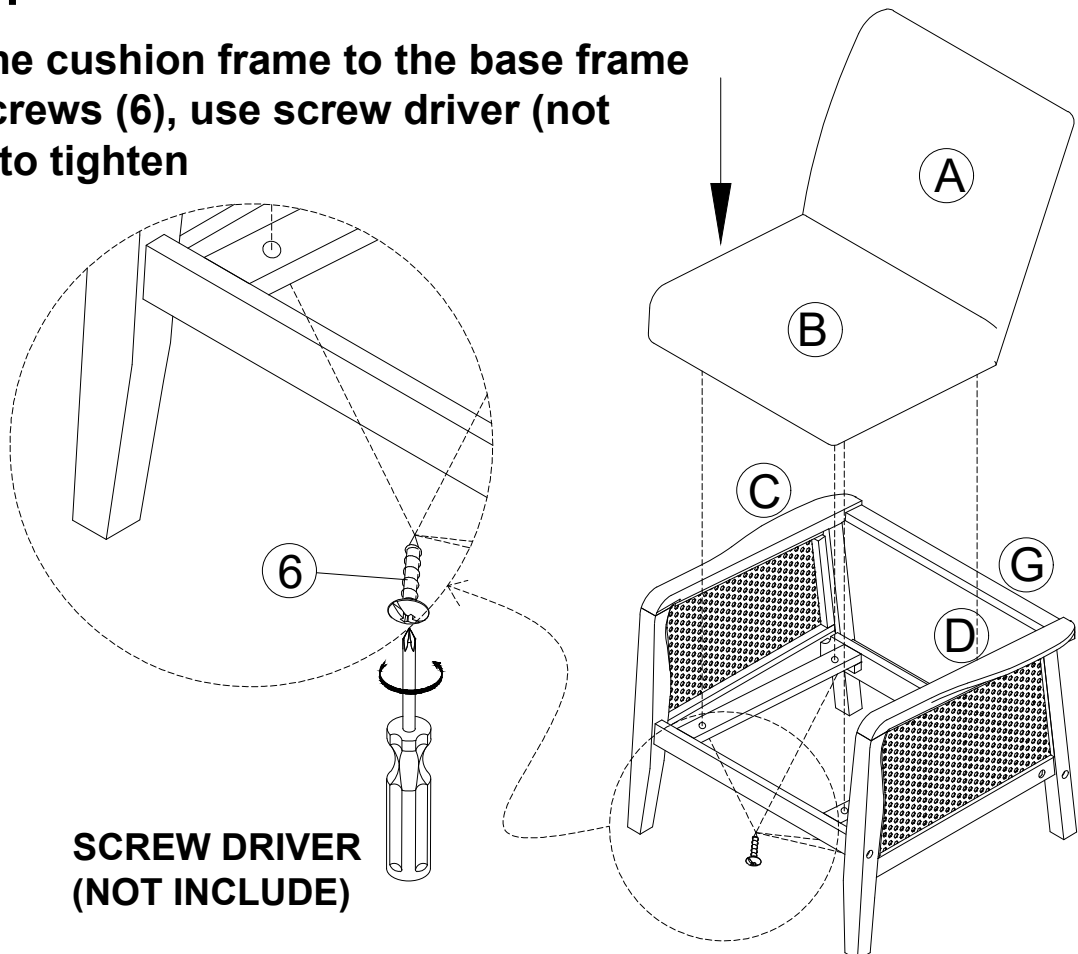Attach the cushion frame to the base frame by the screws (6), use screw driver (not include) to tighten



STEP 4:

Use the wood plugs (7) to cover the bolt holes after assembly is finish

