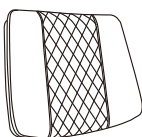



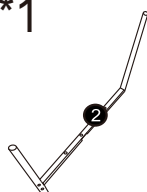

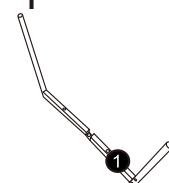

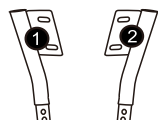

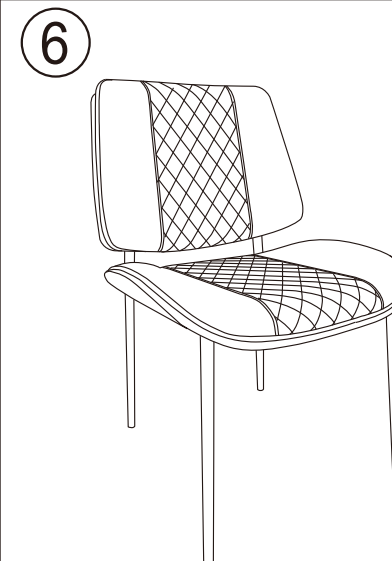
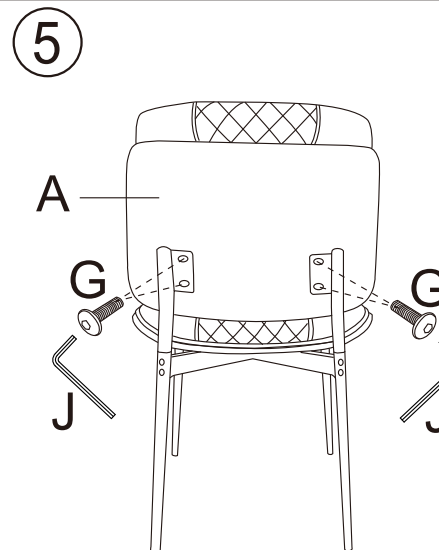
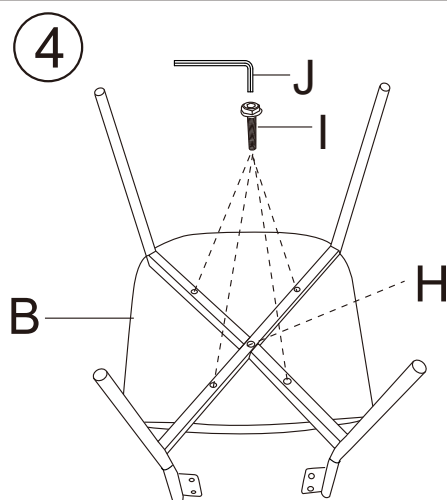
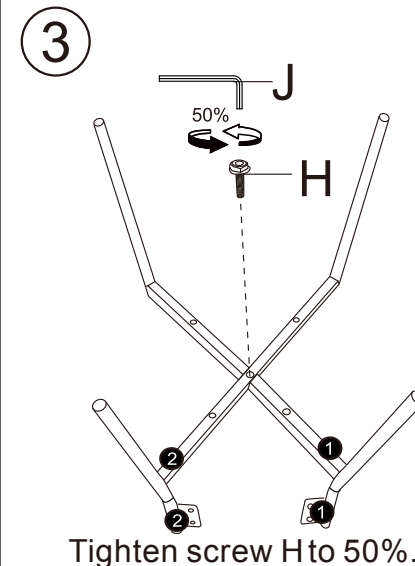
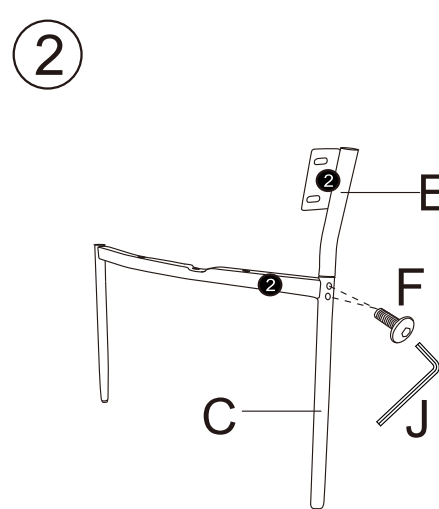
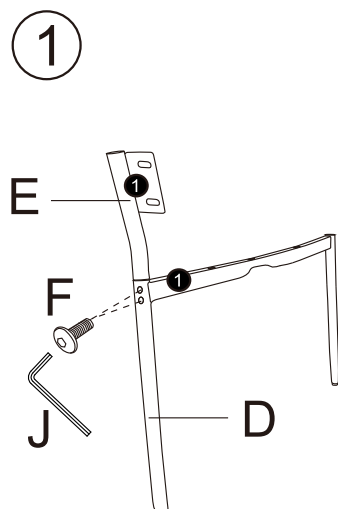


Please check that all fittings are available and in good condition before assembly.
 If you have any questions, please contact us , we will solve your problem in the first time.

PARTS LIST

<p>A*1</p> 	<p>F*4</p>  <p>M6*16mm</p>
<p>B*1</p> 	<p>G*4</p>  <p>M6*20mm</p>
<p>C*1</p> 	<p>H*1</p>  <p>M6*30mm</p>
<p>D*1</p> 	<p>I*4</p>  <p>M6*45mm</p>
<p>E*1(L&R)</p> 	<p>J*1</p> 

ASSEMBLE INSTRUCTION



Make sure all 5 screws(I *4 and H*1) are right in holes, then tighten all screws to 100%.