


Installation Manual

Any question please contact us
yoursupport@163.com

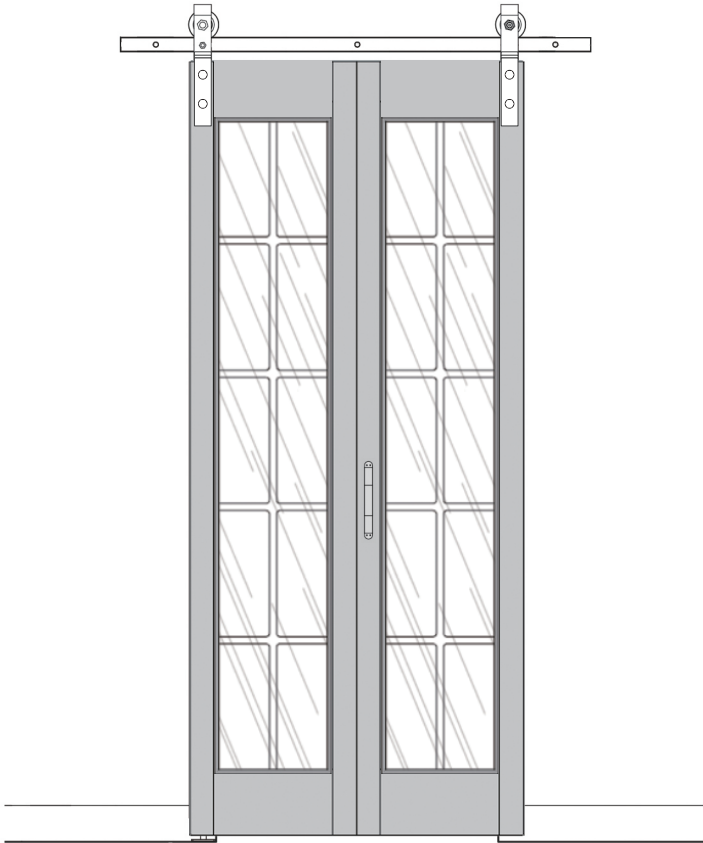

NOTICE Please retain these instructions for future reference


- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws and knobs are secure every 90days.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- If any parts are missing, broken, damaged, or worn, please contact us for assistance.

Product Content

A.1, Track




A.2, Wall spacer




ST8X110

D. Fixator



X1

E. Pulley base




M10X50

H. Floor guide



X1

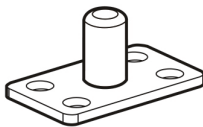

X1



φ8(x4)



ST4.2X32(X4)

J. Handle



X1




ST4.2X25(X4)

B. Movable pulley and bolts




X1

C. Fixed pulley and bolts




X1

F. Track connector

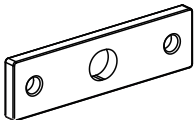

M6x5

G. Hinges

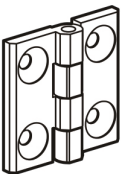

X3



ST6X25(X12)

I. Seal



X1

K. $\phi \frac{5}{32}$ "(4mm)



$\phi \frac{3}{32}$ "(2.5mm)



$\phi \frac{5}{64}$ "(2mm)



Tools Needed

1.Pencil



2.Wrench




3.Phillips Screwdriver




4.Plumb Bob




5.Drill

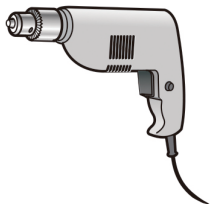


6.Level









7.Drill Bit



8.Tape

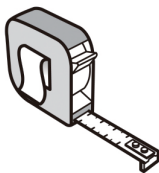


PARTS LIST

1.Track Size 	28"	34"	36"	40"	46"	52" (2 doors)	52" (4 doors)
2.Spacer 	3	3	3	3	3	4	4
3.Movable Pulley and bolts 	1	1	1	1	1	1	2
4.Fixed Pulley and bolts 	1	1	1	1	1	1	2
5.Fixator 	1	1	1	1	1	1	2
6.Pulley base 	2	2	2	2	2	2	4
7.Hinges 	3	3	3	3	3	3	6
8.Floor guide 	1	1	1	1	1	1	2
9.Track connector 	1	1	1	1	1	1	0
10.Handle 	1	1	1	1	1	1	2
11.Seal 	1	1	1	1	1	1	1

Measurements

Height form floor to the track's hole =86" (2184MM)

Opening door's height ≤84"(2134MM)

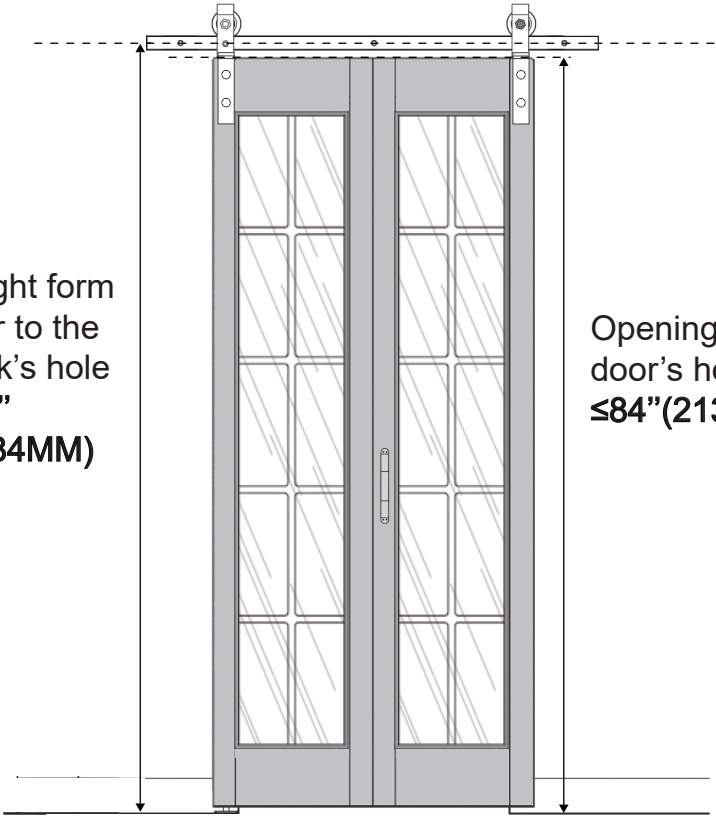


DOOR OPTIONS	DOOR SIZE	TRACK SIZE	OPEING DOOR WIDTH
2 DOORS	(12" * 84") * 2	28"	≤24"
	(14" * 84") * 2	34"	≤28"
	(15" * 84") * 2	34"	≤30"
	(16" * 84") * 2	36"	≤32"
	(18" * 84") * 2	40"	≤36"
	(21" * 84") * 2	46"	≤42"
	(24" * 84") * 2	52"	≤48"
4 DOORS	(12" * 84") * 4	52"	≤48"

Installation suggestions


Sometimes there will be some issues when install the track such as a mismatch between studs and pre-drilled holes on the track. To avoid that we recommend using a head board on all installation scenario. The size of the head board should better be 1"x4" or 1"x6" and a bit longer than the track.

***Please note that the head board and matched screws are not included.**

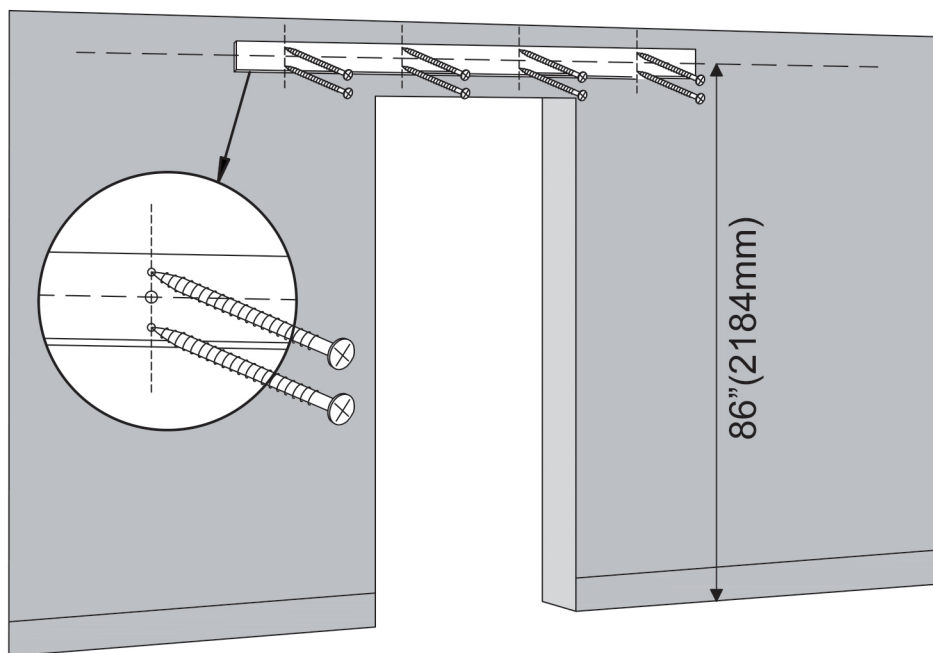




Step1

Place the track 86"(2184mm) above the floor and mark the position of the spacer holes.

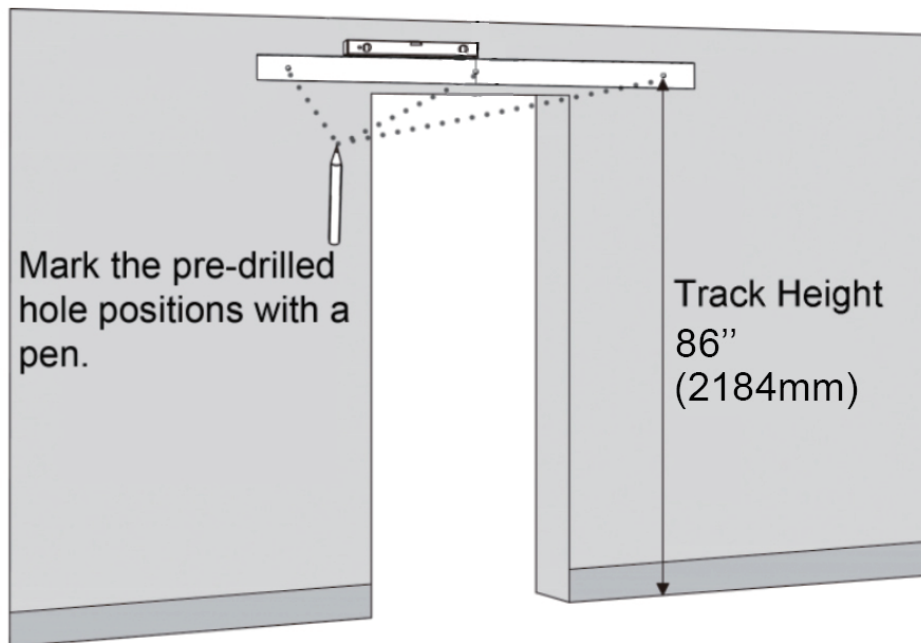

Track installation

If the rail is too long or have multiple doors, Please remove the plastic cover at the end of the track. Then connect the rails with connectors, Pay attention to the screw hole facing the wall.

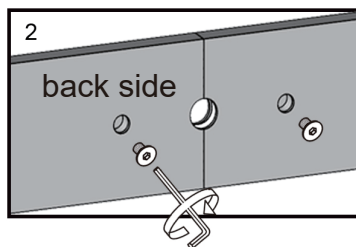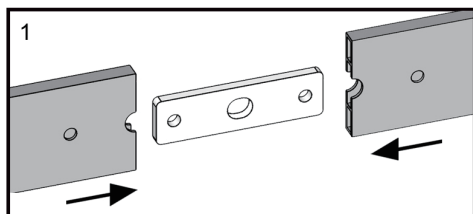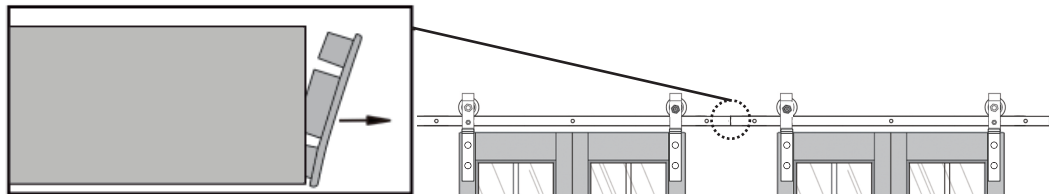

Step2

Install rail

① Drywall Installation

Install the lag bolt to wood stud or head board directly.





Bore hole depth:

$2\frac{3}{16}$ " (55mm)


Bit diameter:

$\frac{3}{16}$ " (4.8mm)

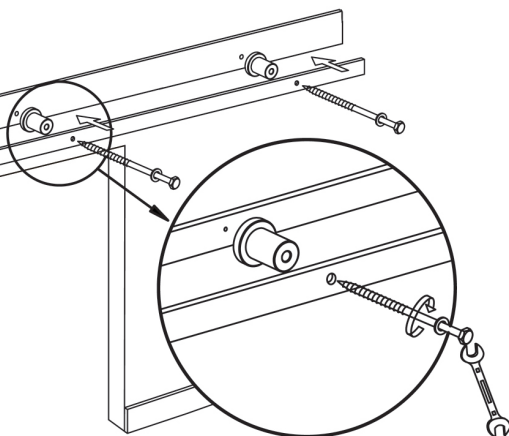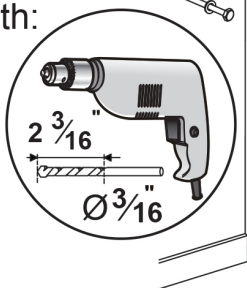

② Concrete wall Installation

Install the white plastic anchor to holes on the wall first, then install lag bolt to anchor.




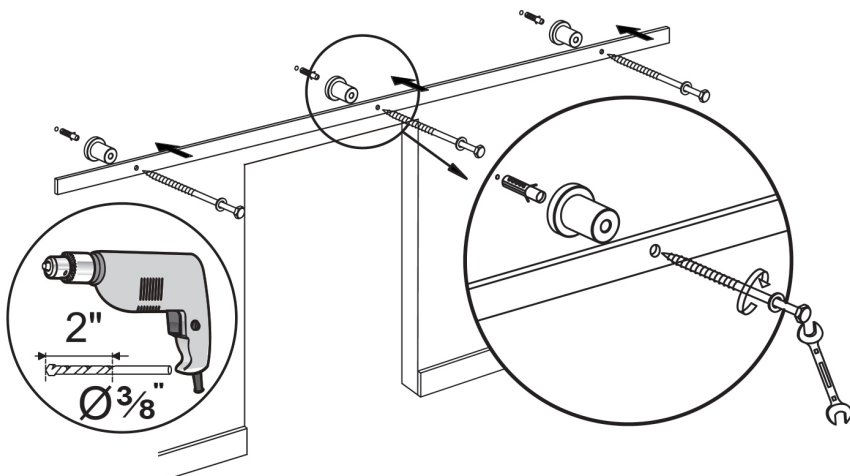


Bore hole depth: 2" (50mm)

Bit diameter: $\frac{3}{8}$ " (10mm)

Step3




Install hinges

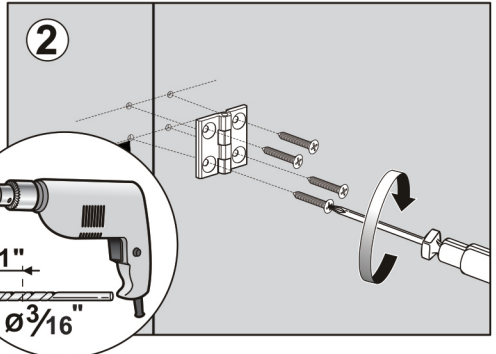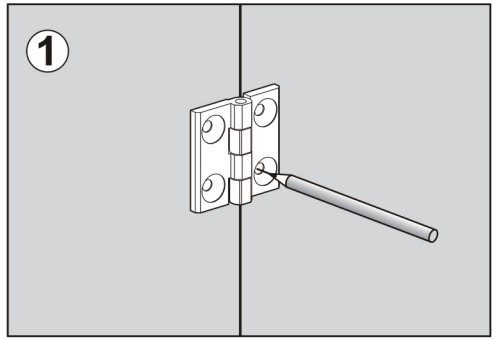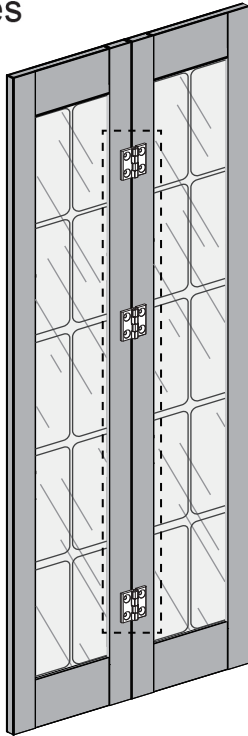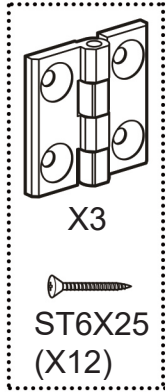

Bore hole depth: 1" (25mm)
Bit diameter: $\frac{3}{16}$ " (4.8mm)

Step4


Install pulley base.

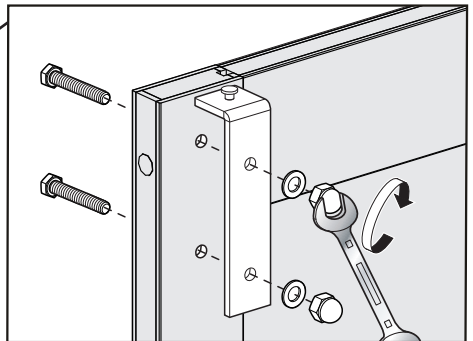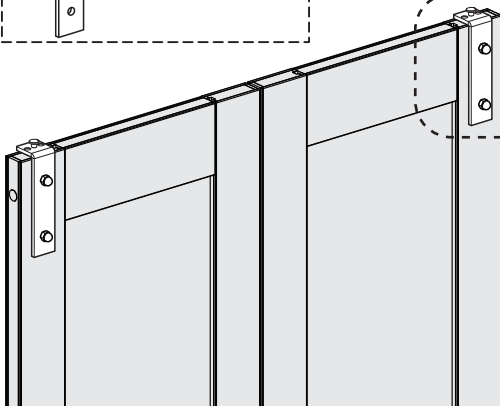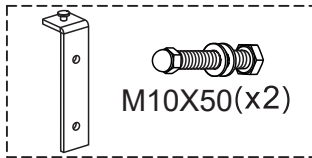

Step5

Hang up pulley

For 2 doors

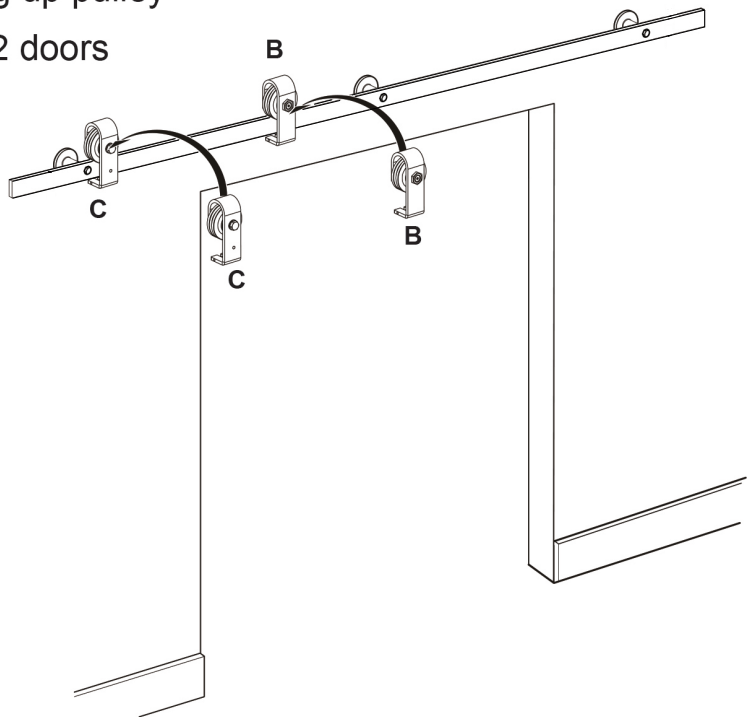


B




(x1)

C




(x1)

For 4 doors

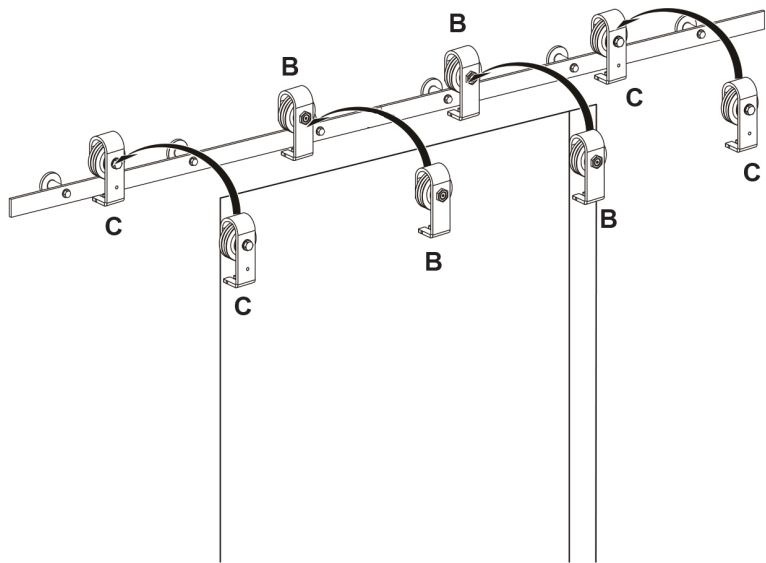


Step6

Install foolr guide

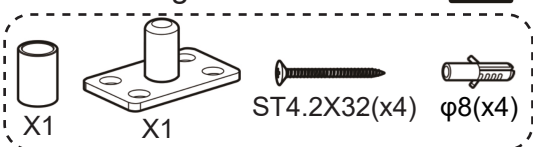


For 2 doors

Bore hole depth:
 $1\frac{3}{8}$ " (35mm)
 Bit diameter:
 $\frac{5}{16}$ " (8mm)

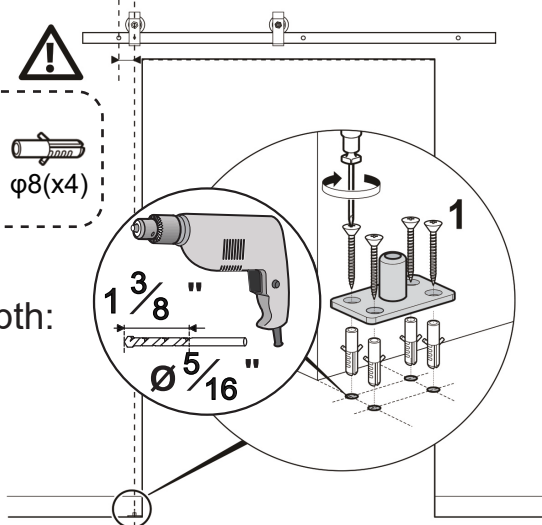


For 4 doors

Bore hole depth:
 $1\frac{3}{8}$ " (35mm)
 Bit diameter:
 $\frac{5}{16}$ " (8mm)

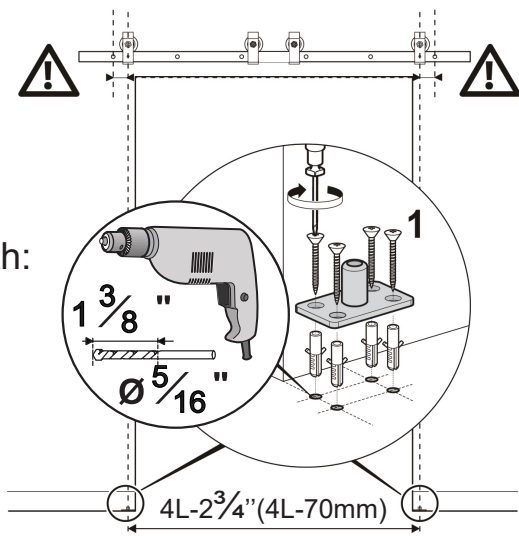

Assuming that the width of the door panel is L,the distance between the floor guides is $4L-2\frac{3}{4}$ "(4L-70mm)

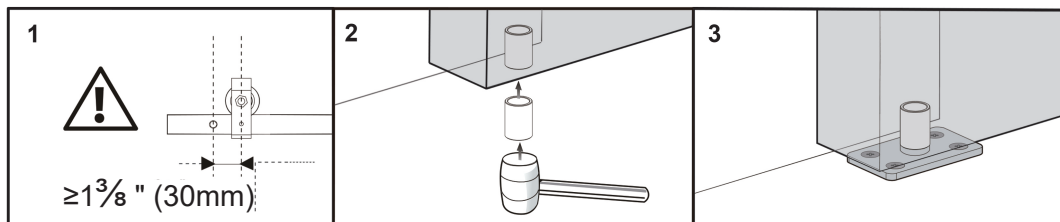


TIP: The min spacing from central position of fixed pulley C to spacer is $\geq 1\frac{3}{16}$ " (30mm) .

Insert the metallic sheath of floor guide to bottom of door panel.


completed

Step7



Install fixed pulley.

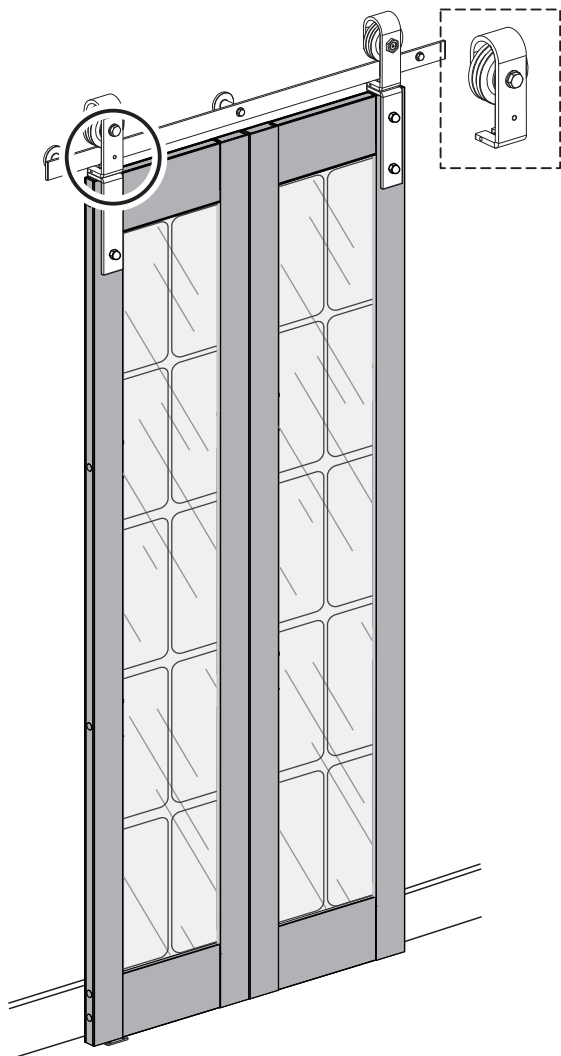

1. Unscrew the screw of pulley.
2. Please install the door to floor guide first.
3. Then install the door to the pulley.
4. Lock the screw back of pulley.






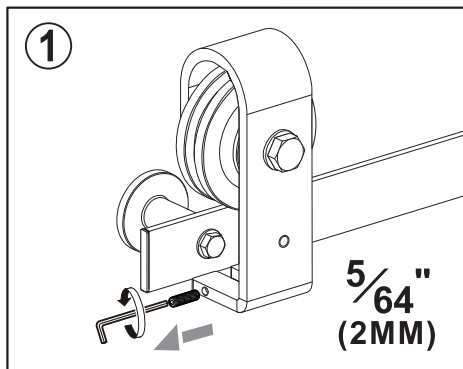


Unscrew the small screw at the bottom of hanging pulley to install the **base 4**.

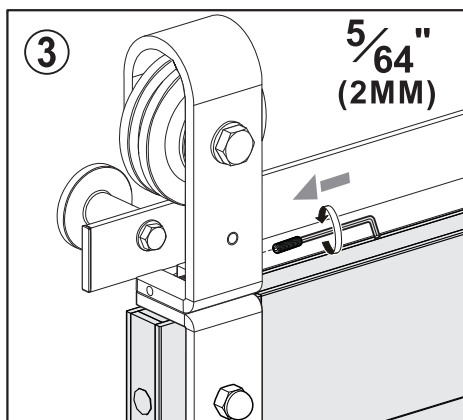
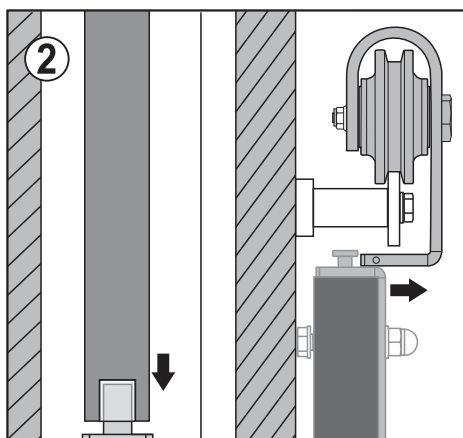


Step8

Install movable pulley.


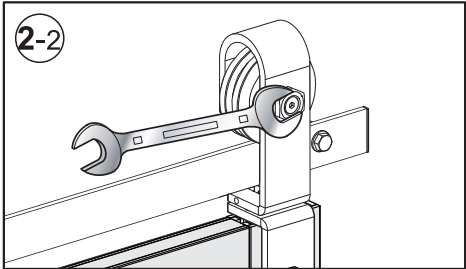
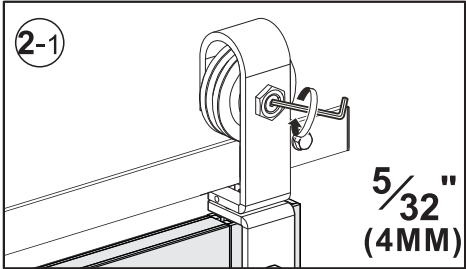
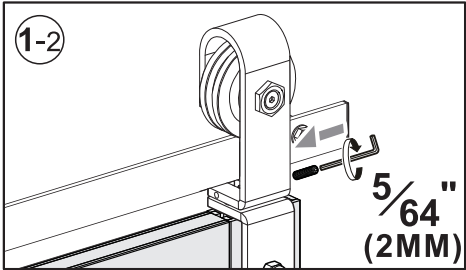
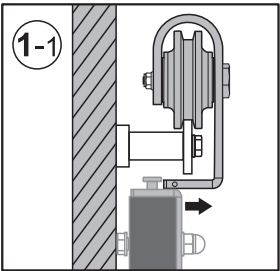
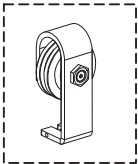
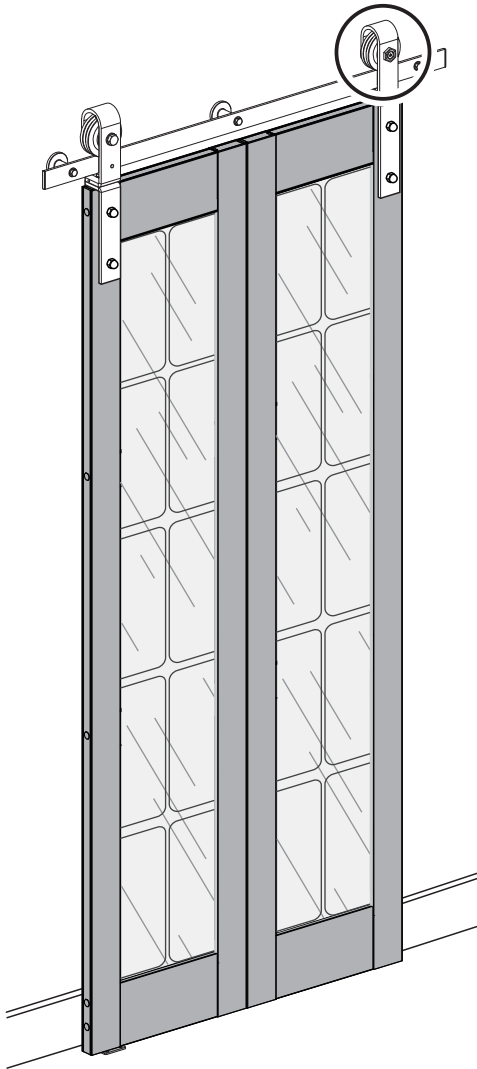


If the height of two doors are uneven, align them by adjusting the height of movable **pulley 3** by hexagon wrench and wrench. adjustment range: $\frac{3}{32}''$ (2.5MM)

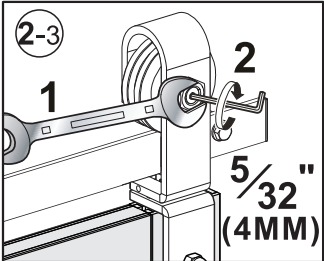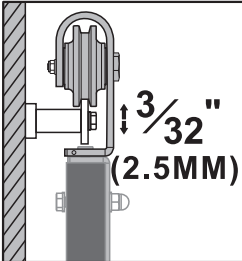




Step9

Install the fixator of hanging pulley.

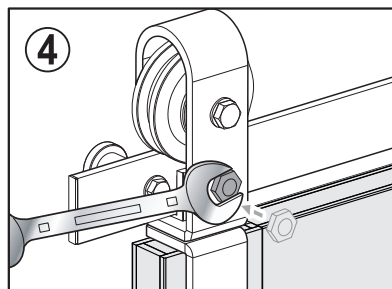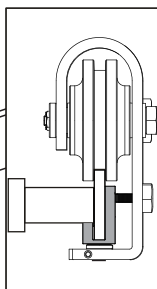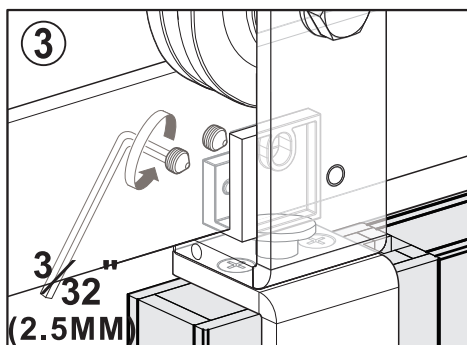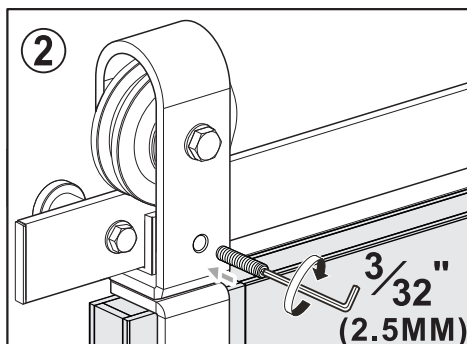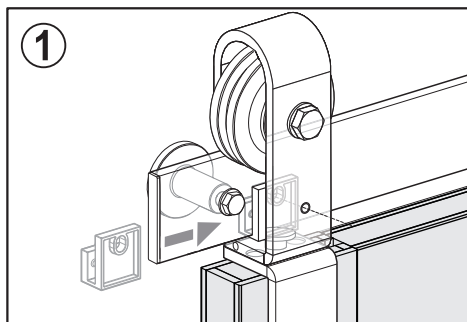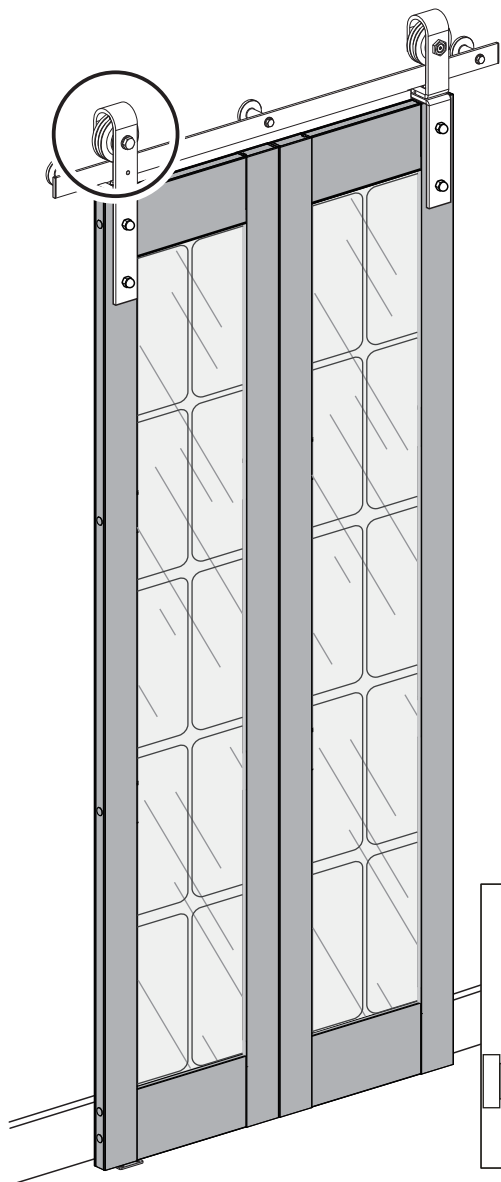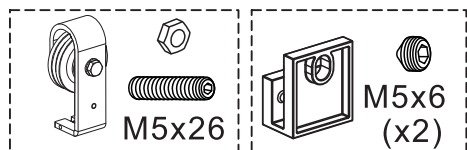

Step10


Install the handle

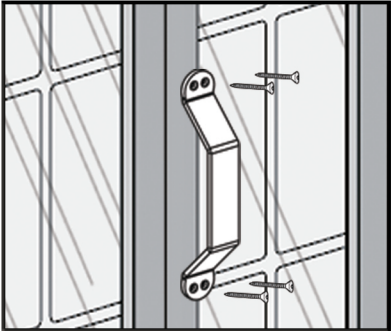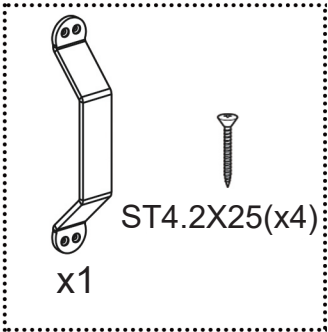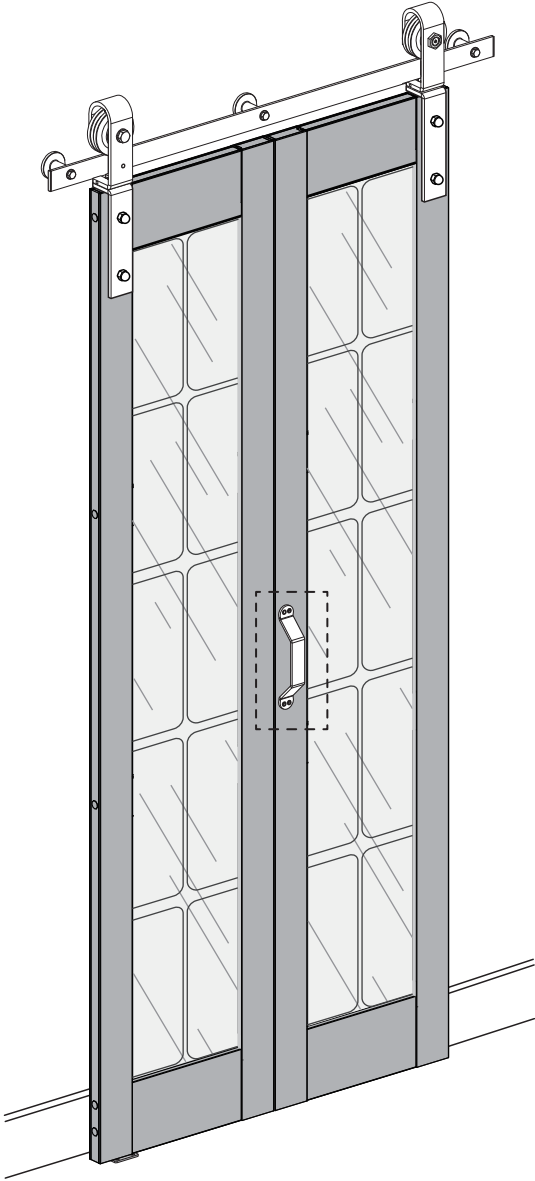

Step11

Stick a seal

If there are 4 doors

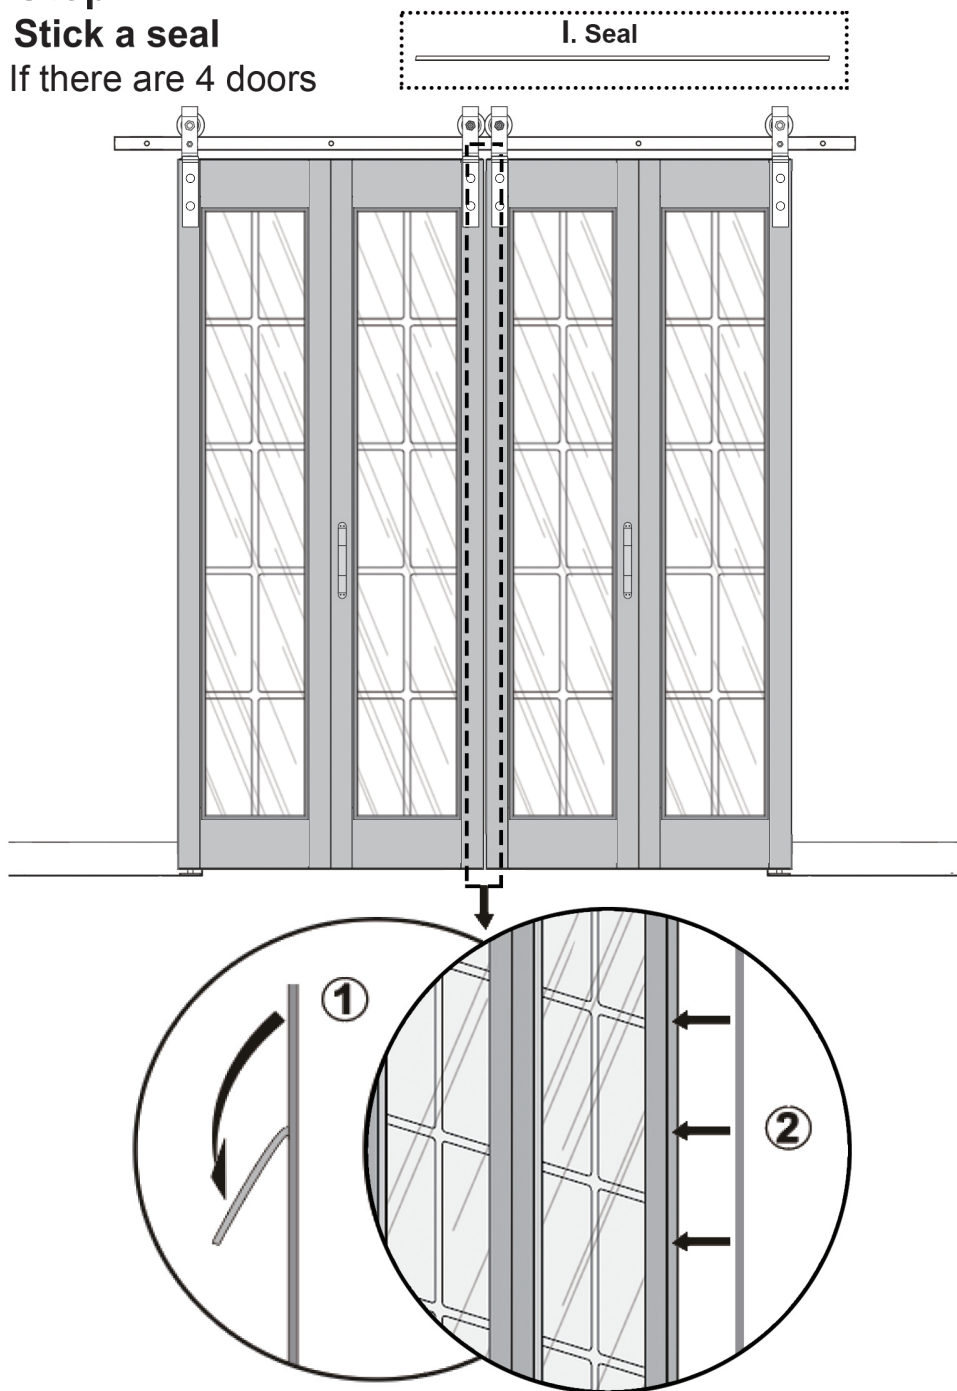

Tear double-sided adhesive tape apart, then stick the seal