

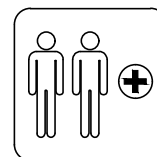
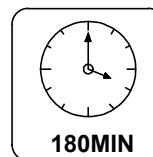
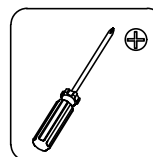
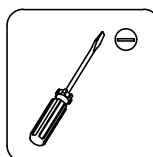


HLG252


Version:1.0

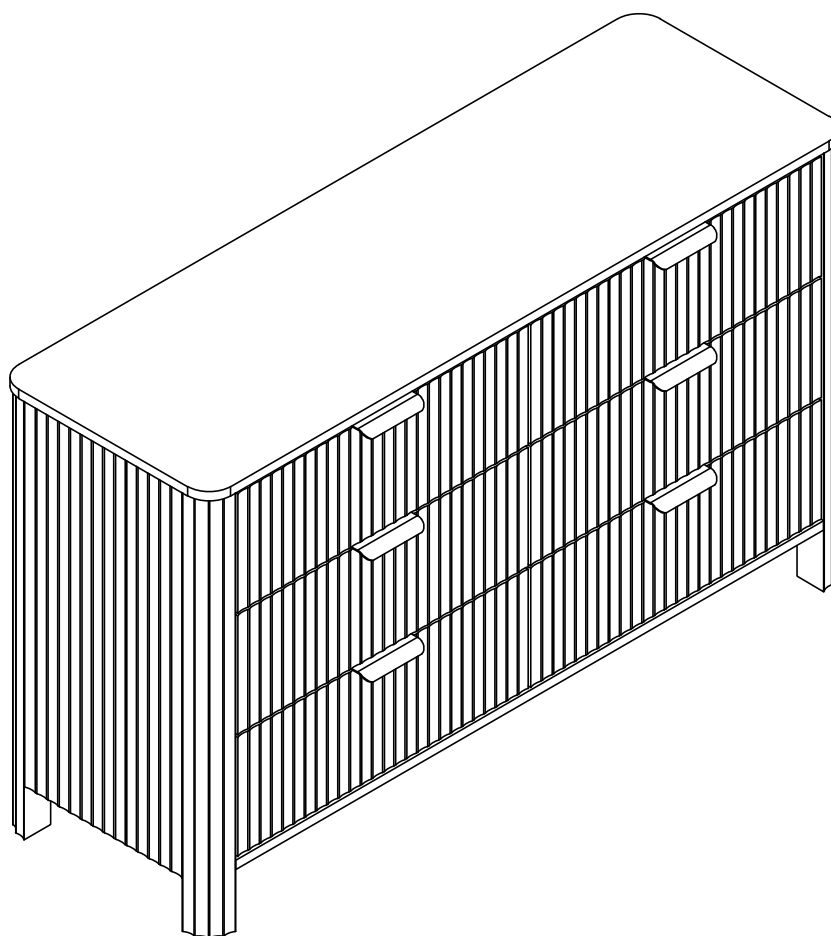


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

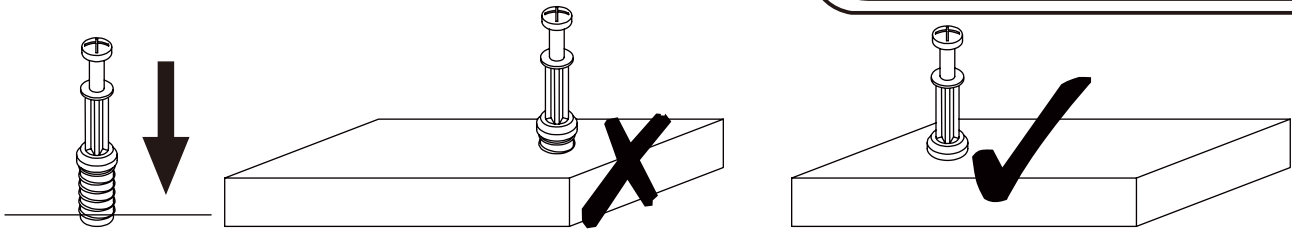


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

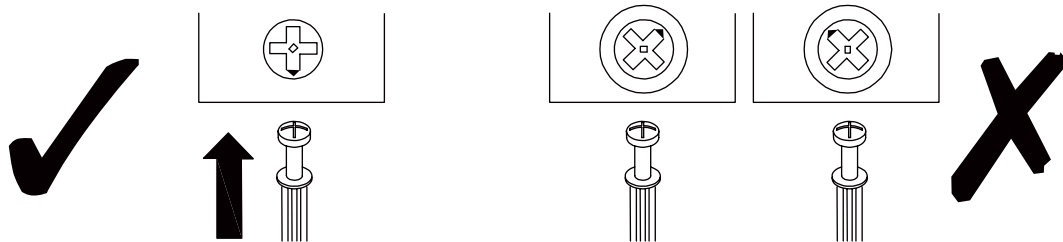










EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.






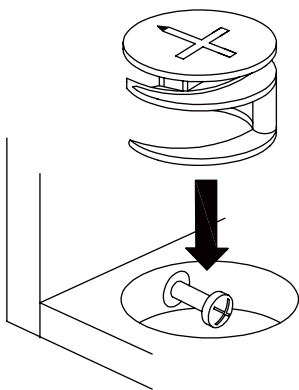





EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

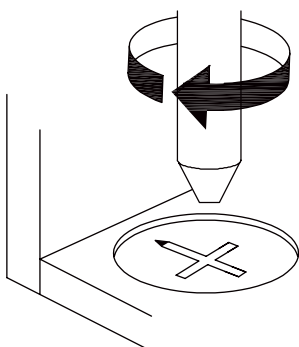

EN_Turn cam lock clockwise to tighten.

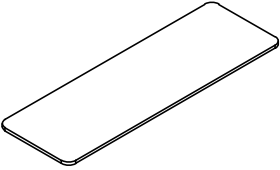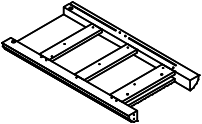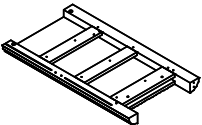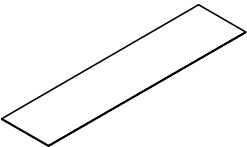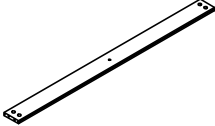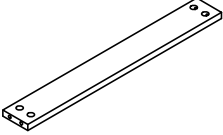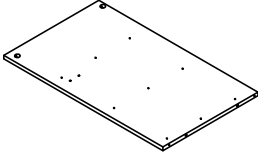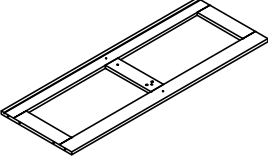NO.	PARTS	QTY	SPARE
1		x1	
2		x1	
3		x1	
4		x2	
5		x1	
6		x2	
7		x1	
8		x1	
9		x1	
10		x6	

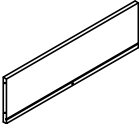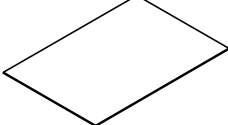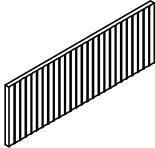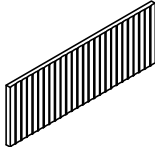NO.	PARTS	QTY	SPARE
11		x6	
12		x6	
13		x6	
14		x6	
15		x3	
16		x3	
	 Hardware Kit	x1	


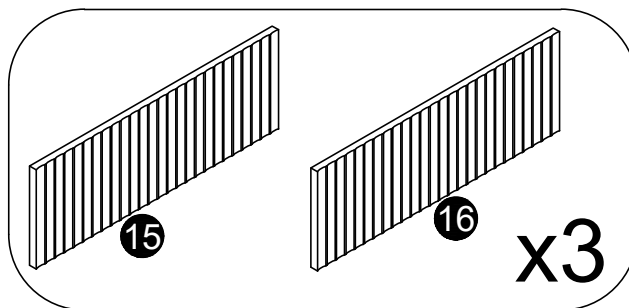
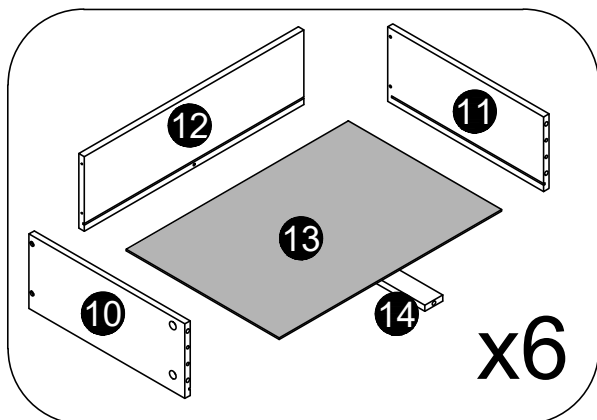
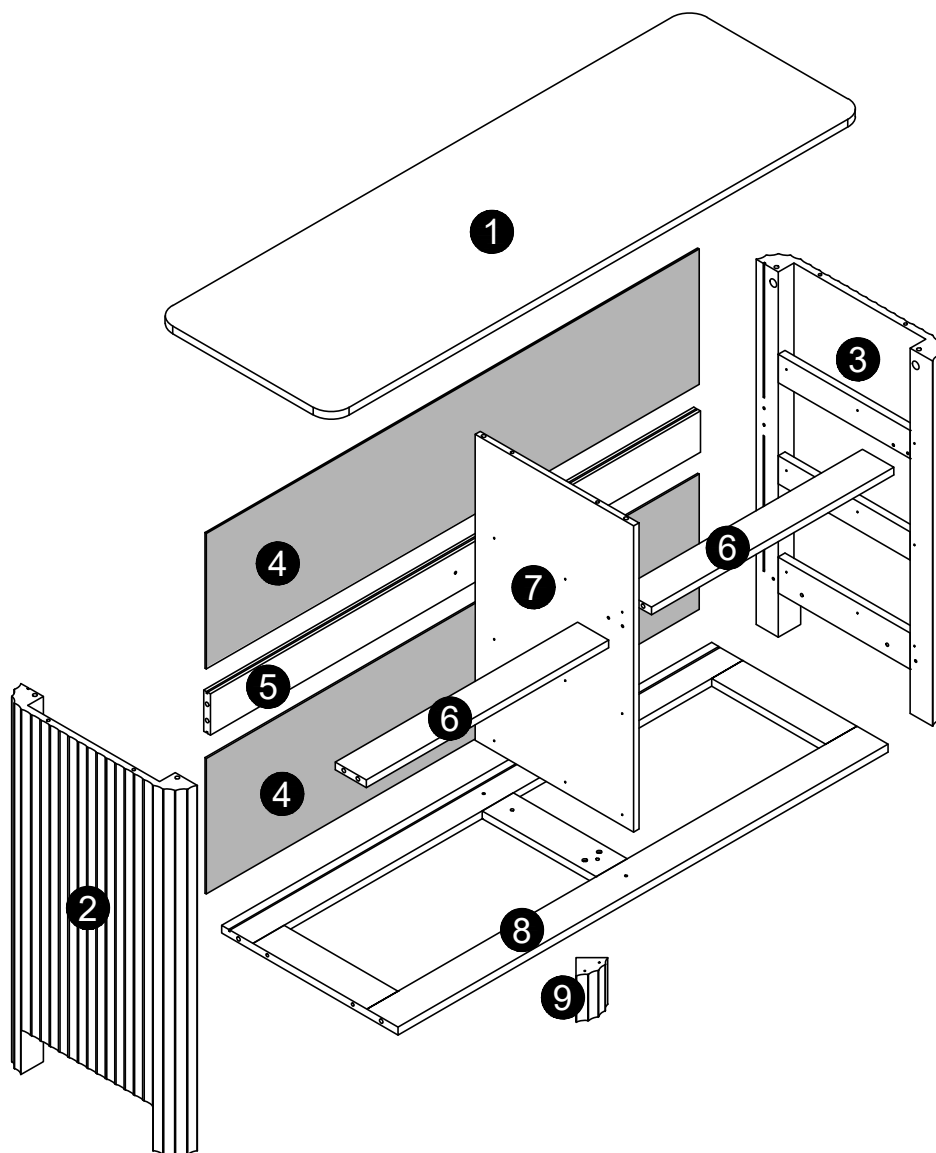


A x52 Ø6x35mm +3(spare)	B x52 Ø15x10mm +3(spare)	C x36 Ø6x30mm +3(spare)	D x35 Ø4x35mm +3(spare)	E x72 Ø3.5x12mm +7(spare)	F x6 F-1 F-2
G x2 Ø4x35mm	H x2	I x1	J x10 Ø3x16mm +1(spare) J-1 J-2	K x2 Ø4x14mm K-1 K-2	L x2
M x4	N x2 Ø6x30mm	CL x6 L330mm	CR x6 L330mm	DL x6 L330mm	DR x6 L330mm



A x30	B x30	C x24	D x30
--------------	--------------	--------------	--------------

01




x6

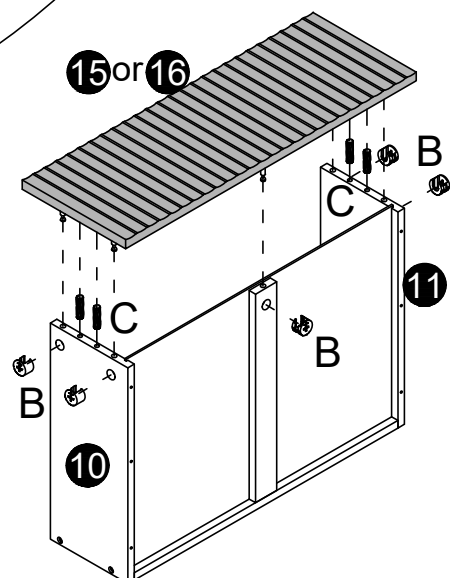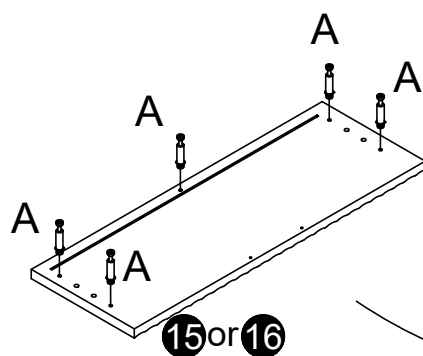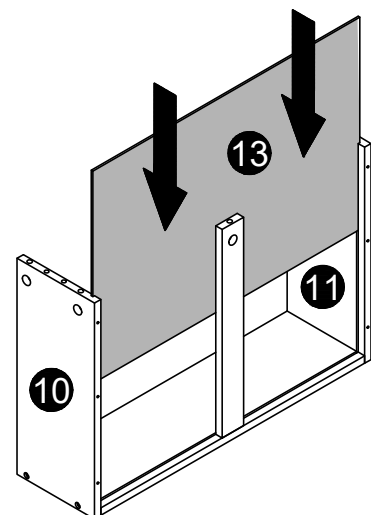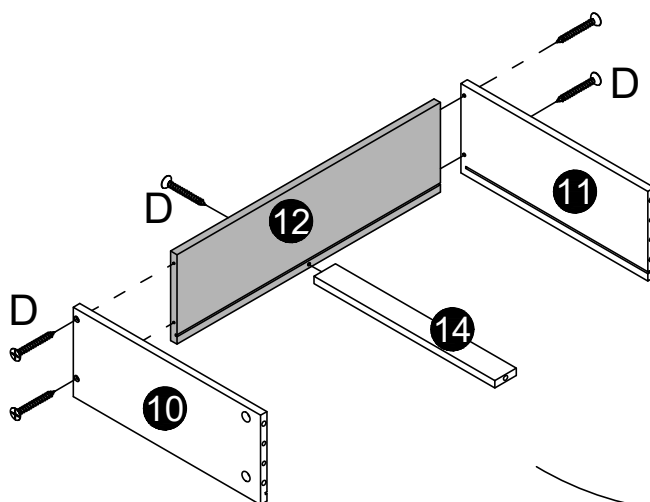

x6

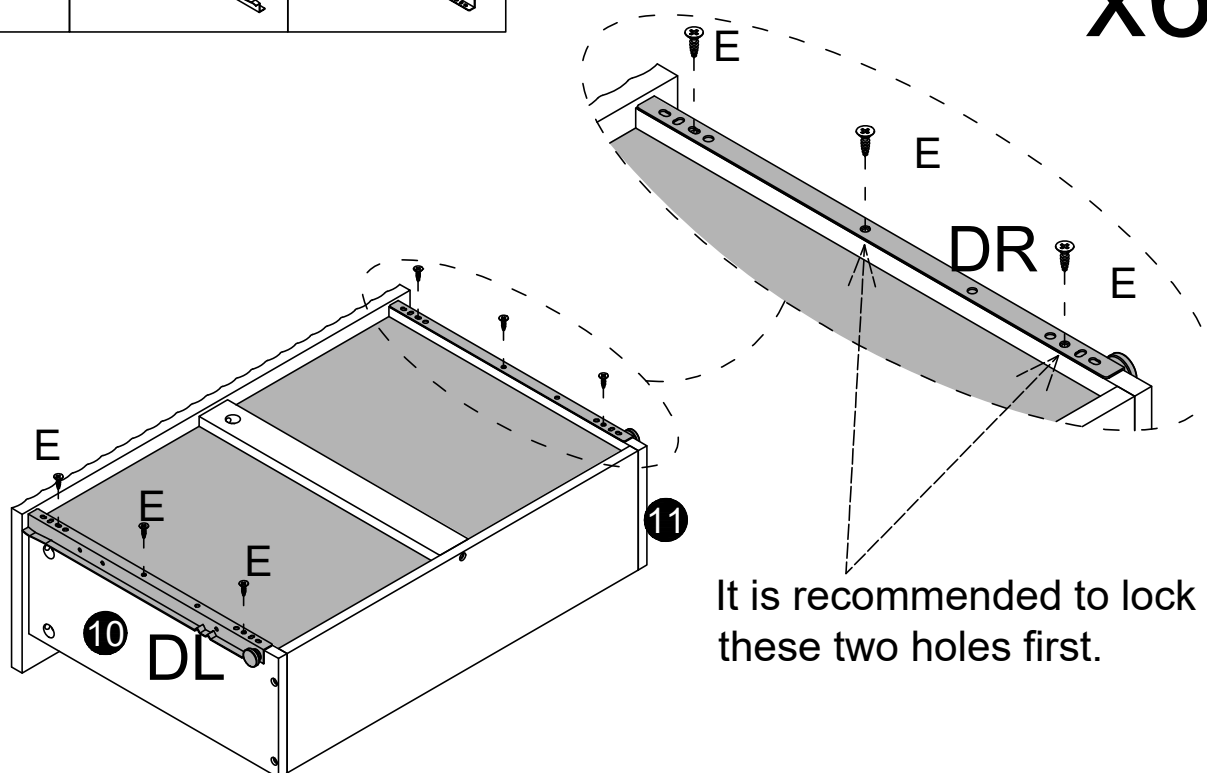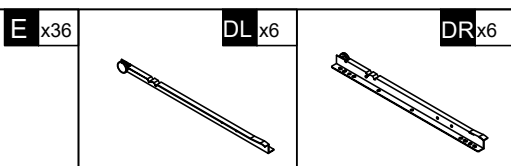



x6

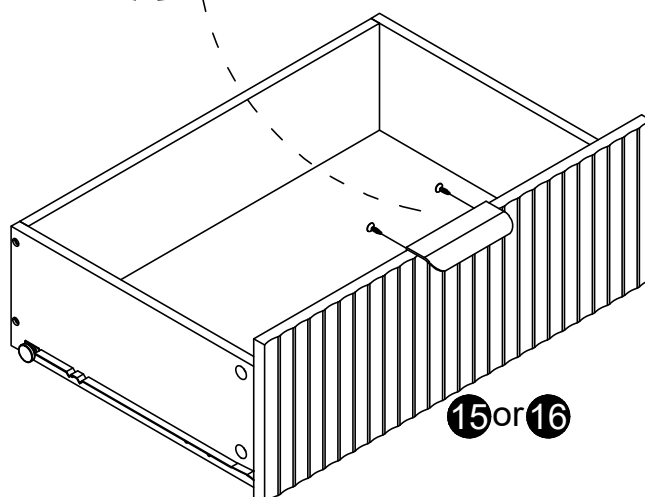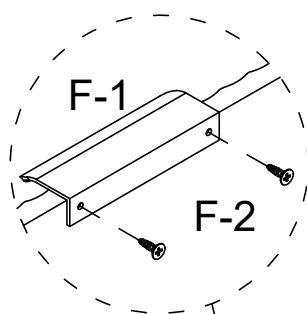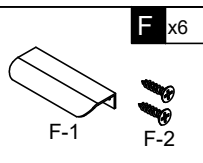

E x9



CL x3

04

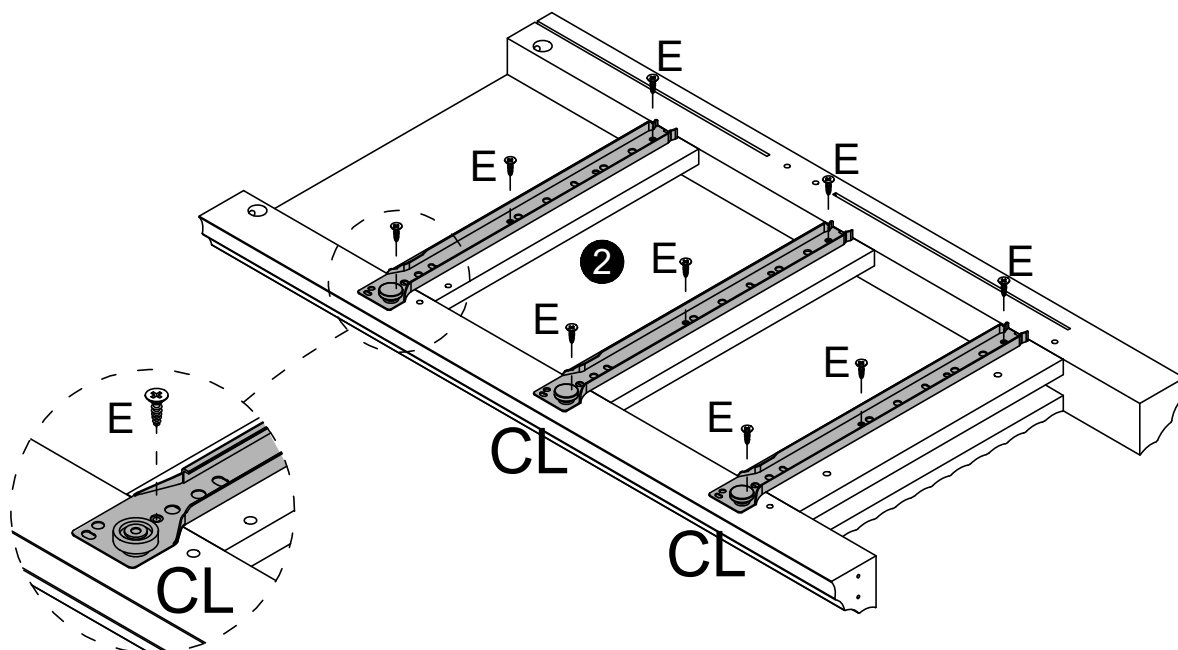

A x6



05

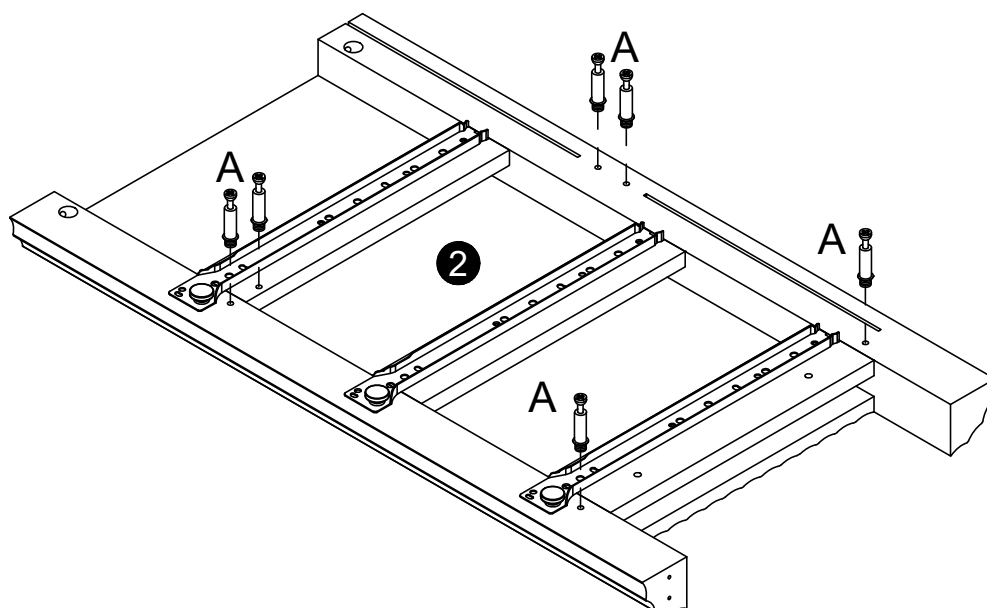

E x9



CR x3

06

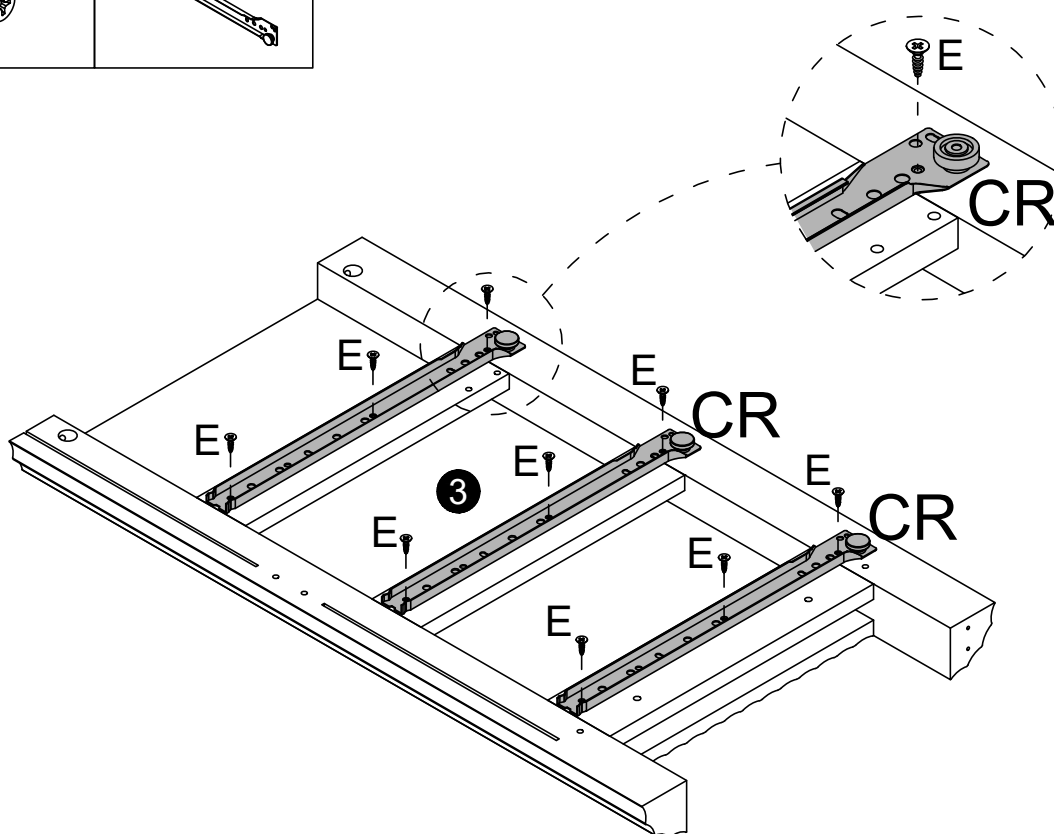


A x6

07

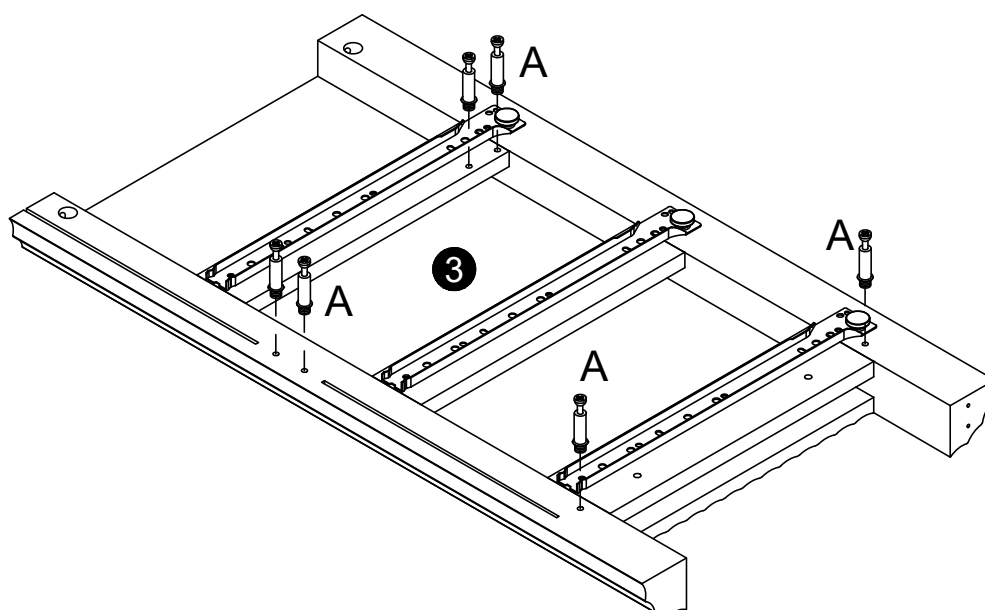


A x2




E x18




CL x3




CR x3




! Second hole

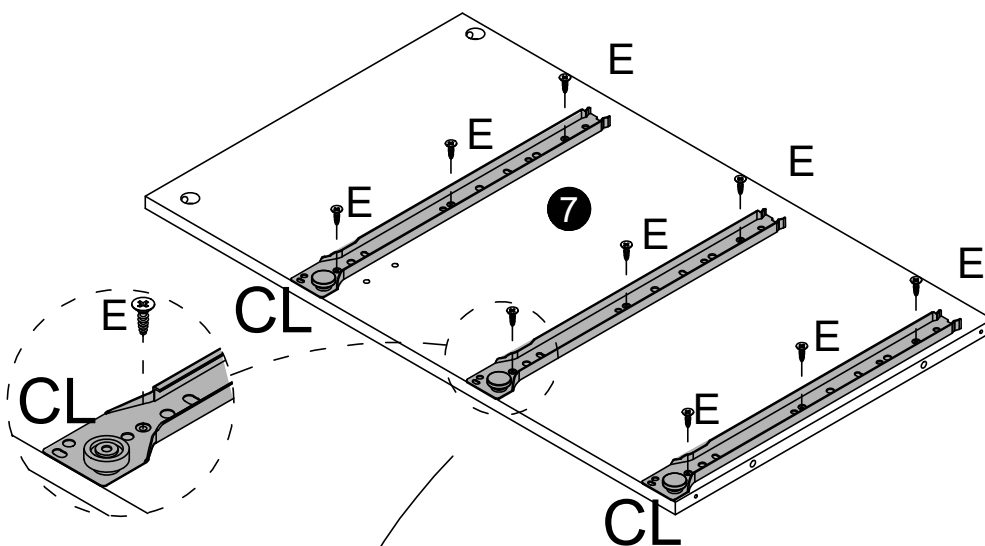



180°

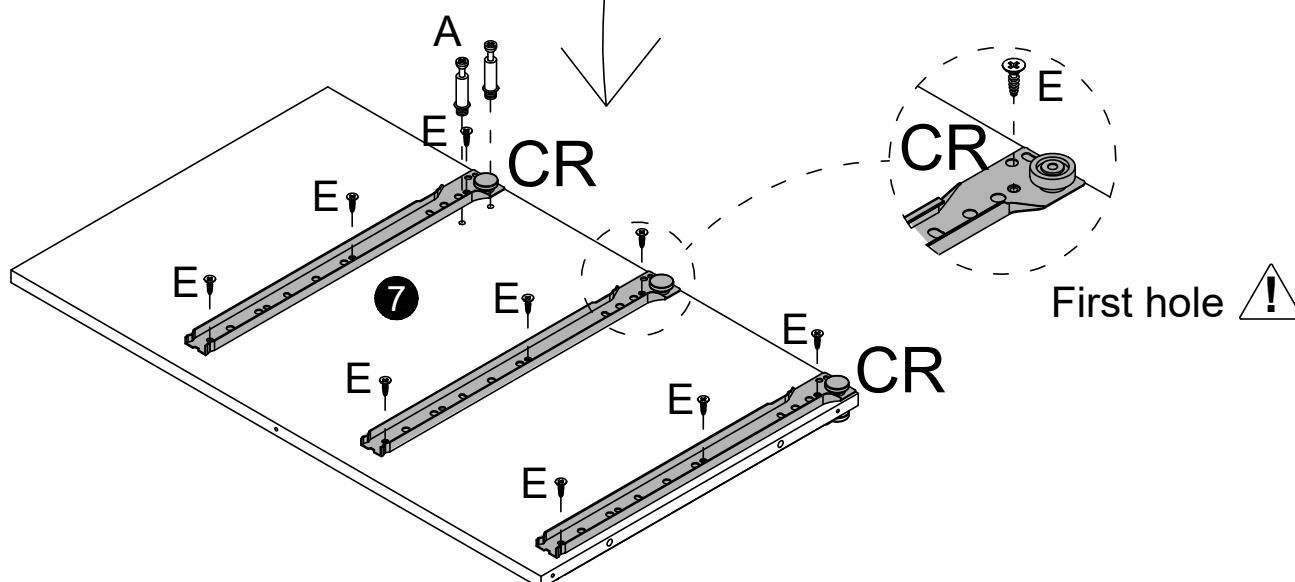

G x2




I x1

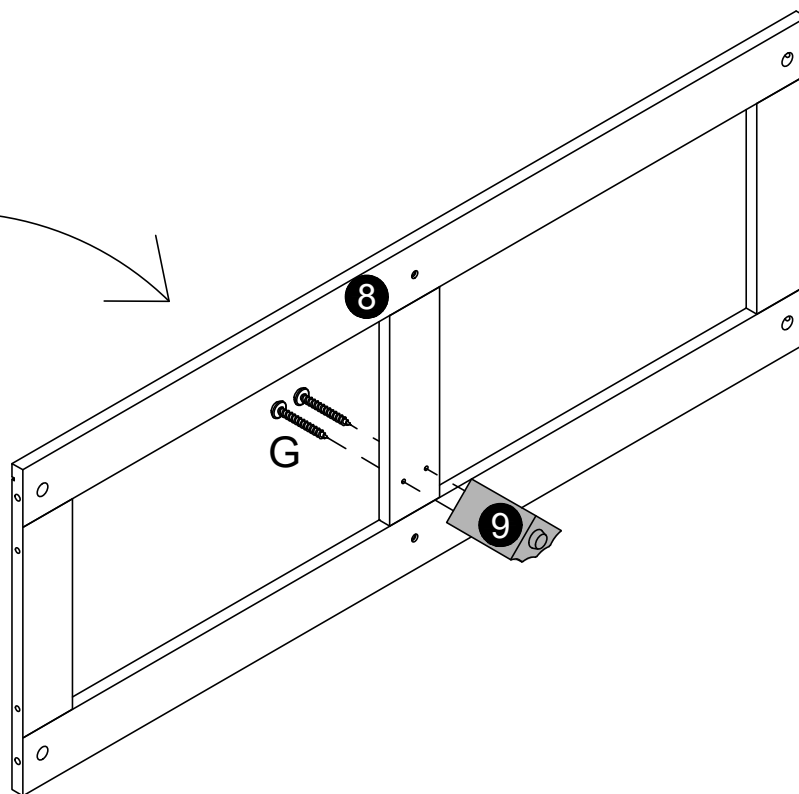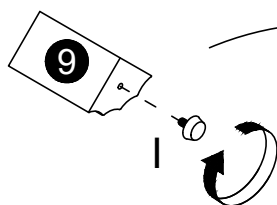


C x2



D x2





Note: Please place plate ① as an auxiliary component below the vertical plate, and use it only for horizontal installation.

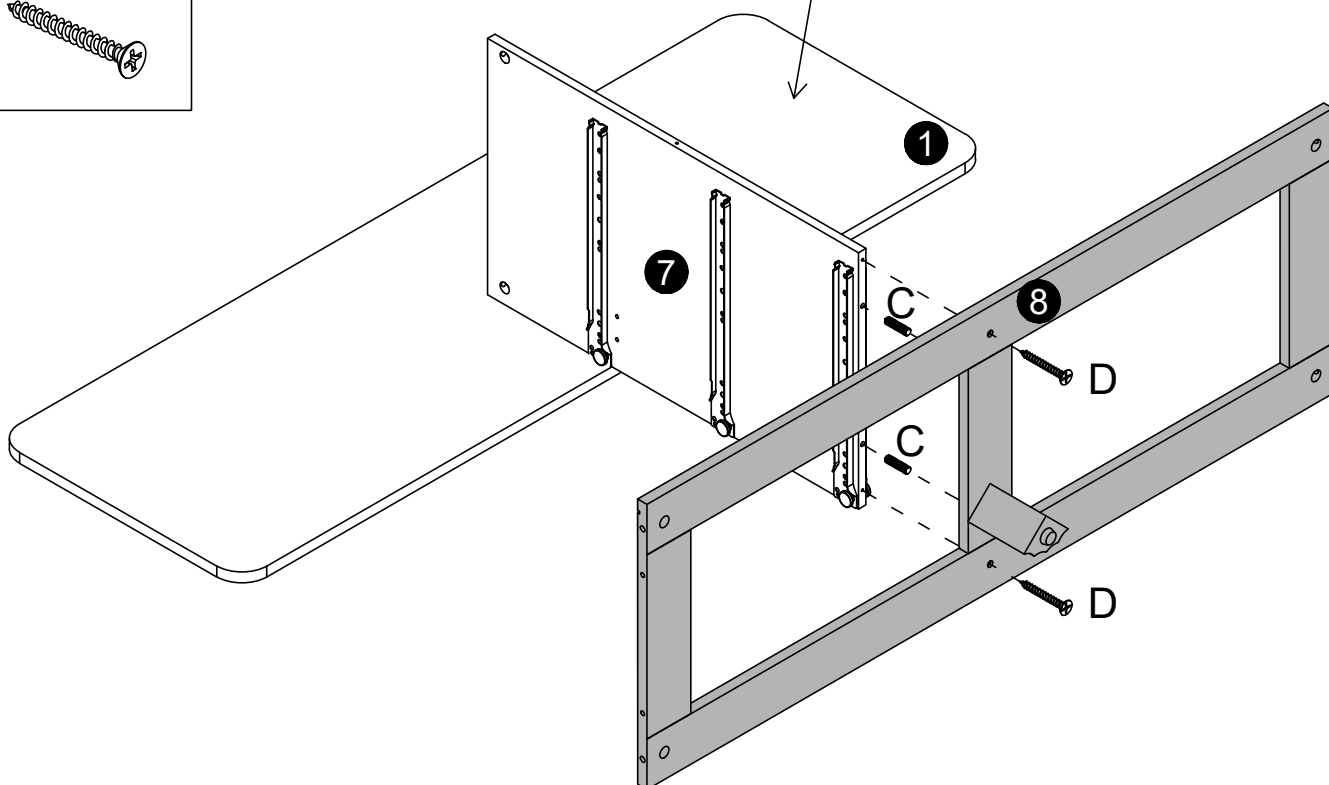

B x2





D x1

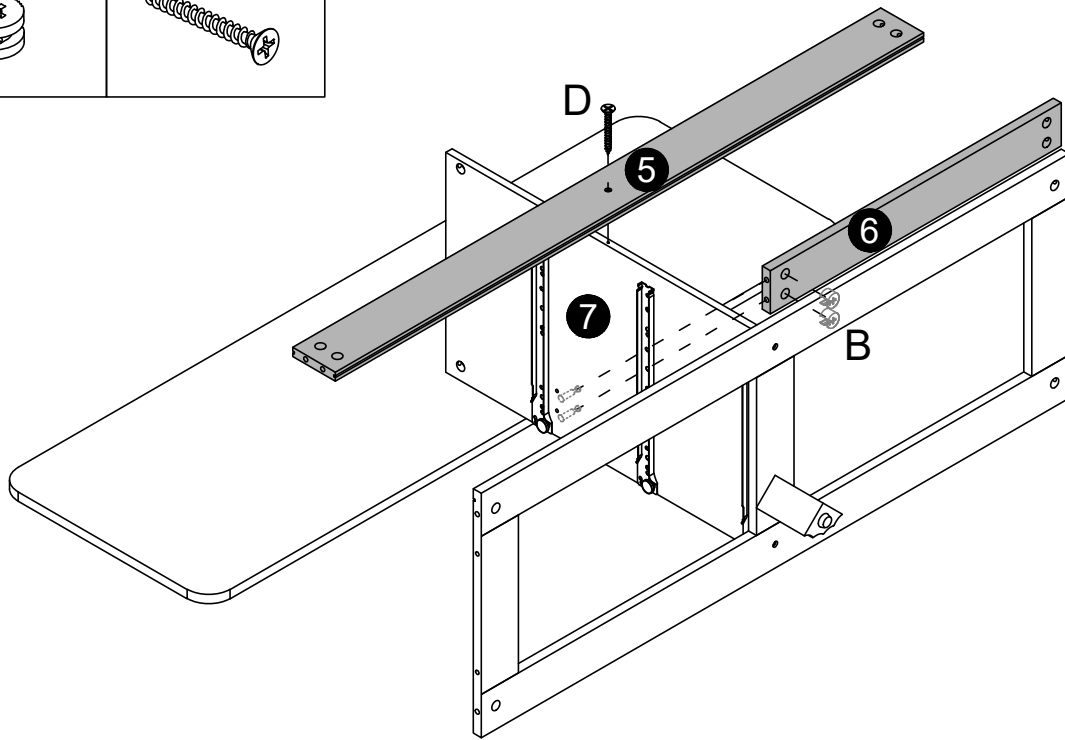


B x6




C x2

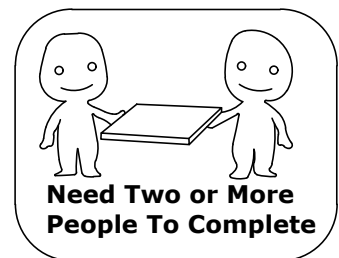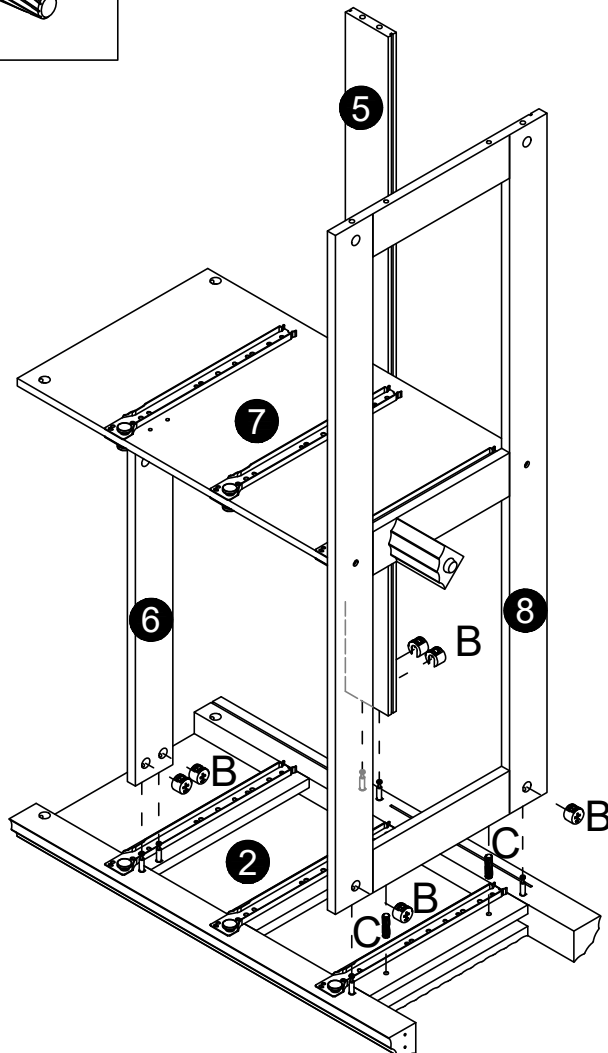

A x2



13

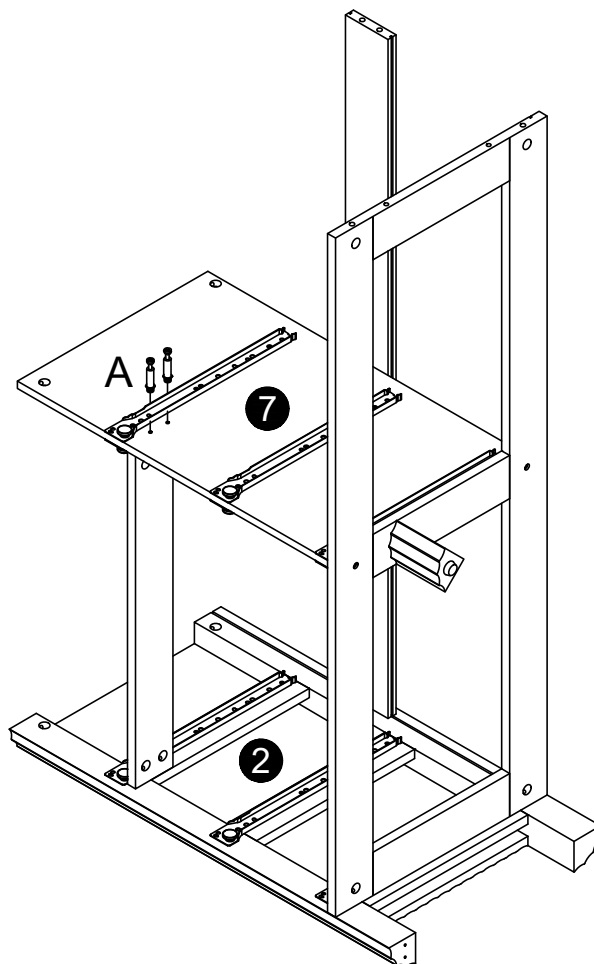


B x2



C x2



14

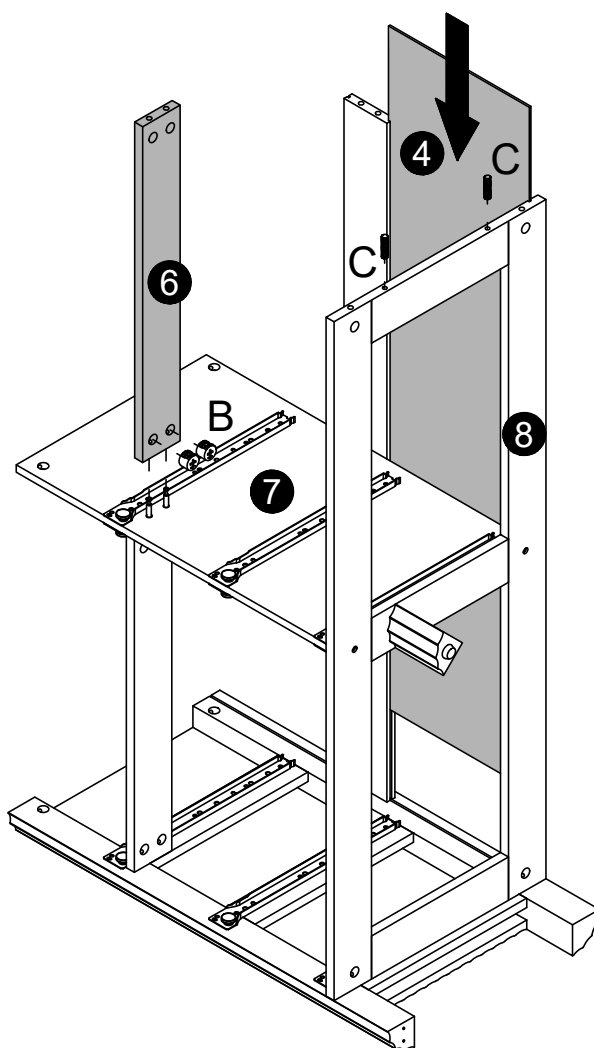





B x6

H x2

L x2

M x4


15

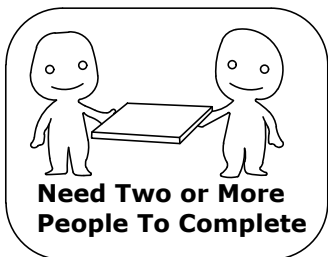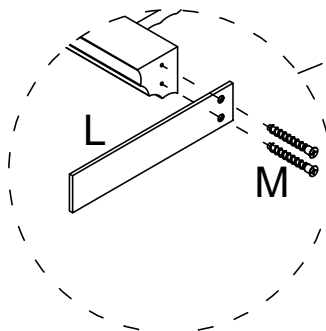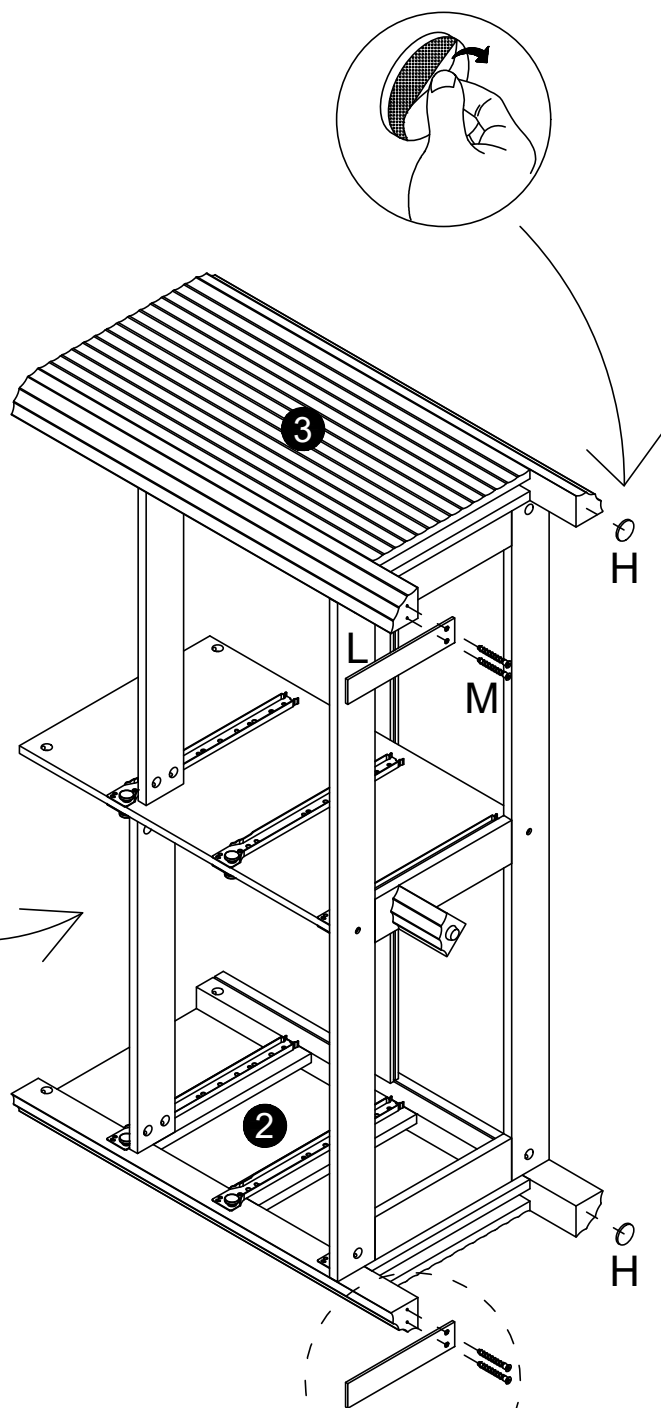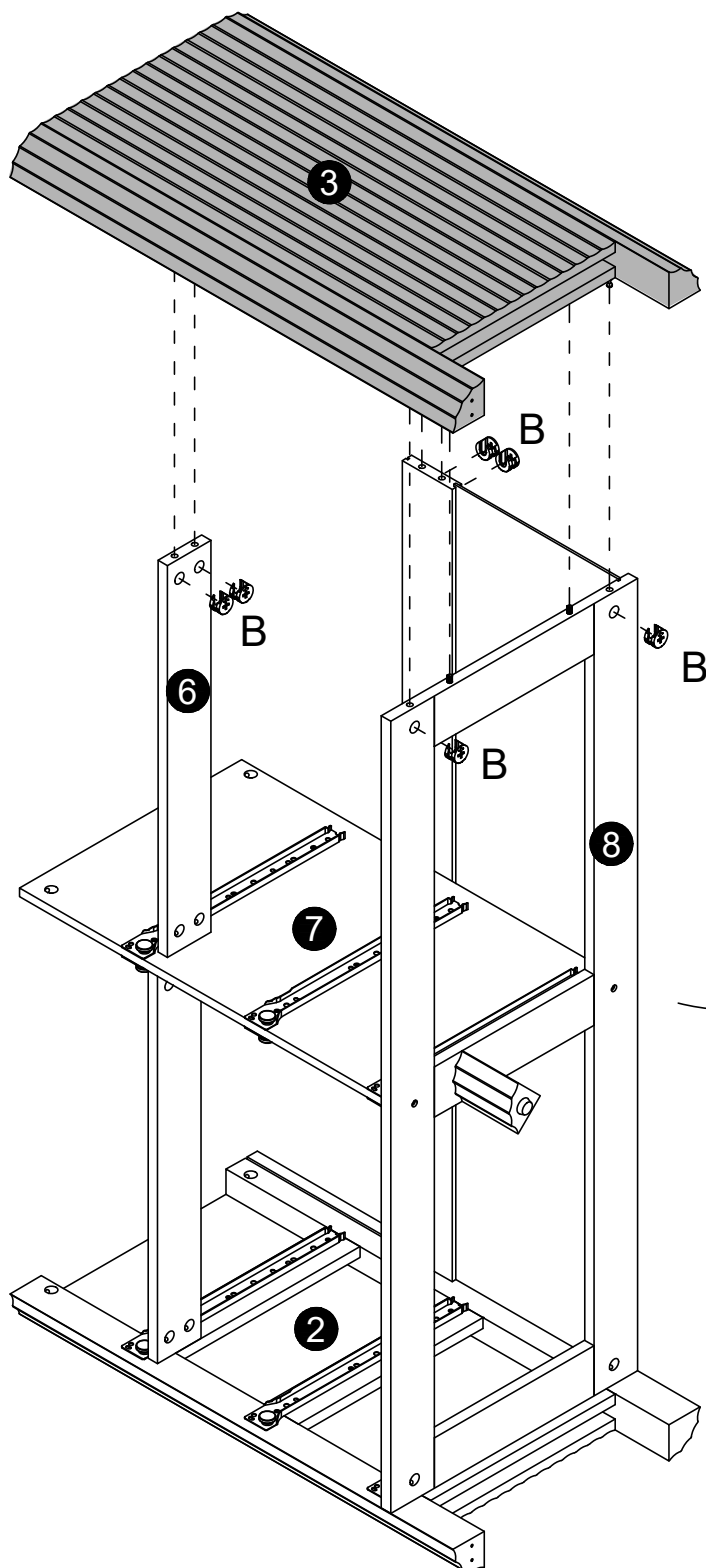


C x6




16


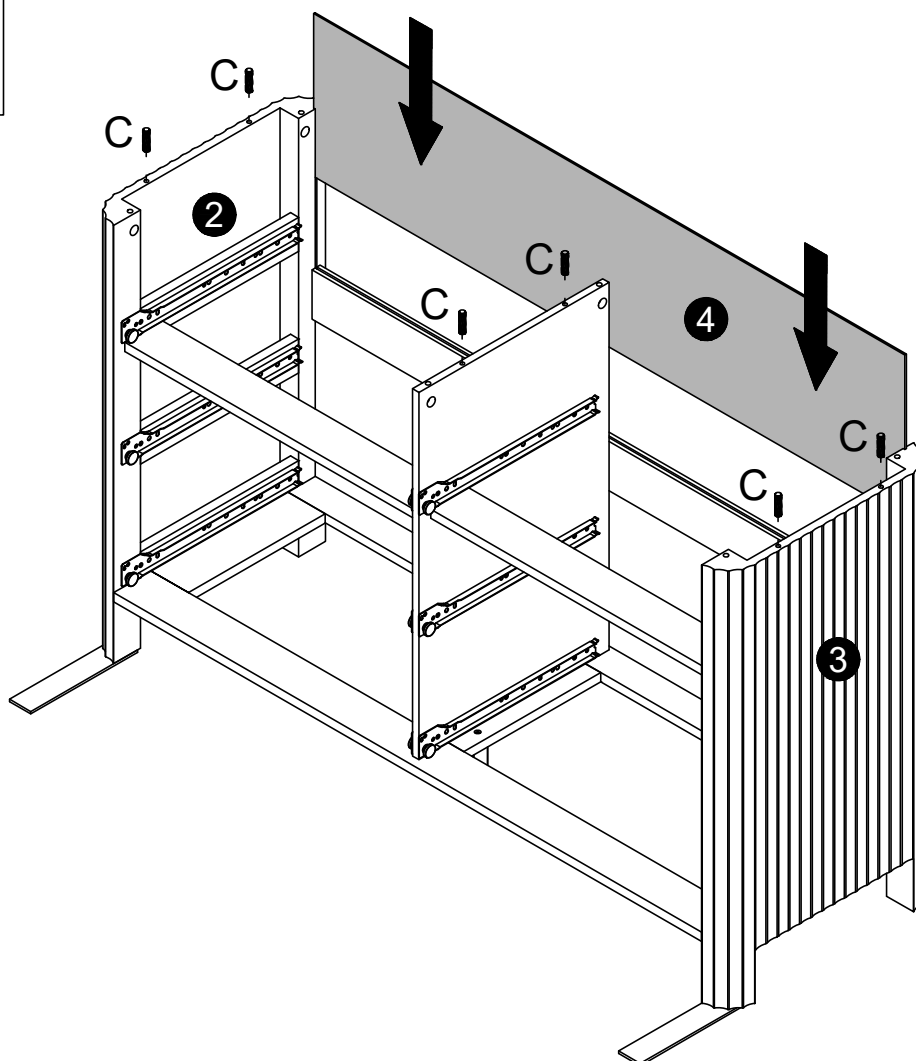


A x6



17

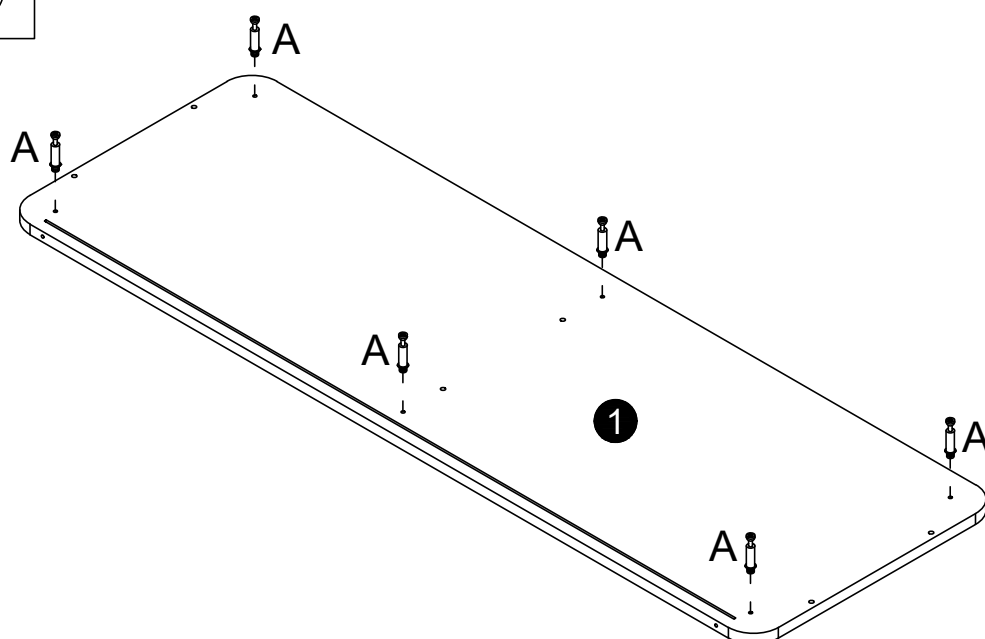

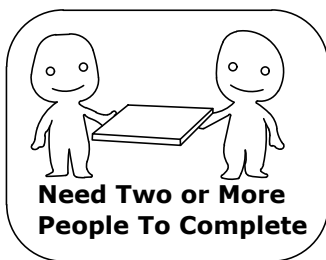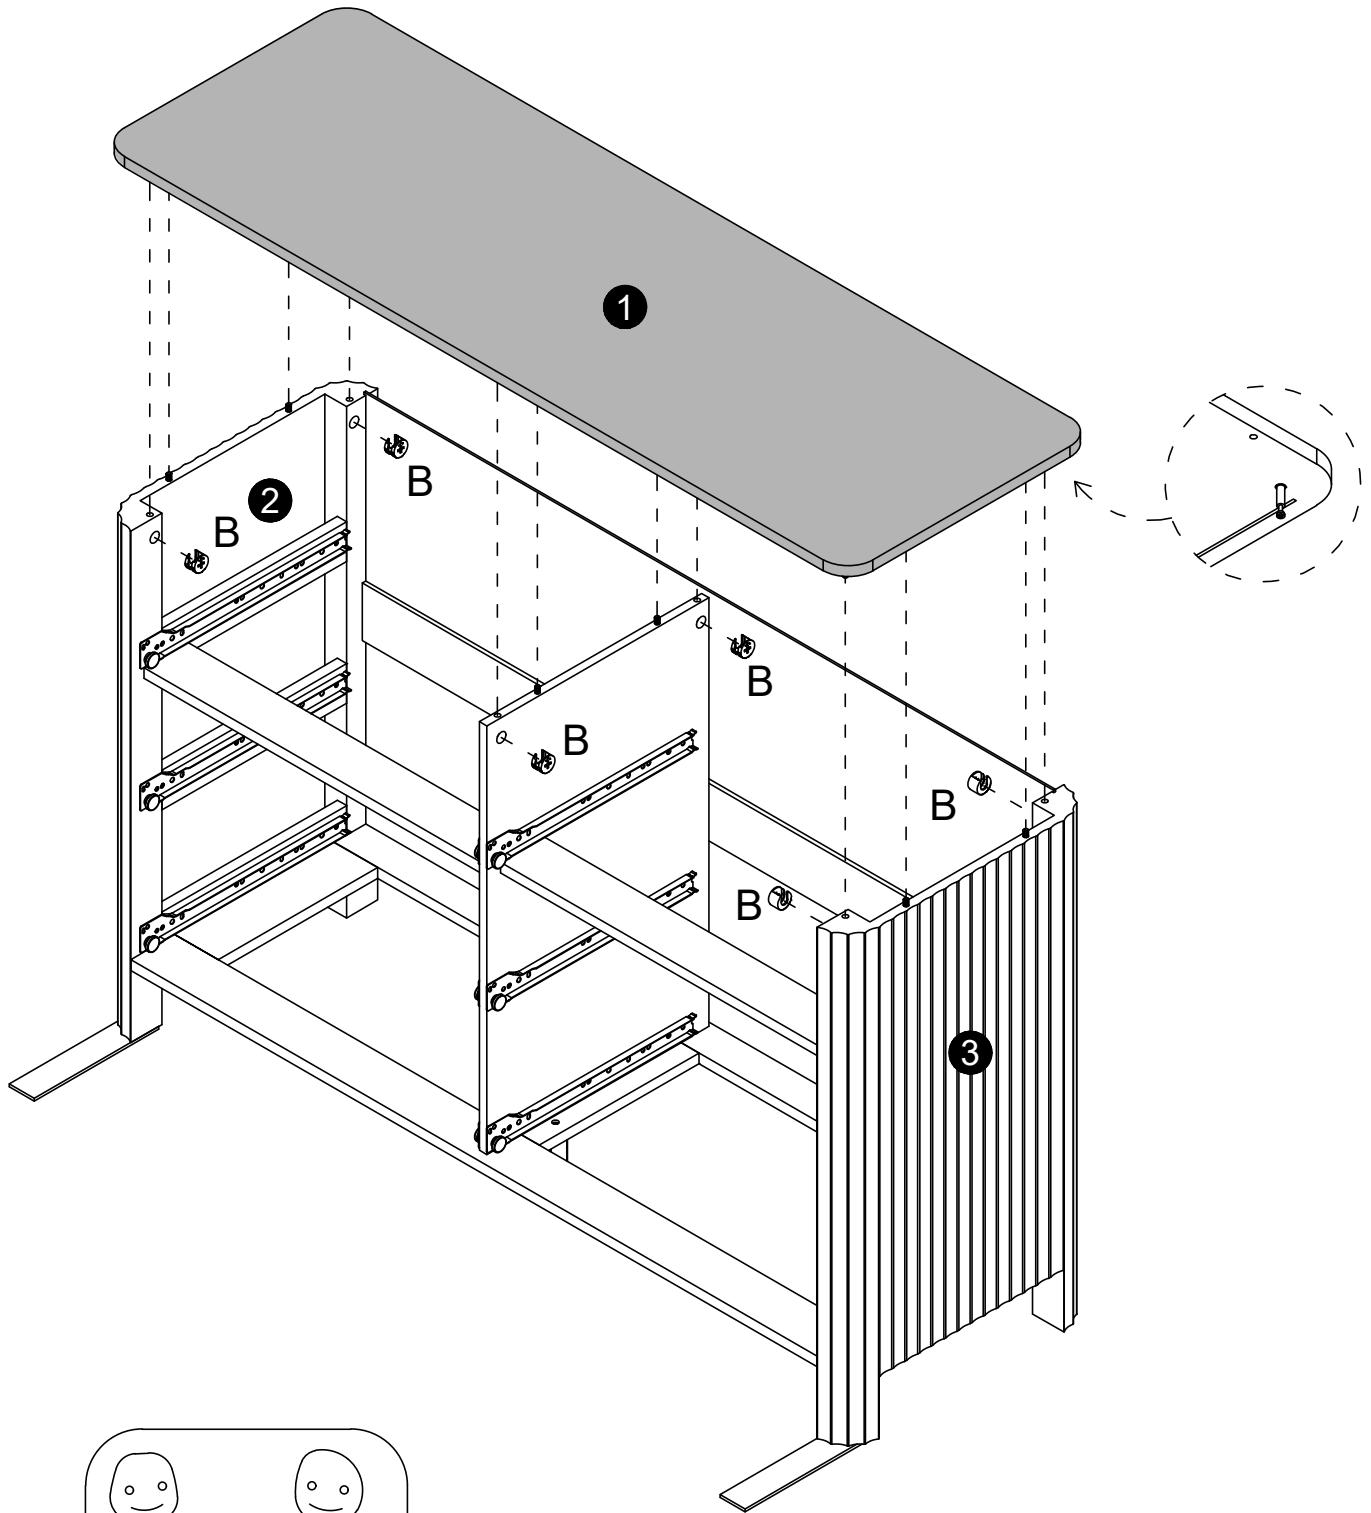



J x10





J-1



J-2


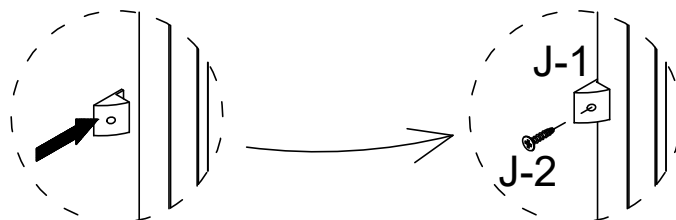
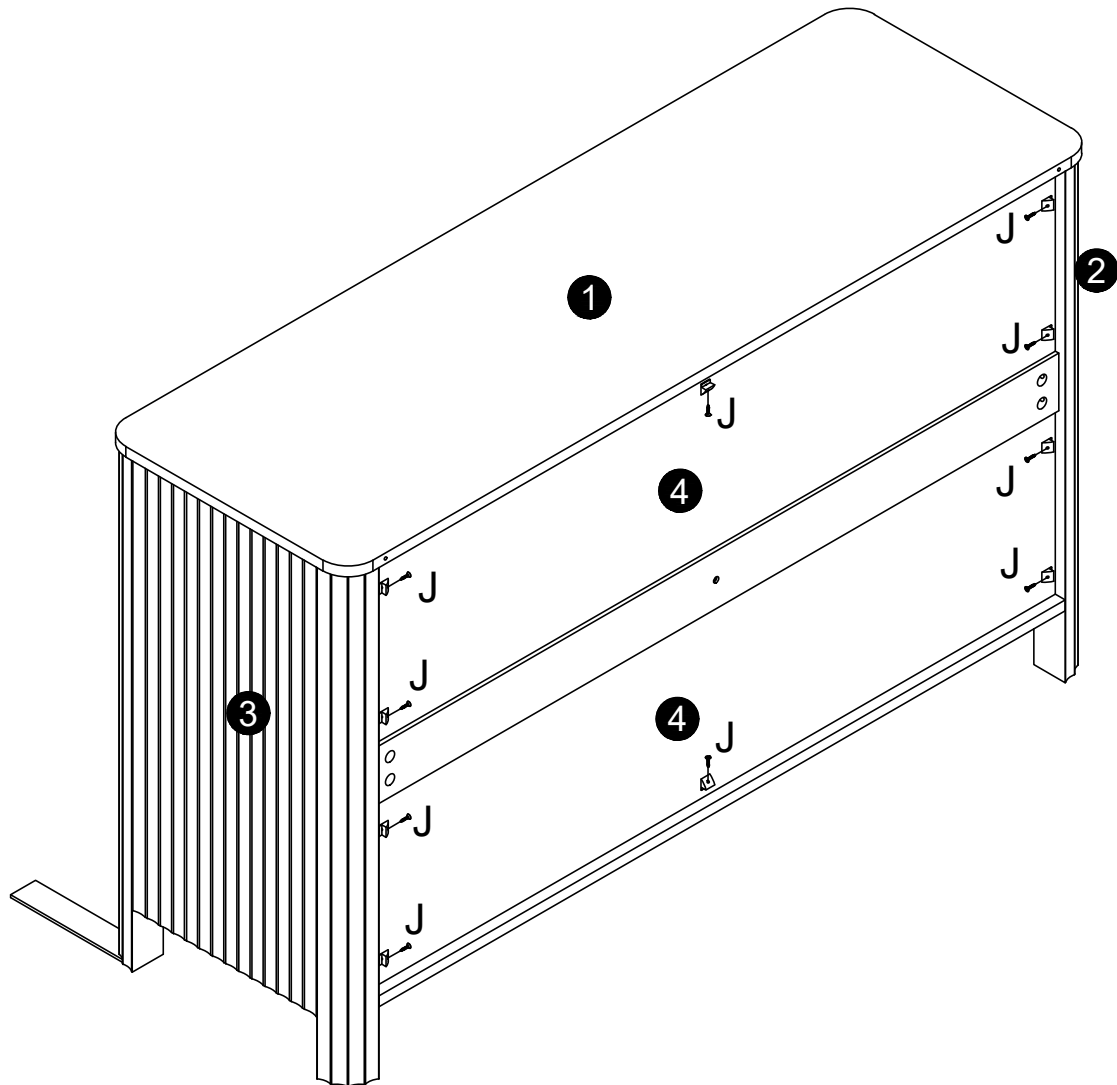


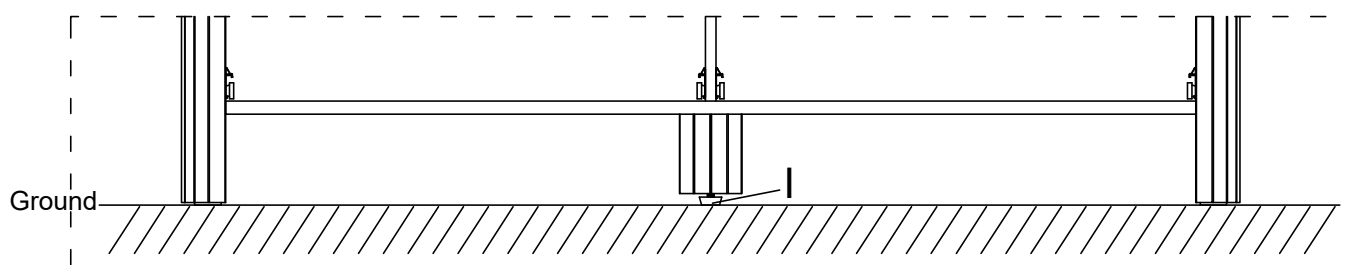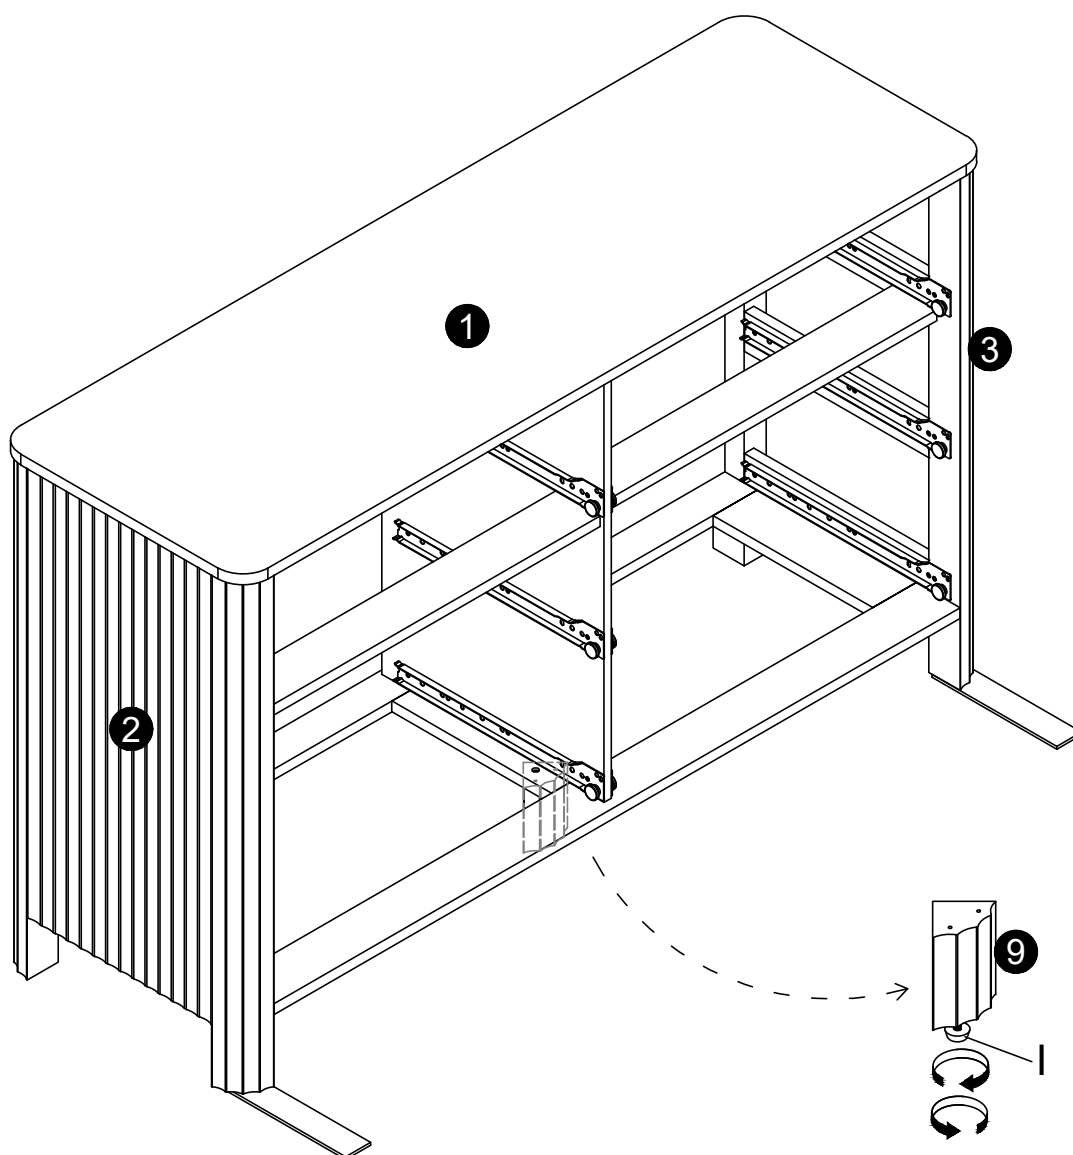

If the cabinet is unstable with the ground, please rotation control the foot fitting (I)




Attention:

There are two types of drawers, namely drawer 15 on the left, drawer 16 on the right . The following illustration shows Drawer 15 on the left .

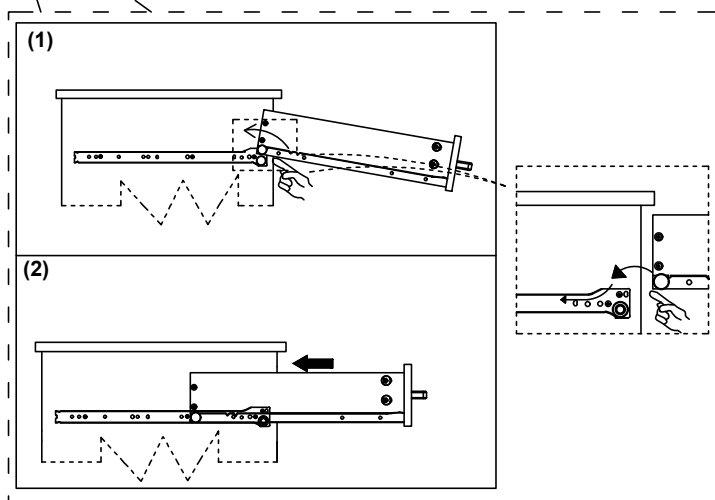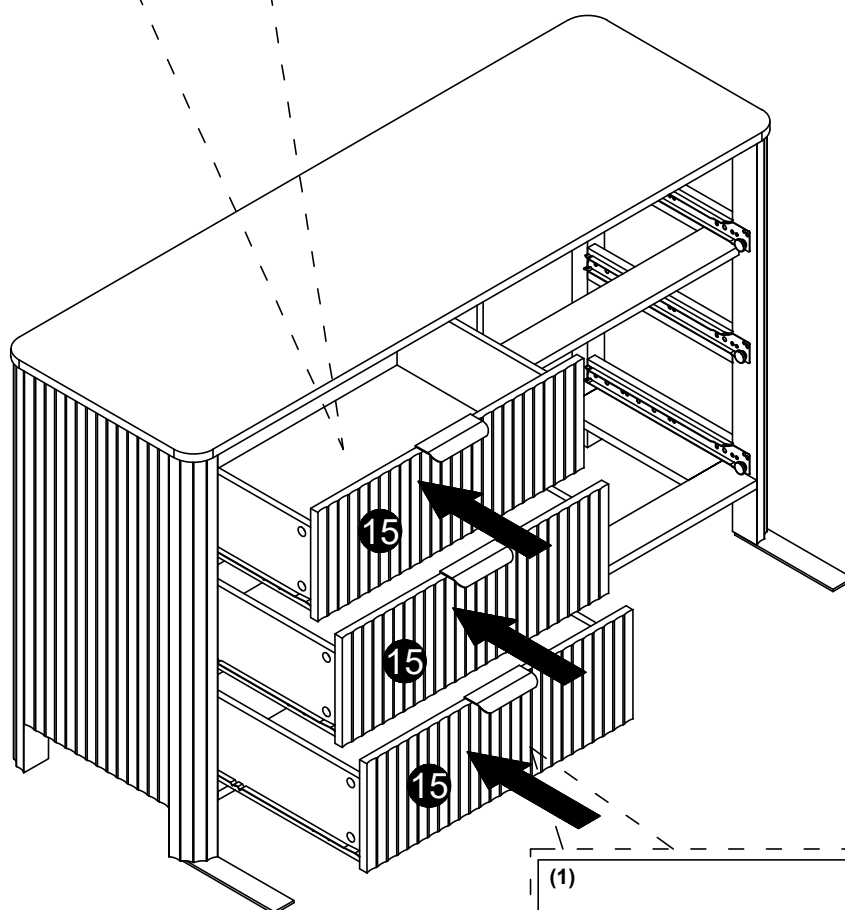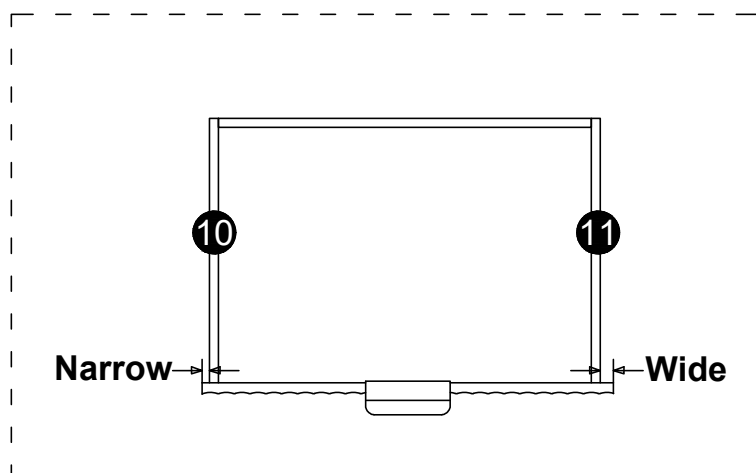


Attention:


There are two types of drawers, namely drawer 15 on the left, drawer 16 on the right . The following illustration shows Drawer 16 on the right .

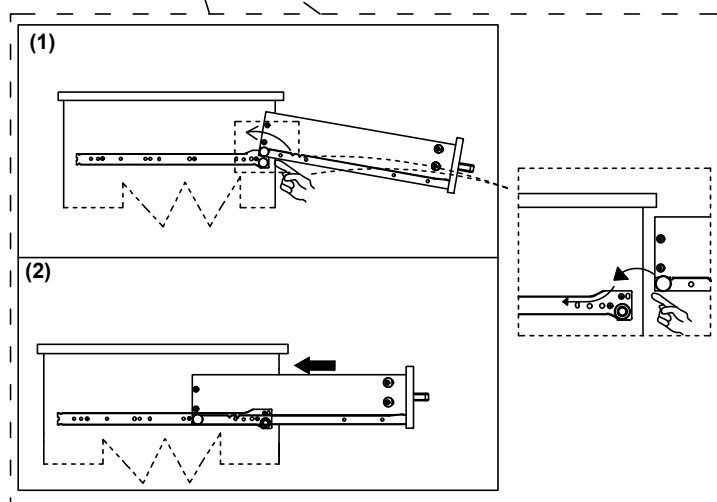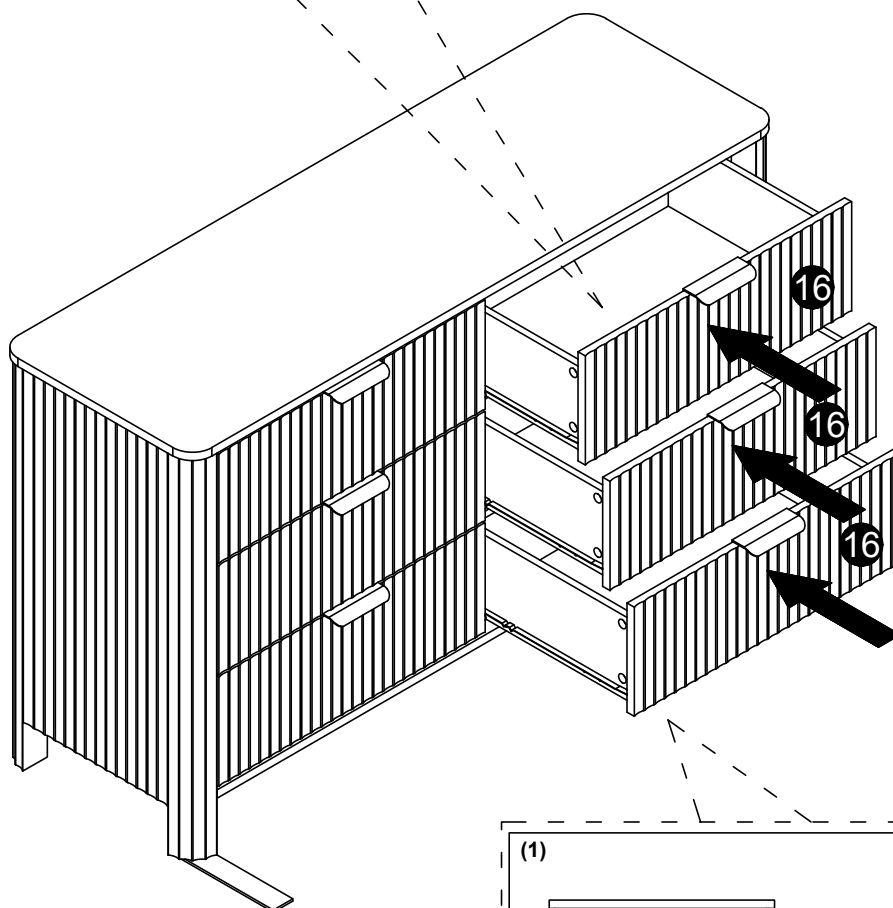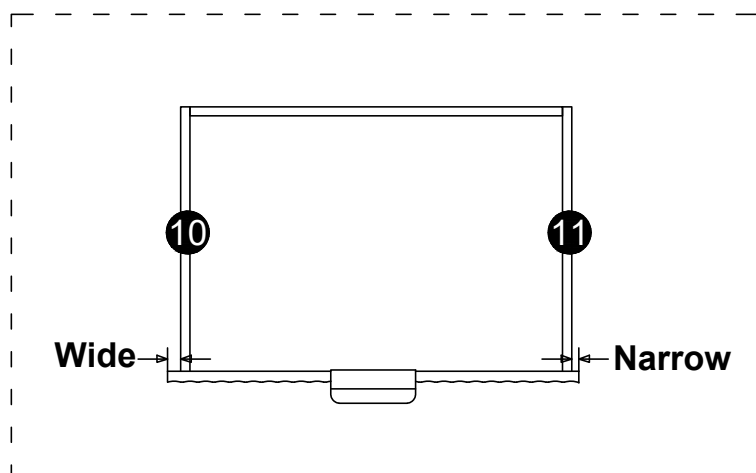


D x2



K x2



N x2




K-1

First fix the anti-rewind screw in the reserved hole of the product.

K-2

(1)x2

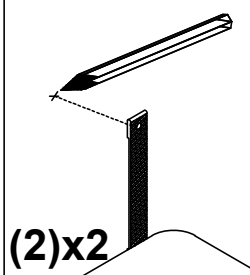

(2)x2

WALL

drilling hole
Ø6x30mm

(3)x2



Then use a tape drill to make holes in the wall that are suitable for the product screws.

WALL

N

(4)x2

WALL

D

(5)x2

Then, put the expansion bolt into the hole

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

WALL

N

K

D

