

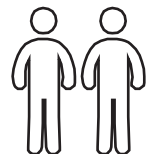








Metal Closet Instructions

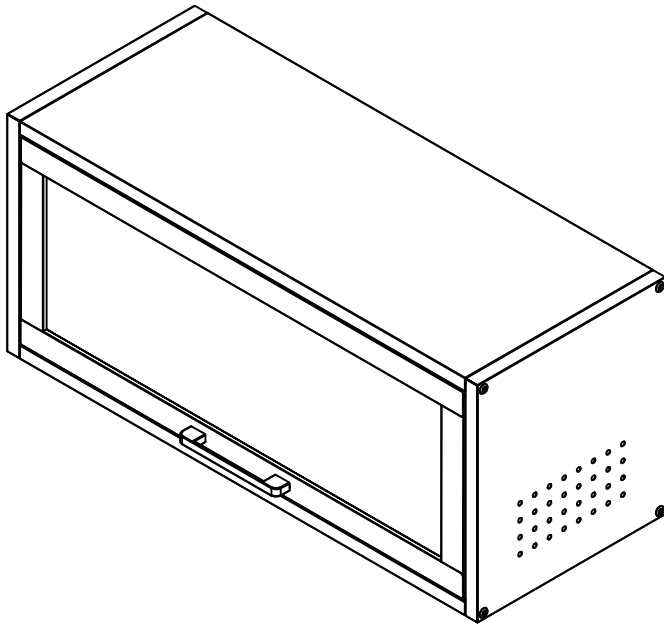




PACKAGE CONTENTS

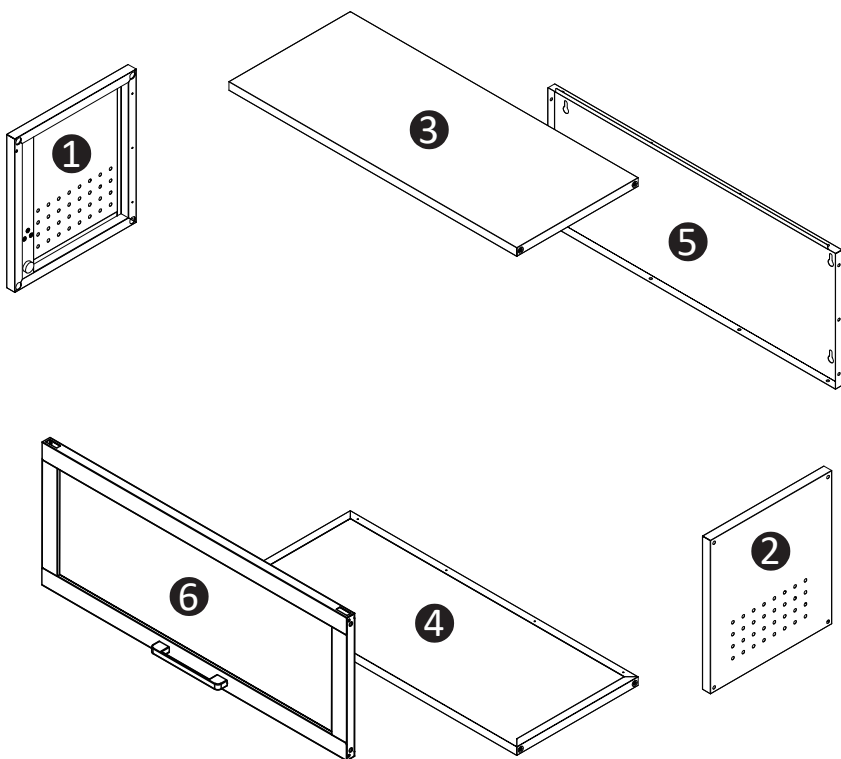

ACCESSORIES

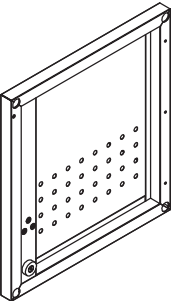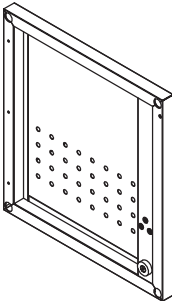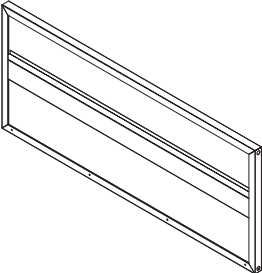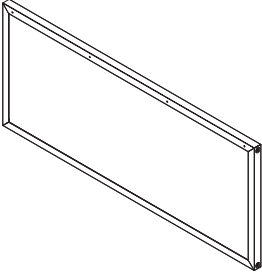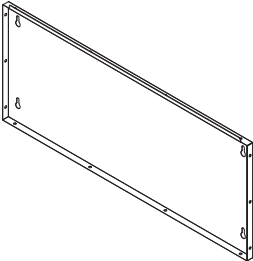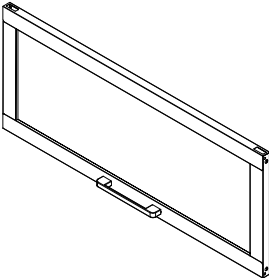
1-Left Side Panel	1pc	2-Right Side Panel	1pc
			
3-Top Panel	1pc	4-Bottom Panel	1pc
			
5-Back Panel	1pc	6-Door	1pc
			

ACCESSORIES

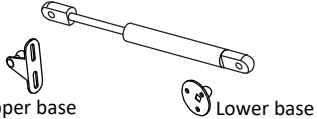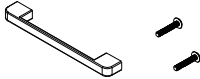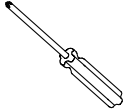
A	Self-tapping screw	14pcs	 M4*10
B	M6*40 Screw	8pcs	
C	M4*12 Screw	10pcs	
D	Expansion bolt	4sets	 M4*30mm M5 M8
E	Hydraulic rod	2sets	 Upper base Lower base
F	Shaft pad	4pcs	
G	Handle	1set	
H	Cross screwdriver	1pc	
I	Glove	1pair	

ASSEMBLY

- 1 Fix the side panels, top and bottom panels together with M6*40 screws (Part B).

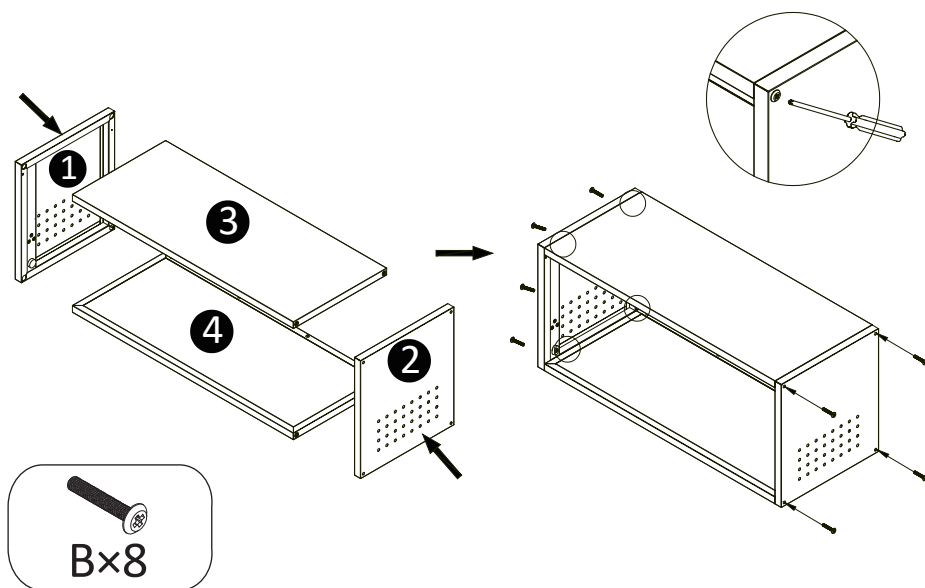


- 2 Place the back panel (Part 5) in the correct direction.

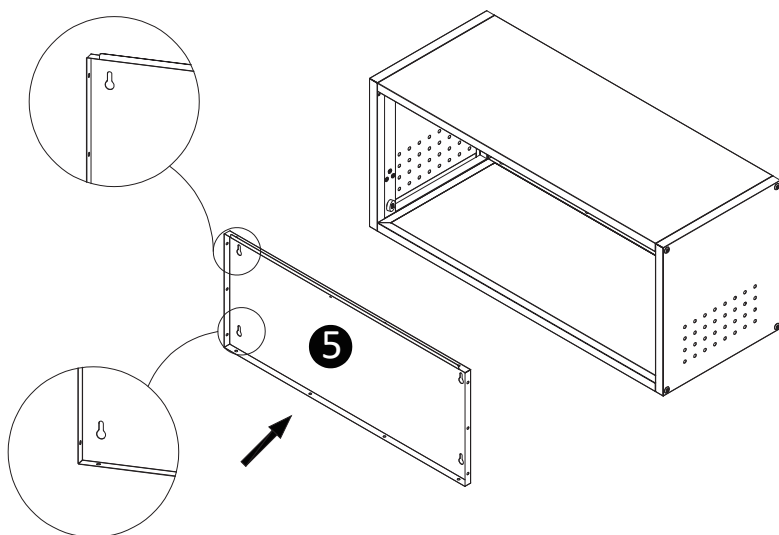


ASSEMBLY

- 3** Fix the back panel with self-tapping screw (Part A).

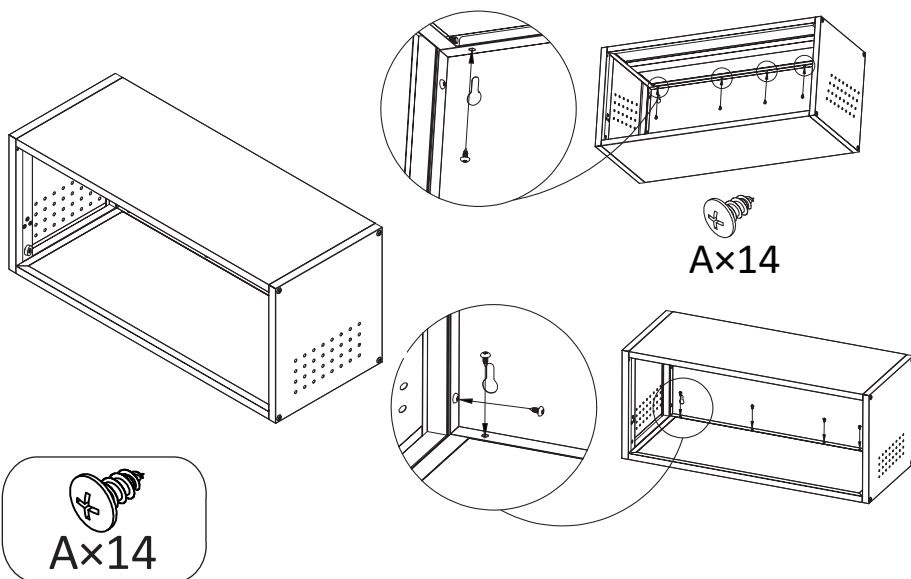


- 4** Install the hydraulic rod lower base (Part E) on the left & side panel with screw (Part C).

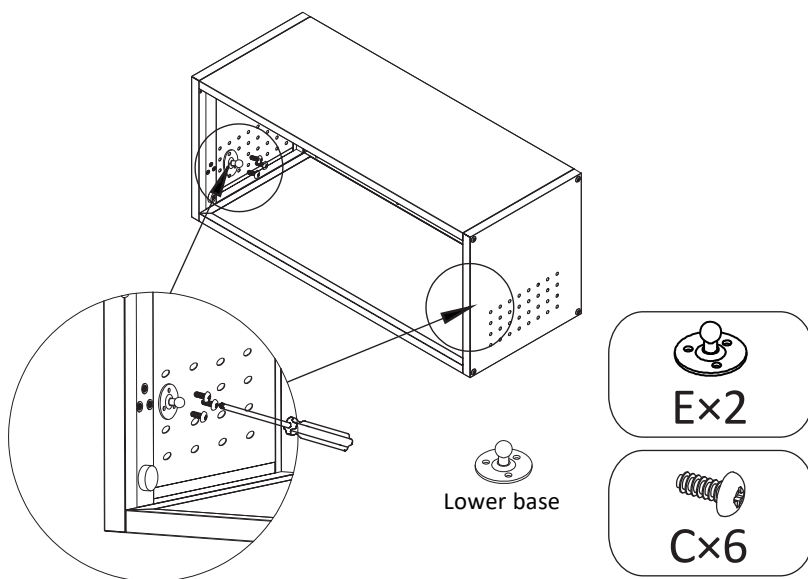


ASSEMBLY

- 5** Fix the hydraulic rod upper base on the door with screw (Part C), install the handle on the door.

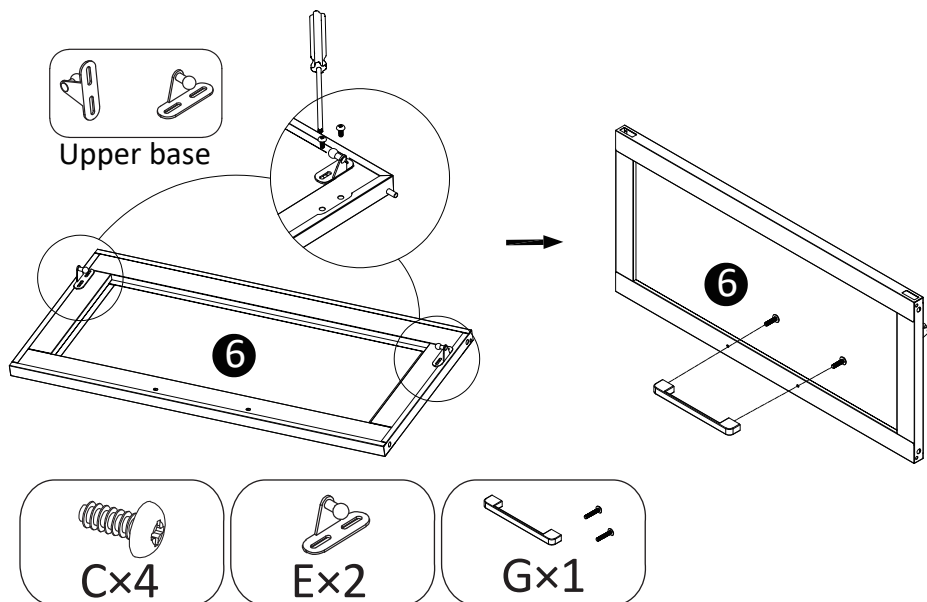


- 6** Put the pad on door shaft, then install the door.

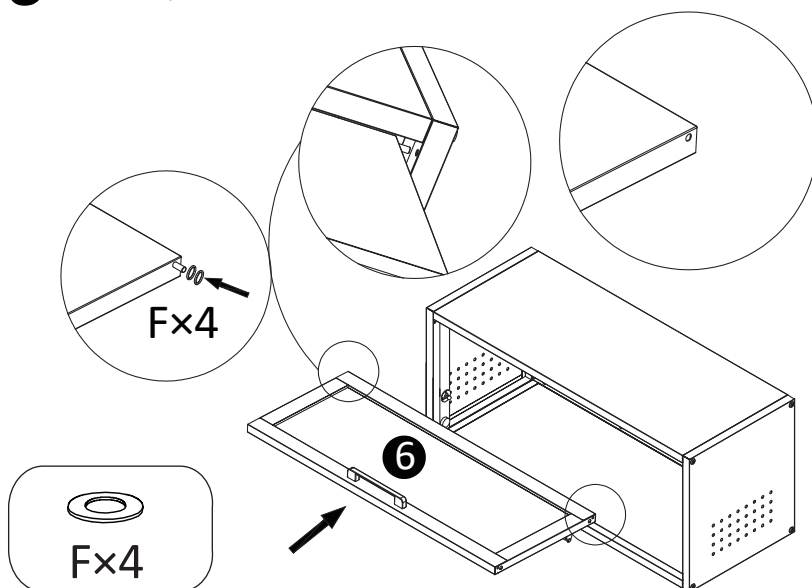


ASSEMBLY

- 7** Install the hydraulic rod on the upper & lower base, according to the corresponding position.

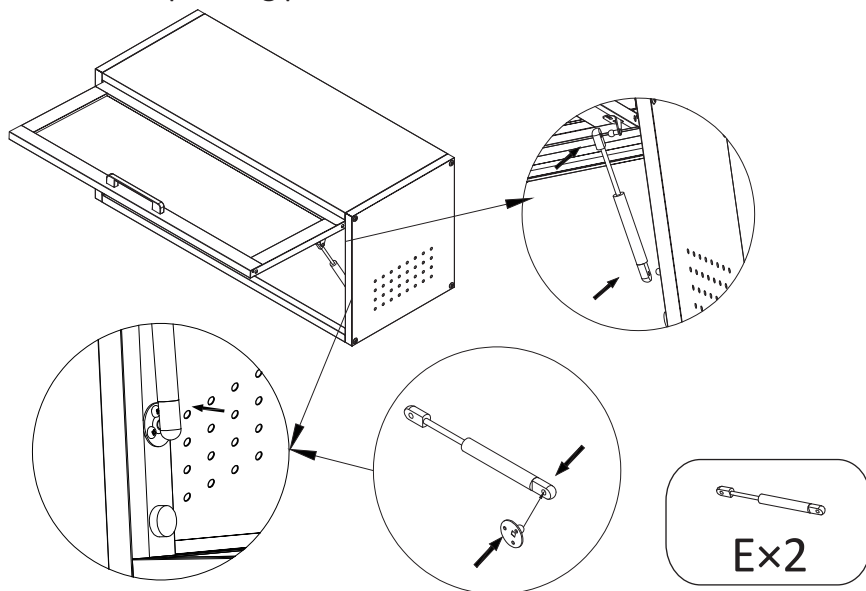

- 8** Fix the cabinet on the wall with the expansion bolt (Part D).

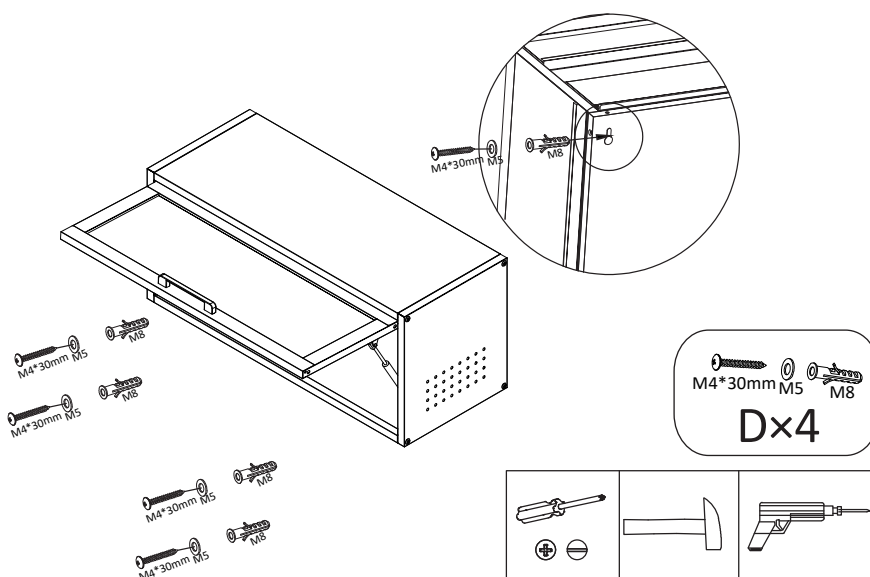

ASSEMBLY

9 Assembly completed.

