

# VANITY

# VANITÉ

## SUGGESTED TOOLS AND MATERIALS / OUTILS ET MATÉRIAUX SUGGÉRÉ




Sealant / Scellant



Tape Measure / mètre à ruban


## INSTALLATION INSTRUCTIONS / LES INSTRUCTIONS D'INSTALLATION

1

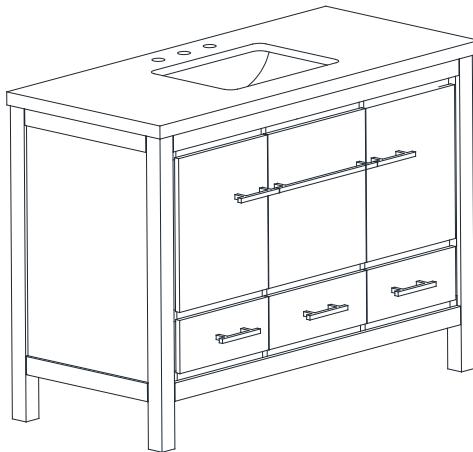


Remove vanity from box and examine for any defects or damage.  
*Retirez la vanité de la boîte et examiner pour les défauts ou les dommages.*

2

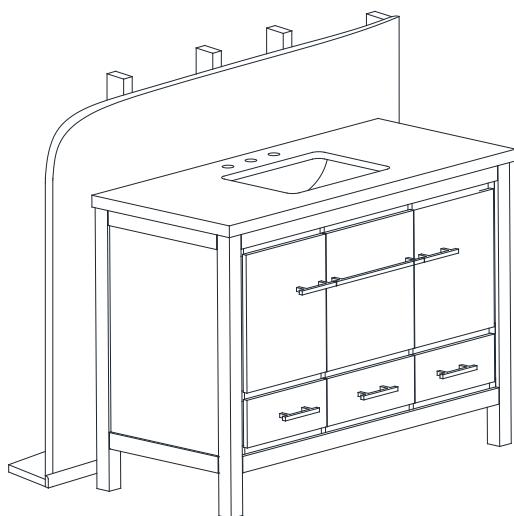


Place vanity against wall, making sure vanity top is flush against the wall. Apply bead of quality sealant evenly along the top of the vanity.  
*Placez la vanité contre le mur, en veillant dessus de vanité est contre le mur. Appliquer du mastic de qualité uniformément le long de la partie supérieure de la vanité.*

3

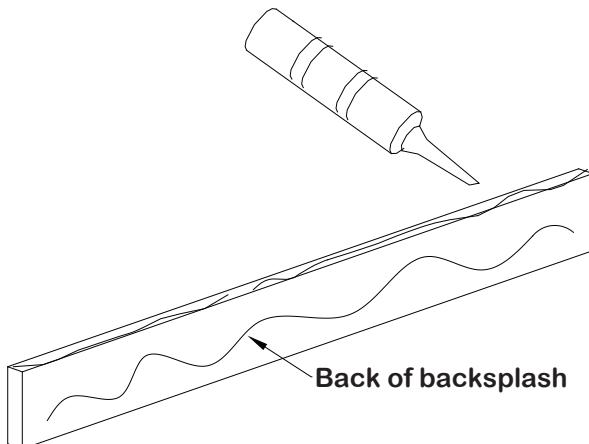

Apply a few thin beads of sealant (not included) to unpolished back and bottom edge of backsplash. Make sure all surfaces are dry.  
*Appliquez quelques perles fines de scellant (non inclus) à dos et le bord inférieur du dossier. Assurez-vous que toutes les surfaces sont sèches.*

4

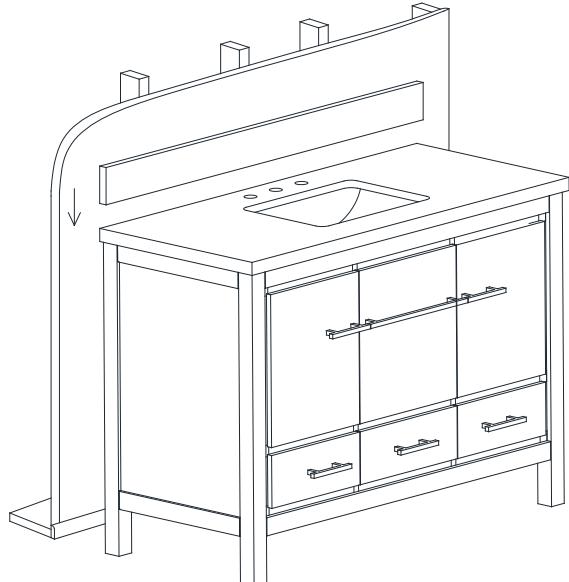

Set unpolished bottom edge of backsplash with sealant bead on vanity top and press gently against wall and down on vanity top.  
*Ensemble contre le bord inférieur du dossier avec cordon de scellant sur le dessus de la vanité et appuyez doucement contre le mur et sur le dessus de la vanité.*