


ENCLO

HIDE IT WITH STYLE

ASSEMBLY INSTRUCTIONS **EC18045**

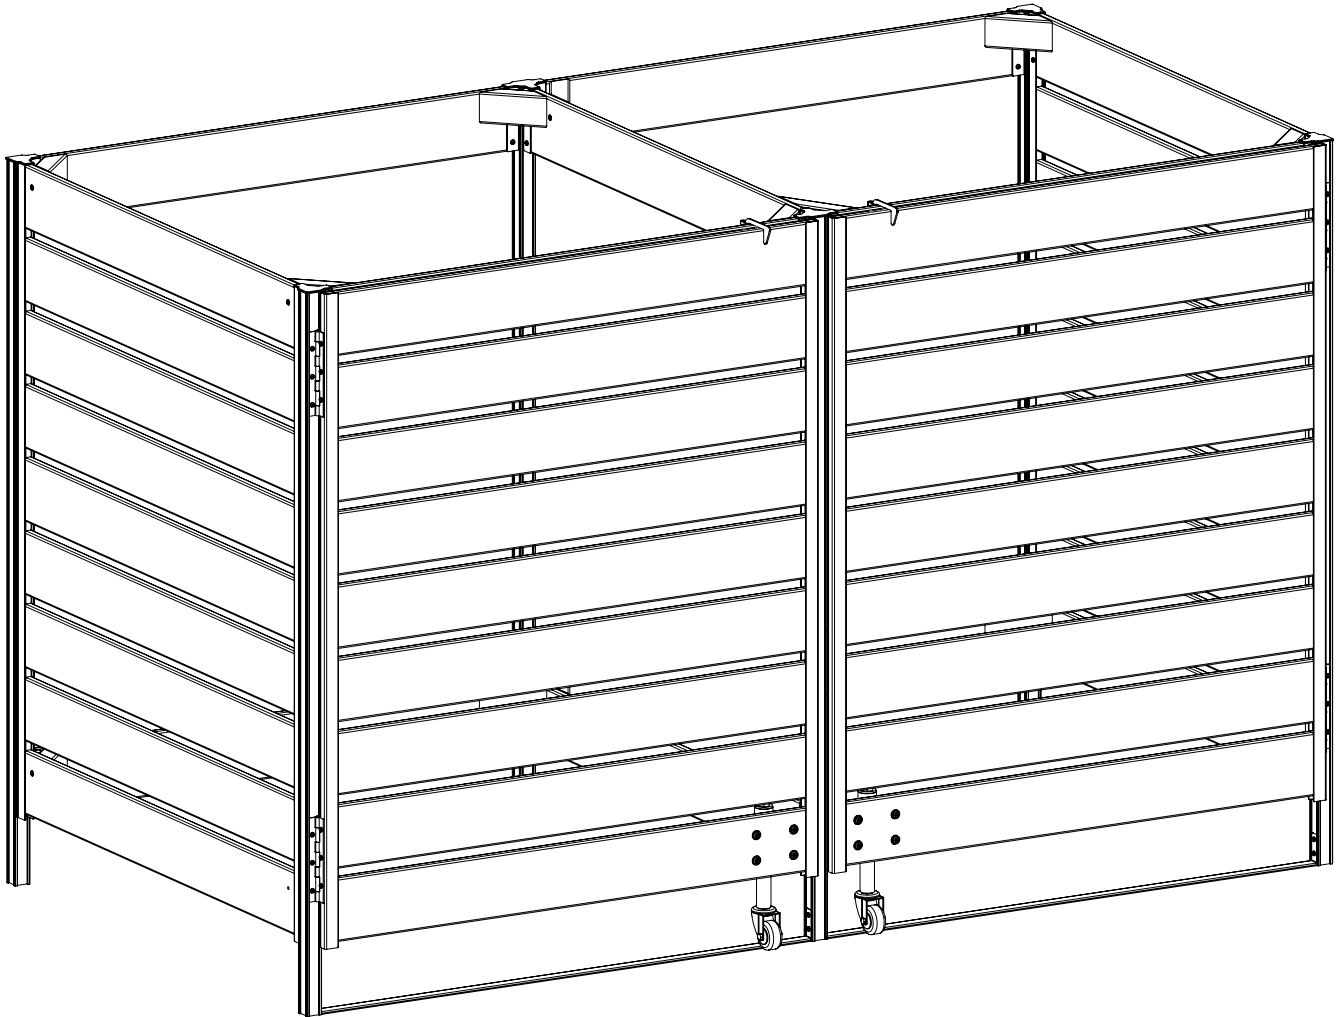

www.encloscreens.com



3 hours
Approximate assembly



Scan the QR code
for an assembly video

Dual Bin

Garbage Enclosure

80 1/4" W x 41 1/2" L x 50 7/8" H

VER. 080725

GENERAL INFORMATION

MISSING OR DAMAGED PARTS?



➤ **Visit Our Website**
so we can help you right away!
parts.nychbrands.com

* You can also reach us via phone or email.

Hours of Operation - **Weekdays 9am-5pm EST**

To better help you, **please have the following**

- Your product number (**EC18045**)
- Your affected part letters (**pages 4-7**)
- Your original product box

NEED ASSEMBLY HELP?


If you are having problems with assembly or installation of this product,
please contact at:

📞 **704-892-5222 / 877-234-6196** ✉ **support@encloscreens.com**


NEED TO RETURN?

If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

DETAILED **PRODUCT DIMENSIONS & SPECIFICATIONS**

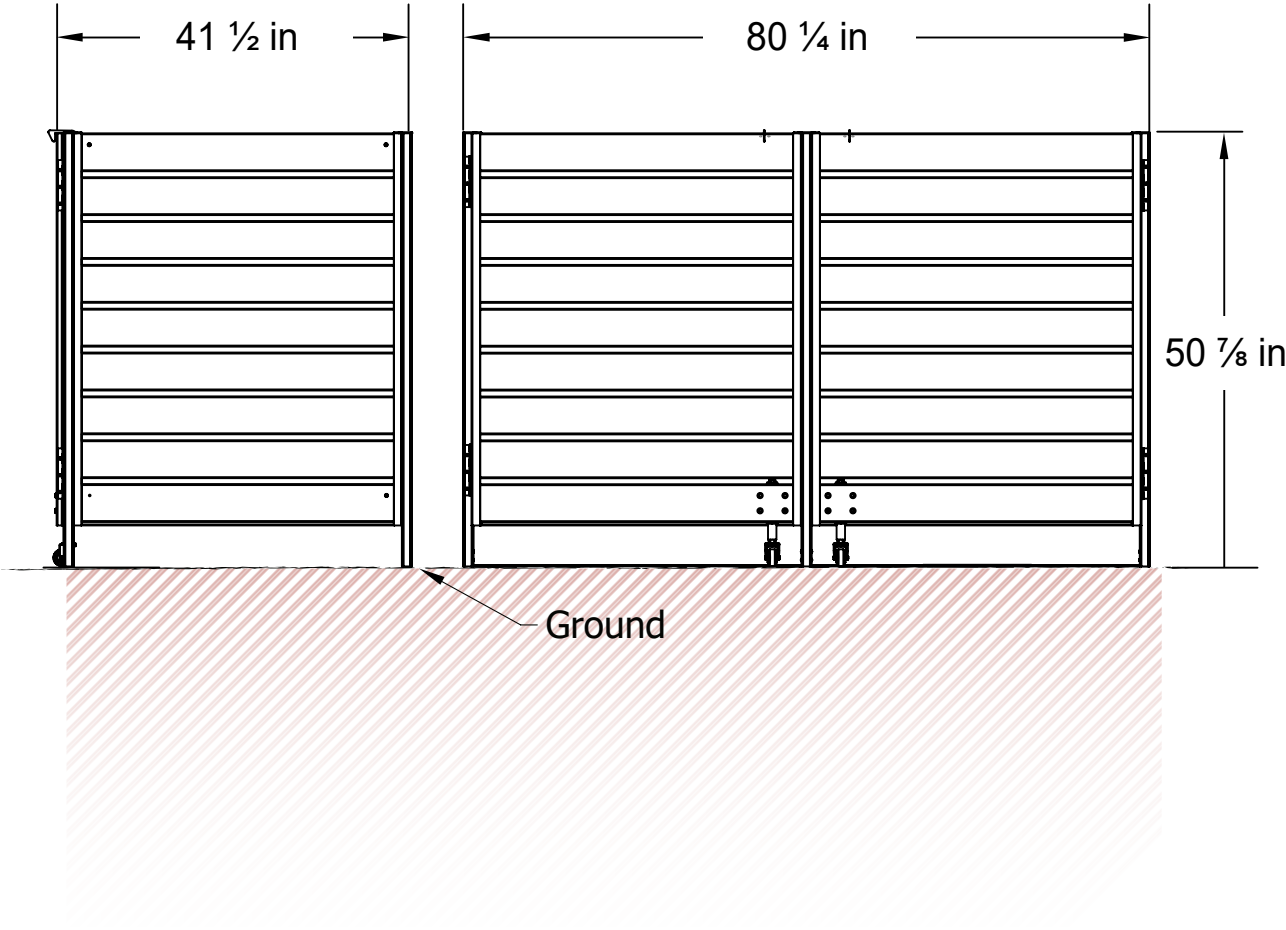


LAY OUT MATERIALS

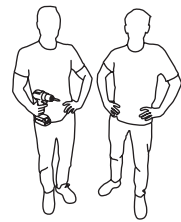

We recommend
2 people for
a smoother
assembly.


► Tools required for a smoother
installation experience.

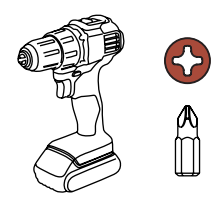


► Power Drill with Phillips Bit

POSTS


P-1 x1

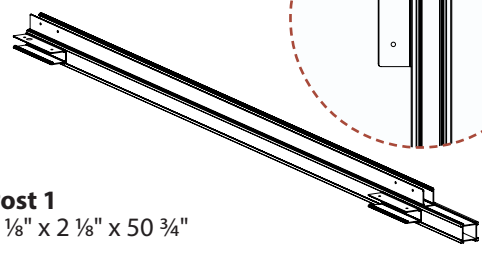


Post 1
2 1/8" x 2 1/8" x 50 3/4"

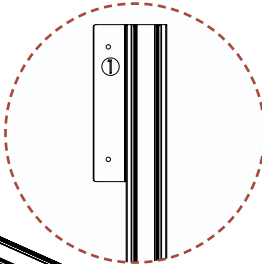


P-2 x1

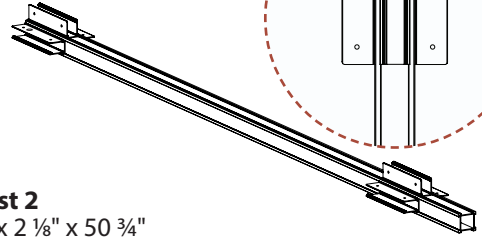


Post 2
3" x 2 1/8" x 50 3/4"

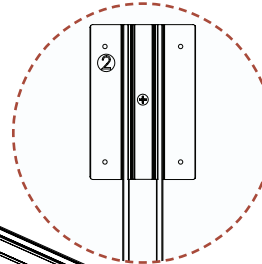


P-3 x1

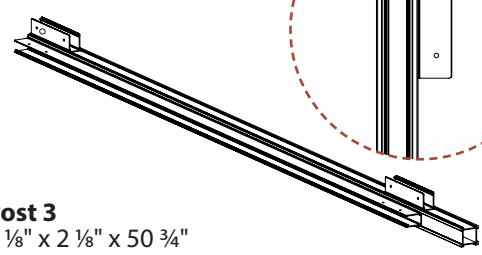


Post 3
2 1/8" x 2 1/8" x 50 3/4"

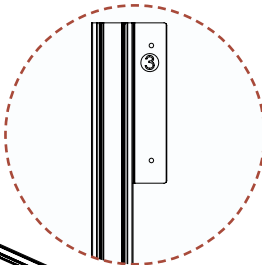


P-4 x1

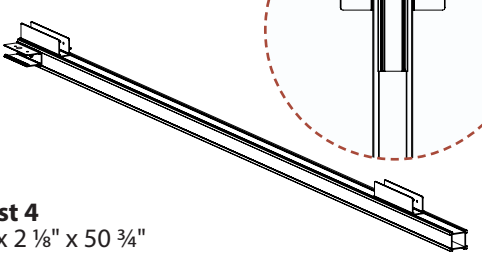


Post 4
3" x 2 1/8" x 50 3/4"

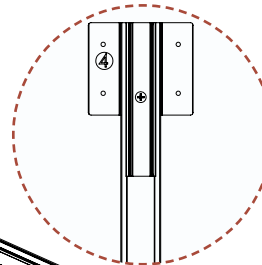


P-5 x1

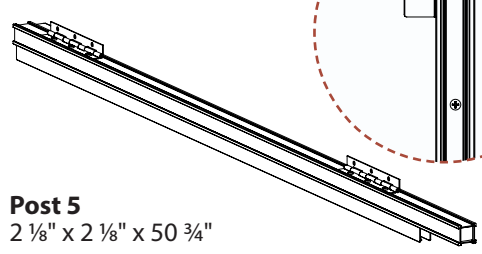


Post 5
2 1/8" x 2 1/8" x 50 3/4"

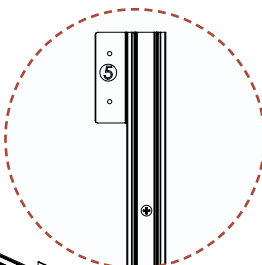

P-6 x1

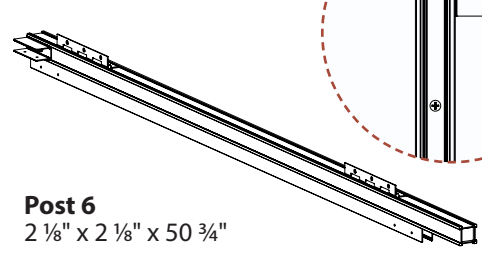


Post 6
2 1/8" x 2 1/8" x 50 3/4"

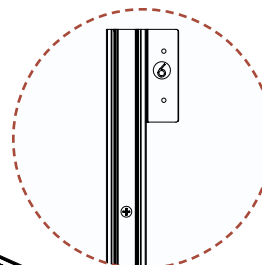

LAY OUT MATERIALS


WOOD BOARDS

A
BRD111 x8

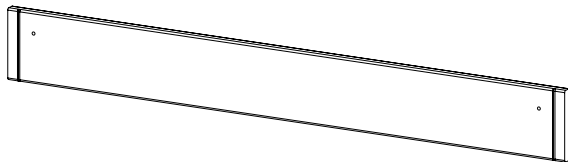

Top Board
5/8" x 4 1/2" x 38 1/4"


B
BRD082 x30

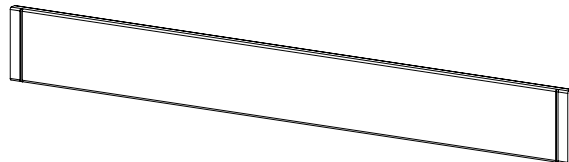

Wood Board
5/8" x 4 1/2" x 38 1/4"


BOX 2

C
BRD112 x2

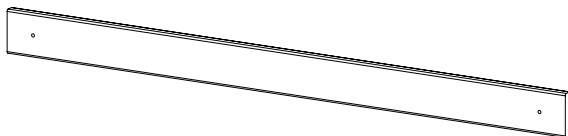


Front Bridge Board
5/8" x 2 1/2" x 38 1/4"

D
BRD113 x2

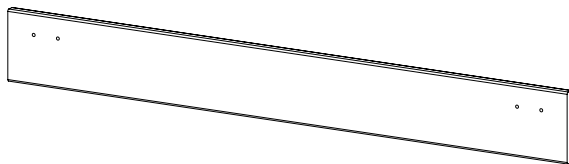


Middle Board
5/8" x 4 1/2" x 38 1/4"

E
BRD114 x2

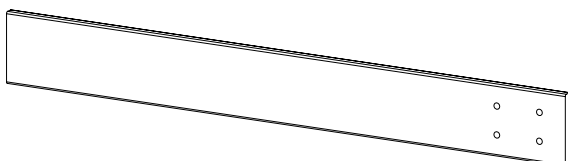

Gate Door Bottom Board
5/8" x 4 1/2" x 38 1/4"


F
ACC140 x9

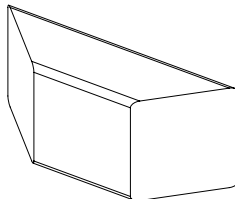

Corner Brace
4 3/4" x 2 1/8" x 1 3/8"

BOX 2


G
ACC141 x3

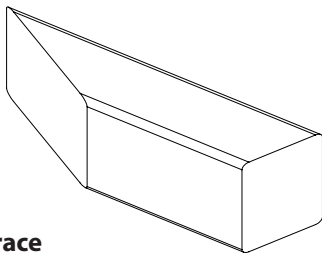

Inside Corner Brace
6 1/4" x 2 1/8" x 1 3/8"

BOX 2

H
x2









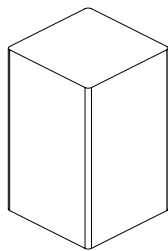


Gate Wood Spacer

BOX 2














LAY OUT MATERIALS

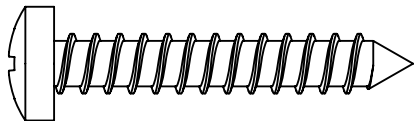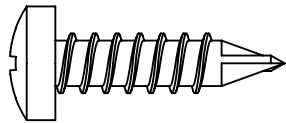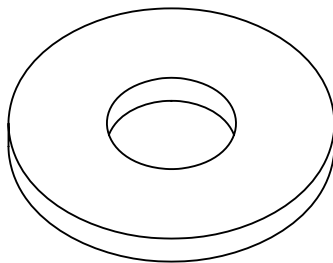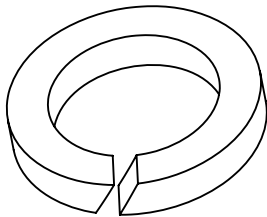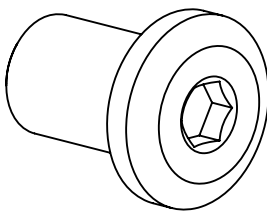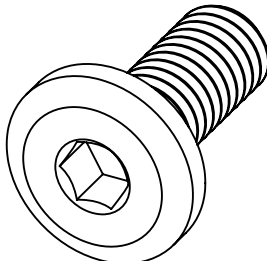HARDWARE & ACCESSORIES	
I x24  1 3/8" Wood Screw	J x4  5/8" Wood Screw
K x12  1" Self-Tapping Screw	L x8  1/2" Self-Drilling Screw
M x64  5/8" Self-Drilling Screw	N x16  Washer
O x8  Spring Lock Washer	P x8  Nut
Q x8  Socket Screw	




LAY OUT MATERIALS

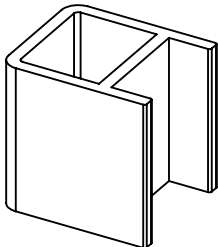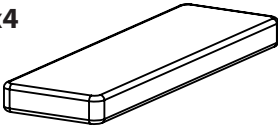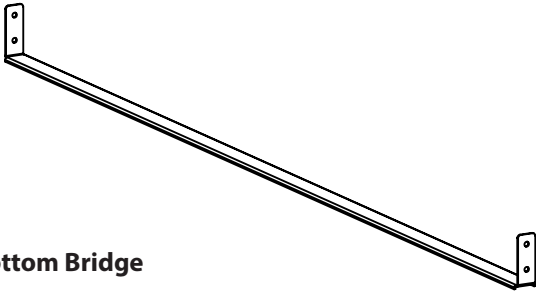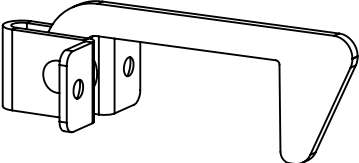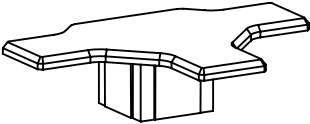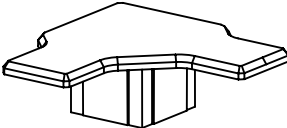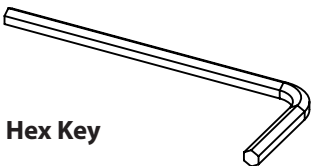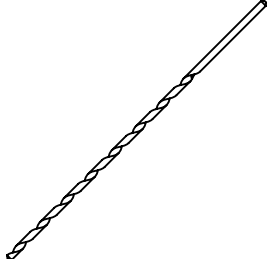
HARDWARE & ACCESSORIES		
R x64  Plastic Spacer	S x2  Caster Wheel	T x4  Magnet
		T-1 x4  Tape
U x2  Bottom Bridge	V x4  Gate Frame	
W x2  Gate Stop	X x2  Middle Post Caps	Y x4  Corner Post Caps
Z x2  Hex Key	Z-1 x1  Wrench	Z-2 x1  Drill Bit




1

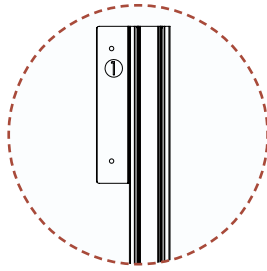


P-1 x1

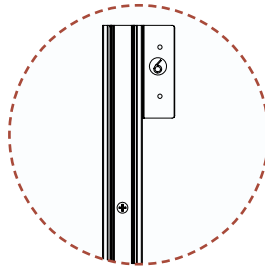


P-6 x1

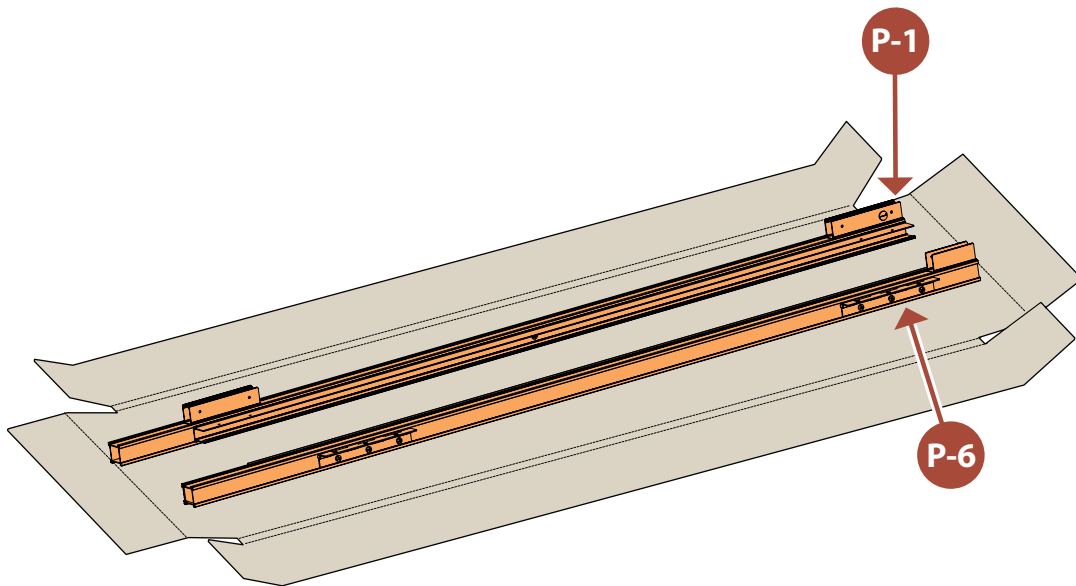


Stand Posts

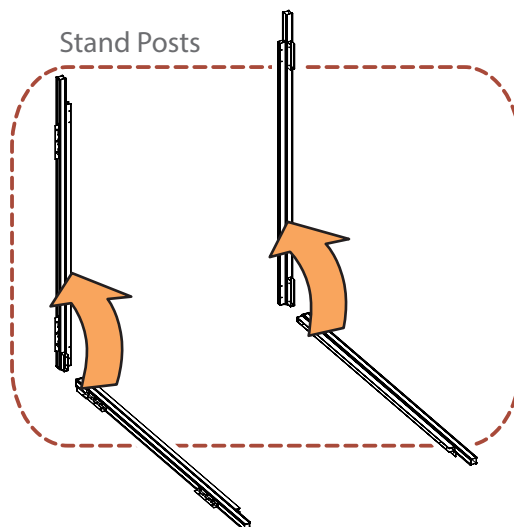

2

**A** x1
BRD111**R** x2

⚠ Ensure that the hole on Top Board **(A)** is facing down. Follow with one Plastic Spacer **(R)** on each side.

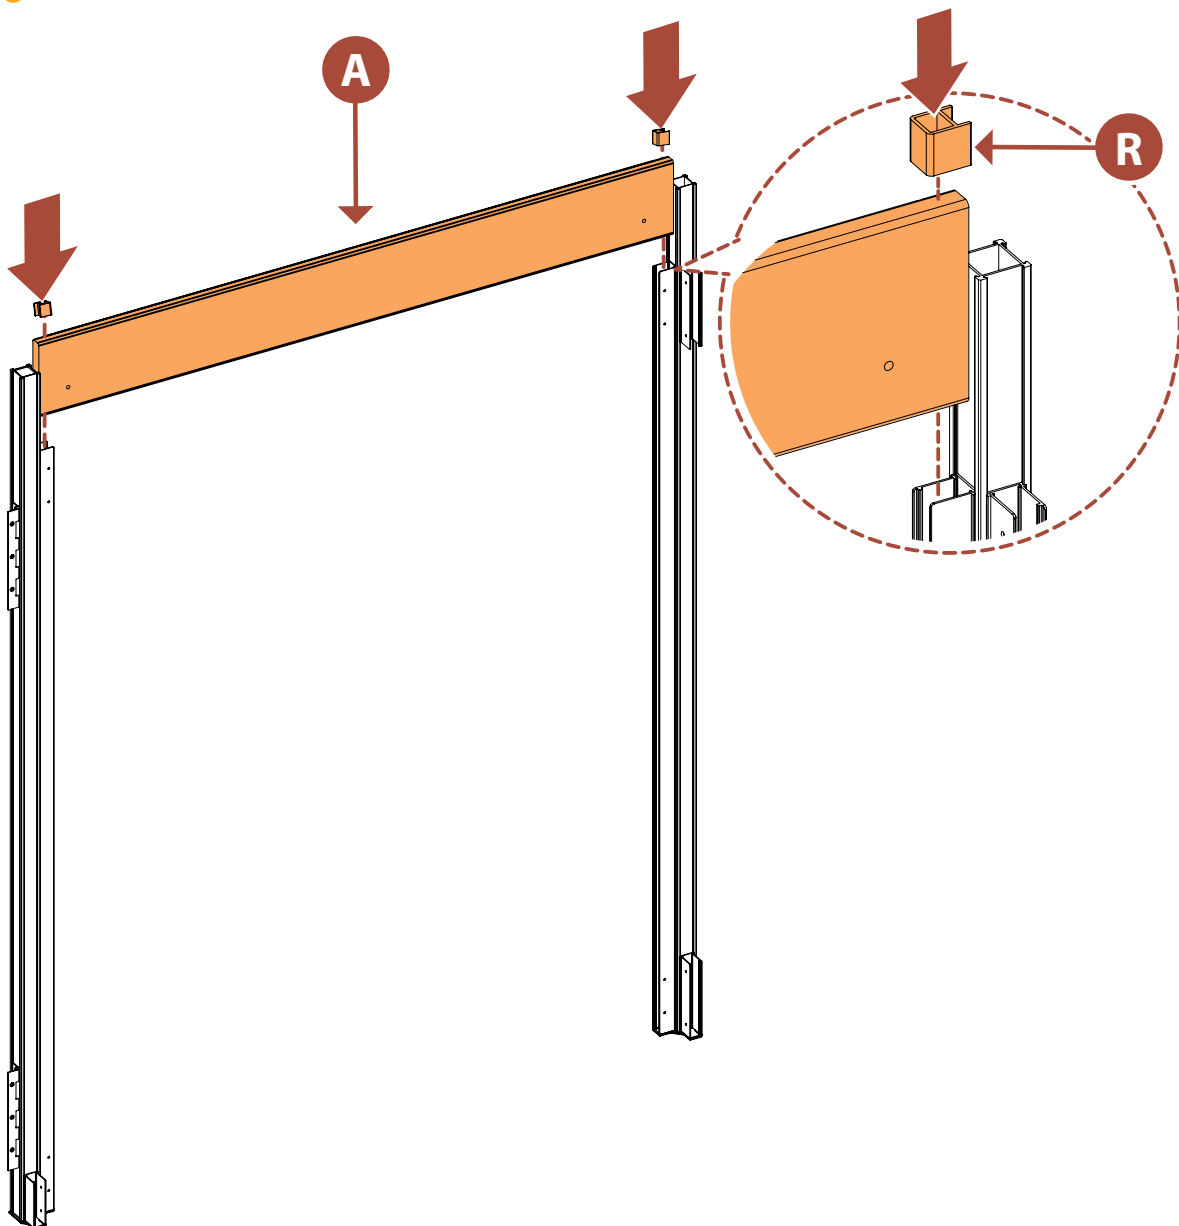


3


A x1
BRD111

B x7
BRD082


R x14

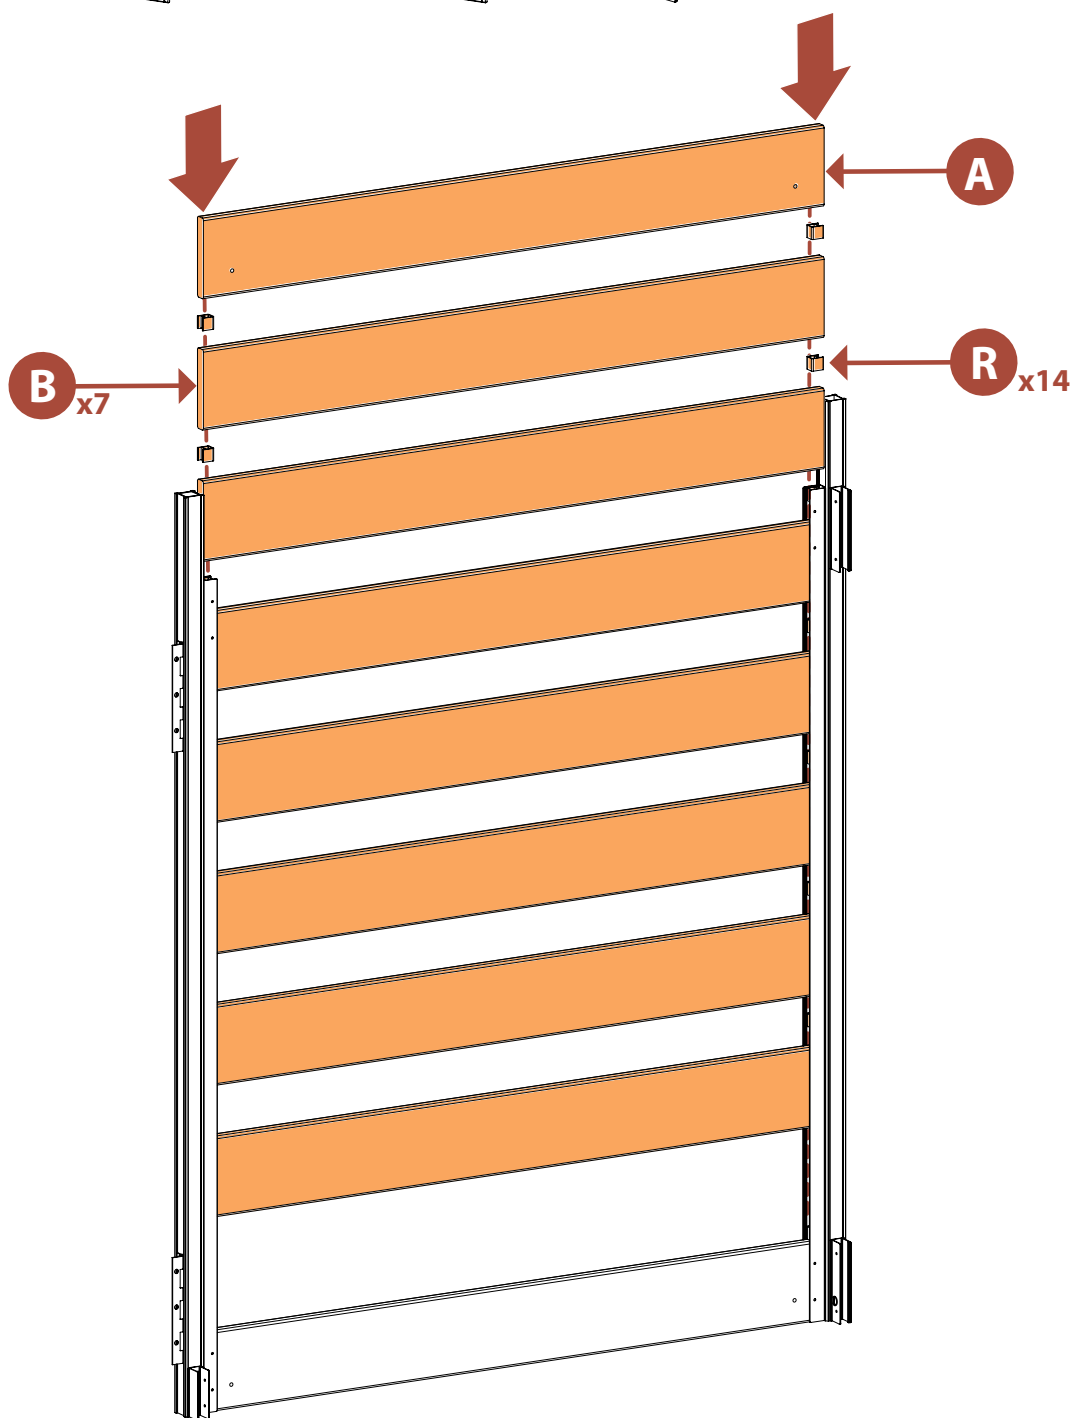


4

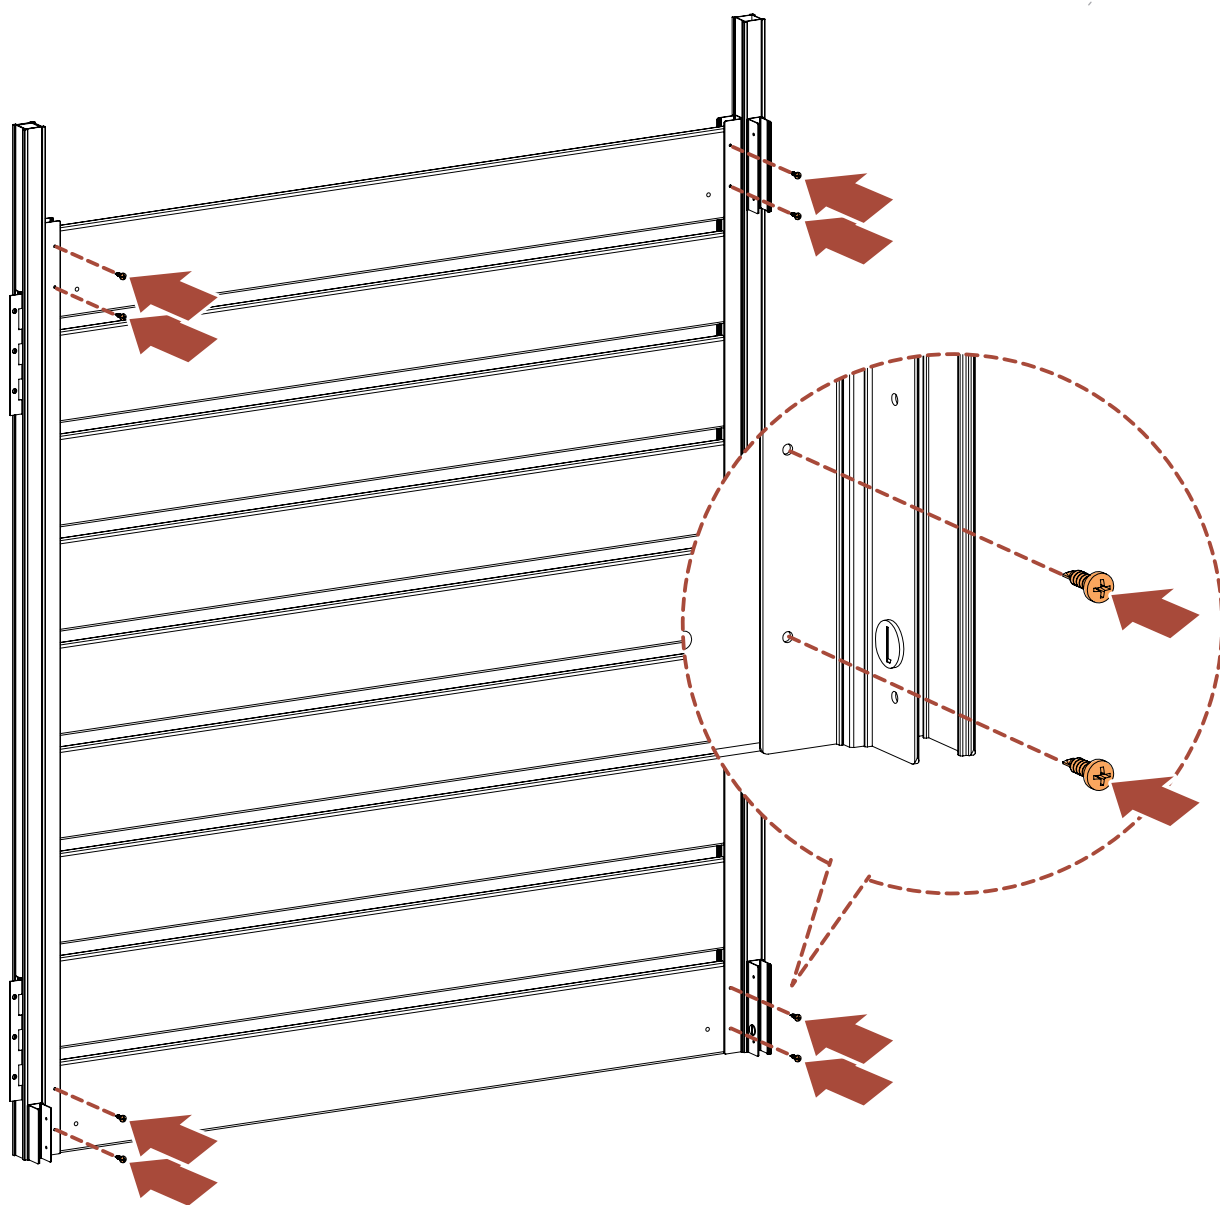



5

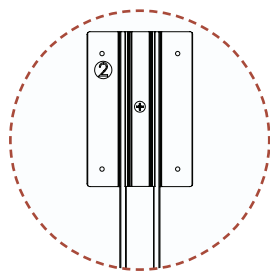


P-2 x1

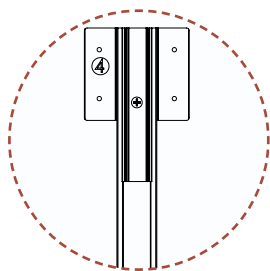

P-4 x1

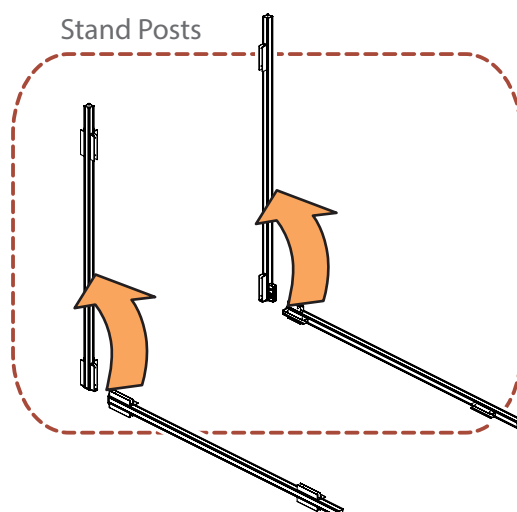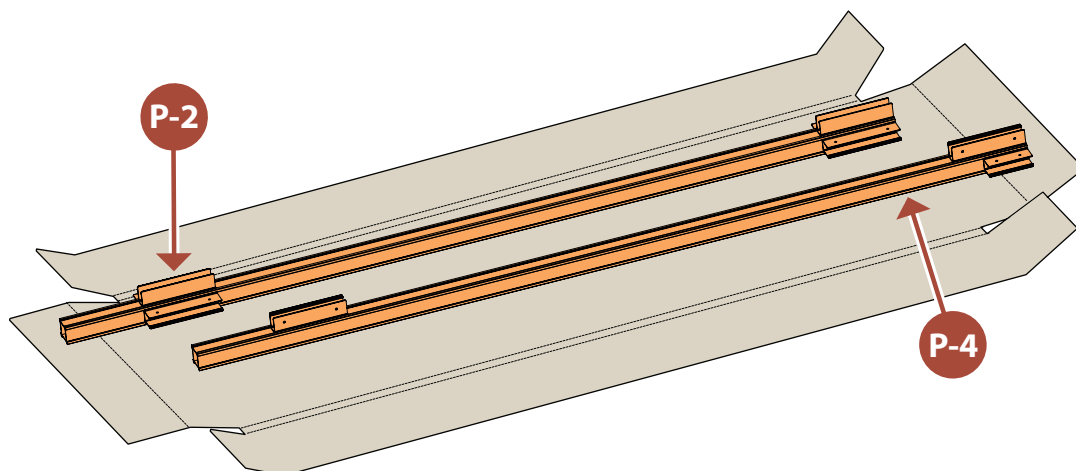


6




D x1
BRD113



M x4

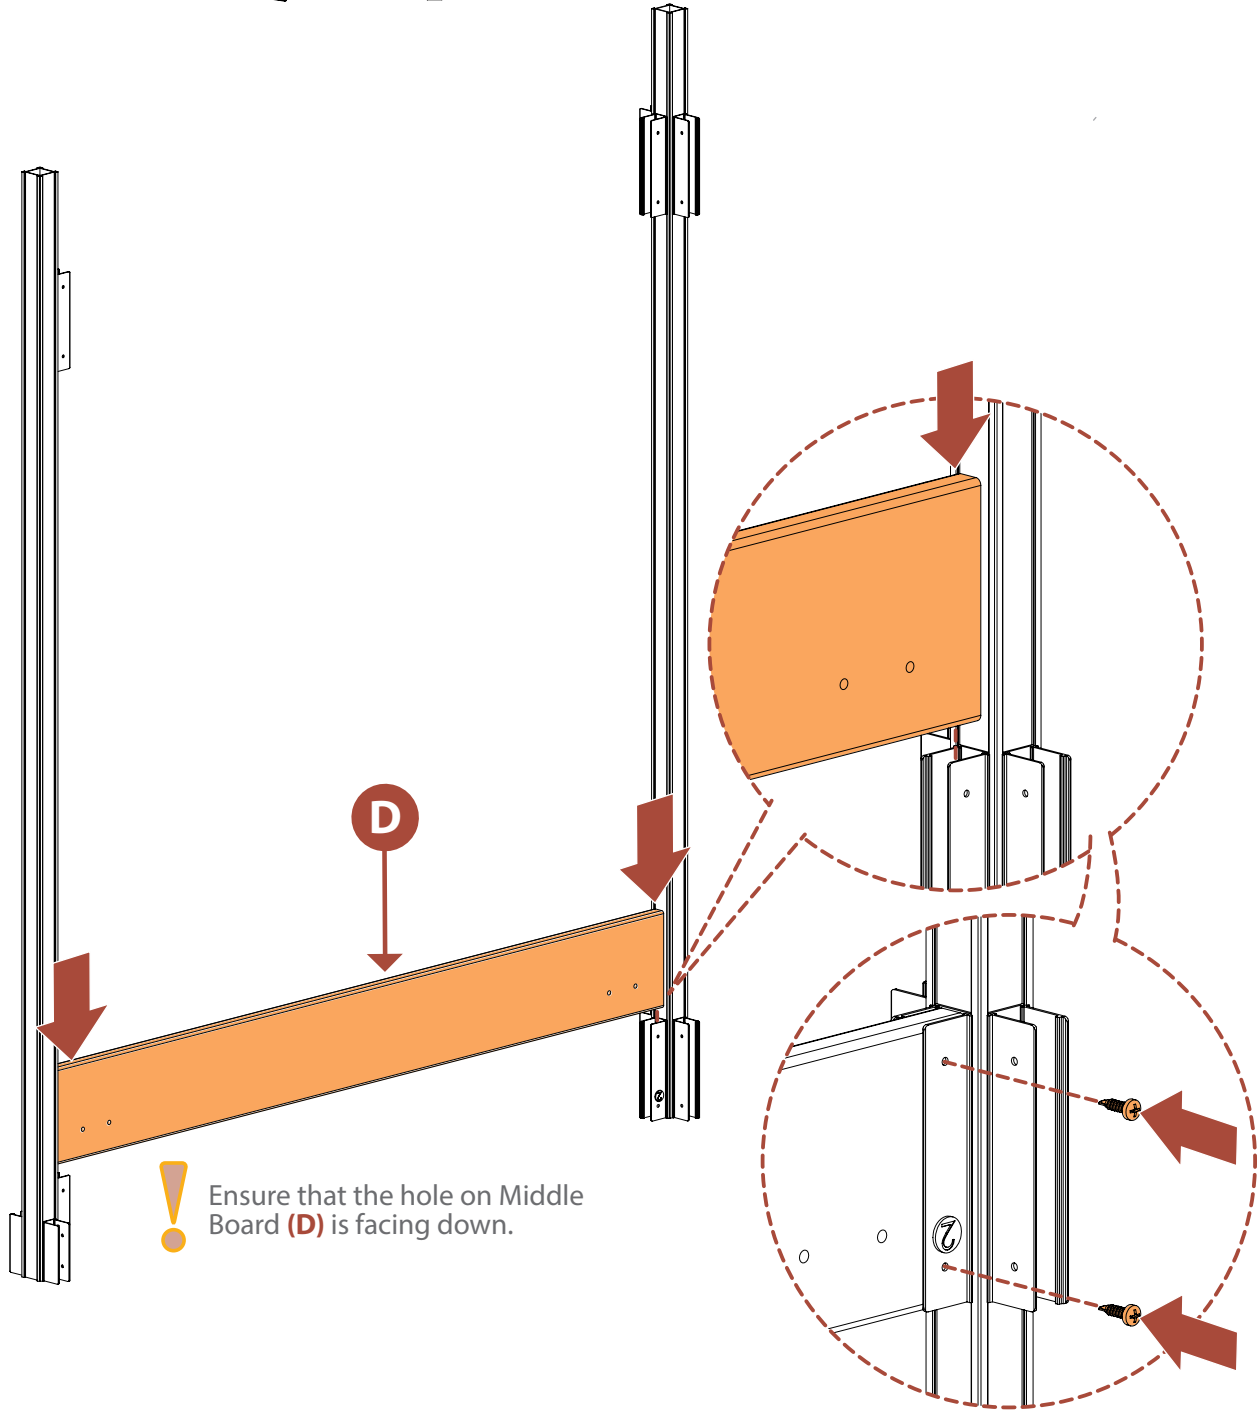


7




D x1
BRD113




M x4

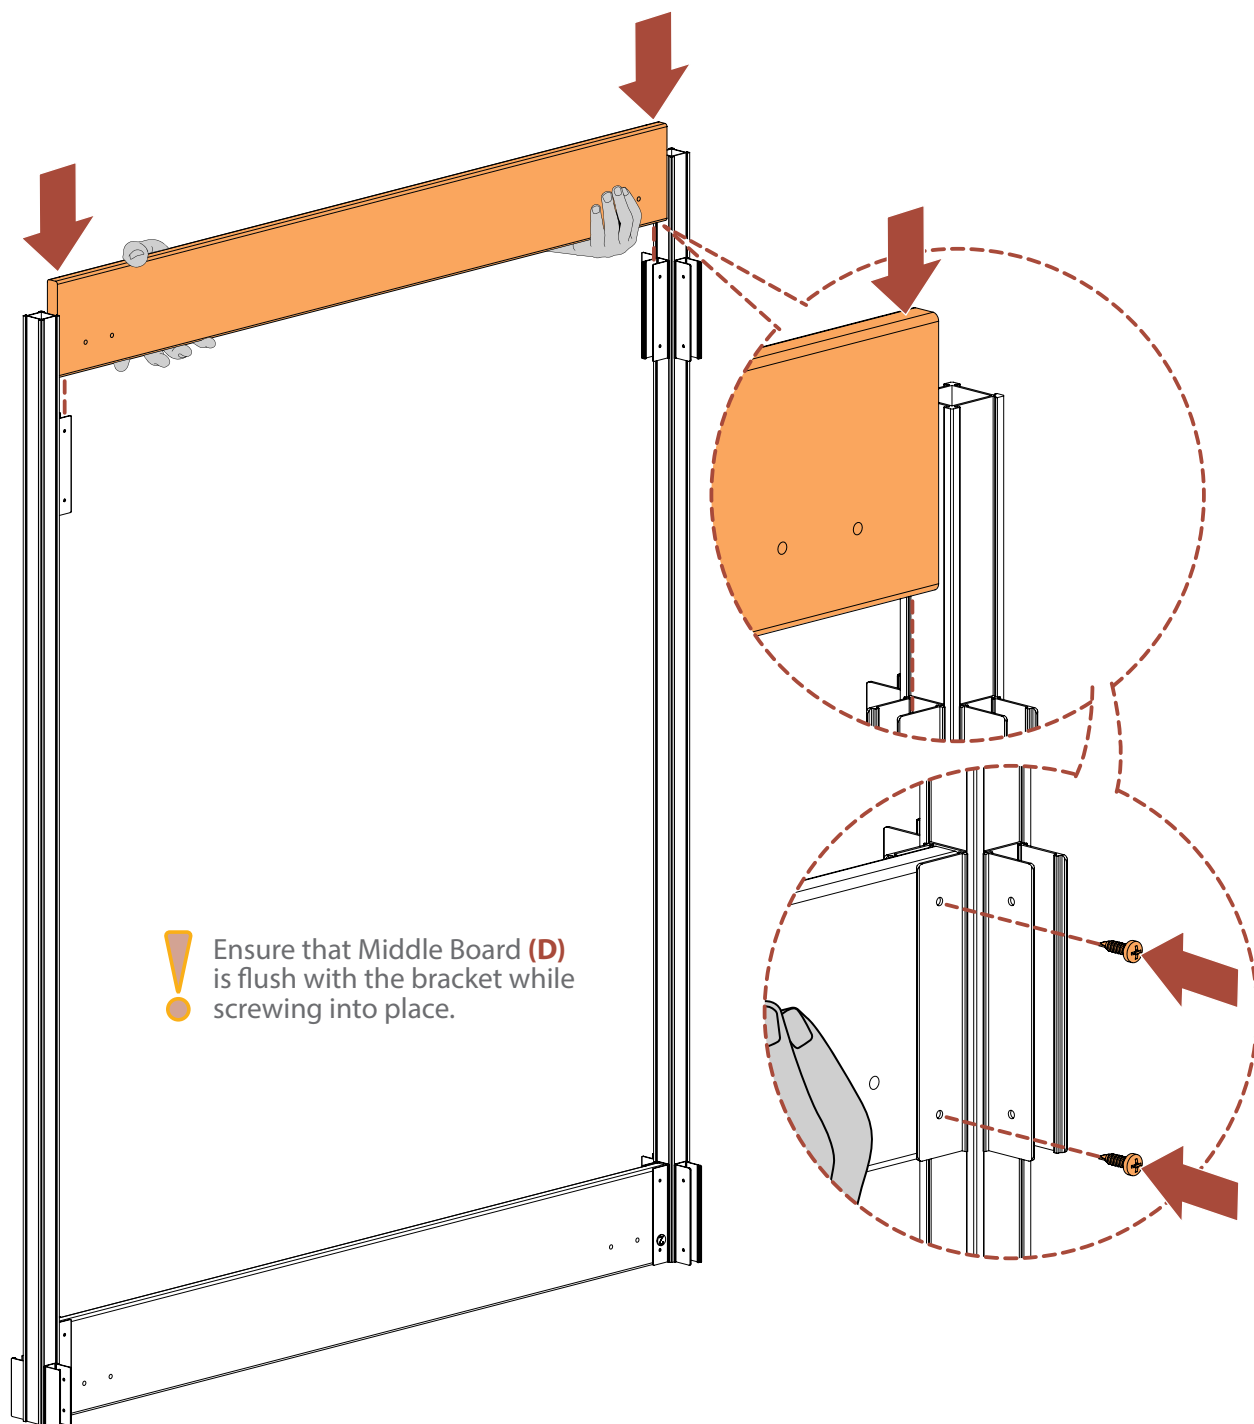



8

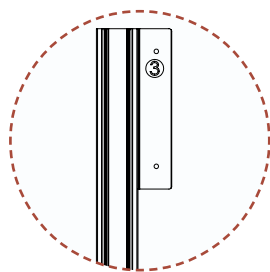


P-3 x1

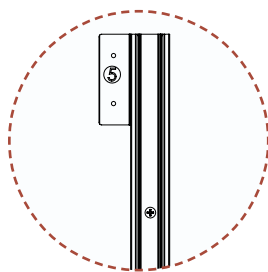

P-5 x1

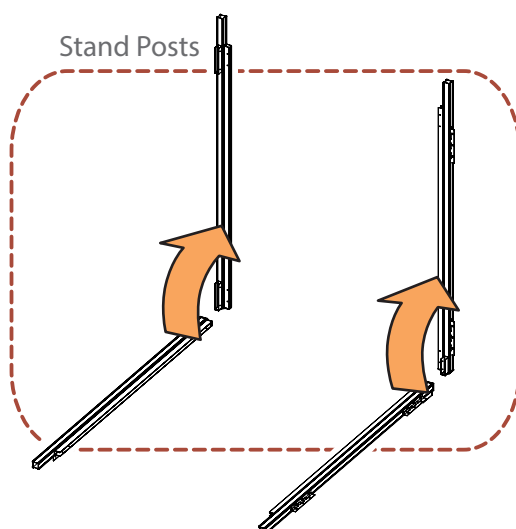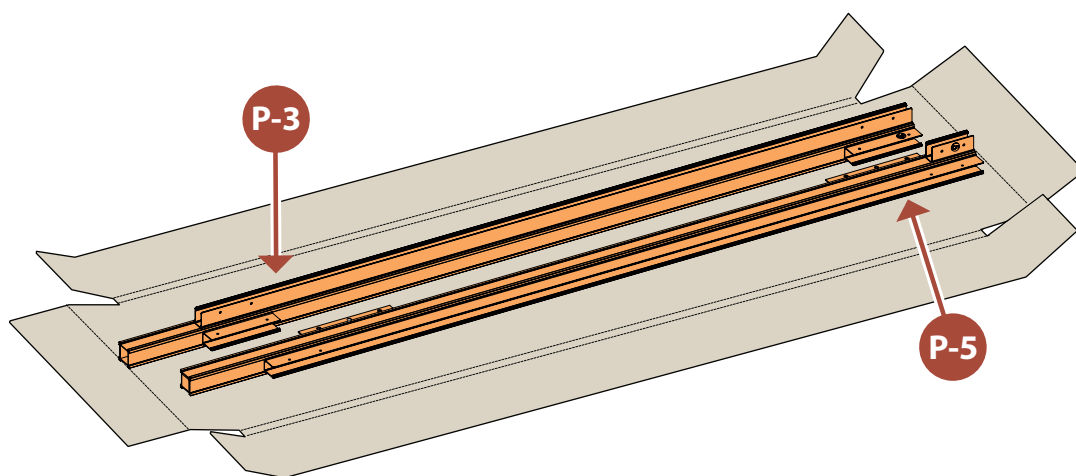

9




A x1
BRD111





R x2



Ensure that the hole on Top Board (**A**) is facing down. Follow with one Plastic Spacer (**R**) on each side.

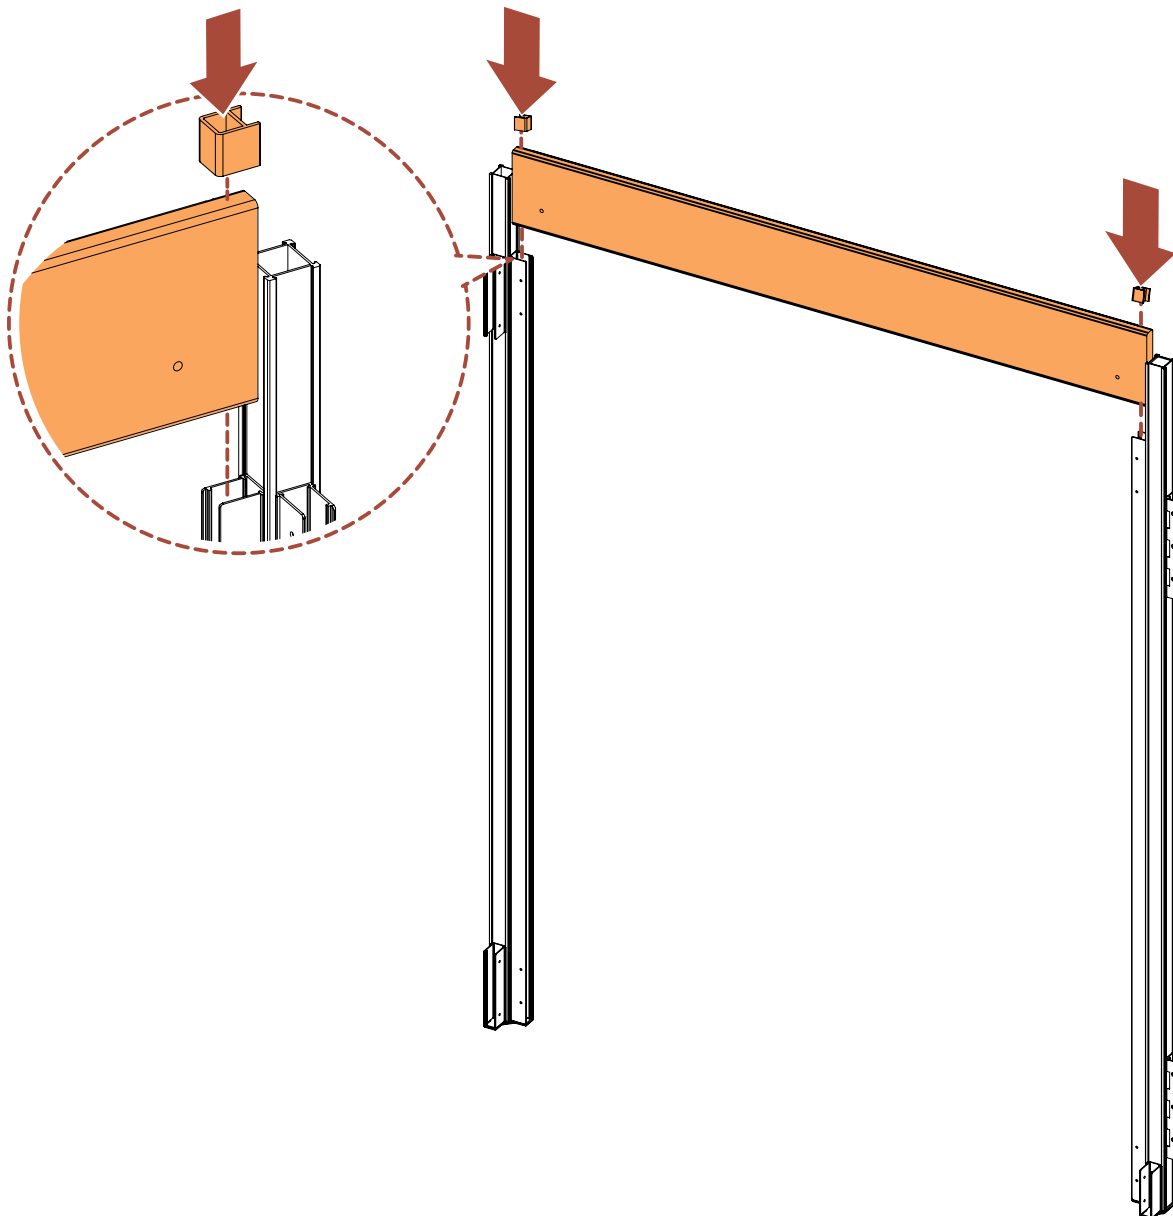


10

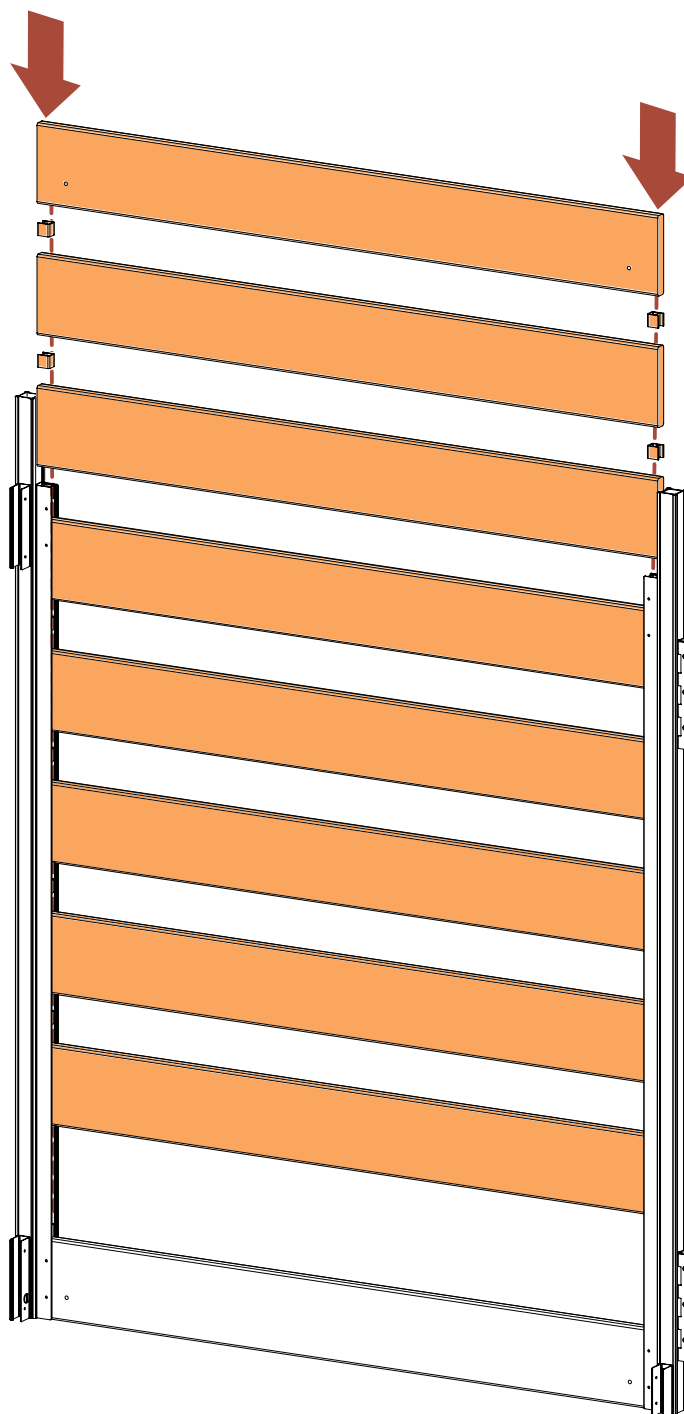

11



M x8

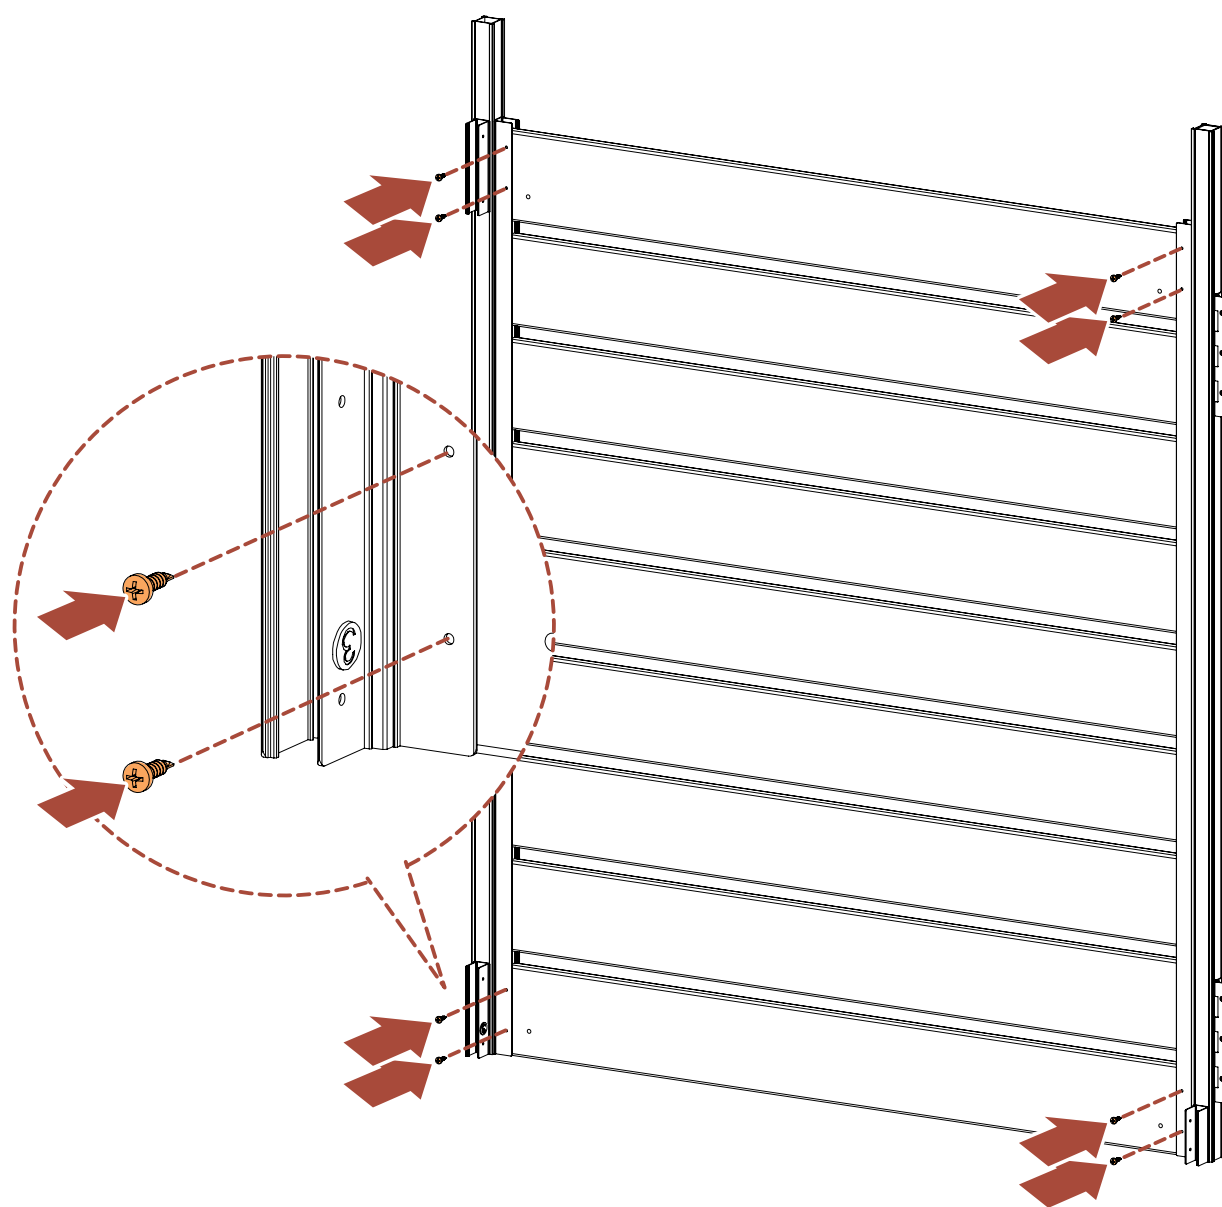


12


A x1
BRD111



Starting with **P-1** & **P-6**.

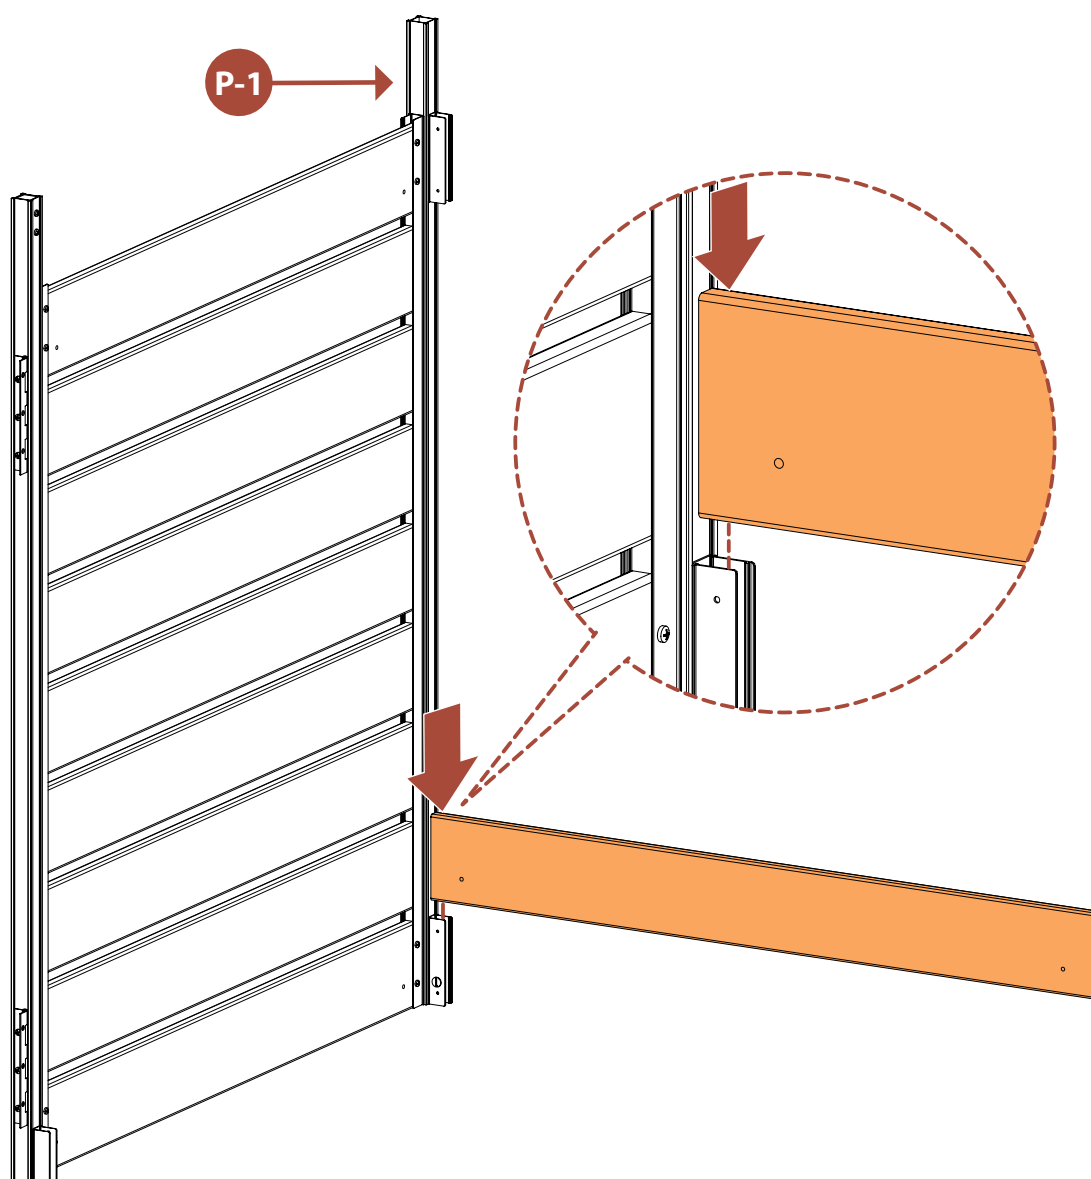


! Lower **P-2** & **P-4** bracket onto Top Board (A).


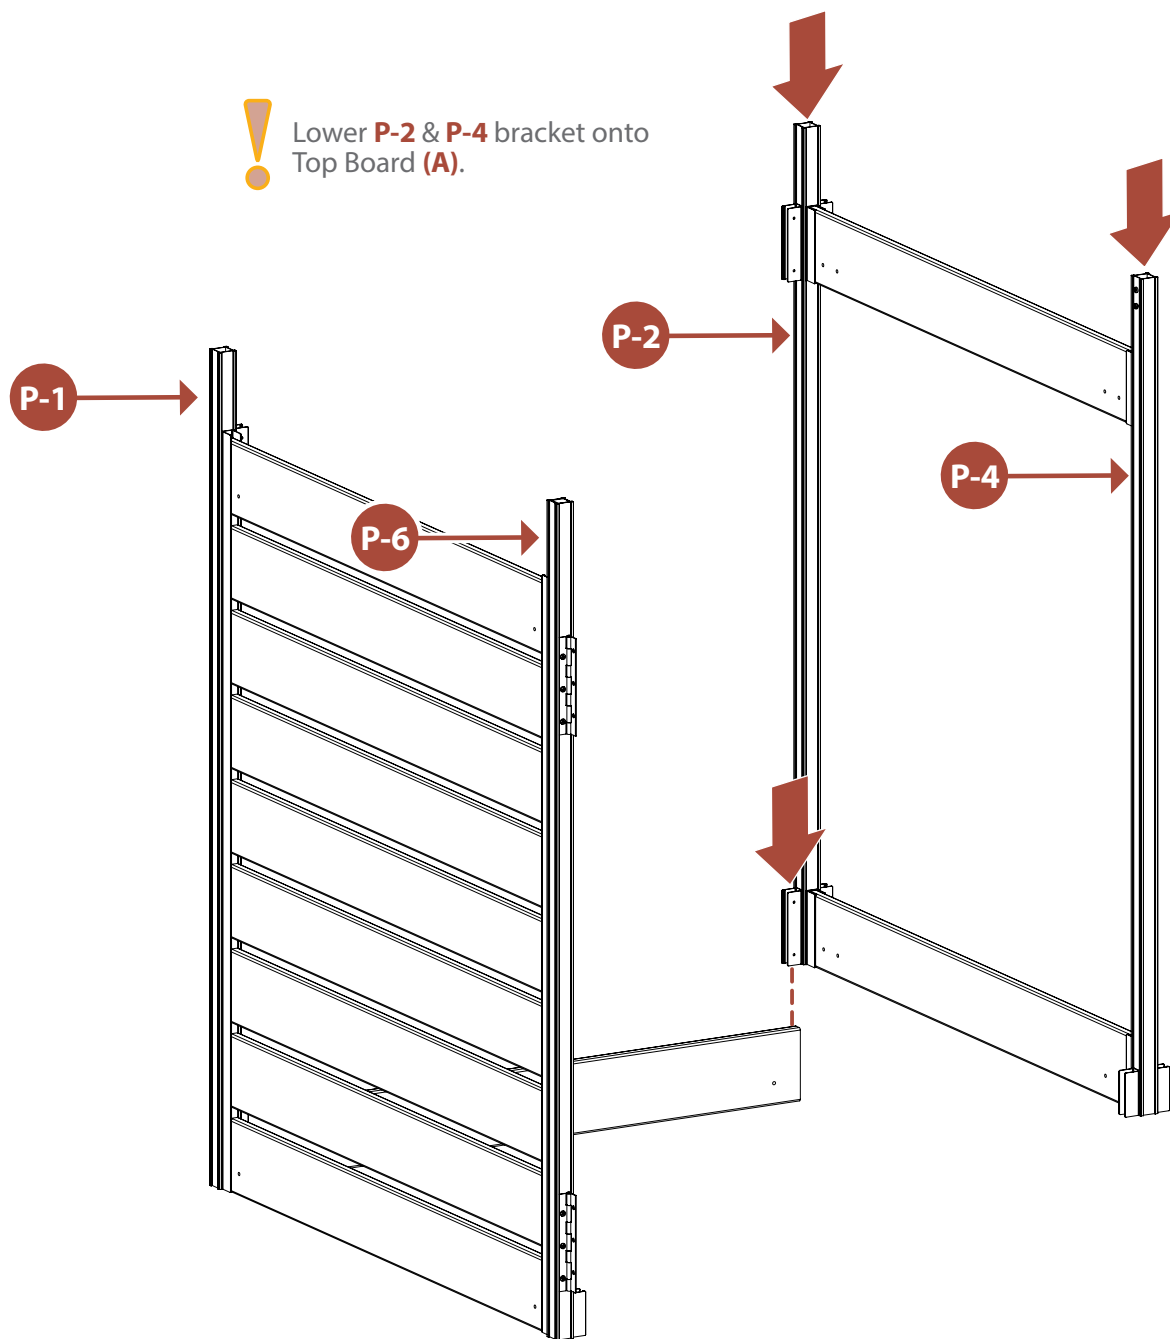


14


A x1
BRD111

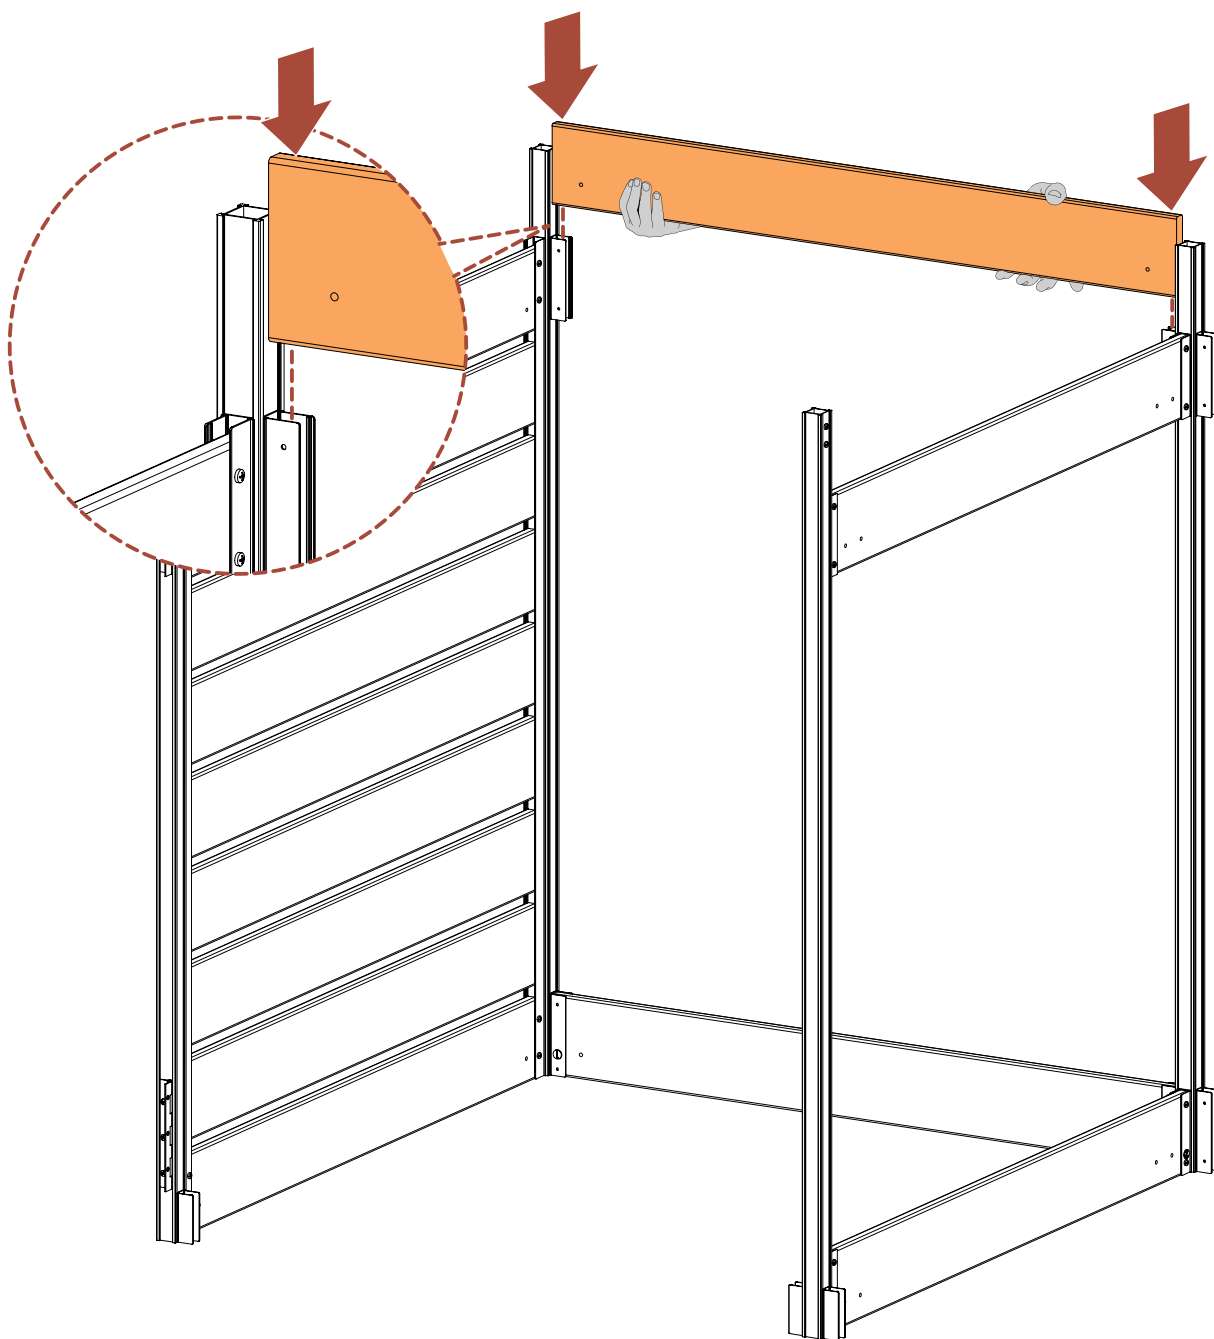


15

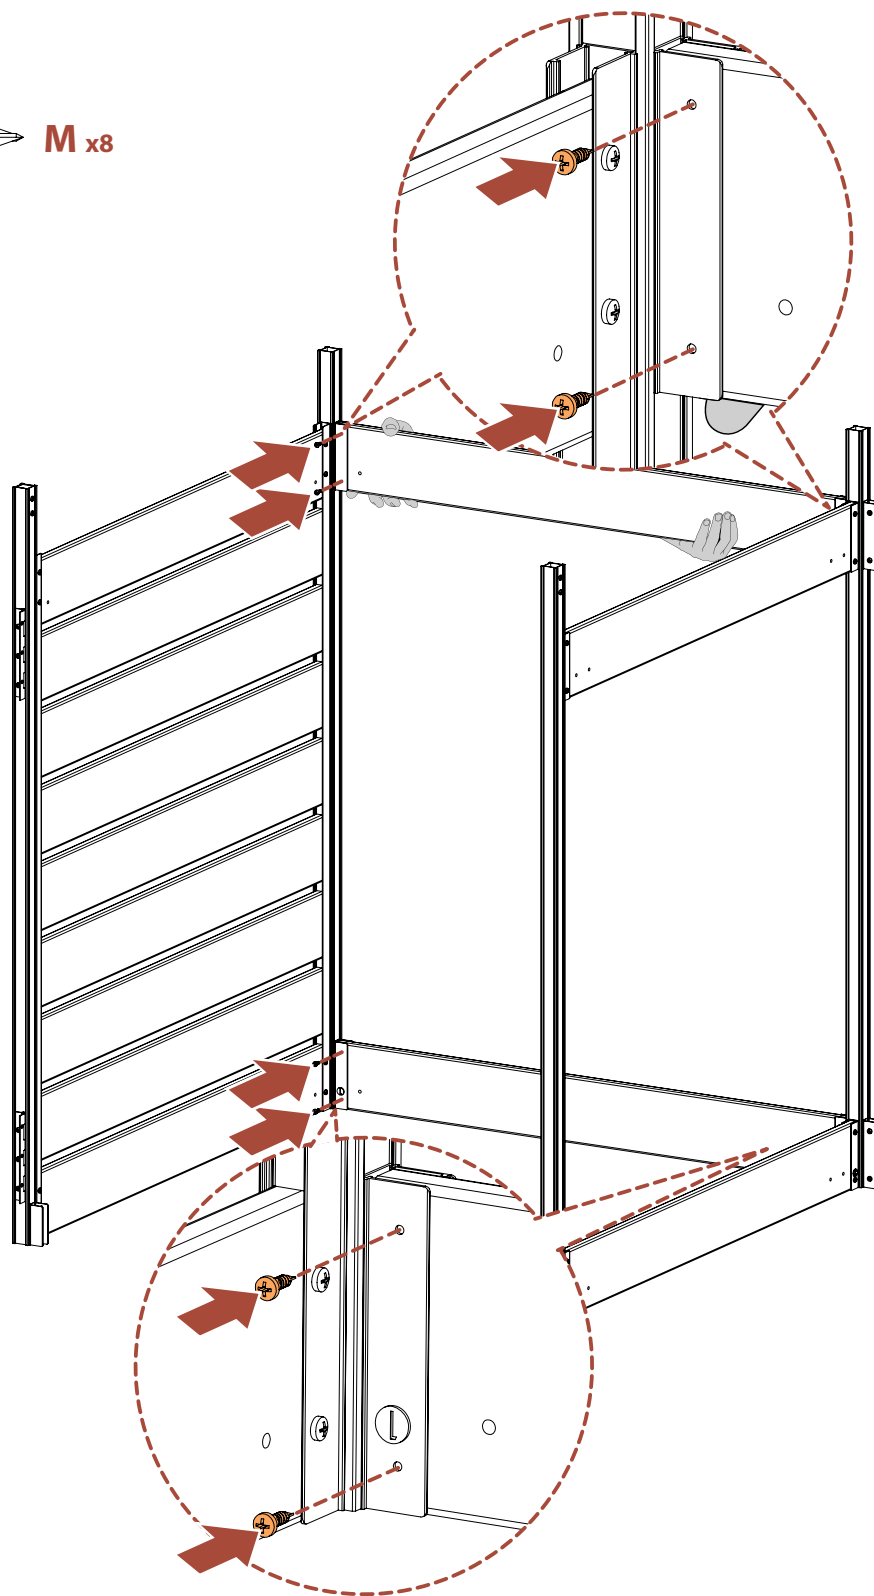


16

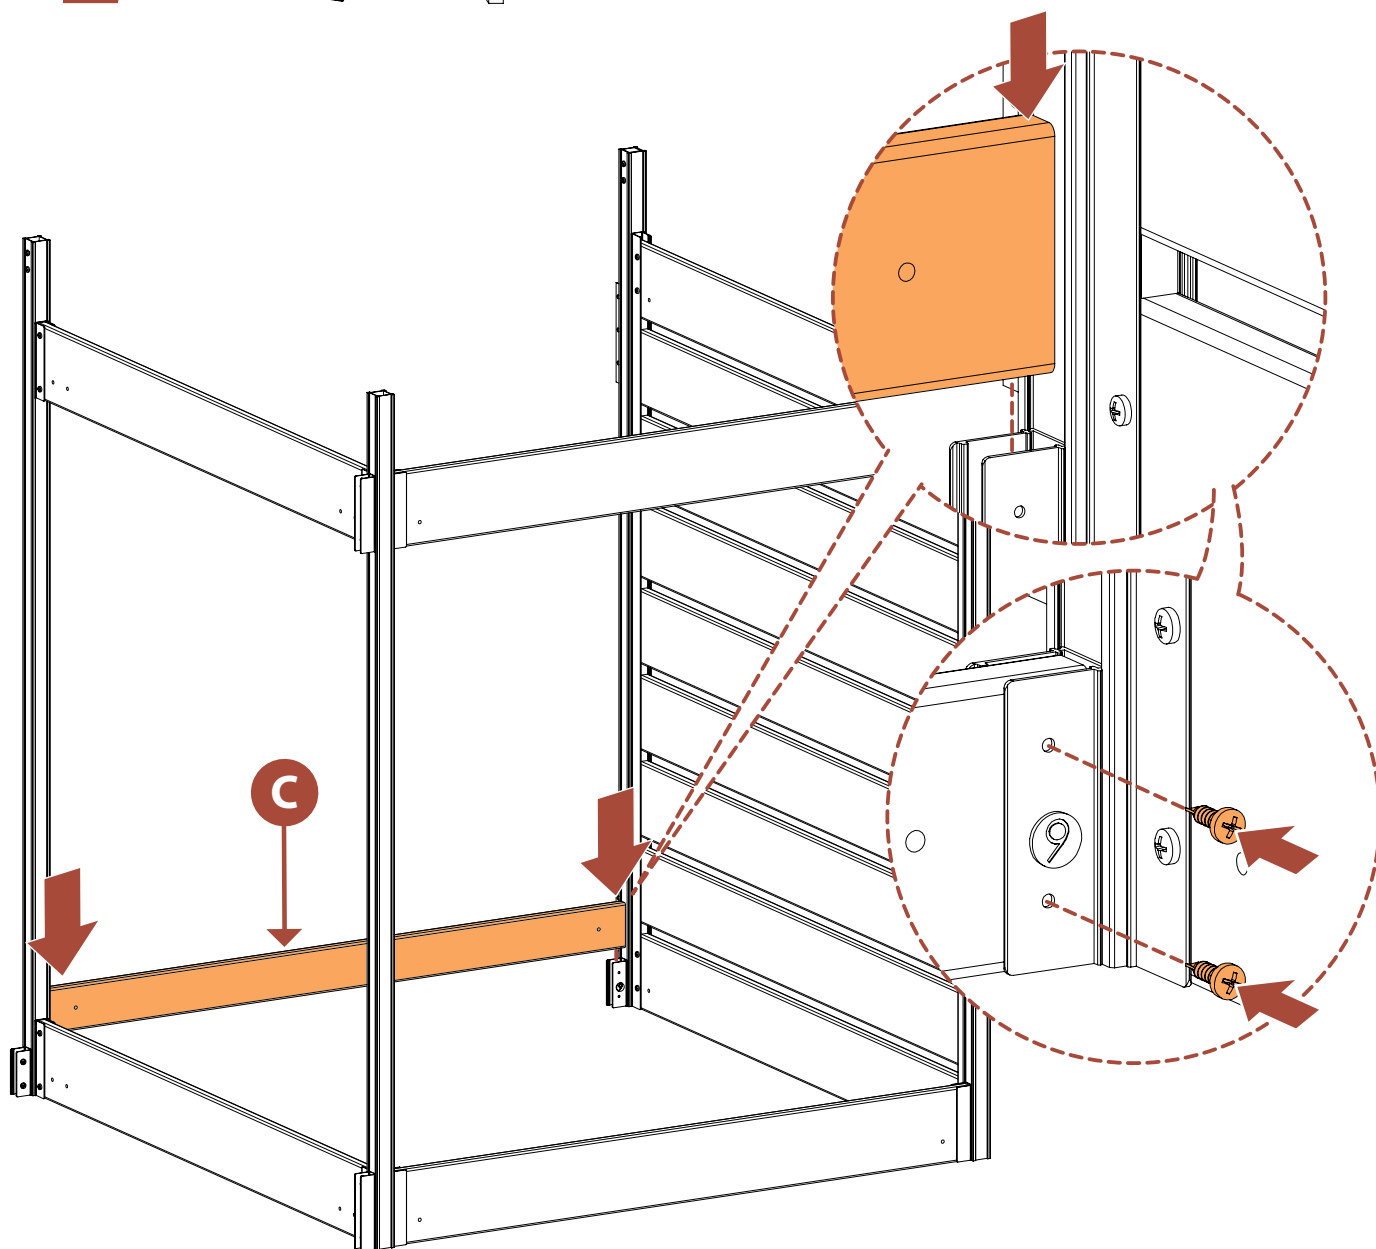


17



A x1
BRD111




C x1
BRD112

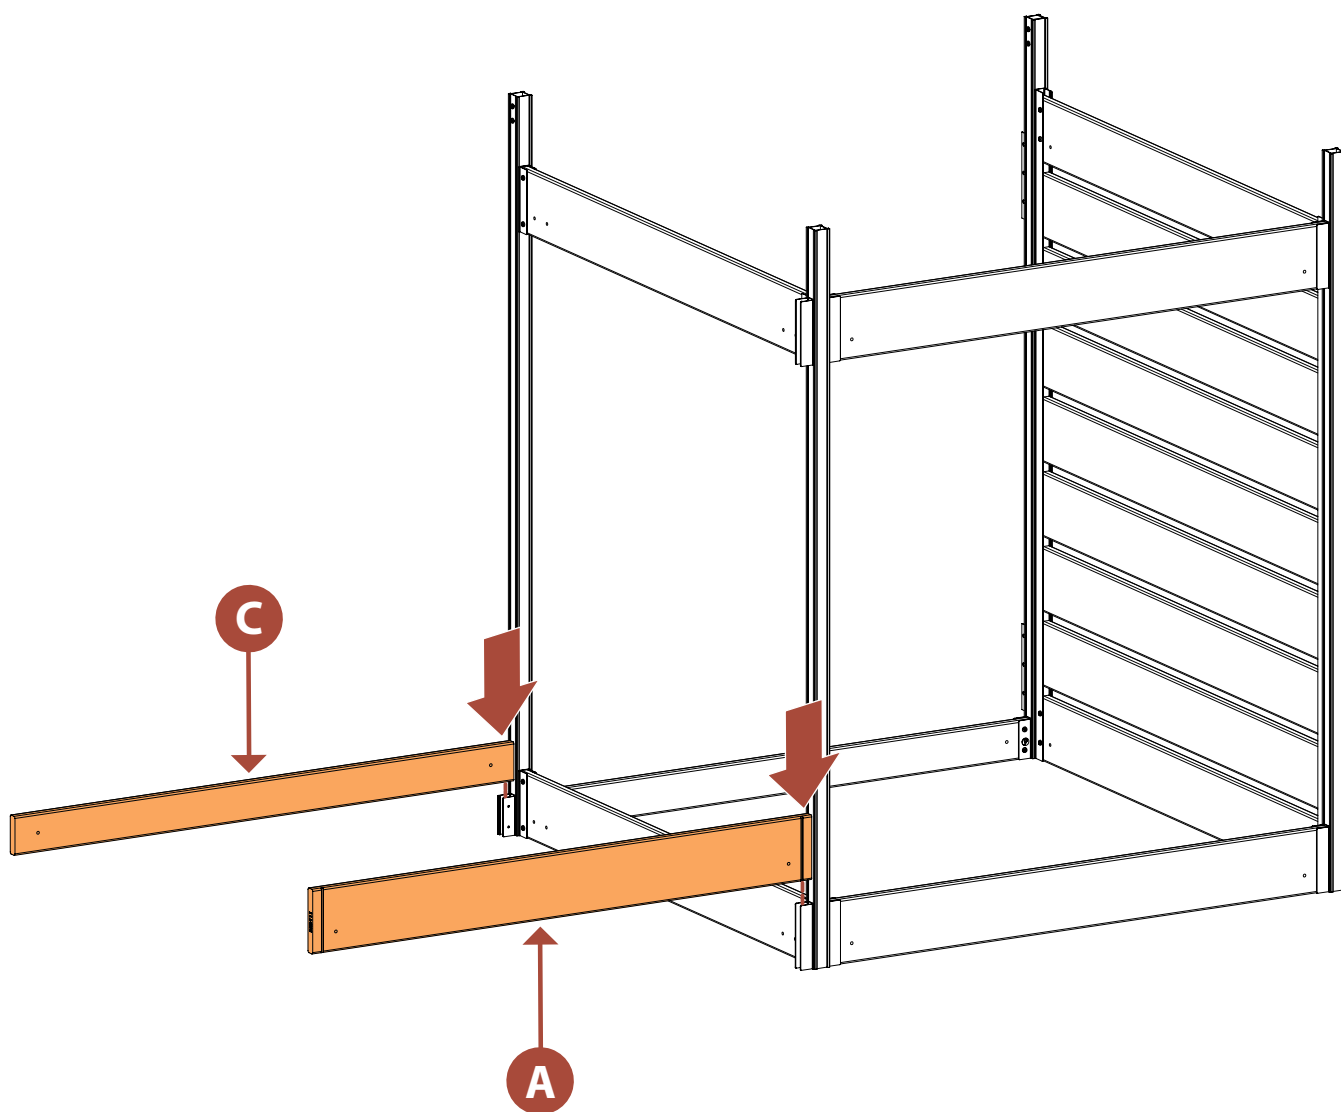









Lower **P-3** & **P-5** bracket onto
Top Board (**A**) & Font Bridge (**C**).

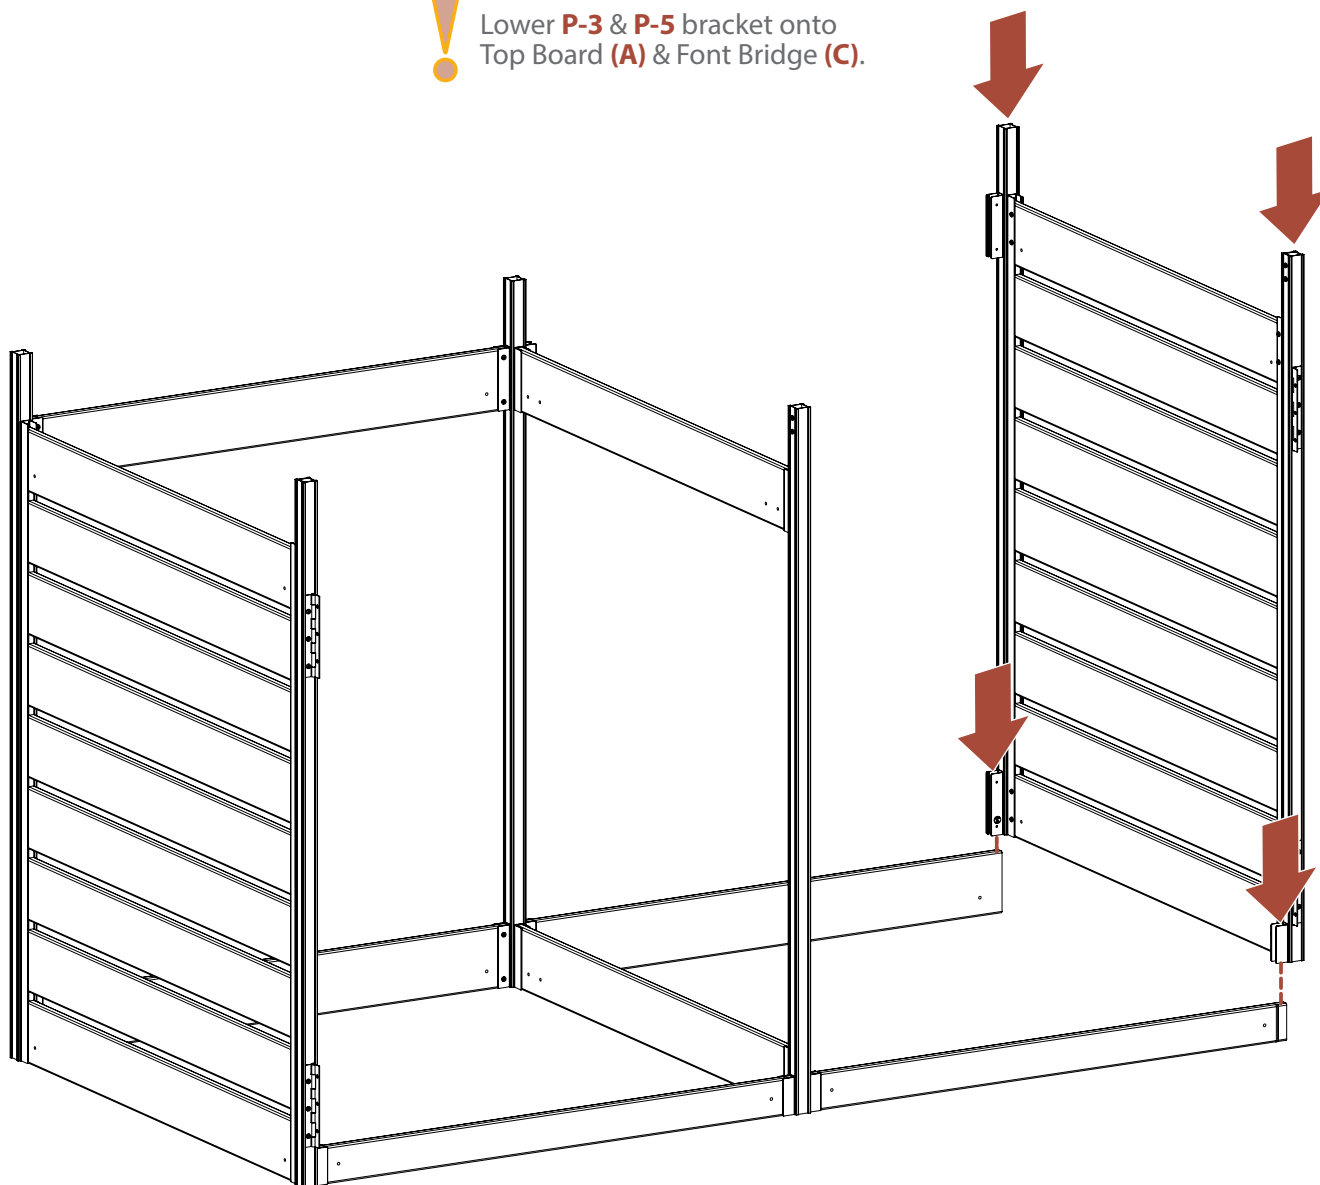


19

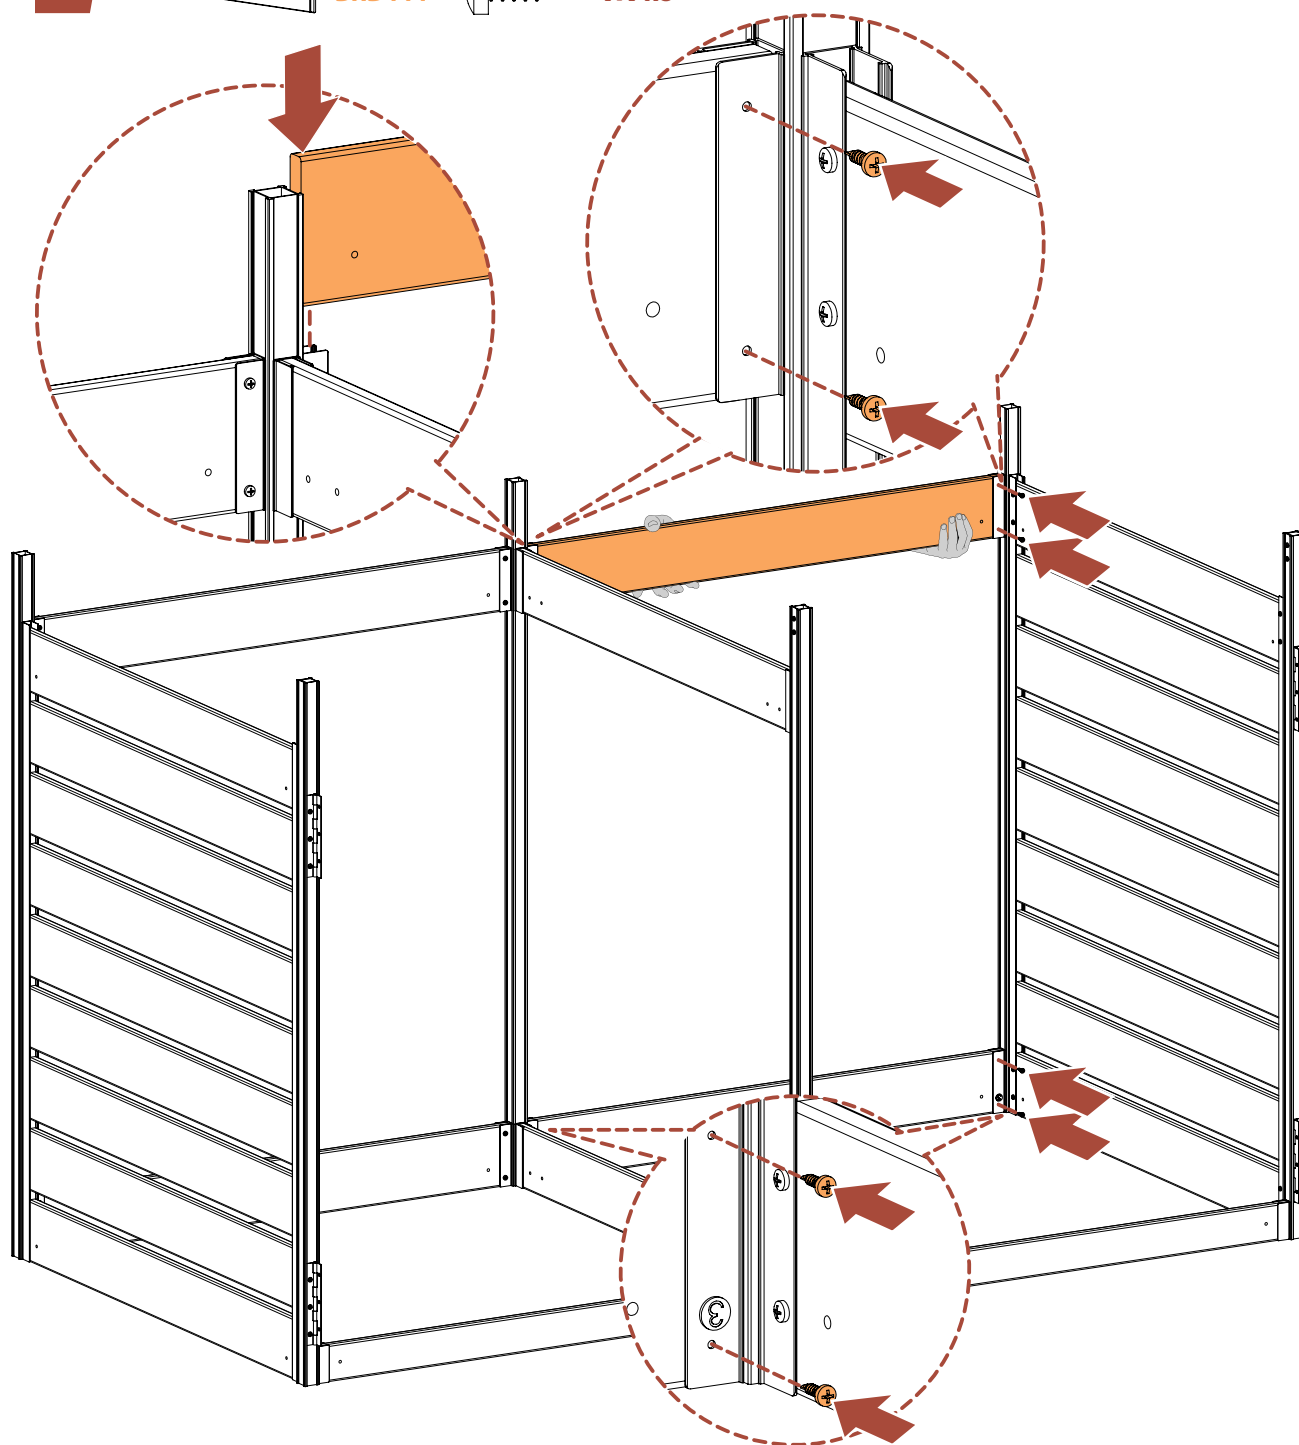

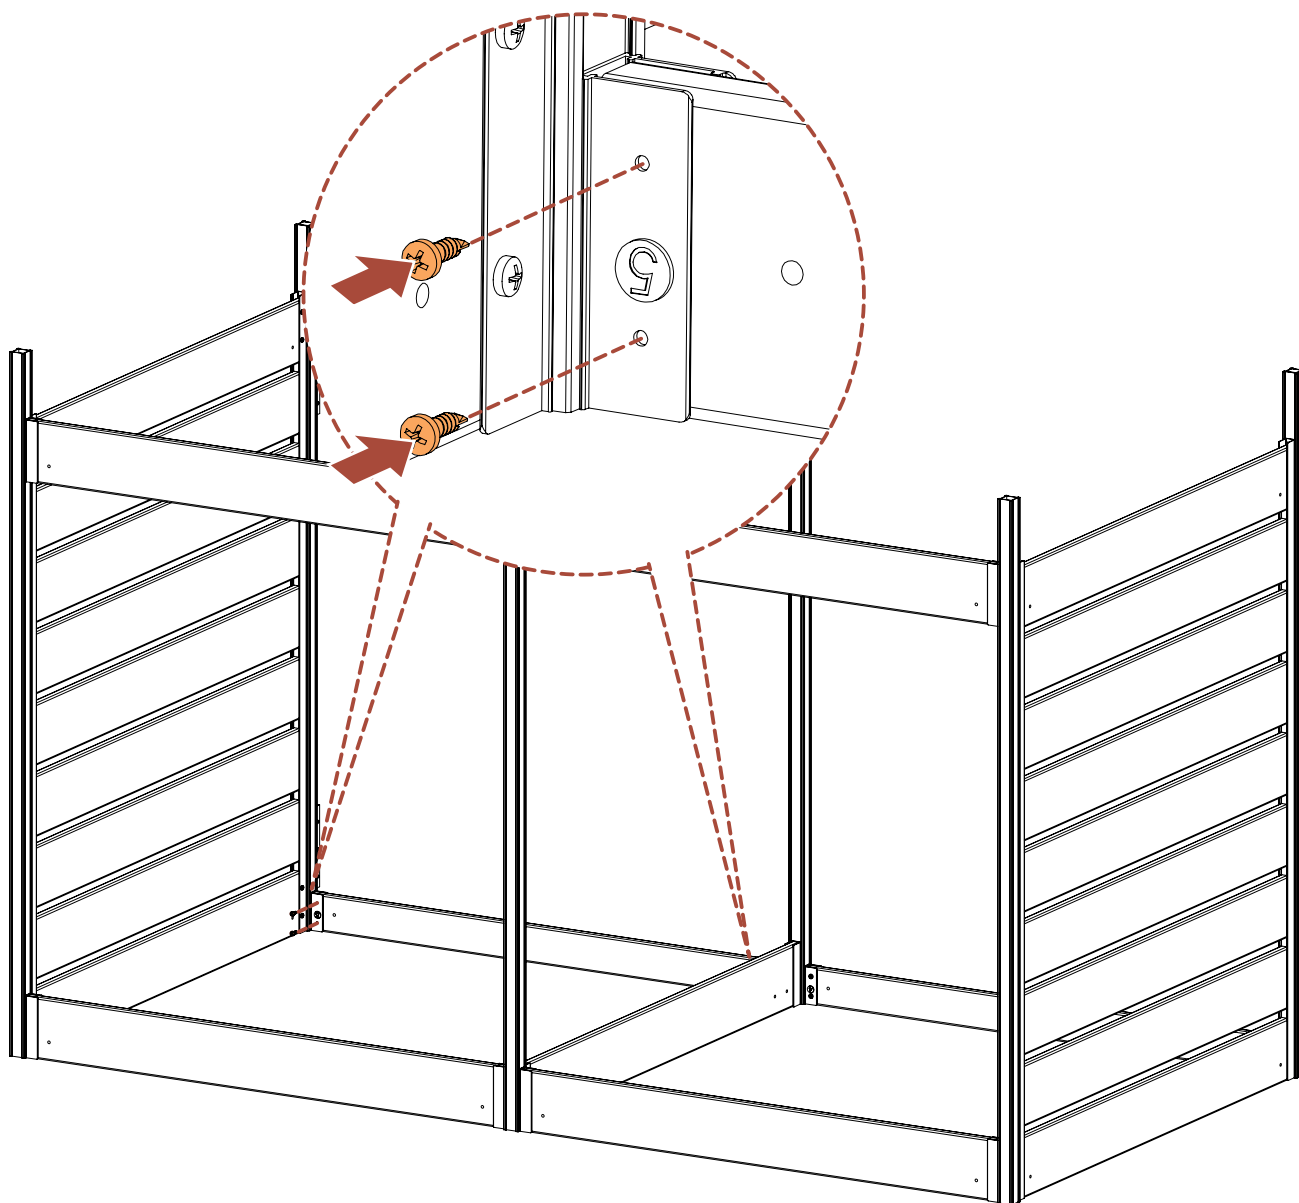


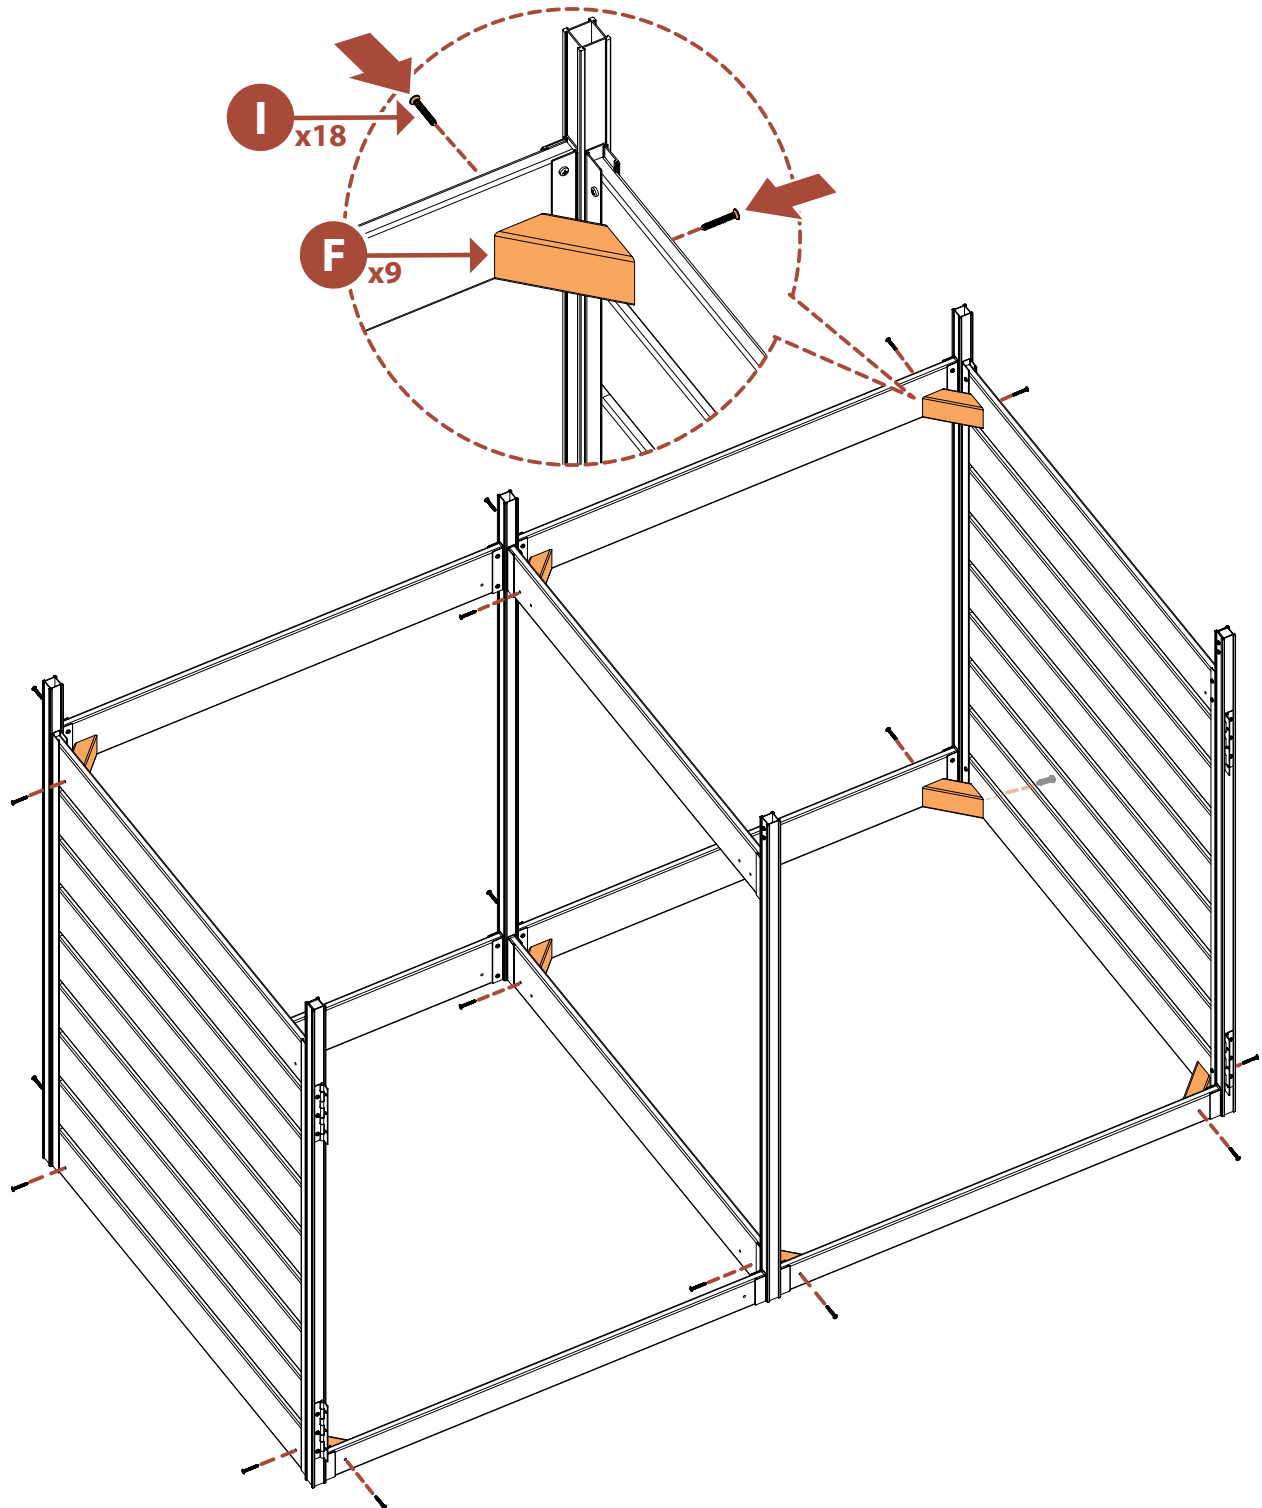**F** x9**I** x18


22




G x3



I x6

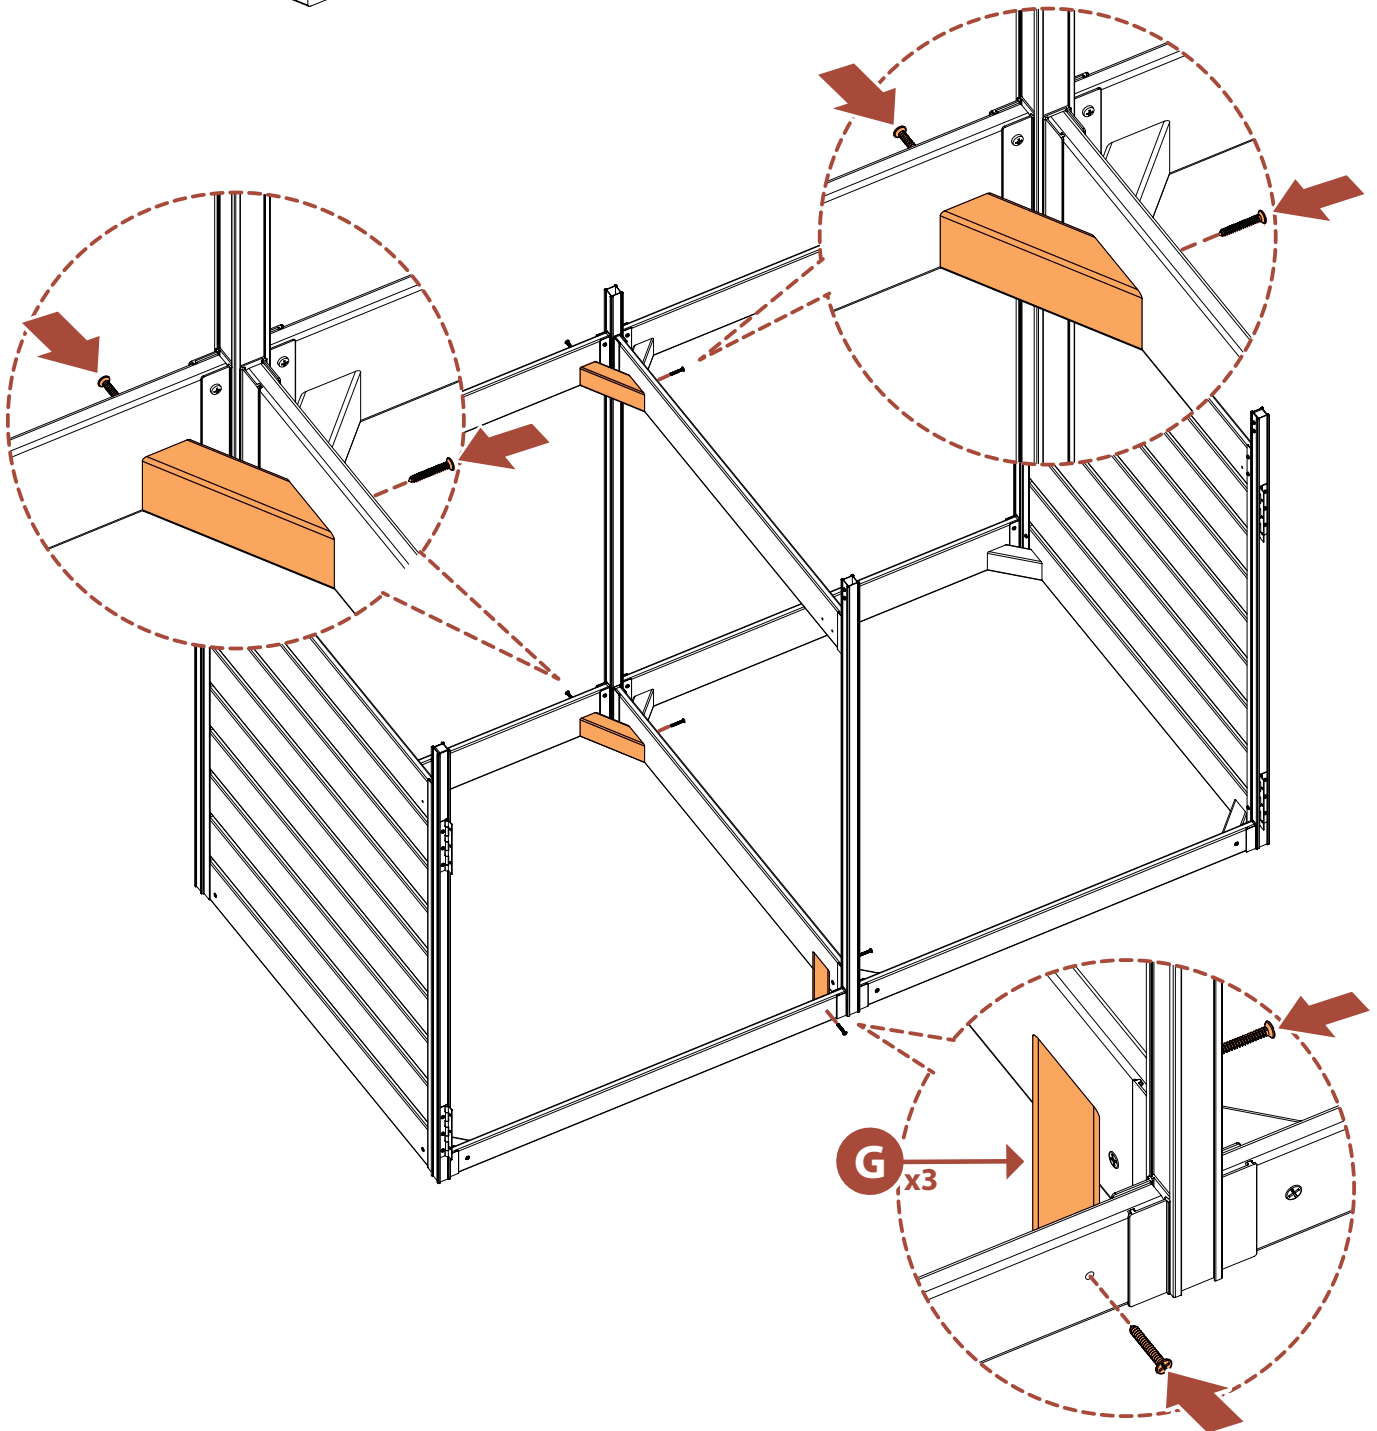


G x3

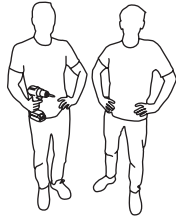


With assistance, flip your unit carefully over on it's feet.

Flip Unit

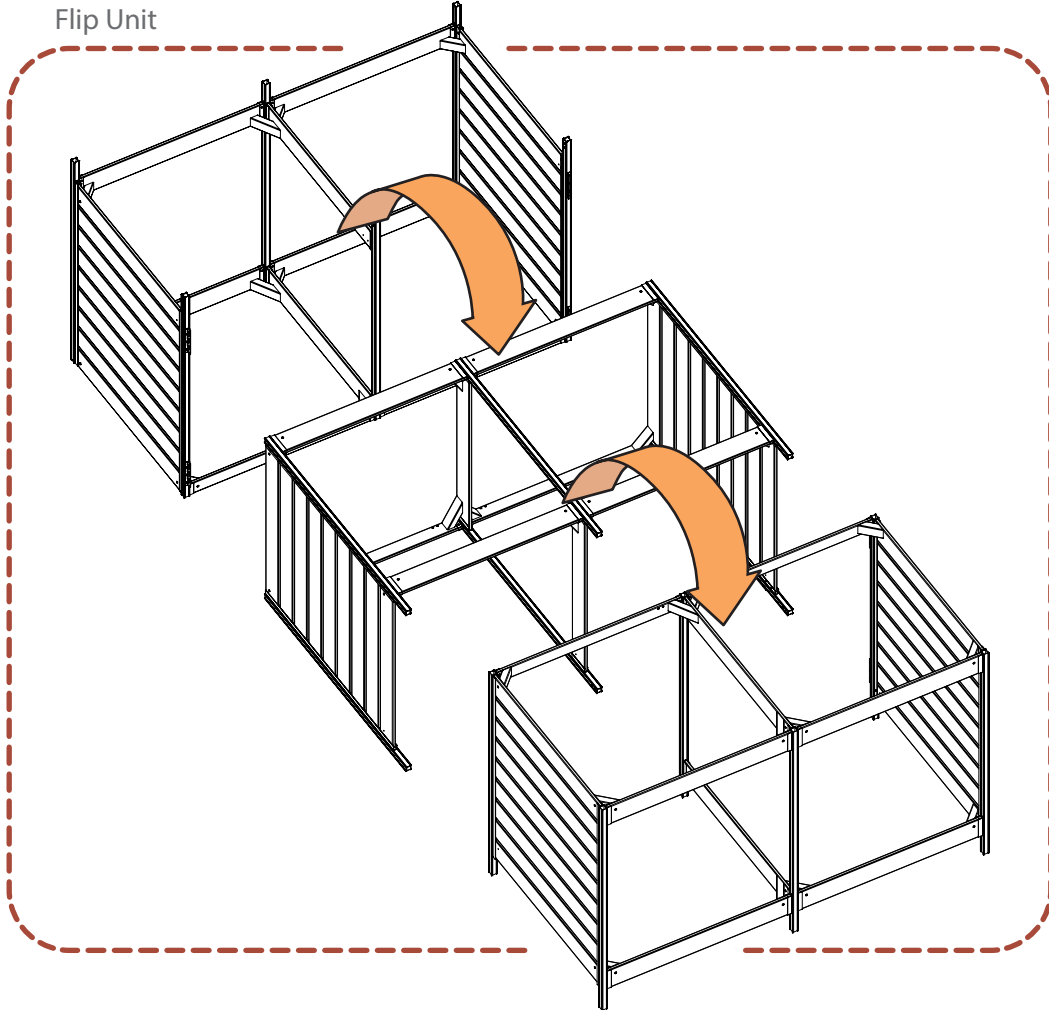

23





W x2








J x4



Ensure that the edge is flush to the top of the wood.


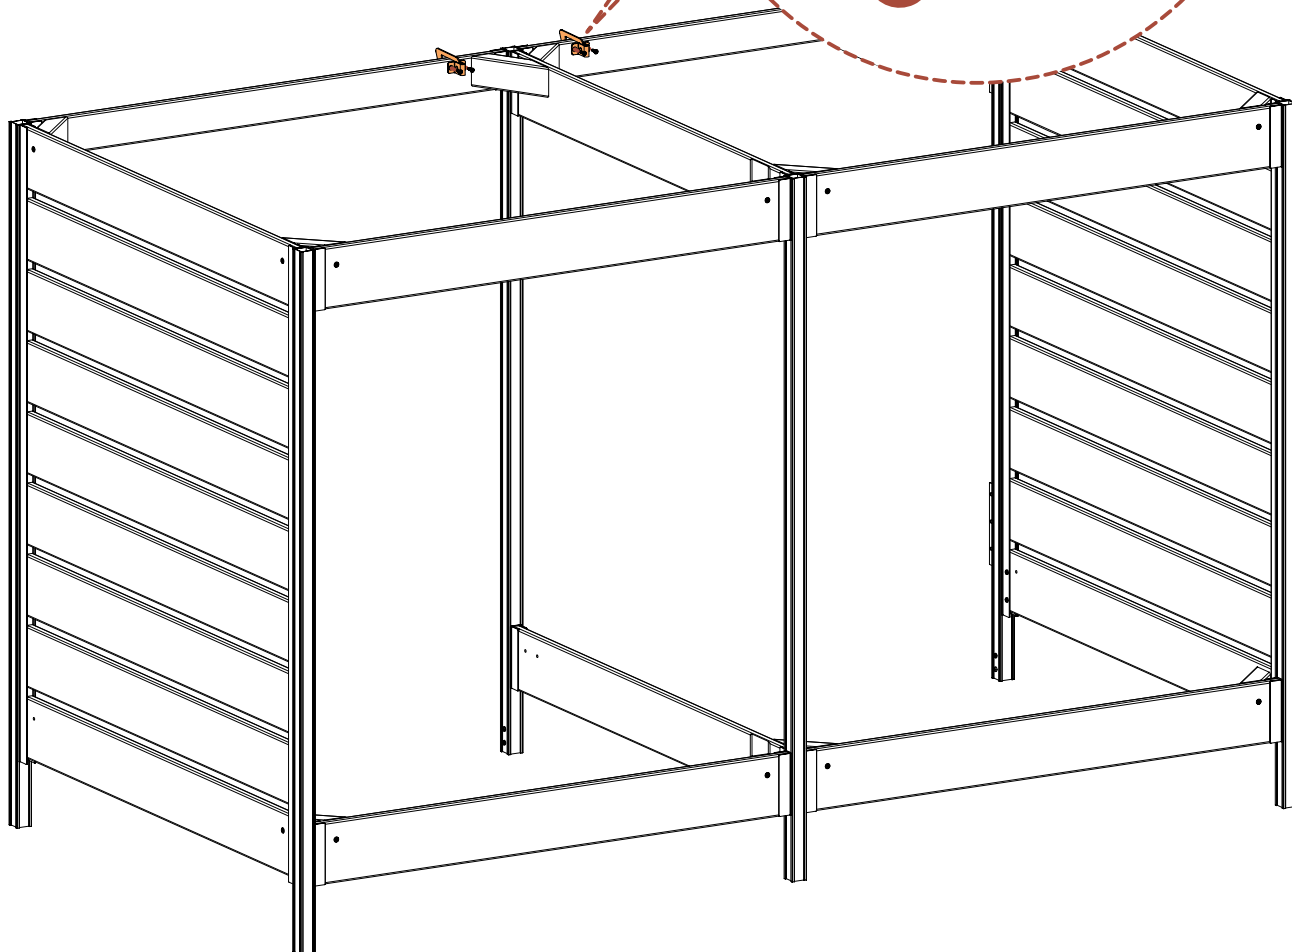
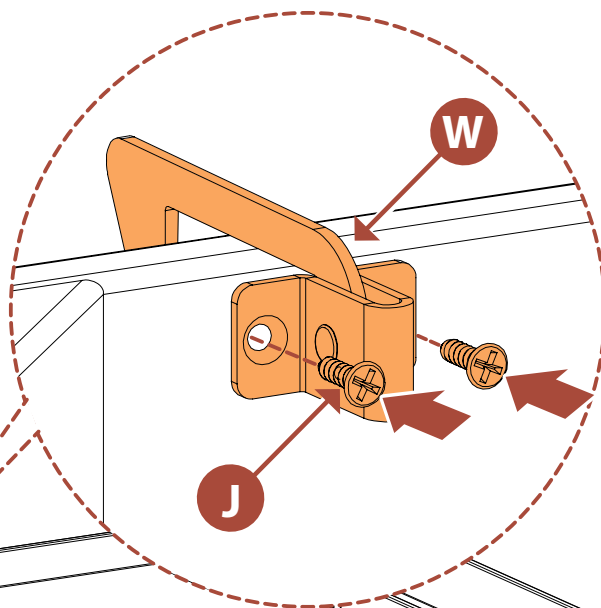


24

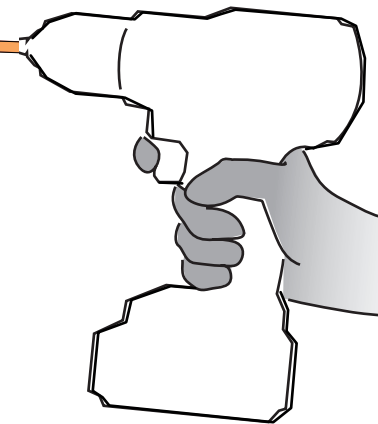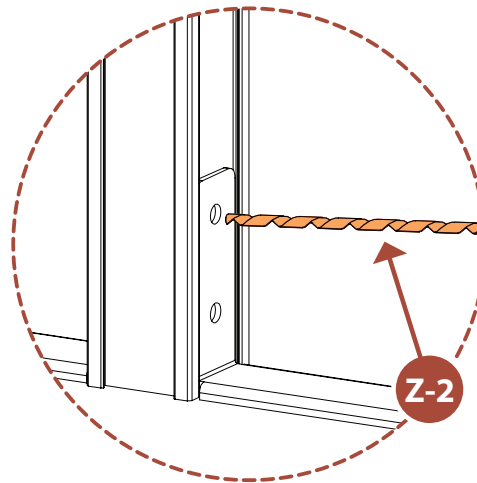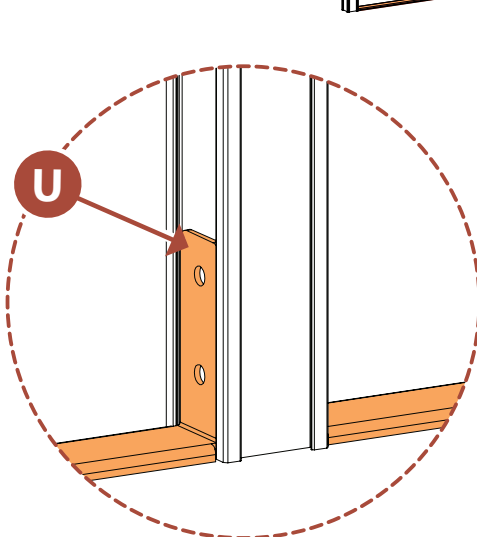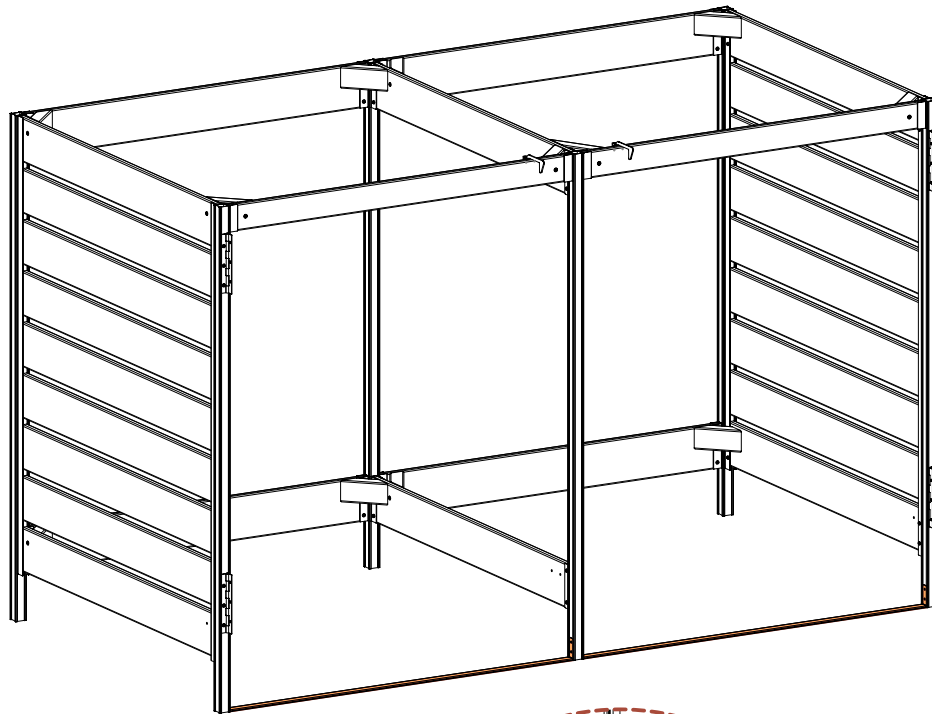
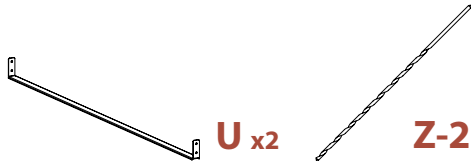


! Ensure that the bottom bridges (U) are sitting flush inside of your front post channels.


25

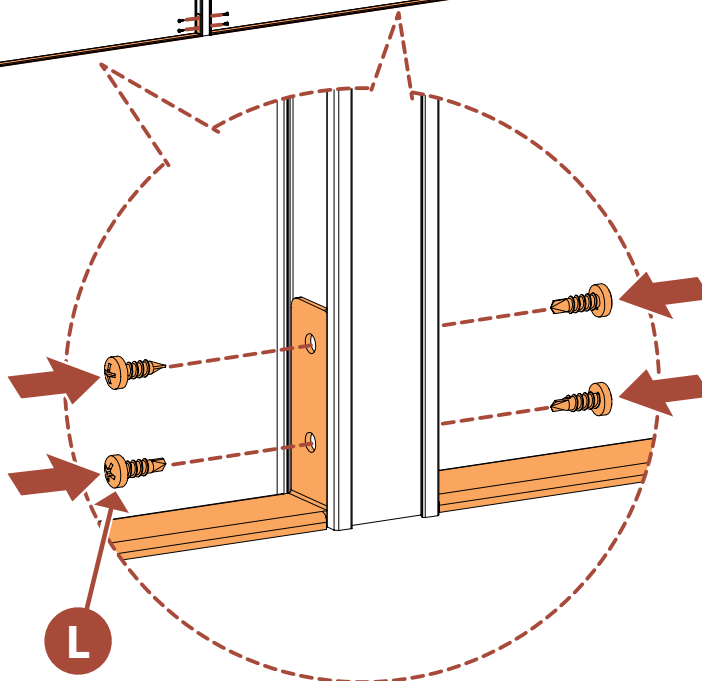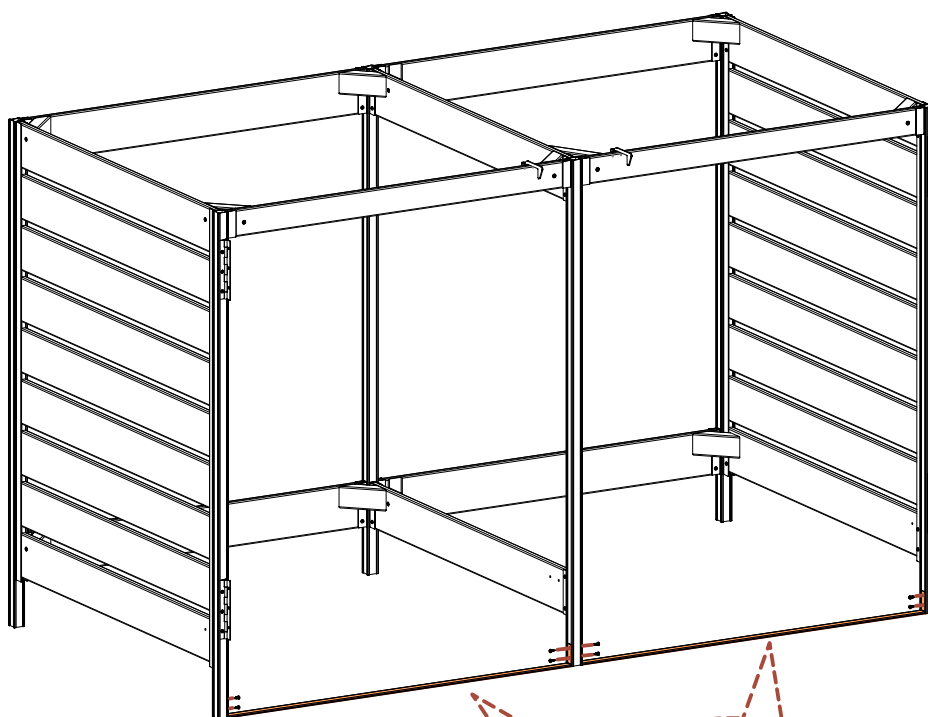

26

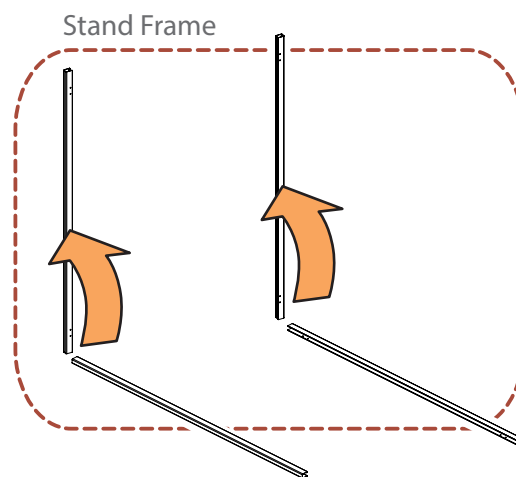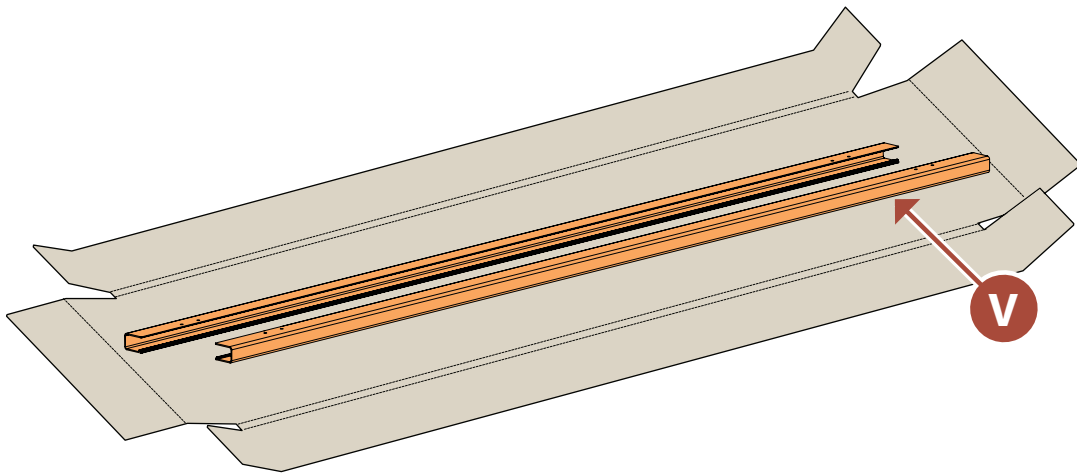

27




B x1
BRD082



R x2




Ensure that wood board (**B**) is inserted first followed by a plastic spacer (**R**) on each side.

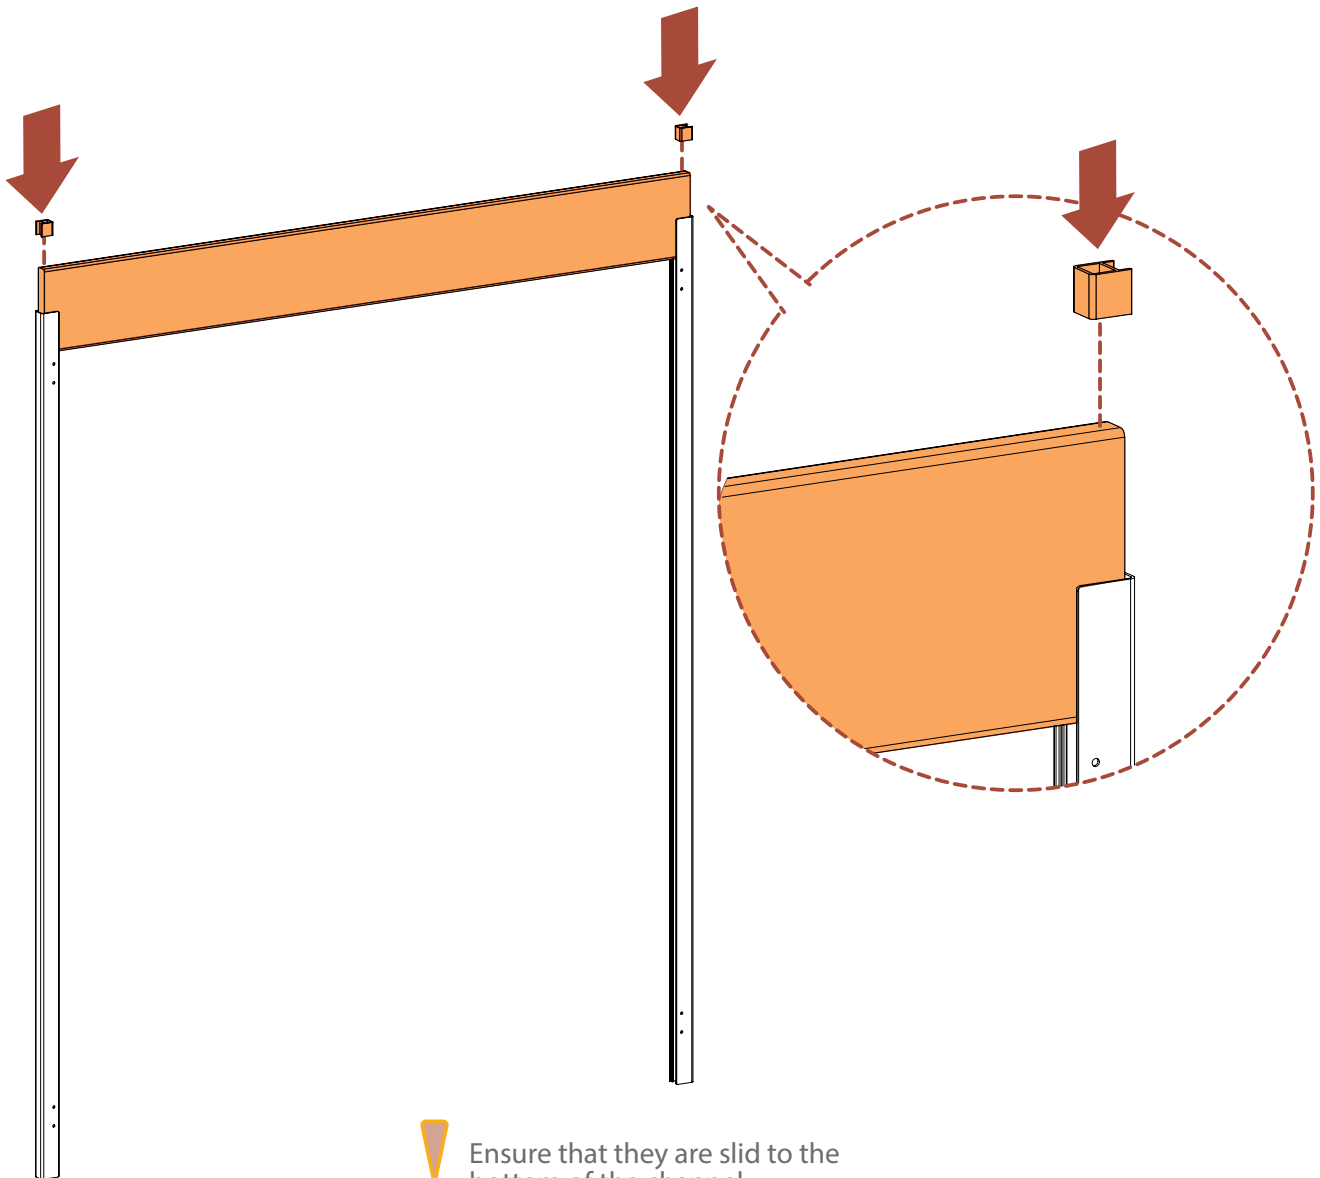


Ensure that they are slid to the bottom of the channel.

28




B x7
BRD082




E x1
BRD114




R x14

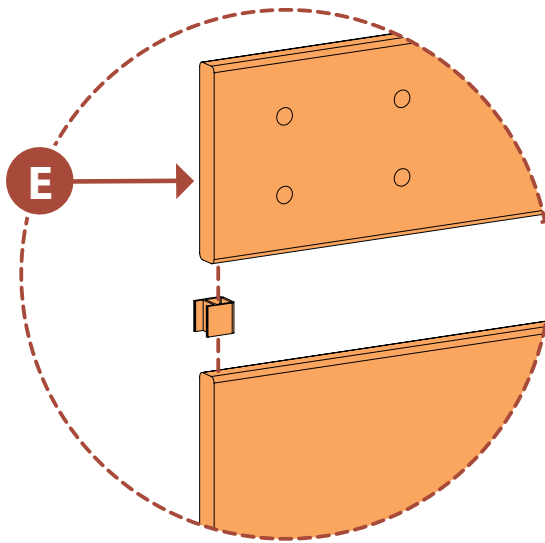


Alternate wood boards and plastic
spacers, finishing with Gate Door
Bottom Board (**E**).

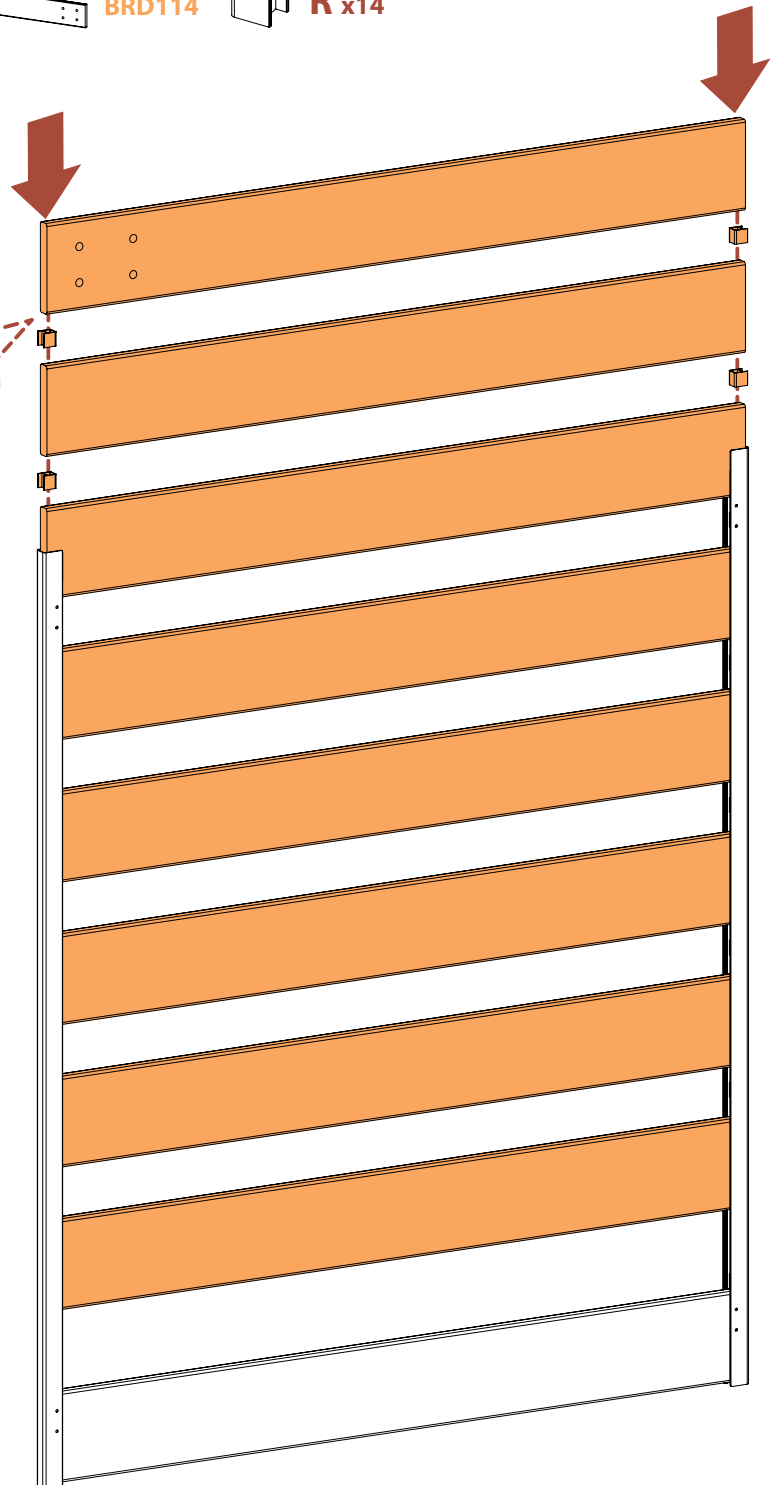


29

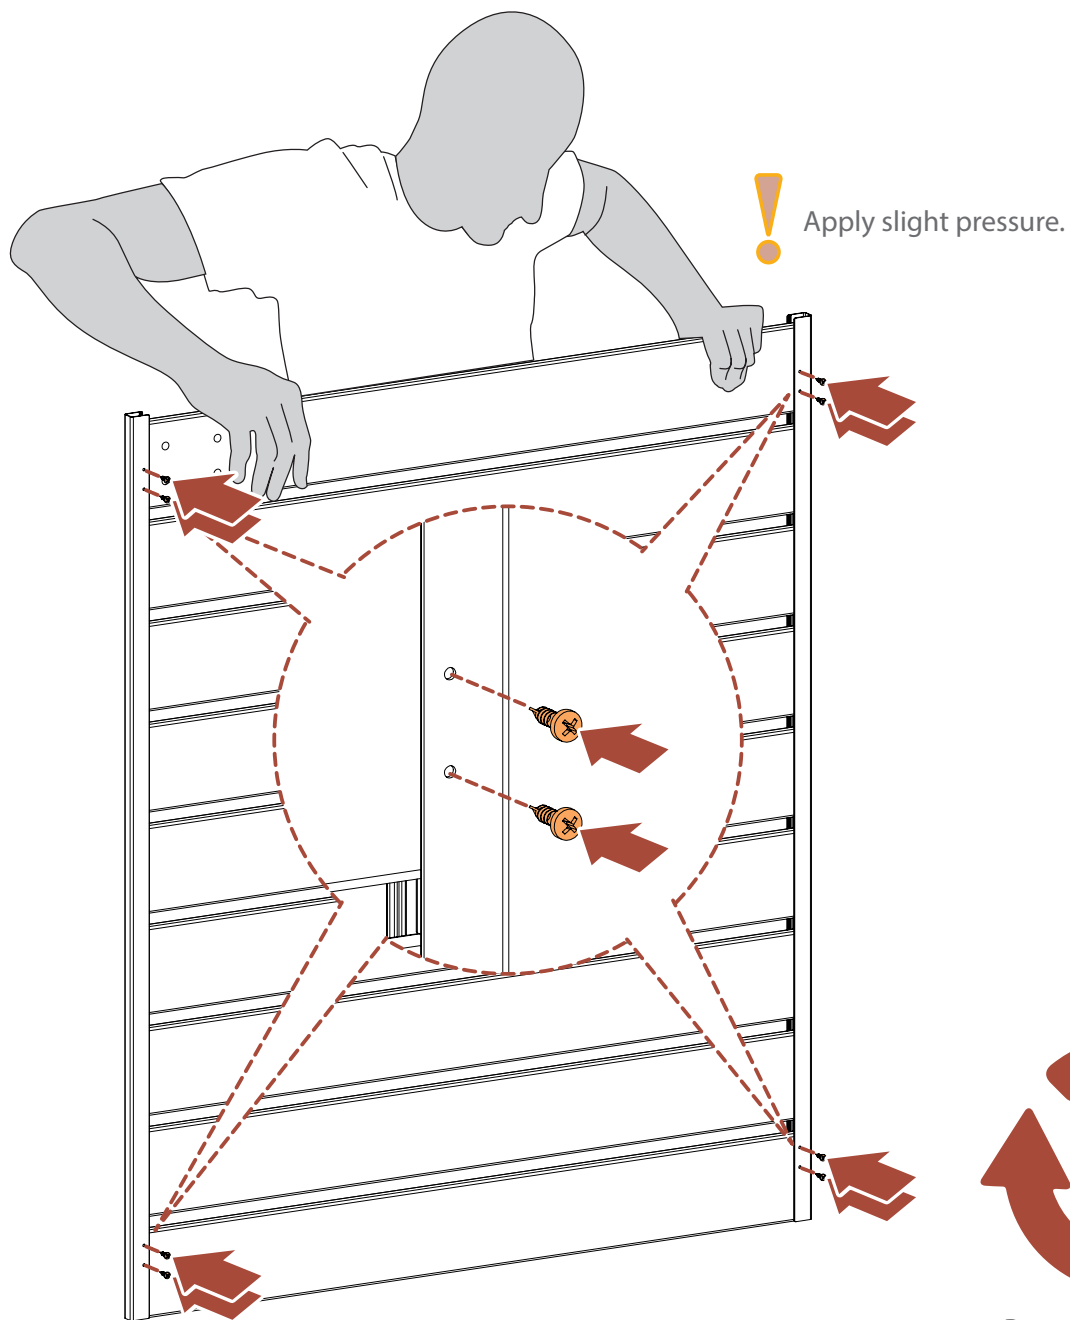


Repeat steps 26-29 to create second gate

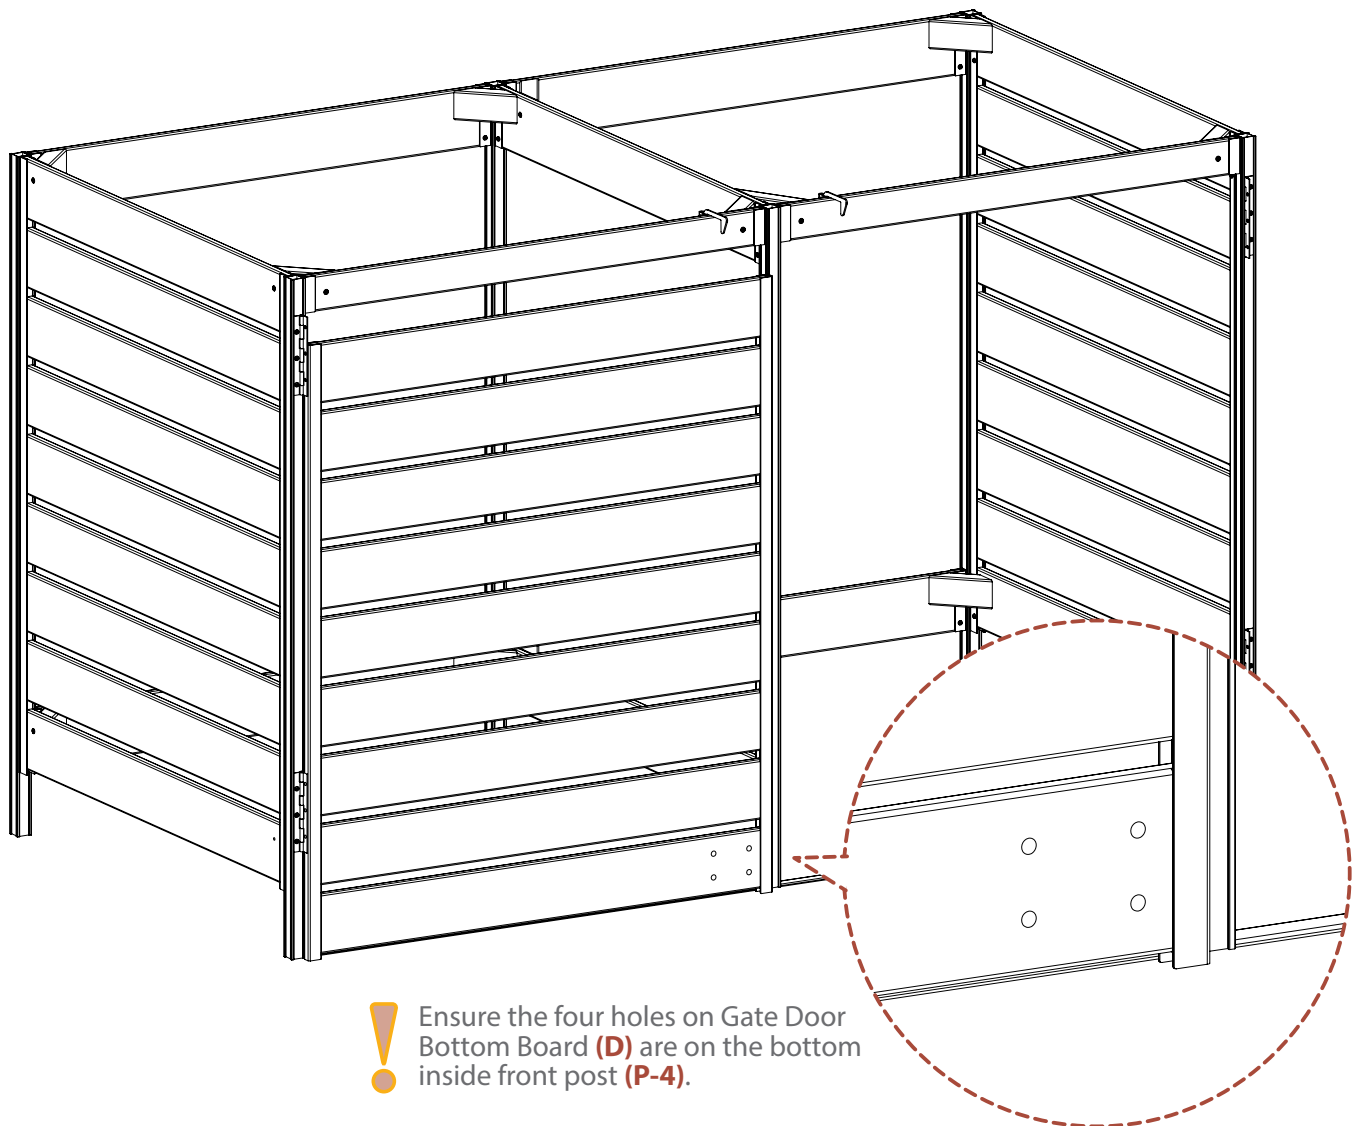

31


**H** x2

Ensure your gate is flush with Front Bridge Board (**C**). Use Gate Stopper (**W**) to help hold gate standing up.

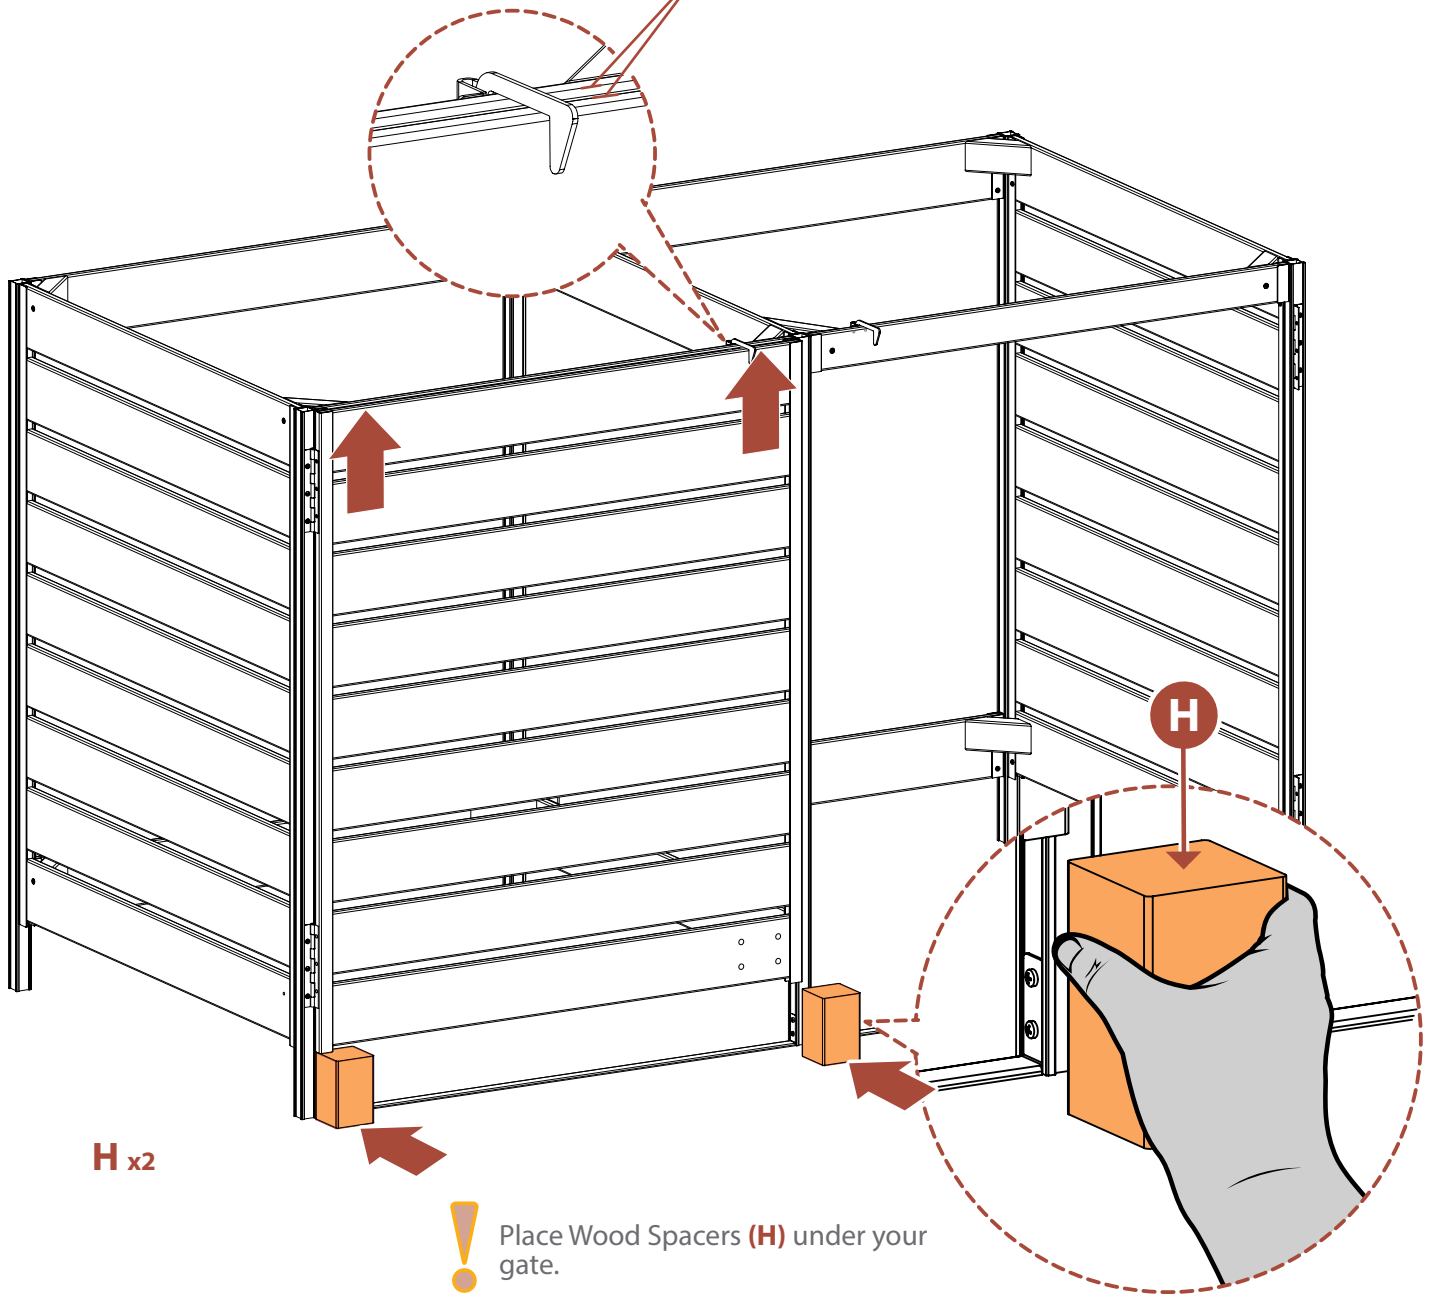






Z-2

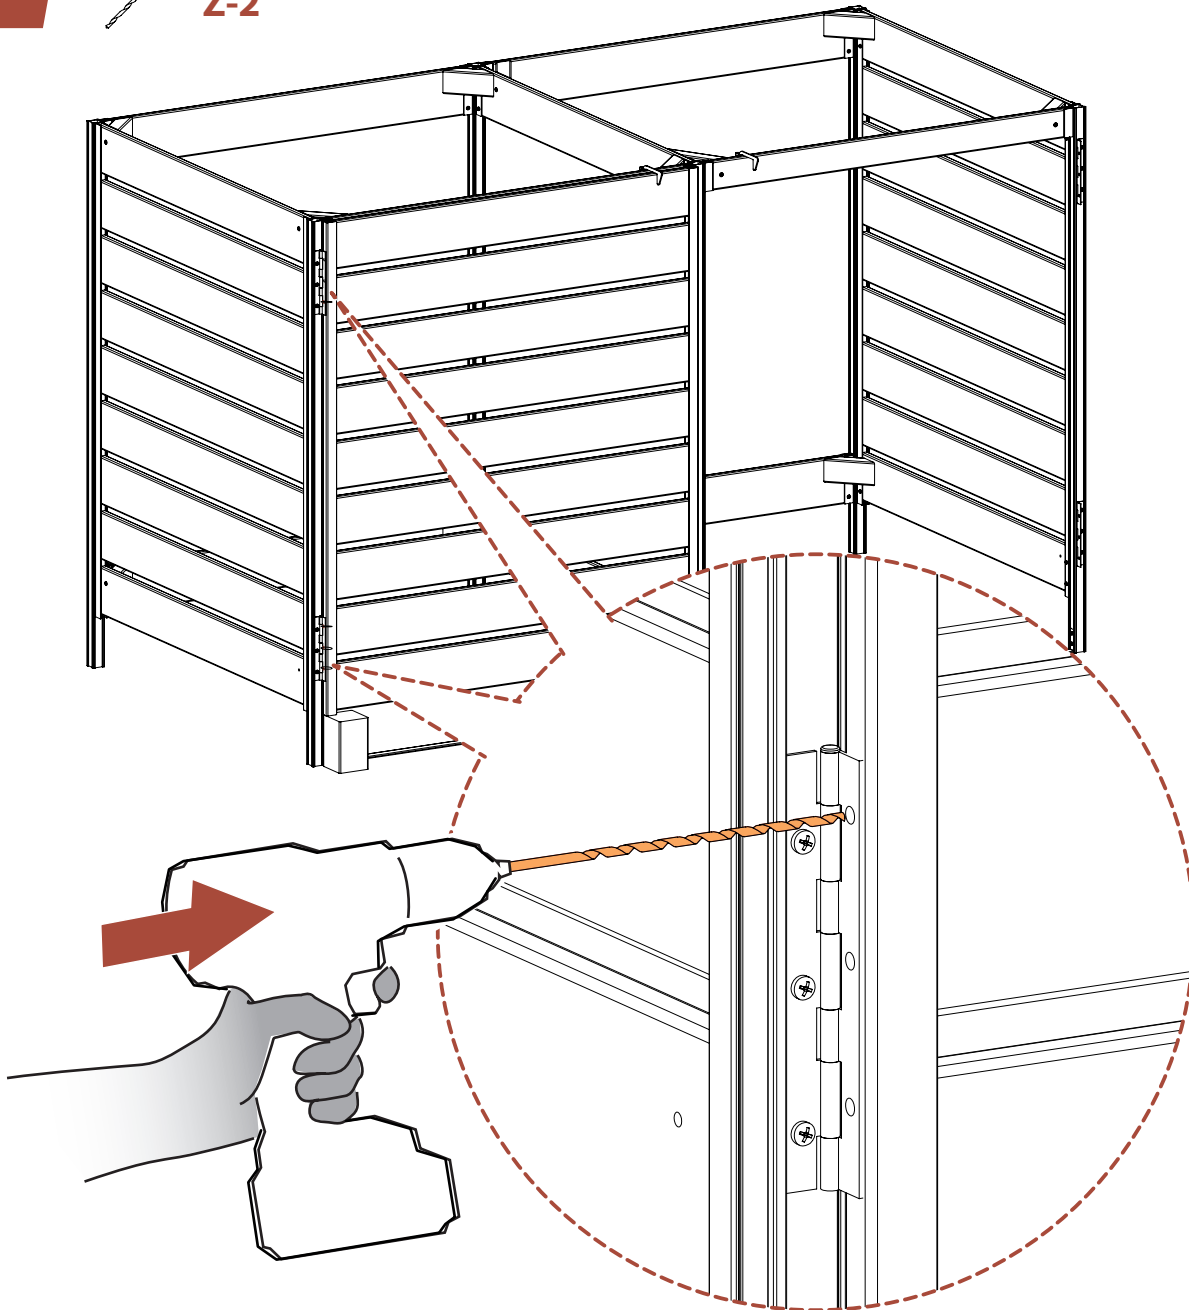


Using the included drill bit **(Z-2)**, use your hinge as a template to place your six holes on the side of your gate.

33

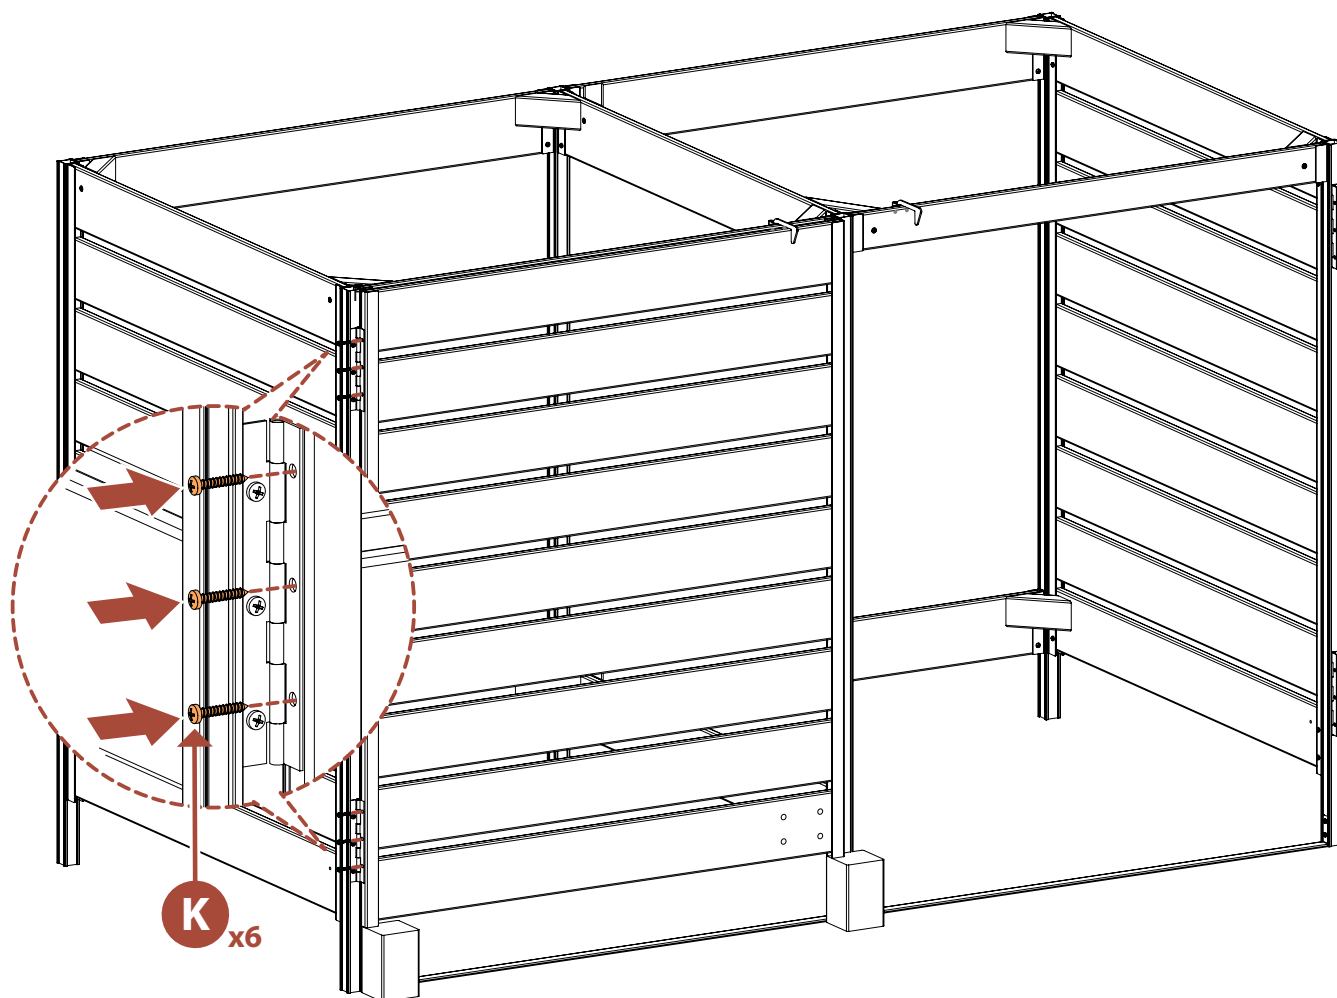


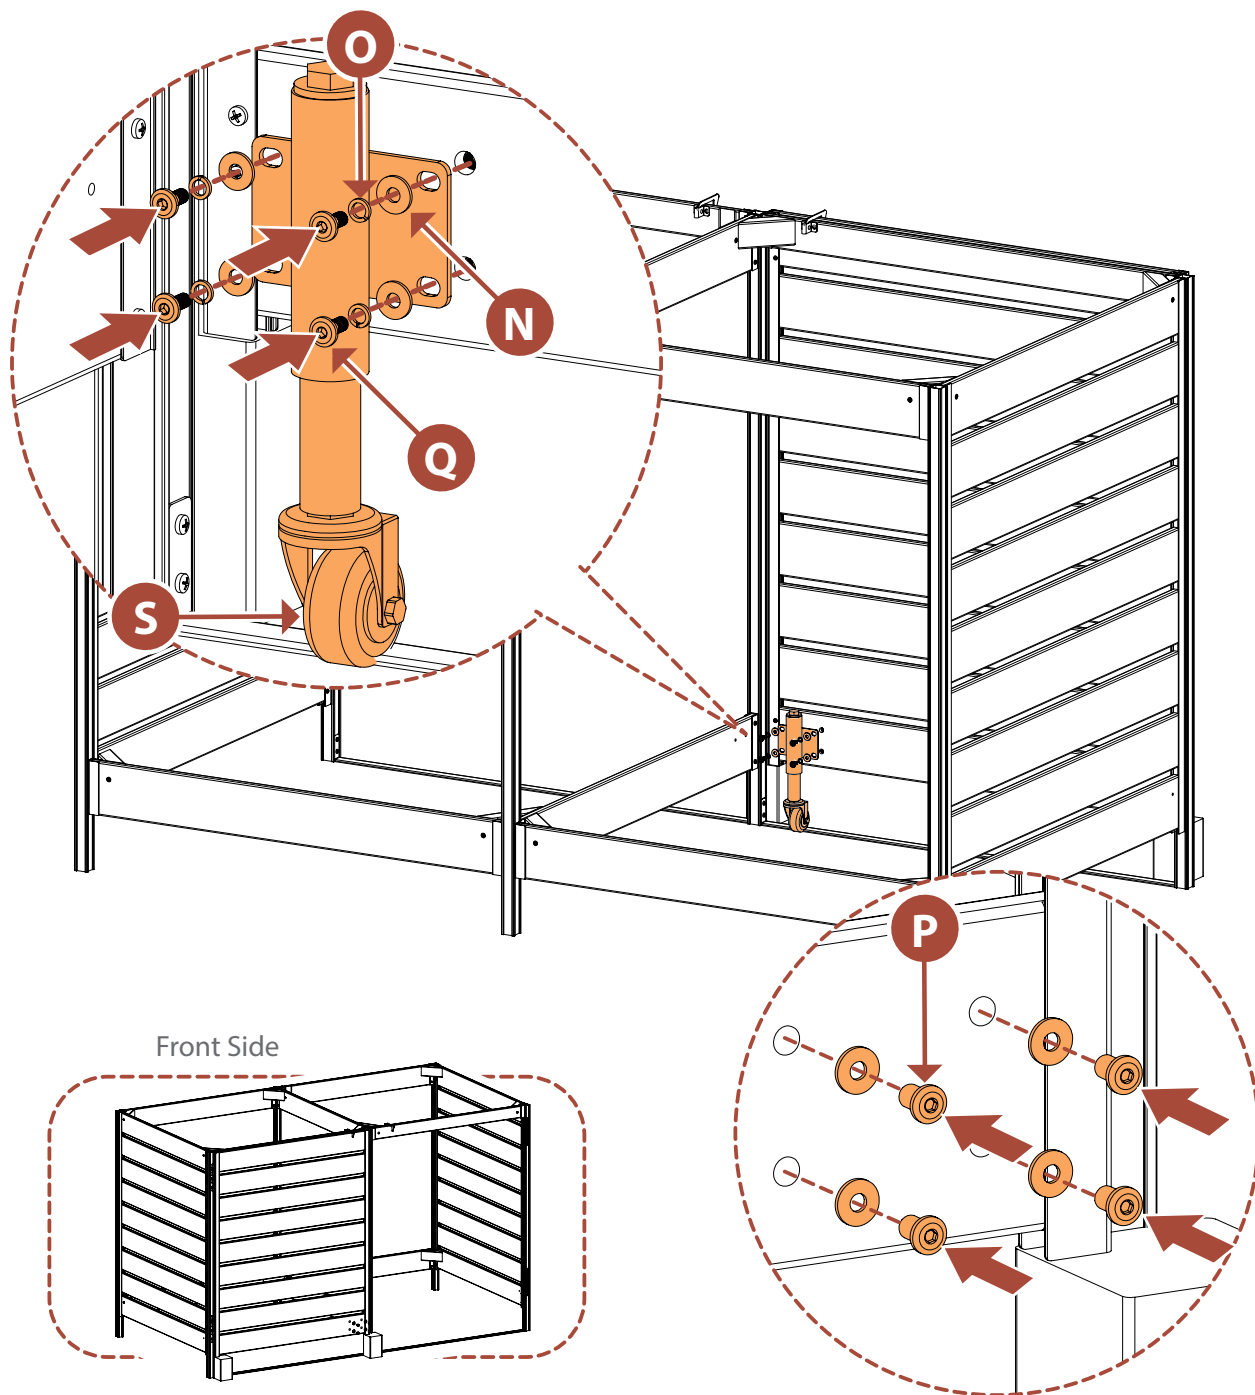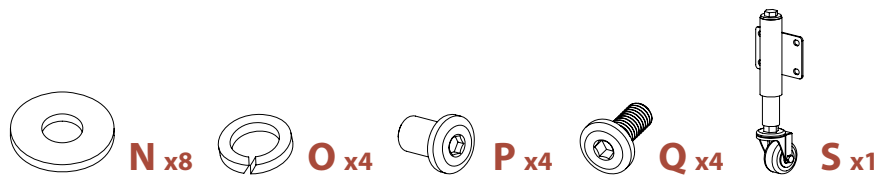



35




Z x2

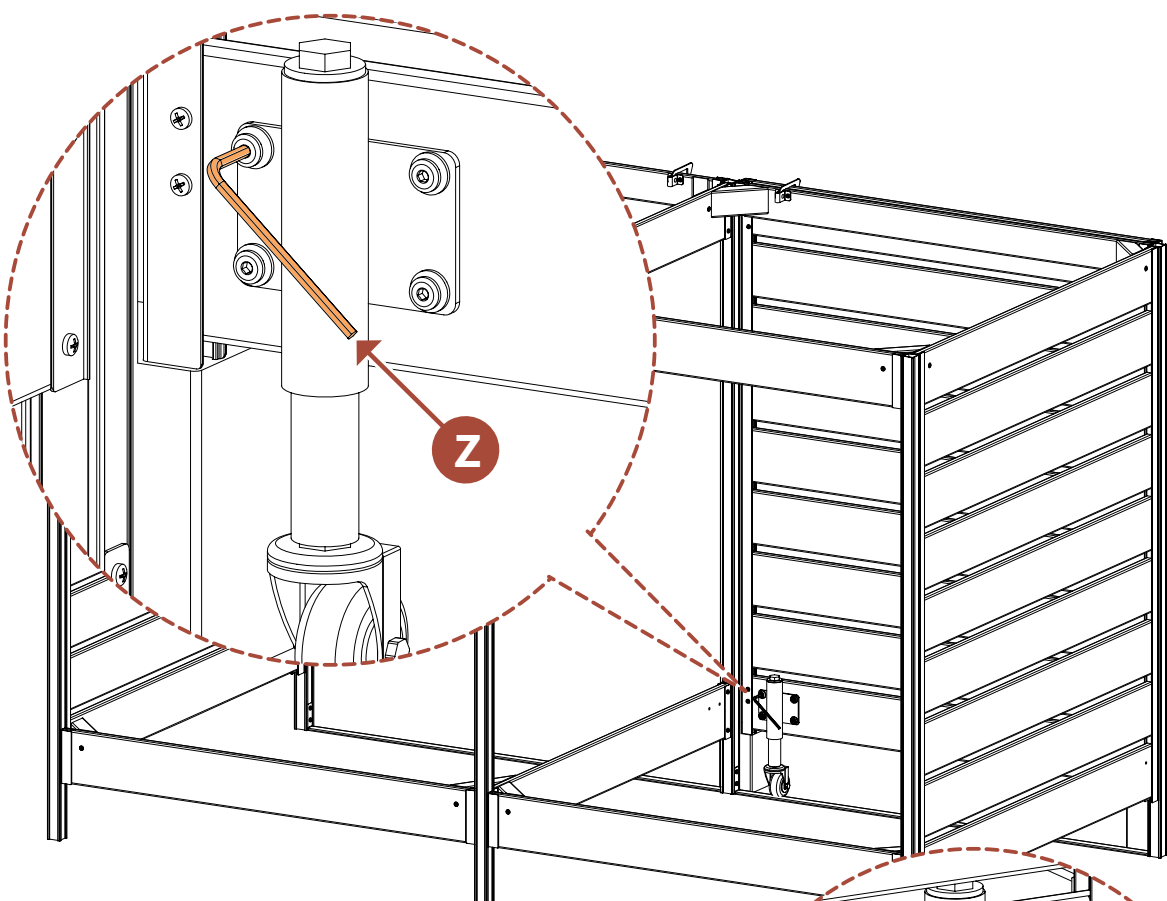

Front Side

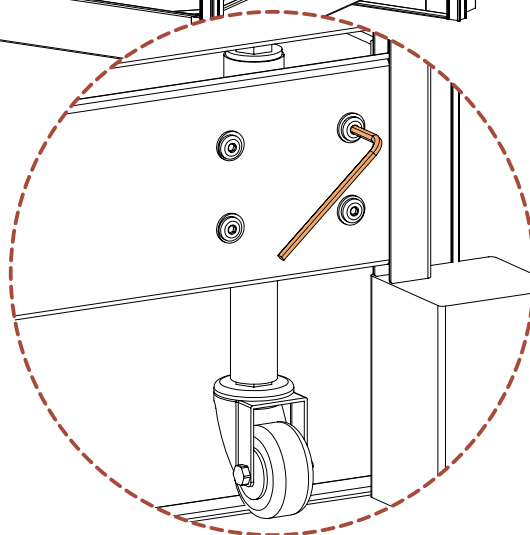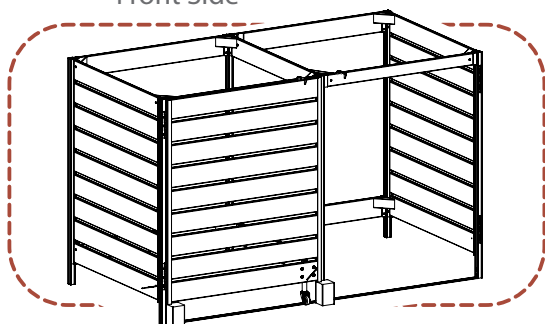

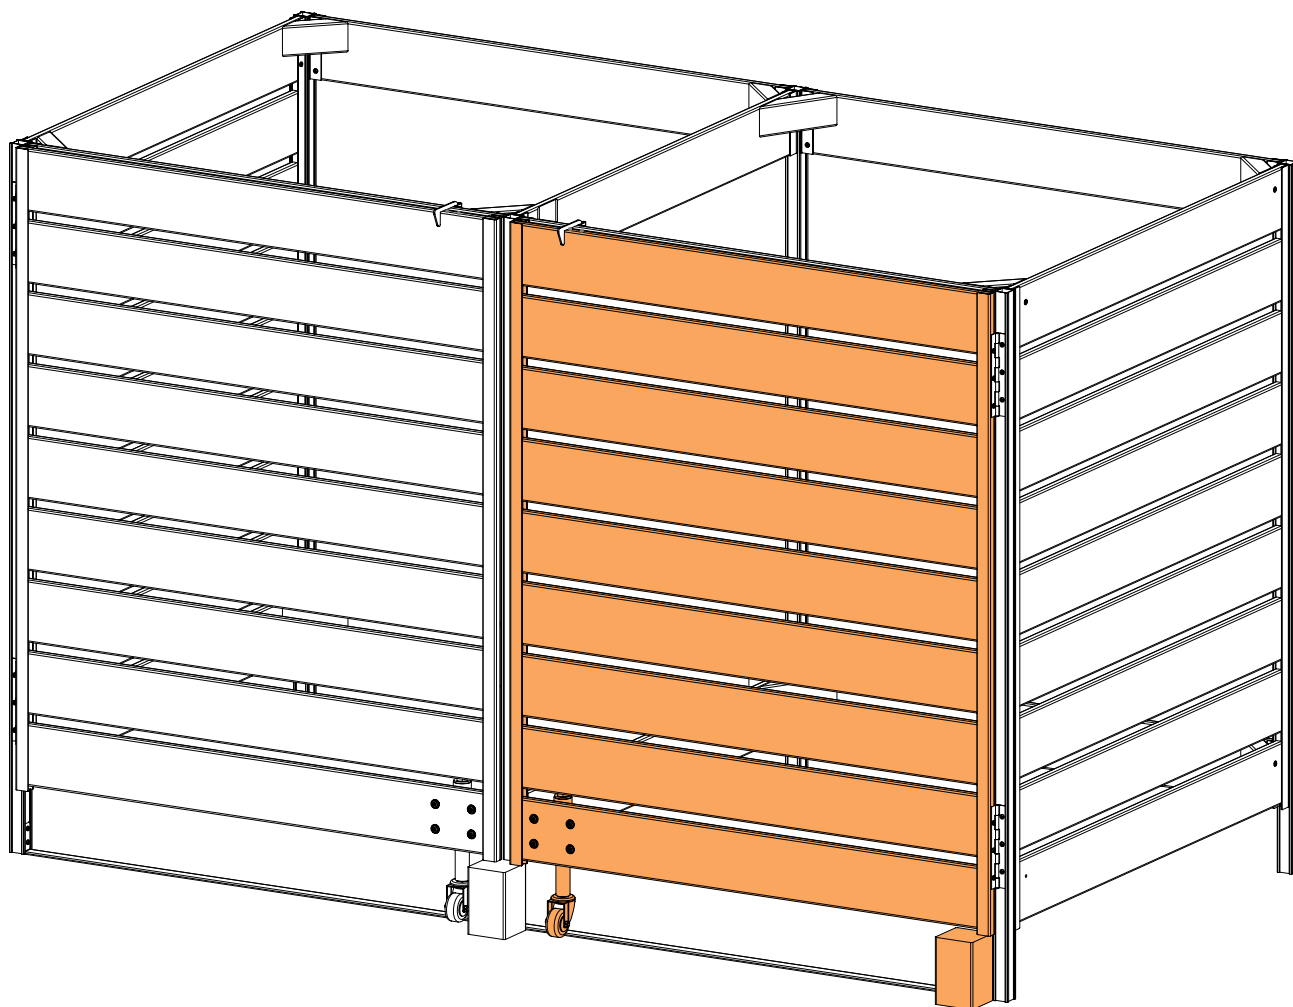


Repeat steps 30-35 to
install second gate

37




Z-1 x1


! Ensure your gate's flush with the top of your unit by lowering or raising the Caster Wheel (S) by using wrench (Z-1).

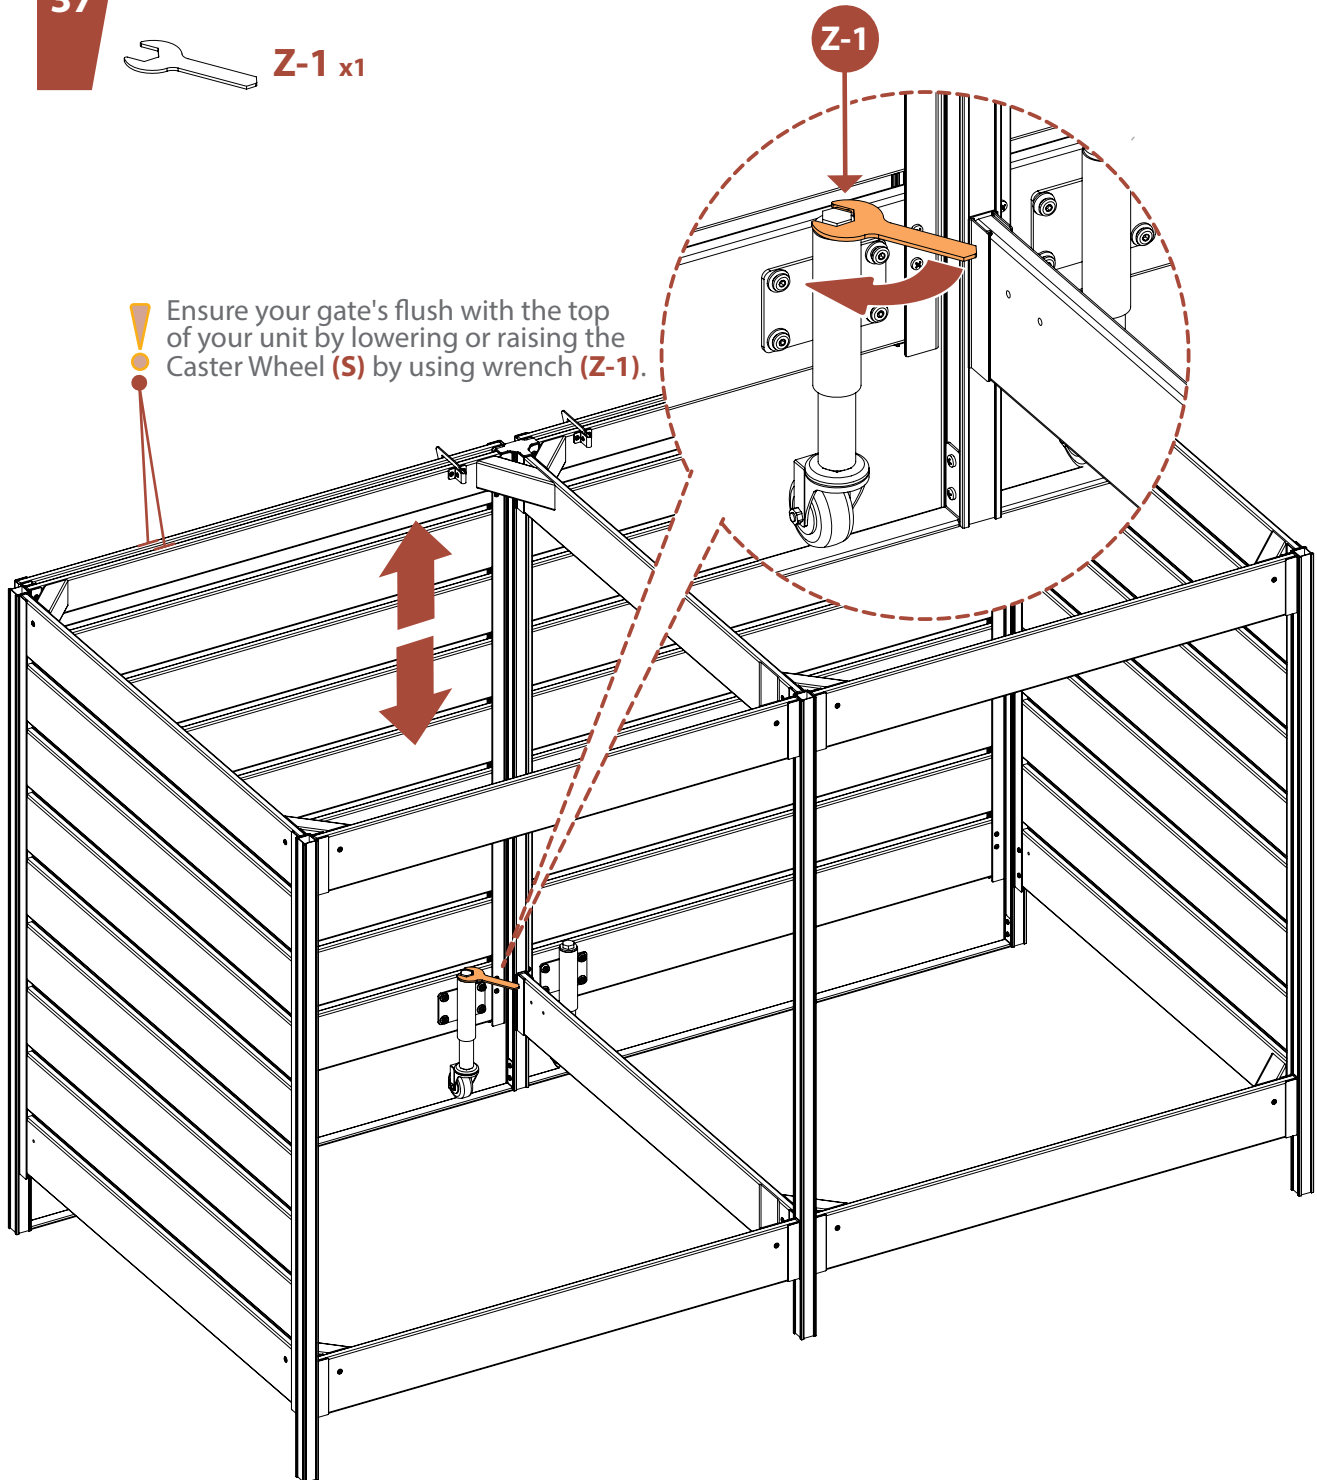



ADJUSTING **CASTER WHEEL** HEIGHT

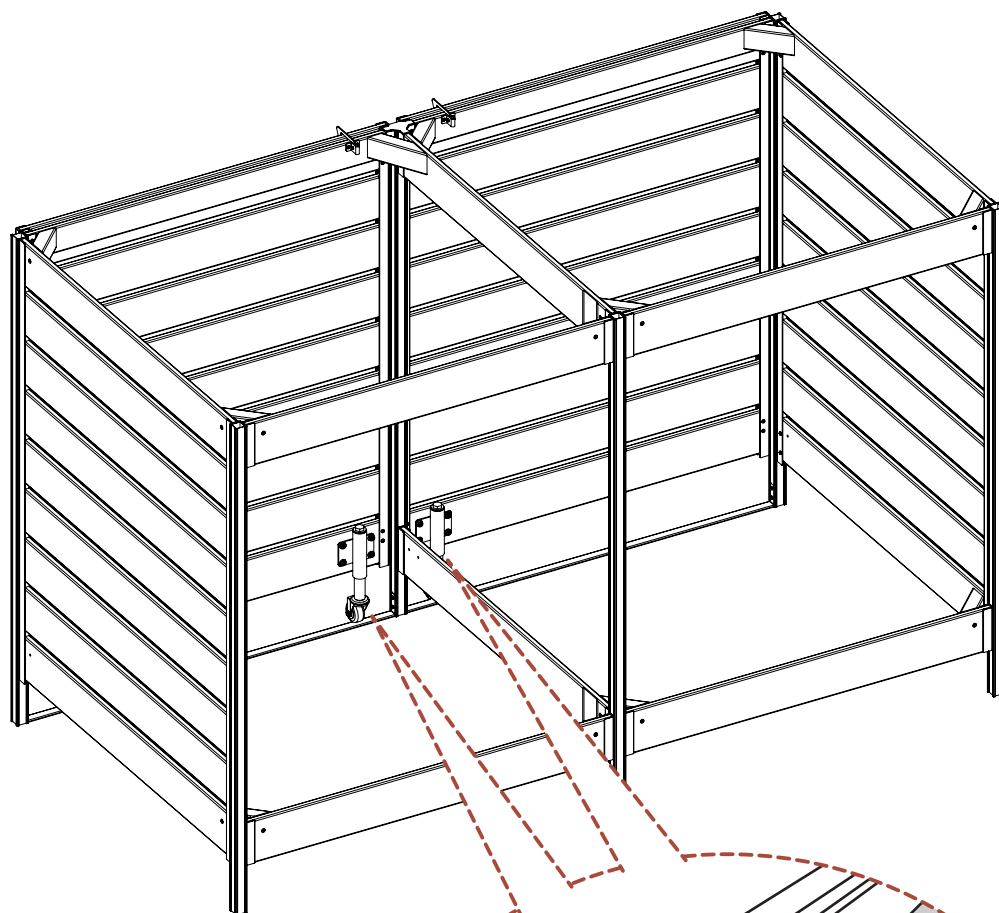


! If the wheel is not contacting the ground, use one hand to hold the bottom portion of the caster while rotating the wrench until the wheel firmly contacts the ground.

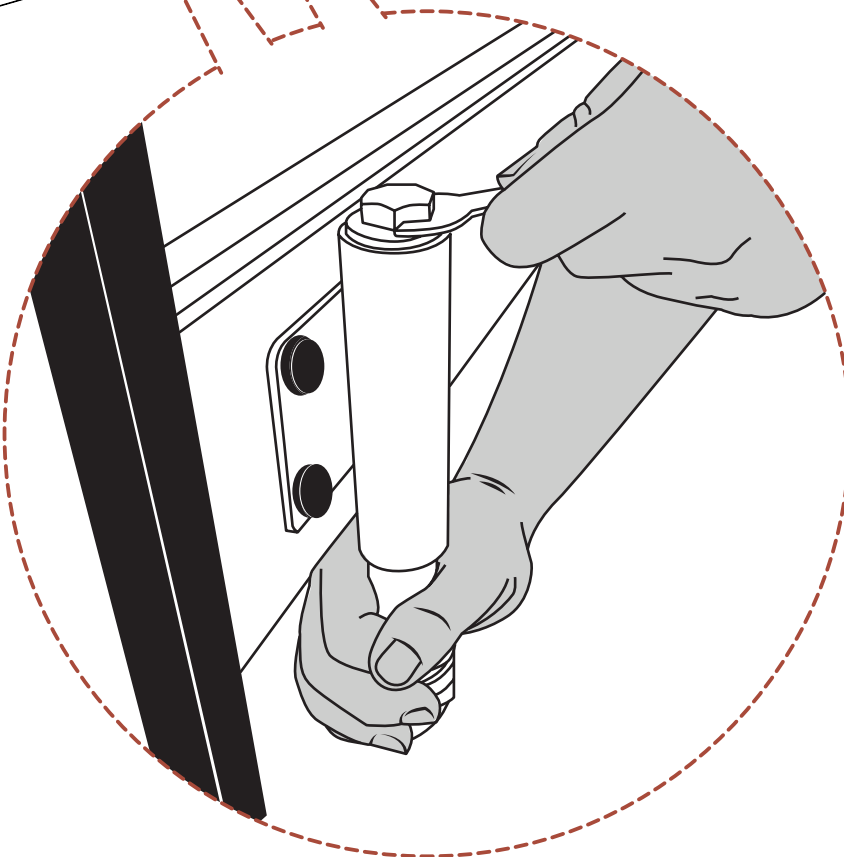


38

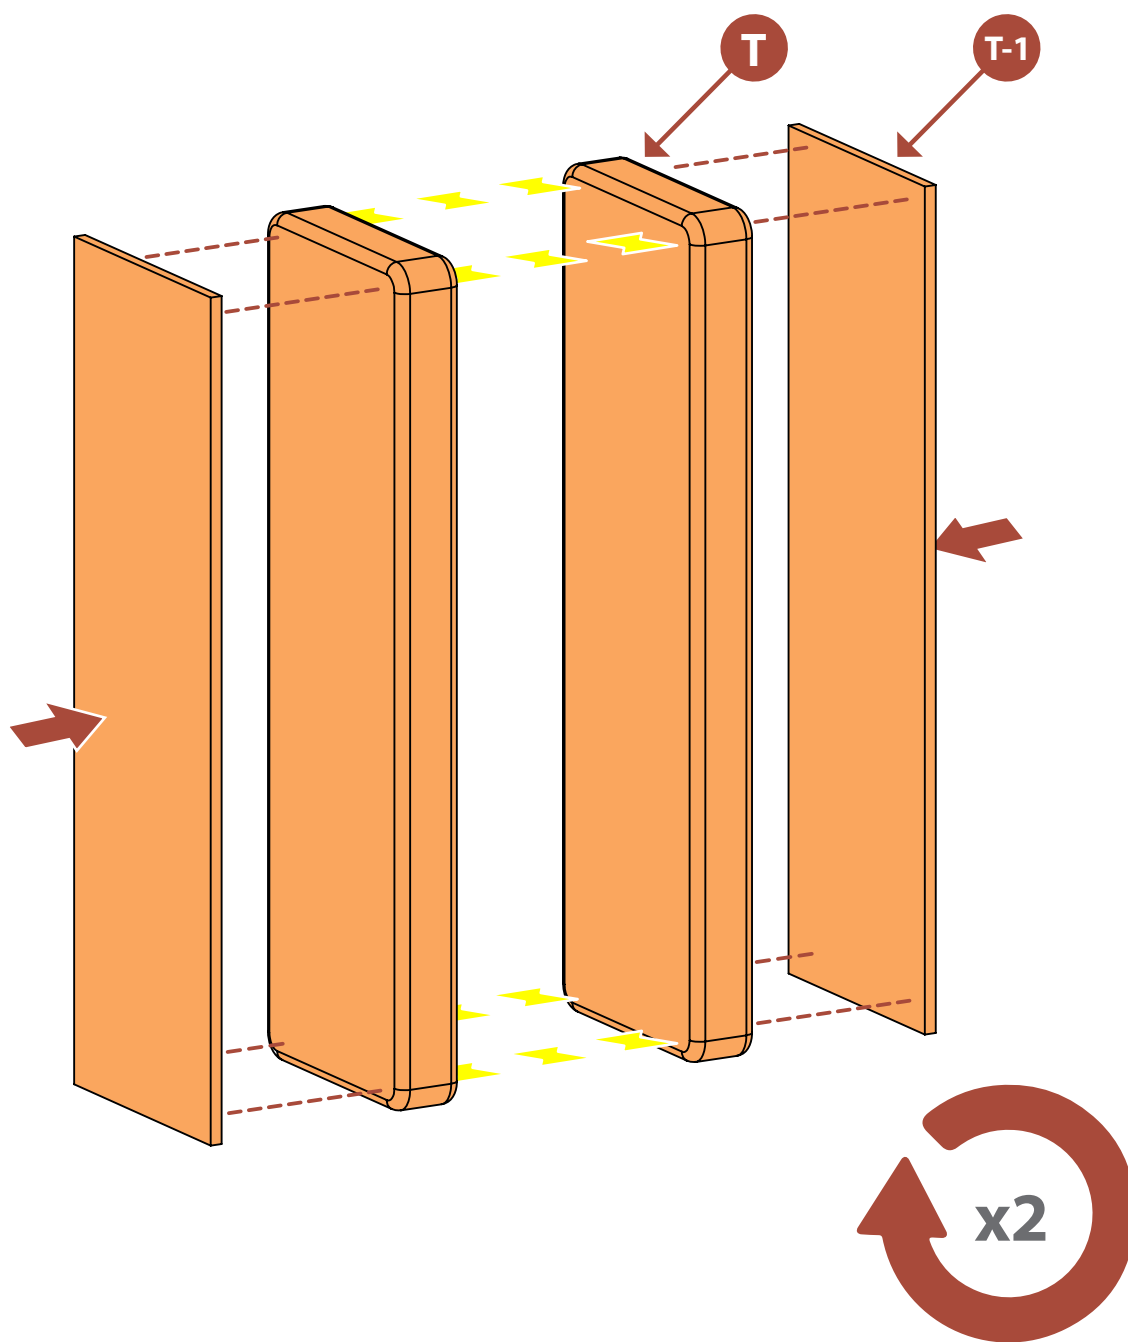

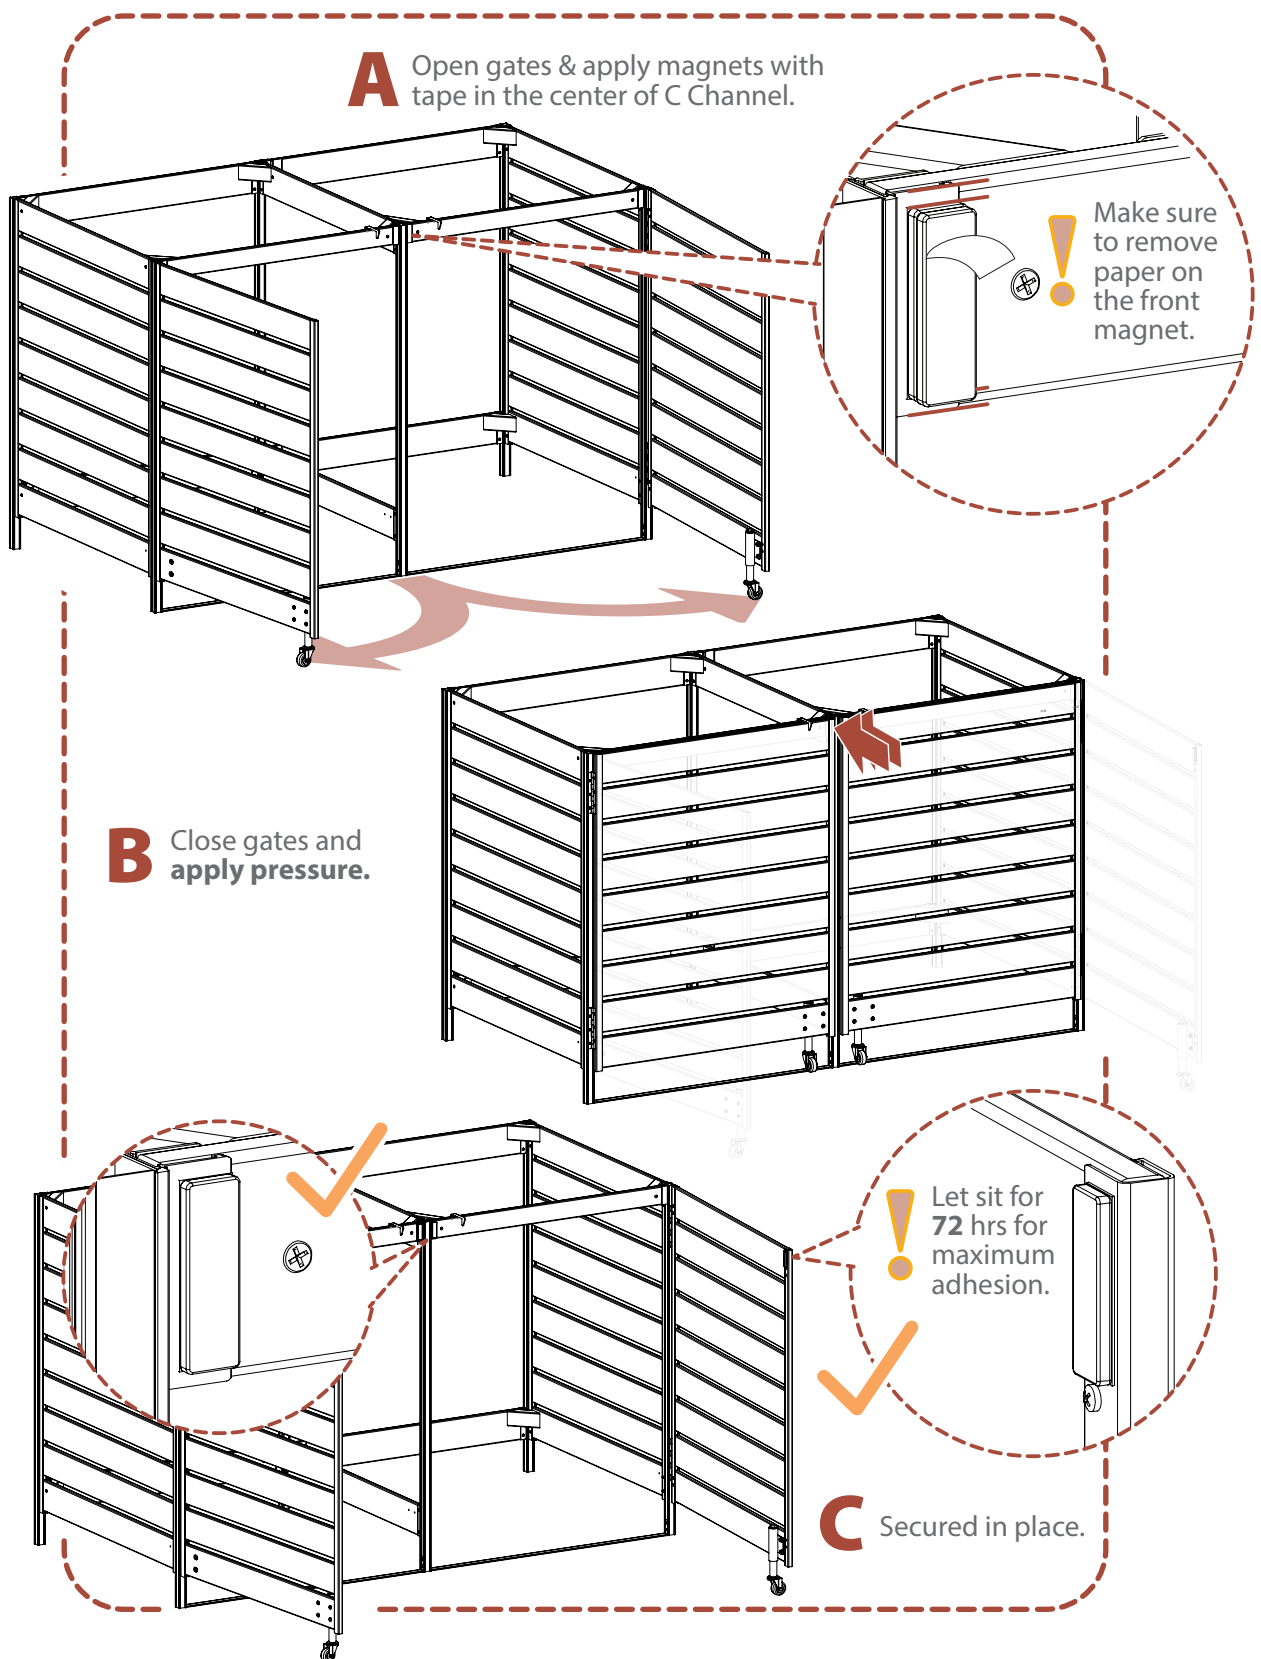


39



X x2



Y x4

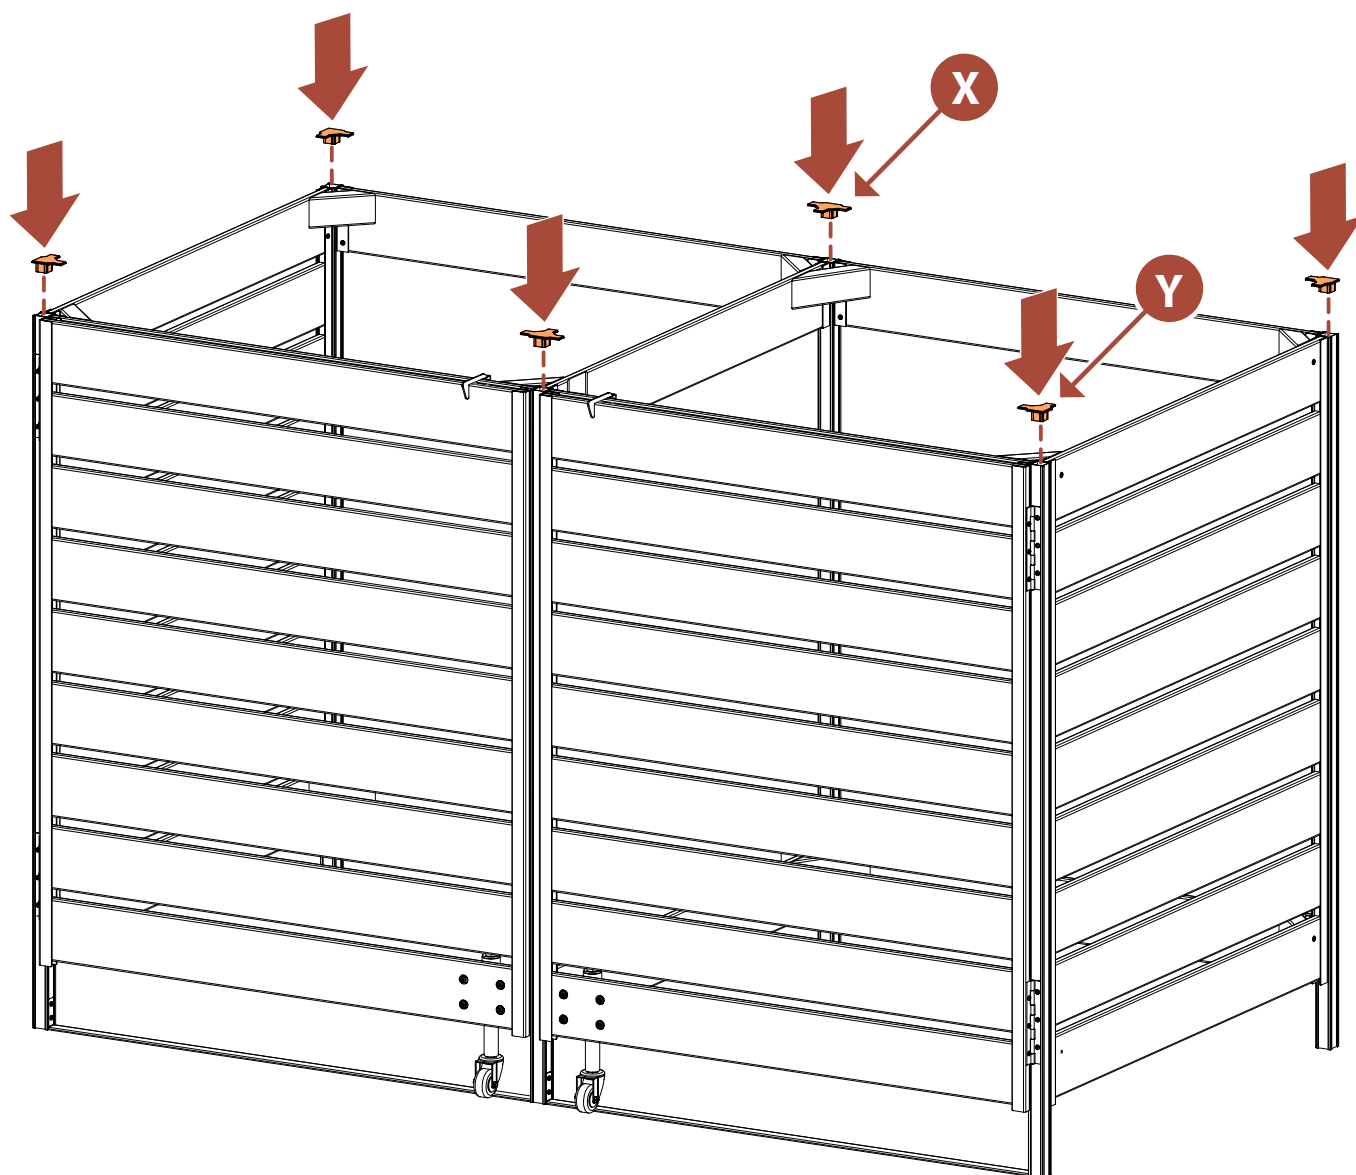

ENCLO

HIDE IT WITH STYLE

www.encloscreens.com

support@encloscreens.com



704-892-5222
877-234-6196



6935 Reames Rd. Ste. K.
Charlotte, NC 28216

