

WRITING DESK

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



Warning !


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

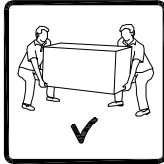

ASSEMBLY TIME 60 MINUTES


PARTS IDENTIFICATION:

(A) LEFT SIDE PANEL




1 PC

(B) RIGHT SIDE PANEL




1 PC

(C) LEFT DIVIDER PANEL




1 PC

(D) RIGHT DIVIDER PANEL




1 PC

(E) LEFT BOTTOM PANEL




1 PC

(F) MIDDLE BOTTOM PANEL

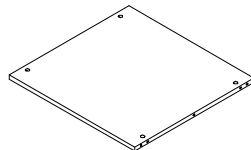


1 PC

(G) RIGHT BOTTOM PANEL




1 PC

(H) BACK PANEL

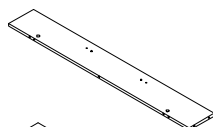


1 PC

(I) TOP PANEL

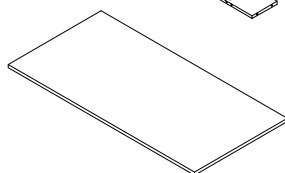

1 PC

(J) DRAWER FRONT PANEL




2 PCS

(K) DRAWER BACK PANEL




2 PCS

(L) DRAWER LEFT SIDE PANEL




2 PCS

(M) DRAWER RIGHT SIDE PANEL




2 PCS

(N) DRAWER BOTTOM PANEL




2 PCS

(O) MIDDLE DRAWER FRONT PANEL




1 PC

(P) MIDDLE DRAWER BACK PANEL




1 PC

(Q) MIDDLE DRAWER LEFT SIDE PANEL



1 PC


(R) MIDDLE DRAWER RIGHT SIDE PANEL



1 PC


PARTS IDENTIFICATION:

(S) MIDDLE DRAWER BOTTOM PANEL




1 PC

(U) CROSS BAR

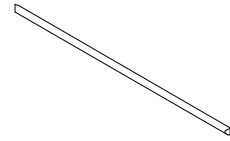

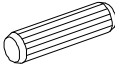

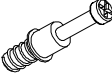




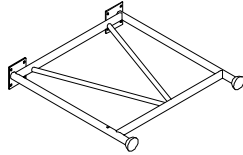


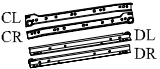
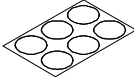


1 PC

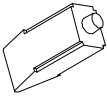(T) METAL FRAME




2 PCS


Z							
HARDWARE IDENTIFICATION							
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1 PC	8	GLIDES SCREW ($\phi 3 \times 12$ mm SR)		36 PCS
2	WOODEN DOWEL $\phi 8 \times 30$ mm		45 PCS	9	KNOB		3 PCS
3	CAM BOLT ($\phi 7 \times 35.5$ mm SR)		20 PCS	10	KNOB BOLT ($\phi 4 \times 28$ mm BLK)		3 PCS
4	CAM LOCK ($\phi 15 \times 12$ mm SR)		20 PCS	11	BOLT (M6x20mm BLK)		16 PCS
5	LONG SCREW ($\phi 4.5 \times 42$ mm SR)		16 PCS	12	LONG BOLT (M6x44mm BLK)		2 PCS
6	SCREW ($\phi 4.3 \times 35$ mm SR)		12 PCS	13	ALLEN WRENCH (4mm SR)		1 PC
7	GLIDES (L = 350mm WHT)		3SET	14	STICKER $\phi 20$ mm		4 PCS

Z7,Z9,Z10 not included in blister packaging.

STEP 1 :

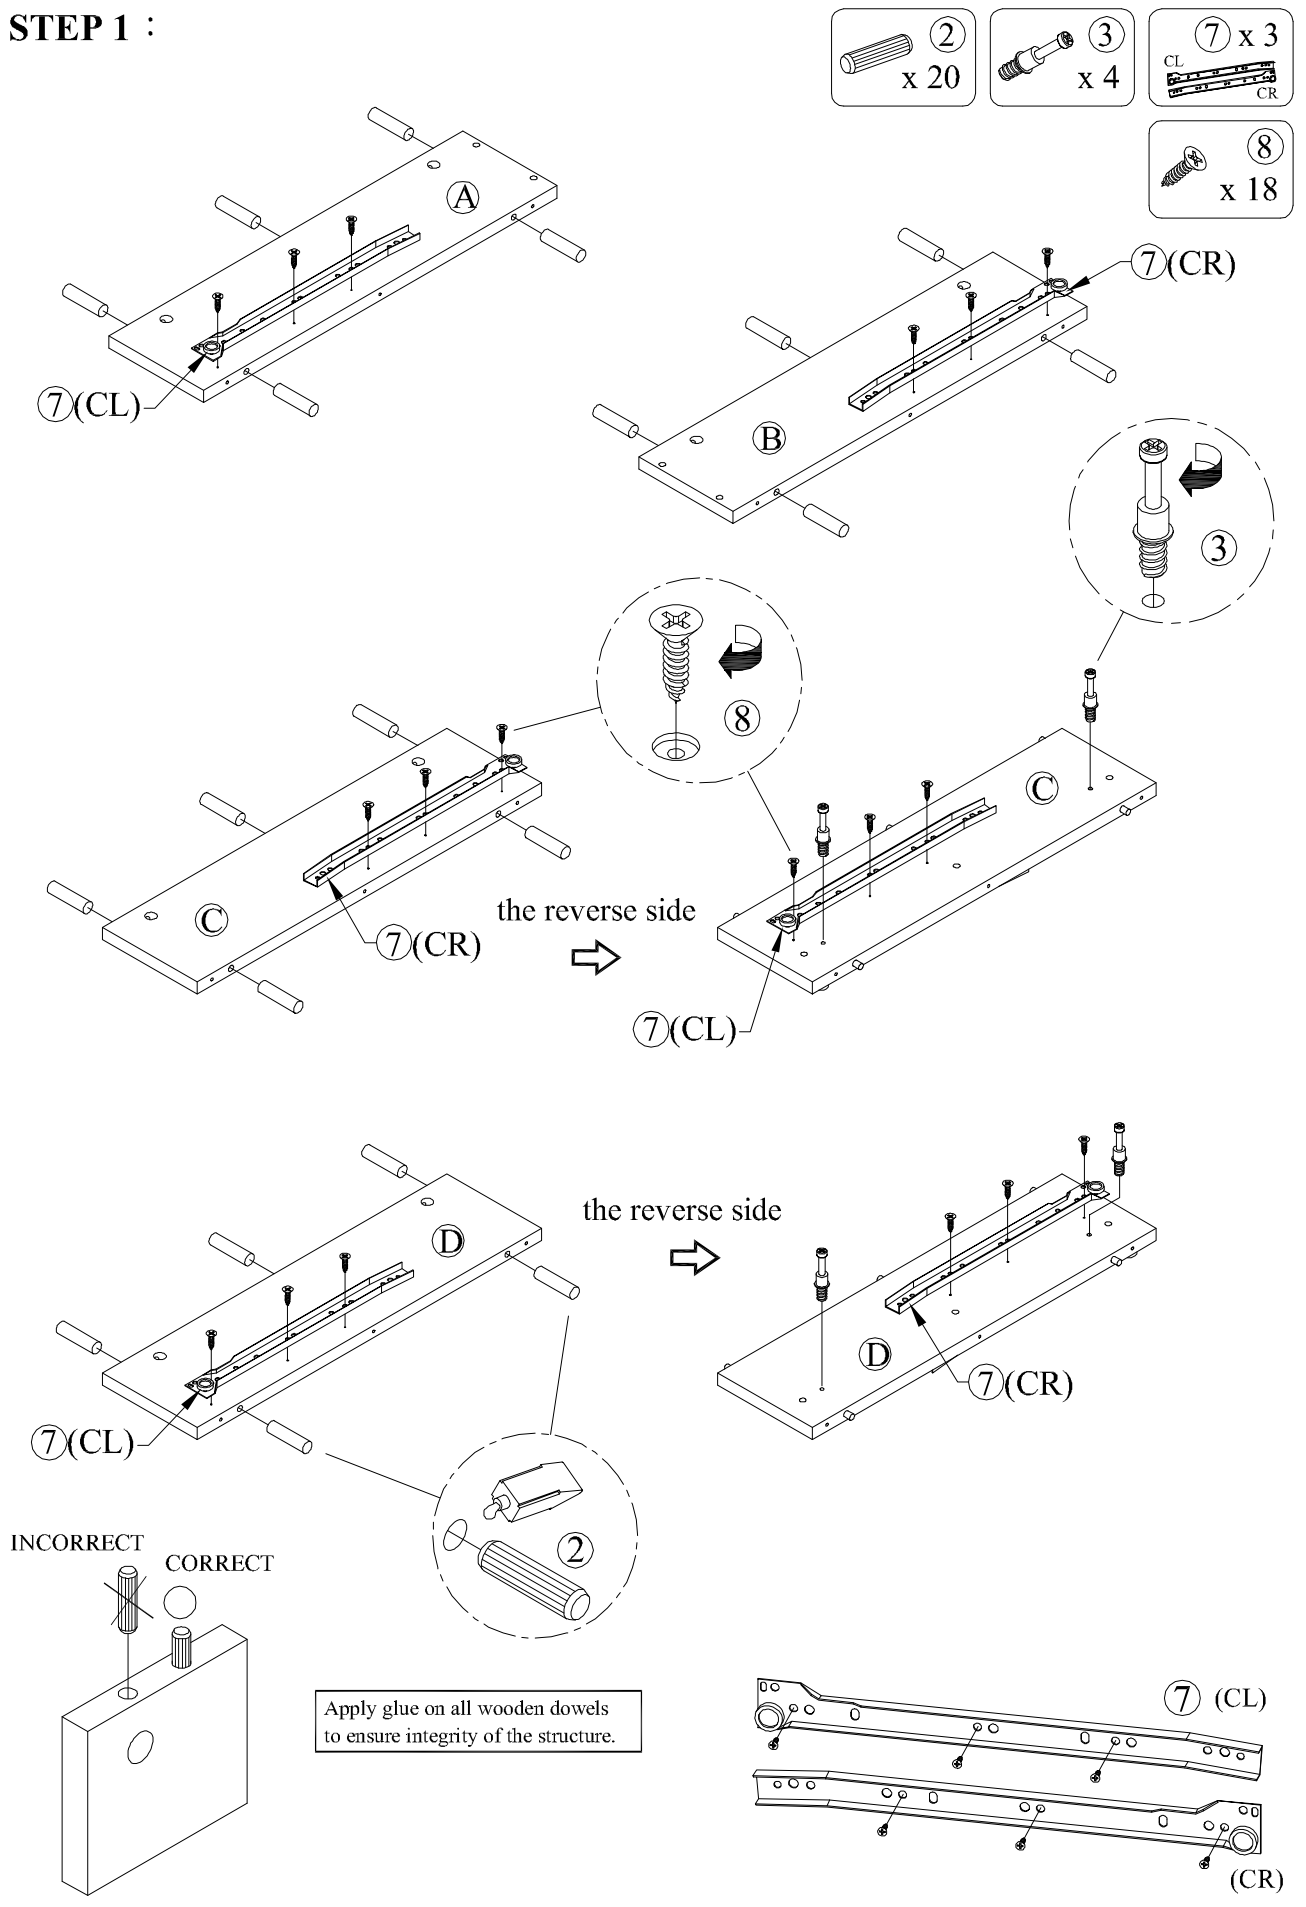


STEP 2 :

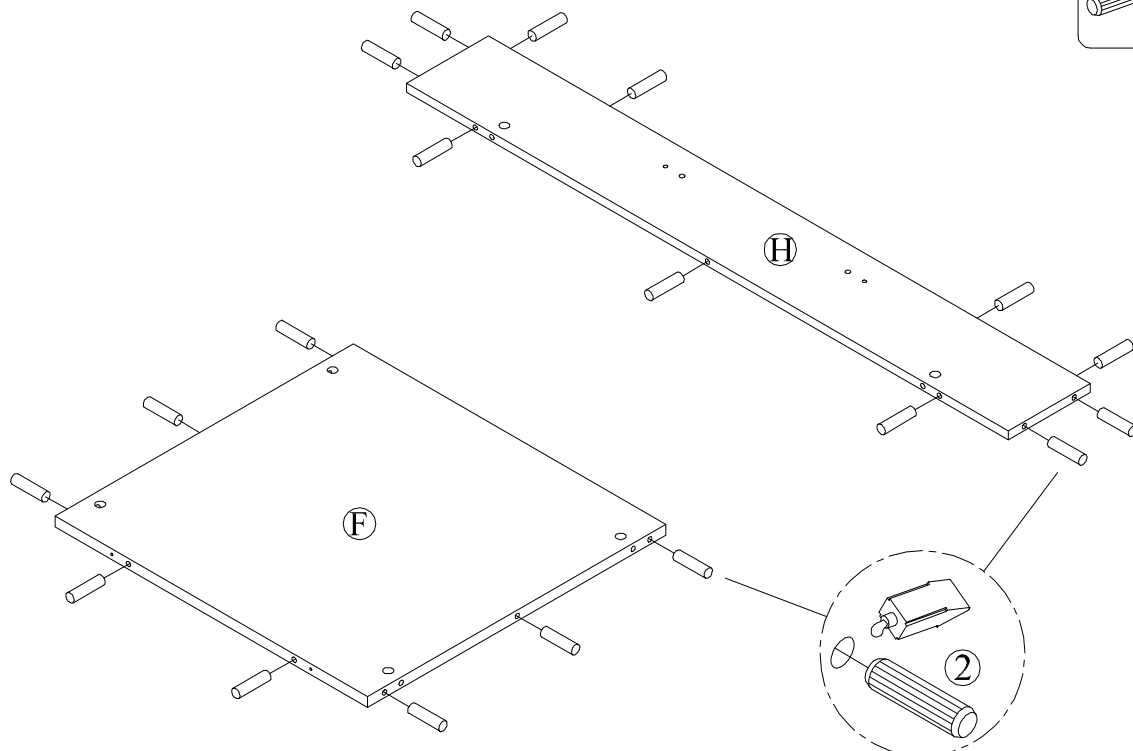

2
x 19

Apply glue on all wooden dowels
to ensure integrity of the structure.


STEP 3 :

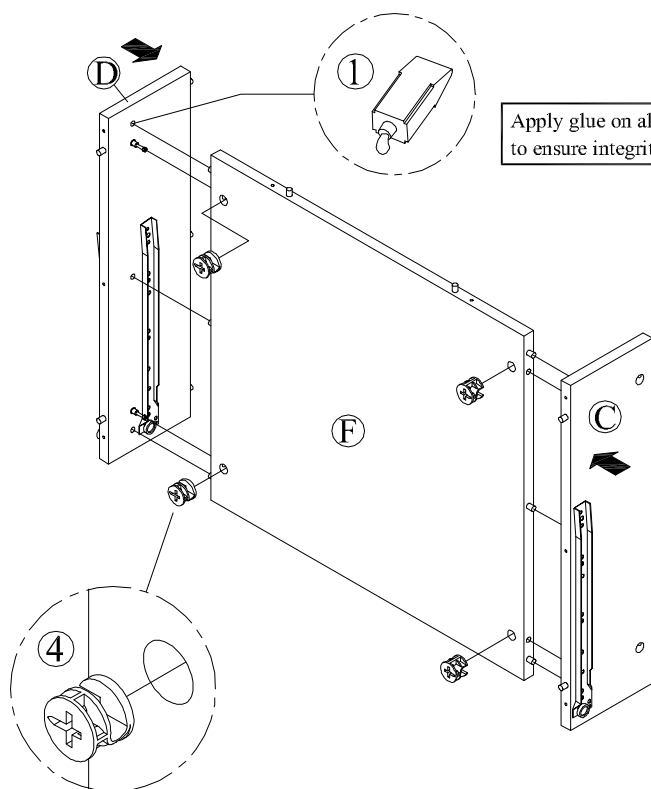



4
x 4

14

Apply glue on all wooden dowels
to ensure integrity of the structure.

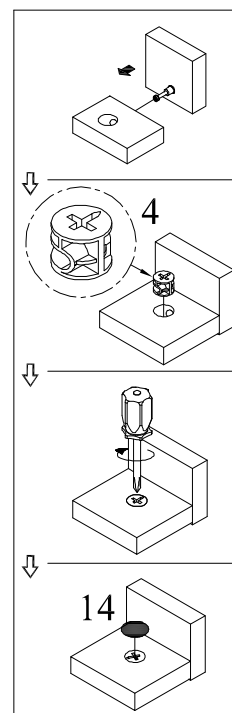


STEP 4 :

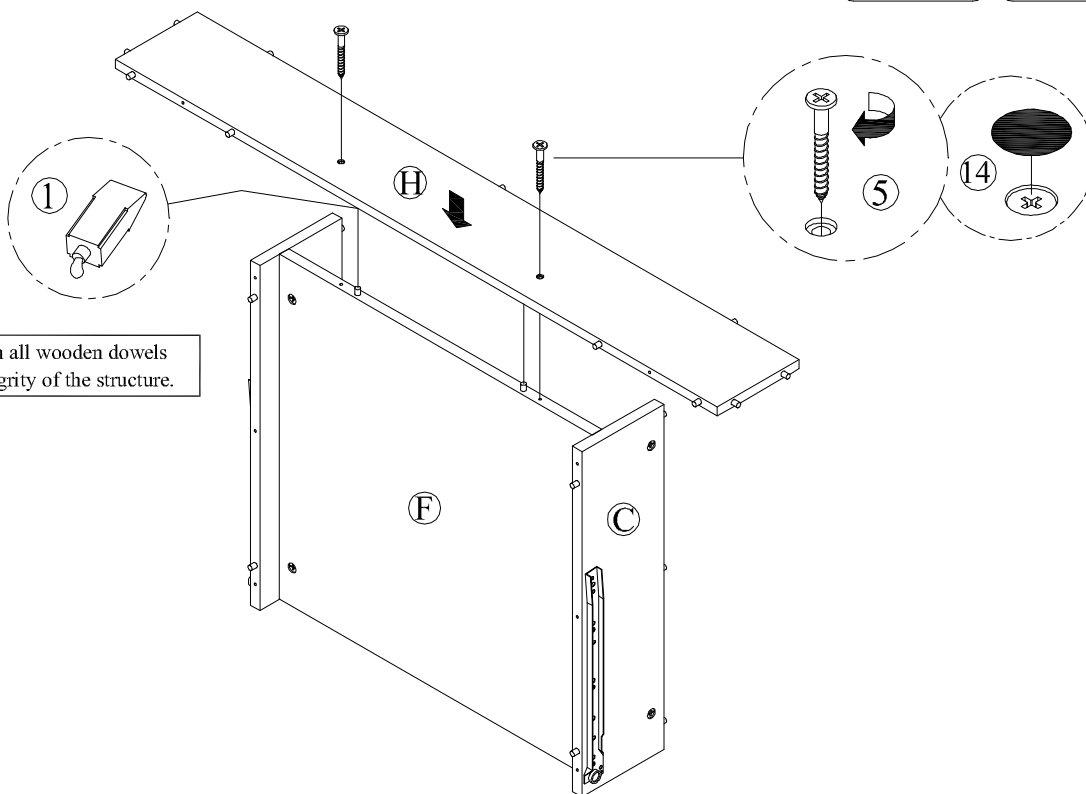


Apply glue on all wooden dowels to ensure integrity of the structure.


STEP 5 :

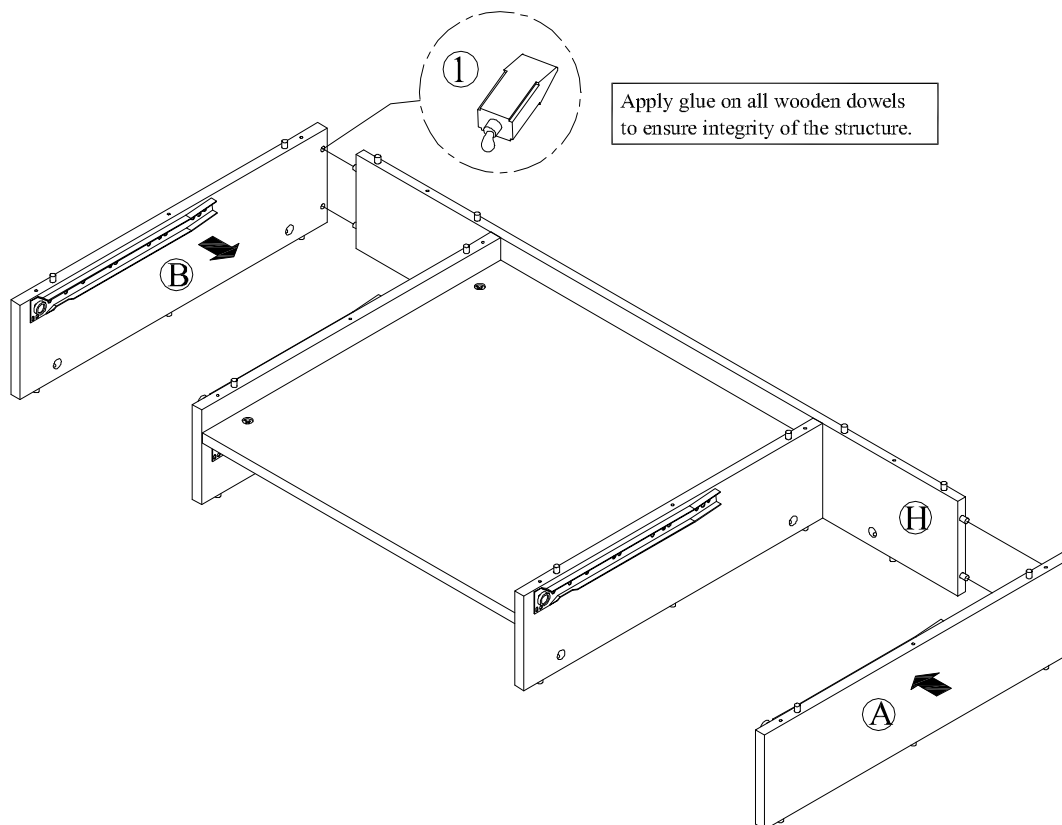



STEP 6 :

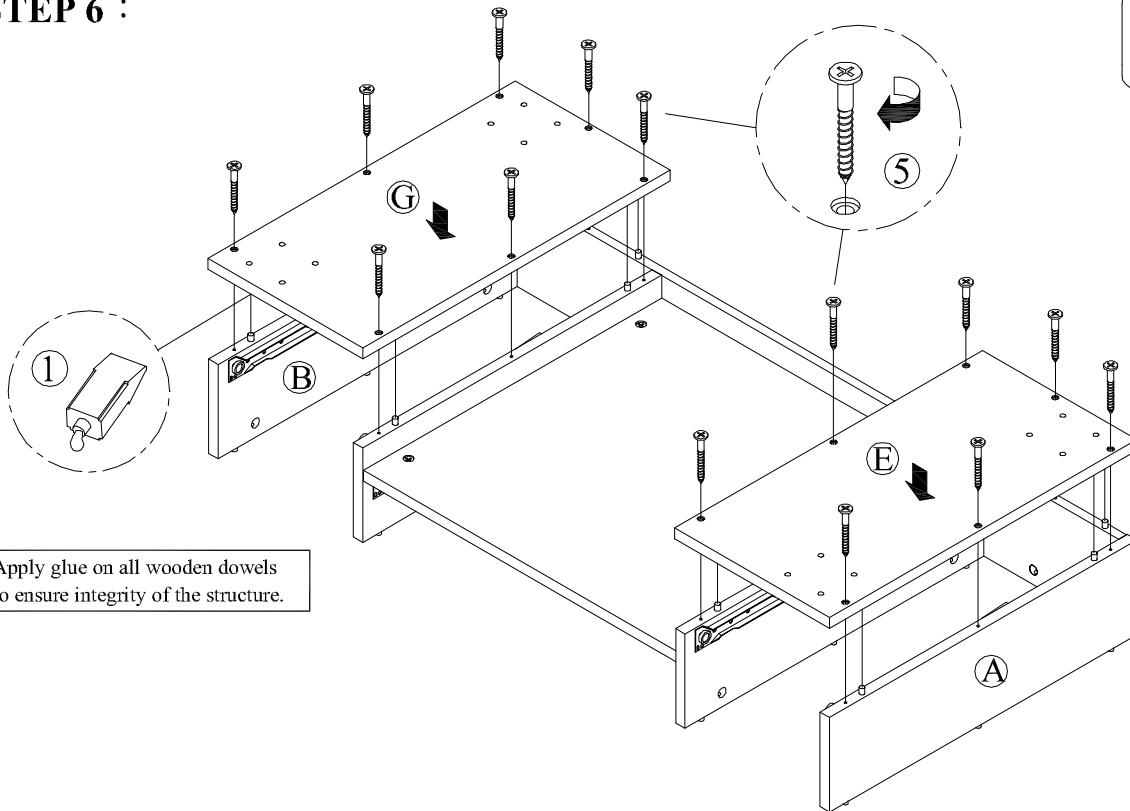






STEP 7 :

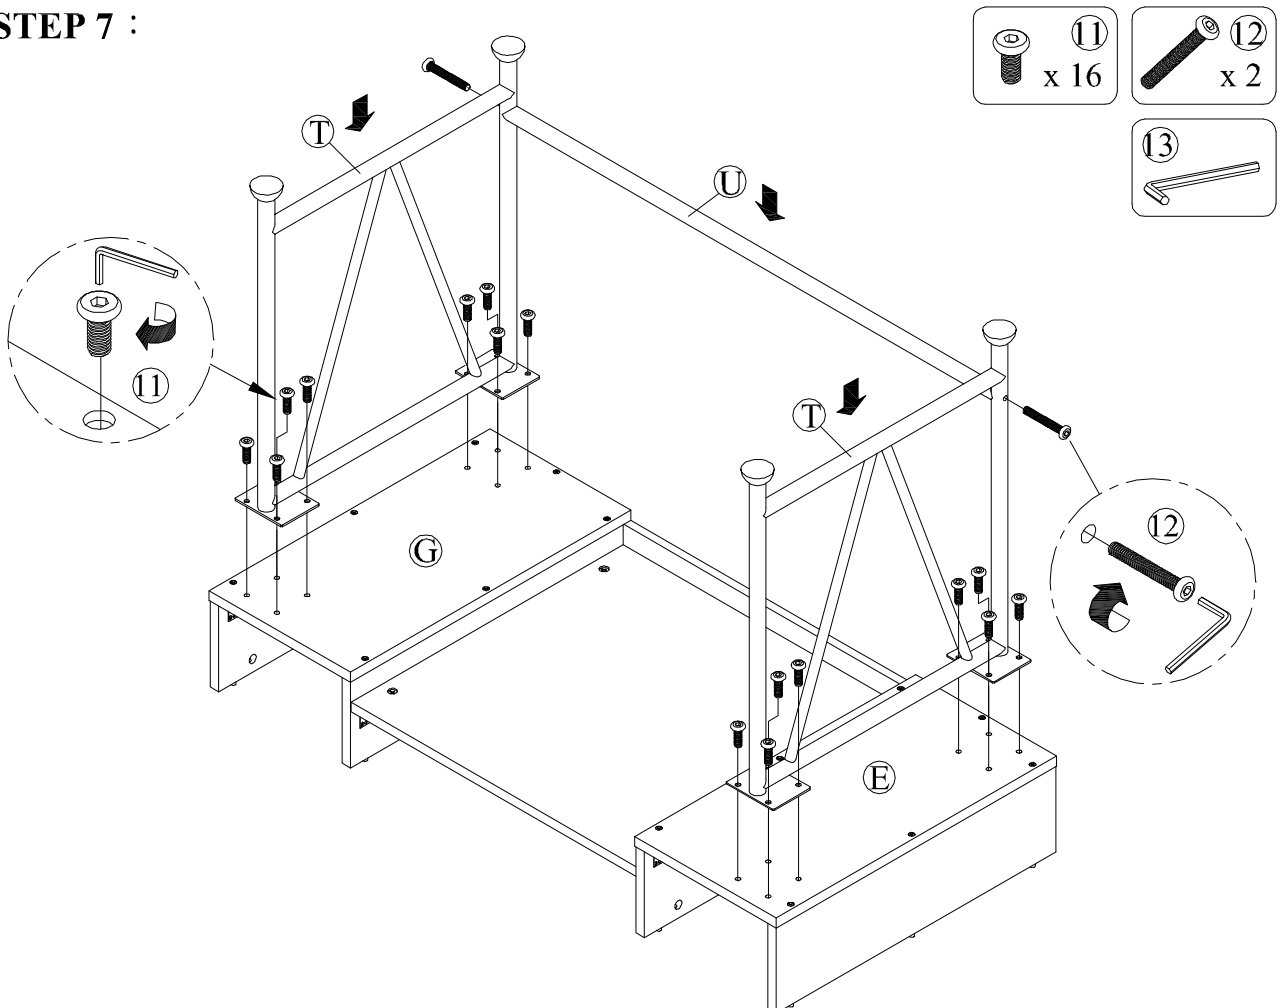


STEP 8 :

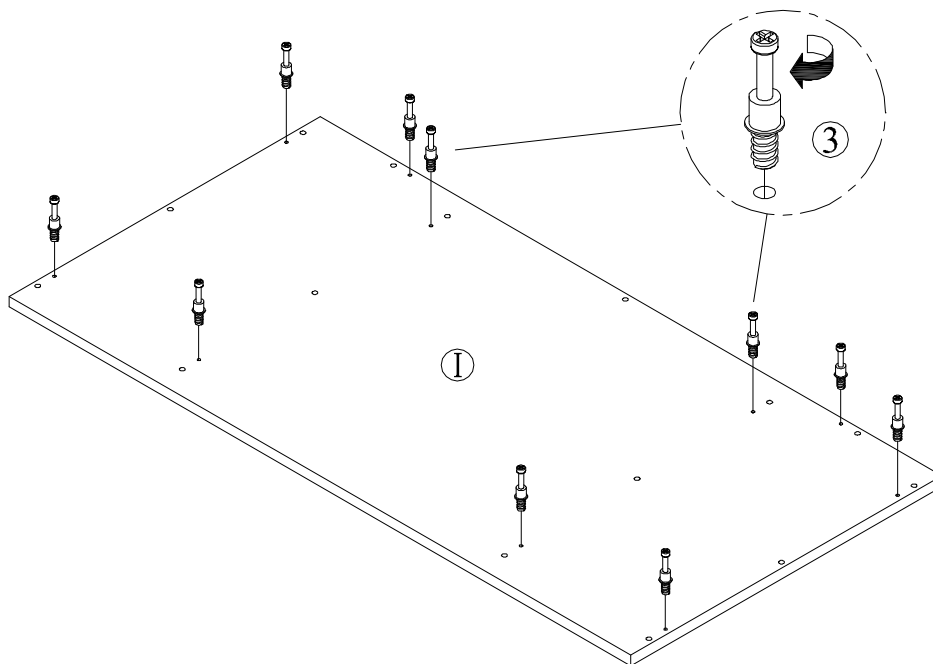


STEP 9 :

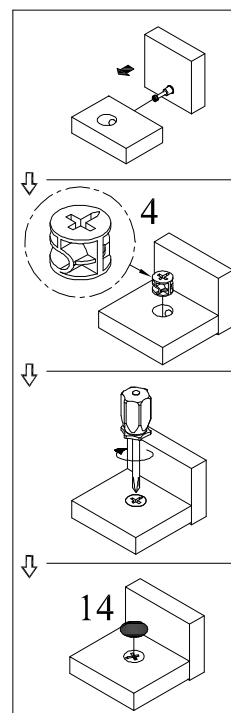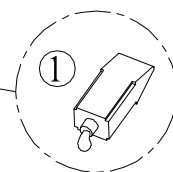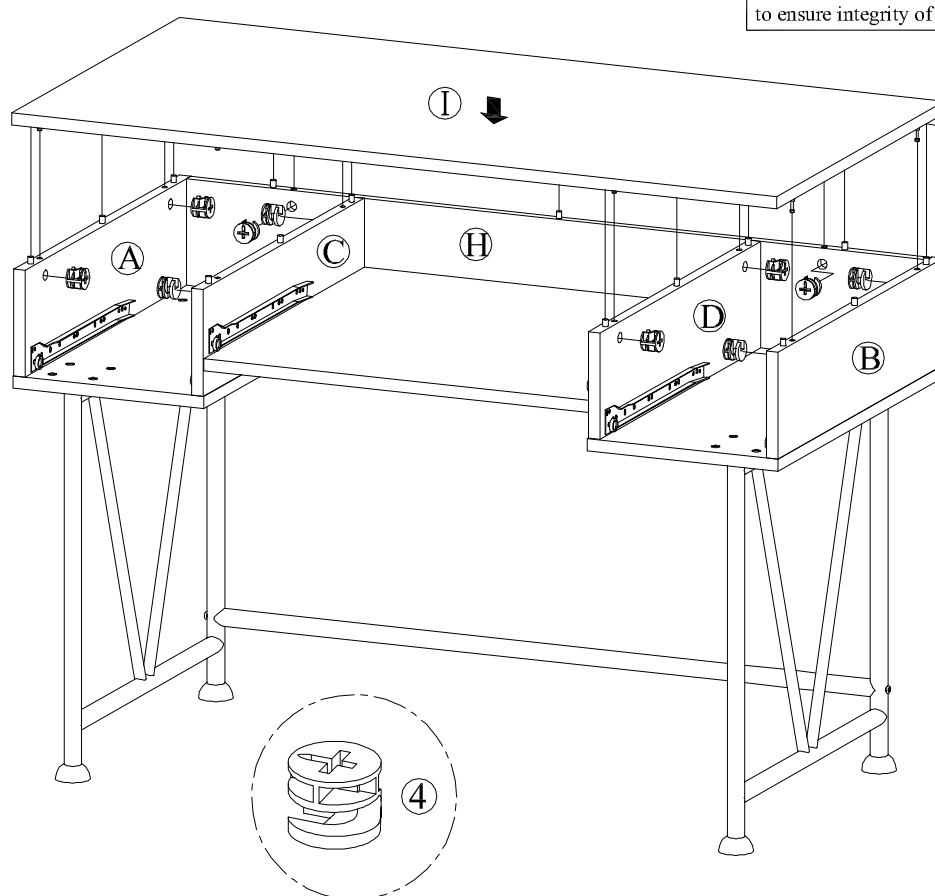


STEP 10-1 :

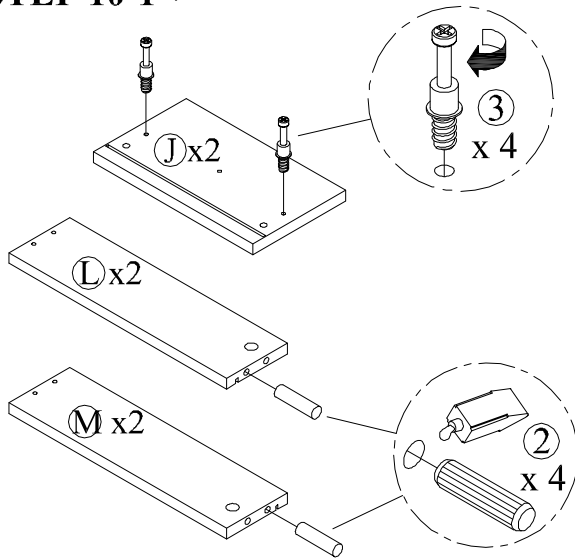


STEP 10-2 :

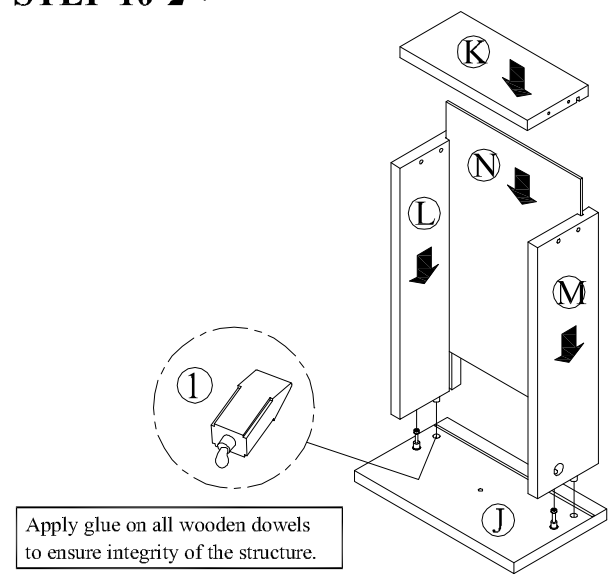



STEP 10-3 :

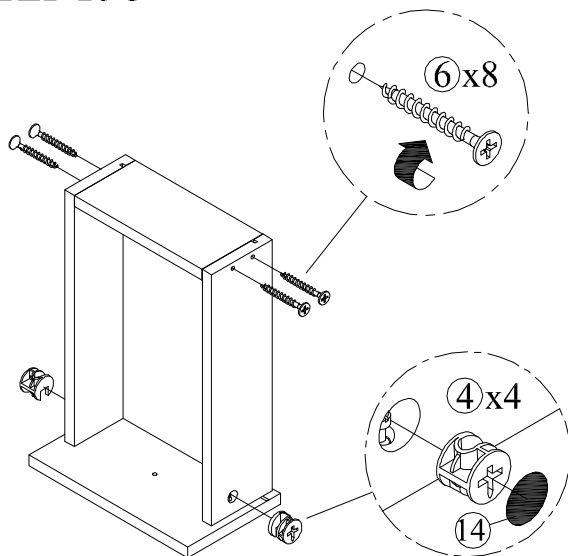


STEP 10-4 :

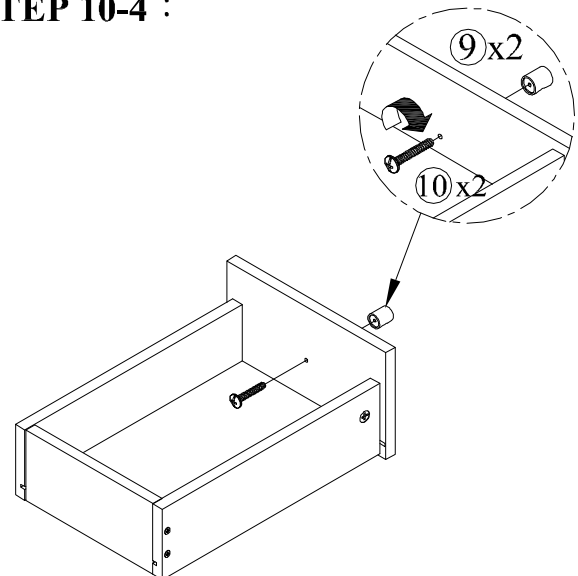


STEP 10-5 :

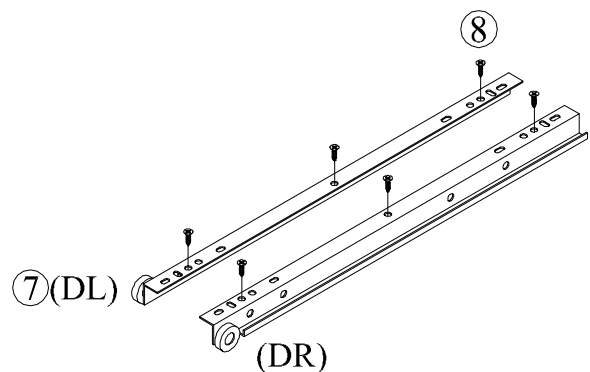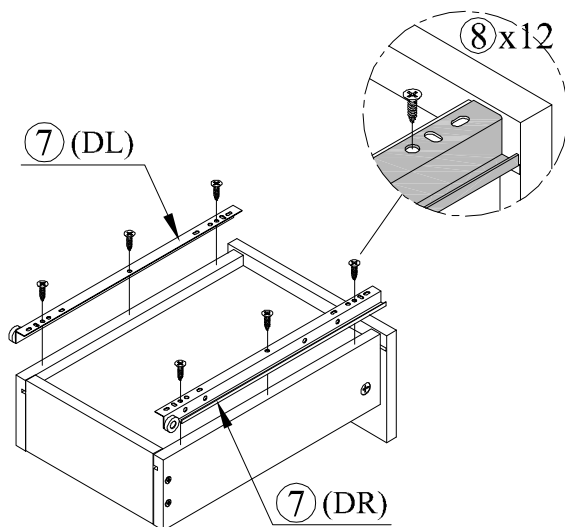


STEP 11-1 :

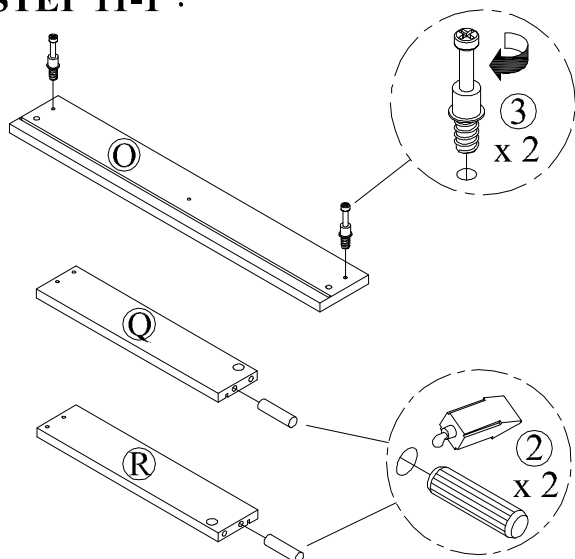


STEP 11-2 :

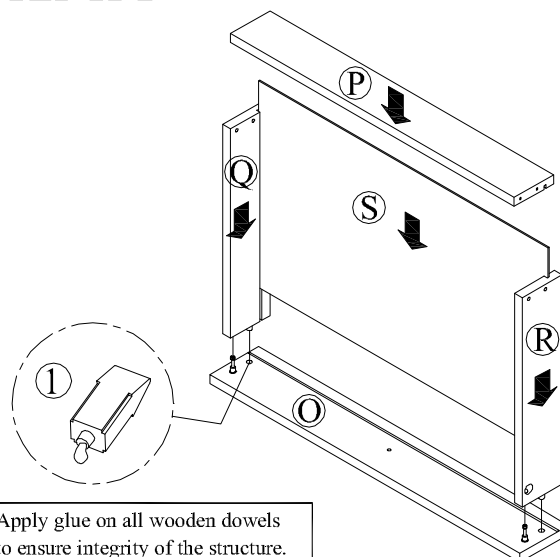


STEP 11-3 :

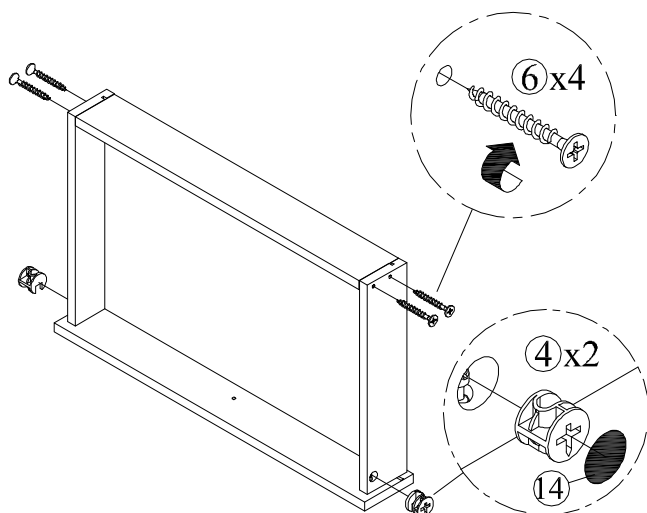


STEP 11-4 :

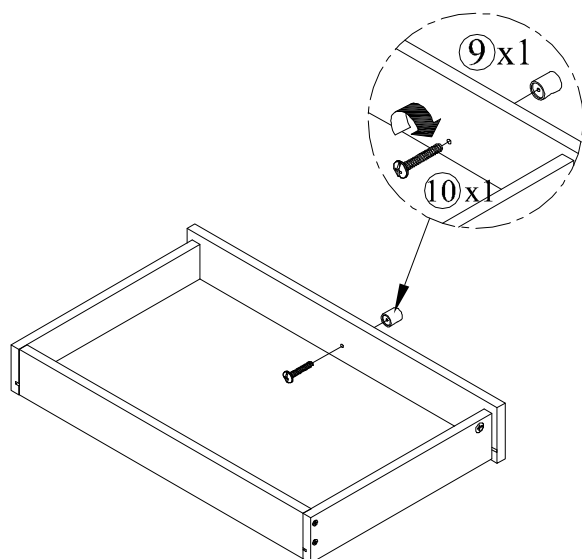

STEP 11-5 :

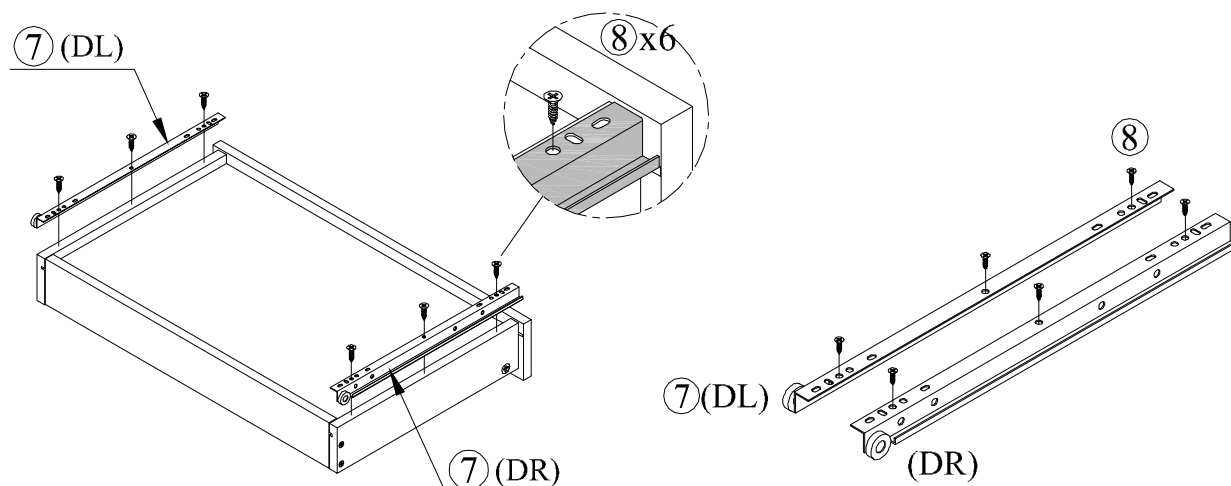

STEP 12 :

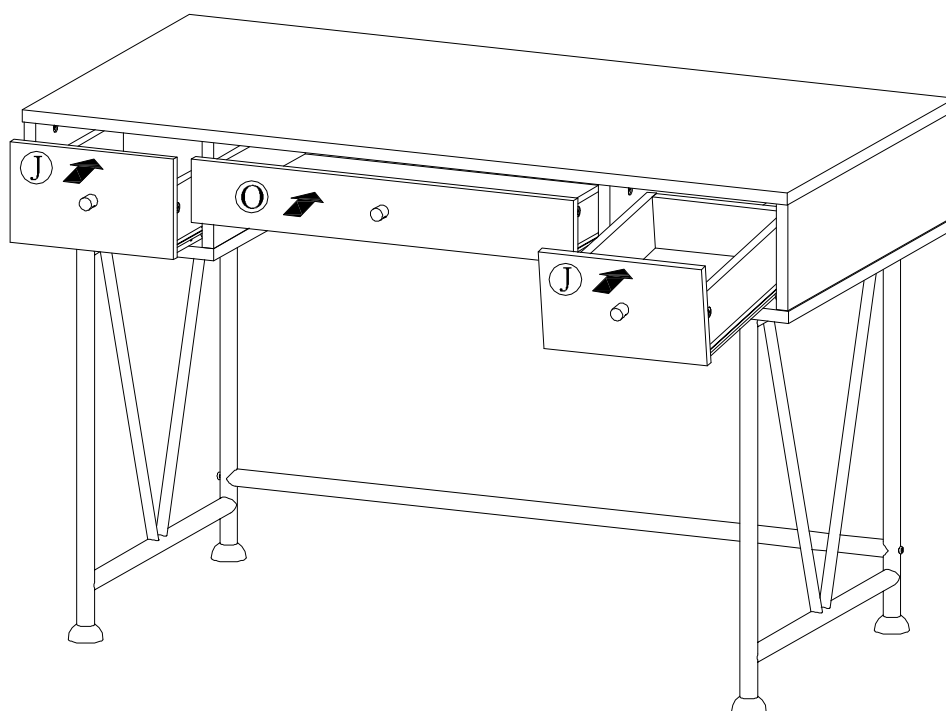

STEP 13 :
COMPLETE

