

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 45 minutes.
- * Tools Required for Assembly (included): Allen Key, Spanner; (Not included): Phillips Screwdriver.

CARE AND MAINTENANCE


- * Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.
- * The use of steam or water-based cleaners may cause excessive shrinking or staining.

SAFAVIEH

C O U T U R E

Item ID: SFV4113-K

Product Dimensions: 85 5/8"W x 94"D x 32 2/3"H

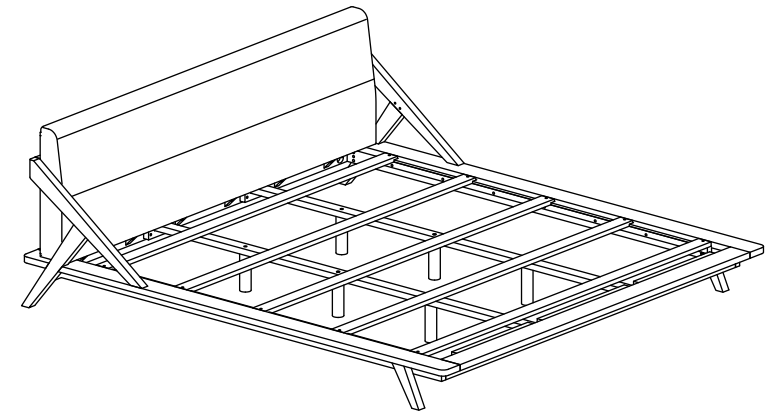

WARNING

Weight capacity: 800lbs

Warning: DO NOT STAND ON BED


Warning: DO NOT OVER TORQUE BOLTS

Part List and Hardware List


PIECE	DESCRIPTION	QUANTITY	CARTON CALL	PIECE	DESCRIPTION	QUANTITY	CARTON CALL
A	HEADBOARD	1X	1 of 2	HW1	Wooden dowel Ø10mm	14X	1 of 2
B	FOOTBOARD	1X	2 of 2	HW2	Metal thread 8x0.5x70mm	10X	1 of 2
C	SIDE RAILS (LEFT)	1X	2 of 2	HW3	Semicircle washer 7x15x30mm	10X	1 of 2
D	SIDE RAILS (RIGHT)	1X	2 of 2	HW4	Spring washer 8mm	14X	1 of 2
E	FRONT LEGS (LEFT)	1X	1 of 2	HW5	Nut 8mm	10X	1 of 2
F	FRONT LEGS (RIGHT)	1X	1 of 2	HW6	Spanner	1X	1 of 2
G	BACK LEGS (LEFT)	1X	1 of 2	HW7	Screw 4x0.5x30mm	10X	1 of 2
H	BACK LEGS (RIGHT)	1X	1 of 2	HW8	Small cross bolt 6x0.5x40mm	6X	1 of 2
I	CENTRE SUPPORT RAIL	2X	2 of 2	HW9	Allen key	1X	1 of 2
J	CENTRE LEGS	6X	2 of 2	HW10	Big cross bolt 8x0.5x90mm	4X	1 of 2
K	SLATS	5X	2 of 2	HW11	Flat washer 8mm	4X	1 of 2
				HW12	Medium cross bolt 8x0.5x40mm	6X	1 of 2

PREPARATION


- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 45 minutes.
- * Tools Required for Assembly (included): Allen Key, Spanner; (Not included): Phillips Screwdriver.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

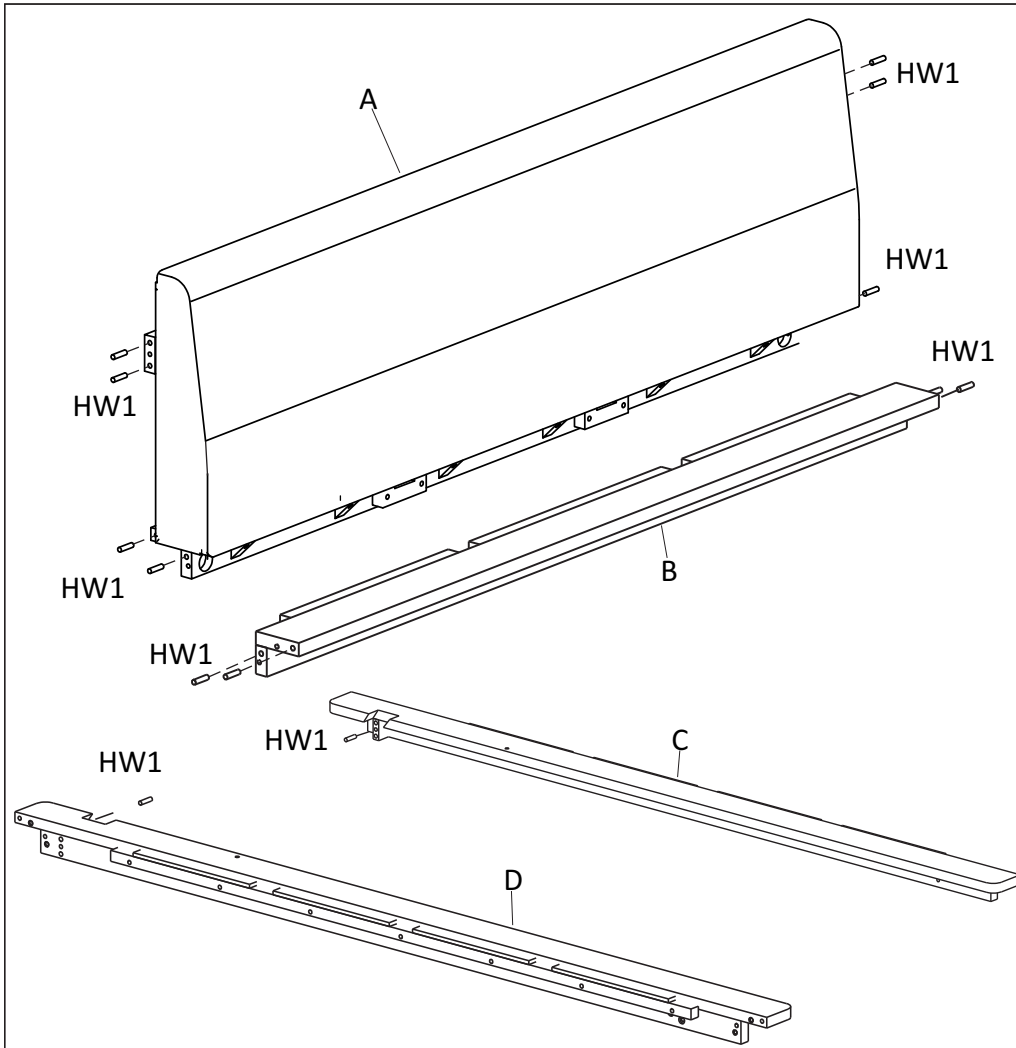


STEP 1: Assemble wooden dowel (HW1) in the headboard (A) and side rails (C&D)

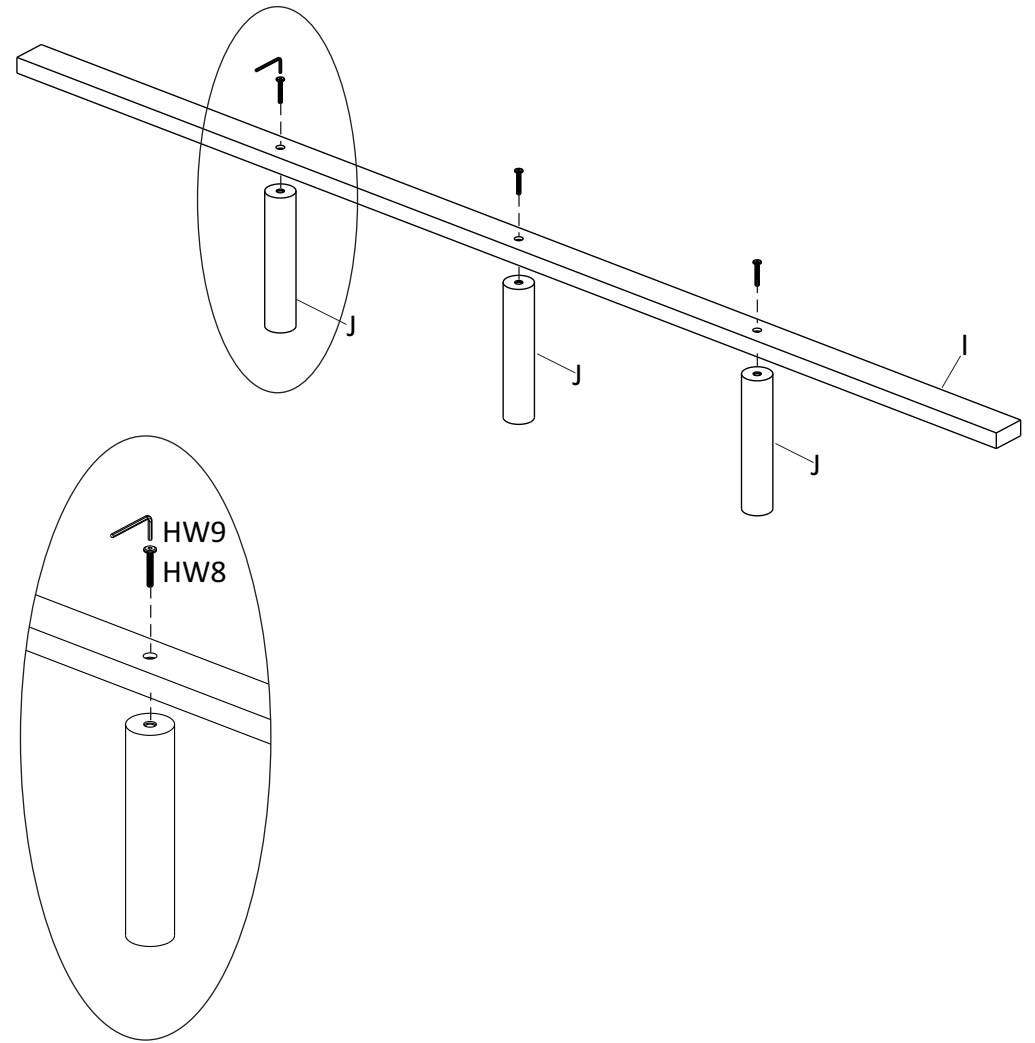


STEP 2: Attach centre support rail (I) and centre legs (F) by small cross bolt (HW8) as shown.

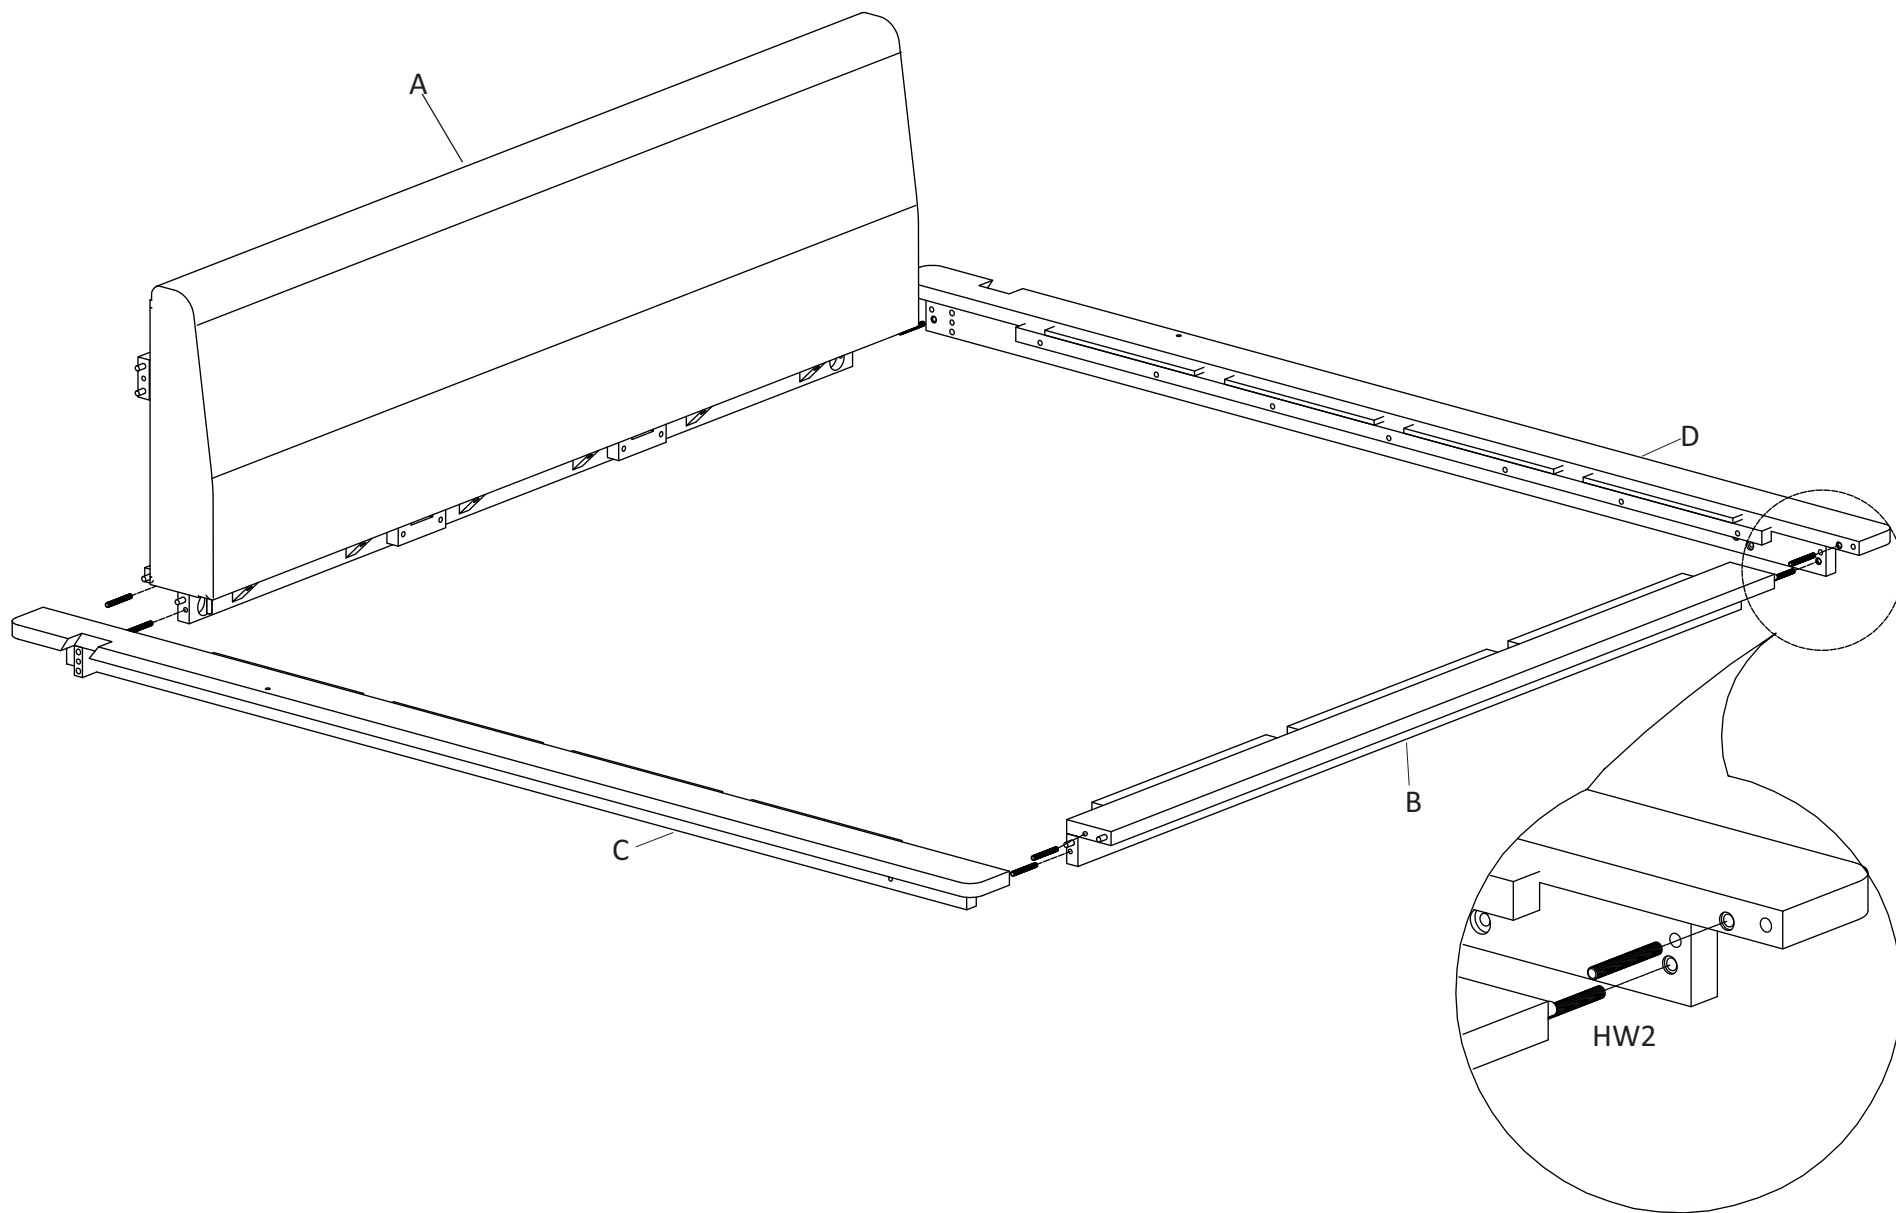



STEP 3: Assemble Side rail (C & D) to the footboard (B) and headboard (A) using Metal thread (HW2)

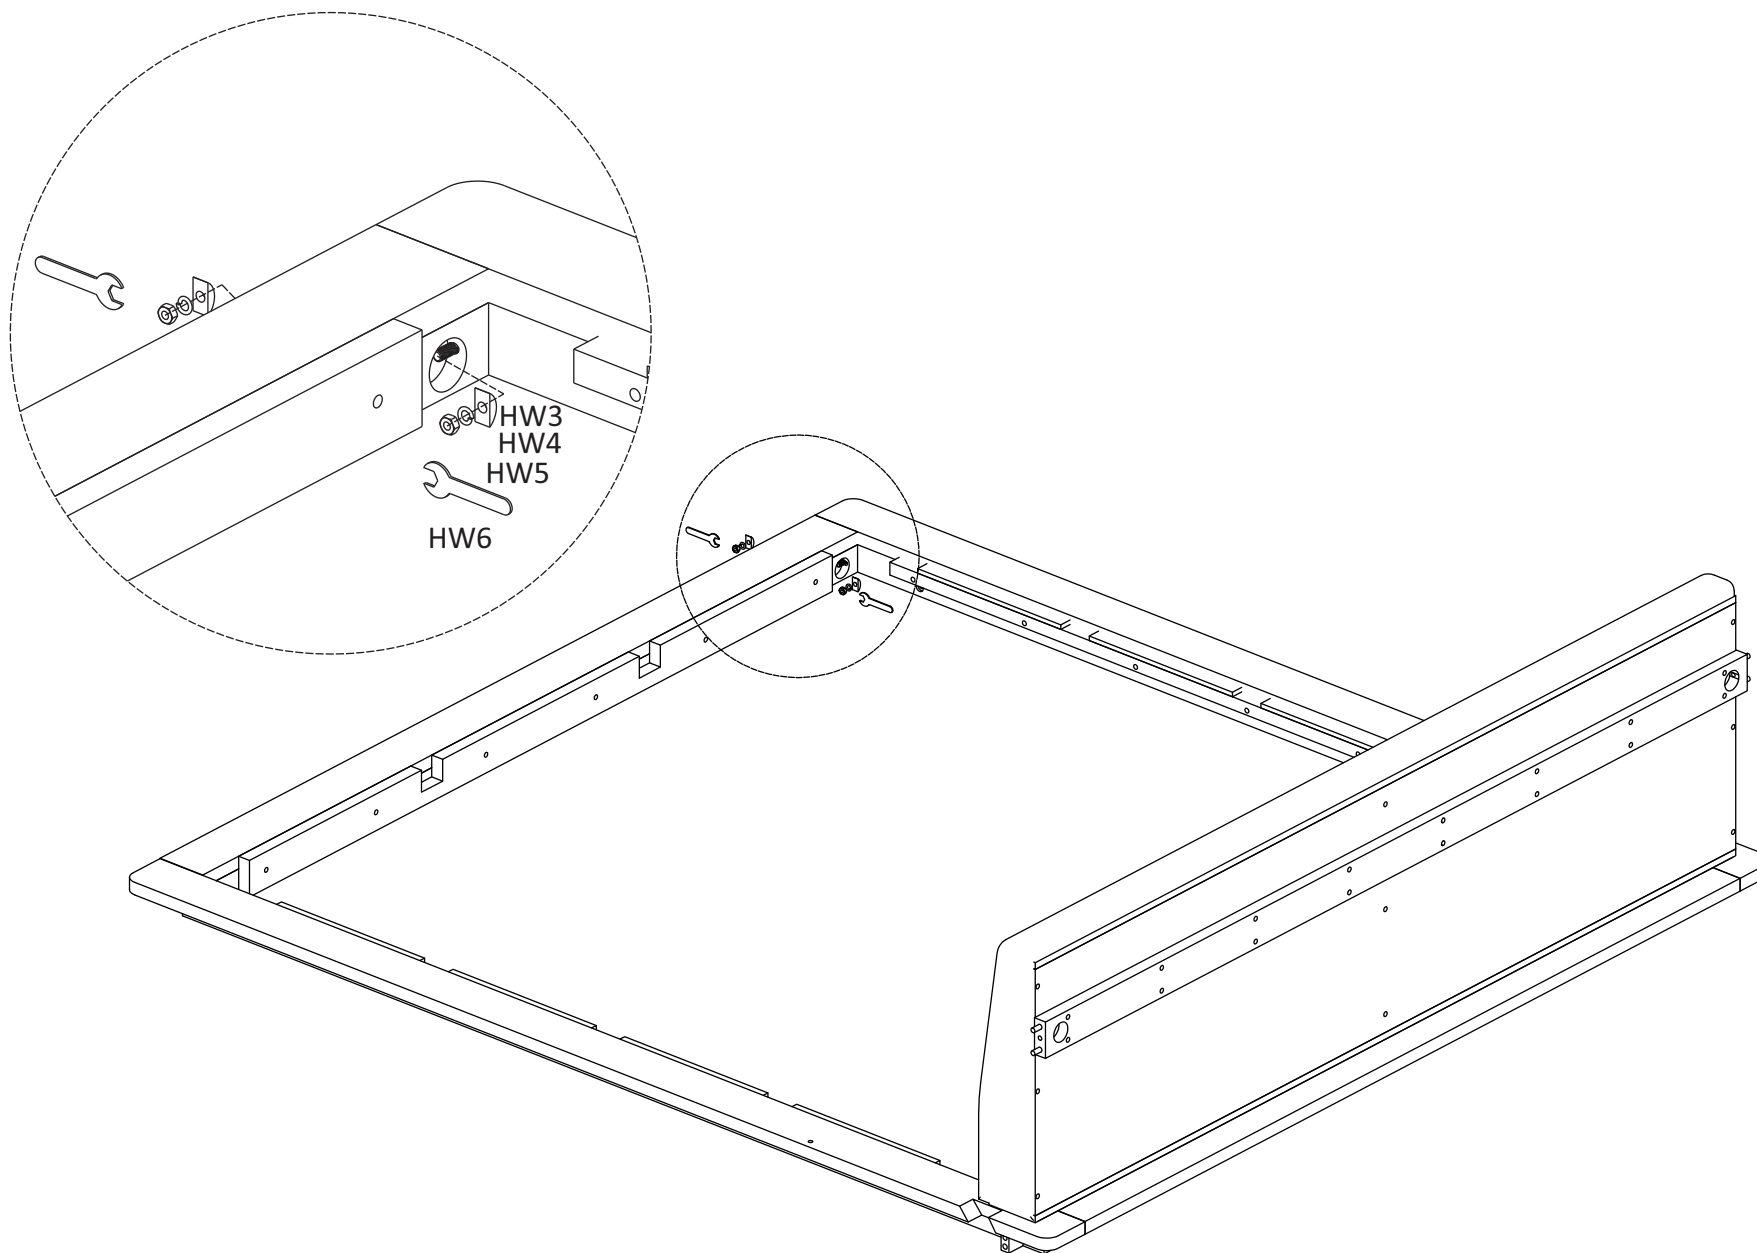


STEP 4: Assemble Semicircle washer (HW3), spring washer (HW4) and nut (HW5) in the structure in Step 3

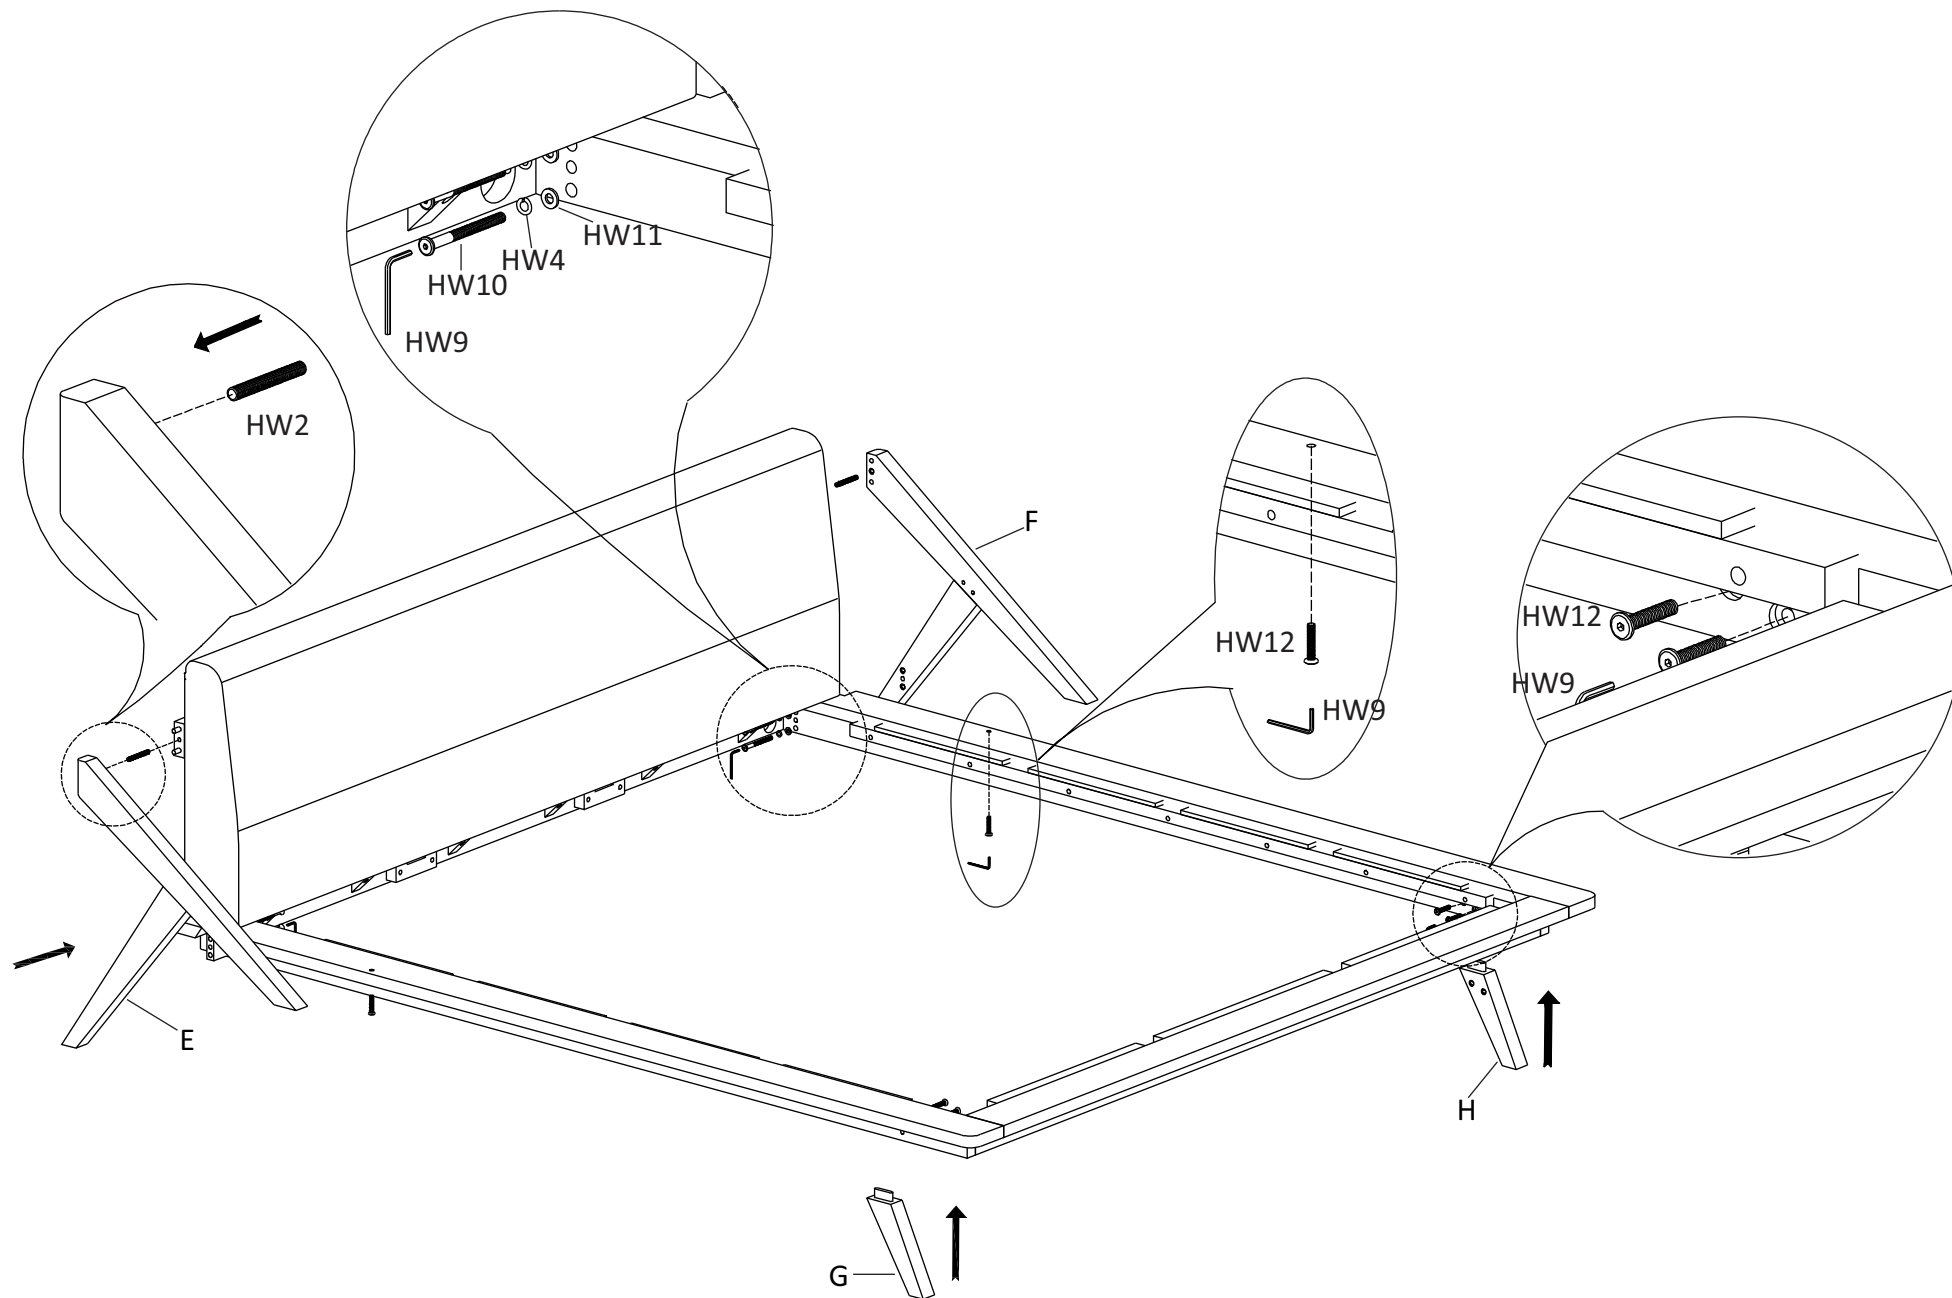

STEP 5: Assemble front leg (E & F), back leg (G & H) on to the structure in Step 4 using the Metal thread (HW2), spring washer (HW4), Big cross bolt (HW10), Flat washer (HW11), Medium cross bolt (HW12) as shown.

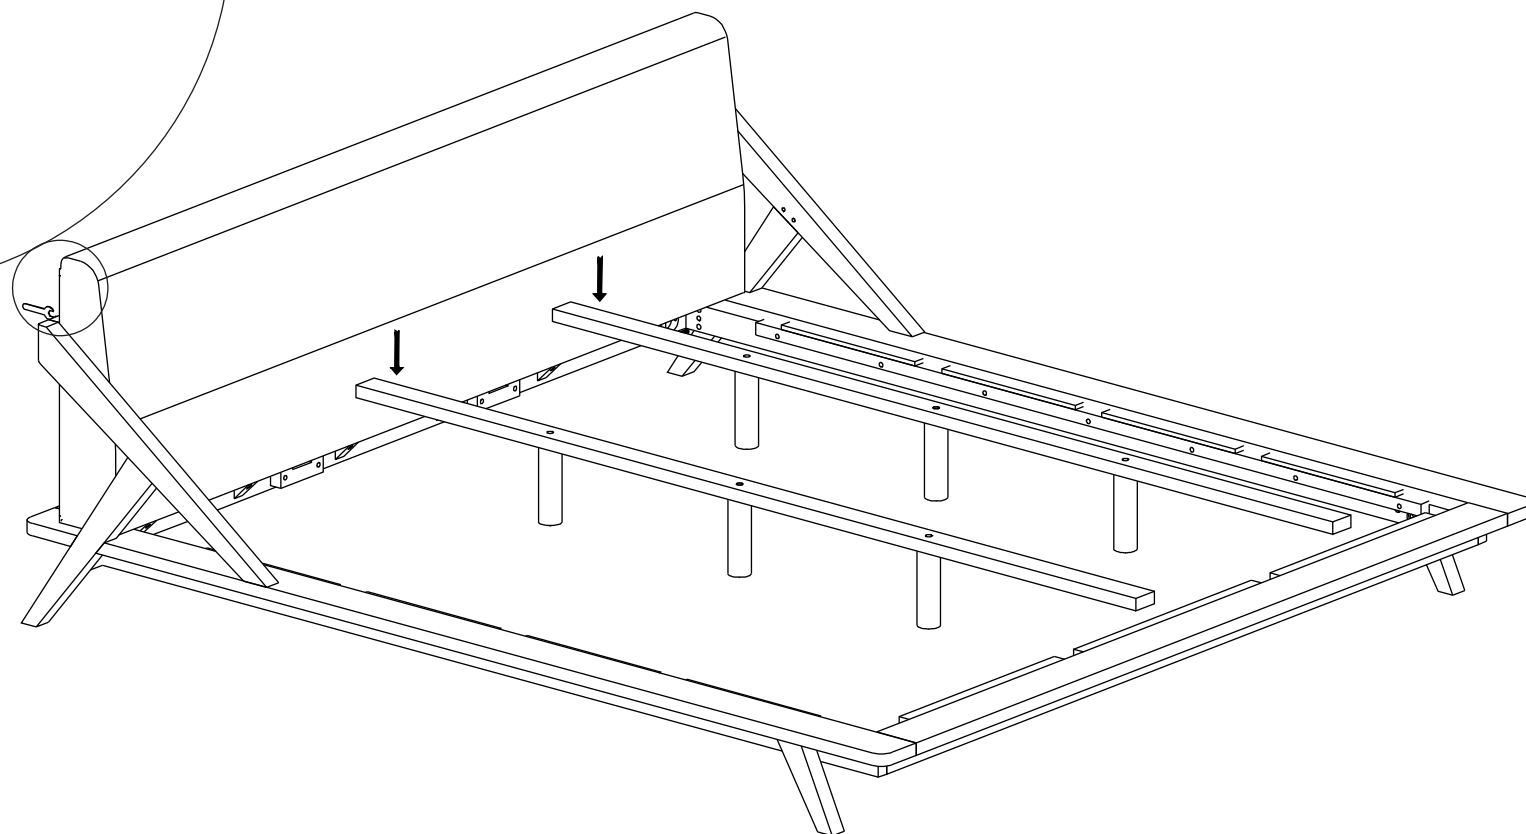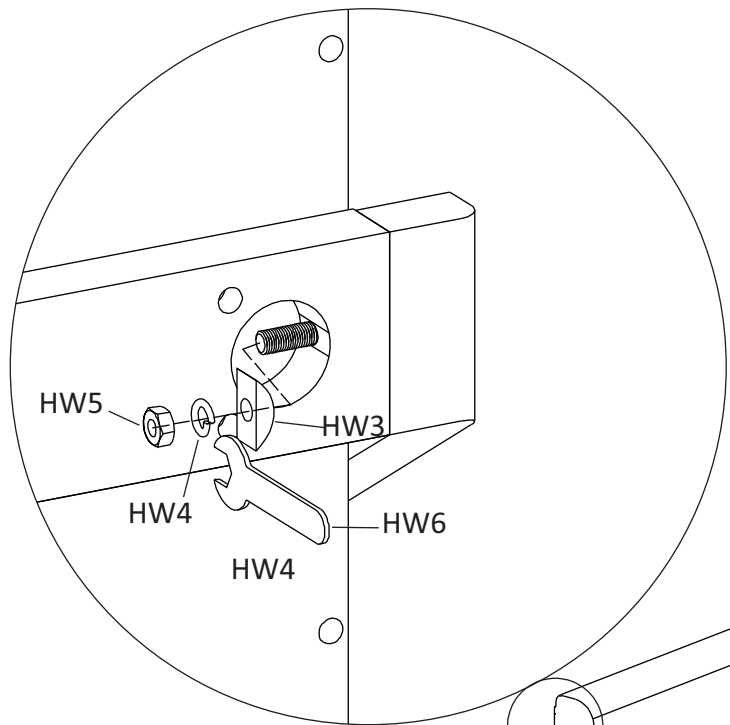

STEP 6: Assemble Semicircle washer (HW3), spring washer (HW4) and nut (HW5) in the structure in Step 5 as shown. Insert the central support rail into the bed frame.

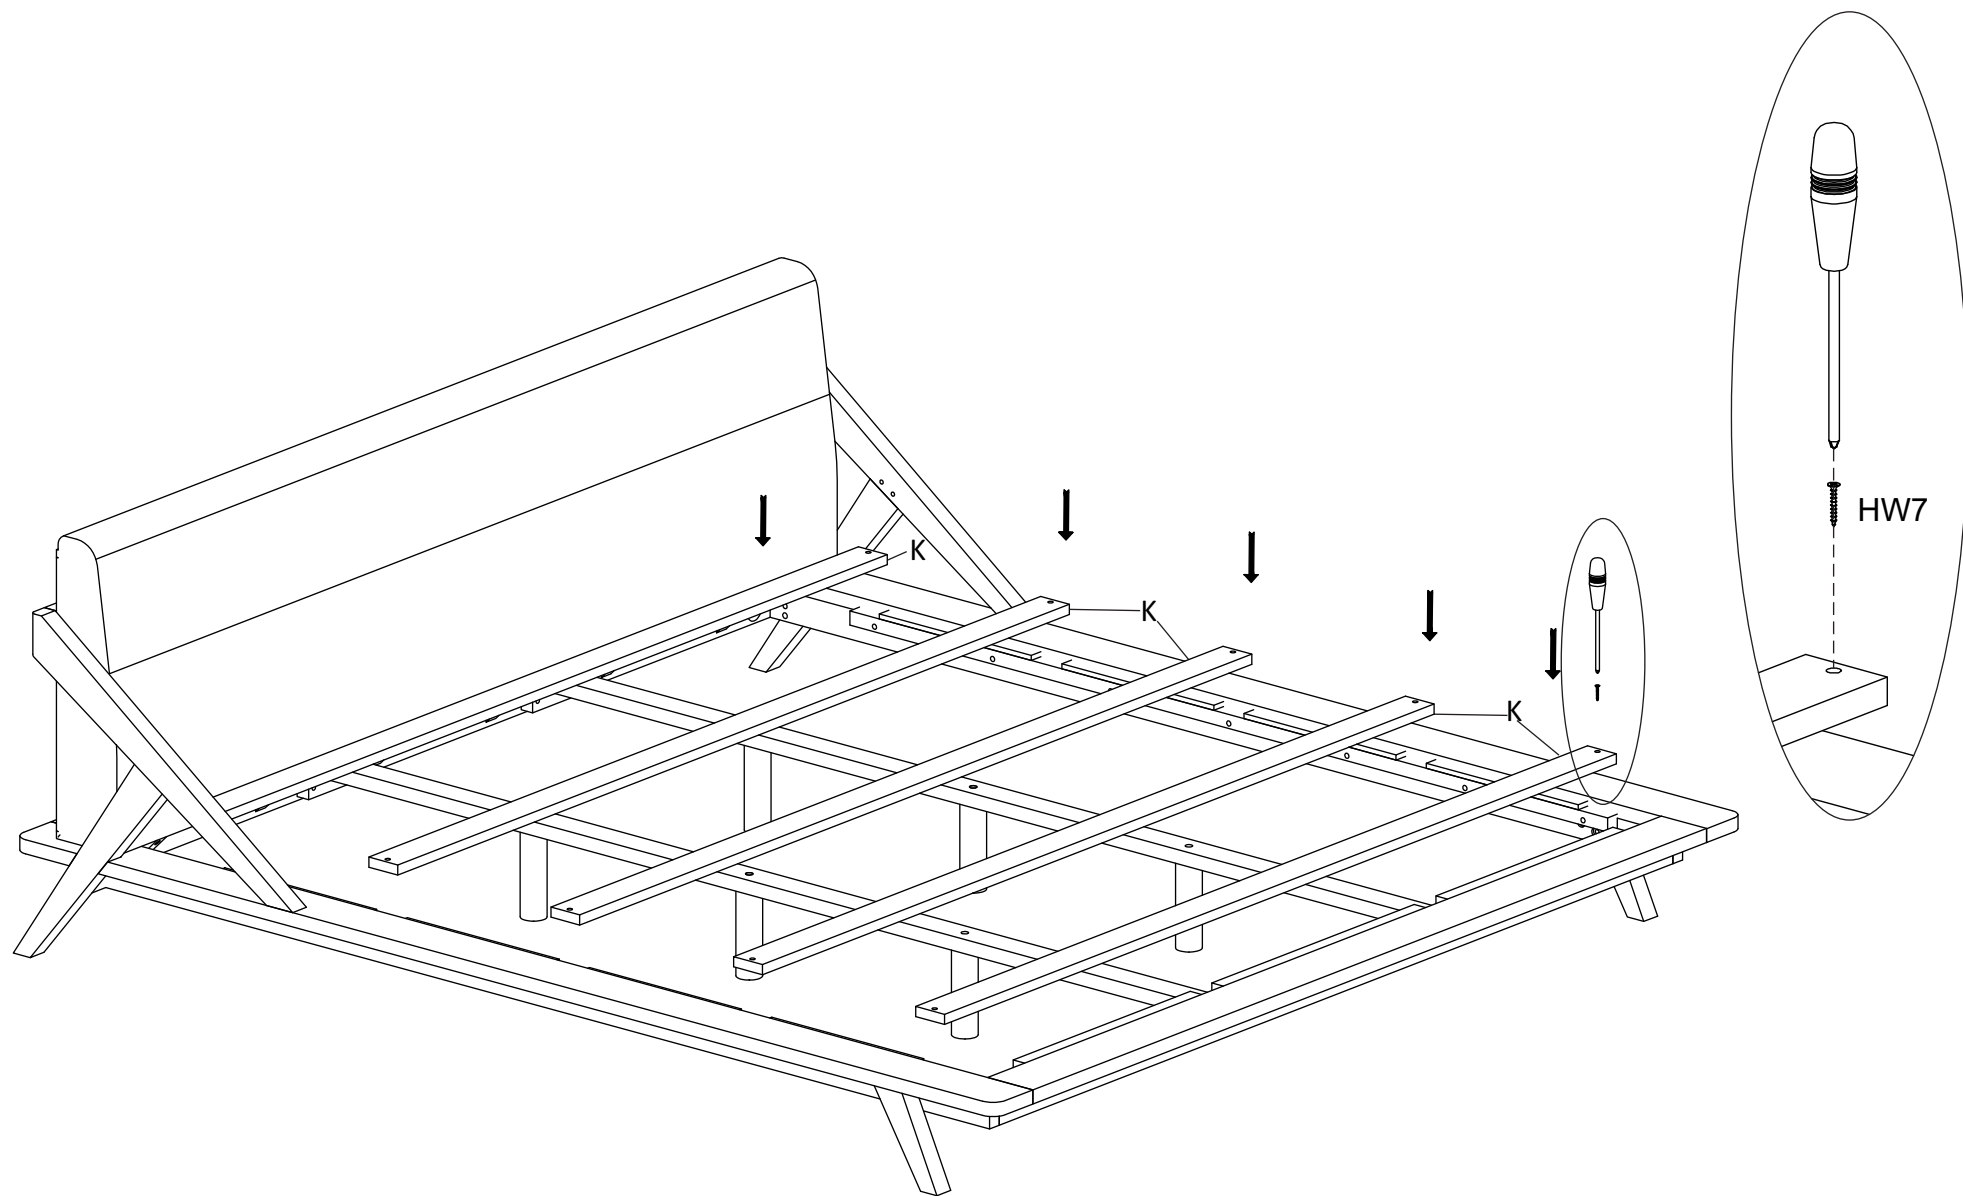

STEP 7: Insert the slats into the side and central rail and secure using screw (HW7).