













INSTALLATION INSTRUCTION

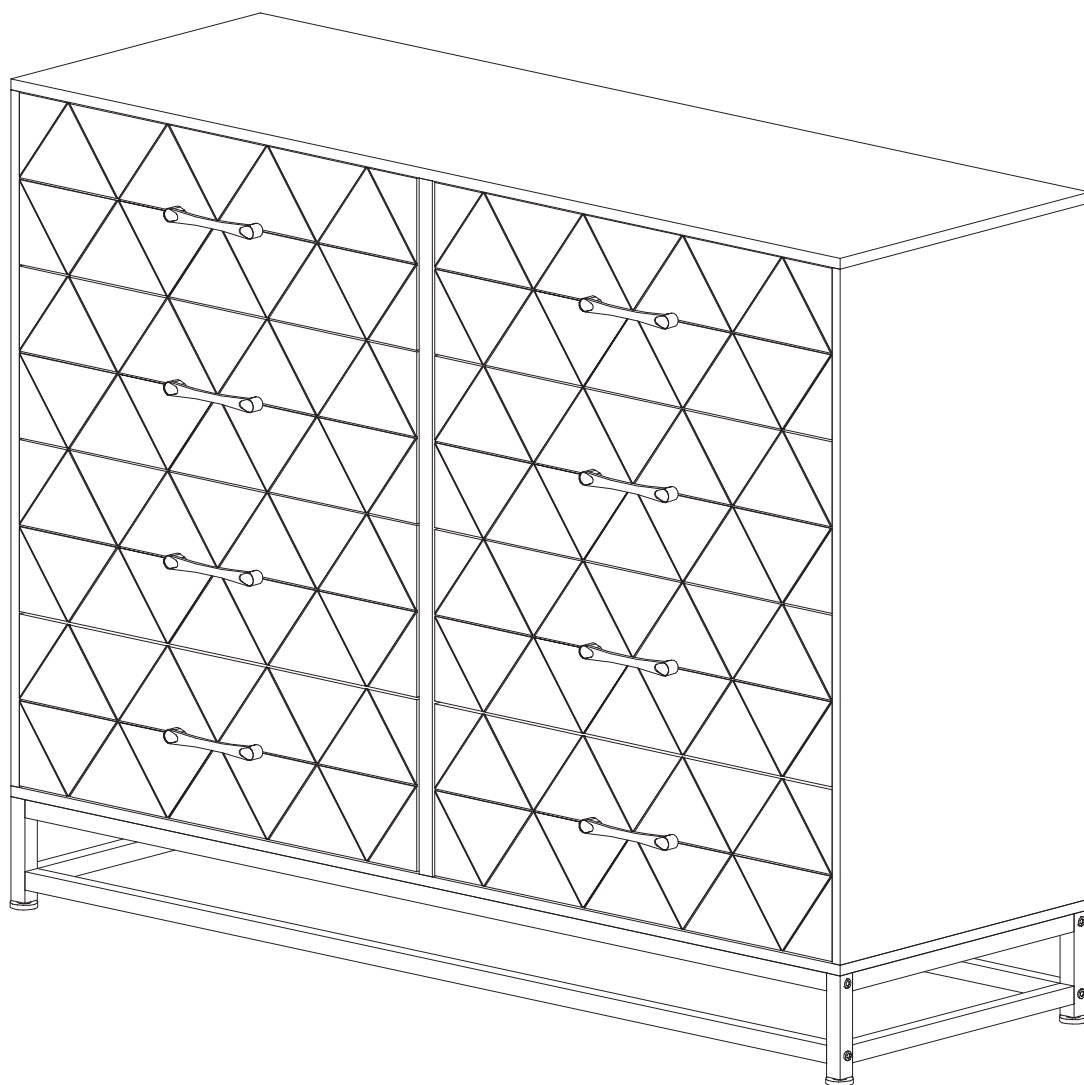

BOARD IDENTIFICATION

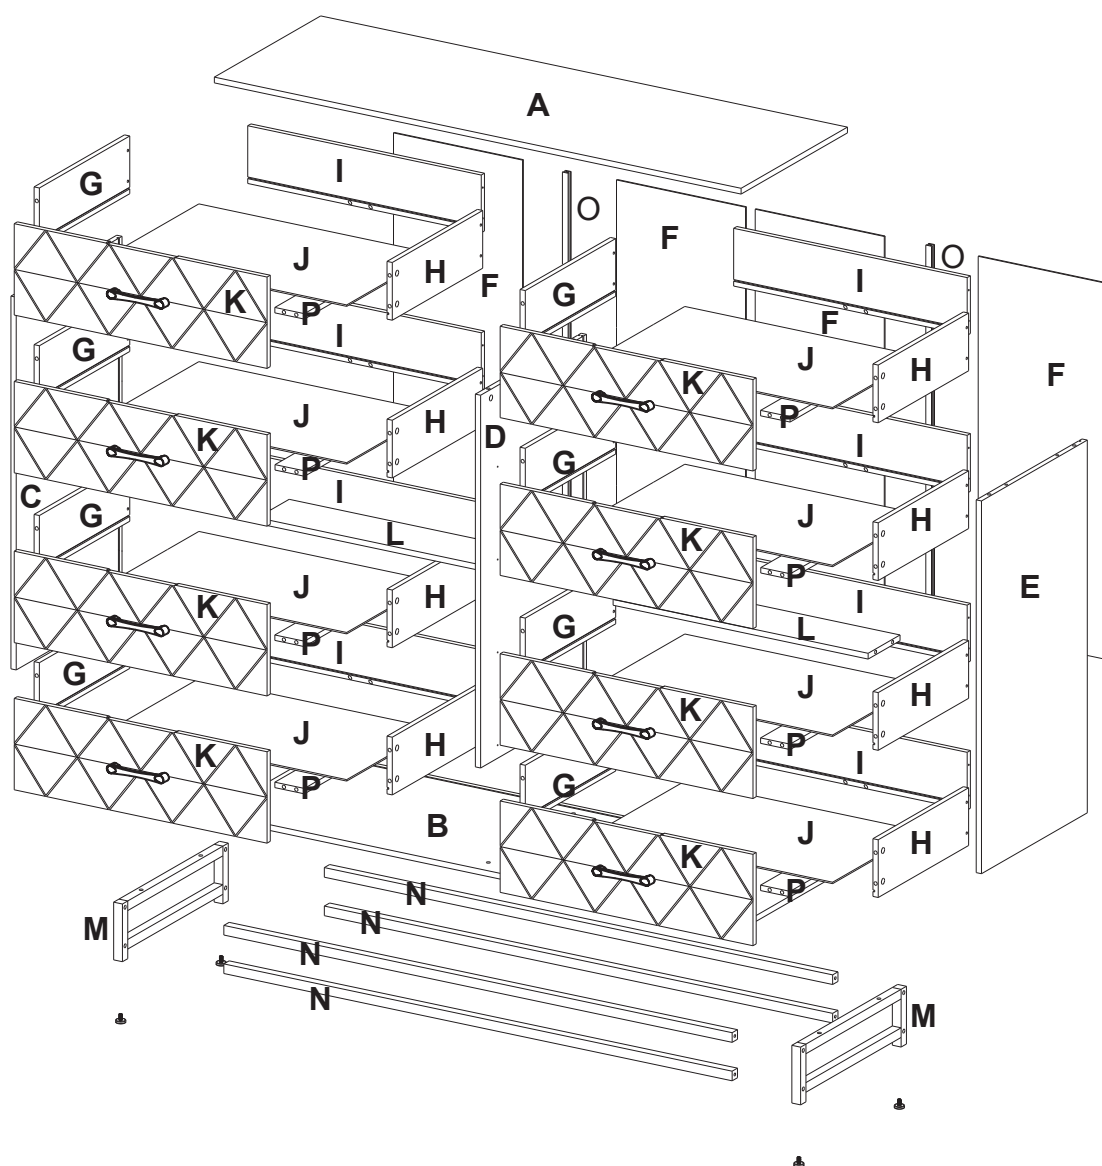


BOARD IDENTIFICATION

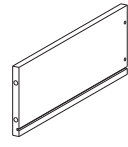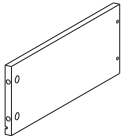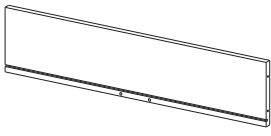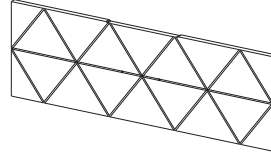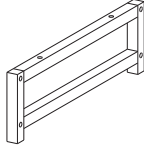				
Ax1	Bx1	Cx1	Dx1	Ex1
				
Fx4	Gx8	Hx8	Ix8	Jx8
				
Kx8	Lx2	Mx2	Nx4	Ox2
				
Px8				

BOARD IDENTIFICATION


Installation of Eccentric Wheel Nut Set

1

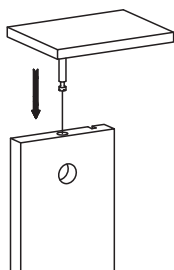


Screw the end of cambolt on the board, find the corresponding board and insert the other end.

2

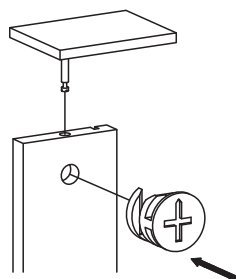


Stuff the camlock into the round hole. The arrowpoints to the cambolt.

3

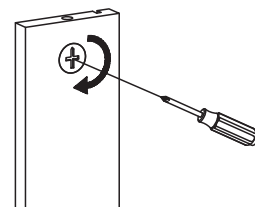


Turn clockwise about 180° to lock the plate.

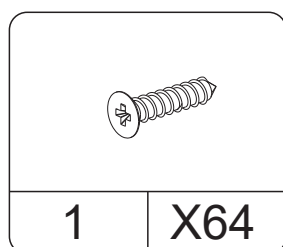


1 X64

Screws
M4X10

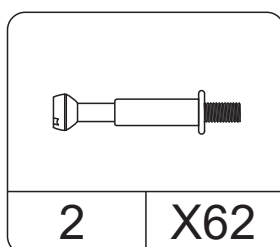


2 X62

Cam bolt
Ø6X18

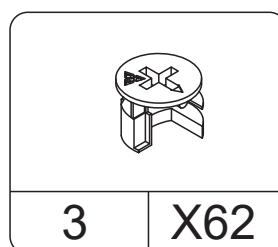


3 X62

Cam lock
Ø12X10

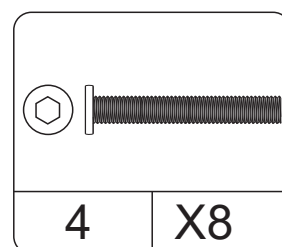


4 X8

Screws
M6x35

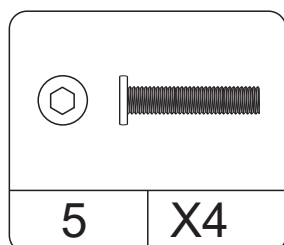


5 X4

Screws
M6x28

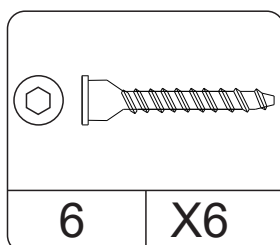


6 X6

Screws
M6.3x50

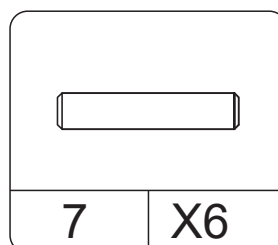


7 X6


Wood dowel
Ø6X30

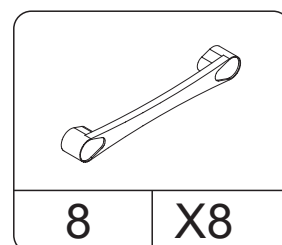


8 X8

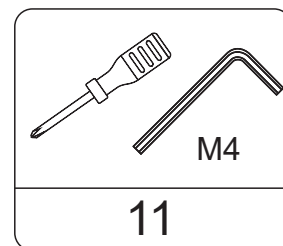

11

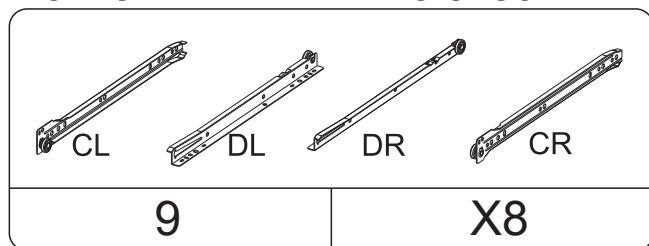


9 X8

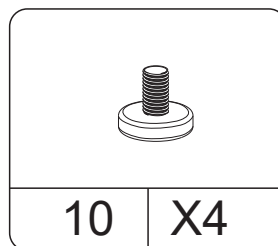


10 X4

Screws
M4x15

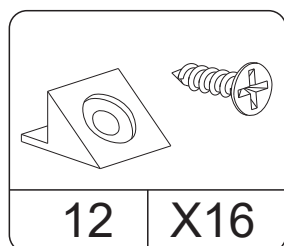


12 X16

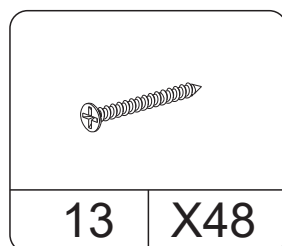

13 X48



Screws
M4x30

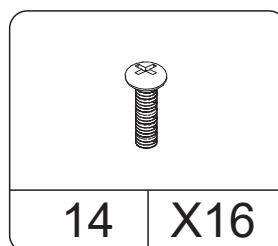


14 X16

INSTALLATION STEPS

STEP1:

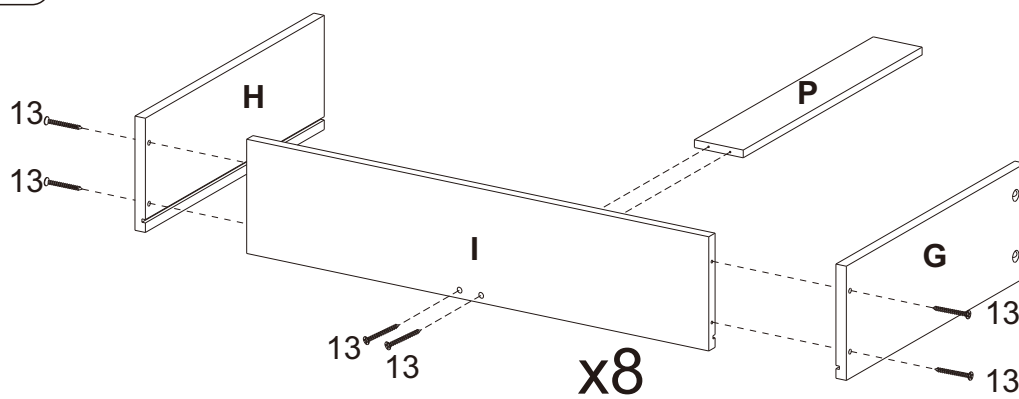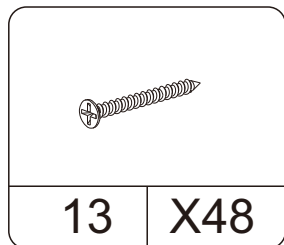



STEP2:

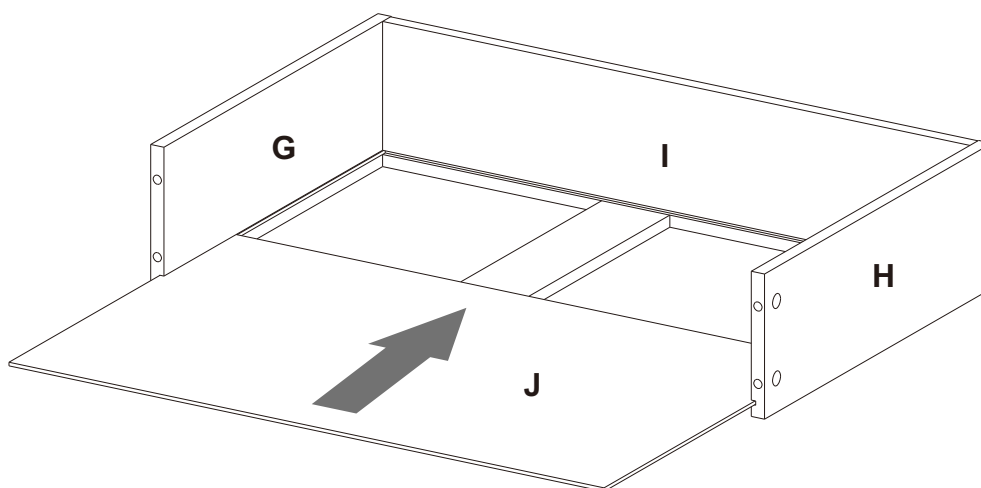

x8



INSTALLATION STEPS

STEP3:

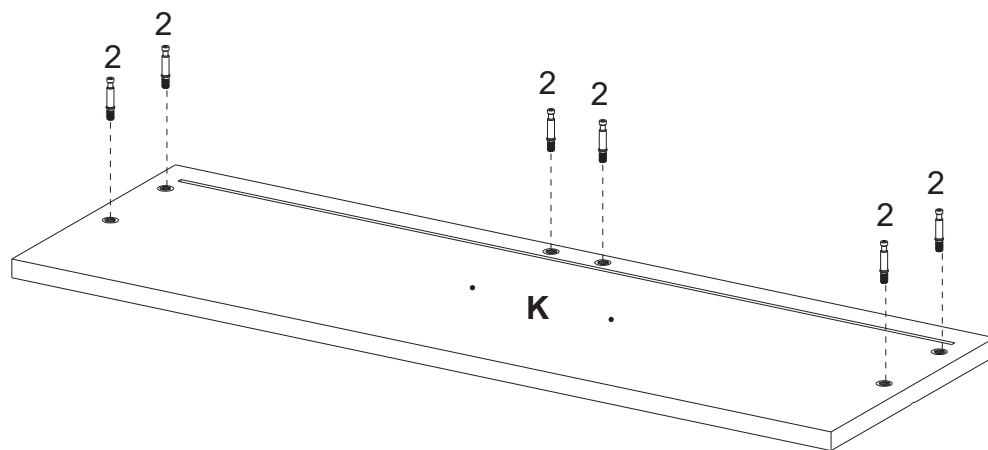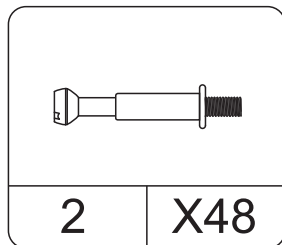

x8





STEP4:

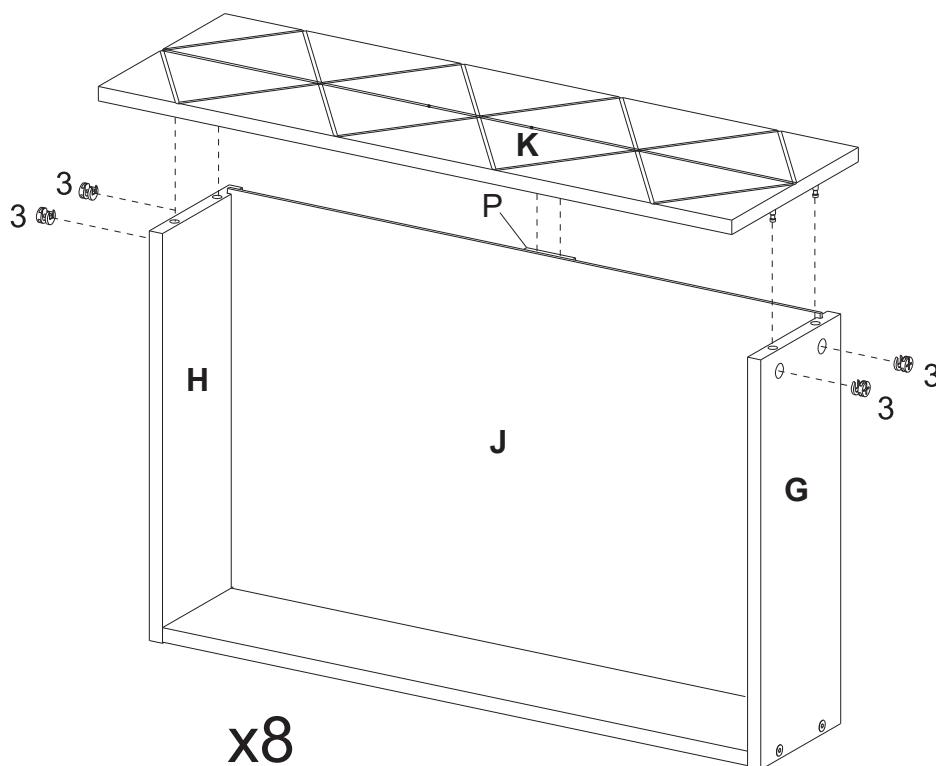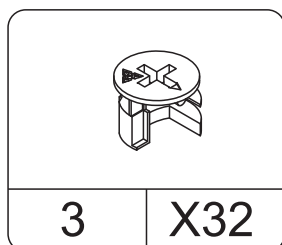




x8

INSTALLATION STEPS

STEP5:

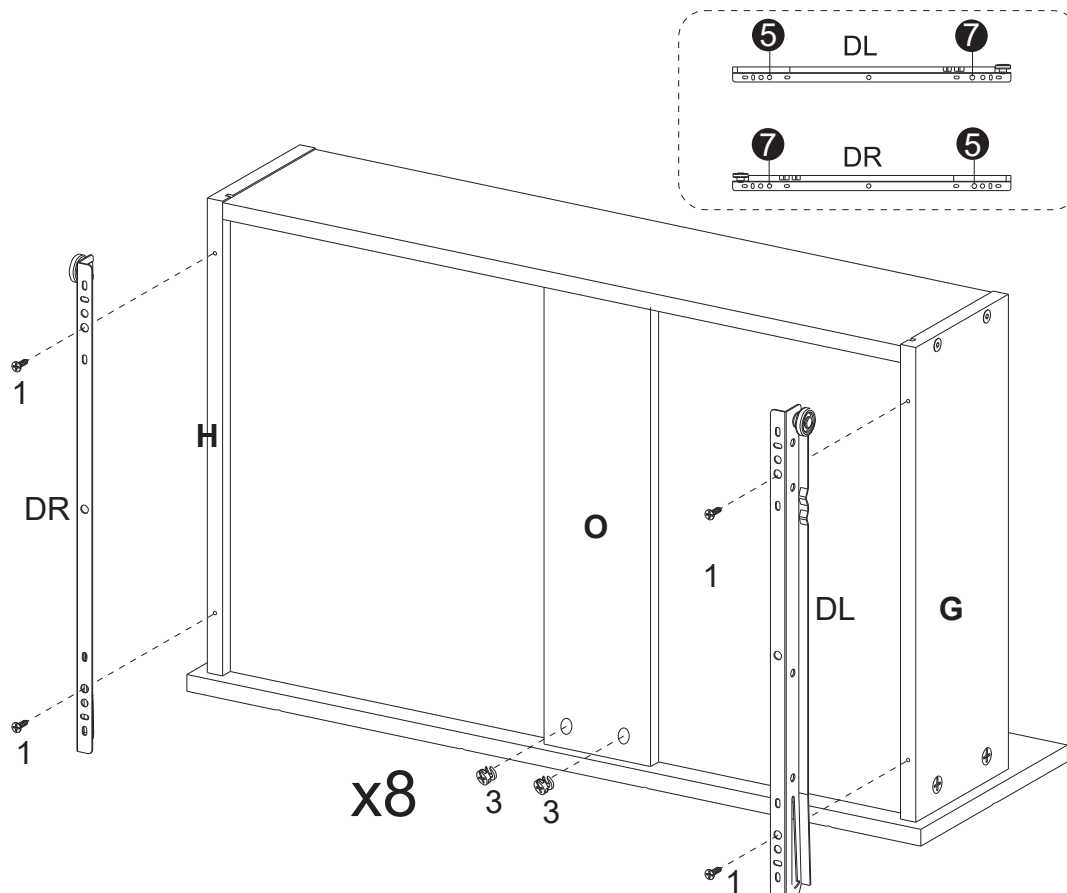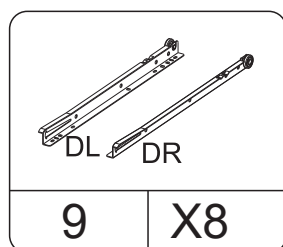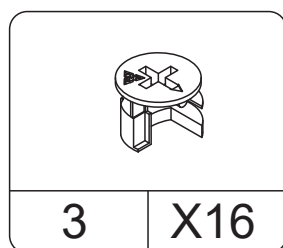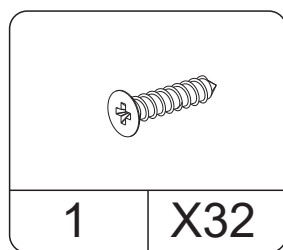





STEP6:

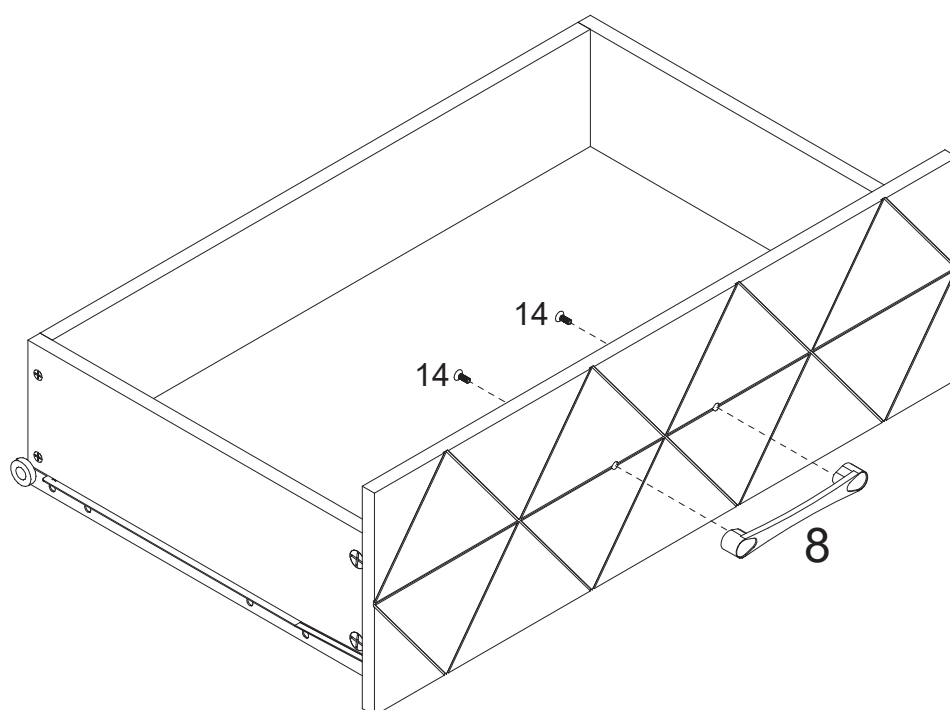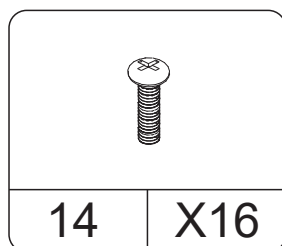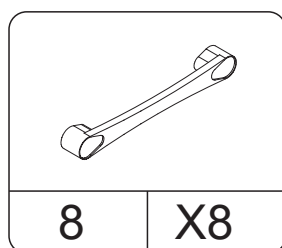





x8

INSTALLATION STEPS

STEP7:

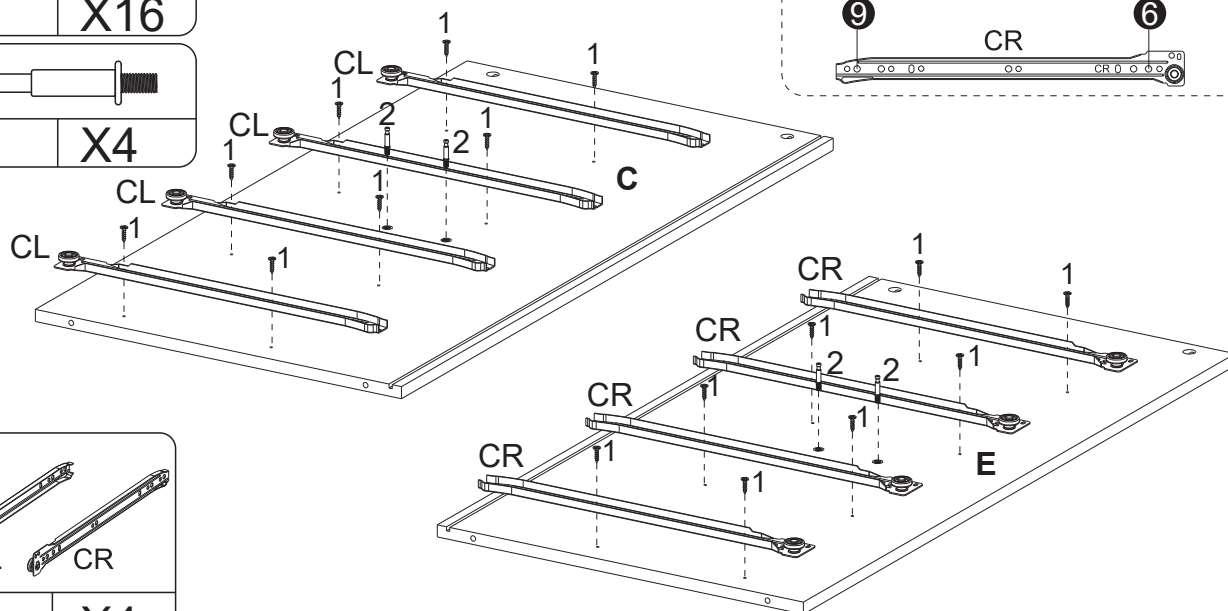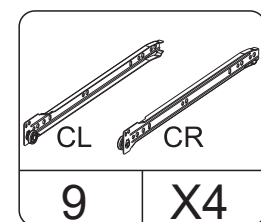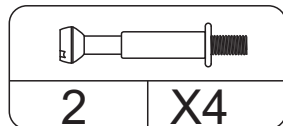
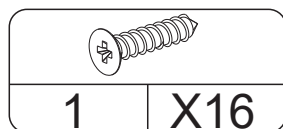


STEP8:

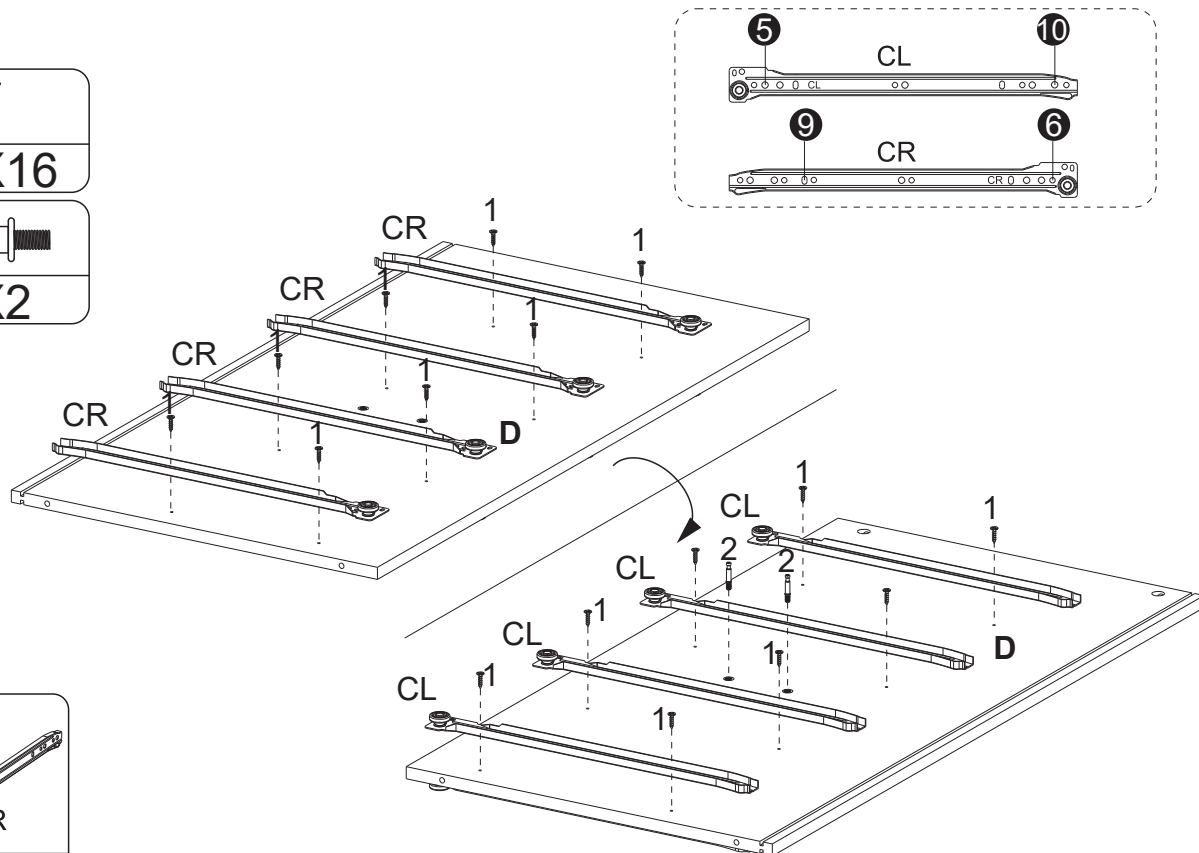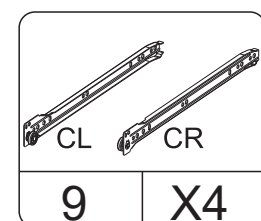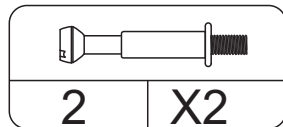
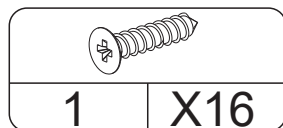


INSTALLATION STEPS

STEP9:

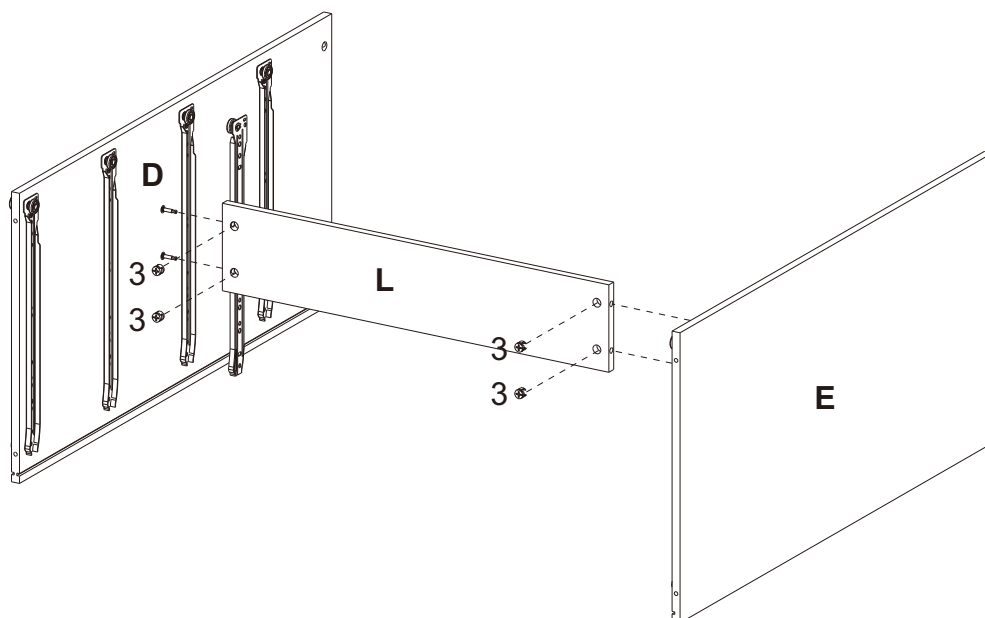
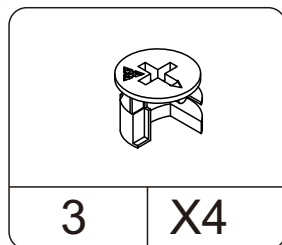


STEP10:


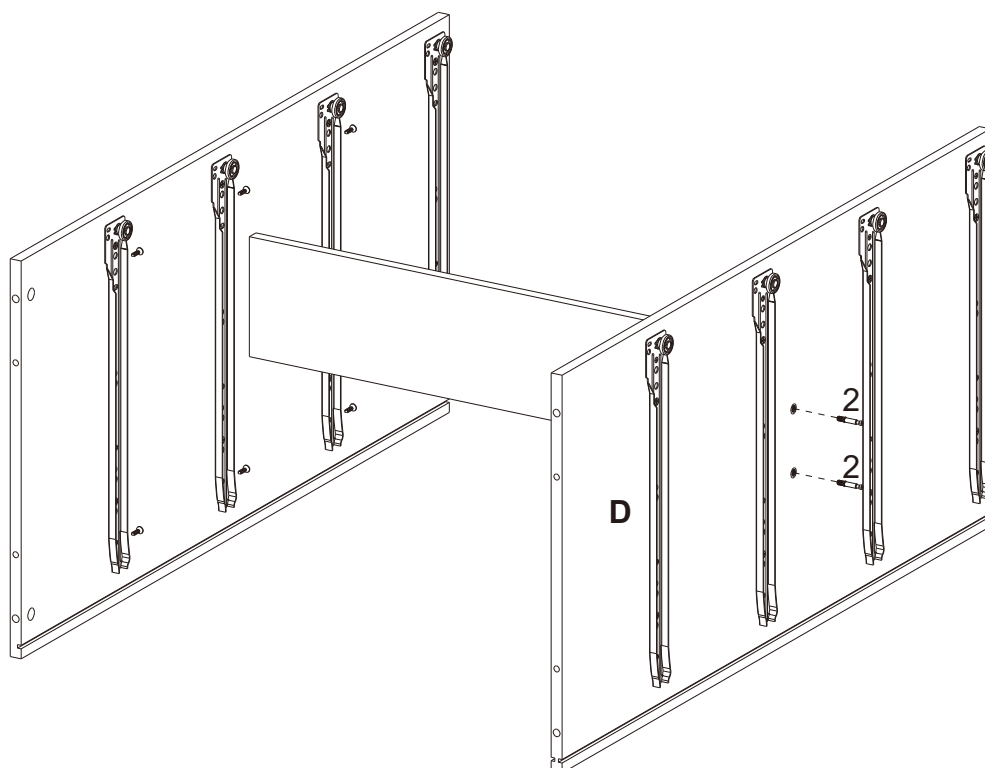
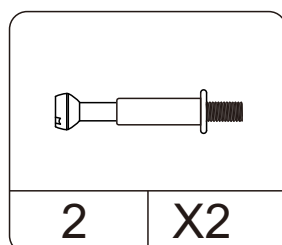


INSTALLATION STEPS

STEP11:

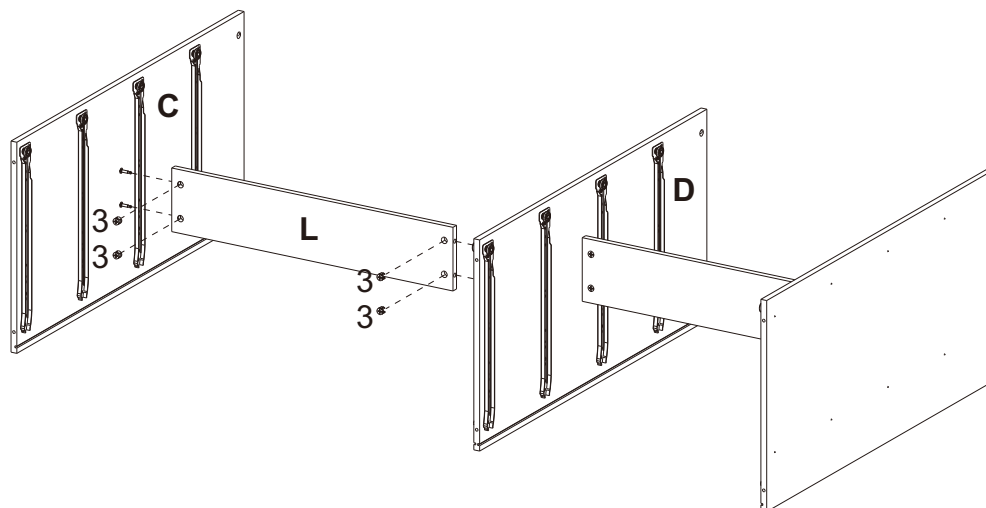
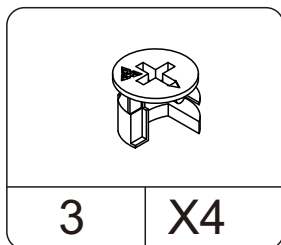


STEP12:

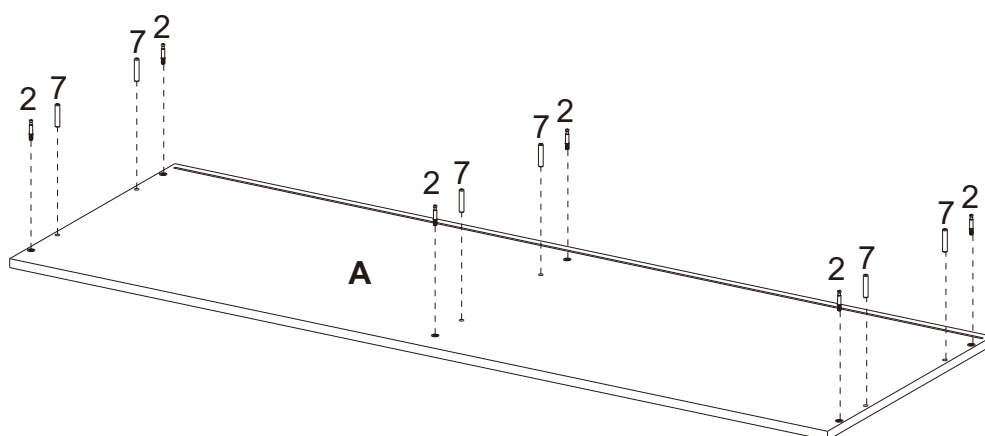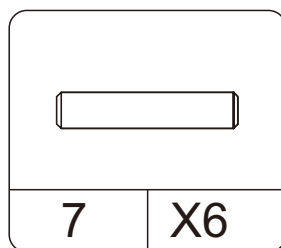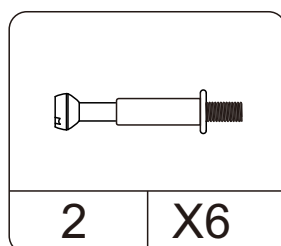


INSTALLATION STEPS


STEP13:

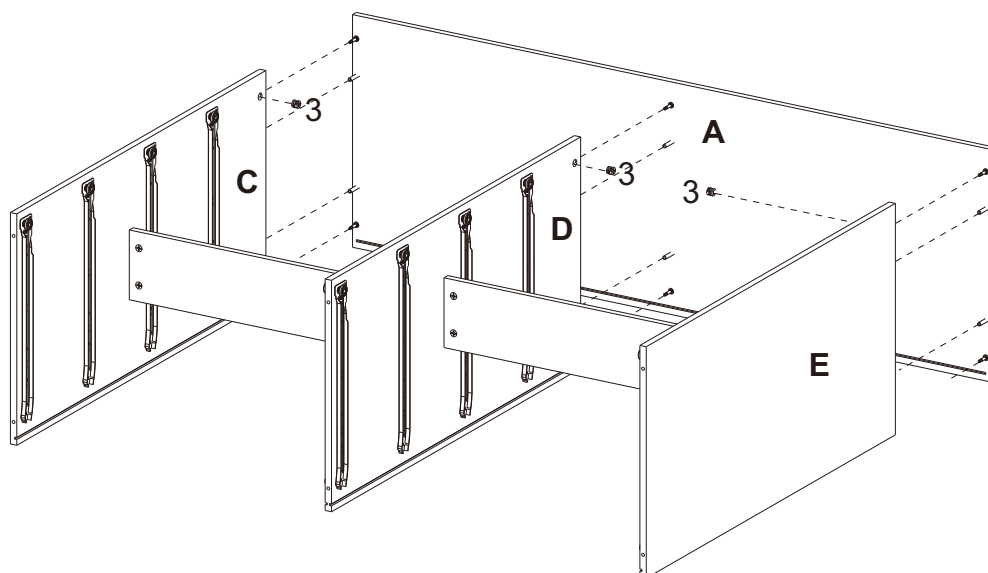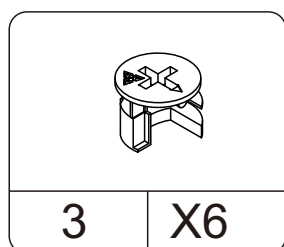

STEP14:


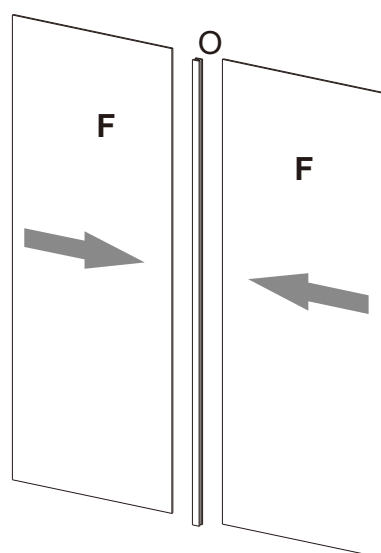


x2



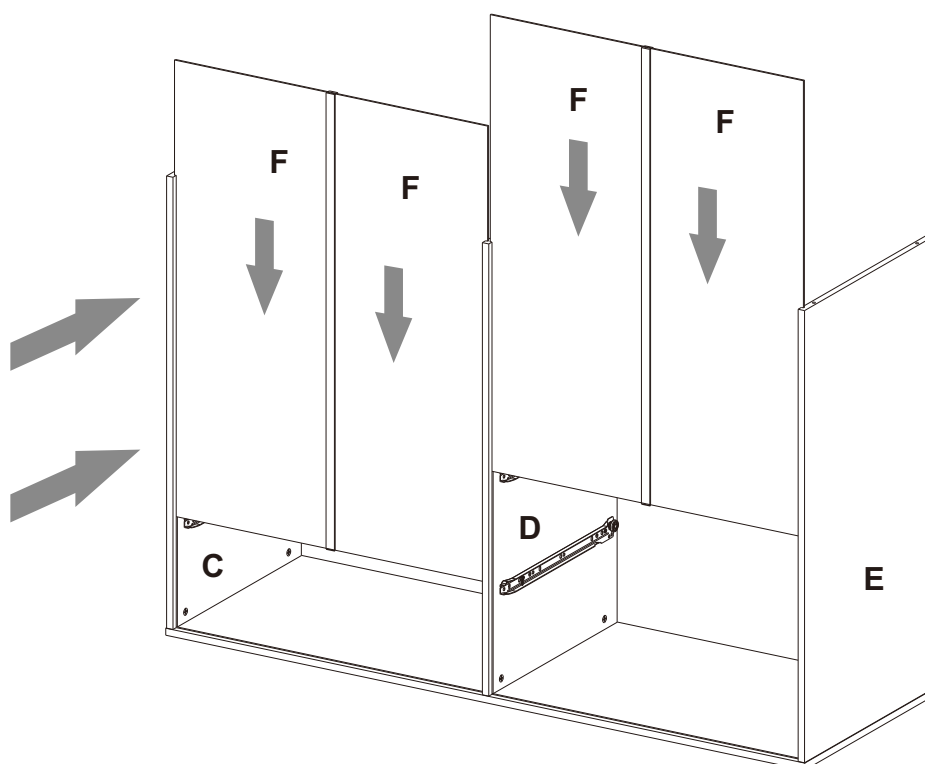


INSTALLATION STEPS

STEP15:

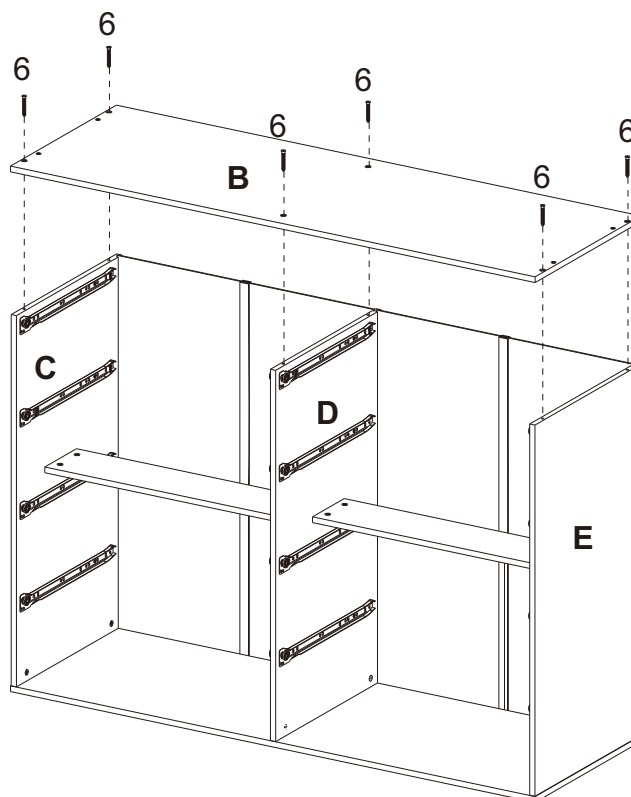
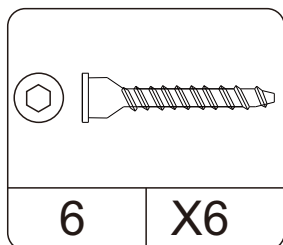


STEP16:

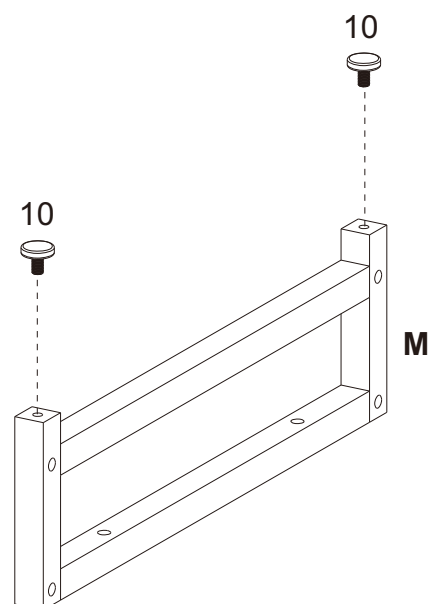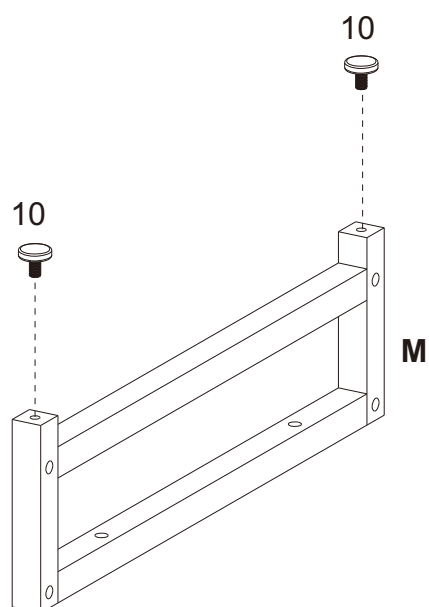
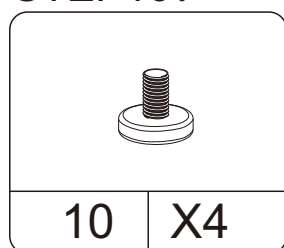


INSTALLATION STEPS

STEP17:

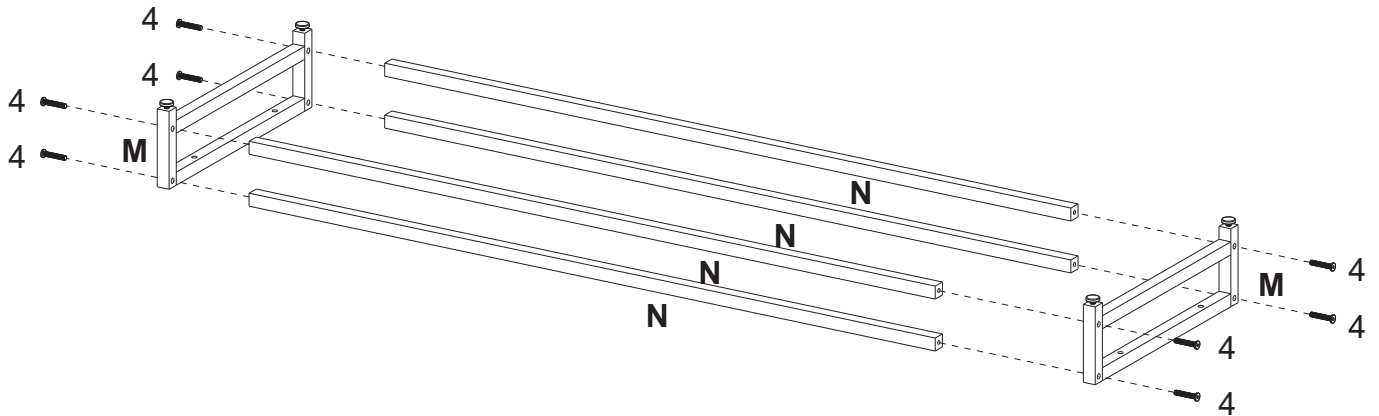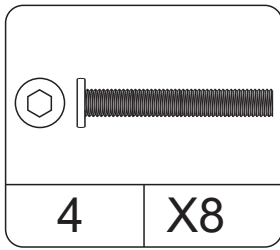


STEP18:

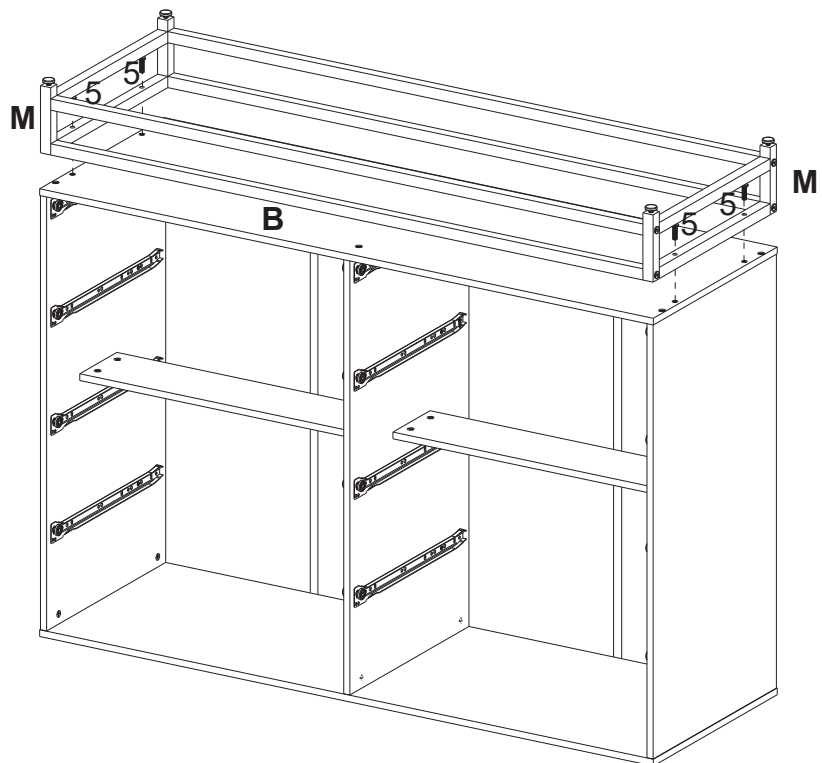
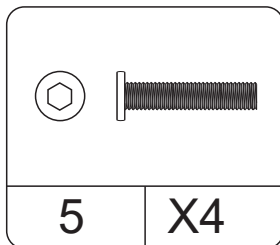


INSTALLATION STEPS

STEP19:

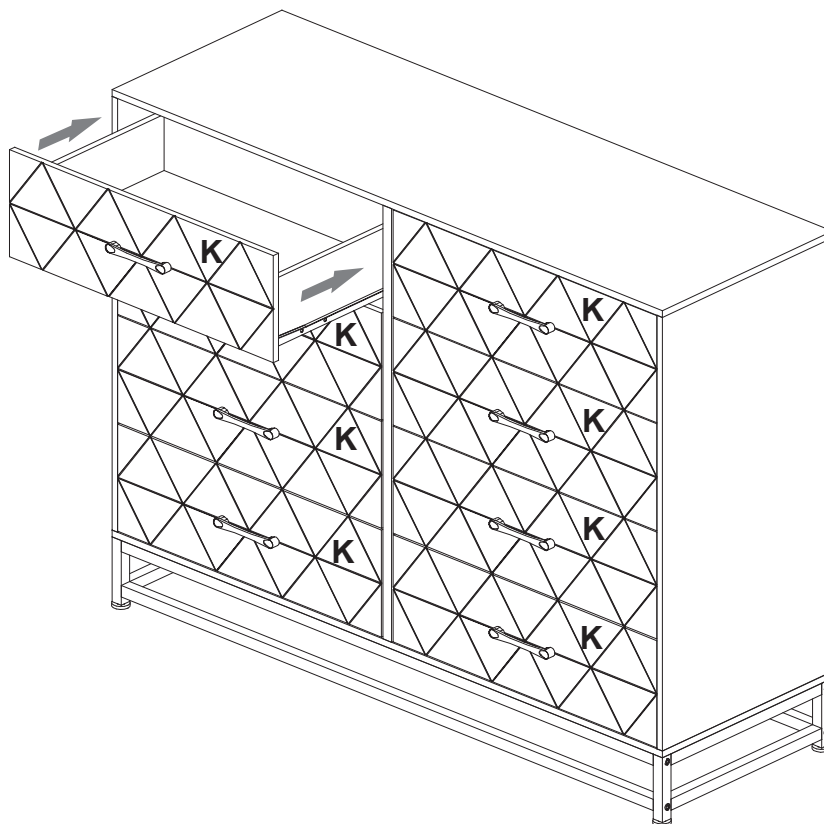

STEP20:

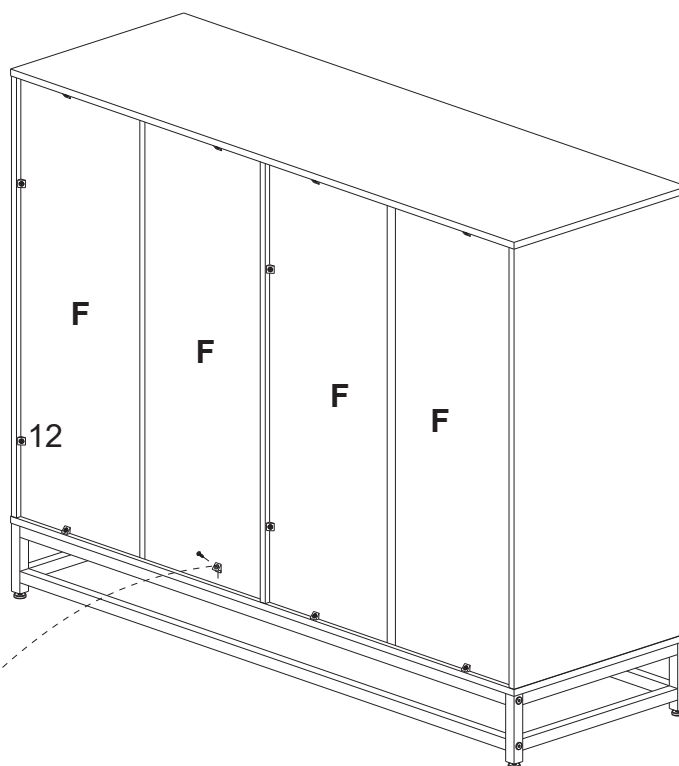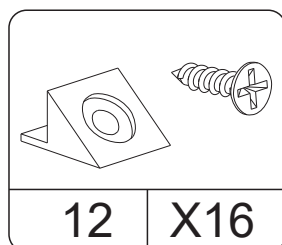

INSTALLATION STEPS

STEP21:

