


2 DRAWER BEDSIDE CHEST

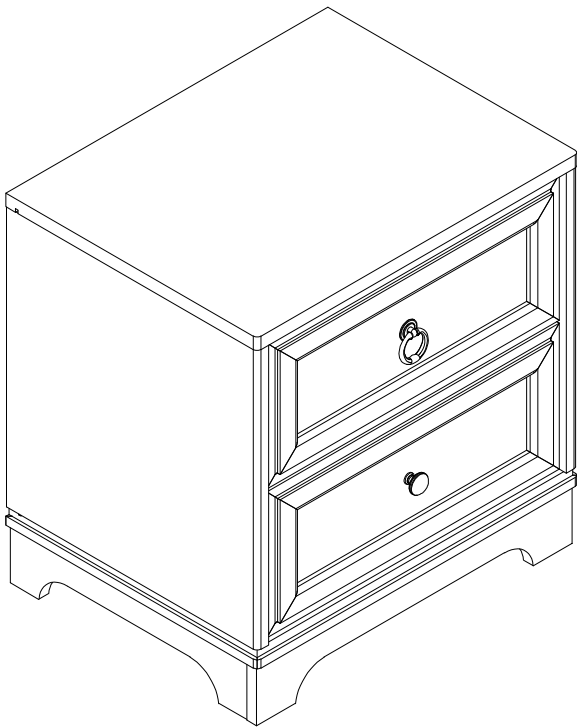

Dimensions	No. people	Assembly Time
Width:50.00cm Depth: 39.50cm Height: 53.10cm		45 MINS (approx.)

Important - Please read these instructions fully before starting assembly

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on next pages.
- Remove all fittings from the plastic bags and separate them into groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to lay out the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft, level surface to avoid damaging the unit or your floor.
- We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.
- Warning : Do not over tighten the handle screw that way break the mirror.



Care and Maintenance

- Please clean using cloth with glass cleaner, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightened properly.

⚠ WARNING




Children have died from furniture tip-over. To reduce the risk of furniture tip-over:

- ALWAYS install anti-tip device provided.*
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

*This is a permanent label.
Do not remove!*

Exploded View

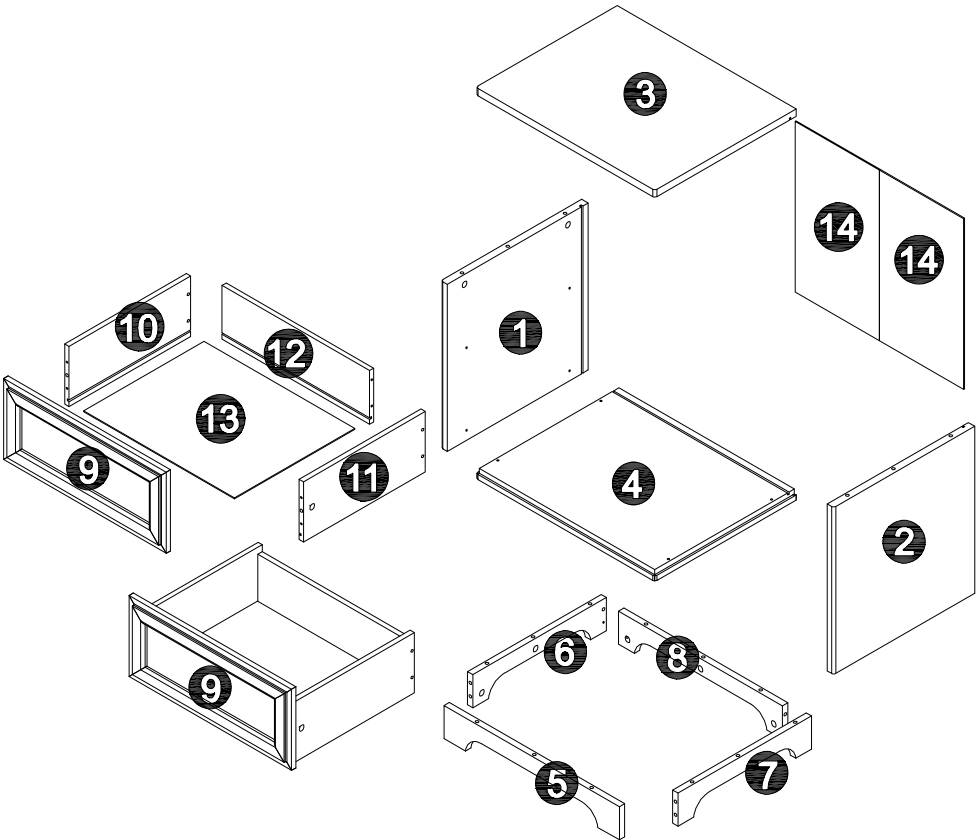

Components - Panels

Please check that you have all the components listed below before constructing your items.



Part No	Description	Qty
1	Side Panel (Left)	1
2	Side Panel (Right)	1
3	Top Panel	1
4	Bottom Panel	1
5	Bottom Support (Front)	1
6	Bottom Support (Left)	1
7	Bottom Support (Right)	1
8	Bottom Support Back	1
9	Drawer Front	2
10	Drawer Side (Left)	2
11	Drawer Side (Right)	2
12	Drawer Back	2
13	Drawer Bottom	2
14	Back Panel	2

Components - Fixings

Please check that you have all the components listed below before constructing your items.

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


*Hardware packed separately according to the code.

(A)	CSK M3.5 X 12MM	(B)	CSK M3.5 X 15MM	(C)	EURO SCREW M6 X 9MM	(D)	JCBC(W) M6 X 40MM
							
	8 unit		4 unit		8 unit		12 unit
(E)	WOOD DOWEL Ø6 X 20MM	(F)	WOOD DOWEL Ø8 X 25MM	(G)	BOLT DOWEL 20 X 5MM	(H)	CAM 15/15
							
	8 unit		14 unit		16 unit		12 unit
(J)	CAM 15/12	(K)	MTL RING HDL 40MM MC4 X 10MM	(L)	HDL KNOB 702-25MM MC4 X 10MM	(M1) & (M2)	DRAWER SLIDE (350MM)
							
	4 unit		1 set		1 set		2 sets
(N1) & (N2)	DRAWER SLIDE (350MM)	(P)	PLASTIC LEG STUD	(Q)	ALLEN KEY	(R)	BACKPLY STOPPER
							
	2 sets		4 unit		1 unit		4 unit

Tools Required




Ruler - Use this to measure your screws (mm)



Using Camlocks


SPECIAL TIPS FOR FITTING CAM-LOCKS AND CAM-BOLTS

CAM-LOCK




Align with long point of cross


WHEN FITTING CAMS
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING CAM-BOLTS
TURN CLOCKWISE UNTIL SECURE

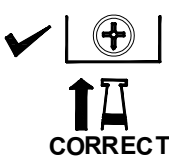

CORRECT

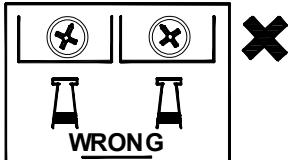




WRONG

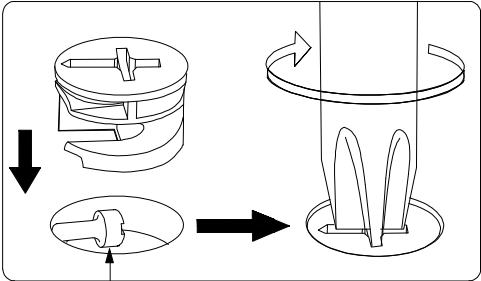

Lock head needs to be in centre


CAM-BOLT

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

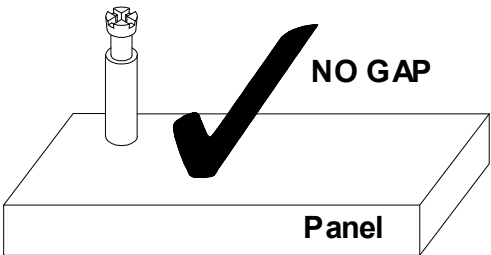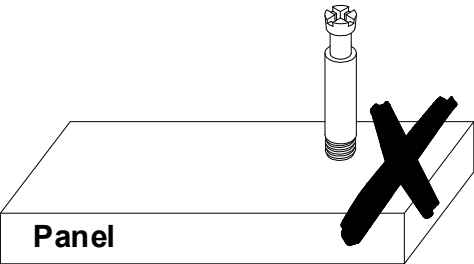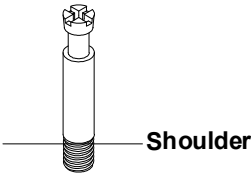


Assembly Instructions


Step 1

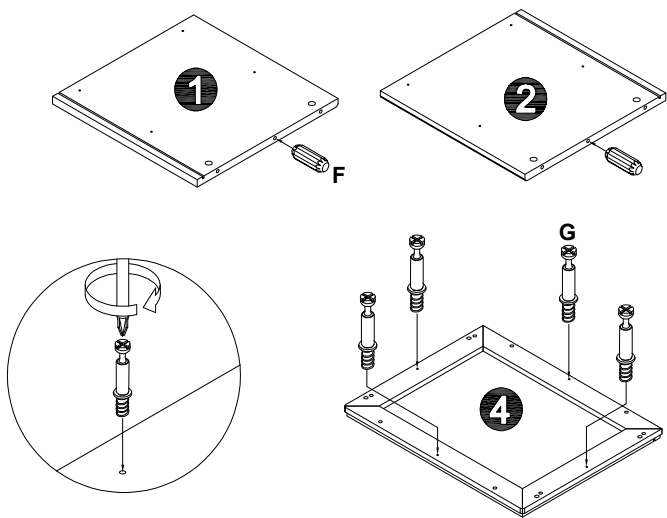




	
F X 2	G X 4

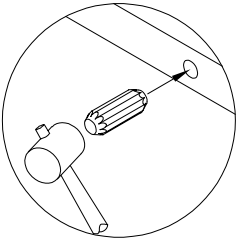

Step 2

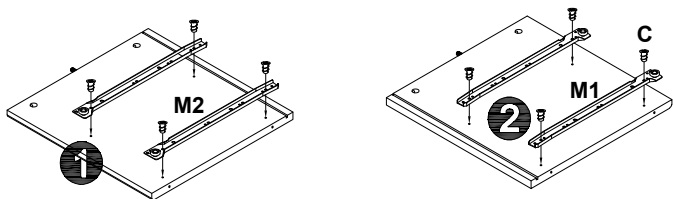


	
C X 8	M1 & M2 X 2 SETS

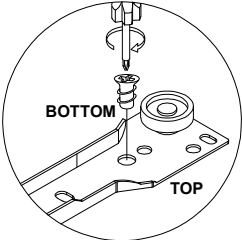


PLEASE ENSURE TO FIX THE SCREWS AS PER POINTED HOLES
INSTRUCTION TO AVOID DISTORTION OF OVERALL LOOK OF PRODUCTS.


Step 3


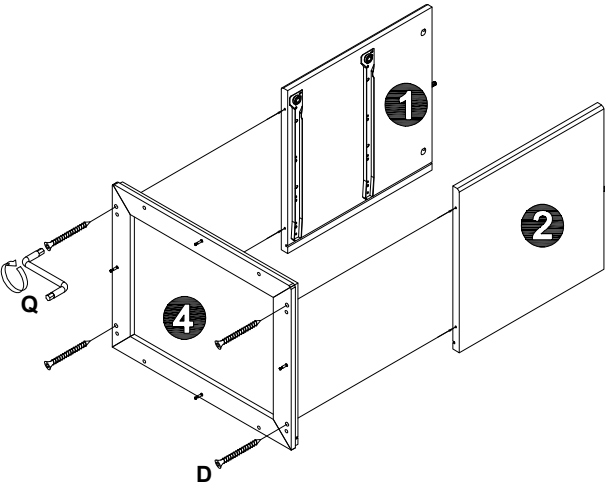


	
D X 4	Q

Step 4

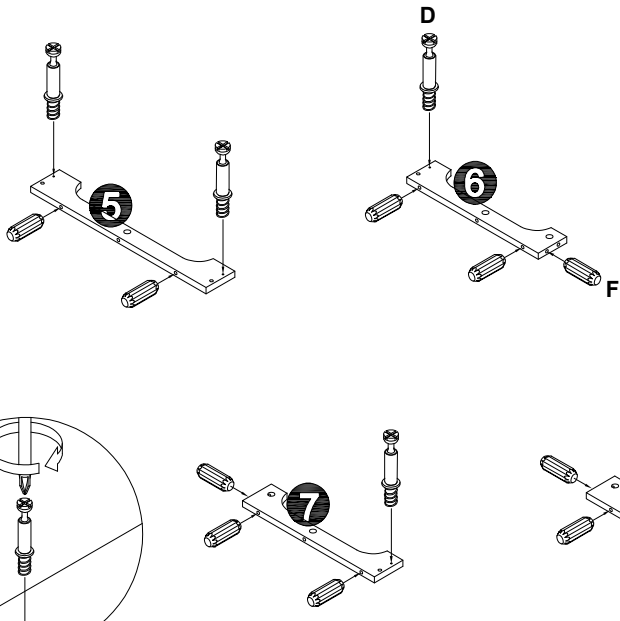



	
FX 12	G X 4

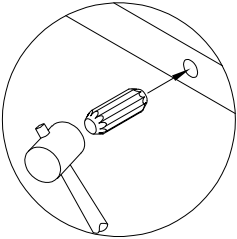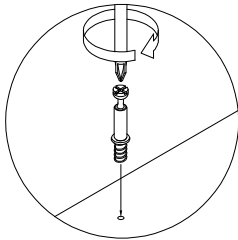

Step 5





H X 2

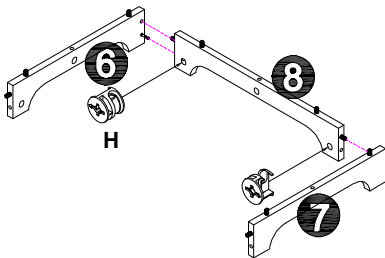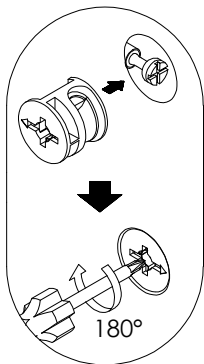

Step 6





H X 2

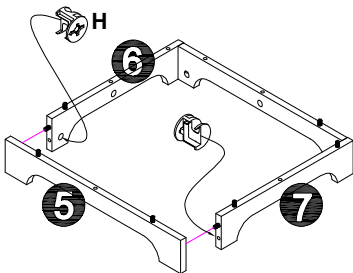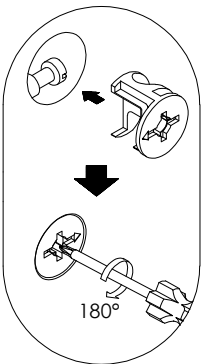

Step 7





H X 4

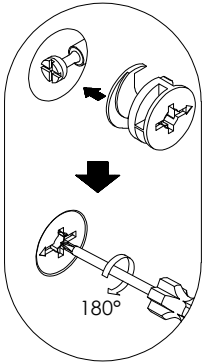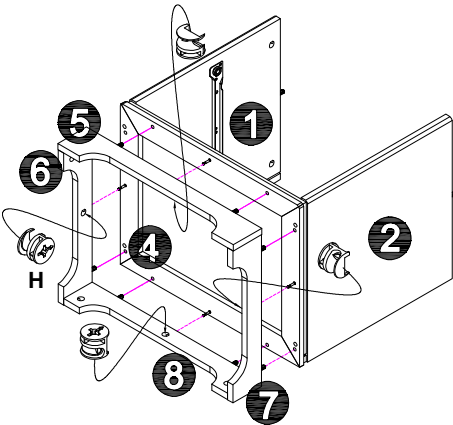


Step 8



P X 4

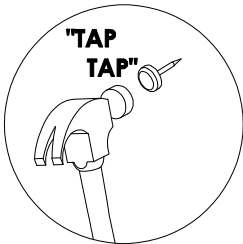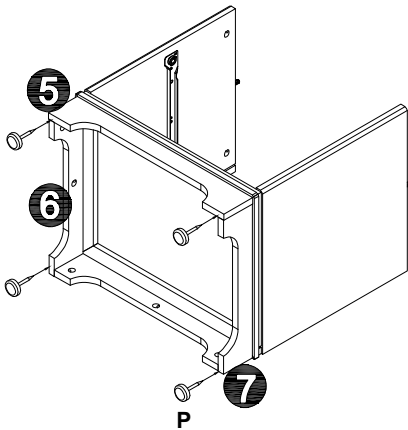



Step 9

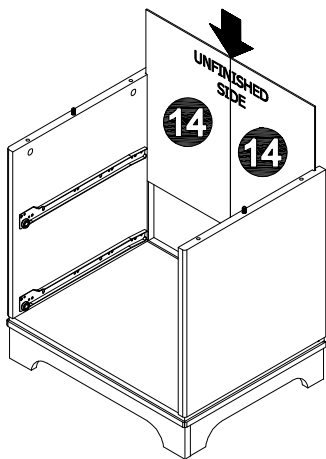

Step 10





G X 4

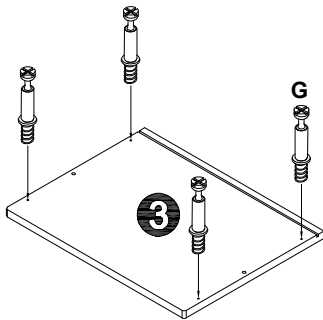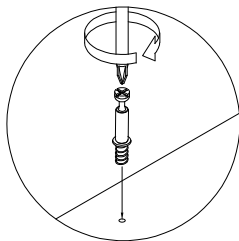

Step 11



H X 4

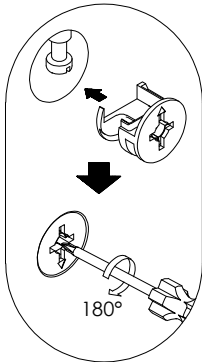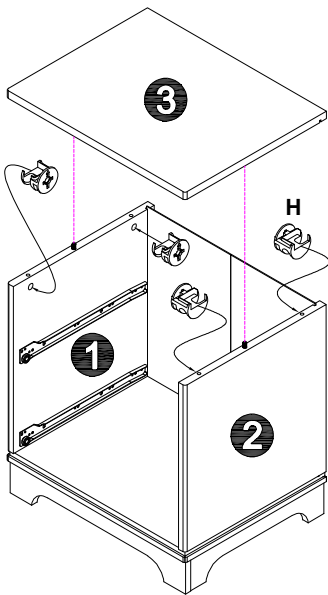



Step 12





EX 8




G X 4

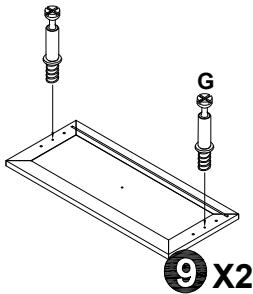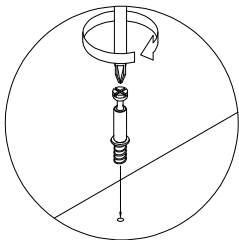

9 X 2

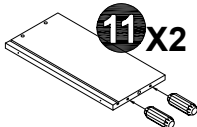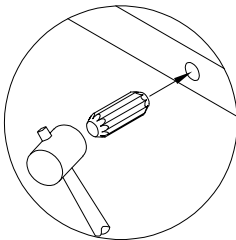

11 X 2

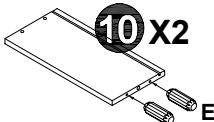



10 X 2

E

Step 13



J X 4

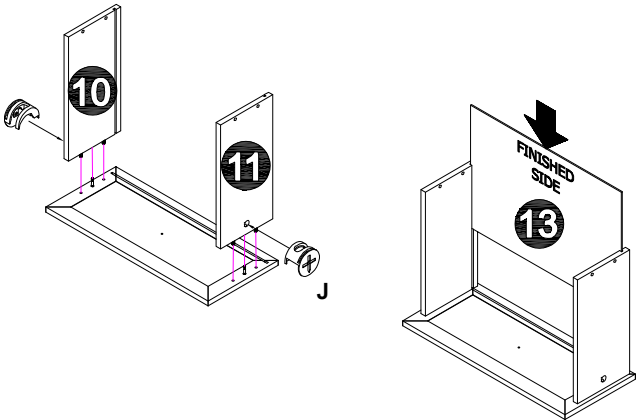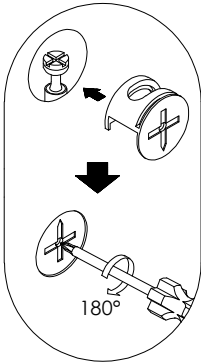

X2


Step 14



D X 8





Q

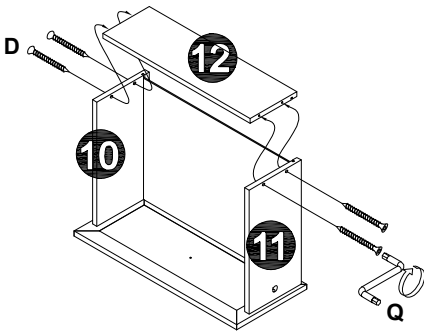

X2

Step 15

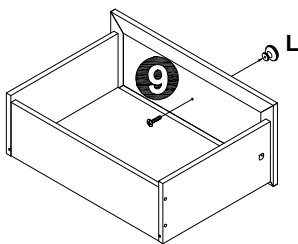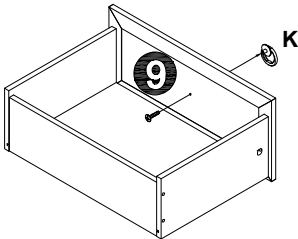


K X
1 SET




L X
1 SET



Step 16

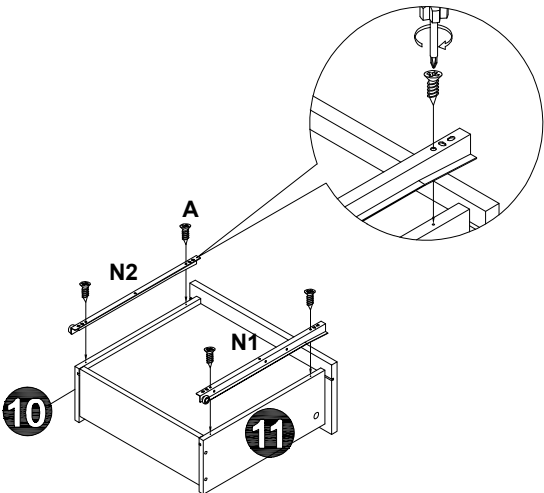

A X 8




N1 & N2
X 1SET

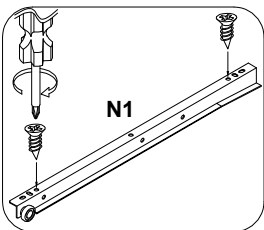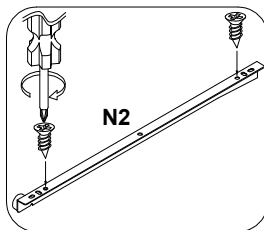



X2

Step 17

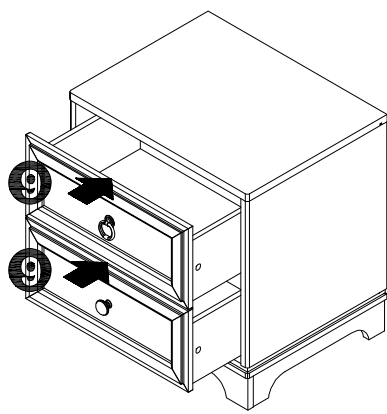

Step 18

	
B X 4	R X 4

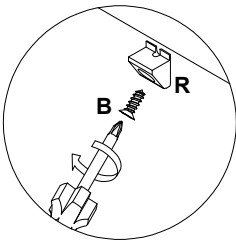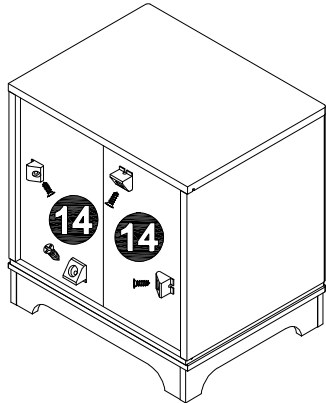

Step 19

WALL

