
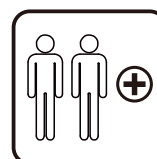
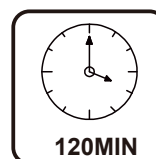
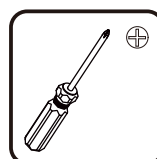
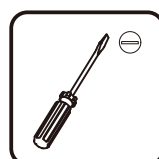


Installation & Assembly

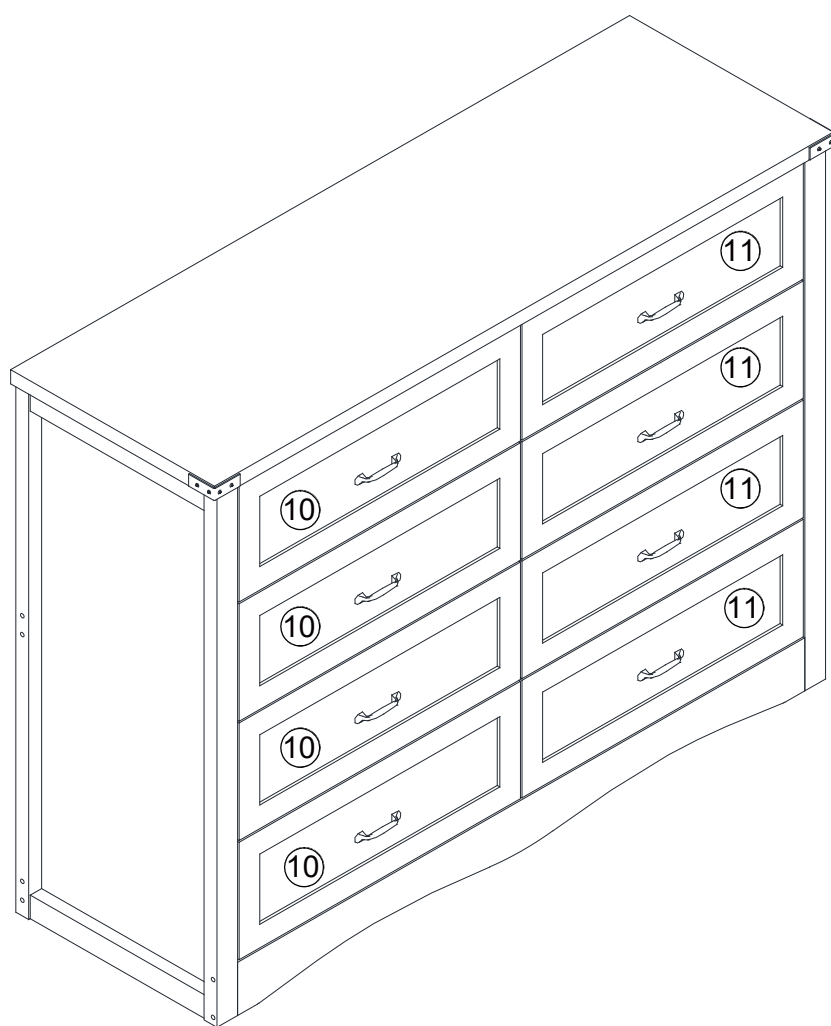

EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

. THANK YOU FOR PURCHASE! .

FREE REPLACEMENT PARTS AVAILABLE!



---NEED HELP WITH YOUR FURNITURE?---


If you're experiencing any issues—whether due to shipping, assembly, or any other reason
—we're here to help.

For any damaged or missing components, we're happy to provide FREE replacement parts.


WANT TO CONTACT US ?

- ▶ Log in to your account.
- ▶ Go to “Your Orders” and locate your furniture order.
- ▶ Click on “Get Help with Order” to send us a message directly.


Our customer support team is ready to assist you and we will respond within
12-24 HOURS to resolve your concerns quickly!

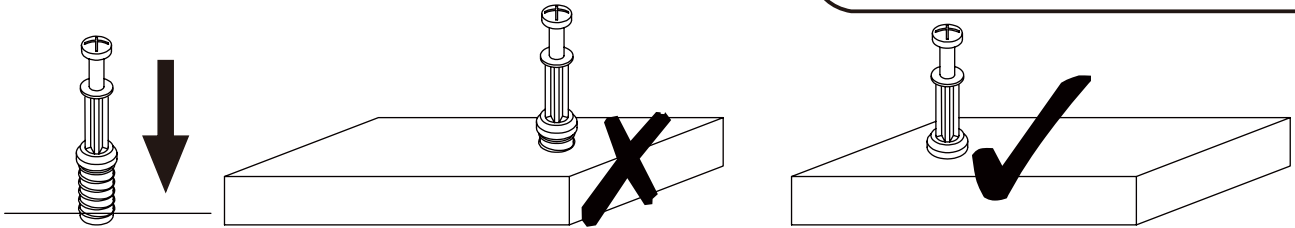


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

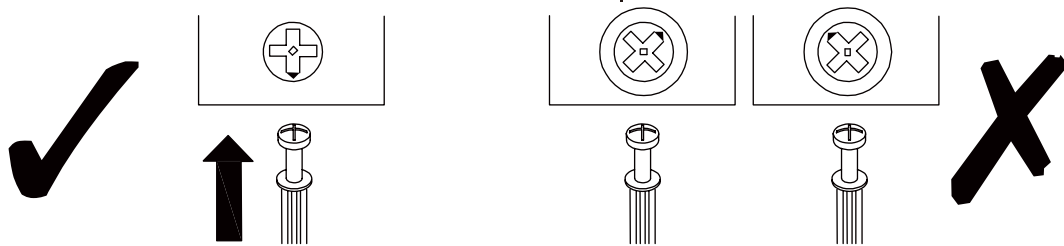











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.






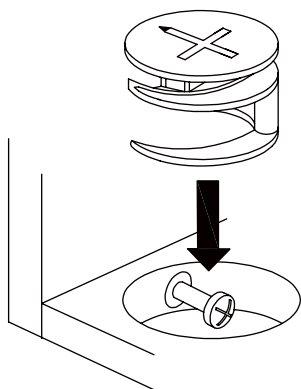





EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

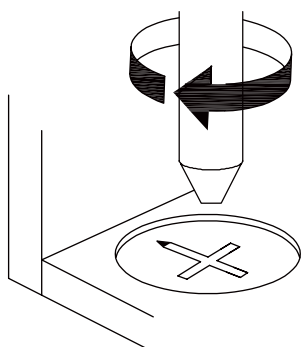

EN_Turn cam lock clockwise to tighten.

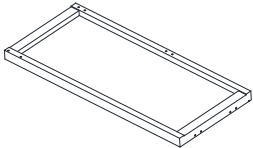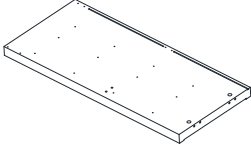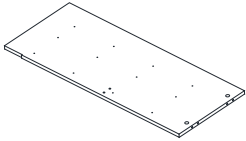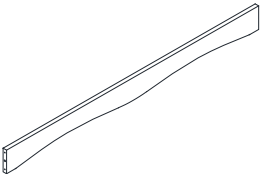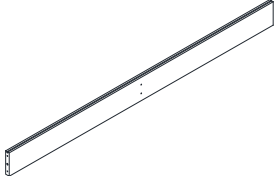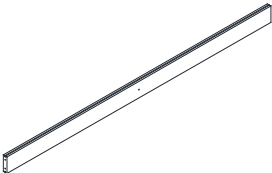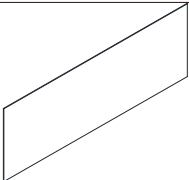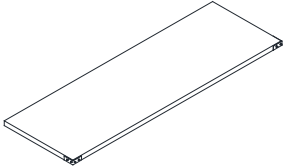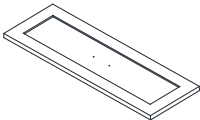NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x2	
⑧		x2	
⑨		x1	
⑩		x4	

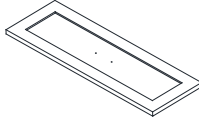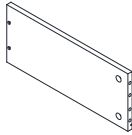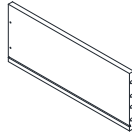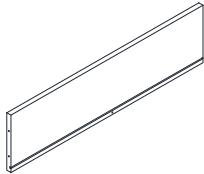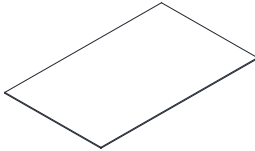
NO.	PARTS	QTY	SPARE
⑪		x4	
⑫		x8	
⑬		x8	
⑭		x8	
⑮		x8	
⑯		x8	
	 Hardware Kit		

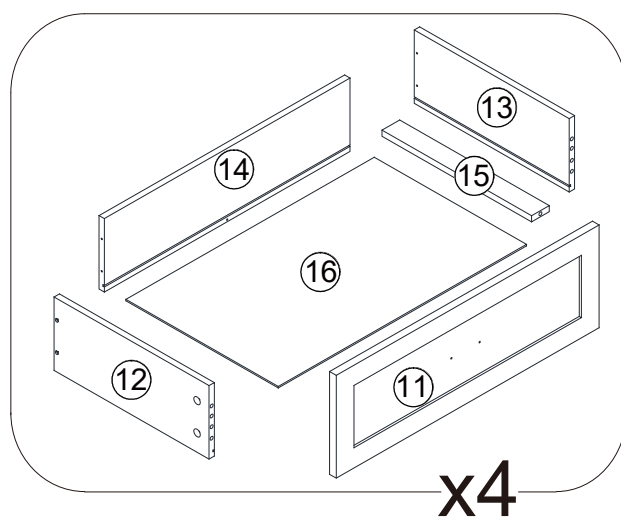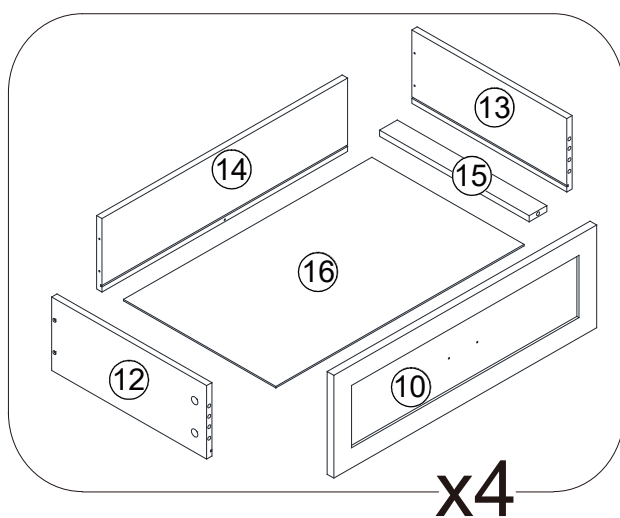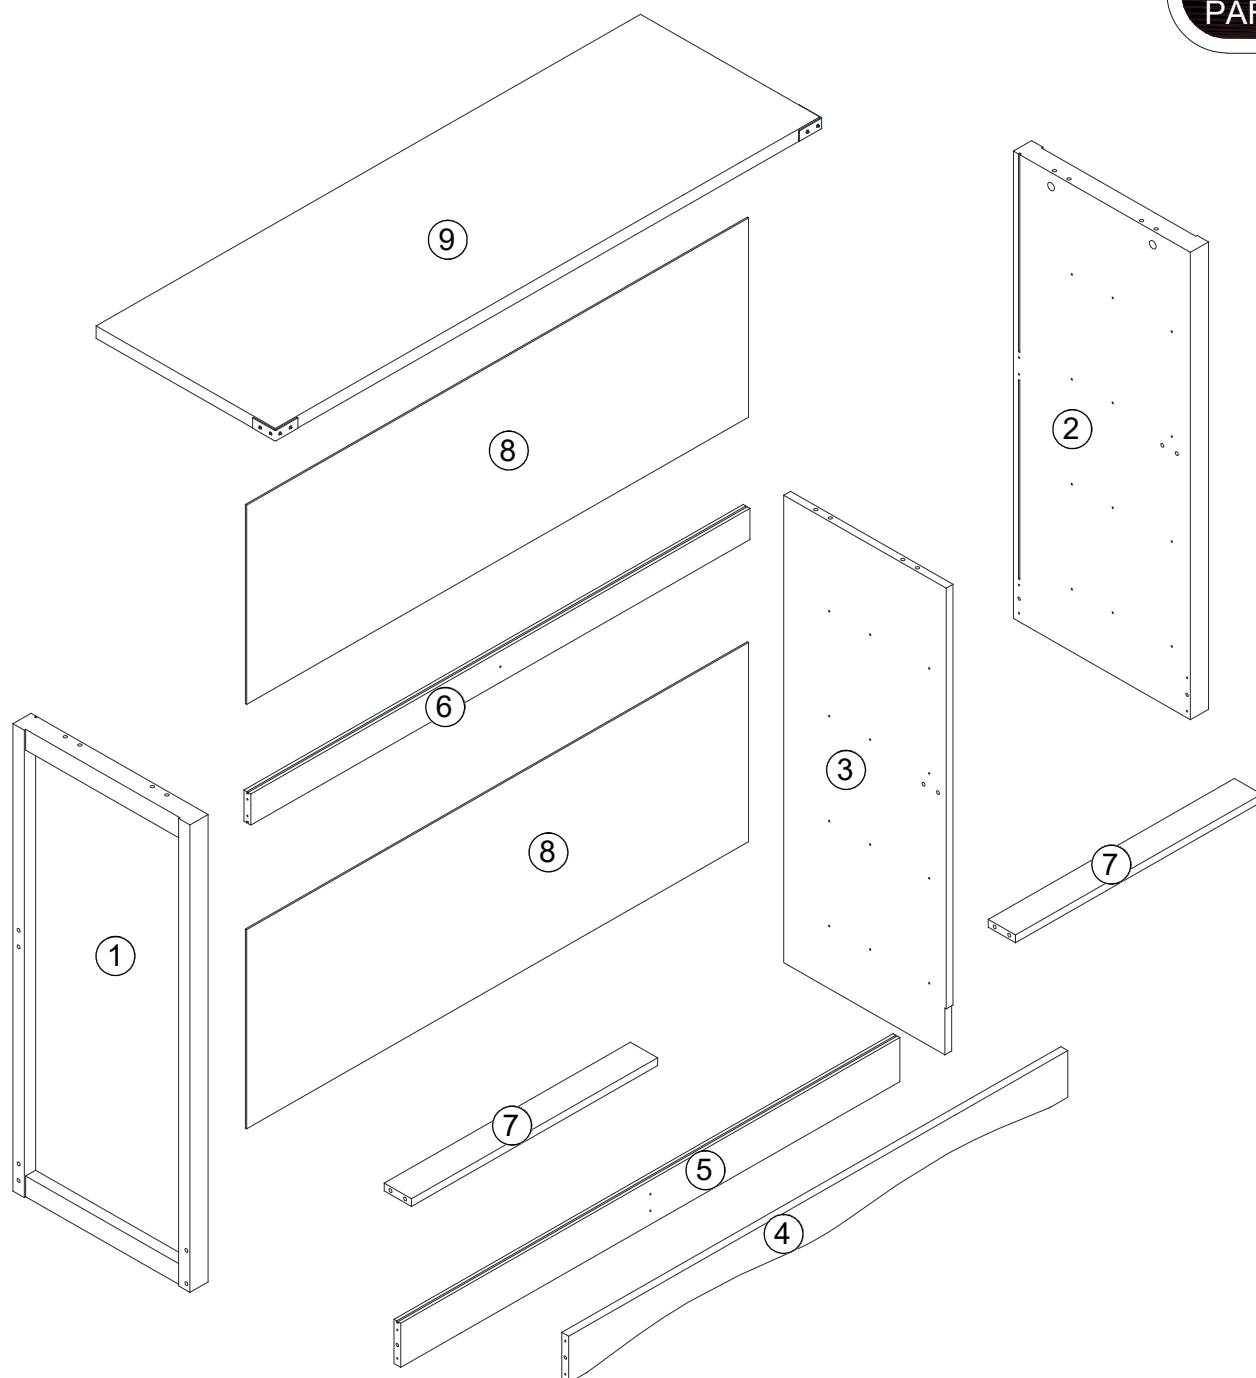


A x50 Ø6x35mm +2(spare)	B x50 Ø15x10mm +2(spare)	C x46 Ø6x30mm	D x45 Ø4x35mm +2(spare)	E x96 Ø3.5x12mm +3(spare)	F x8
G x10 +1(spare)	H x12 Ø5x50mm	I x12	J x4 Ø4x12mm	K x2 Ø4x14mm	L x2 Ø6x30mm
M x2	CL x8 L350mm	CR x8 L350mm	DL x8 L350mm	DR x8 L350mm	

E x24	CL x4	CR x4
--------------	--------------	--------------


01


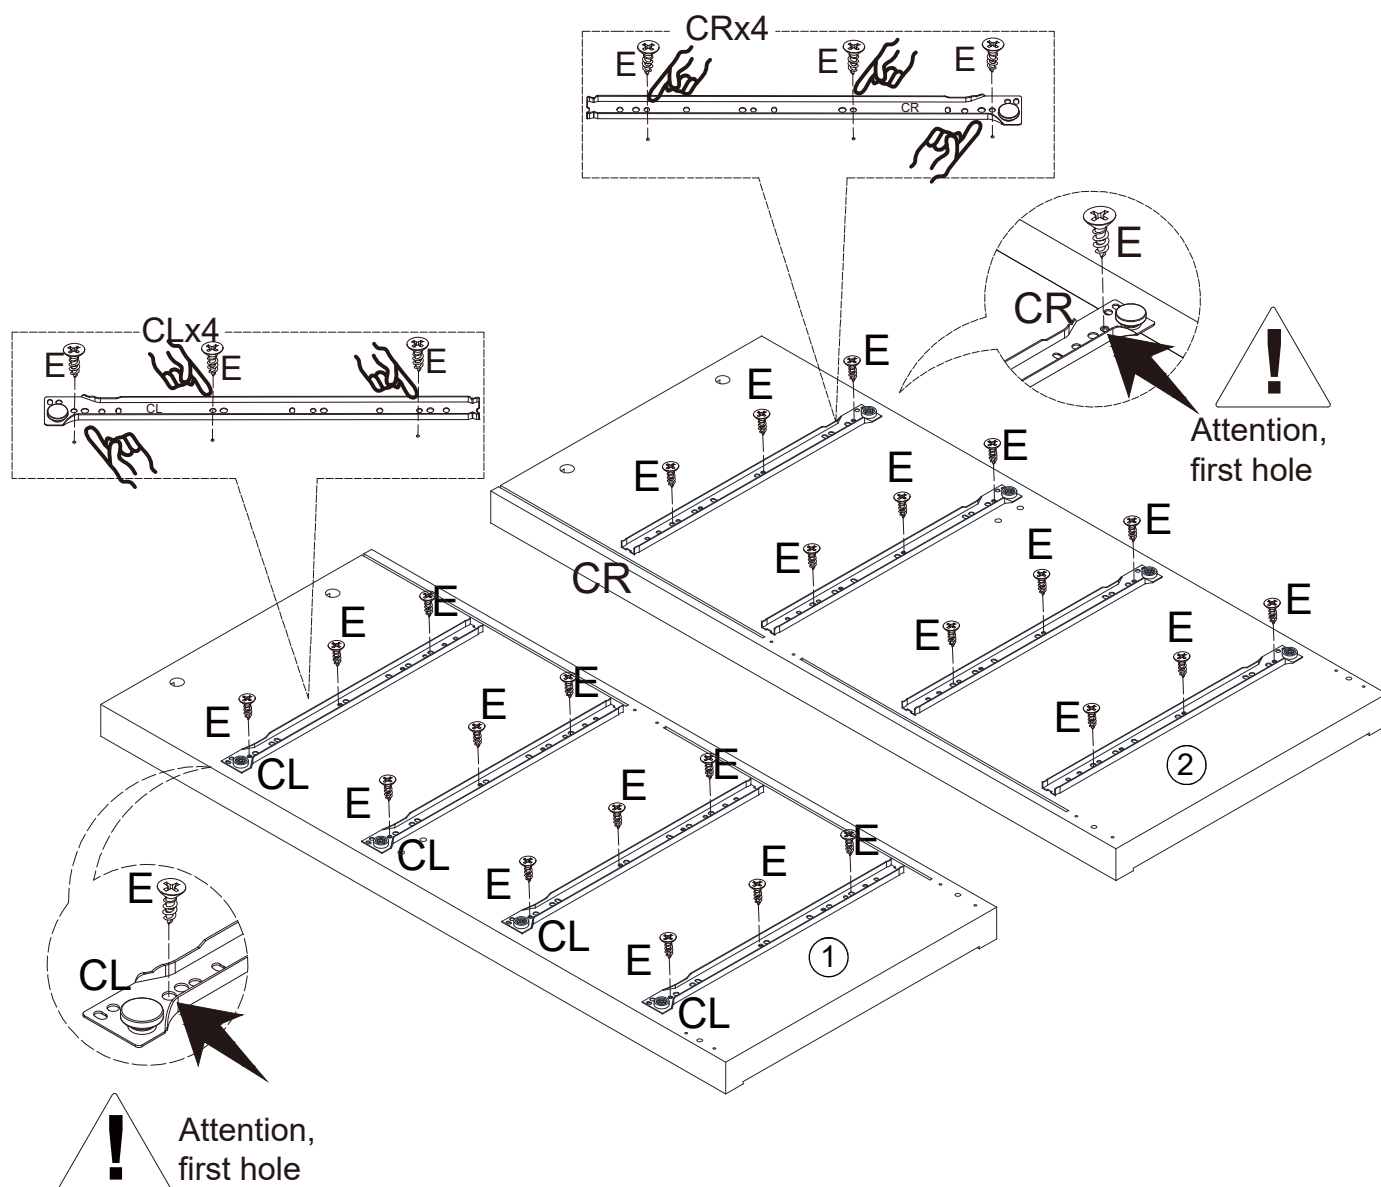


A x1

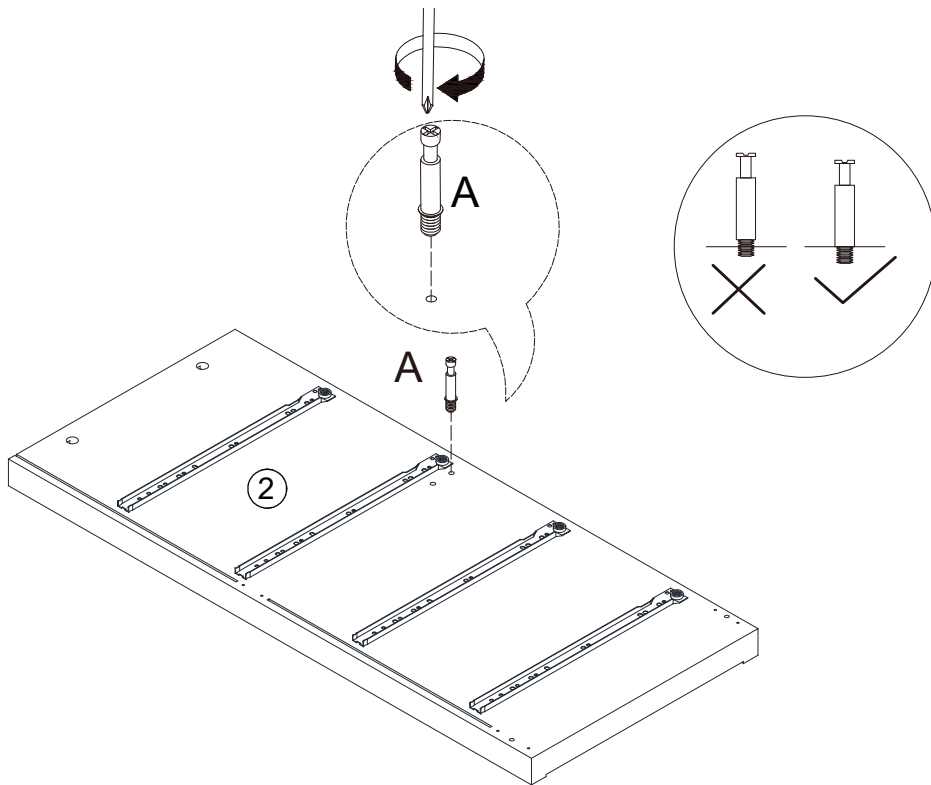

A x1



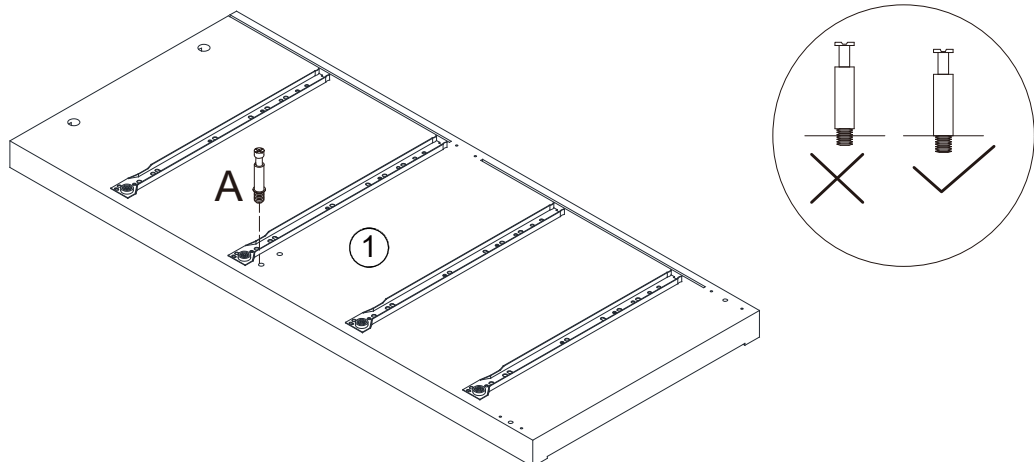


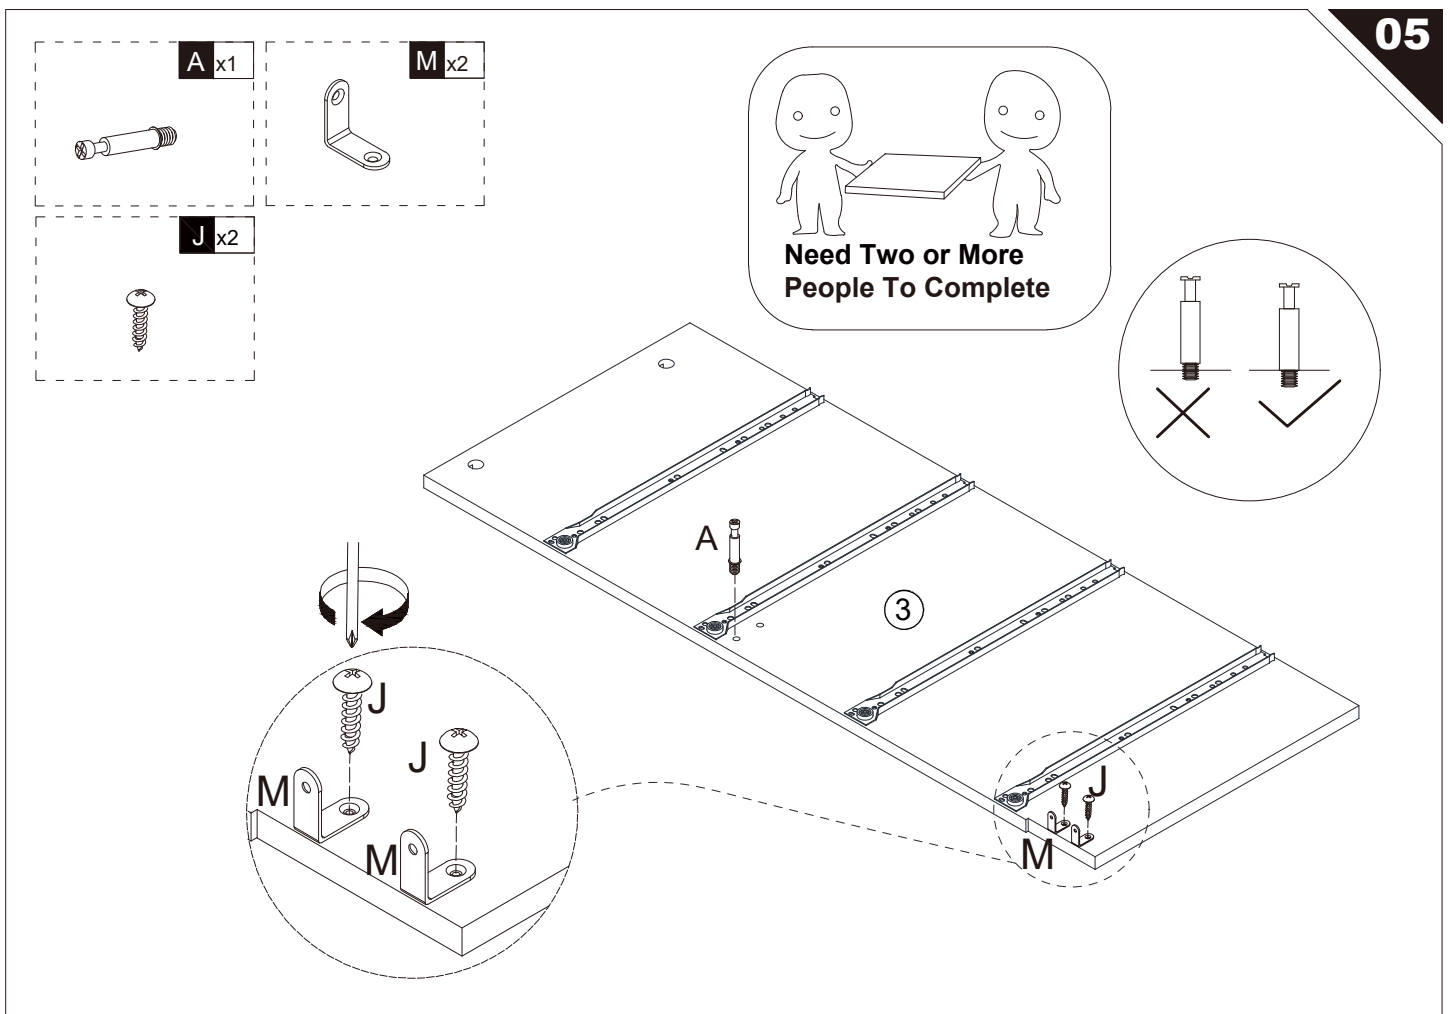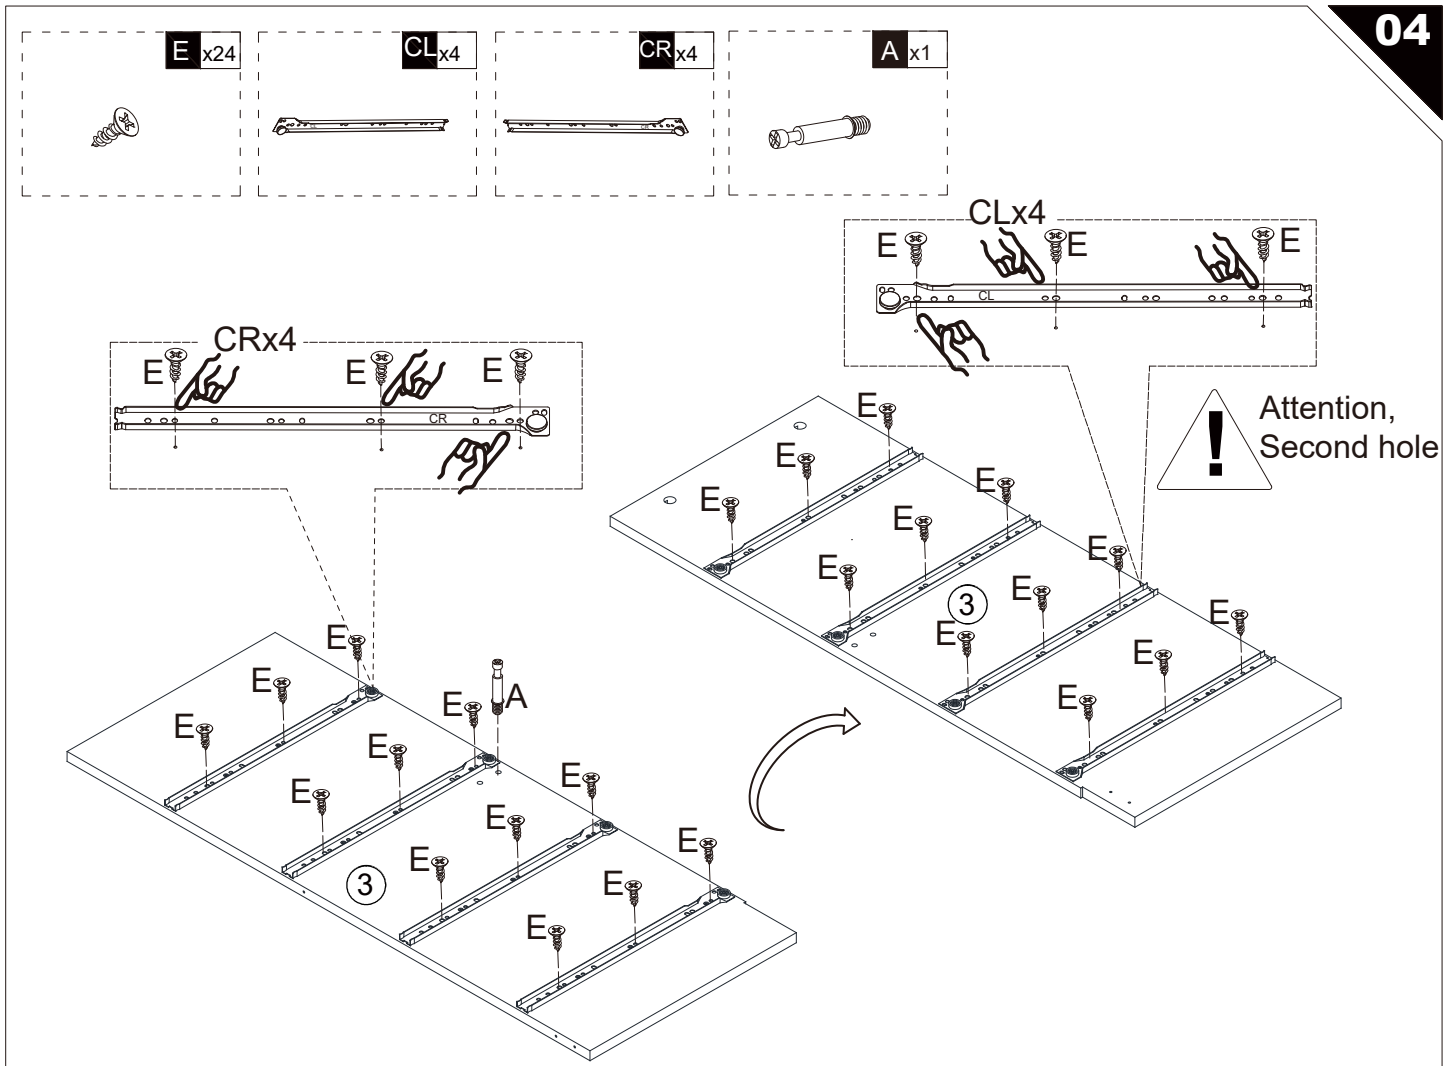

J x2





Note: Due to the sinking of the upper part of board 3 during installation with board 4, a plate from board 5 can be used as a cushion to prevent board 3 from sinking, as shown in the figure.

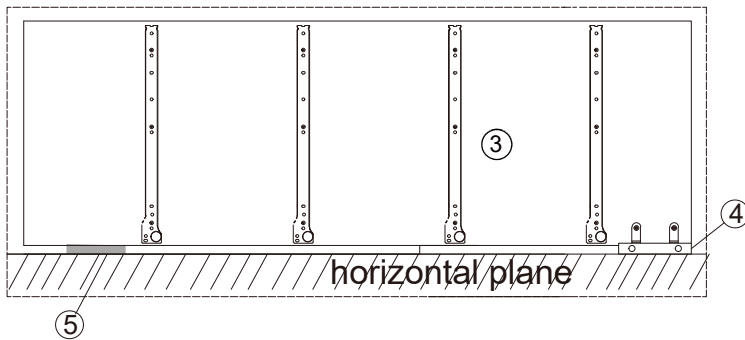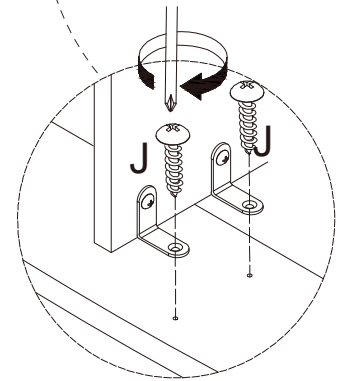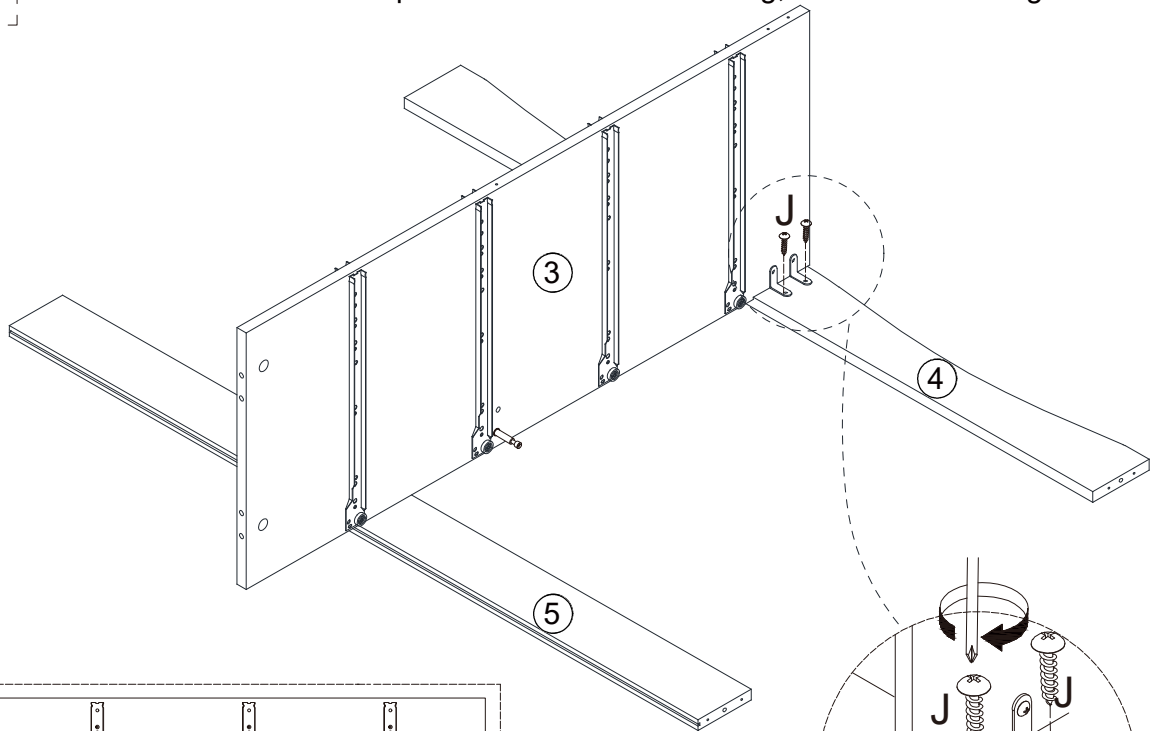

B x1



C x1

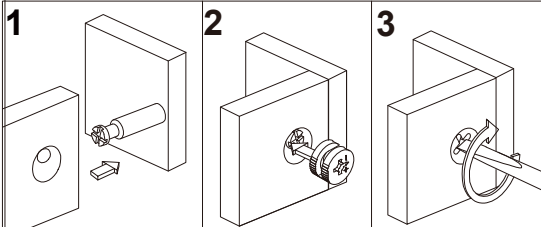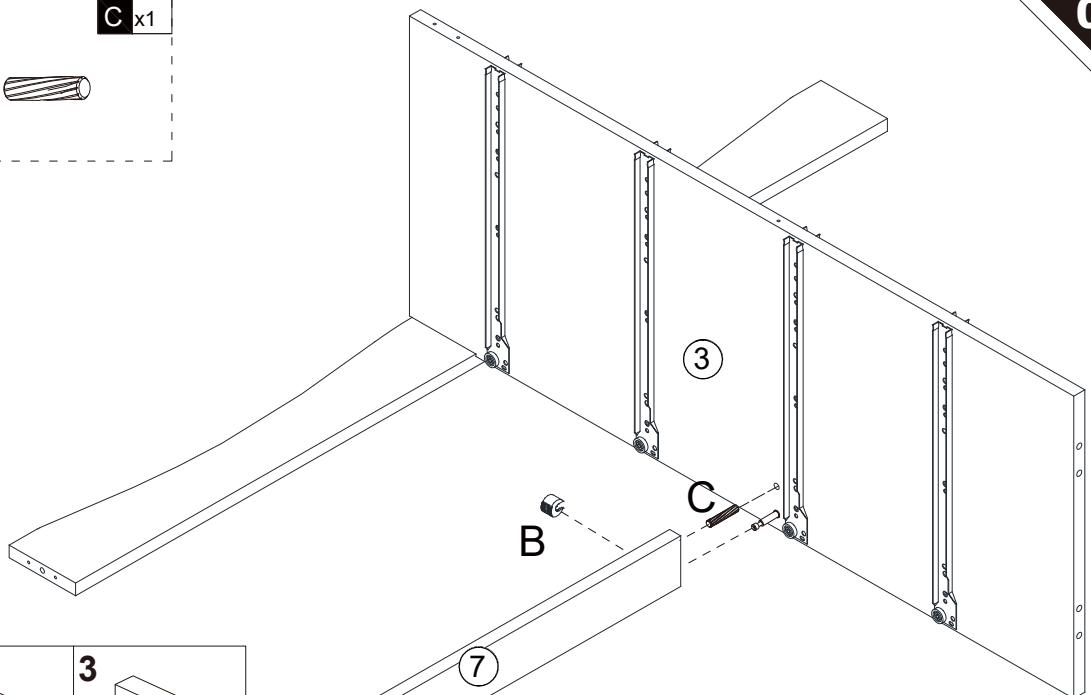

B x1




C x3



H x6



D x3

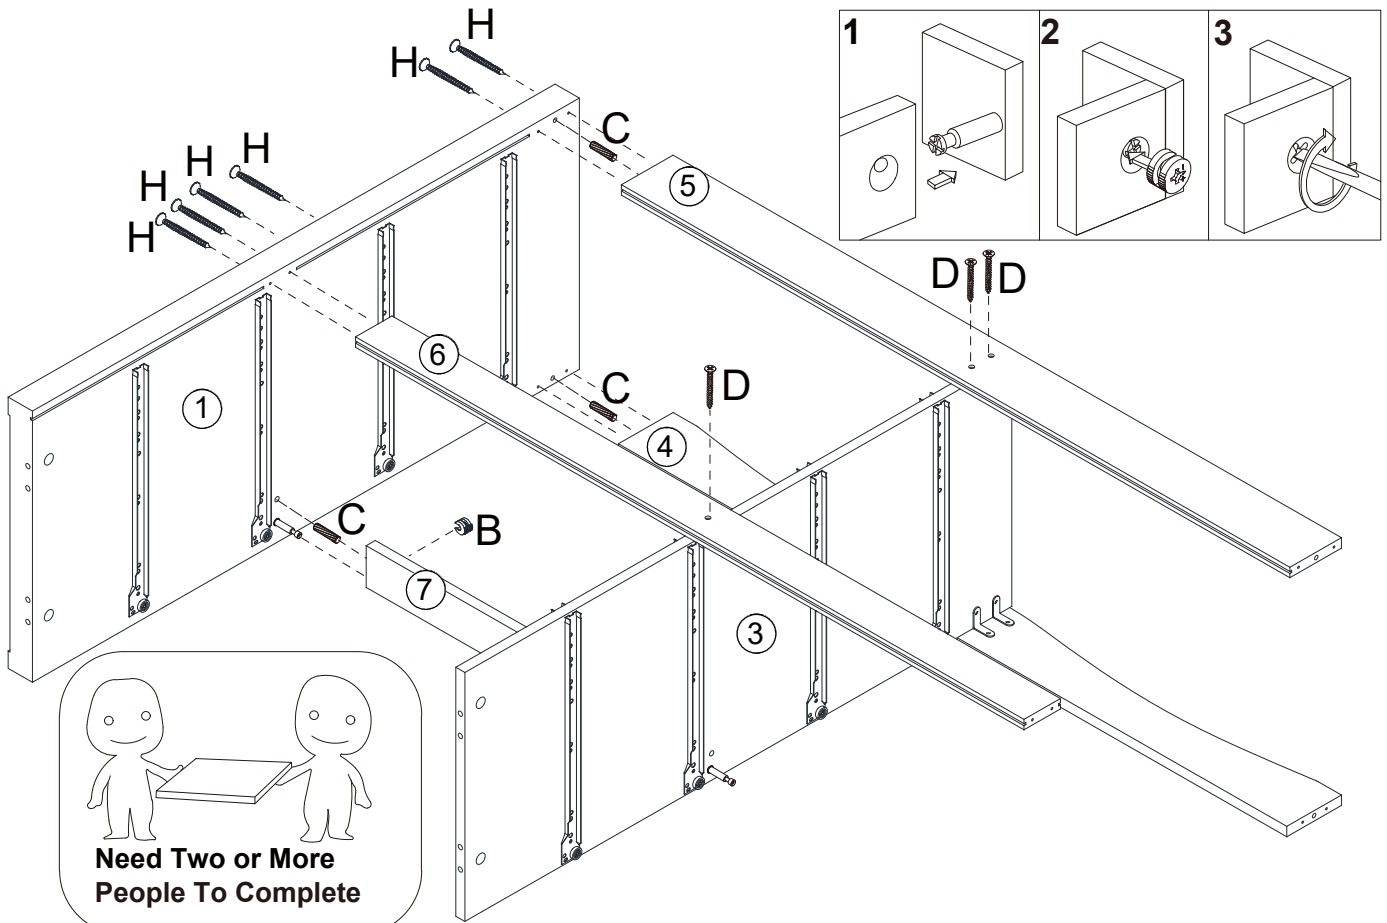

1

2


3

D D D

B x1



C x1

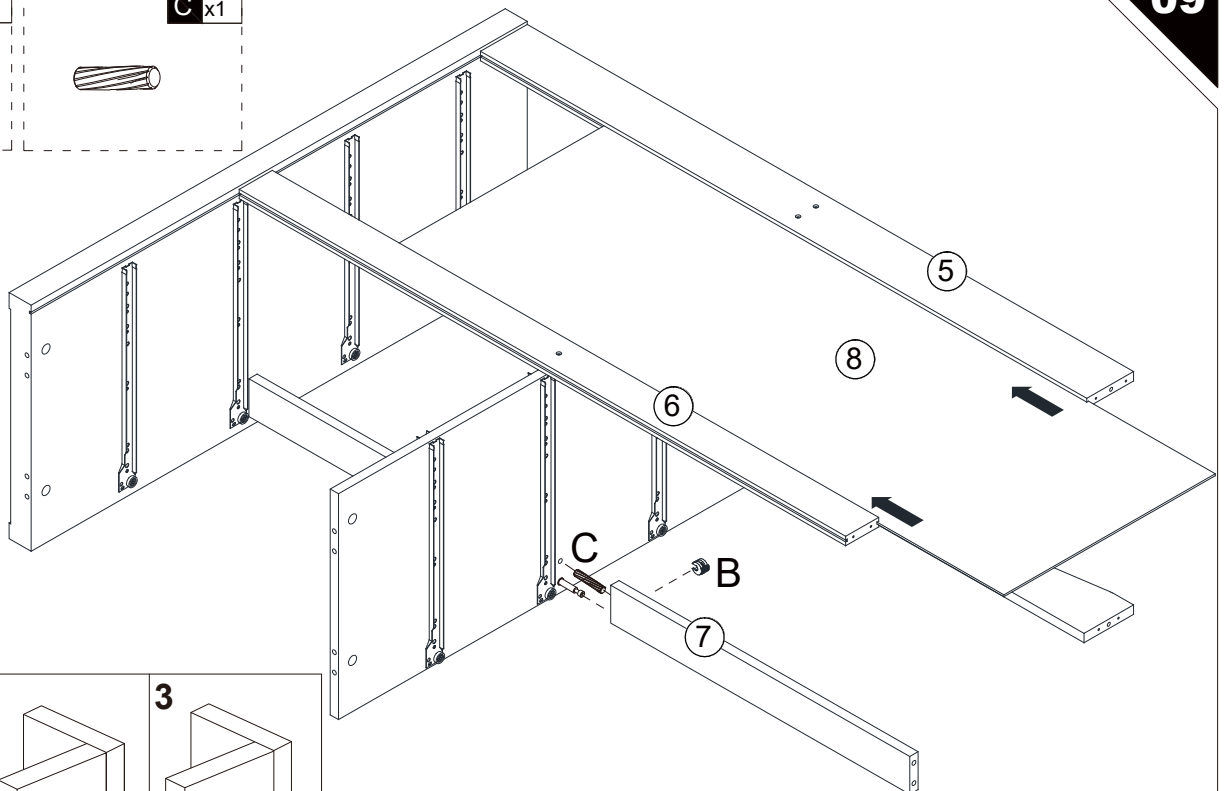

1

2

3



B x1




C x3




H x6

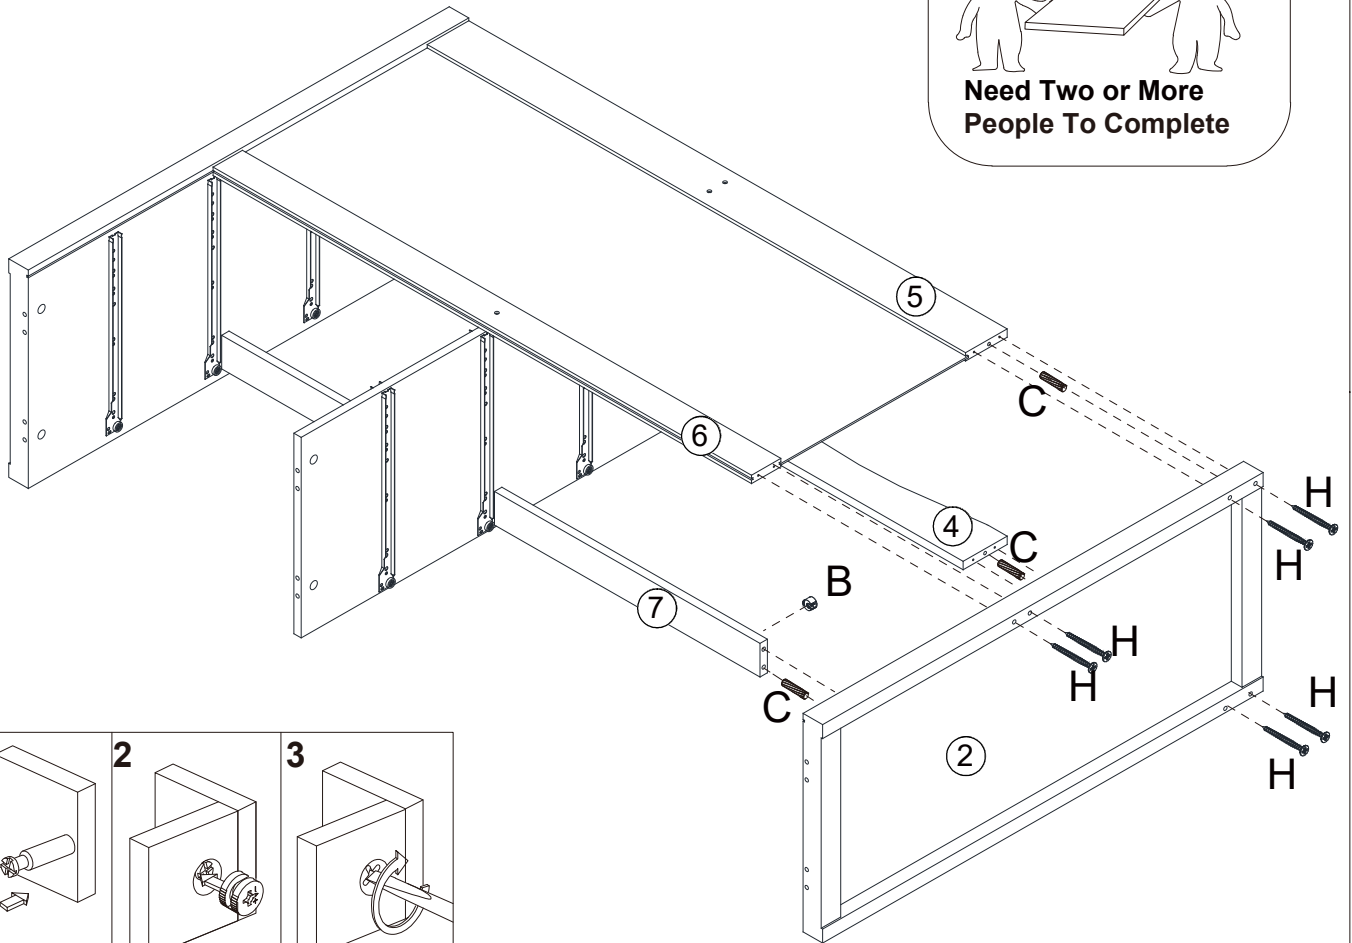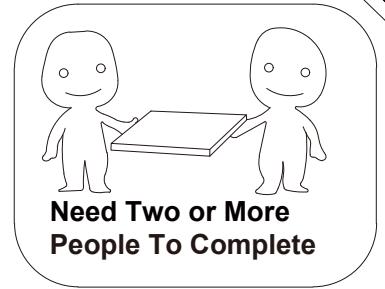



1











2

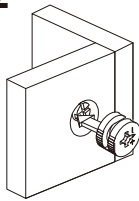


3

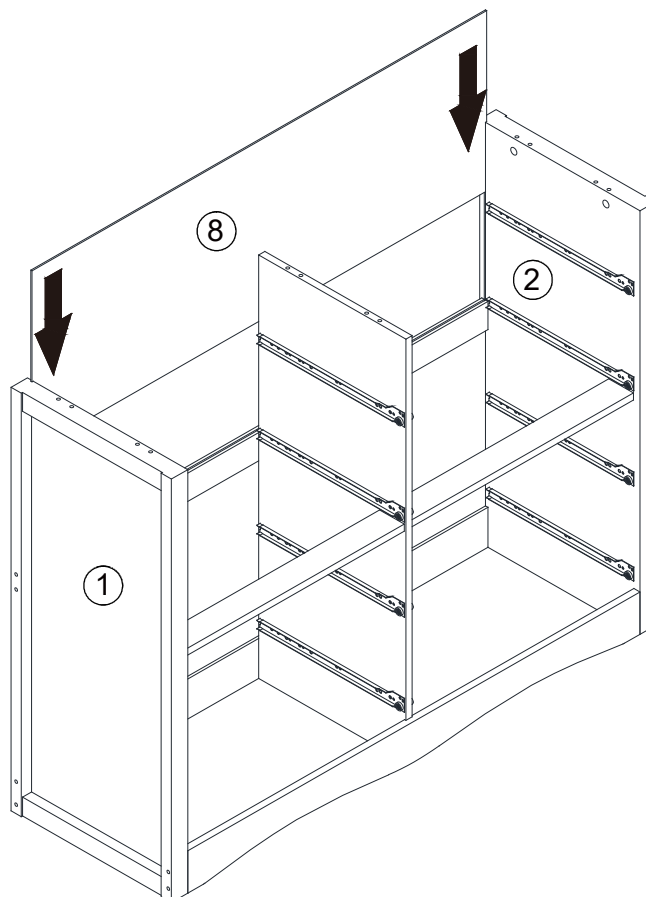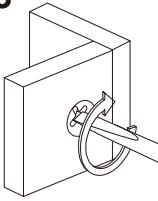

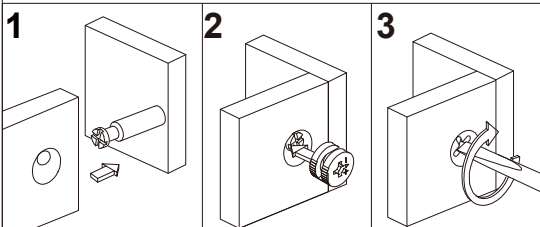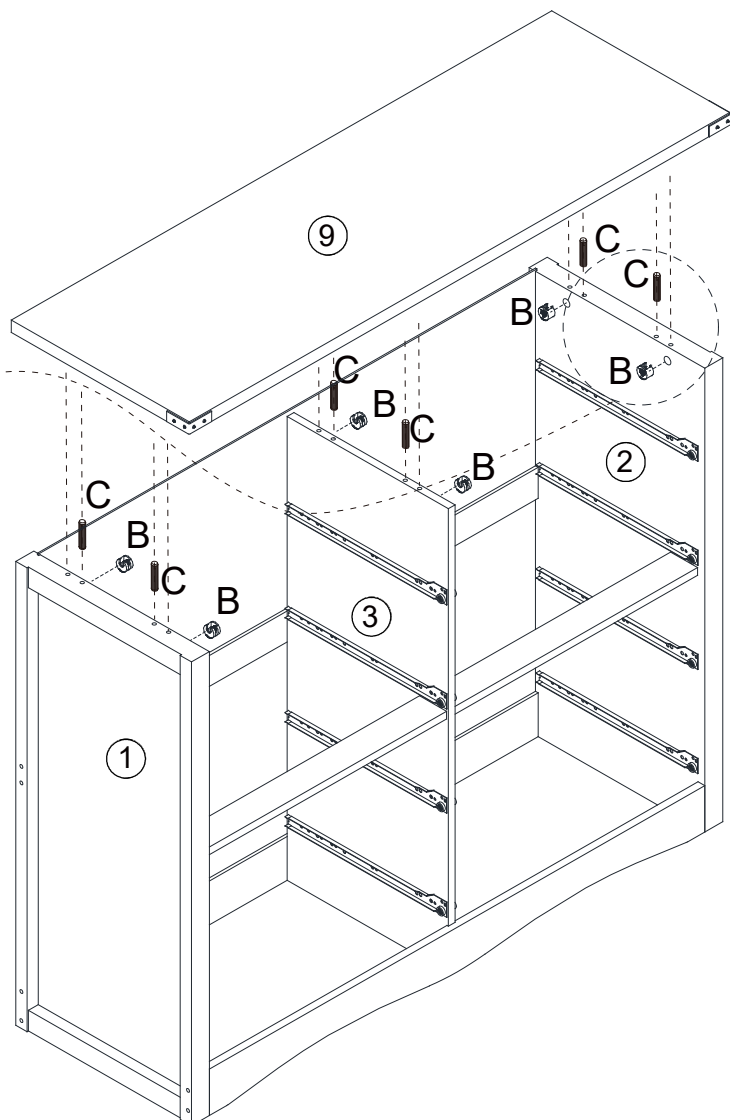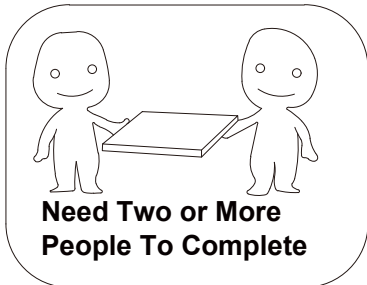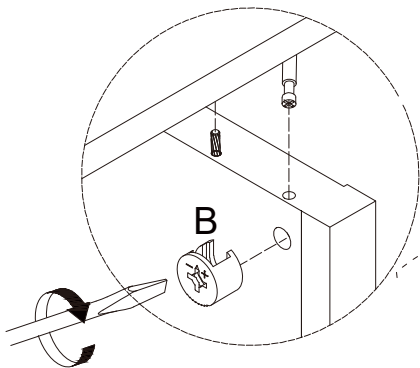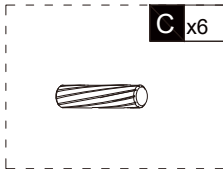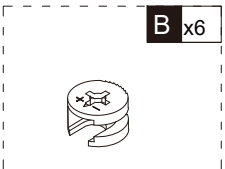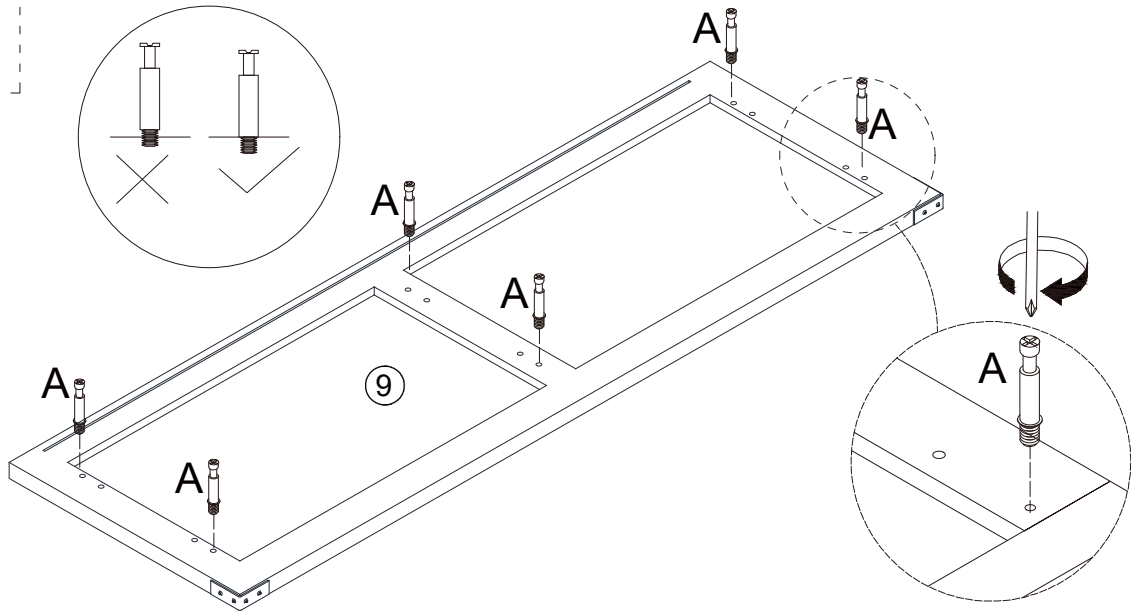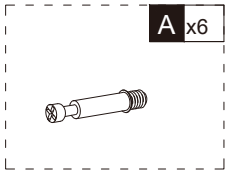


G x10

I x12



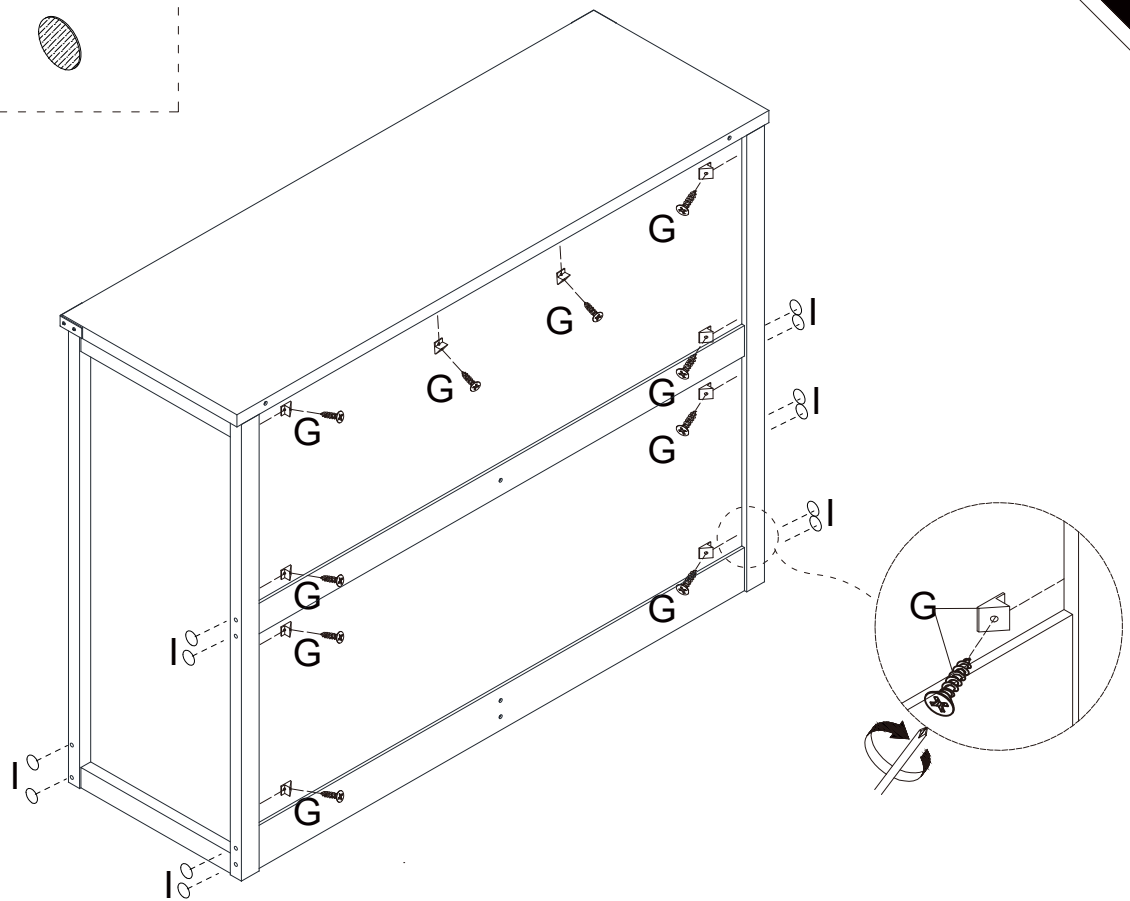


D x20


A x20



x4

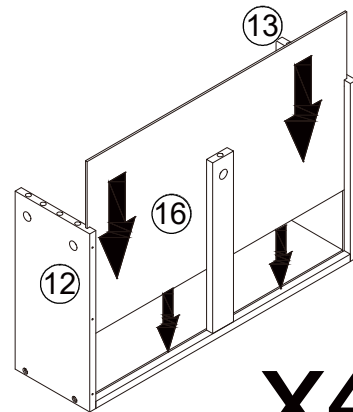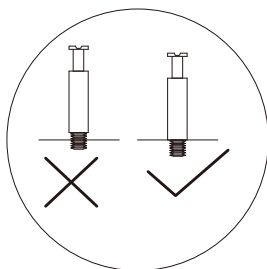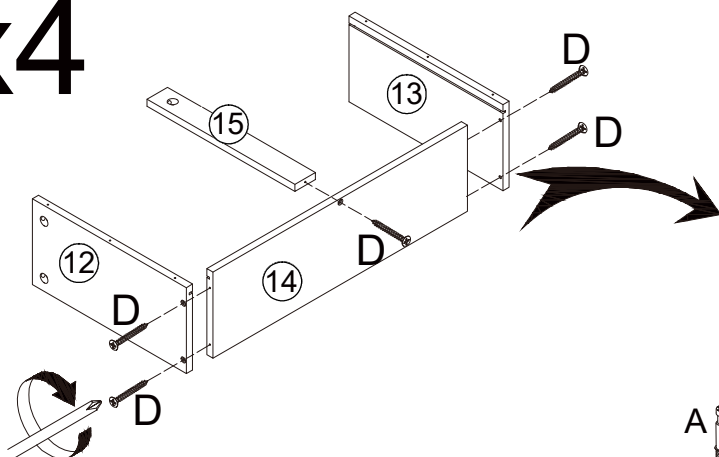


x4

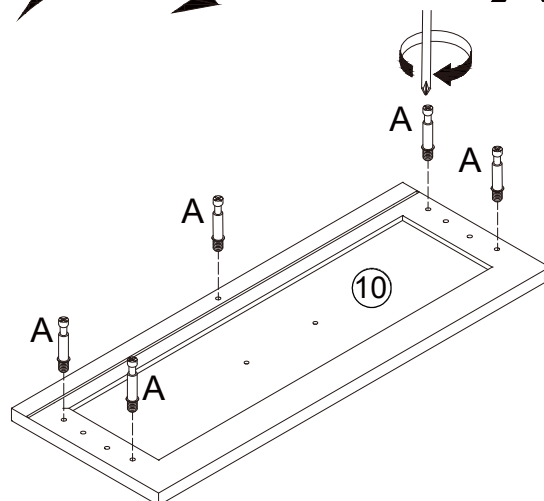



x4

D x20

A x20




x4

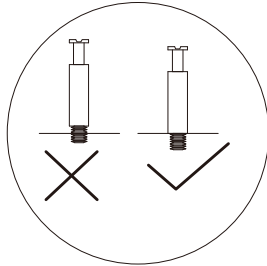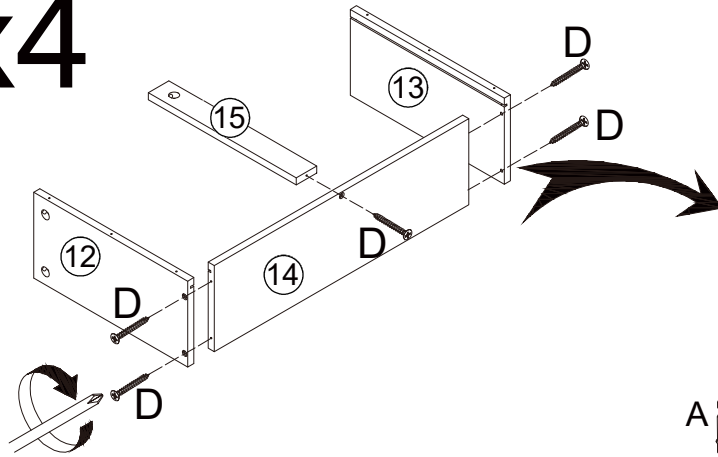


x4

x4

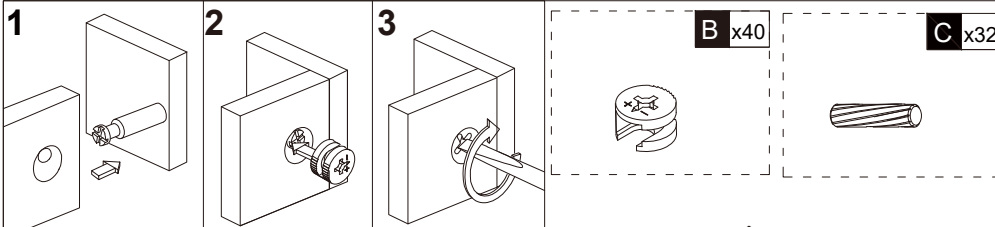


B x40

C x32



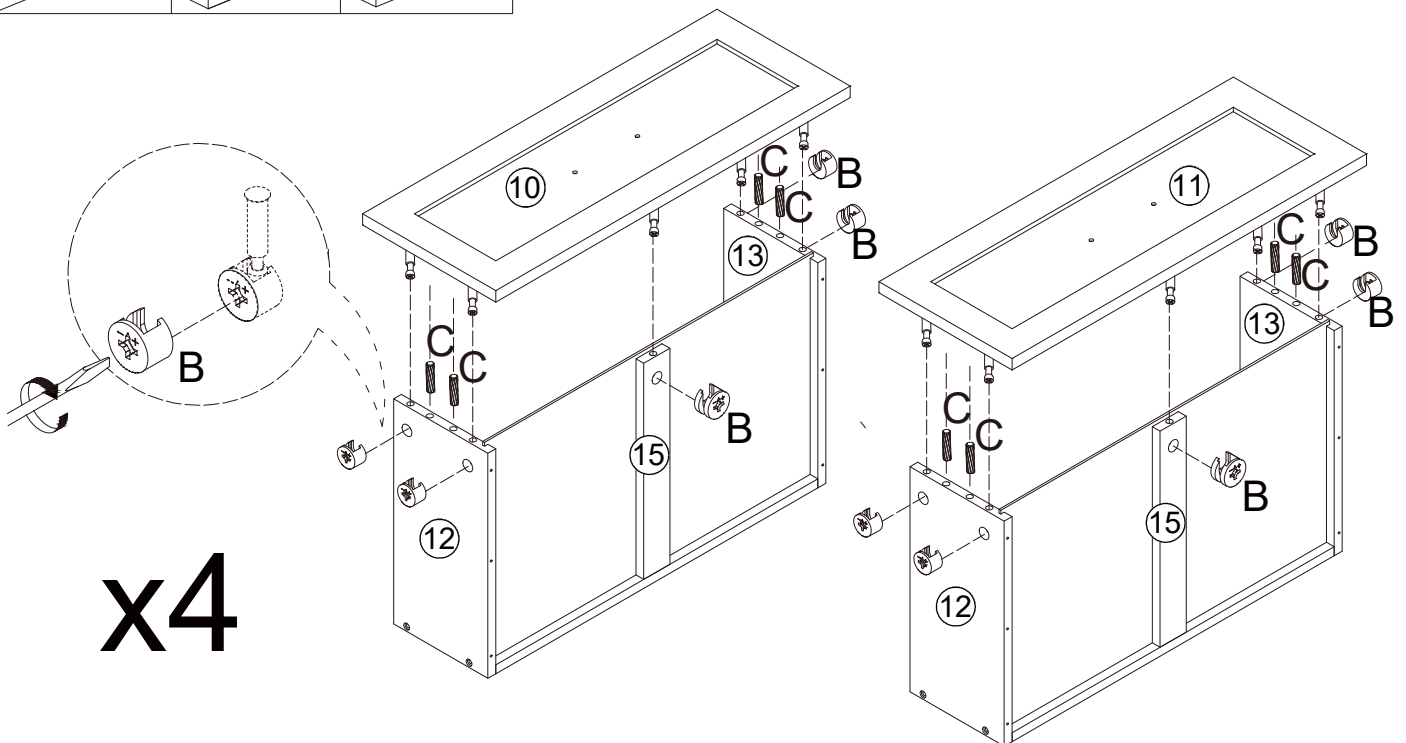


x4

F x8



x4

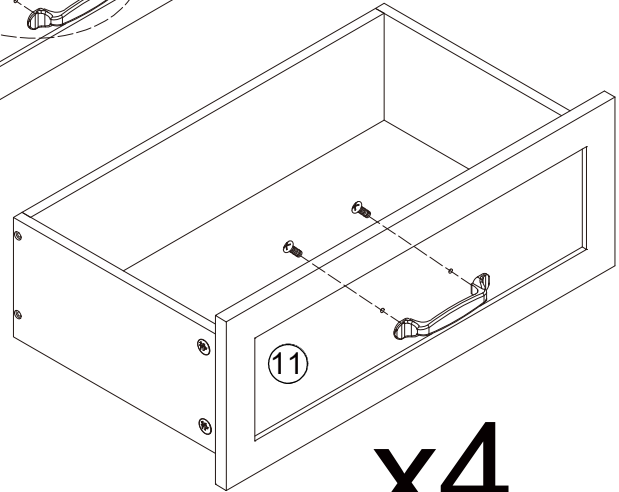
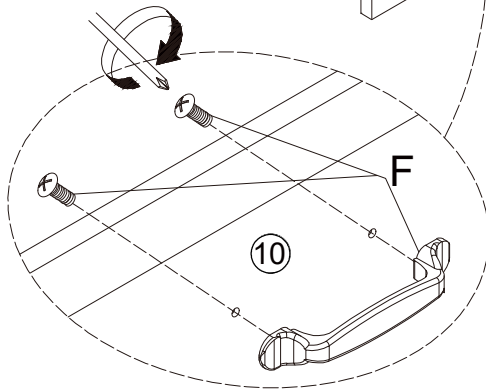
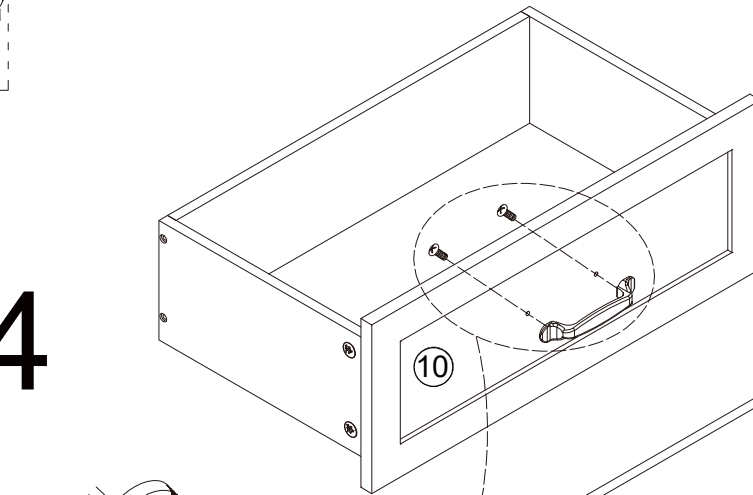


x4



E x48

DL x8

DR x8

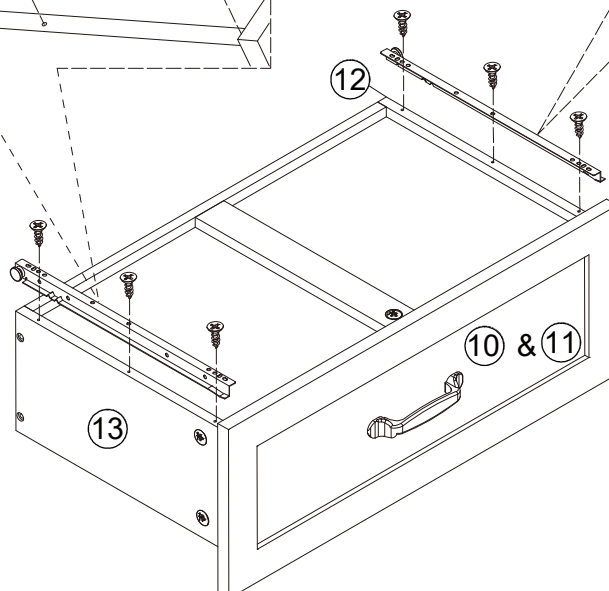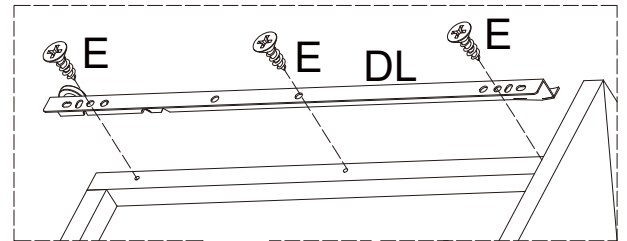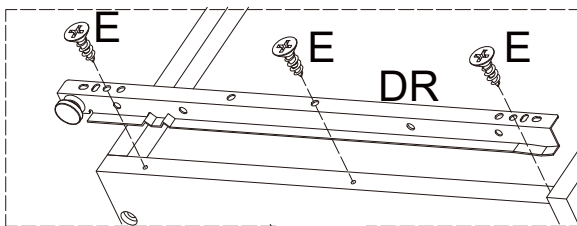

x4

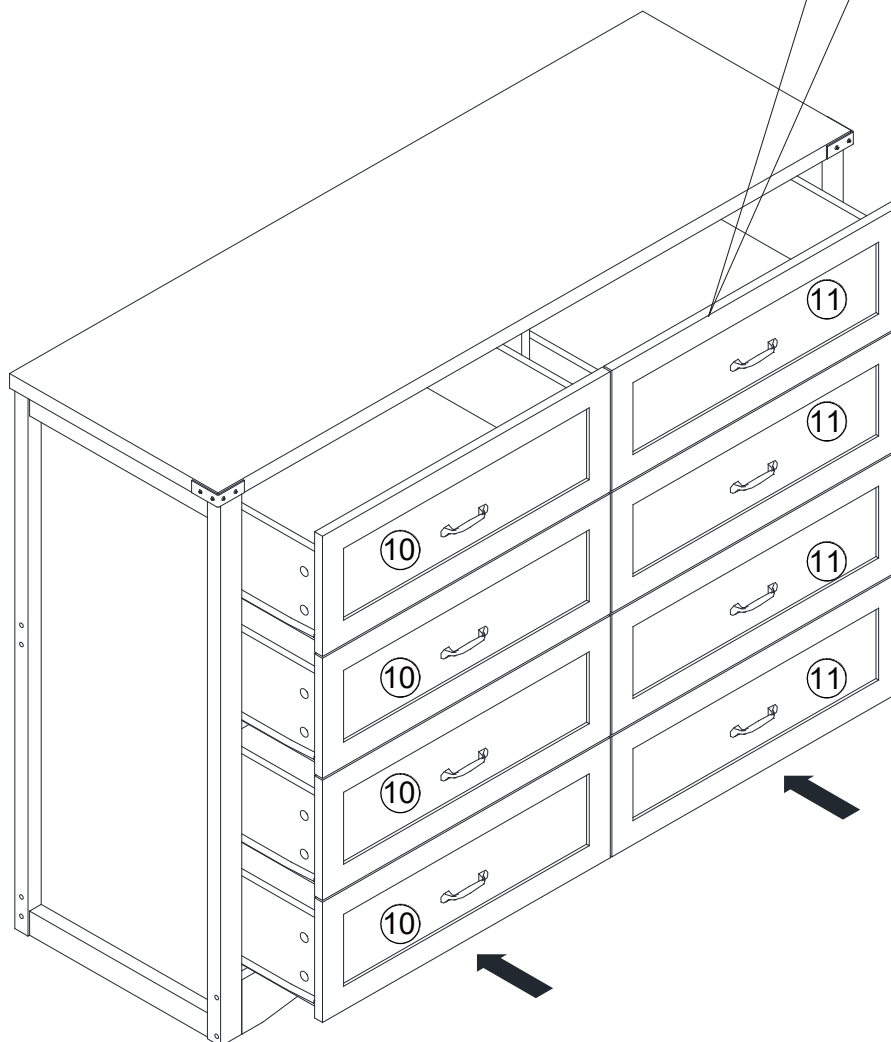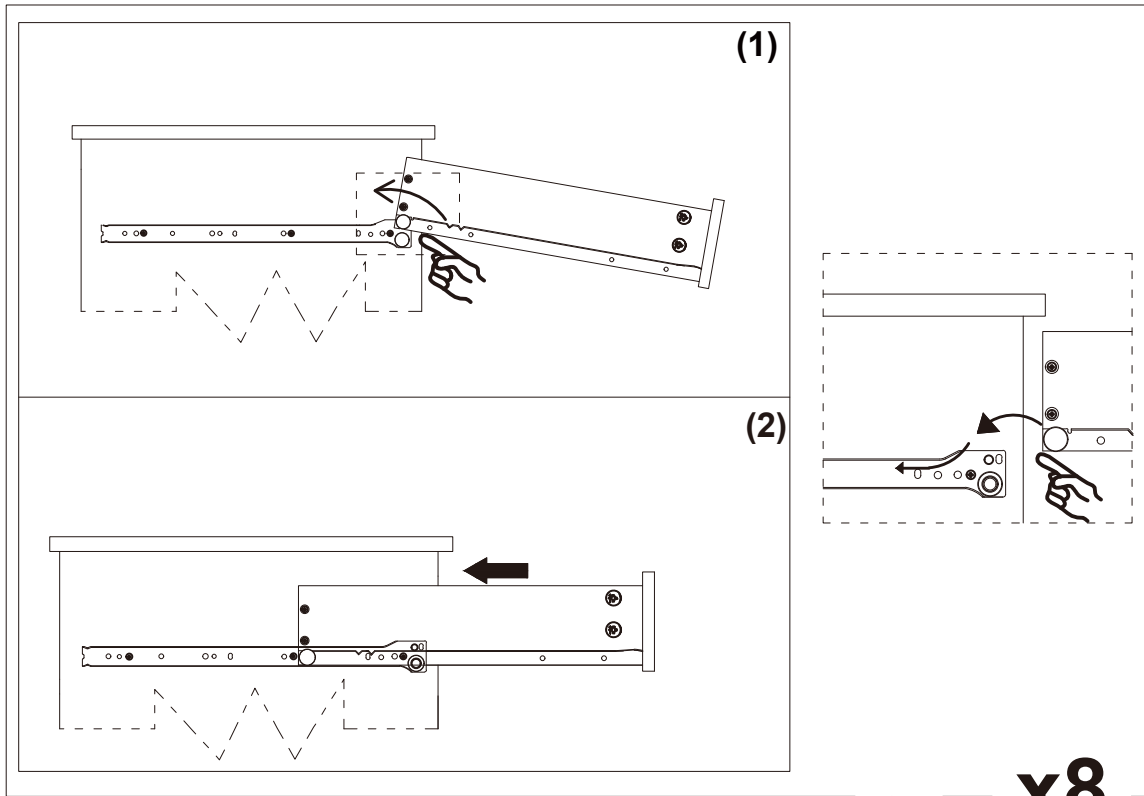

D x2



L x2



K1 x2



K2 x2




K2

K1

(1)x2

First fix the anti-rewind screw in the reserved hole of the product.


WALL

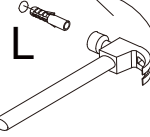

Then, put the expansion bolt into the hole

(4)x2

WALL

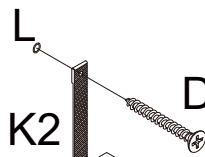

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

(5)x2

WALL


+
drilling hole
Ø6x30mm



(3)x2

Then use a tape drill to make holes in the wall that are suitable for the product screws.

WALL

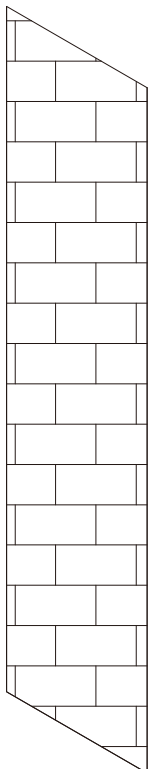

L

K2

D

K2

L

D

