


26" Headboard Assembly Instructions

Parts

- 2 x Wooden Struts (pre attached)
- 4 x M5 Bolts (pre-Attached)




Step1:

Ensure you have all the components and remove the packaging carefully being mindful not to damage the items.


Step 2: Removing / loosen bolts from base

Your existing base should have 2 or 4 Large Bolts, firstly you need to loosen these bolts so you have enough room for the forks to slide in between.

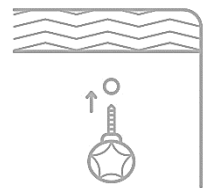


Step 3: attach struts on headboard

The struts will have 1 bolt holding each strut in place you need to remove the other bolt and straighten the struts

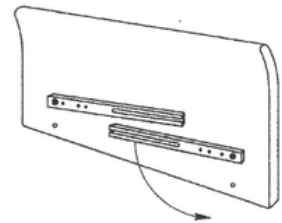


Step 4: attach struts on headboard

Now align the struts and put in the other bolts securing the struts in place do not force the bolt in it is supposed to be screwed in gently.

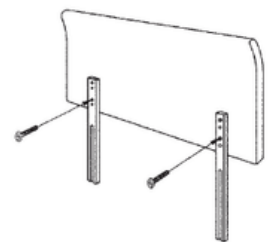

Step 4: Attach headboard to the base

slide the struts down the back of the bed ensuring the bolt is in between the forks on the struts and tighten the bolts on the base securing the headboard to the bed (adjust as per requirement of height). The headboard should be sitting on top of the mattress the provide full support.

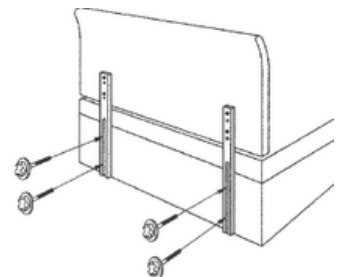

These base bolts and washers are not provided with the headboard and should come with the Bed base.

you have now assembled your Headboard take a step back and Enjoy 😊