


Assembly Instructions

Maveric

BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. Please take the time to read and follow the assembly instructions carefully.

Power Sofa

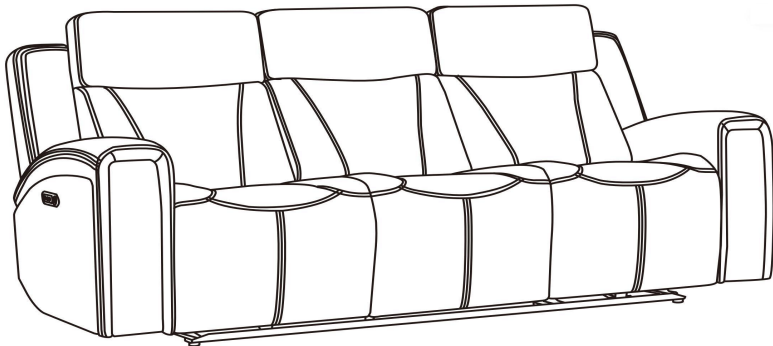


Part List

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

No	Description	Sketch	Qty
A	Seat		1 PC
B	LAF Backrest		1 PC
C	Middle Backrest		1 PC
D	RAF Backrest		1 PC
E	LAF Wing		1 PC
F	RAF Wing		1 PC
G	Wall plug transformer		1 PC


Step 1

There are two wings under the Seat(A). Remove LAF Wing(E) and RAF Wing(F) from under the Seat(A). Meanwhile, untie the wall plug transformer(G) .

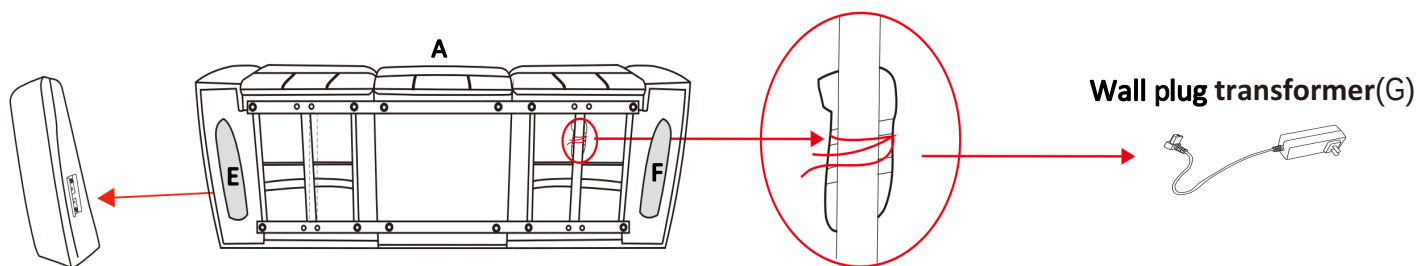


Step 2

1. Install the LAF, middle and RAF backrest (B, C & D) into the Seat(A) by positioning the female metal receiver brackets over the male metal posts. Ensure that female metal receiver brackets on each side of the backrest line up with the seat metal posts. Push down the female brackets over male posts simultaneously until each side is locked into the male metal posts.

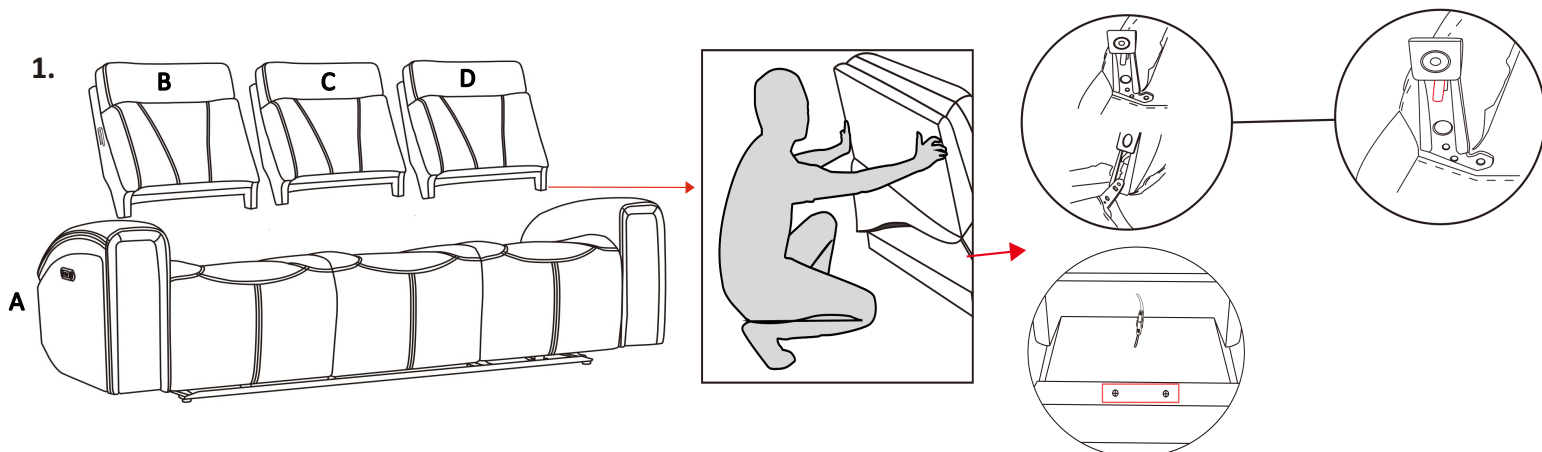


Tip: The two screws at the bottom mark the reserved position for the battery pack.


2. Install the LAF Wing(E) and RAF Wing(F) by sliding wing in a downward motion along the side of the seat back to connect the brackets.

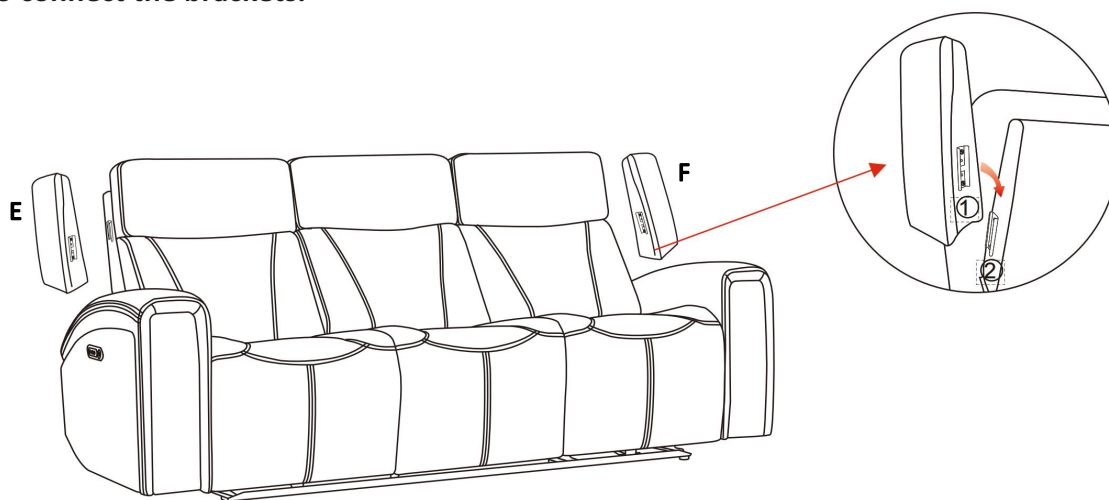

3. Connect the wire firmly as shown in the diagram.

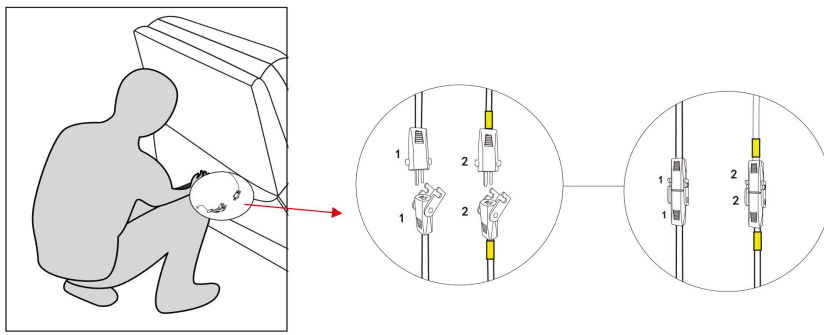


4. Attach the flap to the seat frame by pulling the flap down, and pressing the bottom hem under the seat base, connecting the velcro.

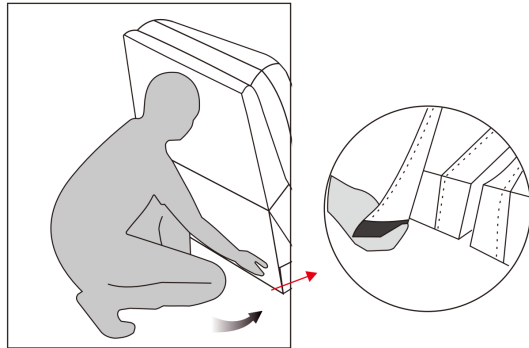

Seat contains 2.0 Density Foam, backrest contains 100% Fiber.

Connection

Connect firmly one end of the wall plug transformer(G) cord into the DC adapter located in the lower back corner of LAF/RAF Recliner and plug the other end into a power outlet/wall socket and enjoy.

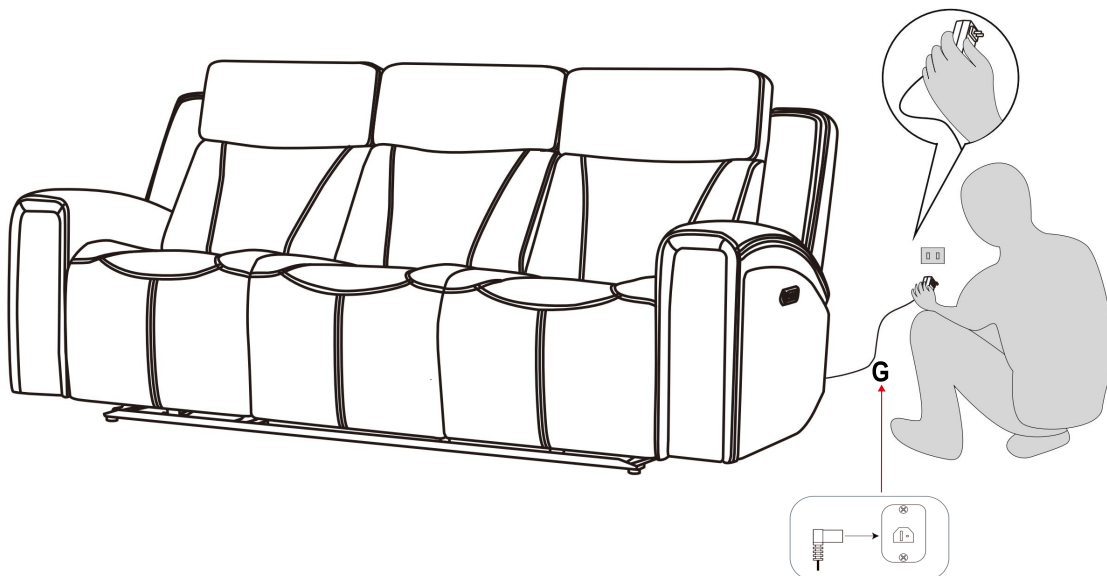

All Return to Home Position

