
LED Upholstered Platform Bed

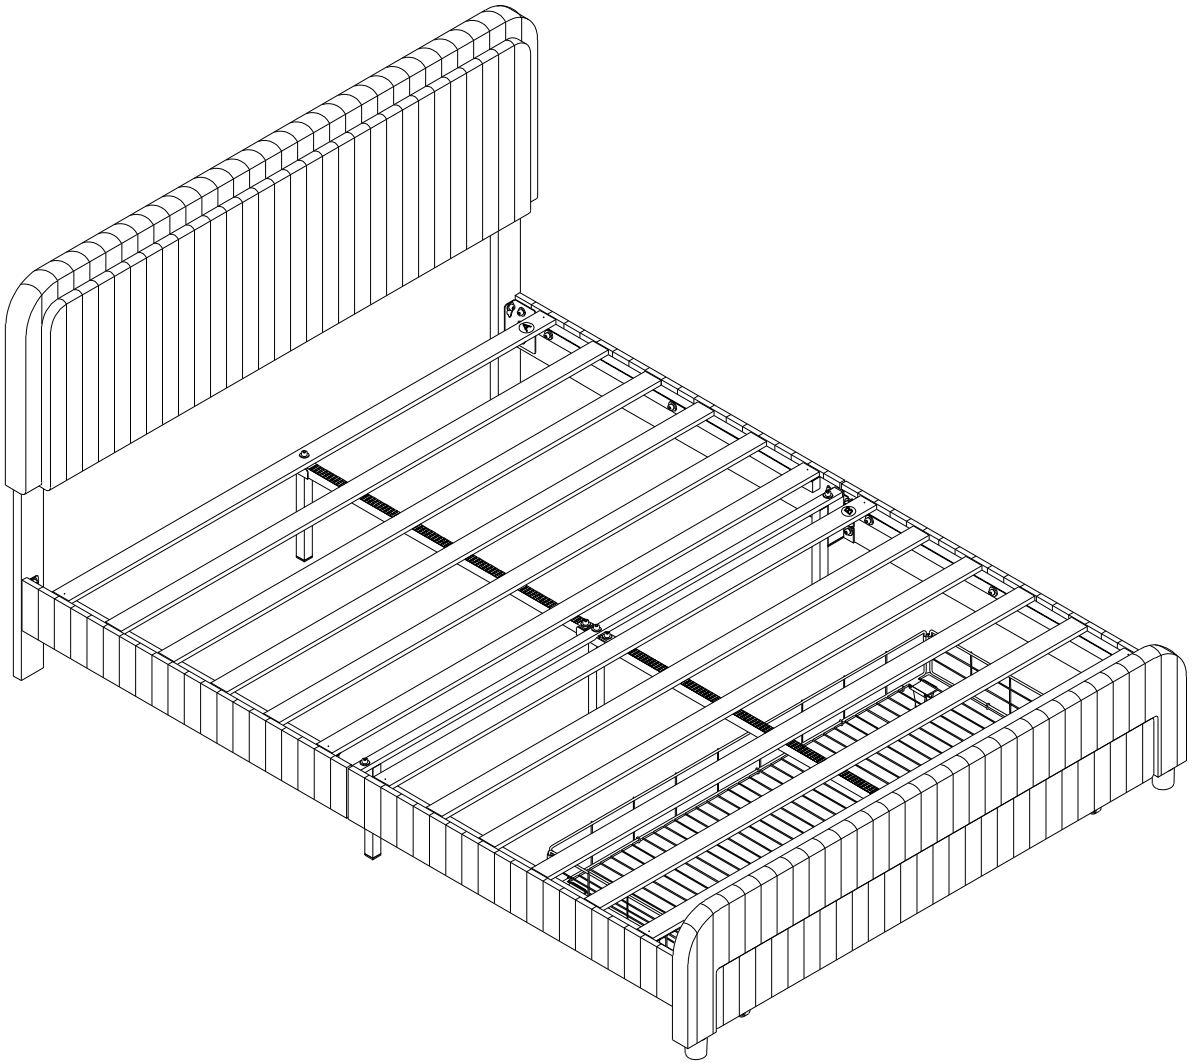

Friendly Customer Service
Satisfaction Guarantees: Any problems with assembly, quality, or return, please feel free to contact us directly.

YF002 Precautions

I. Precautions Upon Receiving the Product

(1) Pre-unpacking inspection: Check whether the outer carton is severely damaged, collapsed, soaked, or punctured. ⚠

If the outer box is severely damaged, please take photos immediately and contact customer service right away.

(2) Accessories List check: Please check the product parts listed on the instruction manual against the actual parts received. Each part has a corresponding label with its number. Please locate all parts before assembling.

(3) Handling abnormal situations: If you find missing parts, incorrect parts, or breakage caused by shipping, please do not return the item on your own. Instead, take photos of the following: outer carton photo + close-up photo of the damaged part + photo of the part number label, and send them to customer service so that we can provide a solution.

II. Materials and Maintenance

(1) Explanation of corduroy pile flattening (normal phenomenon): This product is made of high-quality, wide-wale long-pile corduroy. To ensure safe transportation over long distances, the product has undergone strict packaging at the factory. After unpacking, you may notice localized pile flattening at the folds of the headboard or footboard. Please rest assured that this is a physical phenomenon resulting from long-distance shipping and is not a product quality issue.

Corduroy pile has excellent resilience and can easily be restored to its fluffy texture with simple care.

★ Guide to Restoring Fluffiness (please follow in order):

① Light patting to reset (preferred method):

Use your palm or a soft-bristled brush to gently pat or brush the flattened area in the direction of the pile (usually the vertical direction). The fabric's natural resilience will help the pile stand up quickly.

② Low-temperature steam ironing (for stubborn creases):

If flattening is more severe, it is recommended to use a garment steamer or steam iron (be sure to set it to low temperature/synthetic fiber setting; do not use high heat). Spray steam at a distance of 2–3 cm from the fabric surface. The warm, moist steam will soften the fibers. At the same time, use a soft-bristled brush to comb along the grain until the pile is fully upright.

⚠ Note: Do not allow the iron soleplate to come into direct contact with the fabric, as this may scorch the pile or cause shiny marks.

③ Hairdryer assistance (simple method):

Use a hairdryer on the cool or low-heat setting, blow air onto the flattened area,

and use your fingers to gently comb the pile. This also effectively helps restore the pile.

(2) Fabric cleaning: Use a mild neutral detergent and a damp cloth to wipe stains. Do not soak in water or use bleach or strong solvents for cleaning.

(3) Wooden parts: Avoid direct sunlight to prevent fading and cracking.

(4) Metal parts: Store in a dry environment to prevent rust.

III. Electrical Safety – LED Light Strip

(1) Risk of electric shock: Before cleaning or maintaining the LED light strip, be sure to unplug the power cord. Do not use near water sources or in damp environments (e.g., near humidifiers, water cups).

(2) Power matching: Use only the included power adapter. This product is designed for standard U.S. voltage (120V~). Do not connect to a dimmer switch or use beyond the rated voltage.

(3) No modifications: Do not cut, splice, or modify the LED light strip on your own. If you find damage to the power cord or plug, stop using it immediately.

(4) Power off when not in use for extended periods: When the bed frame is not used for a long time, unplug the LED light strip's power plug.

IV. Assembly and Structural Safety

(1) Maximum load capacity: 1500 lbs.

(2) Slat installation: Ensure all bed slats are evenly loaded and none are left unsupported, to avoid slat breakage. Do not alter, remove, cut off, or reduce the number of slats.

(3) Moving the bed frame: When relocating, lift the entire bed frame as a whole. Do not drag it from one side only, to ensure long-term normal use.

(4) Anti-tip warning – mandatory for bed frames with storage drawers: This bed frame is equipped with storage drawers. Do not stand, climb, or sit on the drawers. Do not place items exceeding the drawer's maximum load limit of 33 lbs.

V. Usage Prohibitions


(1) Do not use a mattress of incorrect size, as it may cause uneven loading on the slat system (compatible mattress size: 60.24 × 79.92″).


(2) Do not use the product in a damp environment for prolonged periods, as metal parts may rust and electrical components may malfunction.

(3) Do not allow children to climb or play on the bed, as this poses a risk of falls and structural damage.


IMPORTANT

Please follow the instruction manuals and use a pad to protect the product during your assembly.

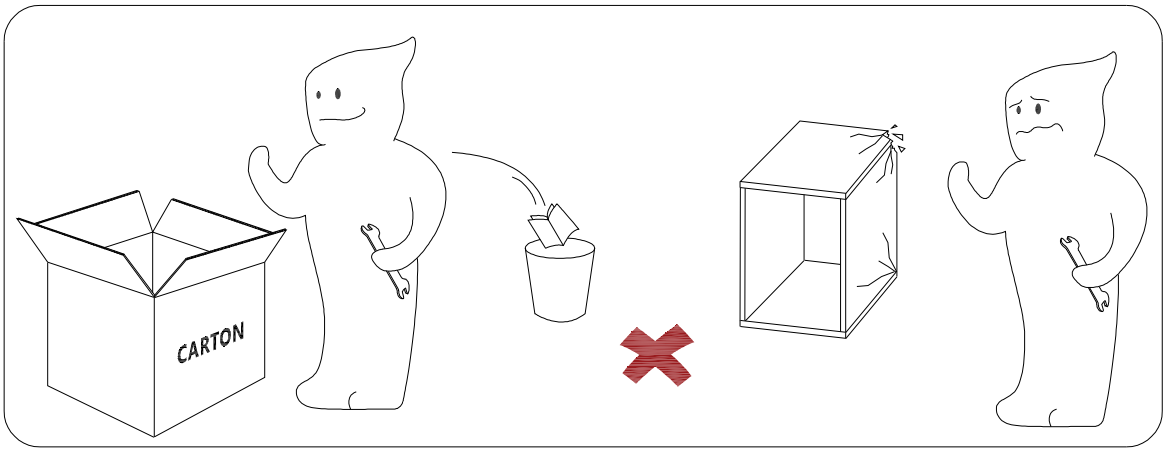


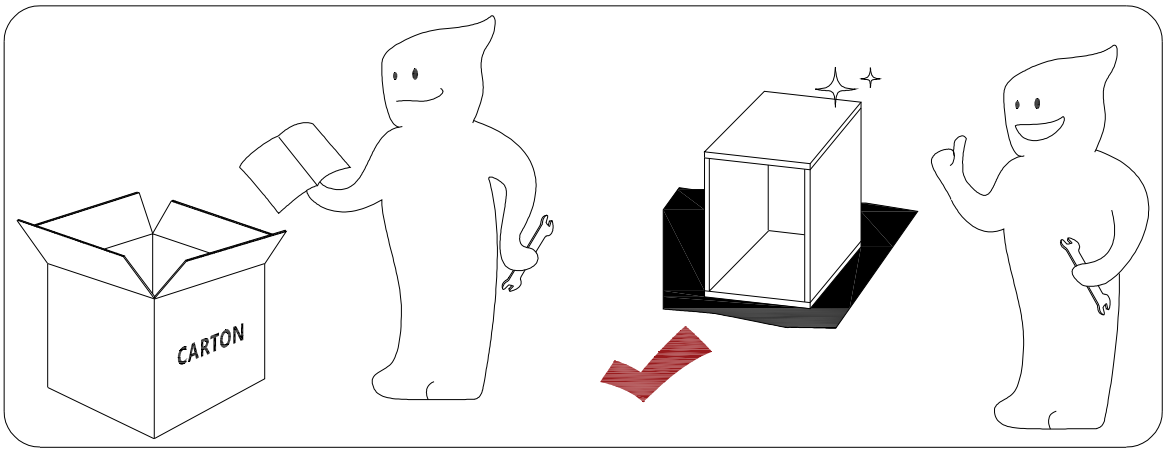













Note:
1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.

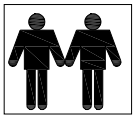












For easier and better assembly, 2 or more adults are required.

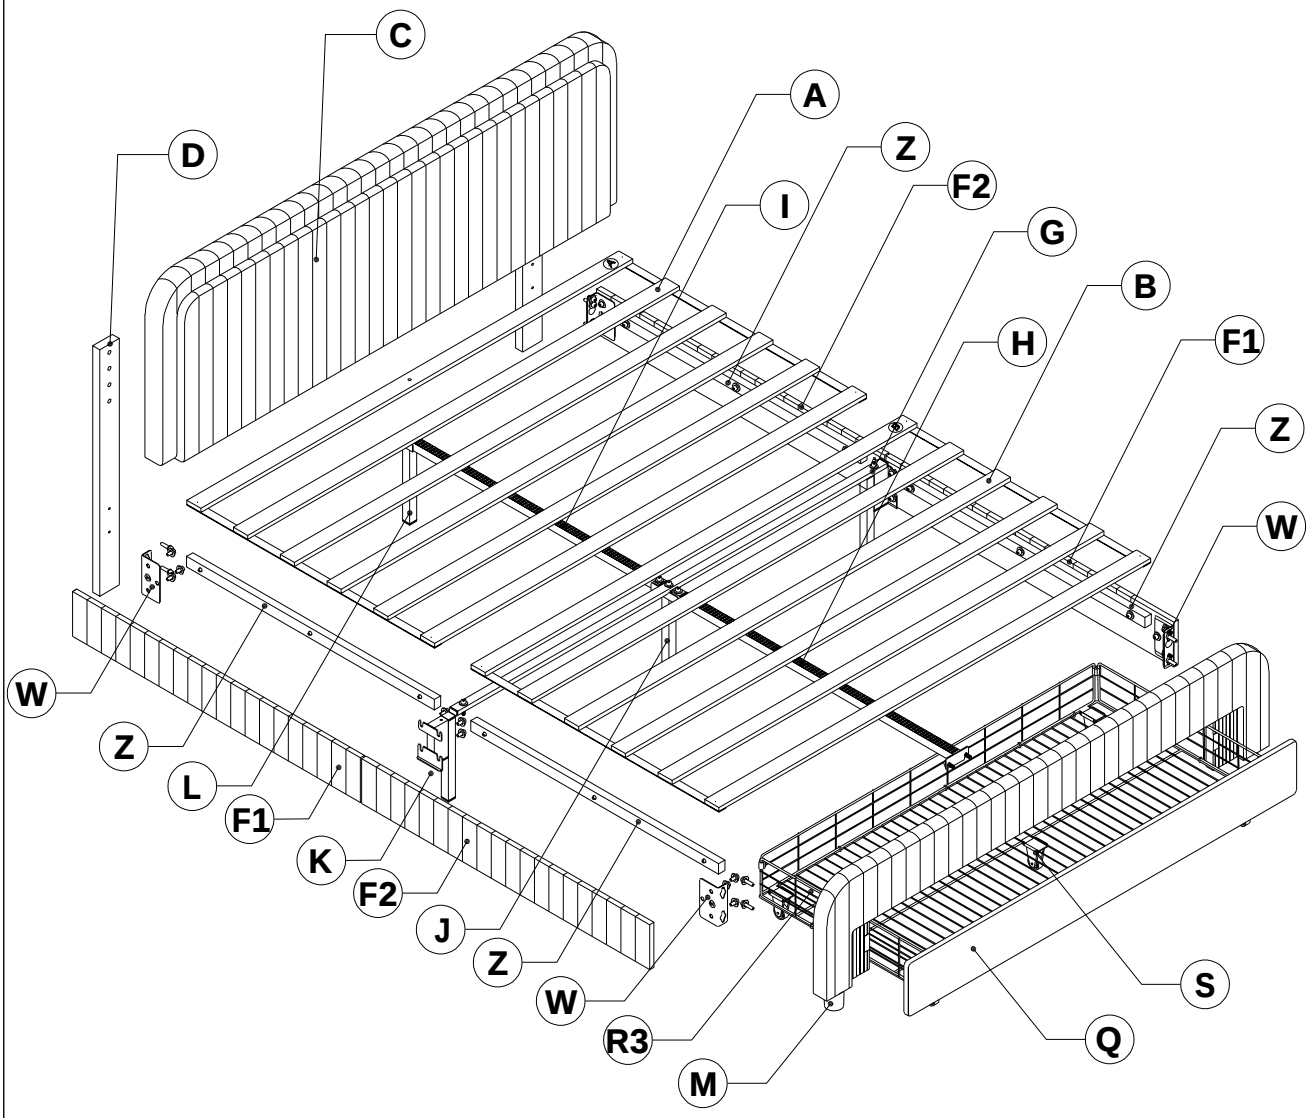
C
D
A
Z
F2
I
G
B
H
F1
Z
W
W
Z
L
F1
K
F2
J
Z
W
R3
M
S
Q


BED FRAME PARTS LIST

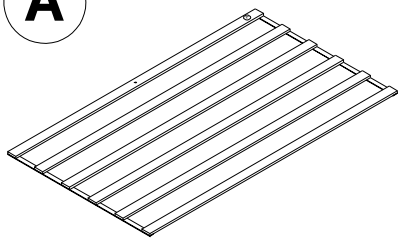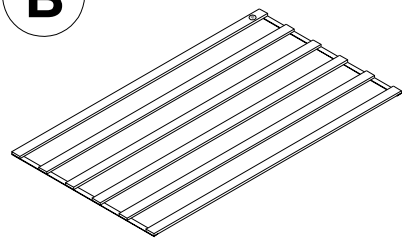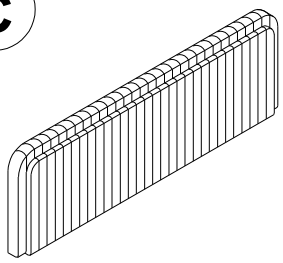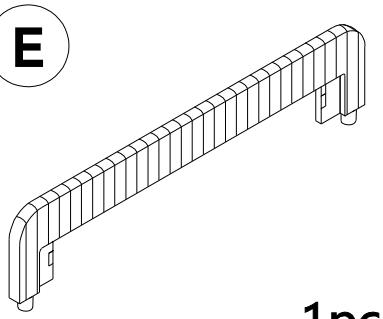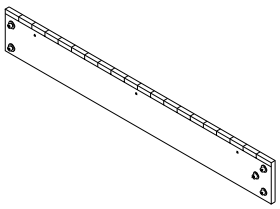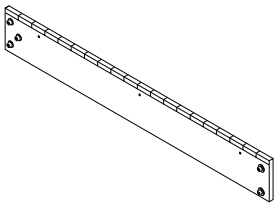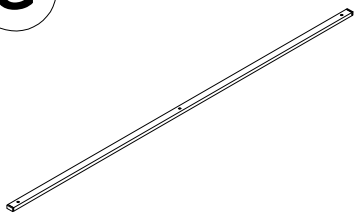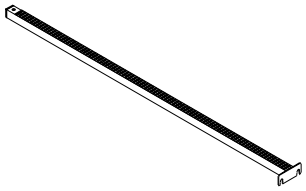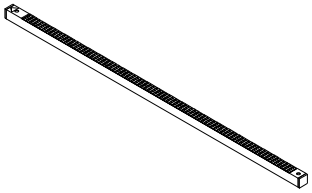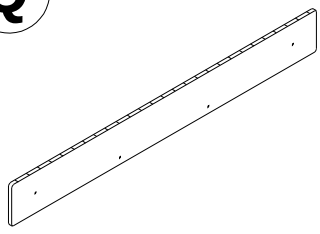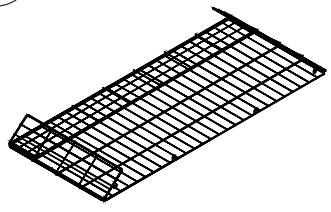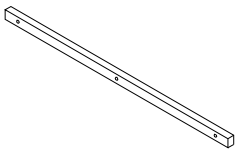A  1pc	B  1pc	C  1pc
D  2pcs	E  1pc	F1  2pcs
F2  2pcs	G  1pc	H  1pc
I  1pc	Q  1pc	R3  1pc
Z  4pcs		


FITTING PARTS LIST

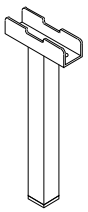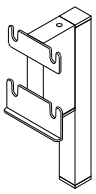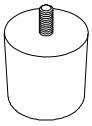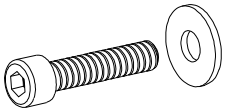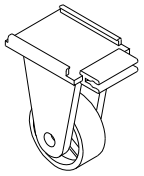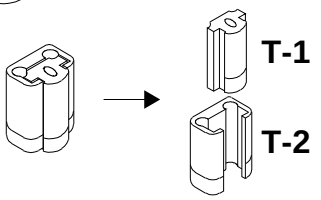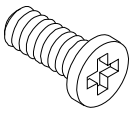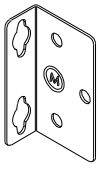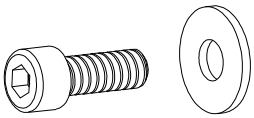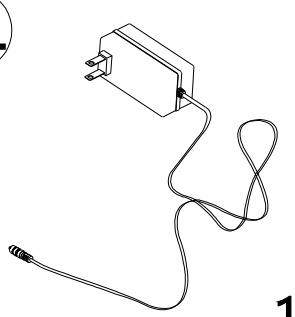J  1pc	**K**  2pcs	**L**  1pc
M  2pcs	**N**  M8 X45mm 10pcs+1pc	**P**  M8 Spanner 1pc
S  5pcs	**T**  2pcs	**V**  M6×15mm 4pcs+1pc
W  4pcs	**Y**  M8 X40mm 12pcs	**X1**  1pc

STEP 1

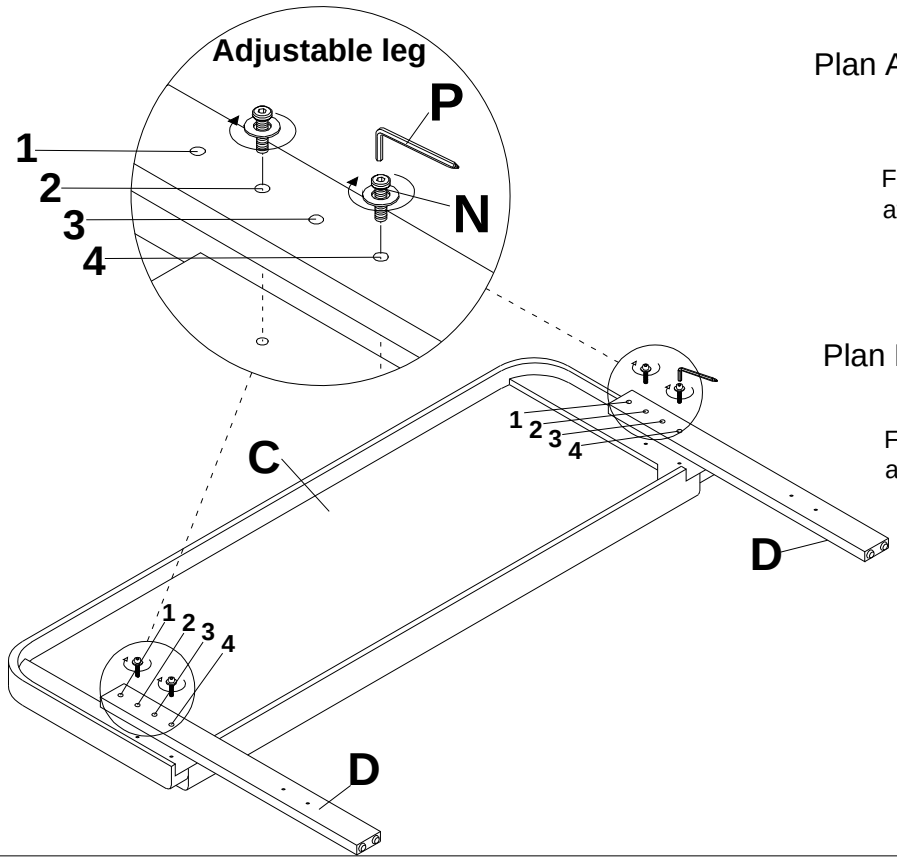


Plan A

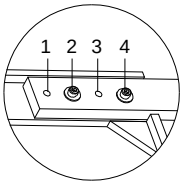

Fits a 10 inch thick mattress when attach screws to Hole 2 & Hole 4.


Plan B

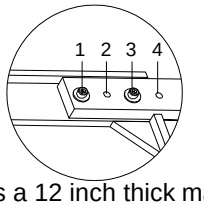

Fits a 12 inch thick mattress when attach screws to Hole 1 & Hole 3.

M8 X45mm	**N x 4pcs**
	P x 1pc

STEP 2

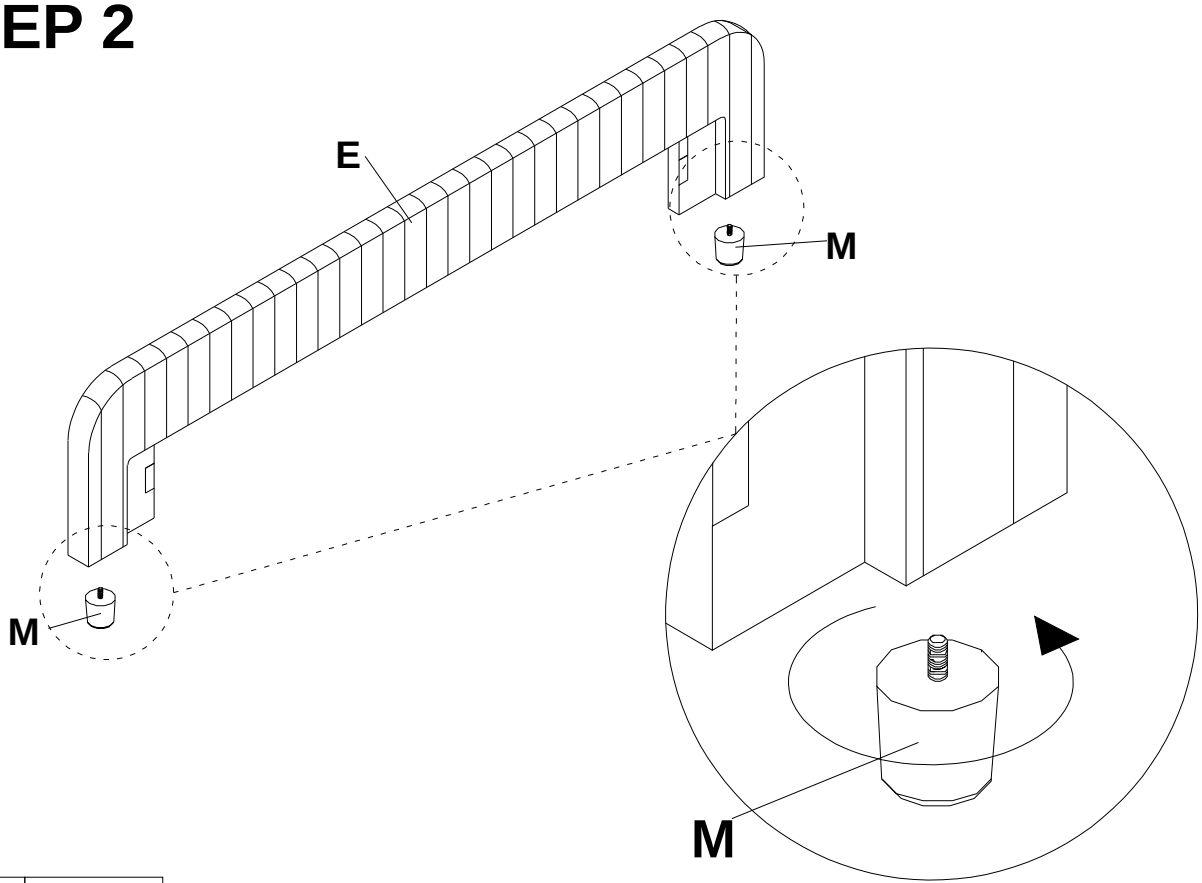


	M x 2PCS

STEP 3

Connect F1 and F2 together with K, and lock the iron frame, there are 2 holes on the inside of the board. Lock W and X on both sides of the board, with 3 holes on each side.

Note: The installation direction is as shown in the picture.

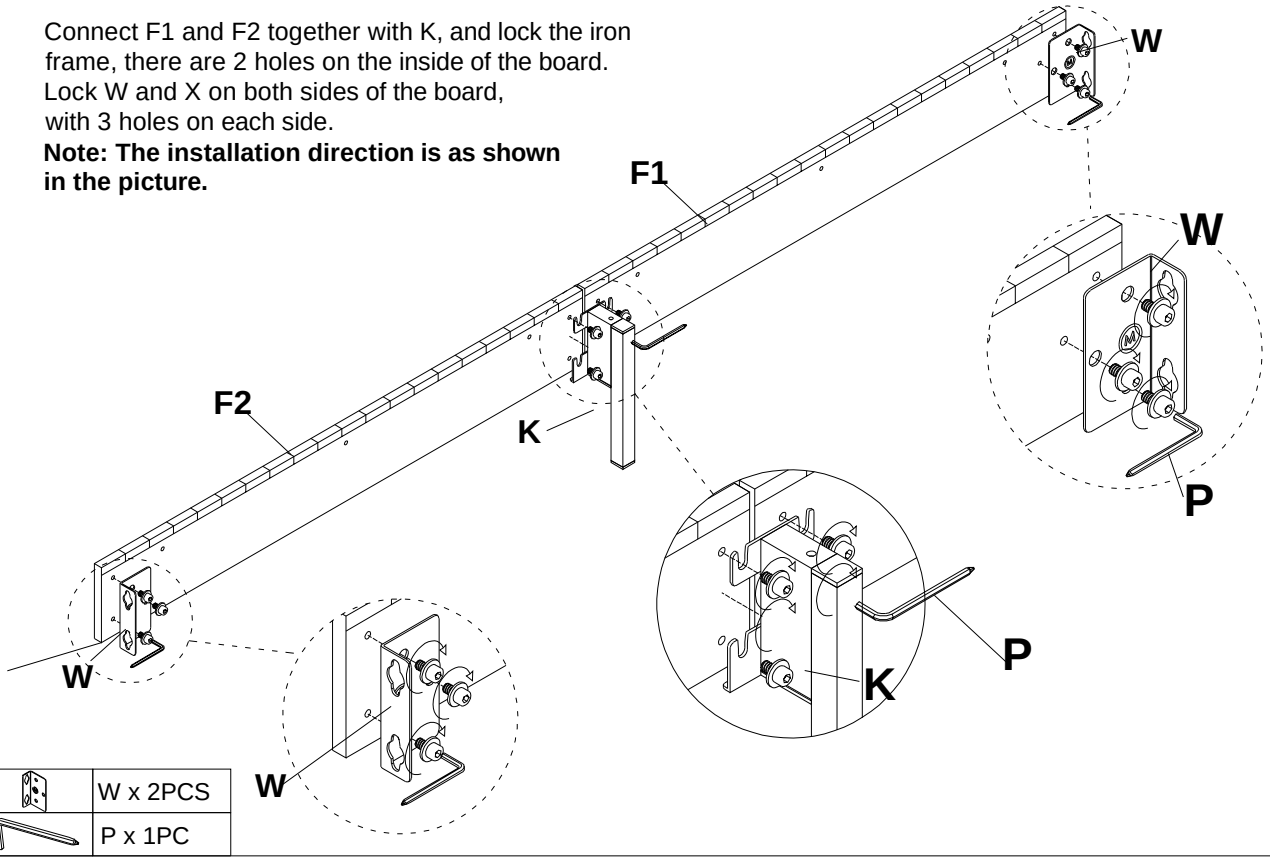


	W x 2PCS
	P x 1PC

STEP 4

Connect F1 and F2 together with K, and lock the iron frame, there are 2 holes on the inside of the board. Lock W and X on both sides of the board, with 3 holes on each side.


Note: The installation direction is as shown in the picture.

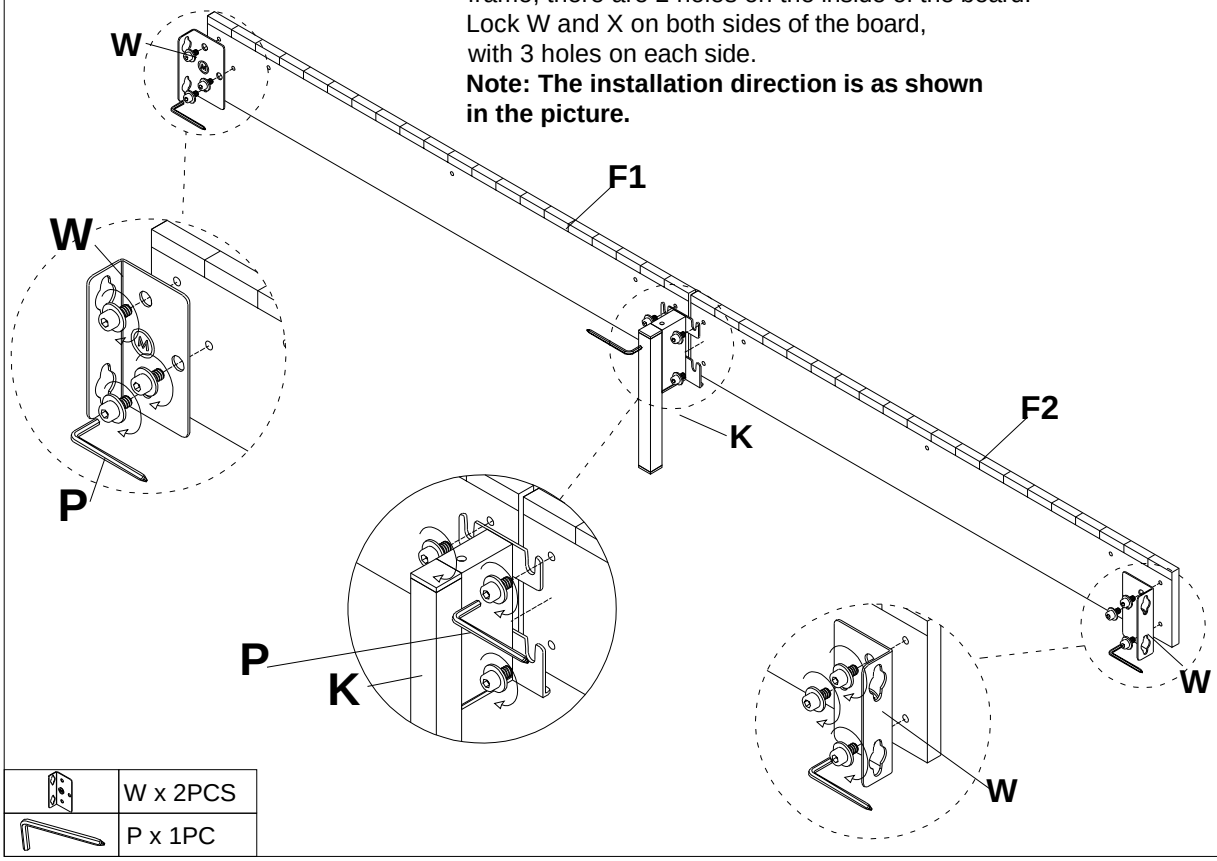

	W x 2PCS
	P x 1PC

STEP 5


Noted that the red arrow is pointing towards the front.

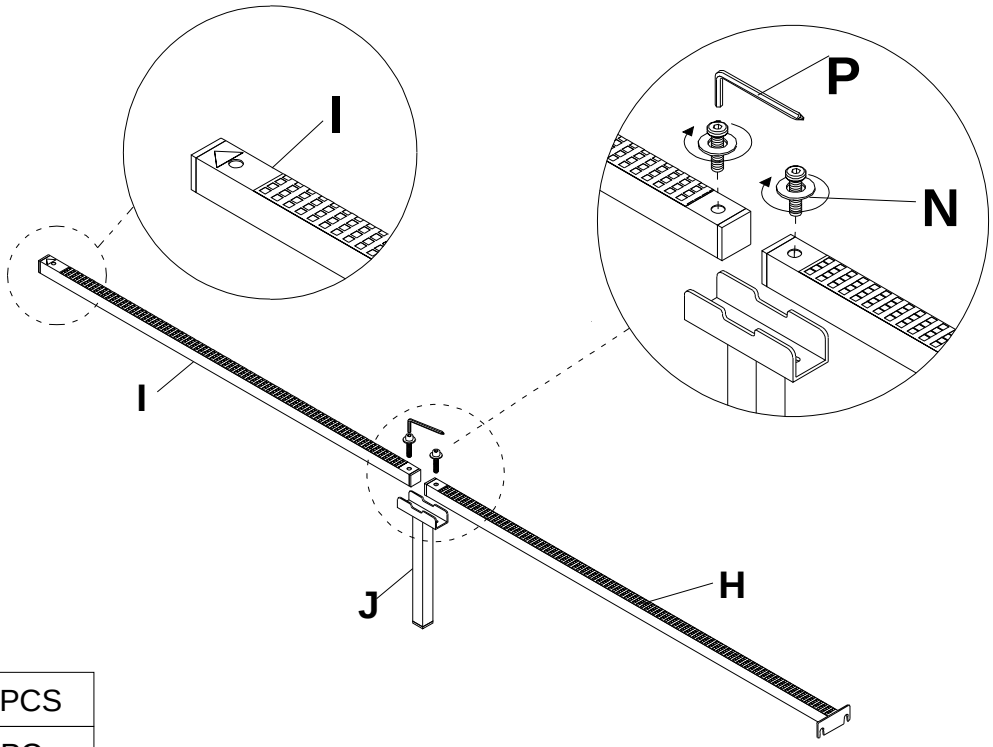

 M8 X45mm	N x 2PCS
	P x 1PC

STEP 6


Loosen the screws on the side legs of the headboard and footboard, hang the brackets, and tighten the inner screws.

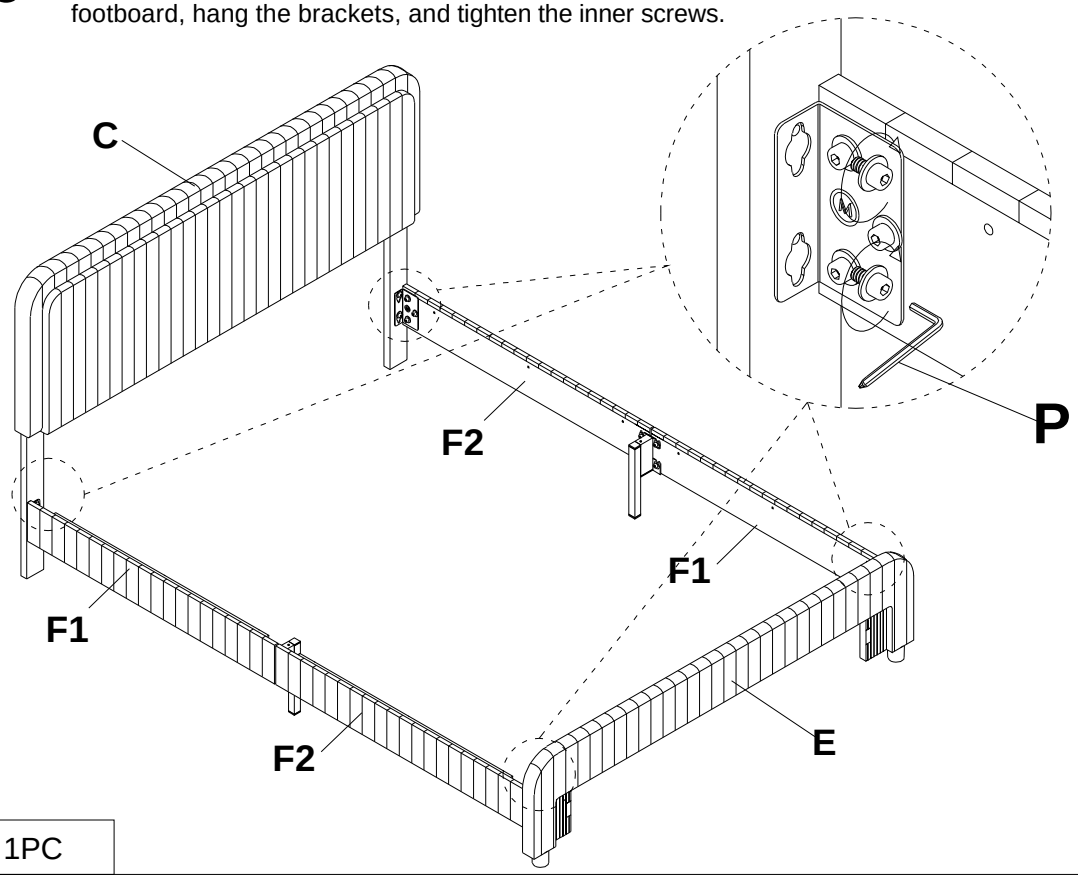

	P x 1PC


STEP 7

Loosen the screw in the middle of the footboard, hang the bracket, and tighten the inner screw.

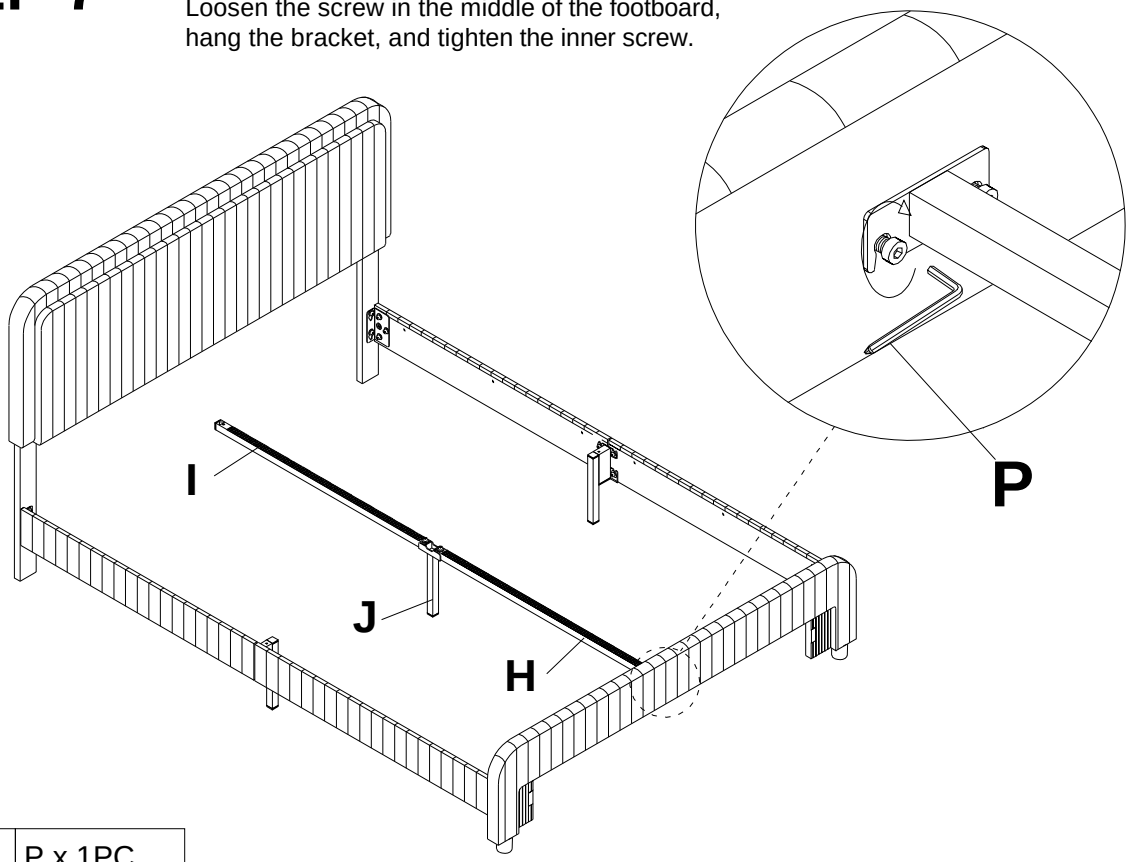


	P x 1PC



STEP 8

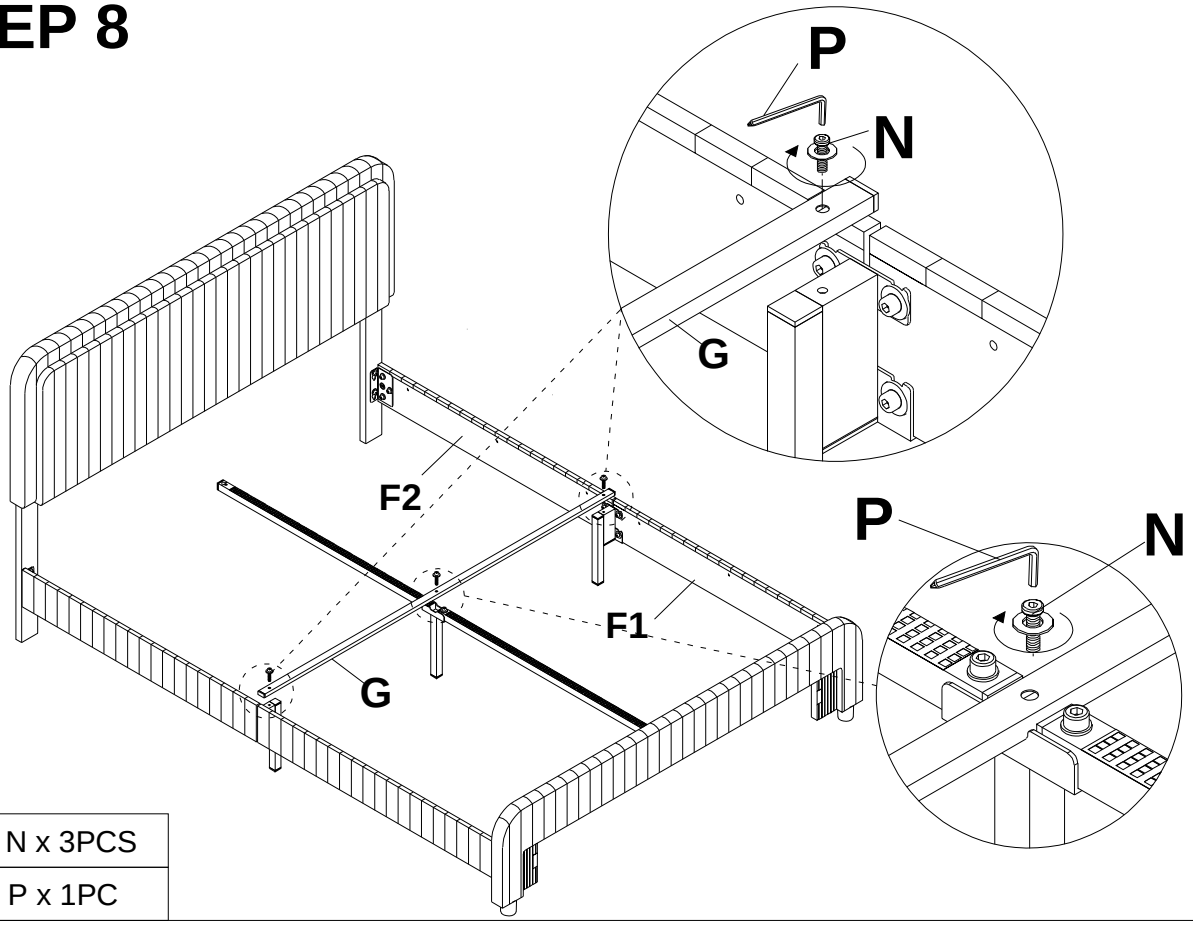


M8 X45mm	N x 3PCS
	P x 1PC

STEP 9

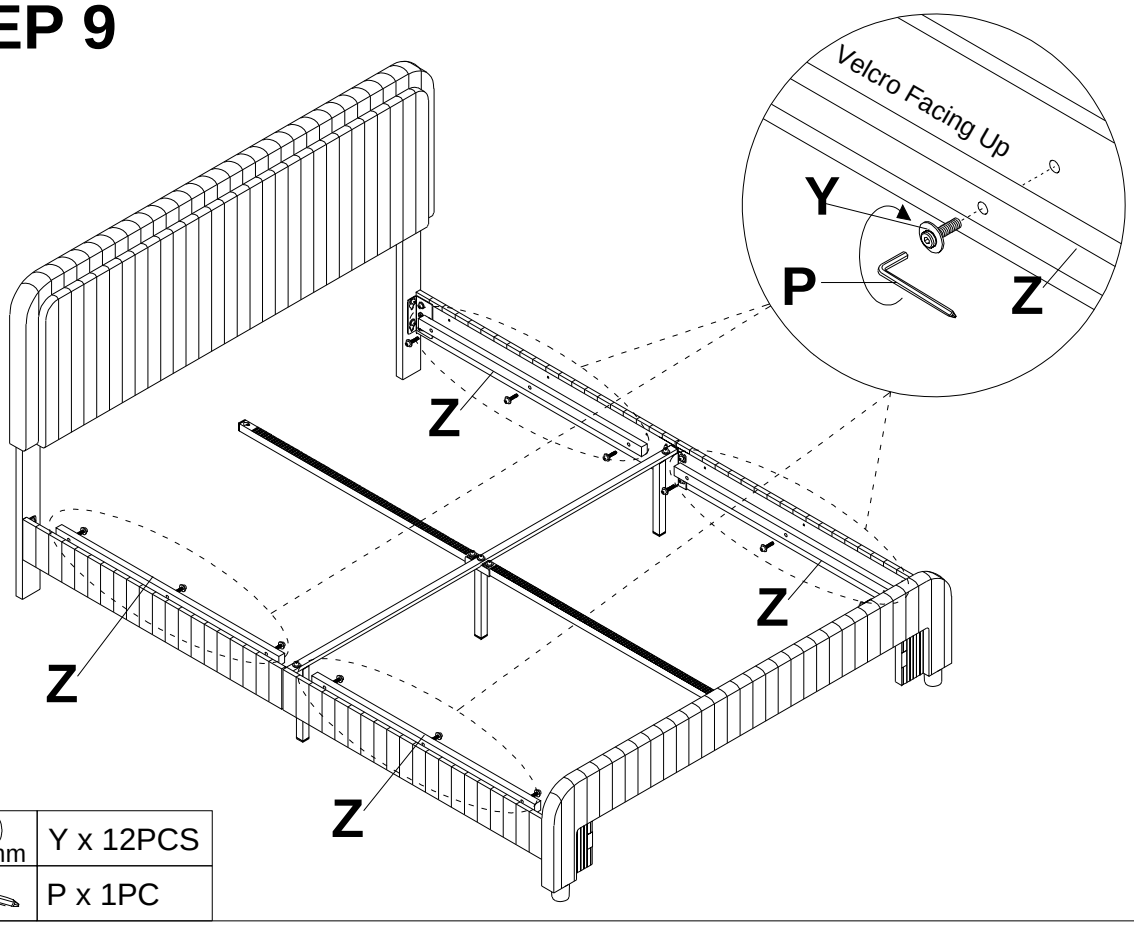


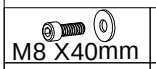 M8 X40mm	Y x 12PCS
	P x 1PC

STEP 10

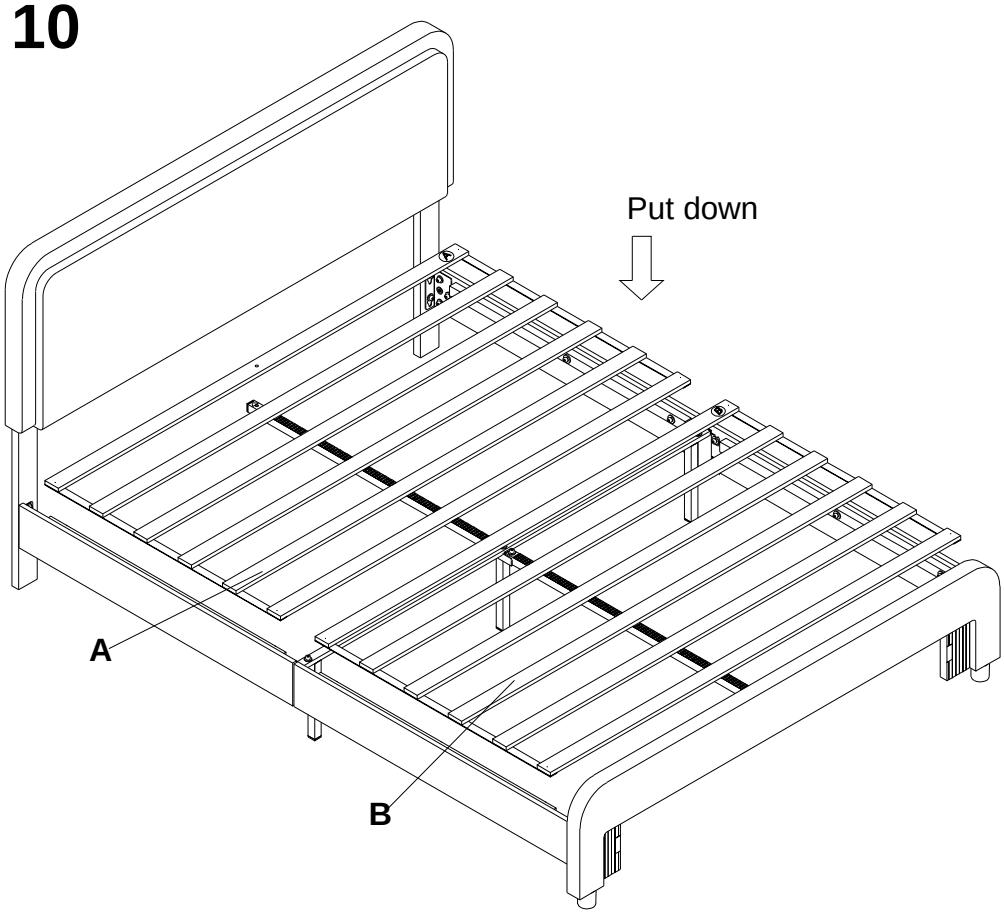


STEP 11

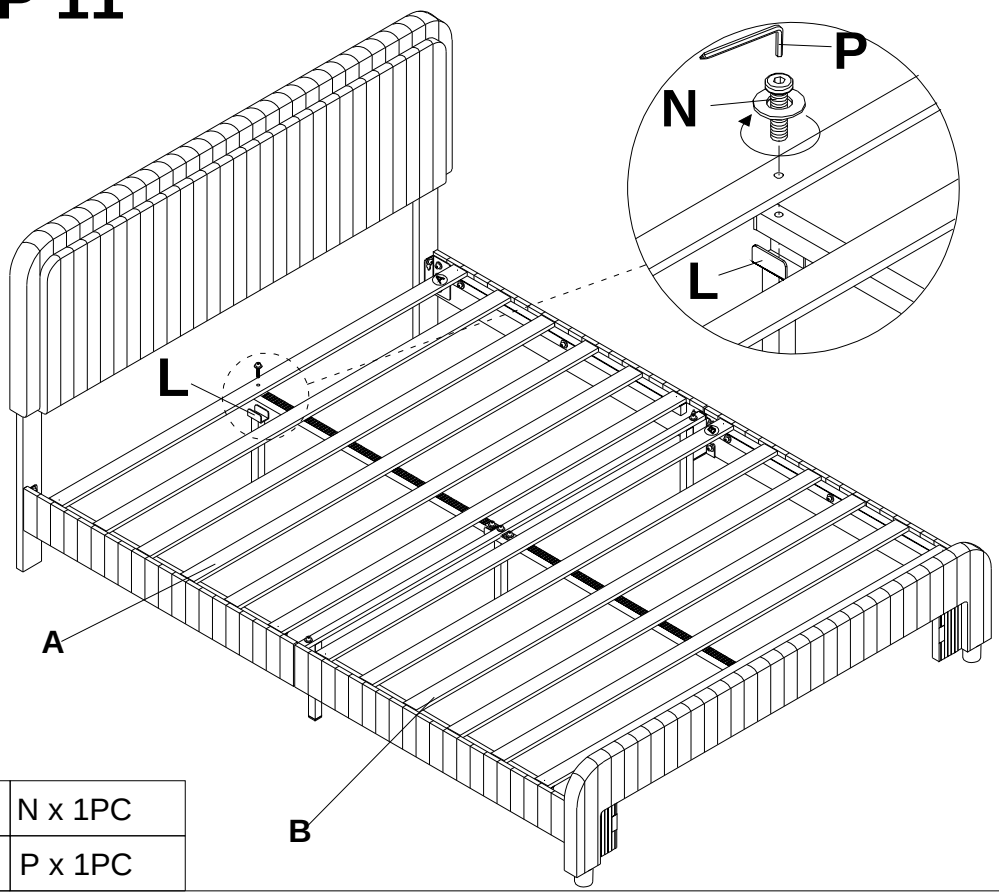


M8 X45mm	N x 1PC
	P x 1PC

STEP 12

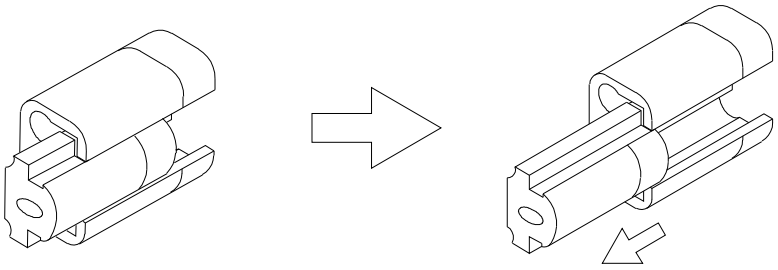


You can pull the buckle out by following the direction indicated by the arrow

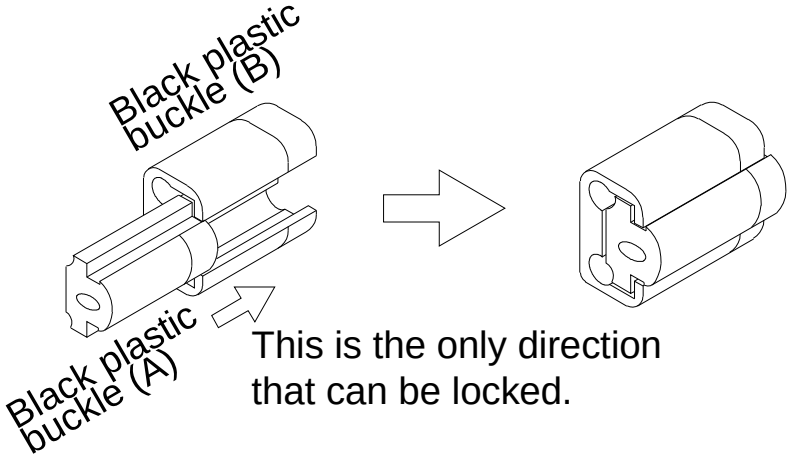

This is the only direction that can be locked.


STEP 13


Unfold the drawer sides

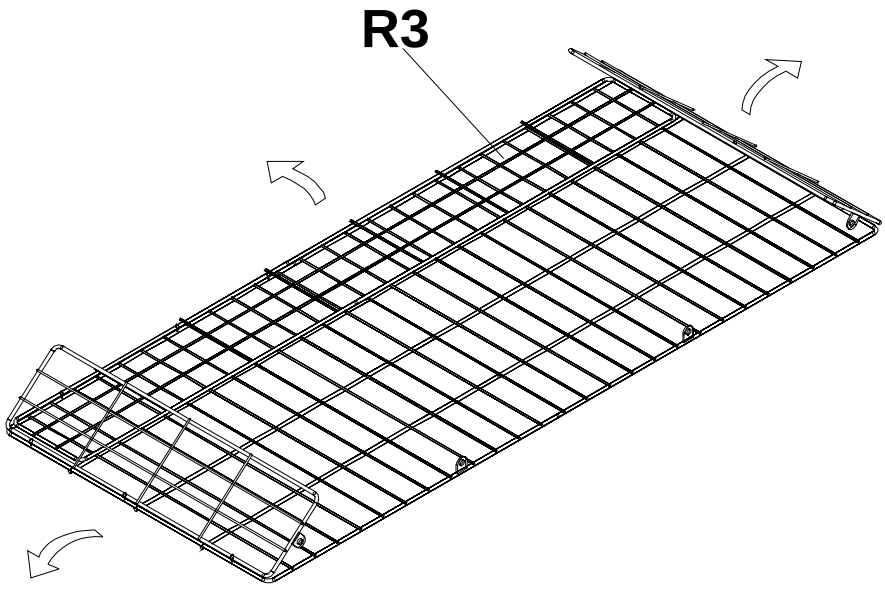

STEP 14


Use T to keep drawer sides in place

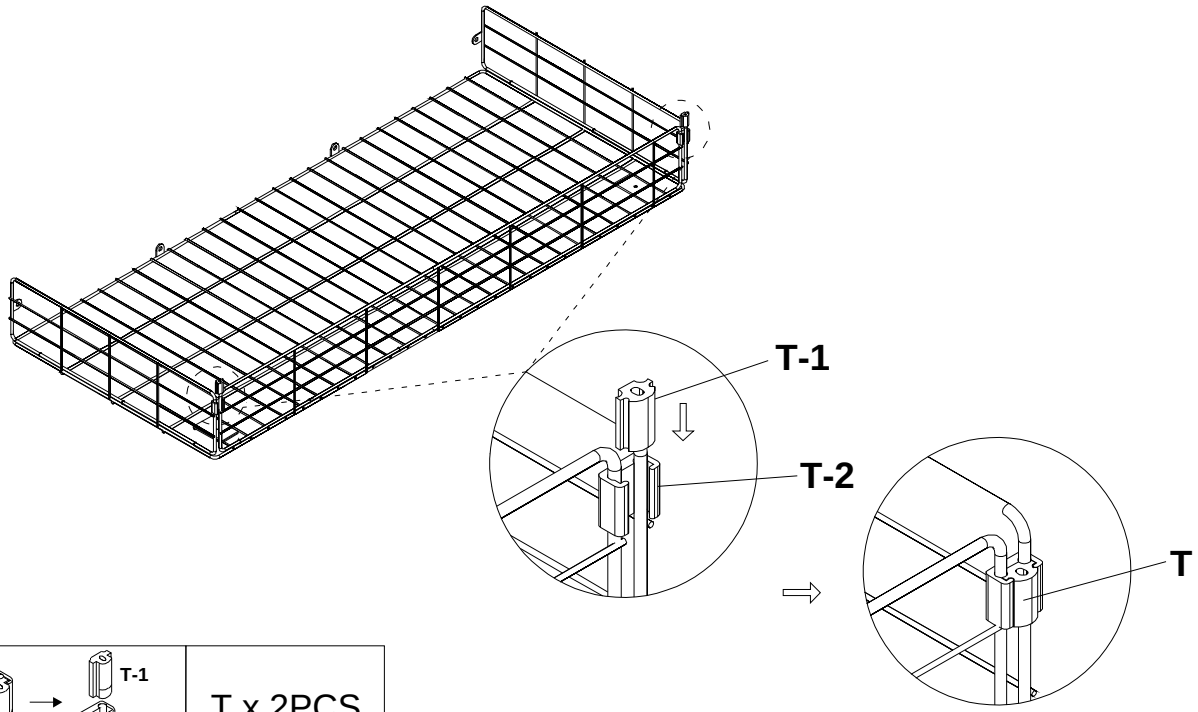

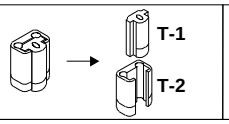

T x 2PCS


STEP 15

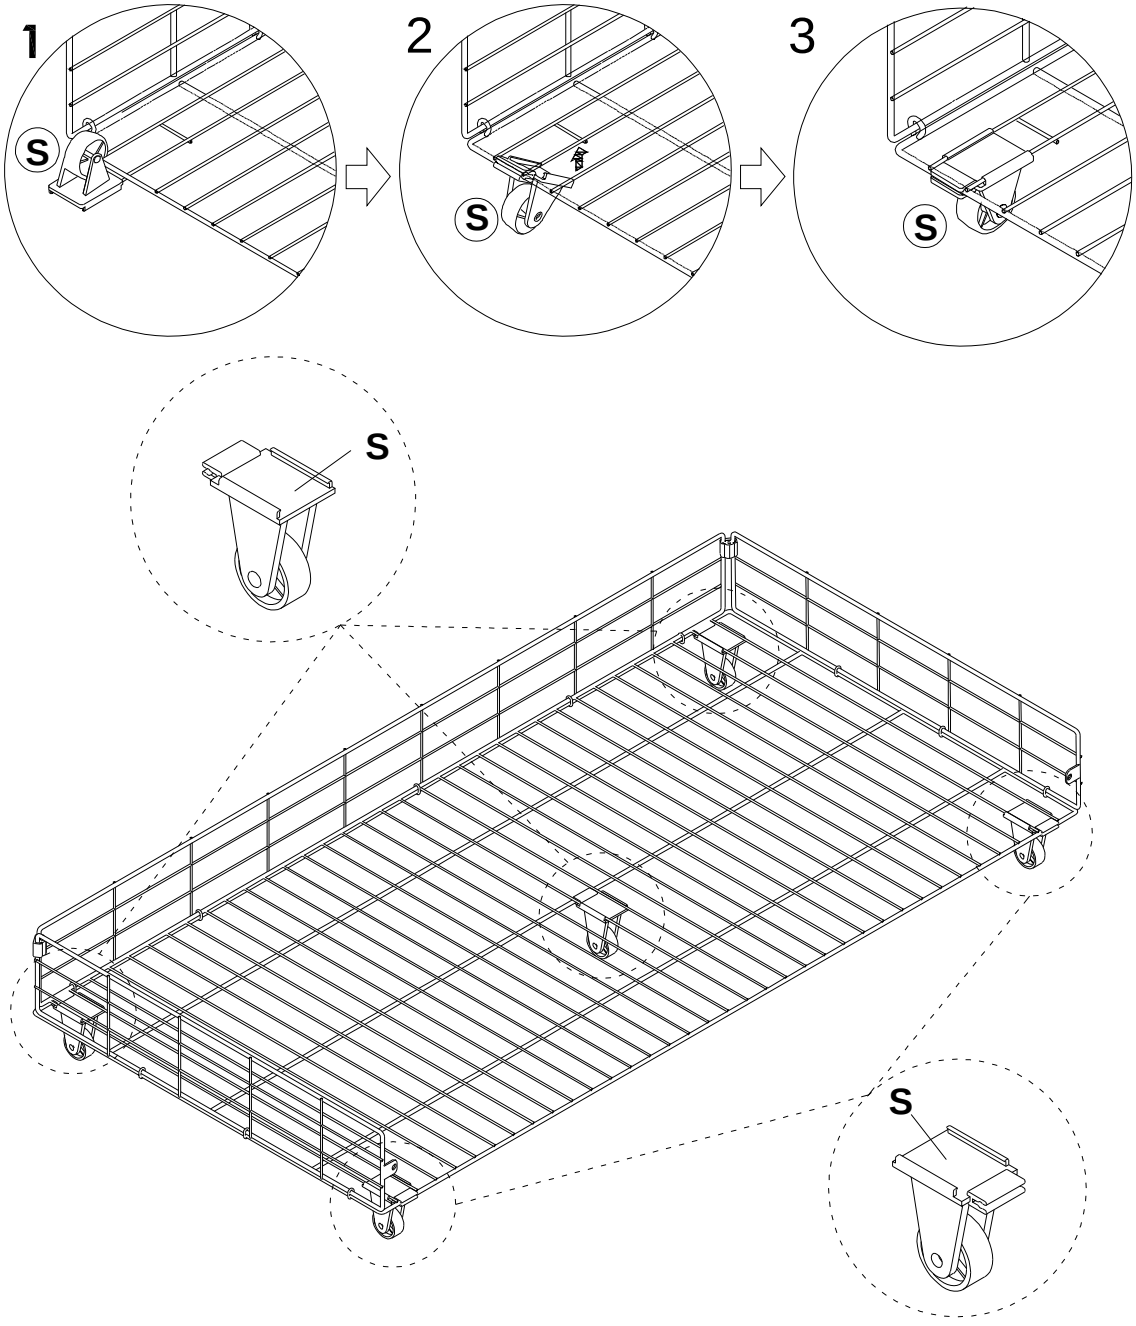

1.Please Clip the wheels onthe bigiron wire first, As shown in the figure.
2.Please turn the wheel over, keepthe plastic plate of the wheel between the two wires, and thenpress hard so that the wires arestuck into the plastic plate. Thisrequires some strength.
3.Place the drawerin the rightway as picture shows, it wouldhelp you assemble drawereasily.


	S x 5PCS

STEP 16

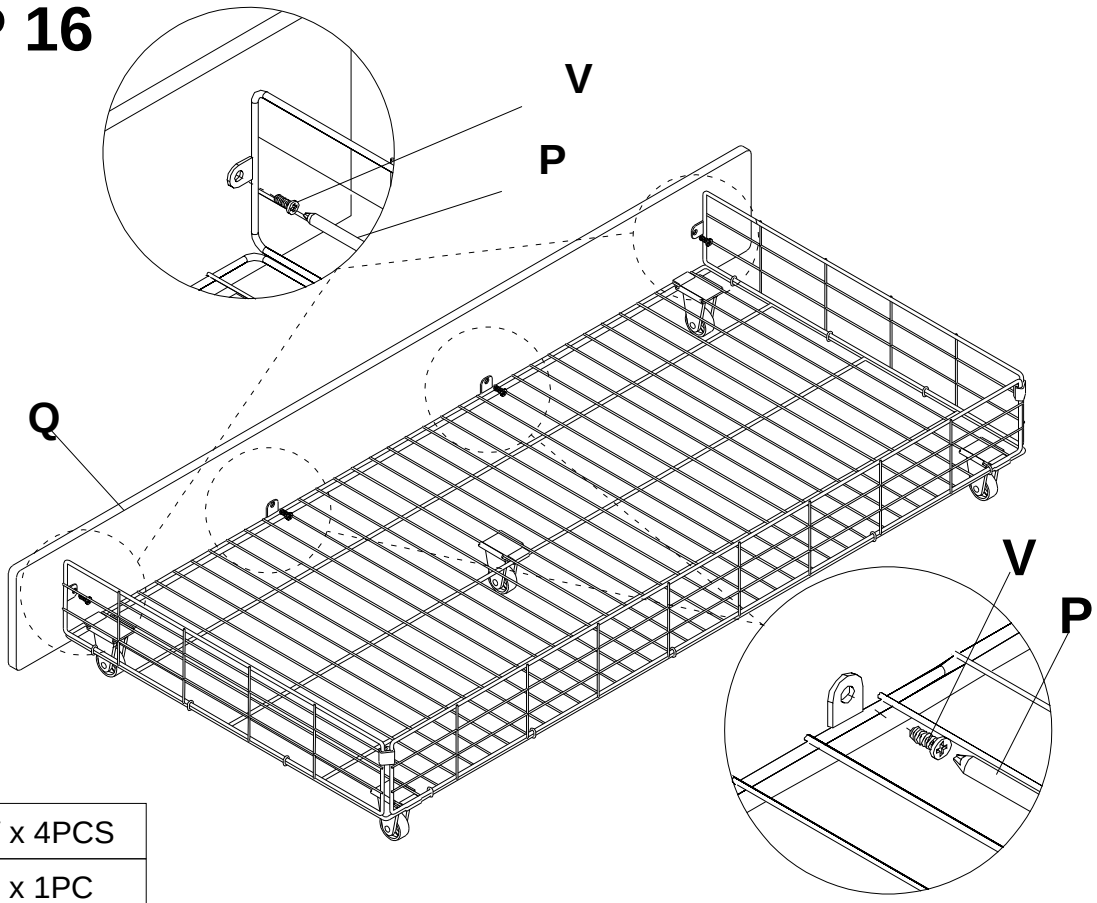


M6×15mm	V x 4PCS
	P x 1PC

STEP 17

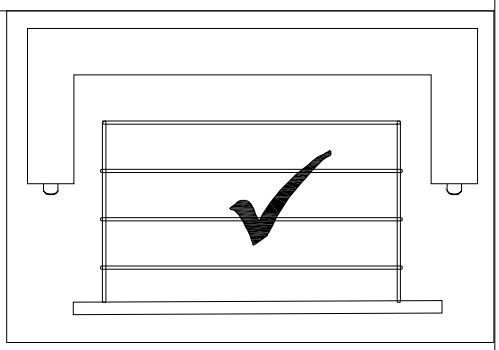



STEP 18


NOTE: The black part of the receiver (X1) needs to be exposed to air in order to better control the LED light.

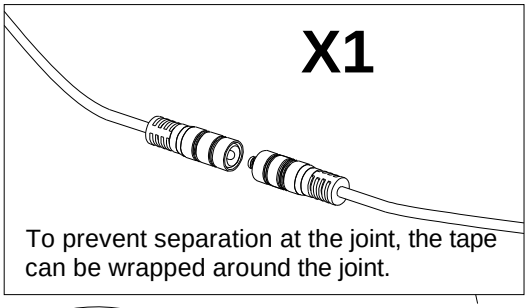

To prevent separation at the joint, the tape can be wrapped around the joint.

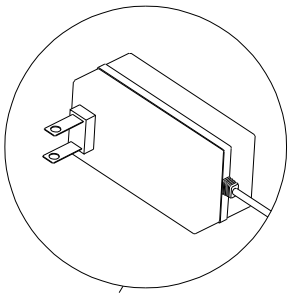


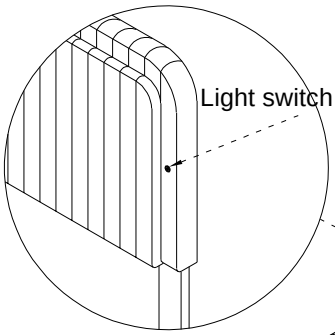

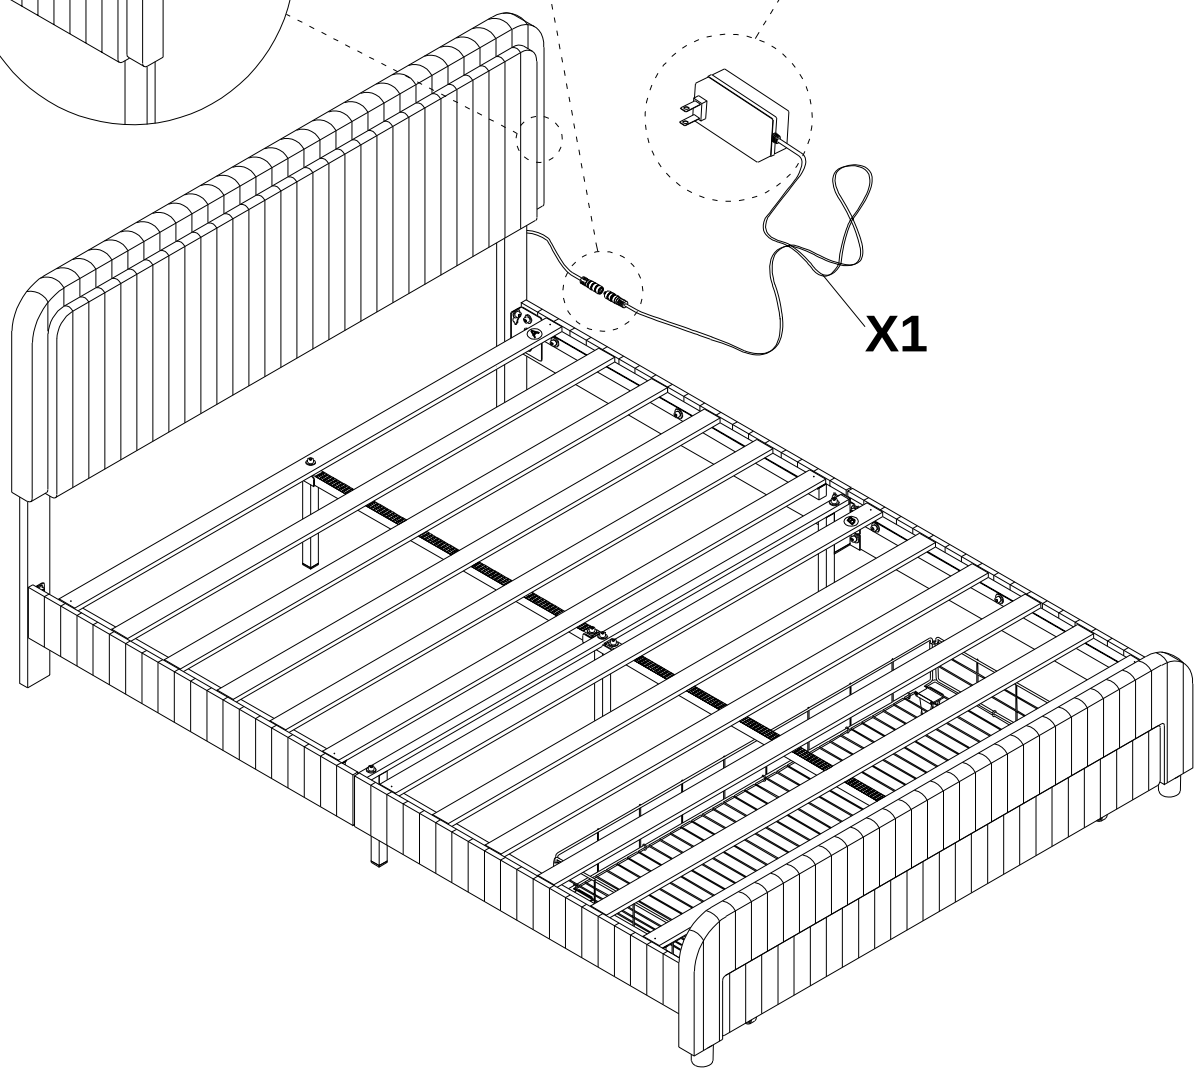

	X1 x 1PC

STEP 19

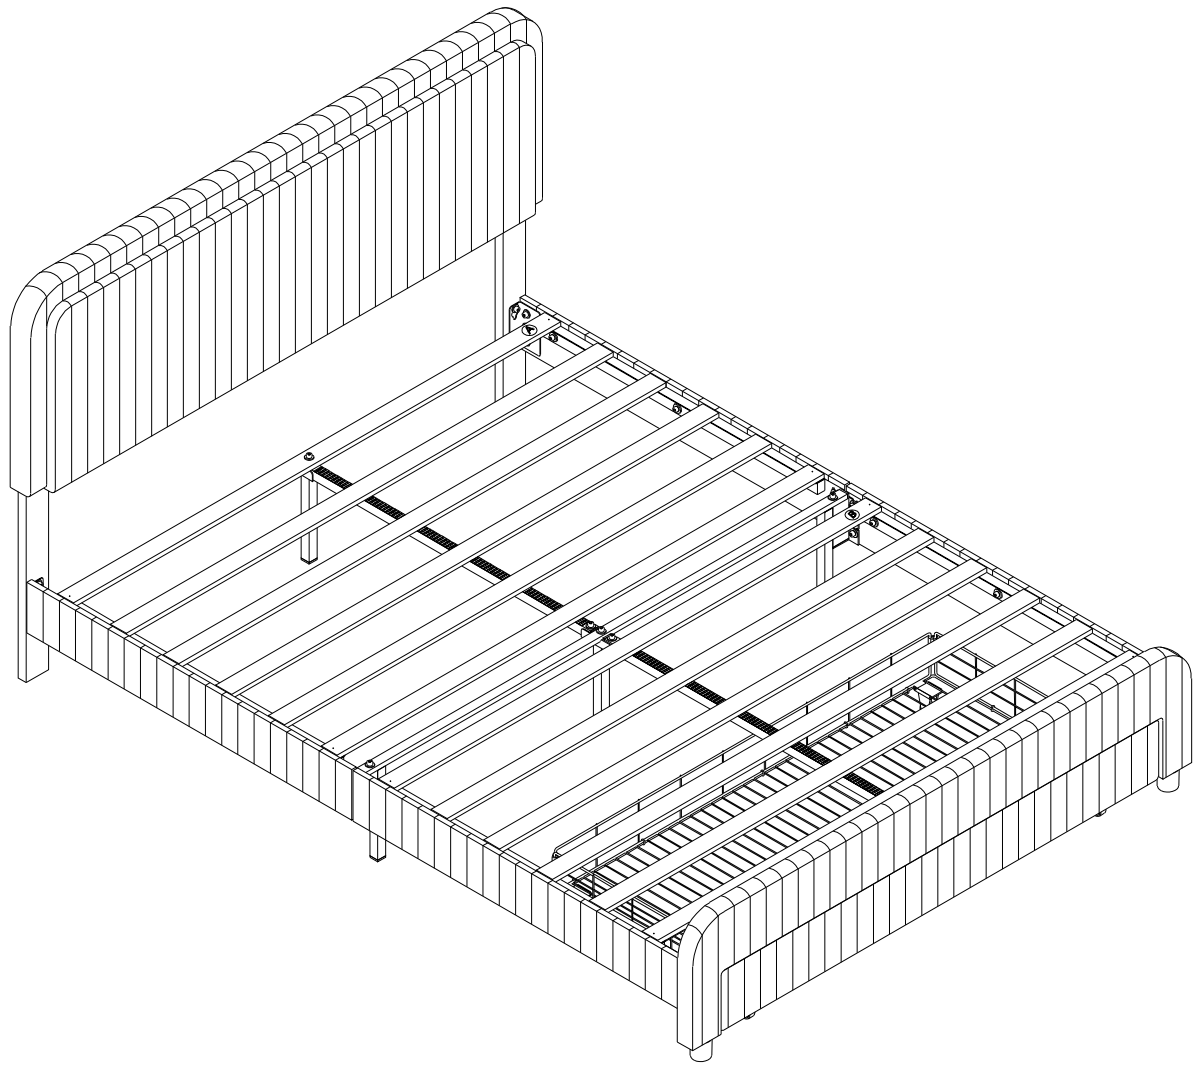

Installation Complete