


INSTRUCTION

130 GALLON DECK BOX-GREY

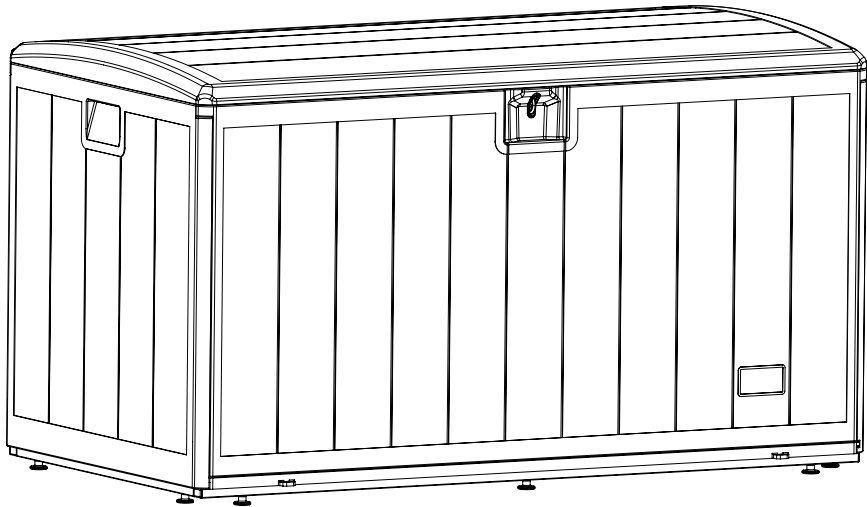

After-sales mailbox:
Patiofurniture Serviceteam@outlook.com

NOTICE

PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

Dear Customer,

Thank you for shopping with us!

When you receive the product, please make sure that all the parts are intact. Then please browse the entire installation manual before assembling.


If any problem occurs unsatisfactorily as follows:







- A. The outer box is damaged
- B. The product is damaged / bent / cracked while you open the box
- C. The parts / accessories / assembly tools are missing
- D. The product is hard to assemble
- E. The instructions are not clear and can not be referred
- F. The product has functional problems
- G. Other aspects that you are not satisfied with

Please feel free to contact us for help. Our after-sales team service (**Patiofurniture Serviceteam@outlook.com**) will reply within 24 hours and will do our best to resolve the problem for you.



PART LIST

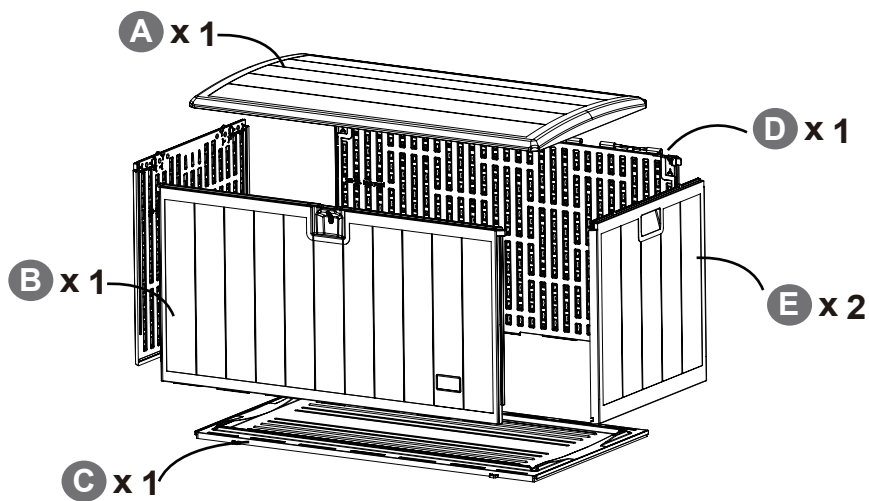


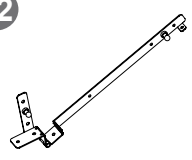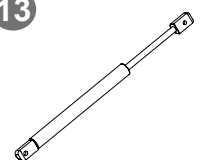1  M5*24MM x 6	2  M6*23MM x 12	3  M5*12MM x 12	4  x 10
5  x 1	6  x 2	7  x 2	8  x 2
9  x 1	11  M5*14MM x 6	12  x 2	13  x 2

STEP

1


First: Slide E into the slots on the side panels of C.

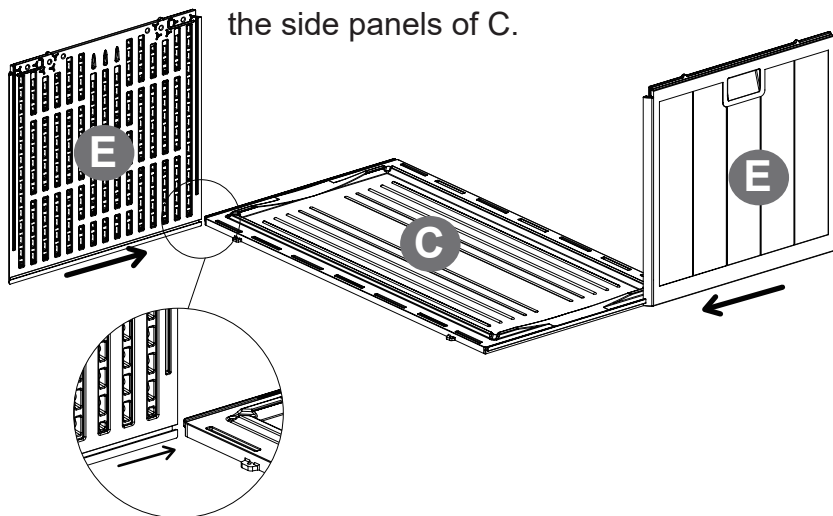

2

First: Slide D into the slots on the side panels of E.


Second: Press D, so that the bottom of D is locked with the slot of C board.

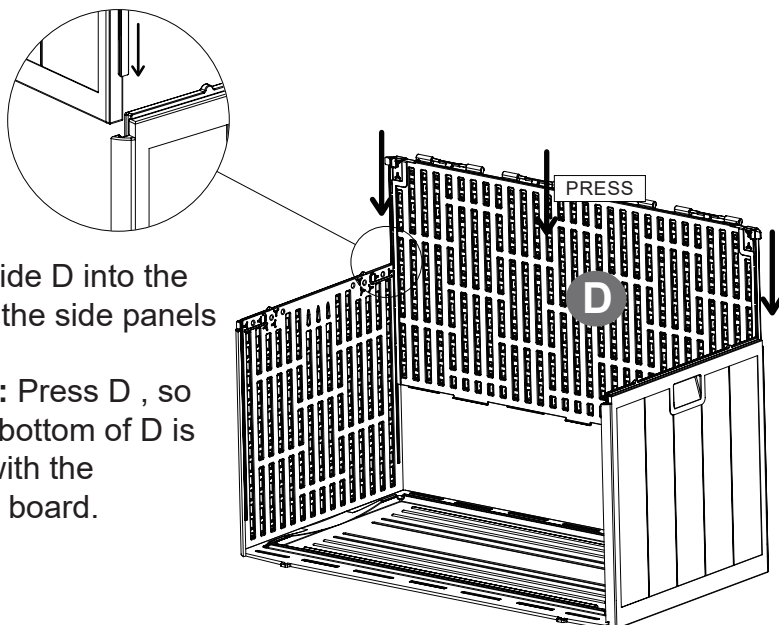

3


STEP

3

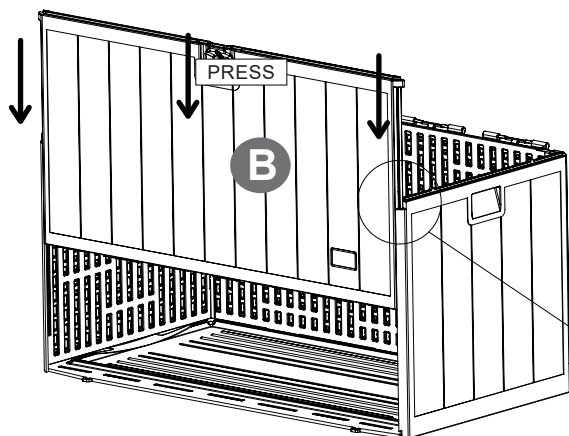




First: Slide B into the slots on the side panels of E.

Second: Press B, so that the bottom of B is locked with the slot of C board.

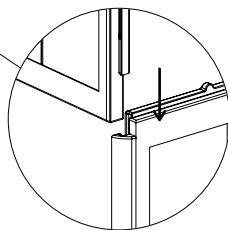


4

Use screw #1 to mount #9 into A, make sure the keyhole of #9 is in the middle of the A.


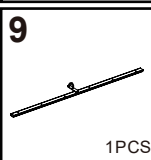
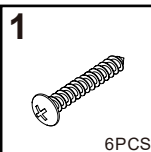
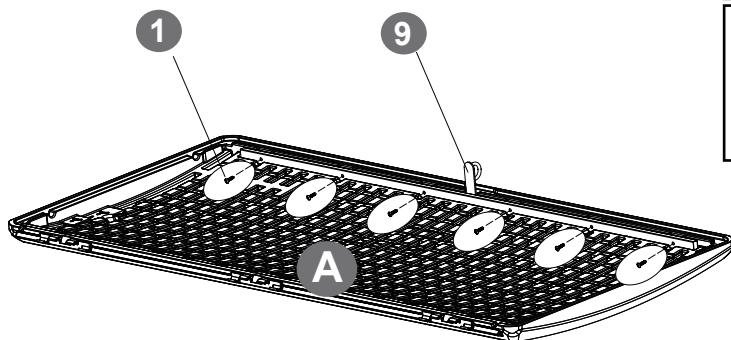


STEP

- 5** Keeping A and D on the same level, push A horizontally into D so that the junctions of A and D snap to each other, then rotate A to lock in place.

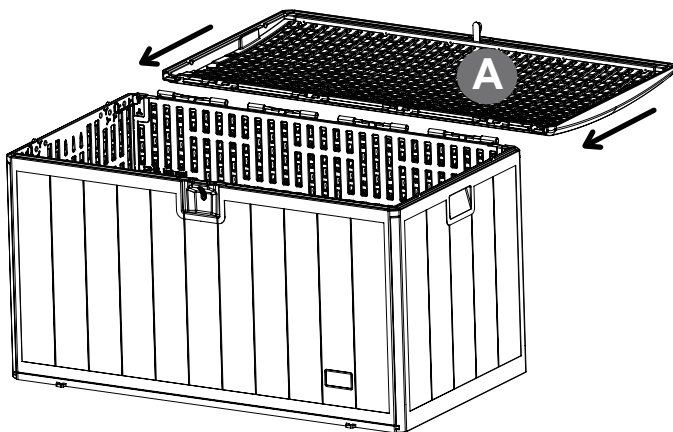

- 6** Assemble the top of the support rod #12 to A (do not fully tighten the screws yet). Then assemble the bottom of the support rod #9 to the side panels of the E (do not fully tighten the screws yet). Finally, tighten all the screws

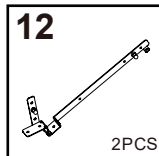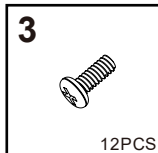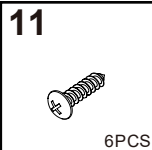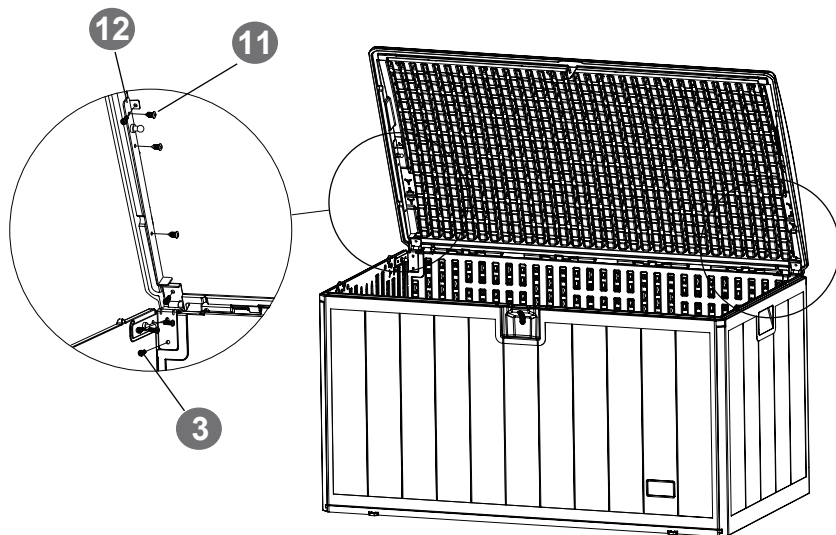


STEP

7


Install gas springs

Buckle gas spring #13 onto the ball of #12

12




2PCS

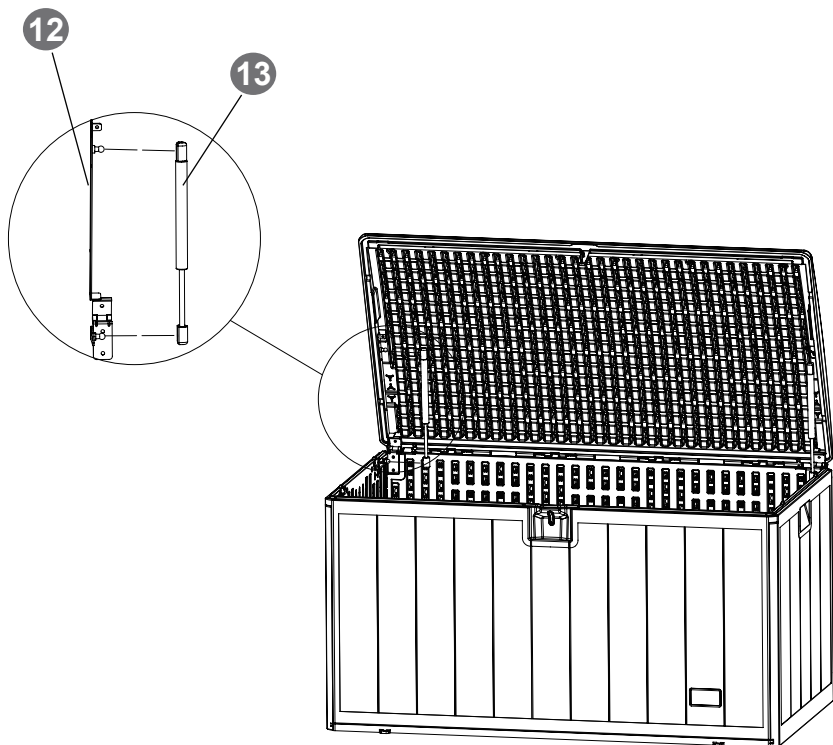

STEP

8

Install the bracket well

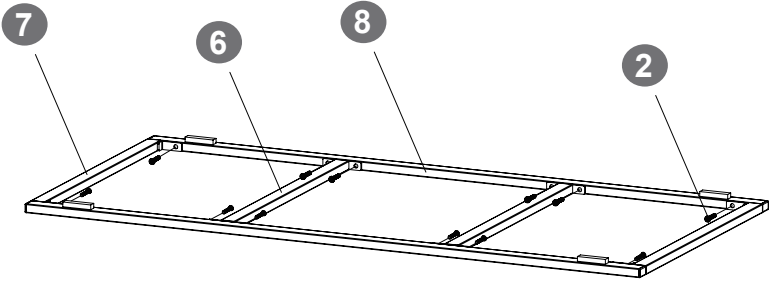


6



2PCS

7



2PCS

8



2PCS


2



12PCS

9

Install the adjustable foot pads

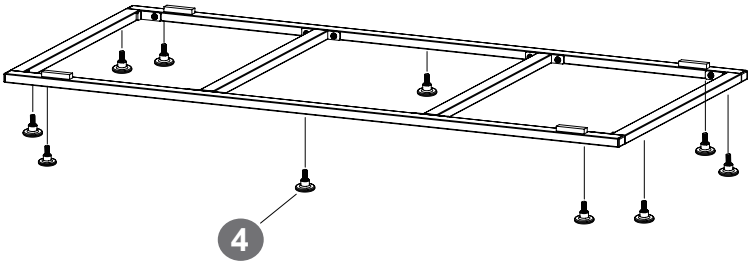

4




10PCS


STEP

10

Put the deck box on the bracket (the bottom of the deck box can be stuck with the bracket protrusion)

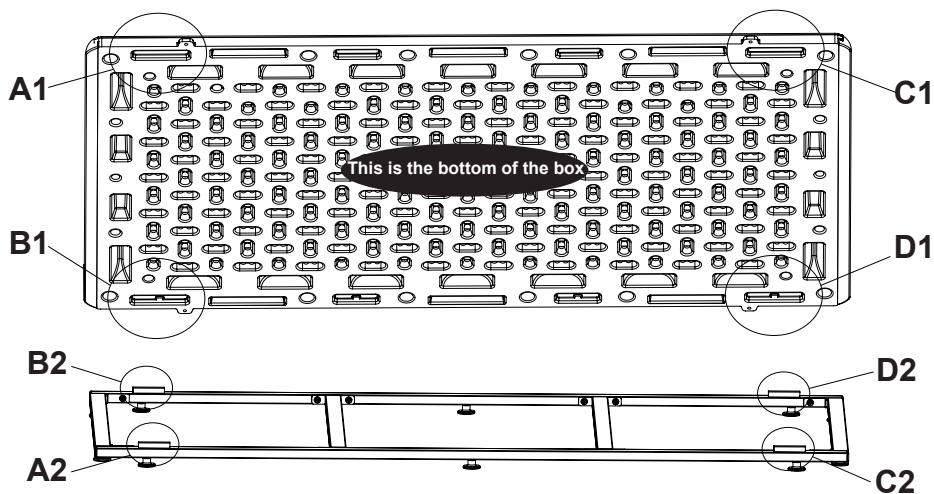

A2 snaps into the card slot of A1 B2 snaps into the card slot of B1
C2 snaps into the card slot of C1 D2 snaps into the card slot of D1

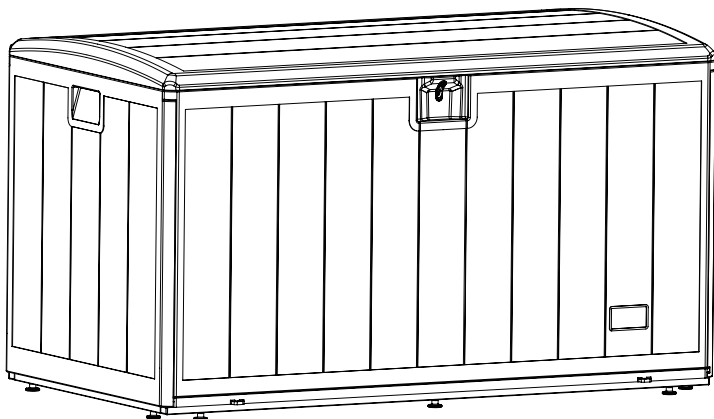

**The installation is complete.
Make sure ALL the screws are fully tighten.**

AFTER-SALE SERVICE

If you have any suggestions for our products or find that the products have quality problems, please contact us first, our after-sales team will reply you within 24 hours, and we will do our best to give you solutions until you are satisfied.

Guaranteed Customer Service

Your shopping experience is very important to us!
Feel unsatisfied? **Contact us!**
Have any questions? **Contact us!**

Wanna Share how wonderful our smart promakes your home?
Share your pictures with us.
Any suggestions? **Contact us!**
We gotcha back!



Patiofurniture Serviceteam@outlook.com

