




Product Installation Instructions

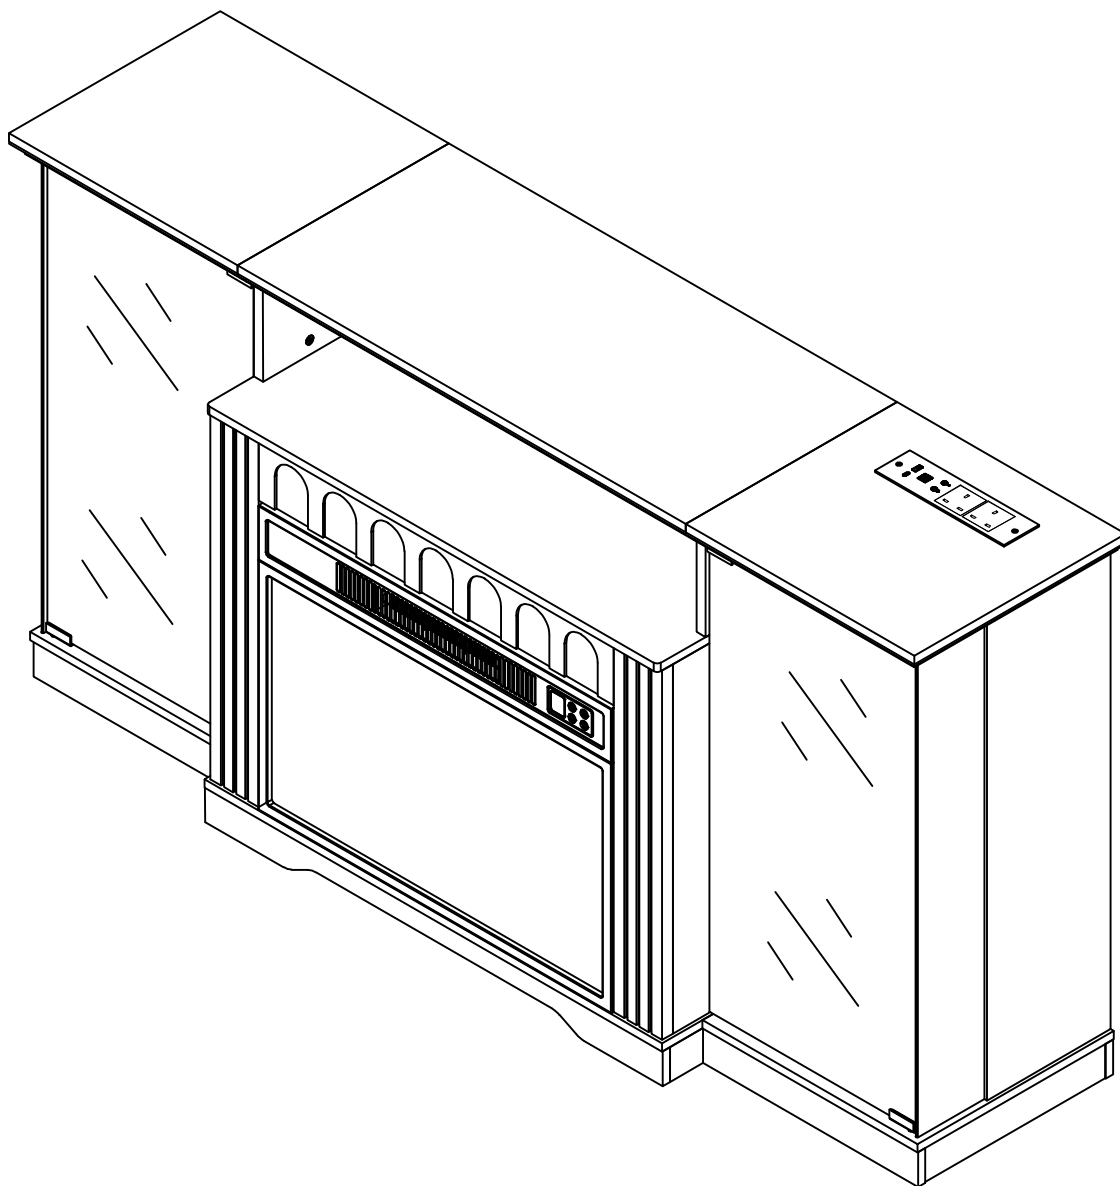


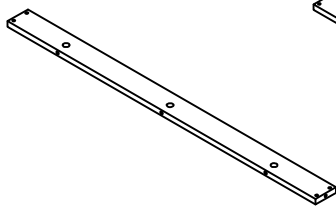


01x1

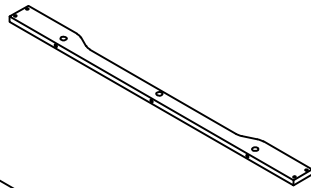


02x1

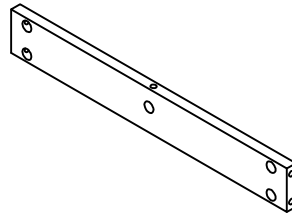


03x1

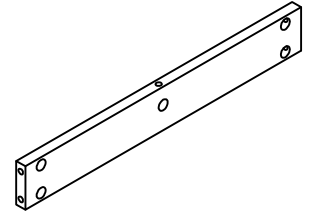


04x1

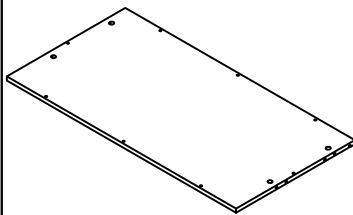


05x1

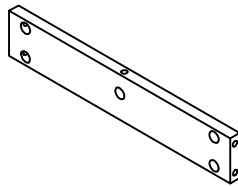


06x1

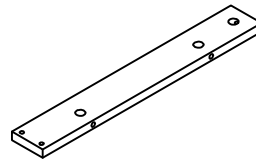


07x1

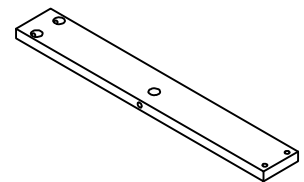


08x1

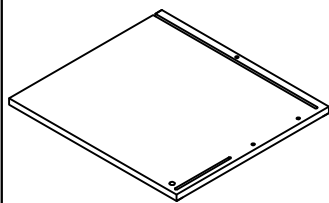


09x1

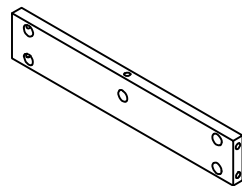


10x1

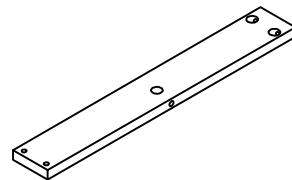


11x1

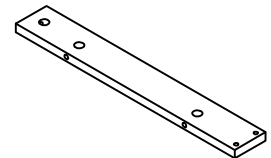


12x1

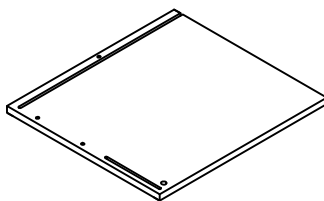


13x1

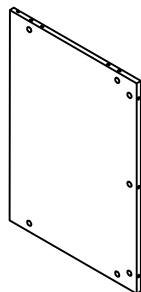

14x1

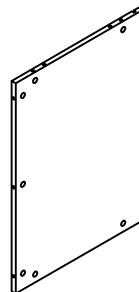


15x1

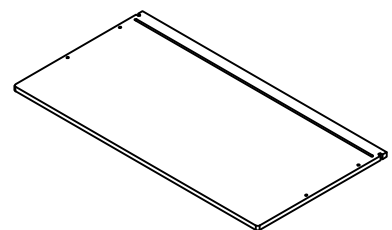


16x1


2

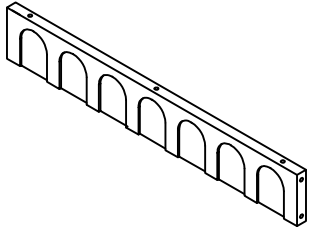


17x1

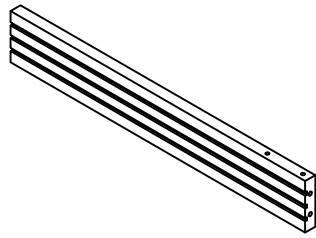


18x1

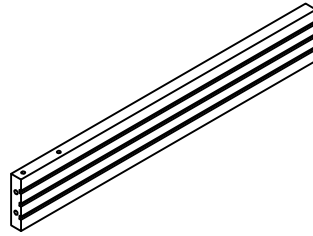


19x1

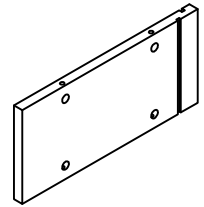


20x1

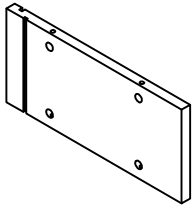


21x1

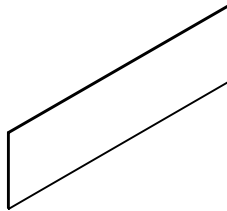

22x1

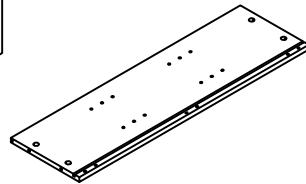


23x1

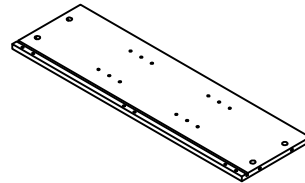


24x1




25x2

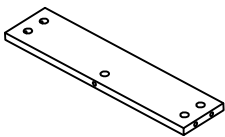


26x4

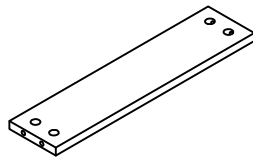


27x2

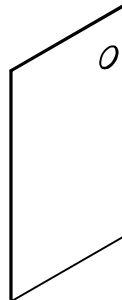


28x1

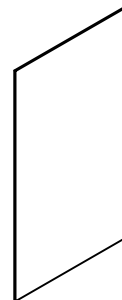


29x1

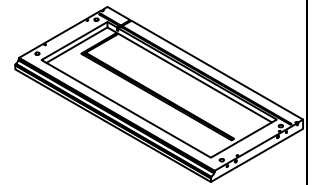


30x1

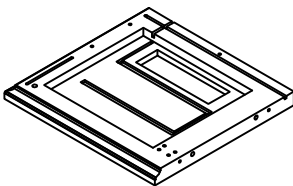


31x1

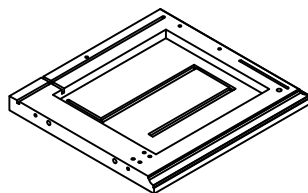

32x1

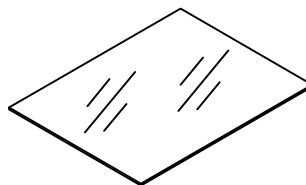

33x4








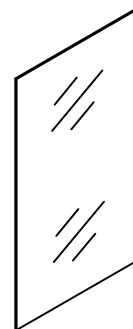



34x2




3

Accessories list

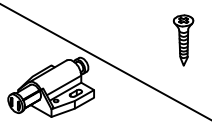(A)		Two In One Screw (6x28mm)	119pcs
(B)		Two In One Nut (10x12mm)	119pcs
(C)		Wood Chipping (6x30mm)	12pcs
(D)		Non-slip pads (50x10x2mm)	17pcs
(E)		Rebound device & Screw (3x16mm)	8pcs 2pcs
		Iron sheet	2pcs
		Hinge	4pcs 2pcs 2pcs
(F)		Wire Clamp	3pcs
(G)		Laminate support nail	8pcs
(H)		Fixing clip & screw (3x16mm)	6pcs
(J)		Double end connecting line	1pcs
(K)	Anti tipping hardware  x2  (3.5x12mm) x2  x4  (4x45mm) x2  x2		
(L)		LED Strip Controlle	1pcs 2pcs
(N)		Laminated clamp	8pcs
(M)		Wood Chipping (8x30mm)	4pcs

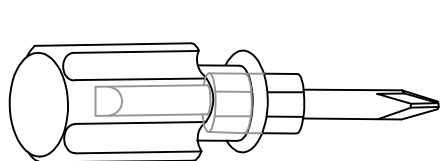


1pcs

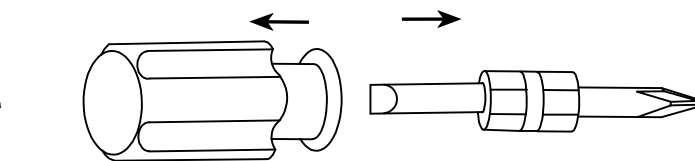

Double-head screwdriver, use as required


4

Product structure decomposition

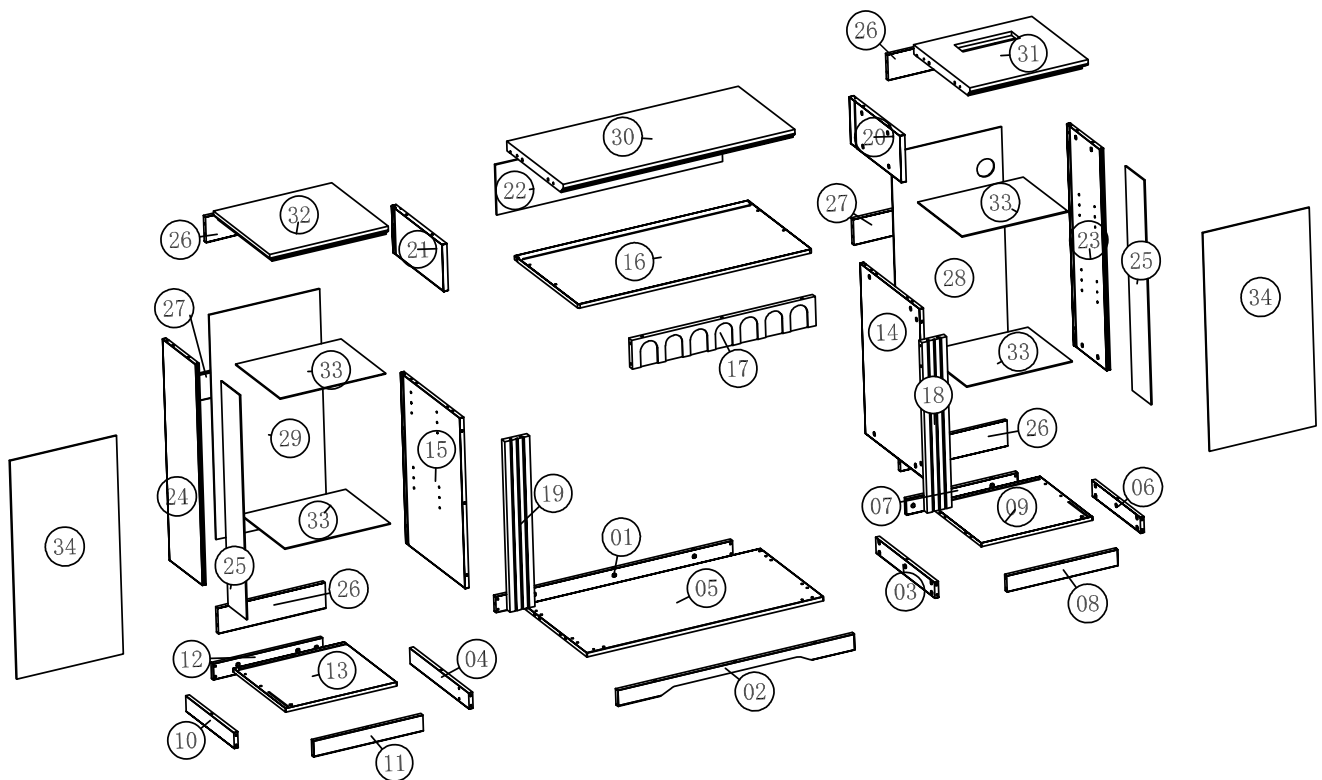


Use parts A and B




Step1

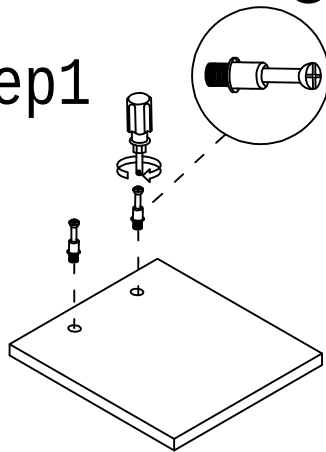

Step2

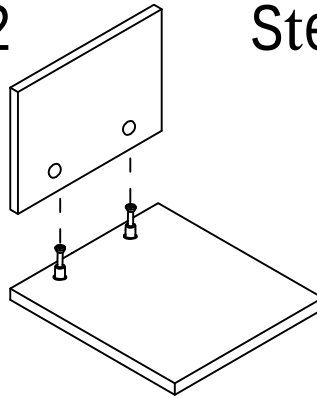



Step3

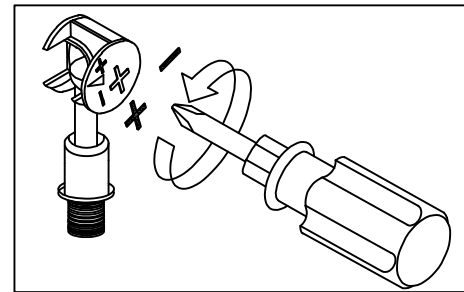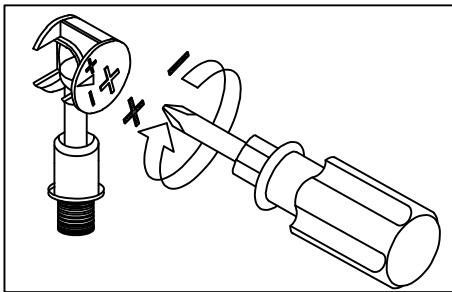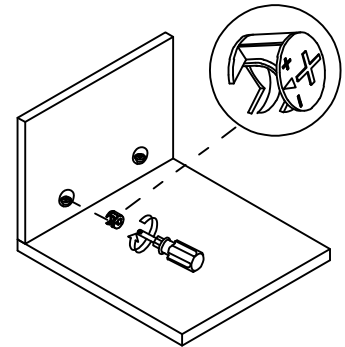

Use a screwdriver to lock in the direction of the "+" sign



Disassemble along the direction of "-" sign

Step 1

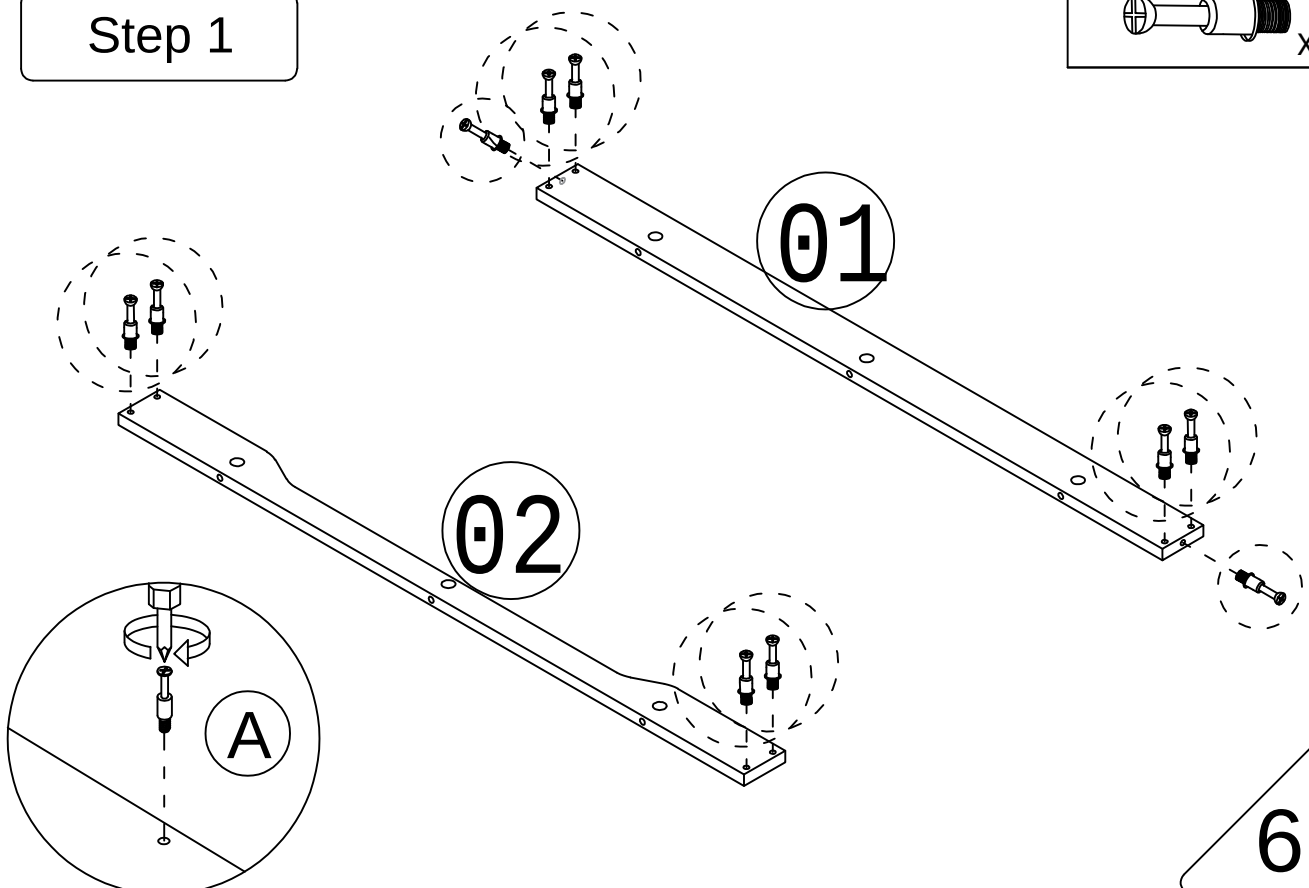
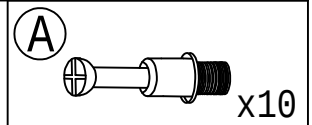


6



Step 2

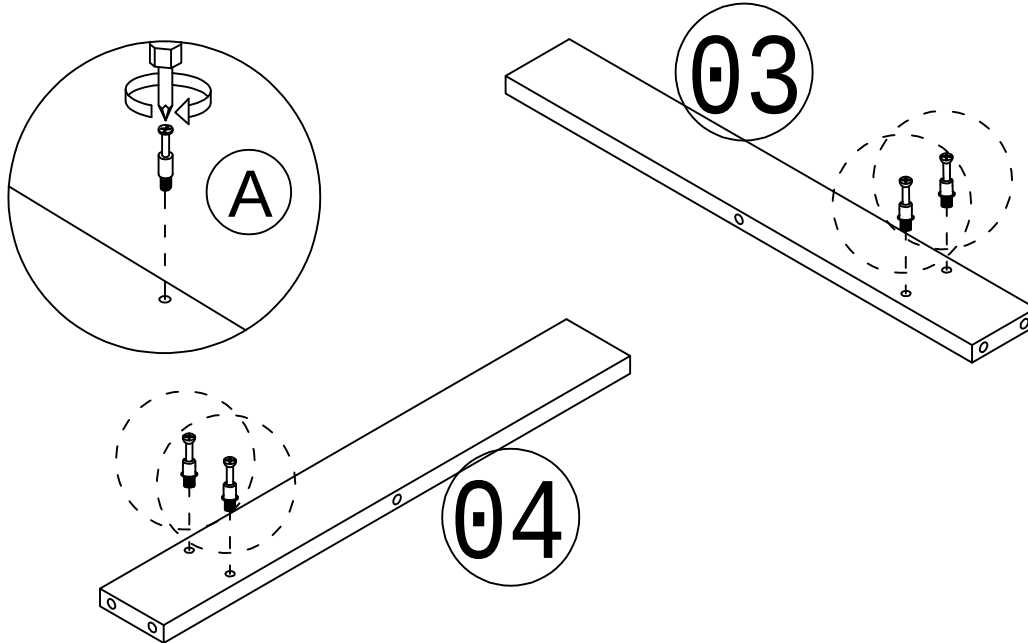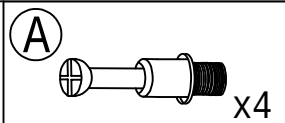



Step 3

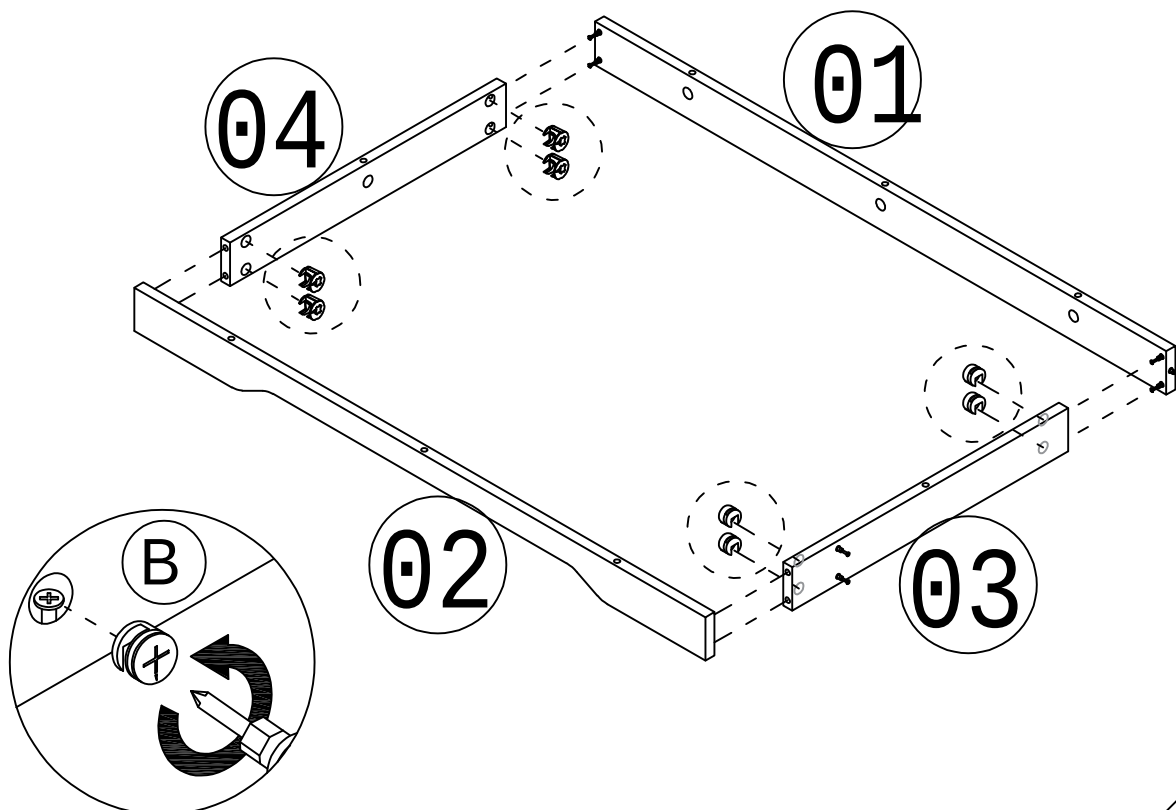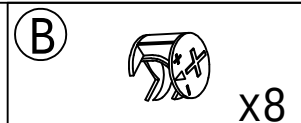



Step 4

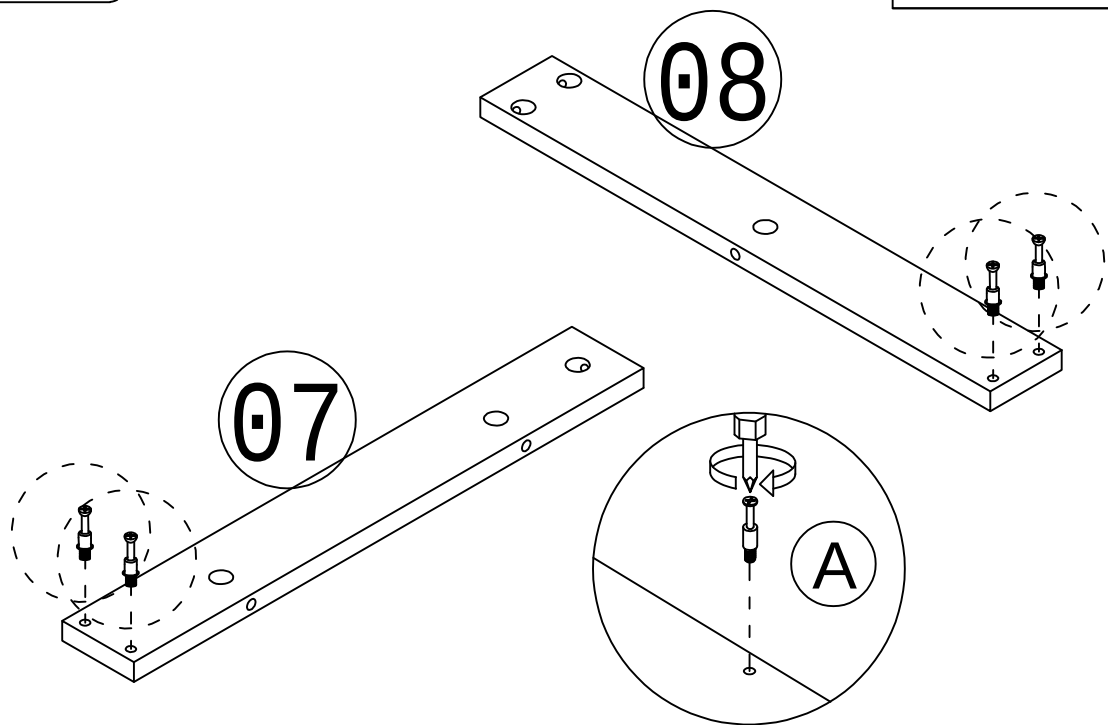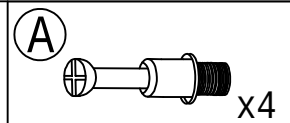



Step 5

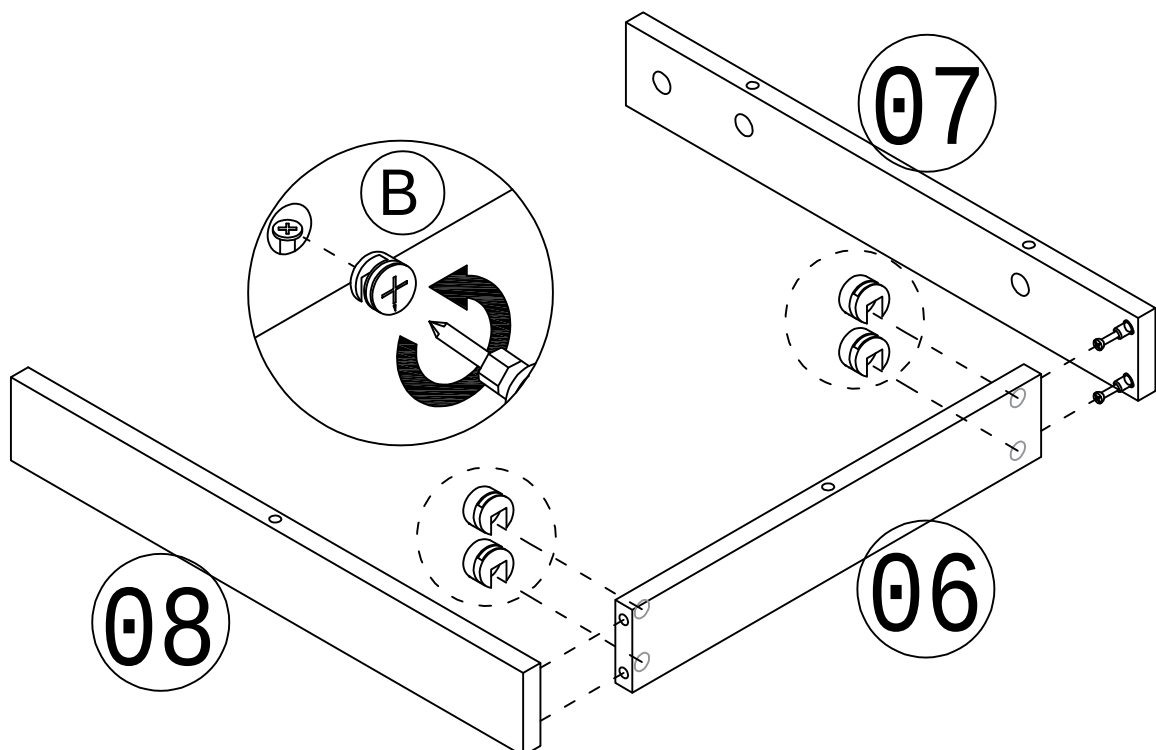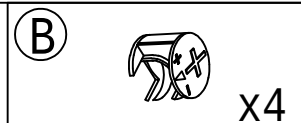

Step 6

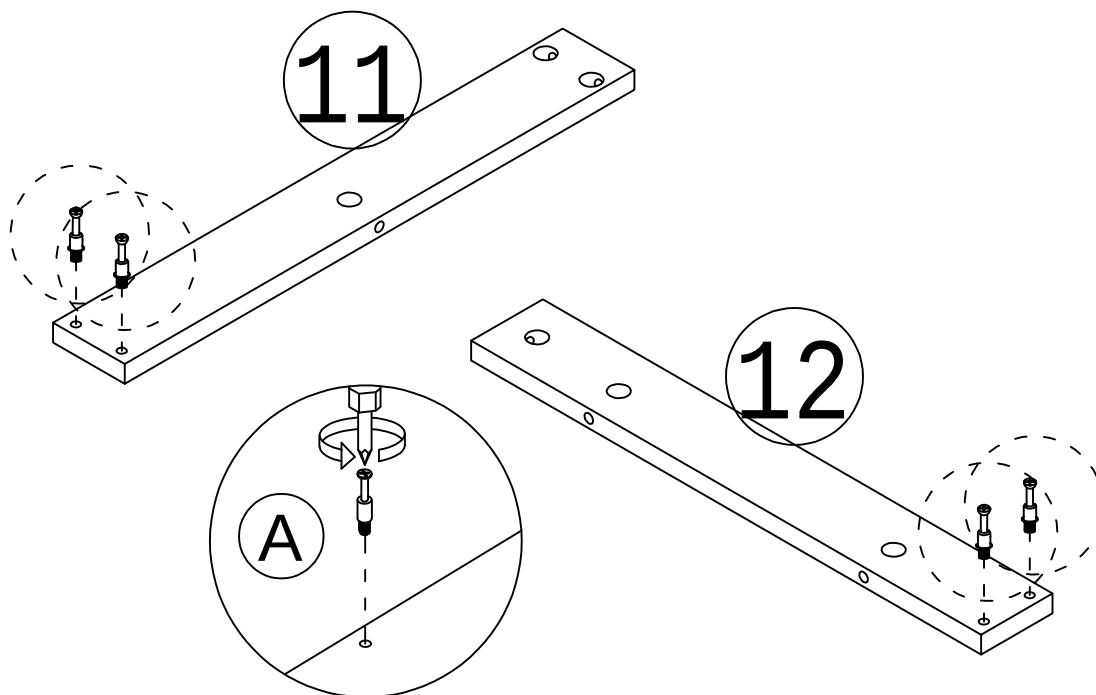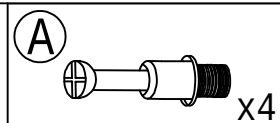

Step 7

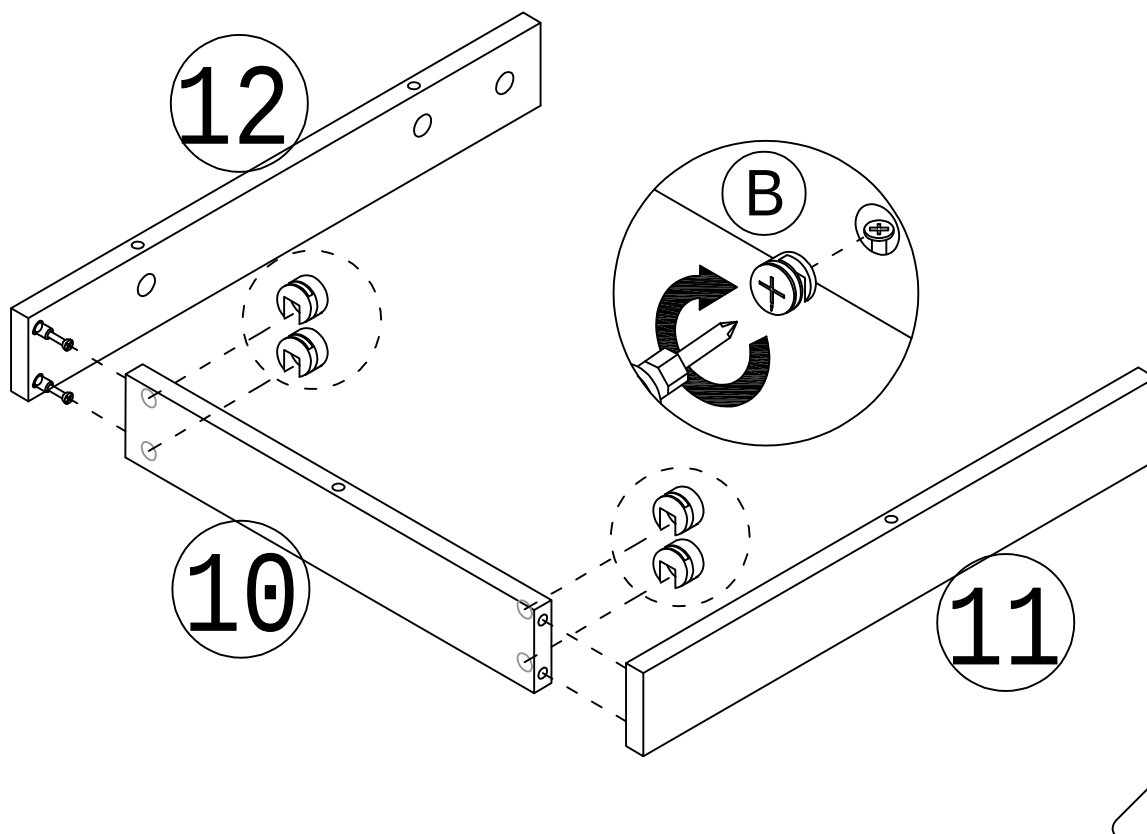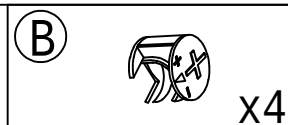


Step 8

B



x3

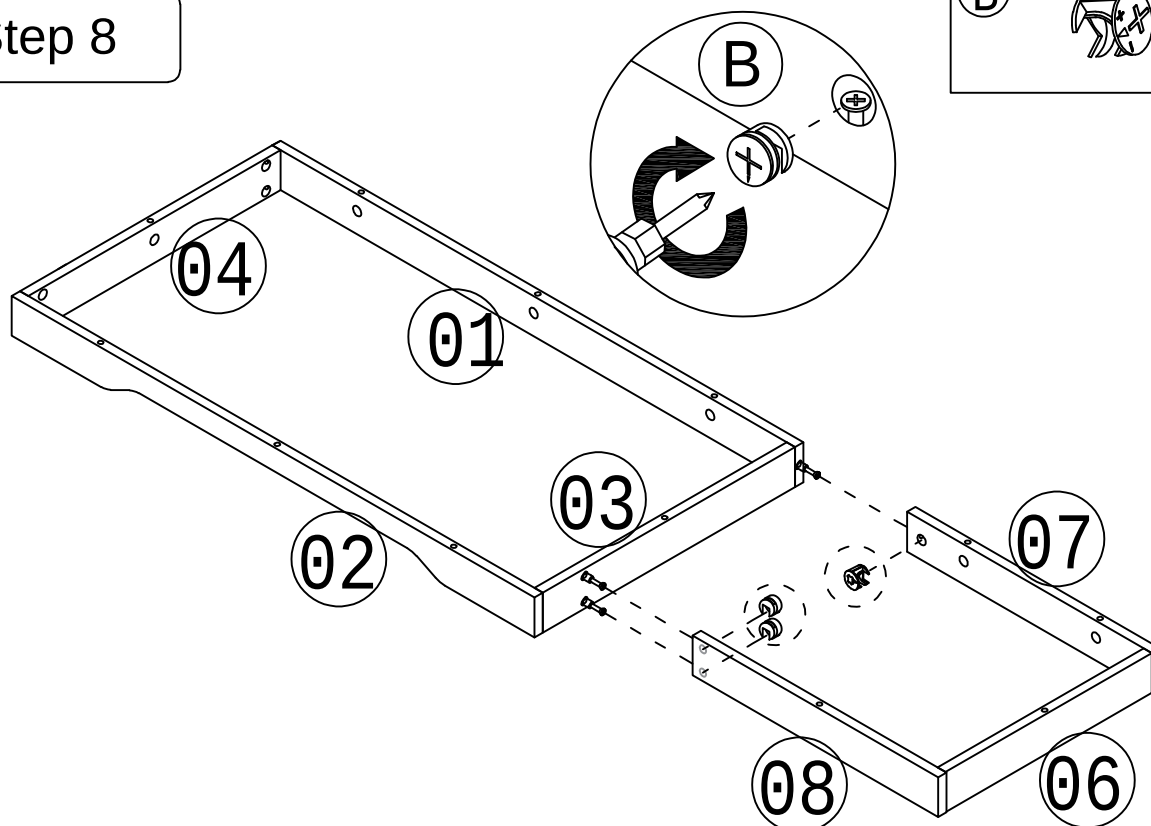


Step 9

B






x3



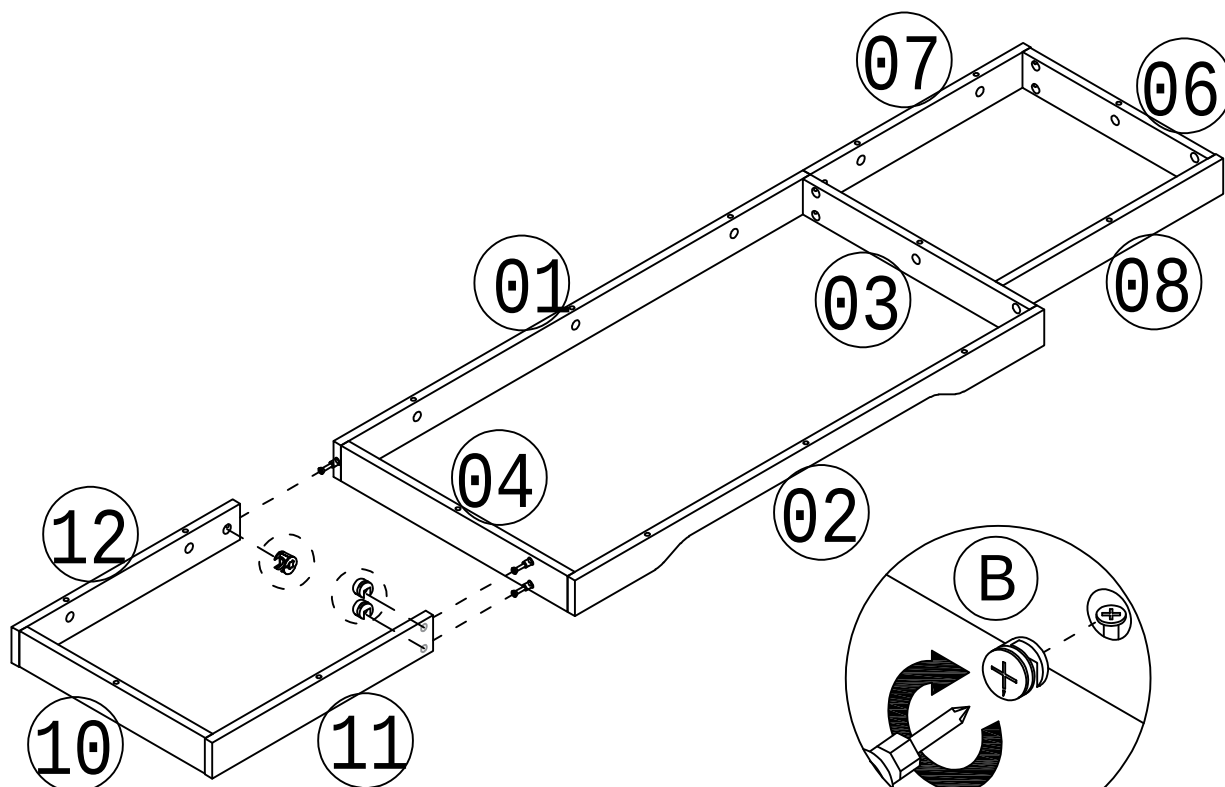


10

Step 10

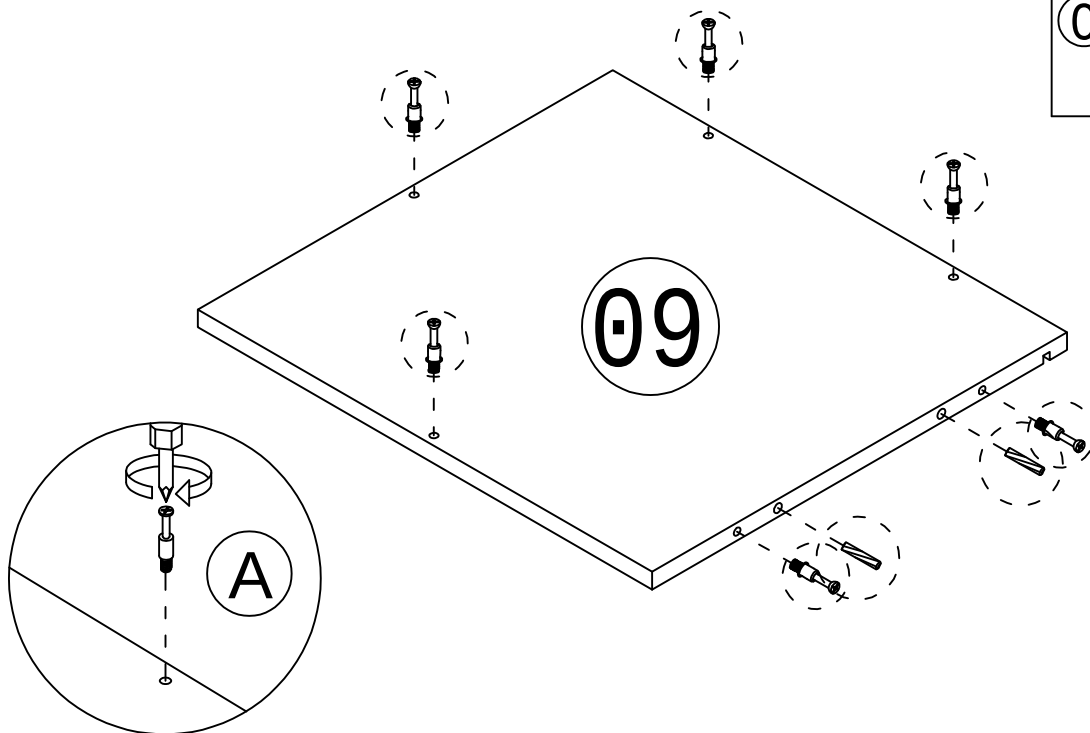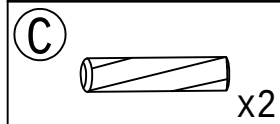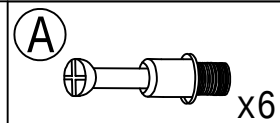

Step 11

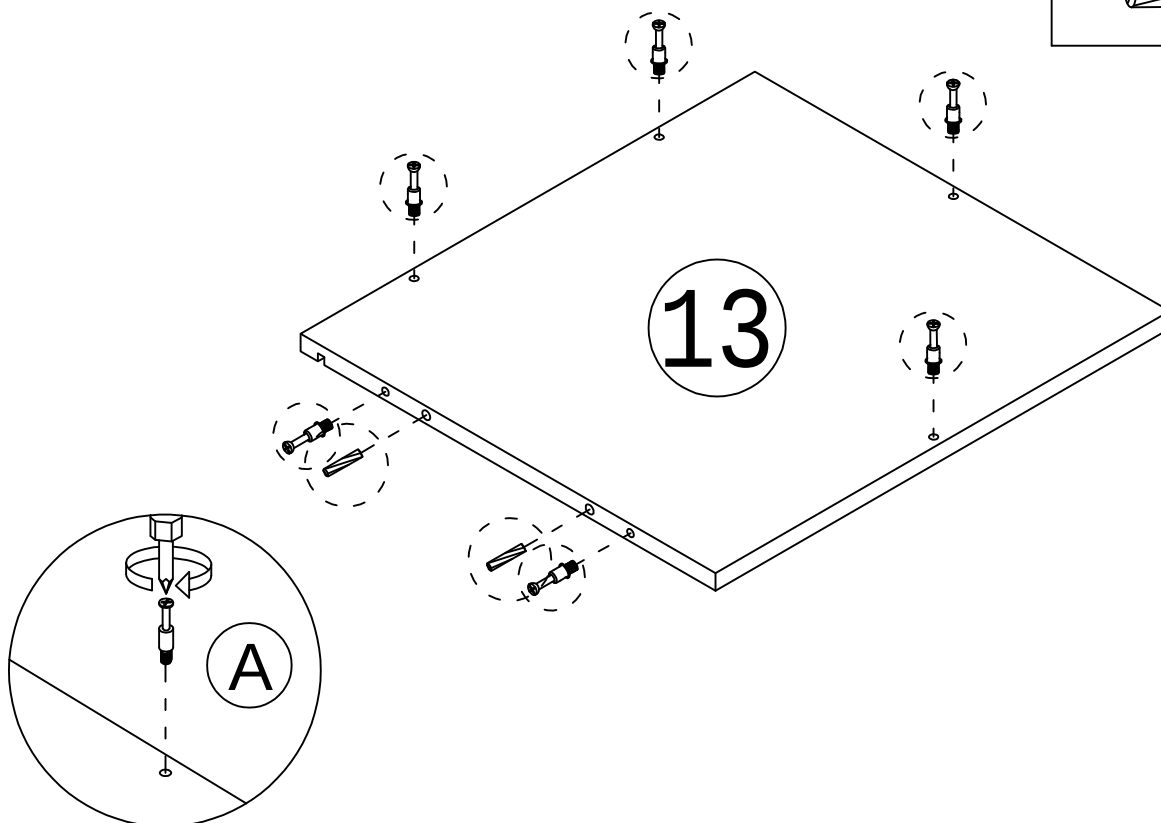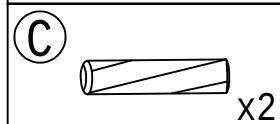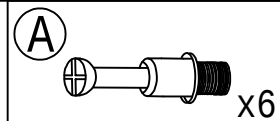


Step 12

(B)




x4

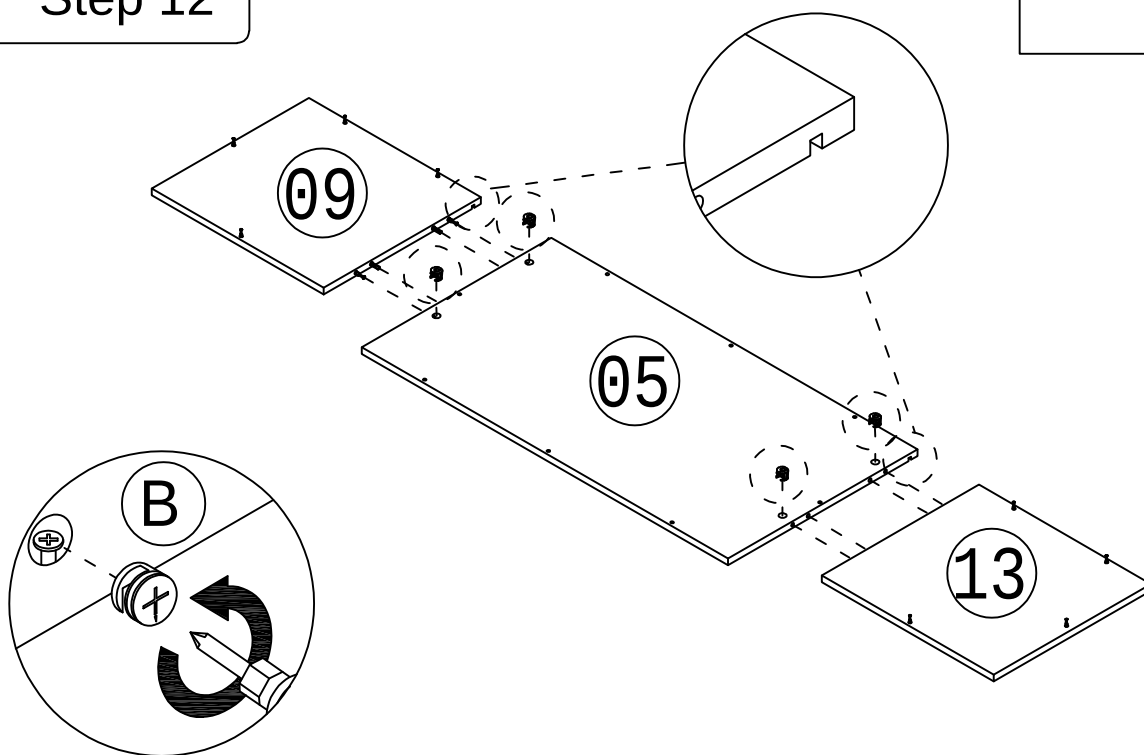


Step 13

(A)



x8

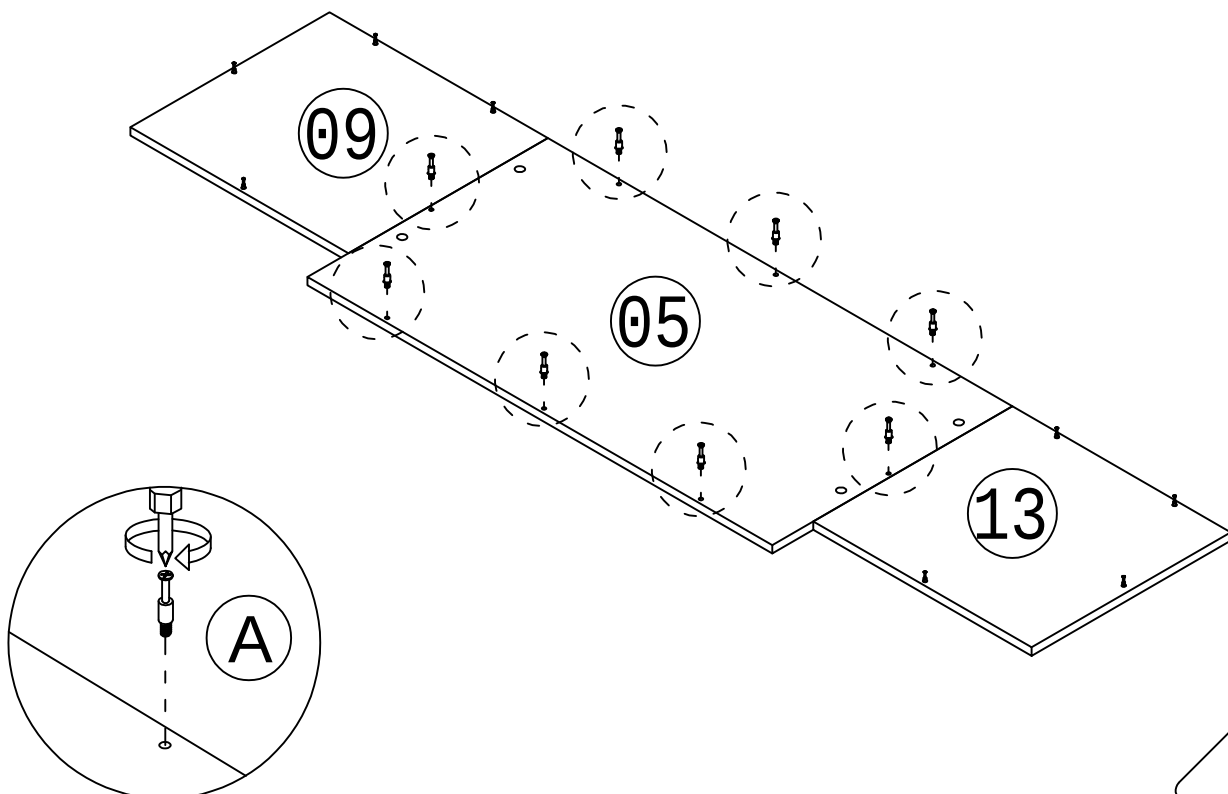



12

Step 14



B





x16

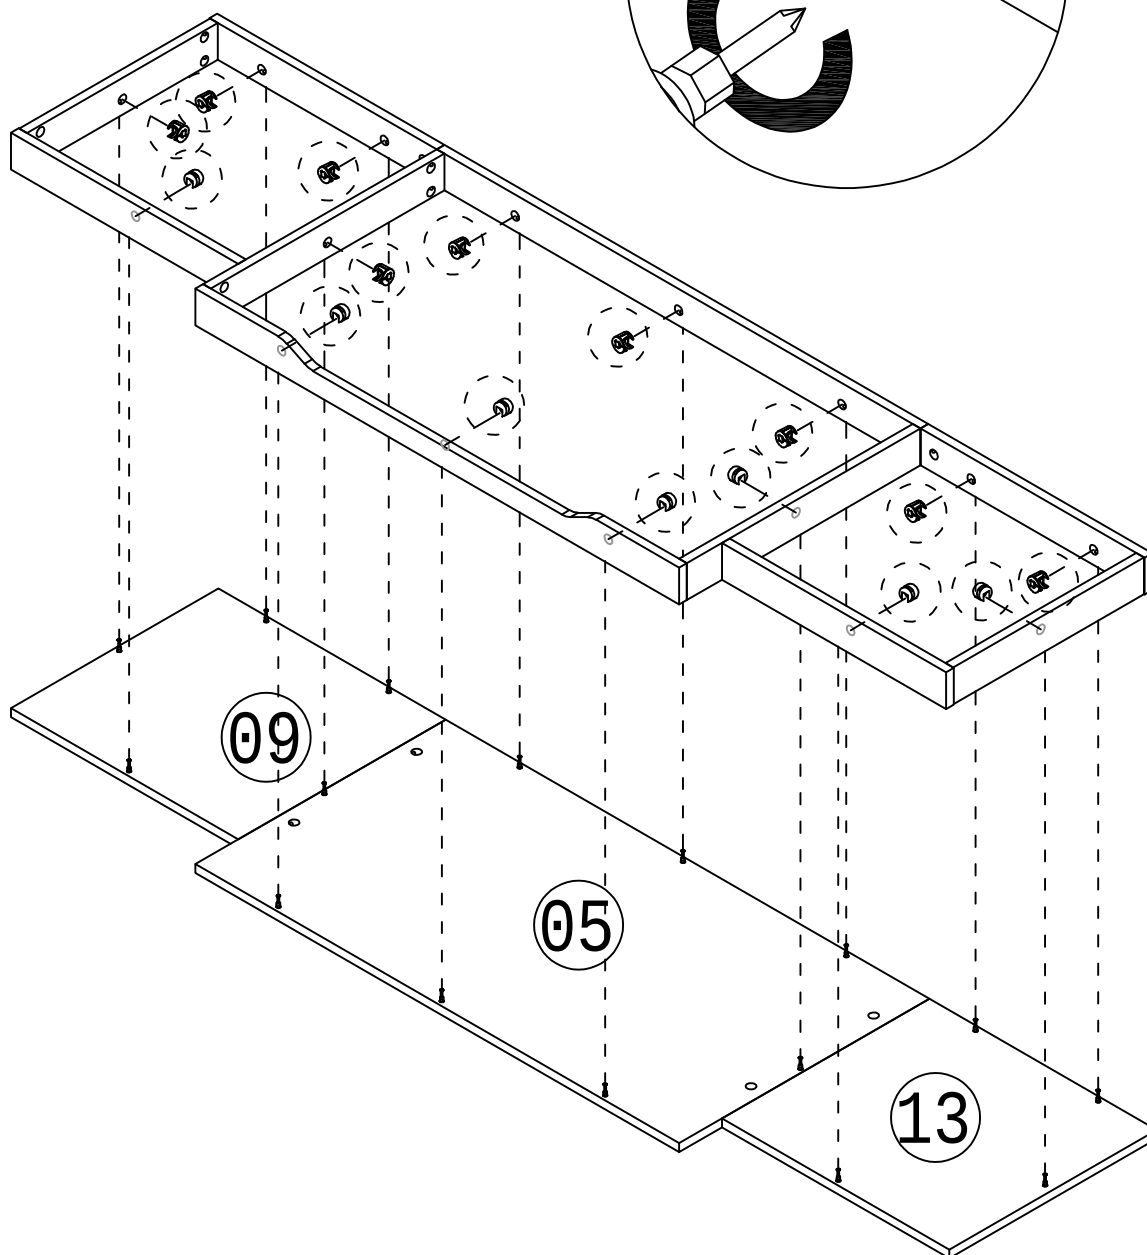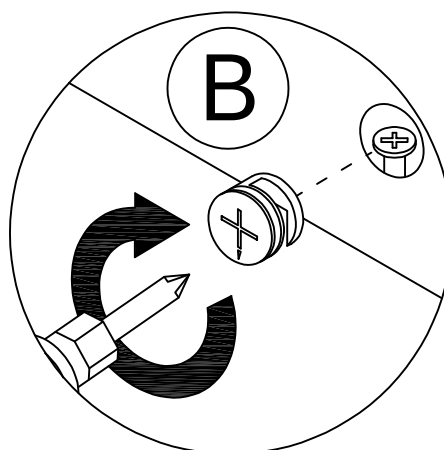



Step 15

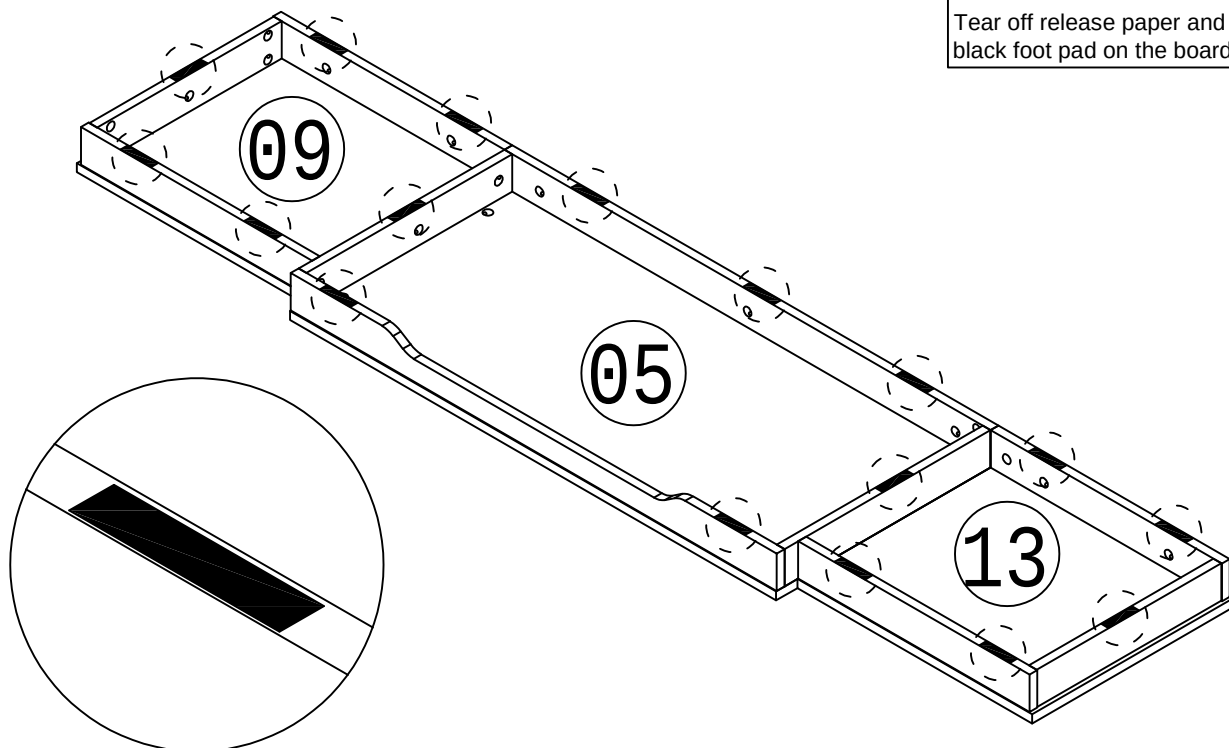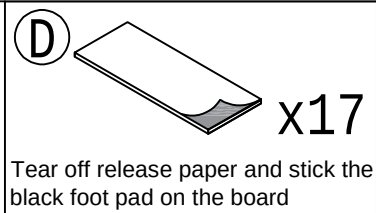



Step 16

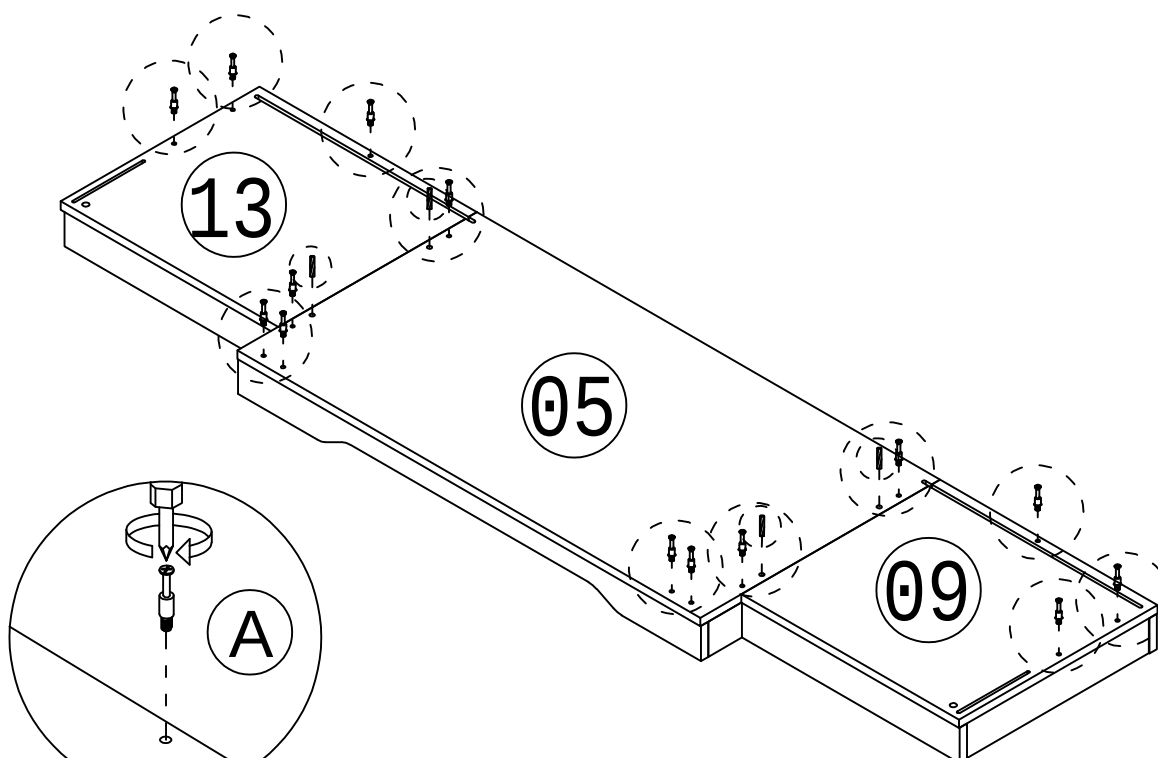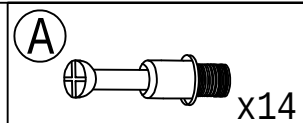

Step 17

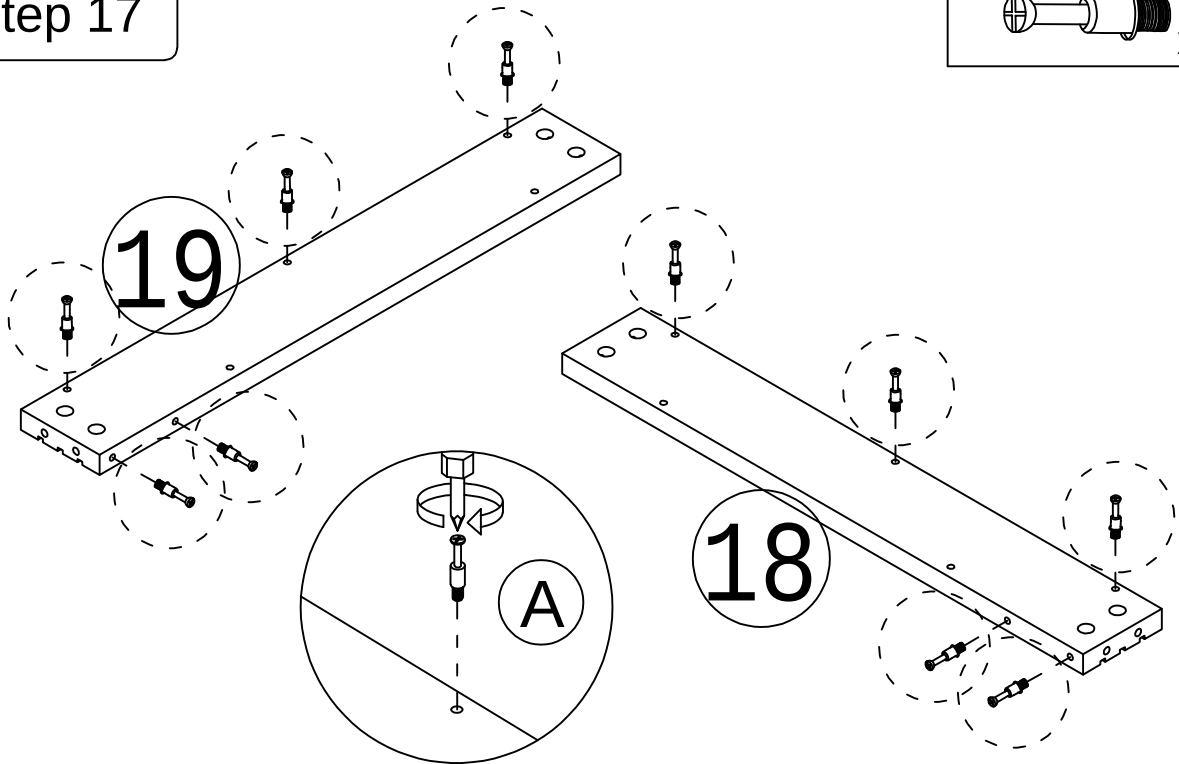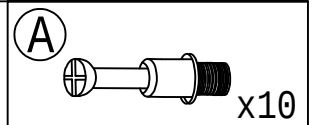

Step 18

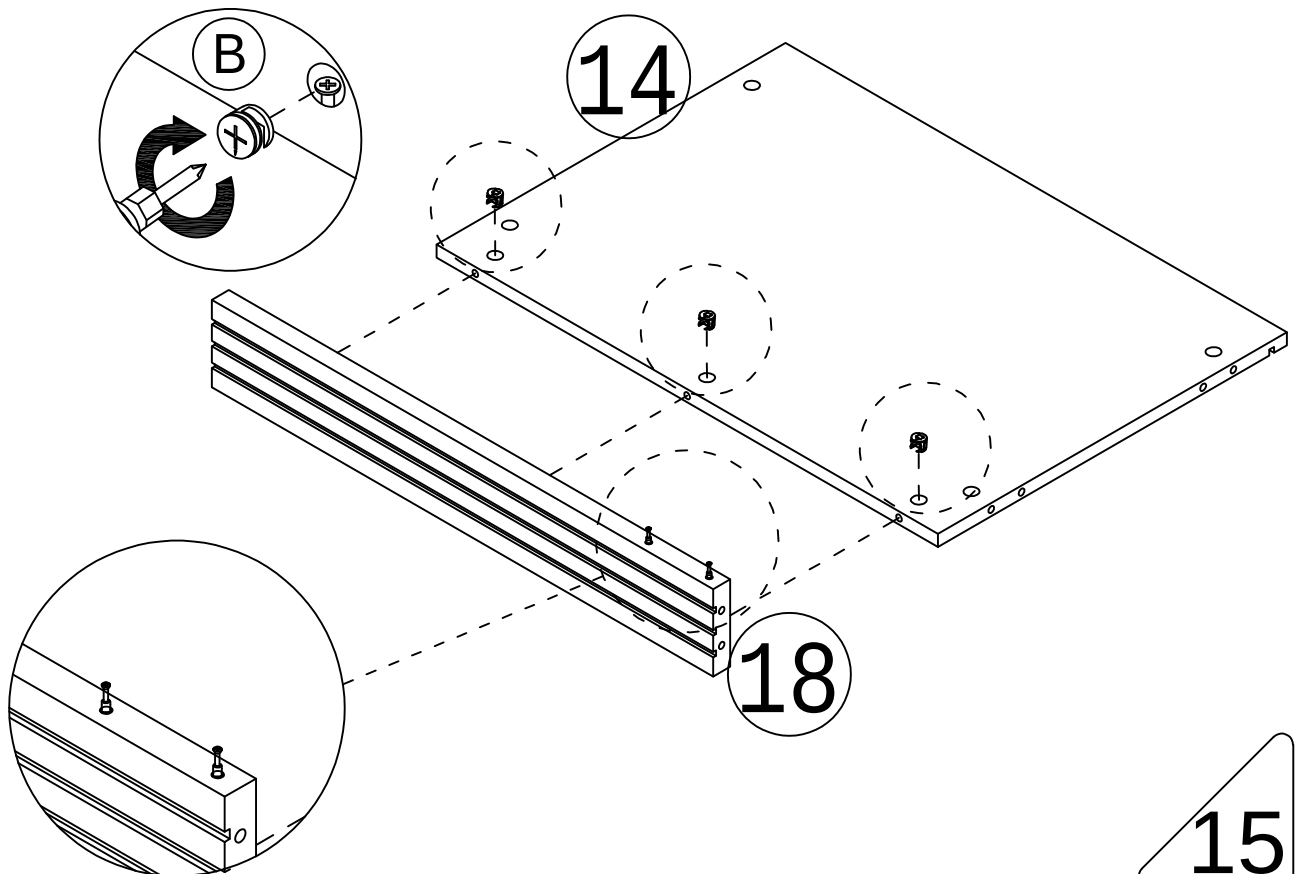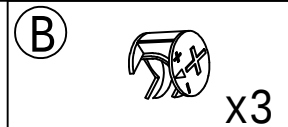


15

Step 19

(B)



x3

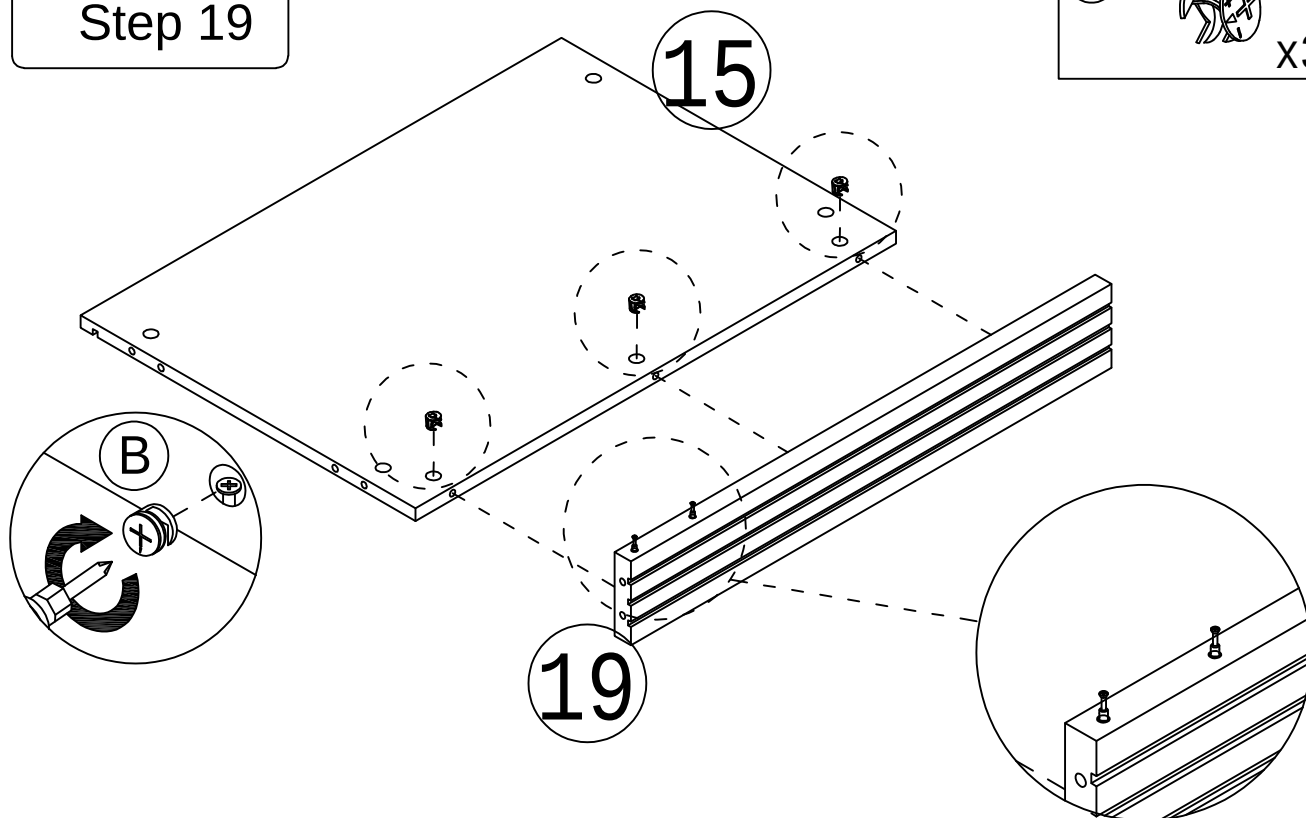

Step 20

(B)




x4



(C)





x4

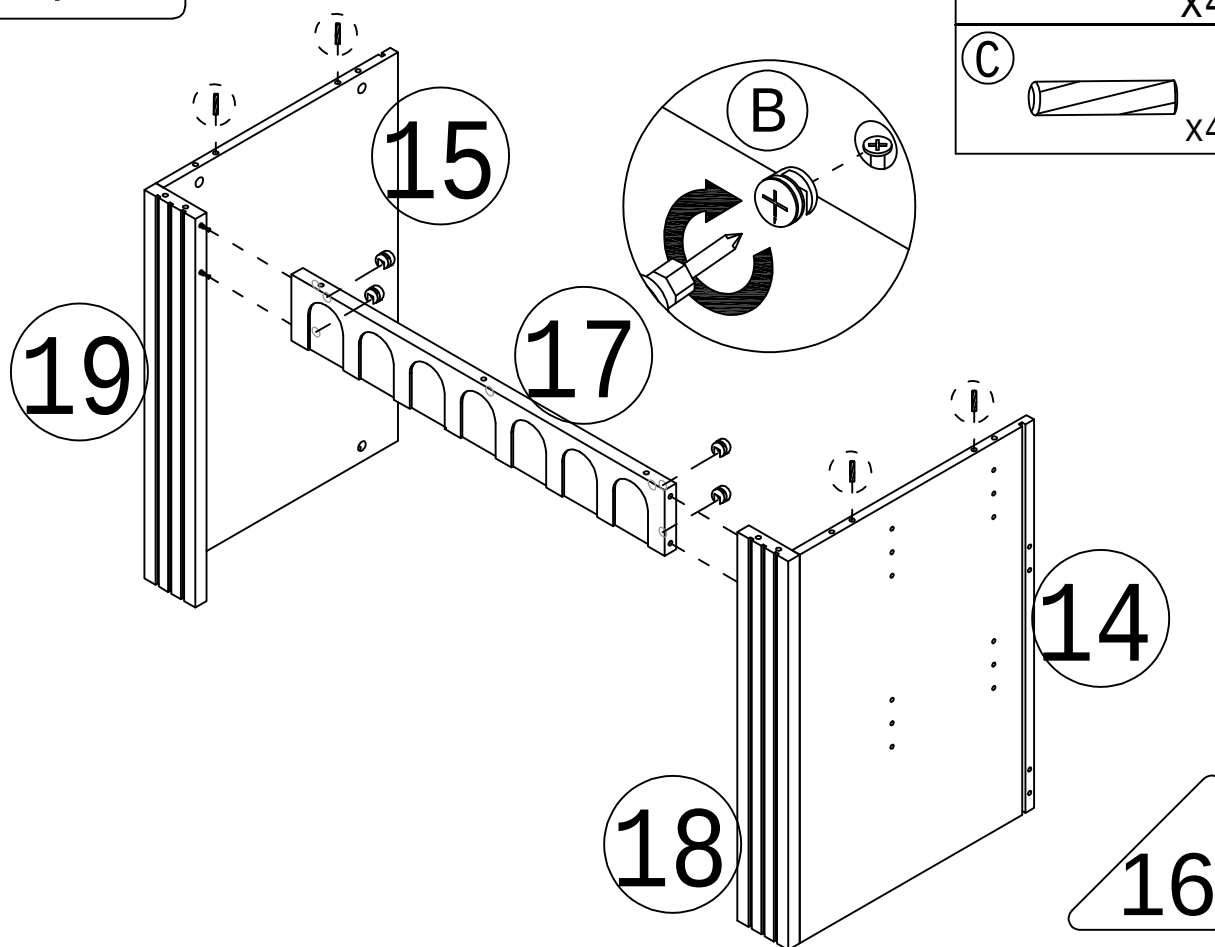

Step 21


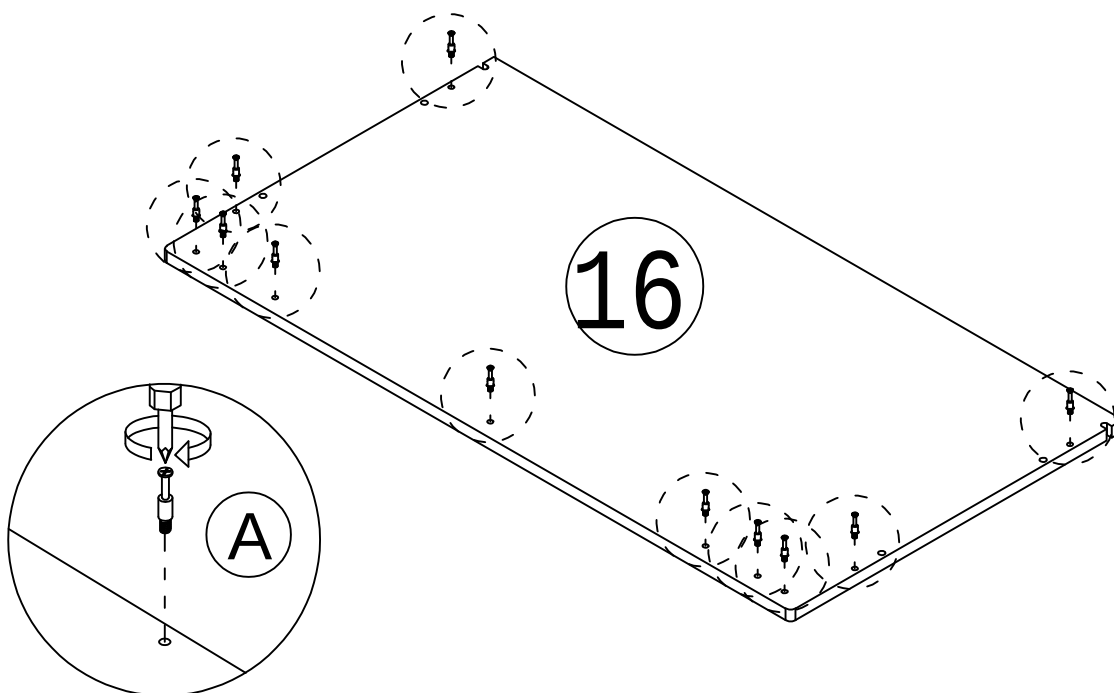
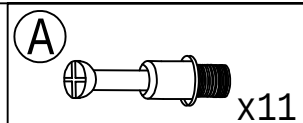


Step 22


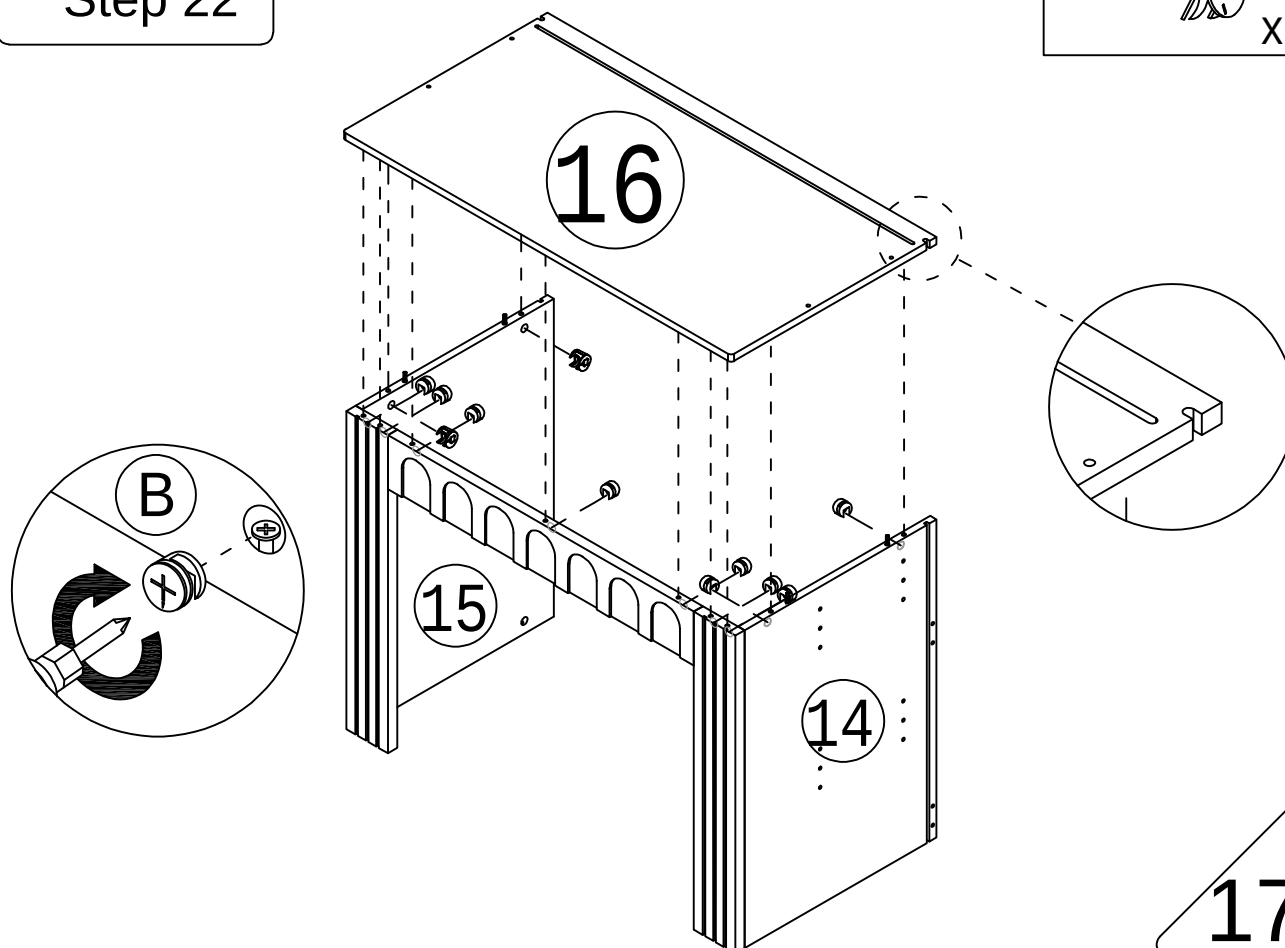
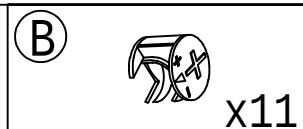


17




Step 23

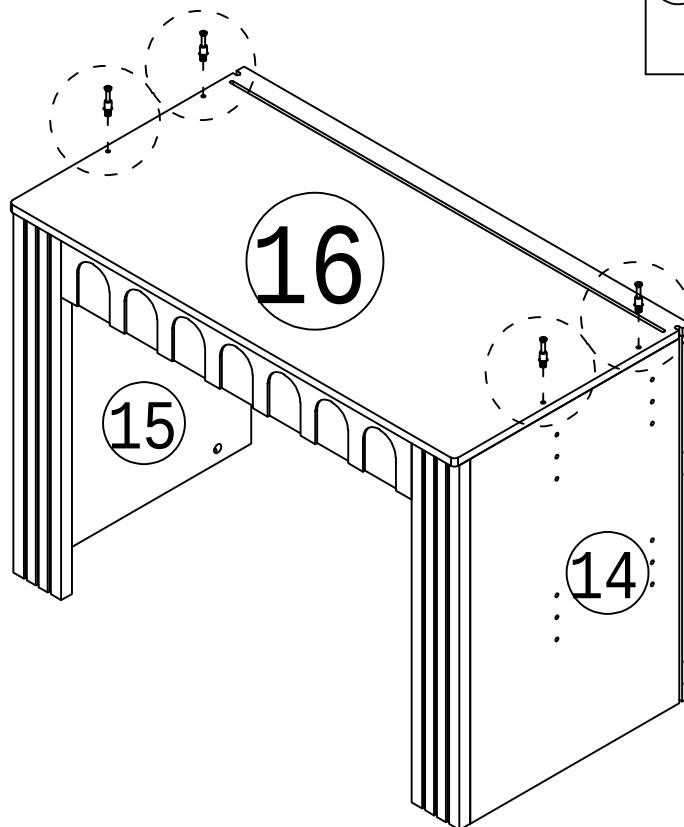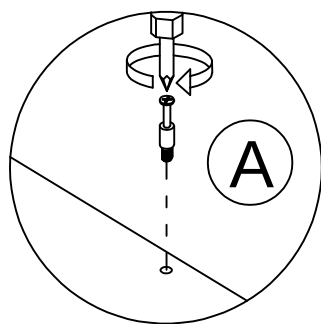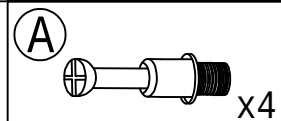



Step 24

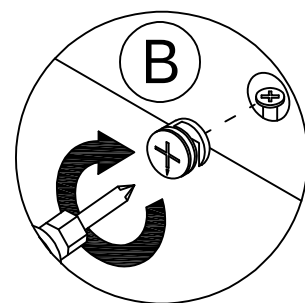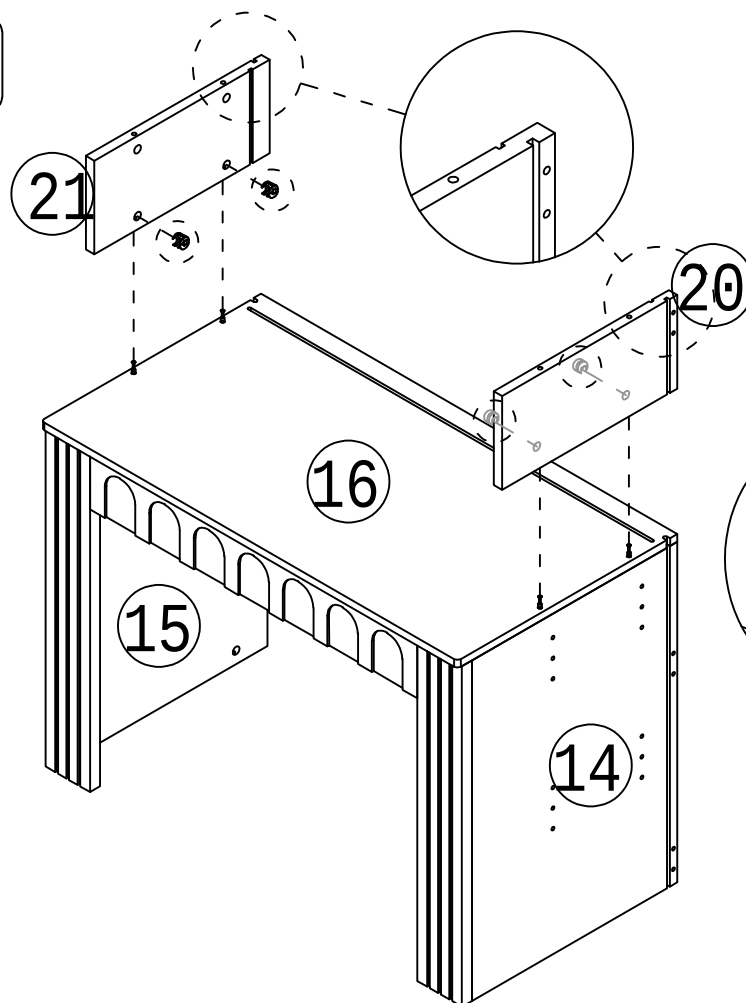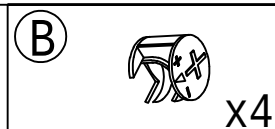



Step 25

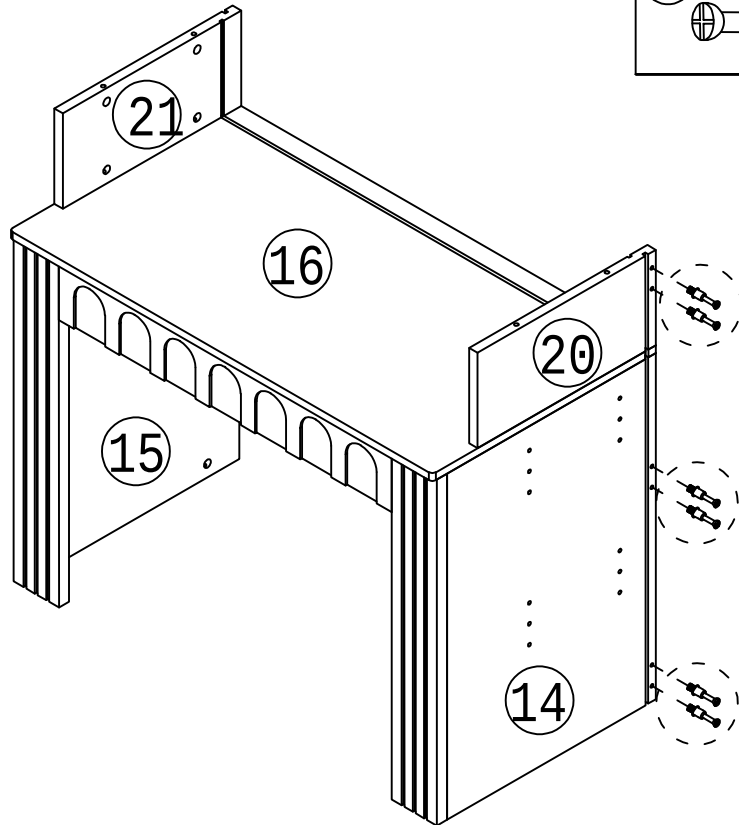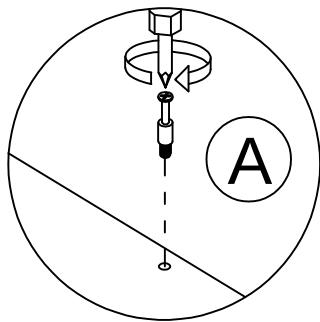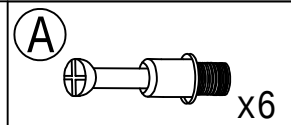



Step 26

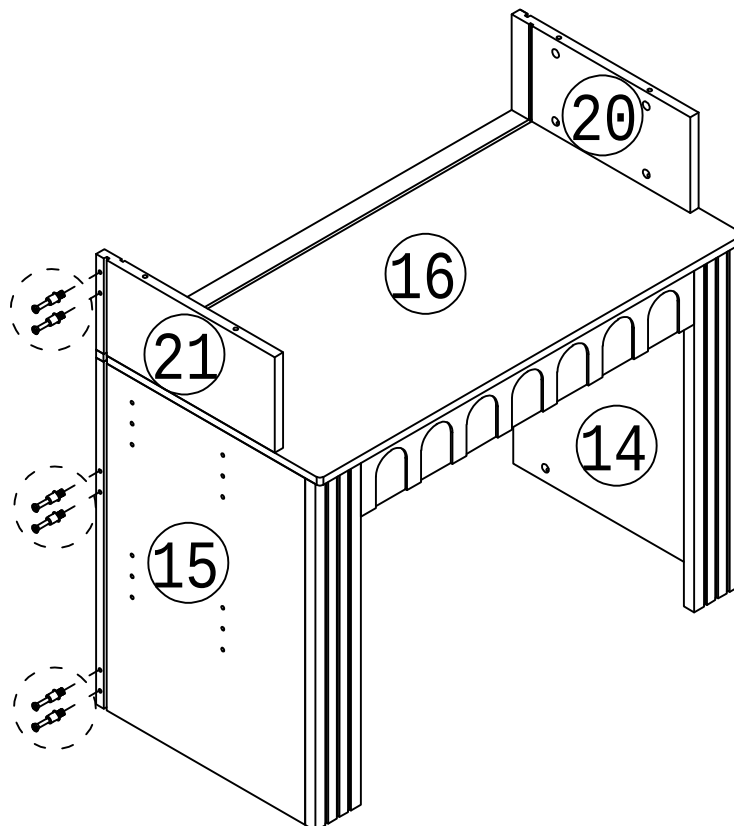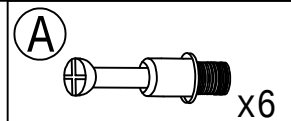



Step 27

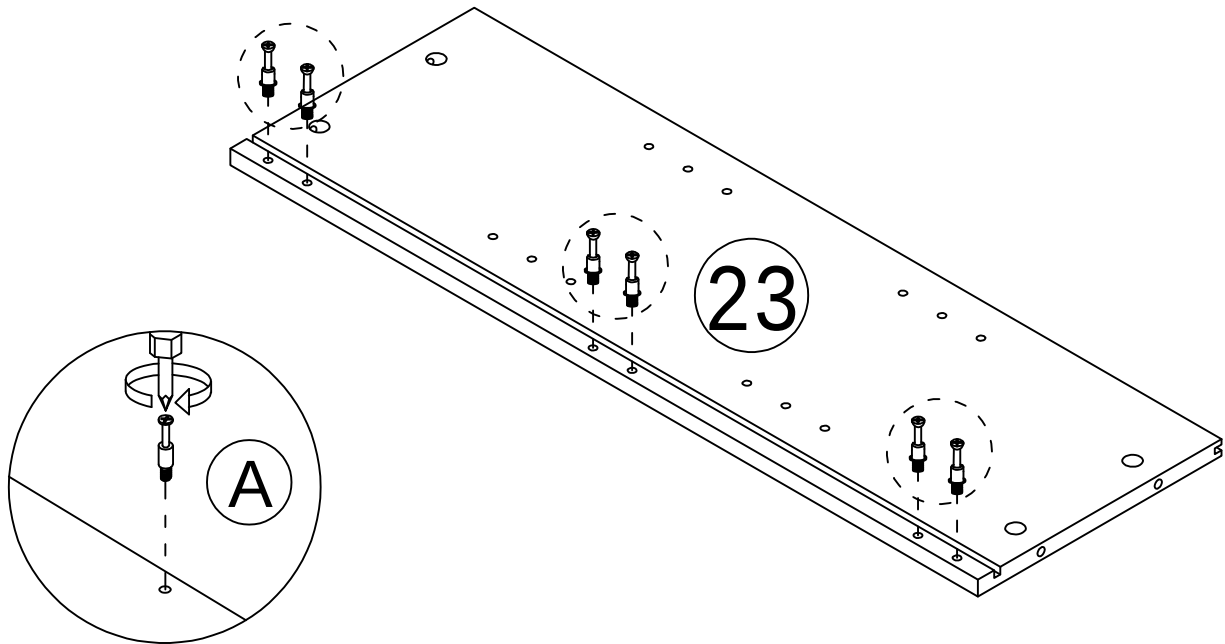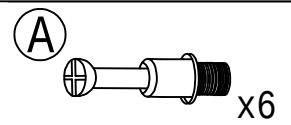



Step 28

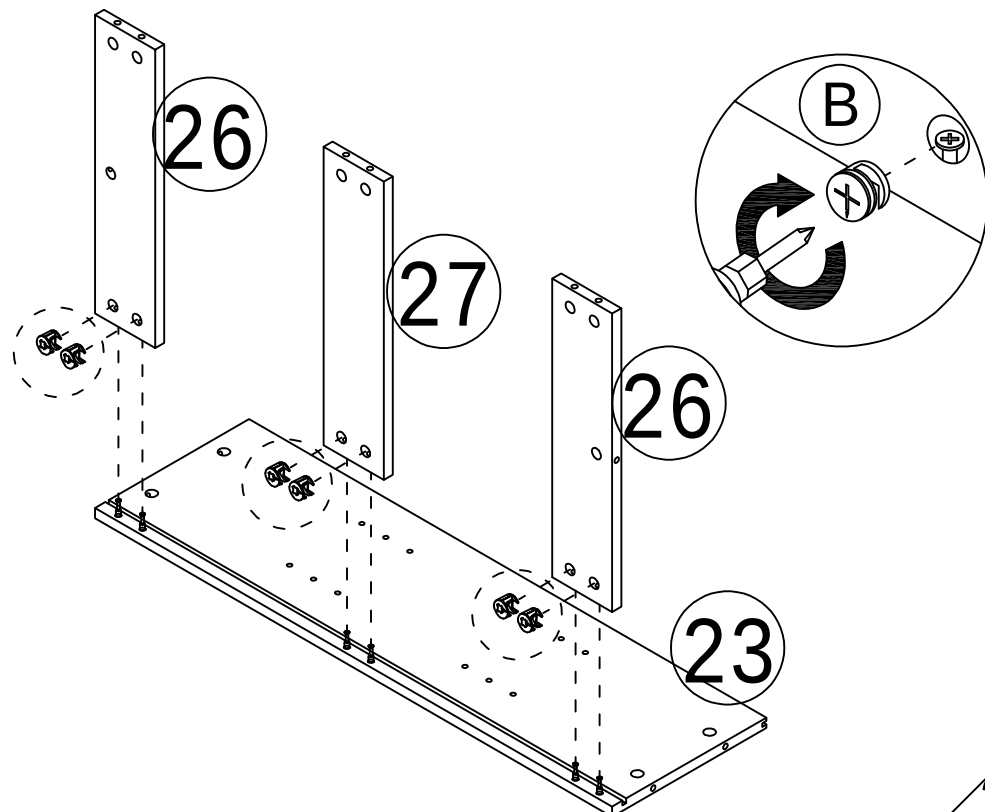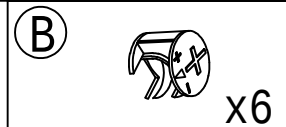


Step 29

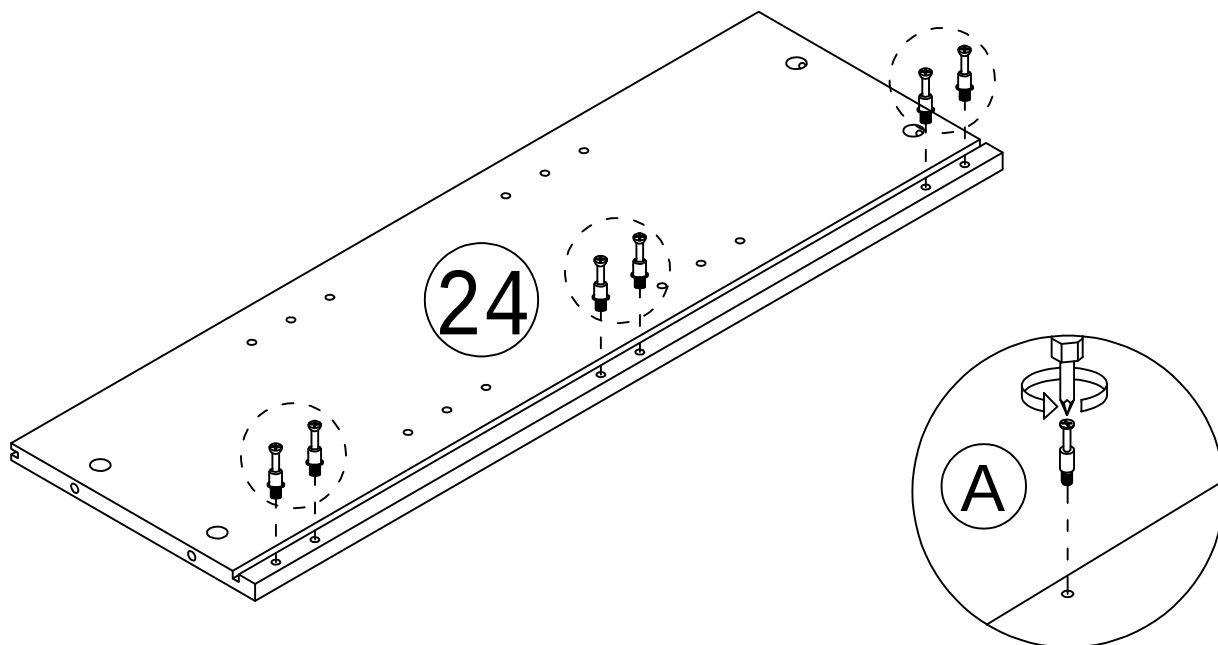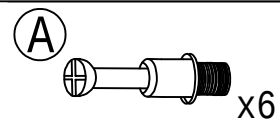



Step 30

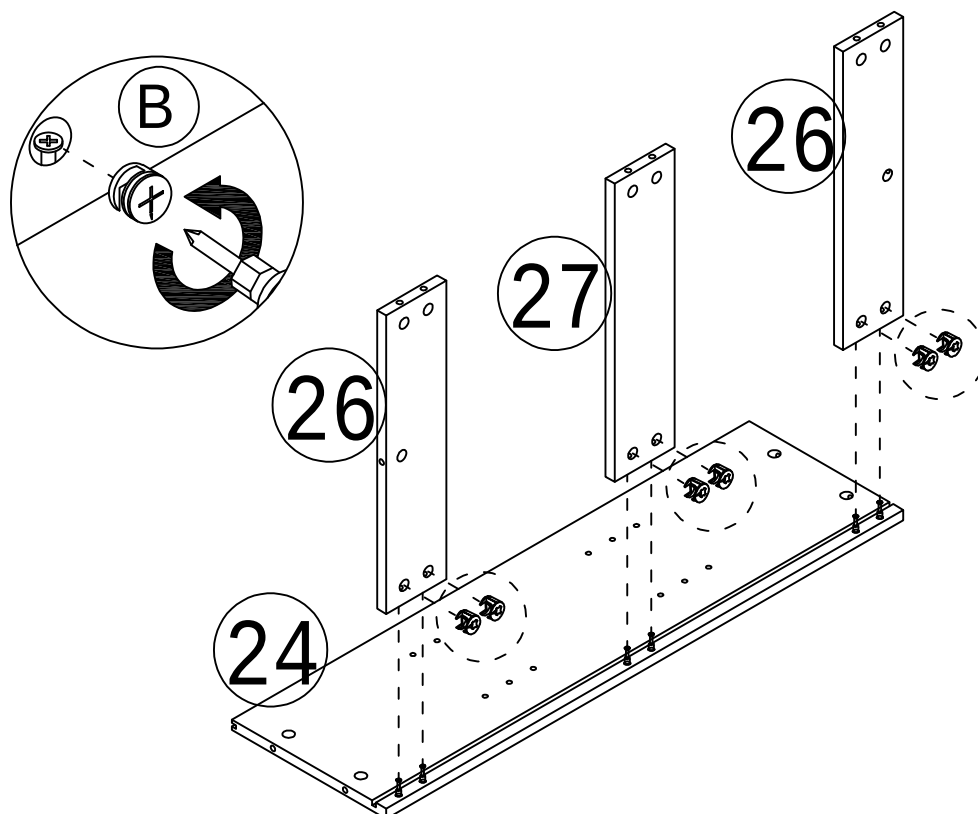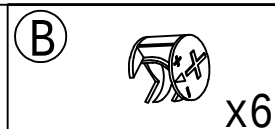

Step 31

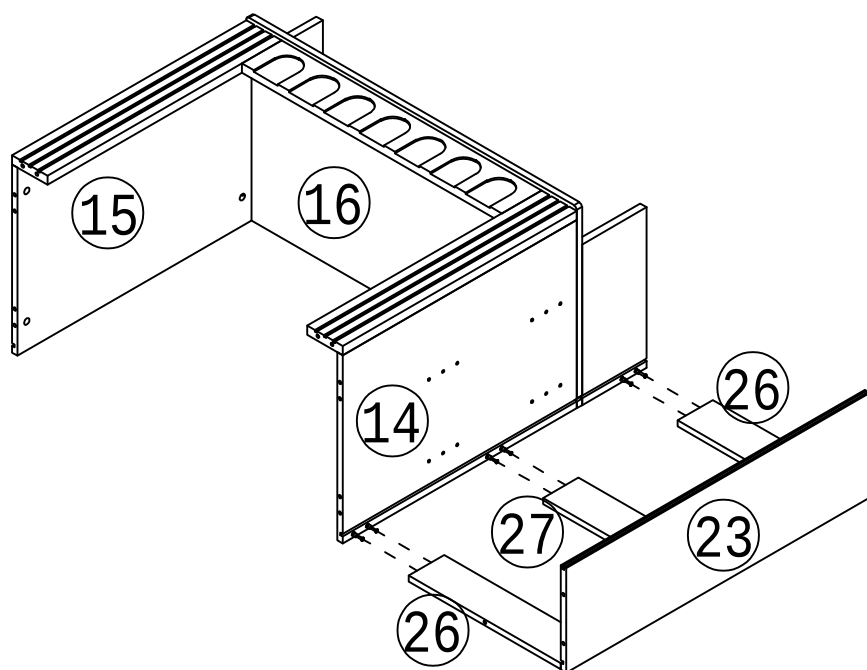

Step 32

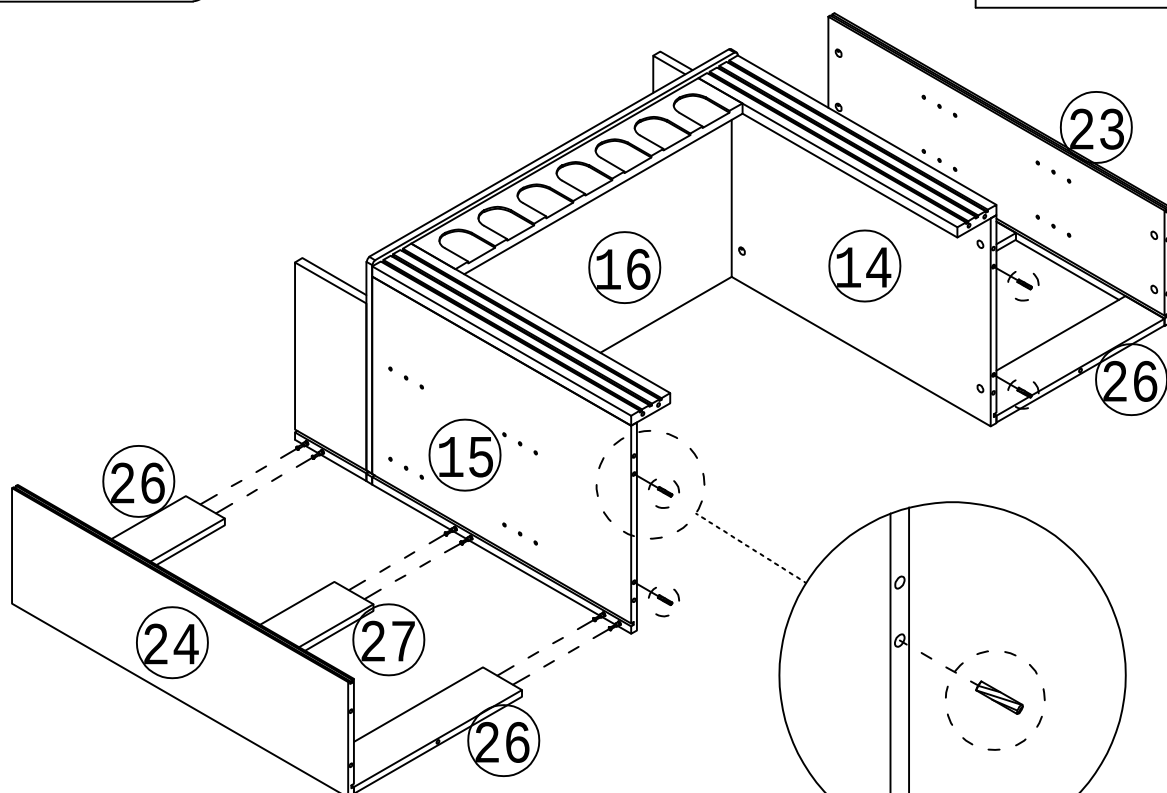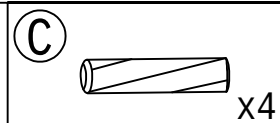


Step 33

(B)




x12

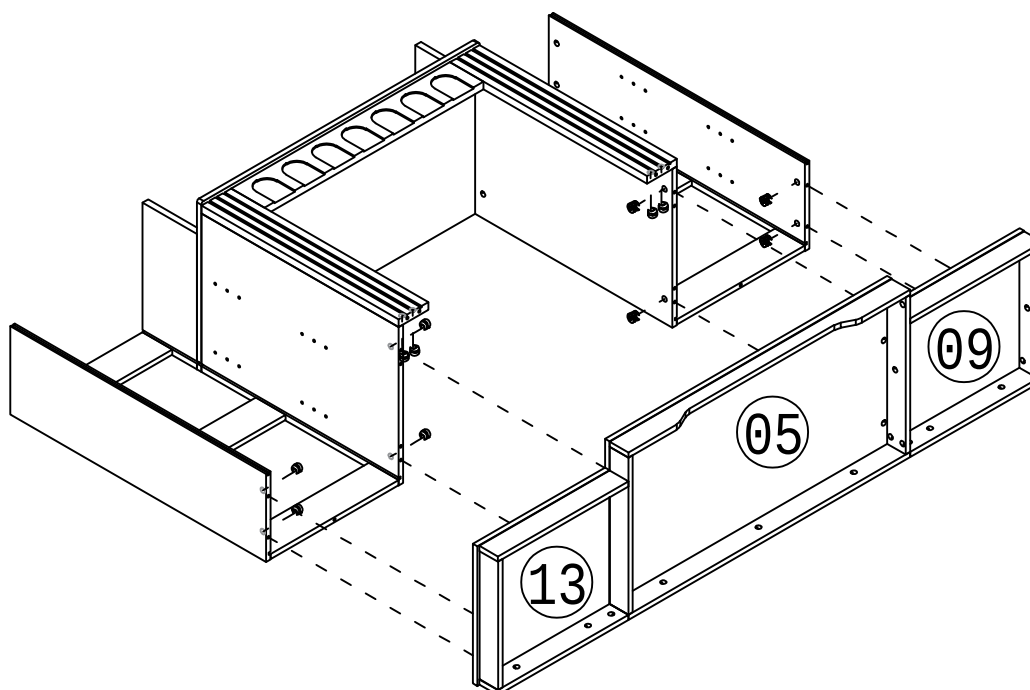

Step 34



This Step:
Need two persons to finish
otherwise the board will be damaged.

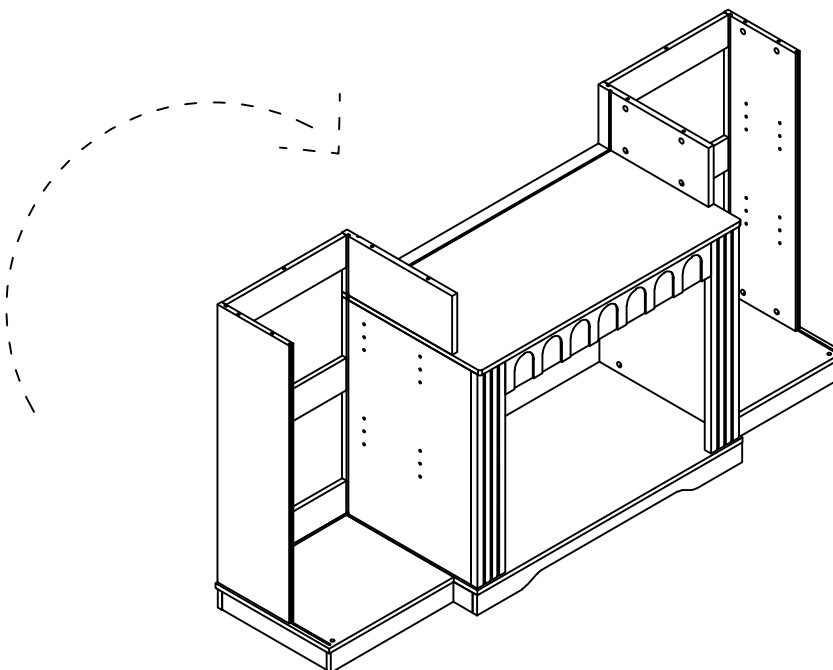



Make sure all screws are tightened before flipping the cabinet over

Step 35


B




x14

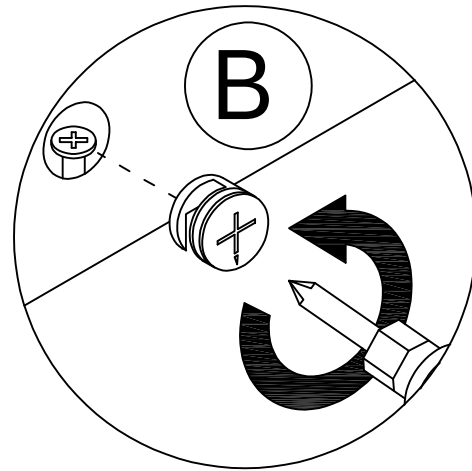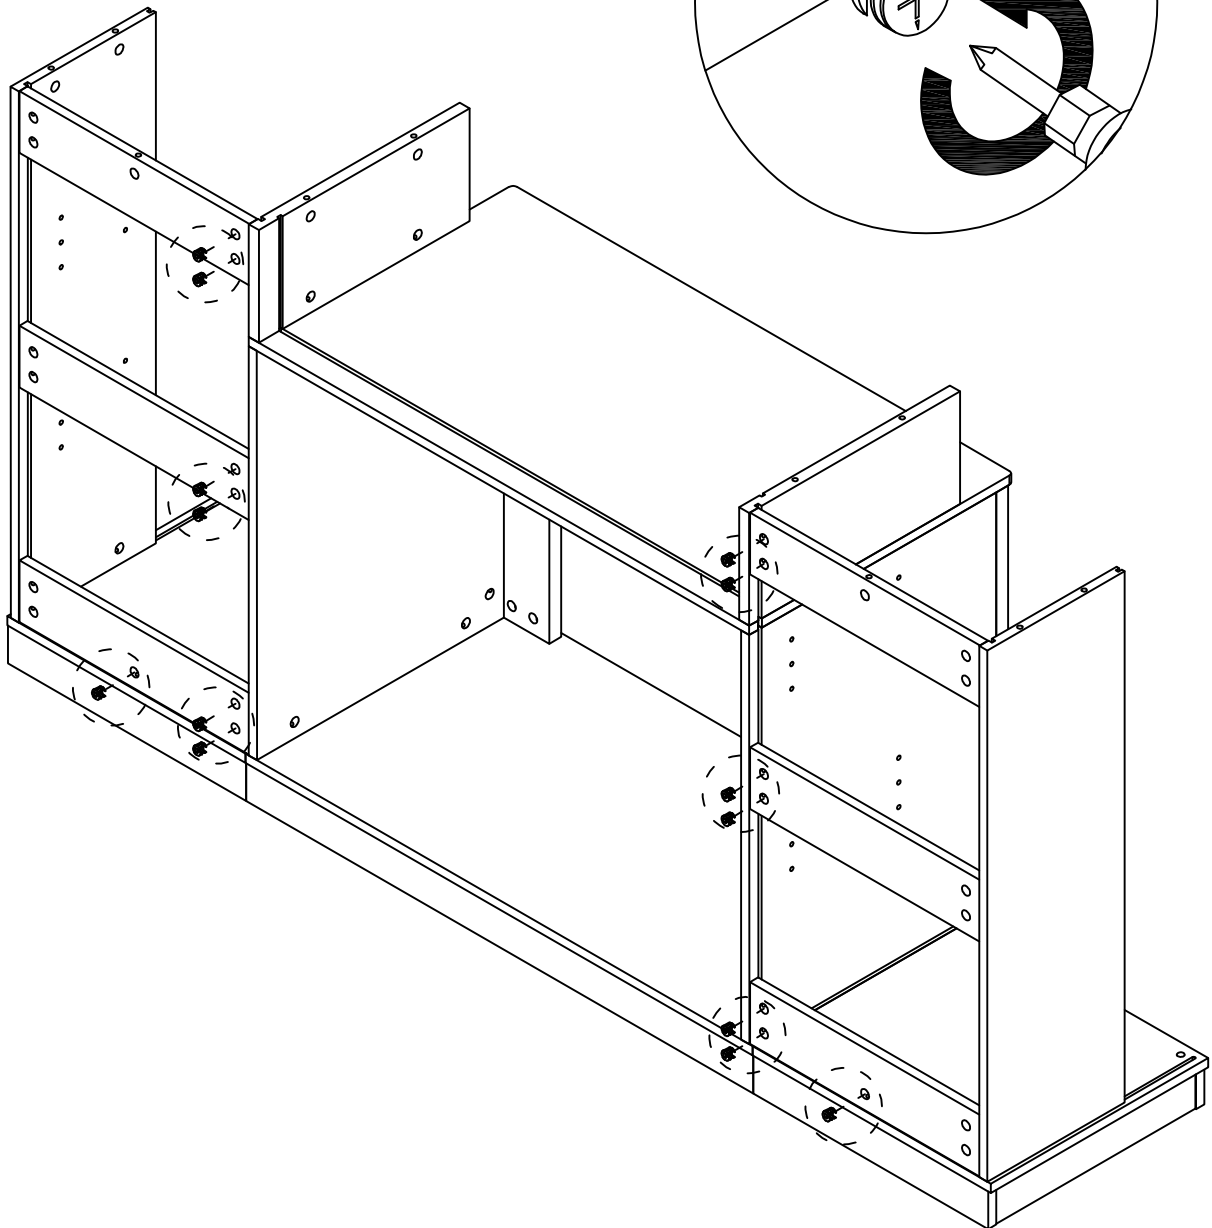





Step 36

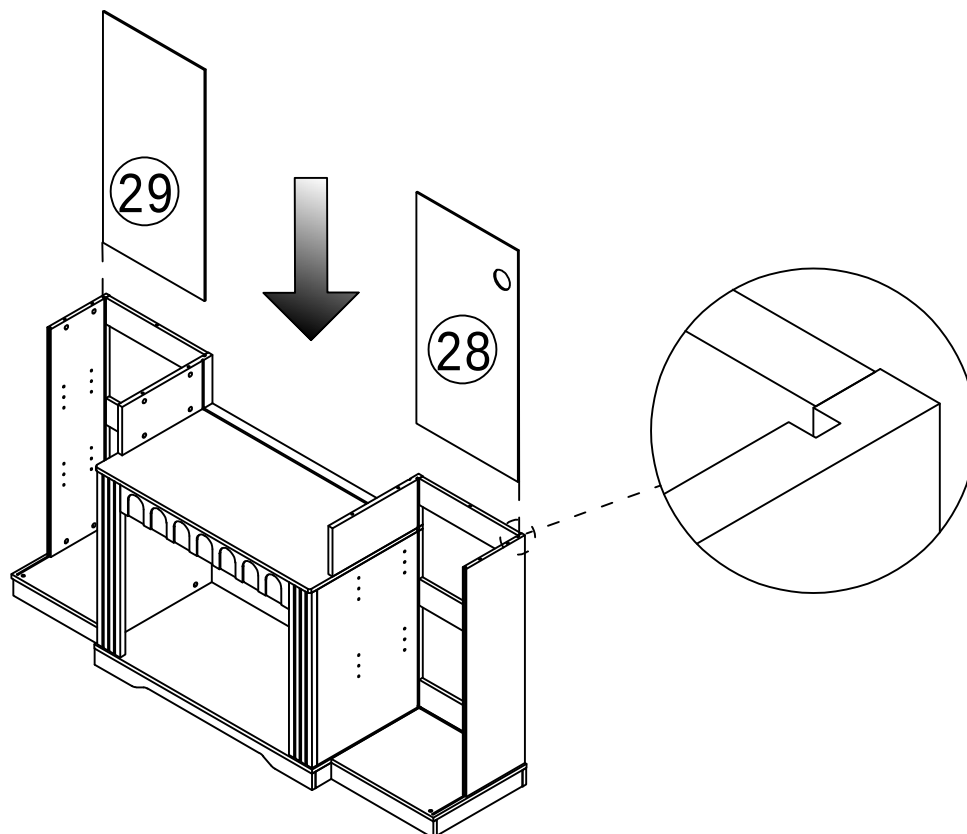





Step 37

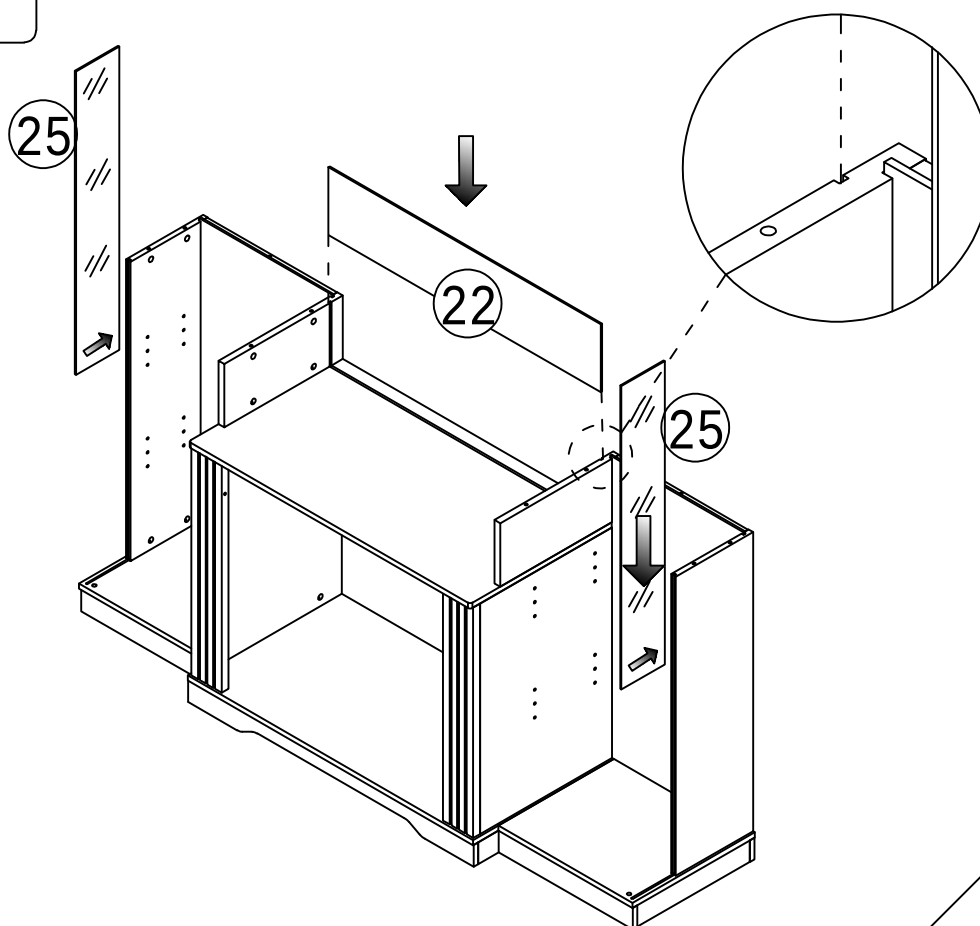

Step 38

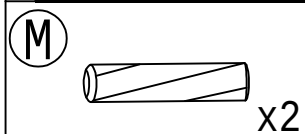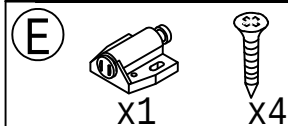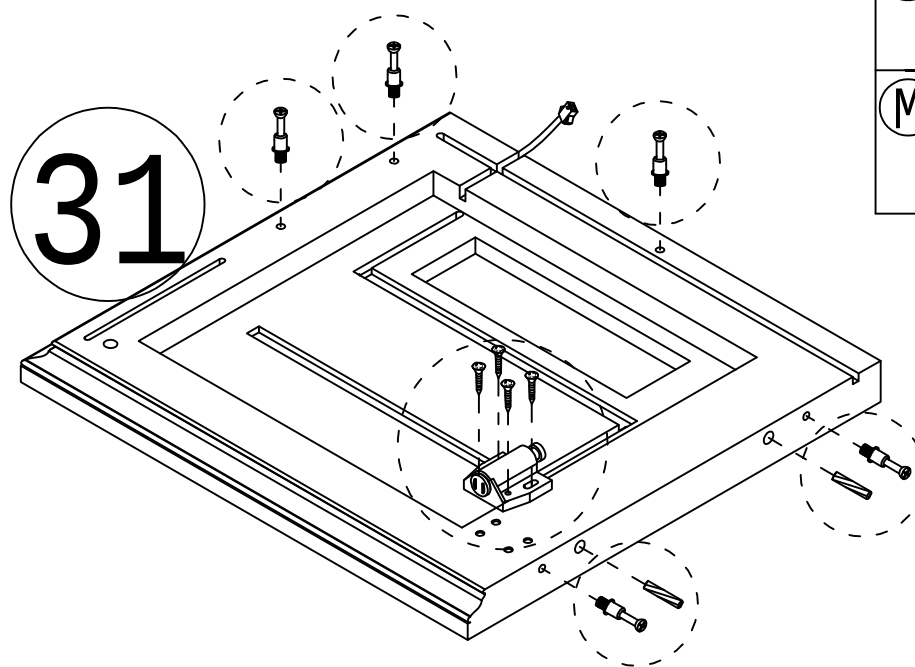

Step 39

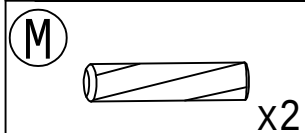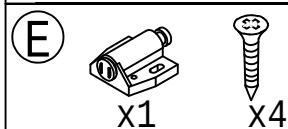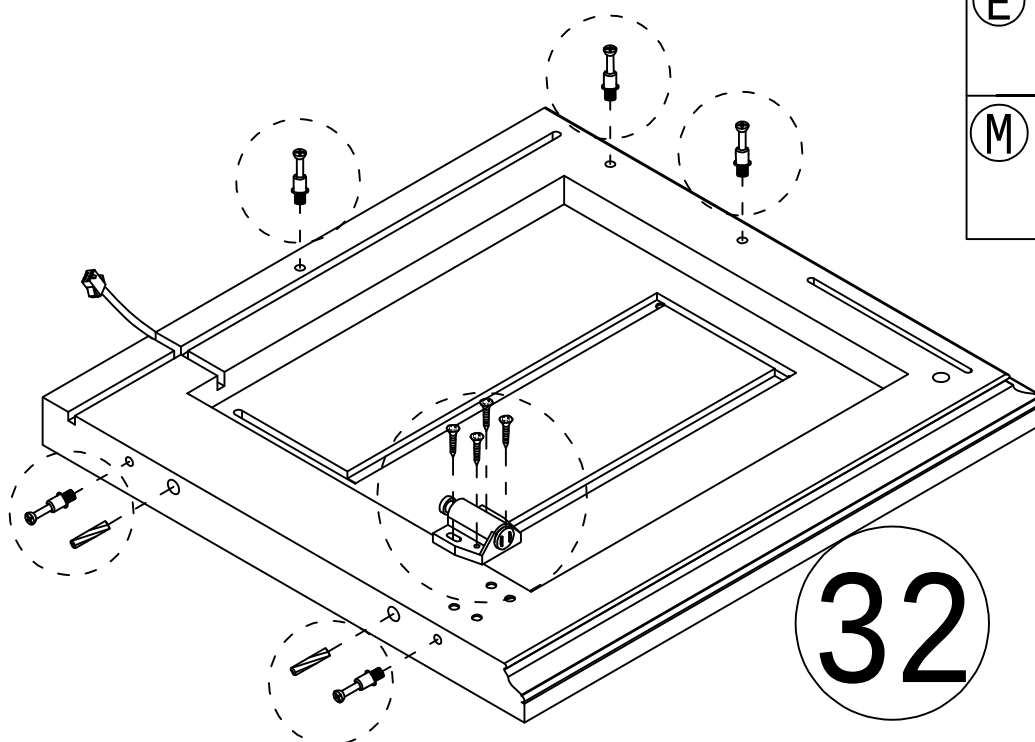


Step 40

(B)




x4

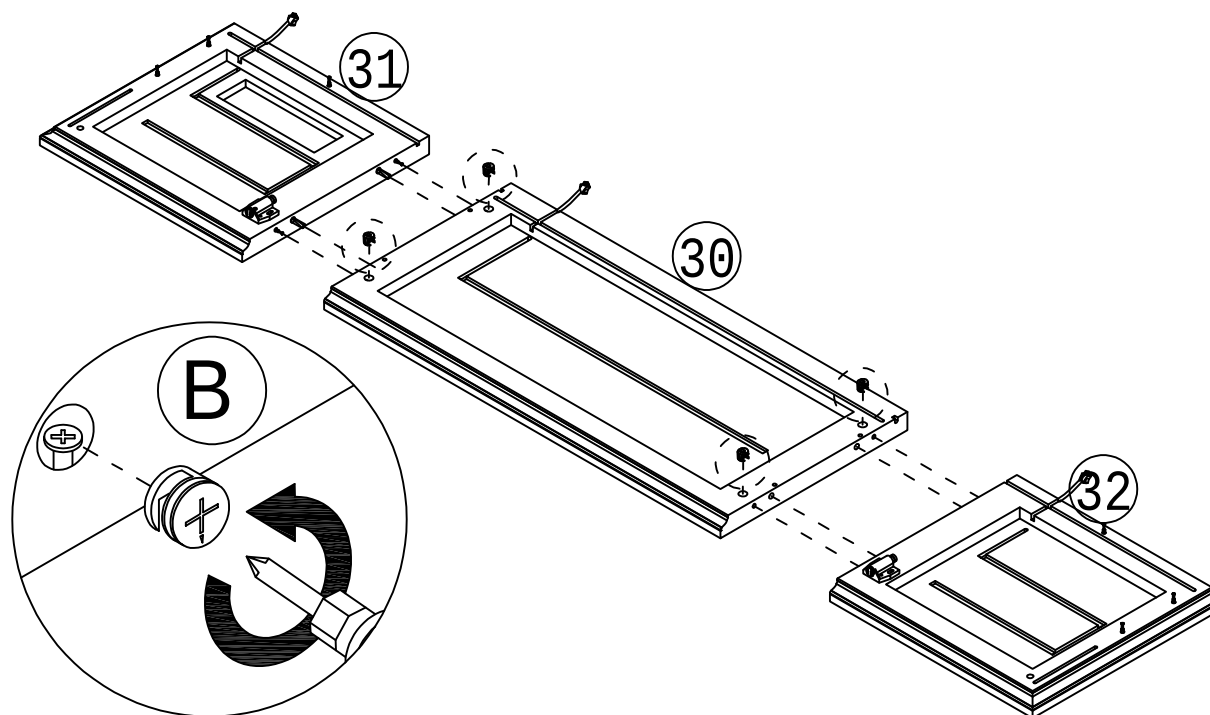


Step 41

(A)



x4

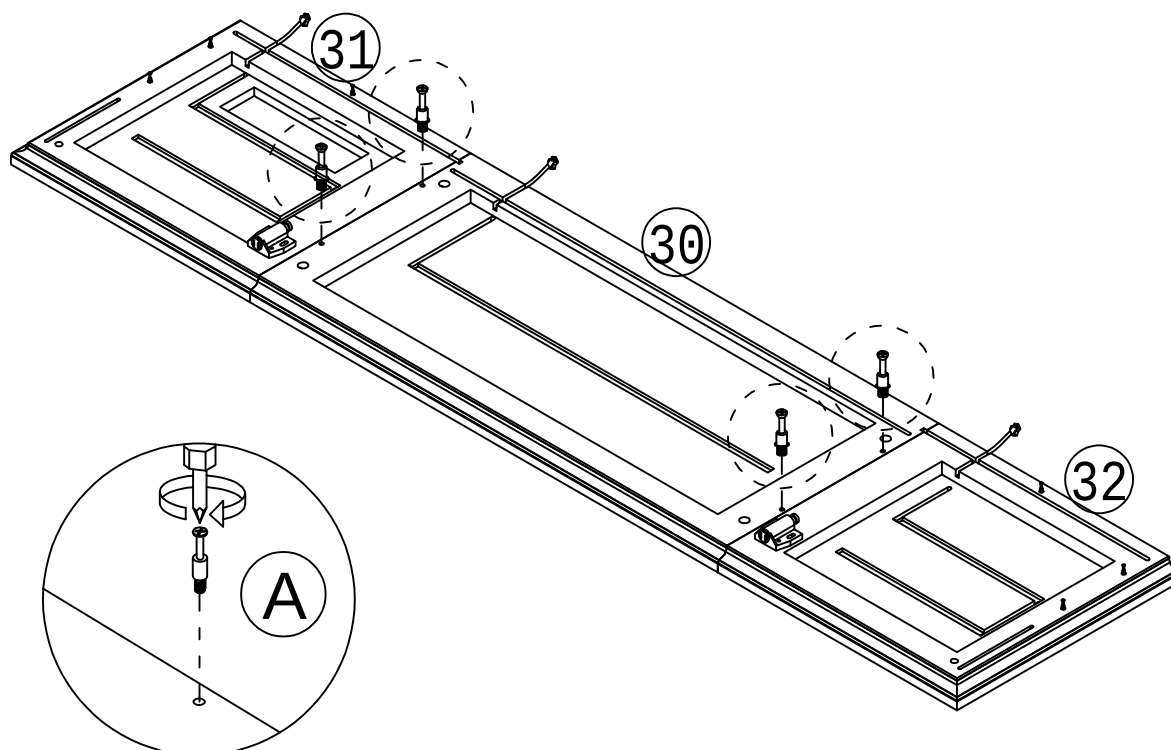

Step 42


(B)



x10







This Step:
Need two persons to finish
otherwise the board will be damaged.

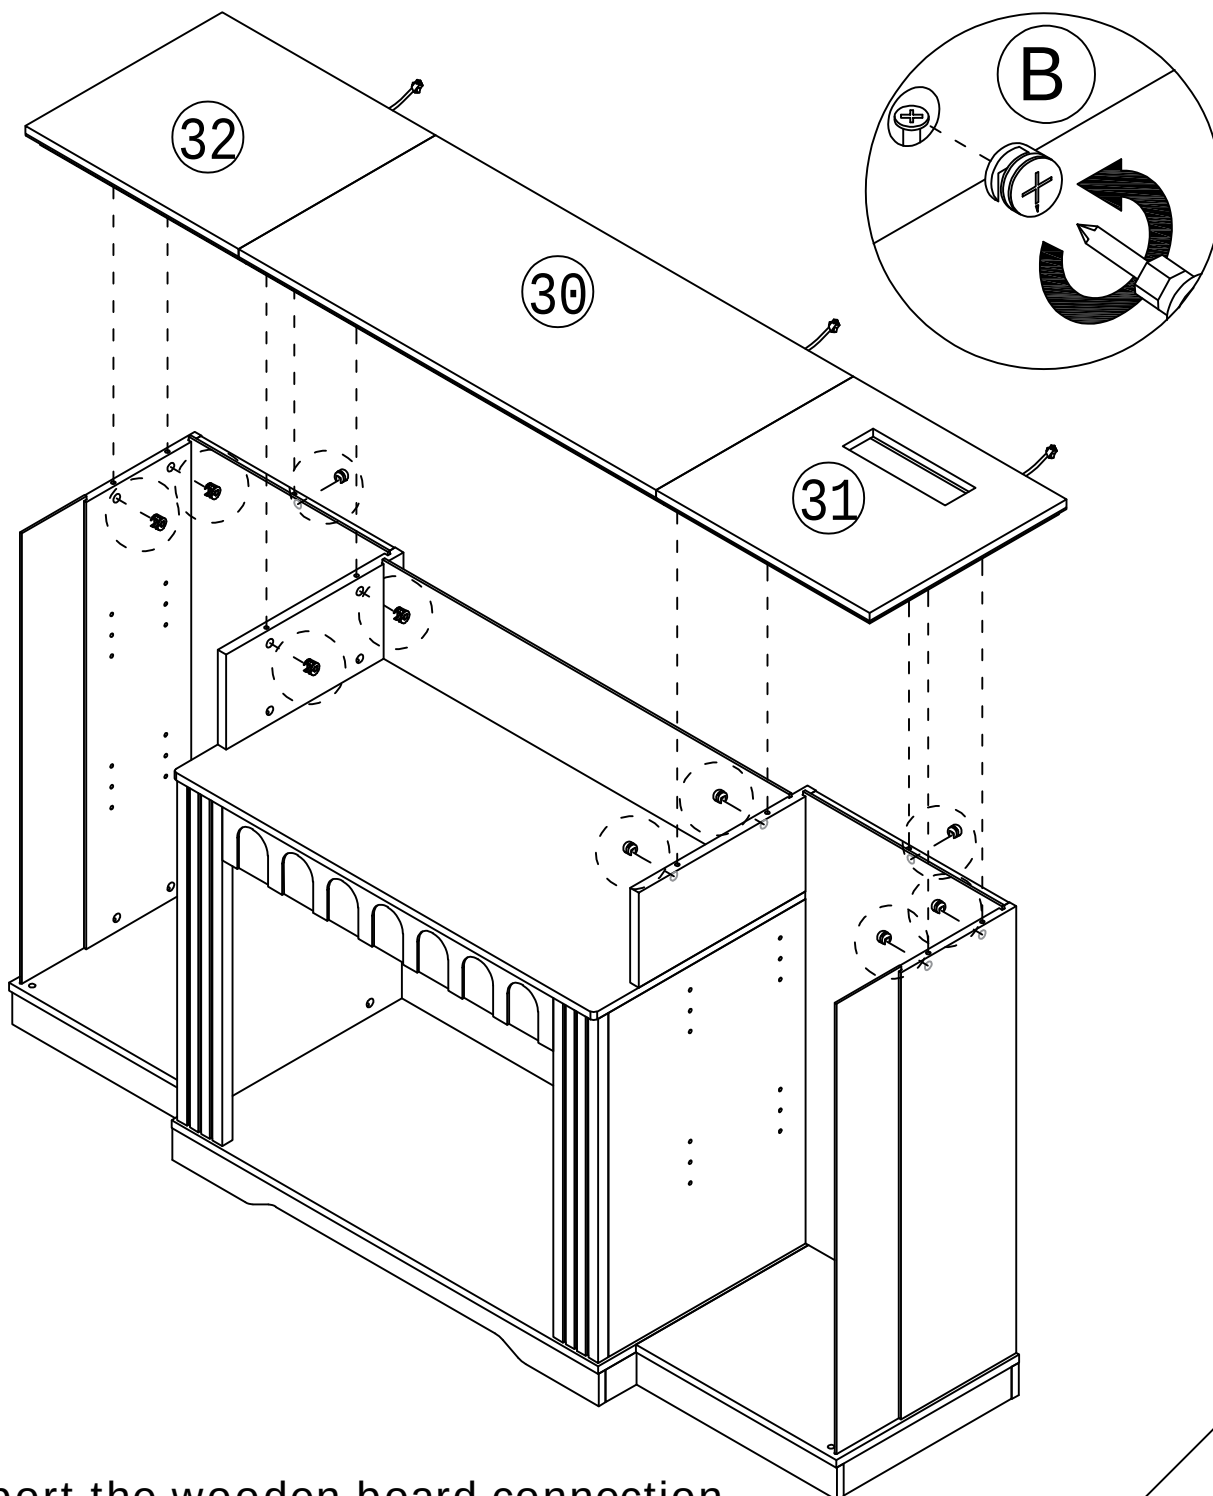


Support the wooden board connection
during installation to prevent damage

Step 43

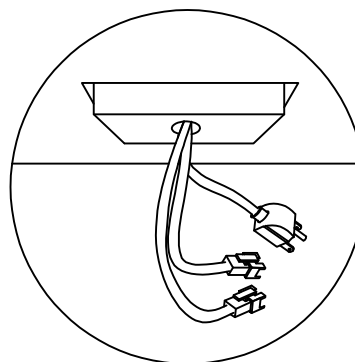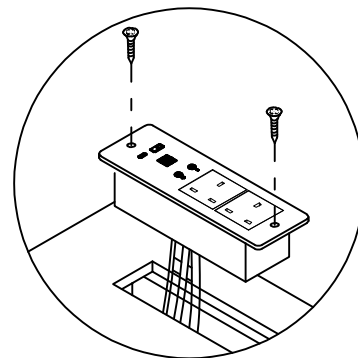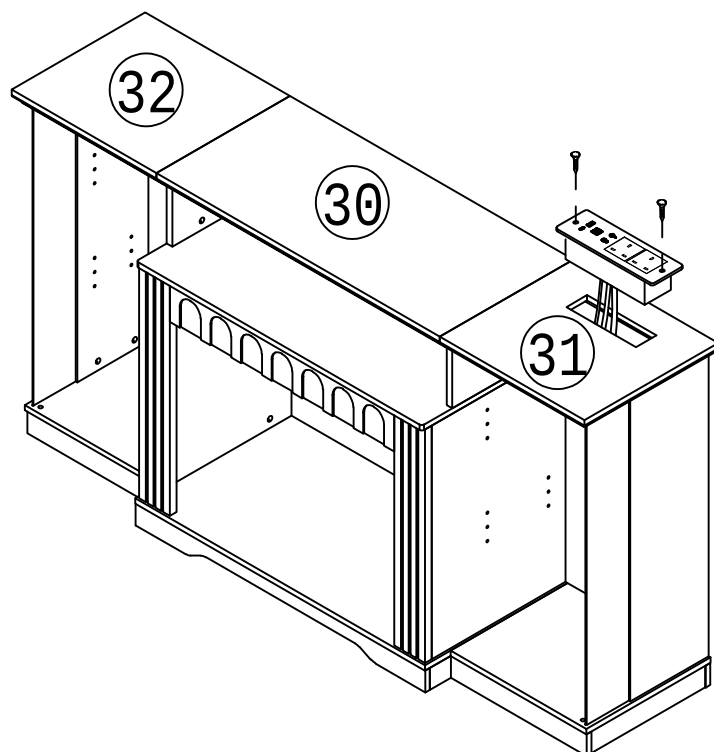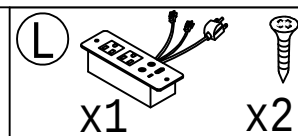


Step 44

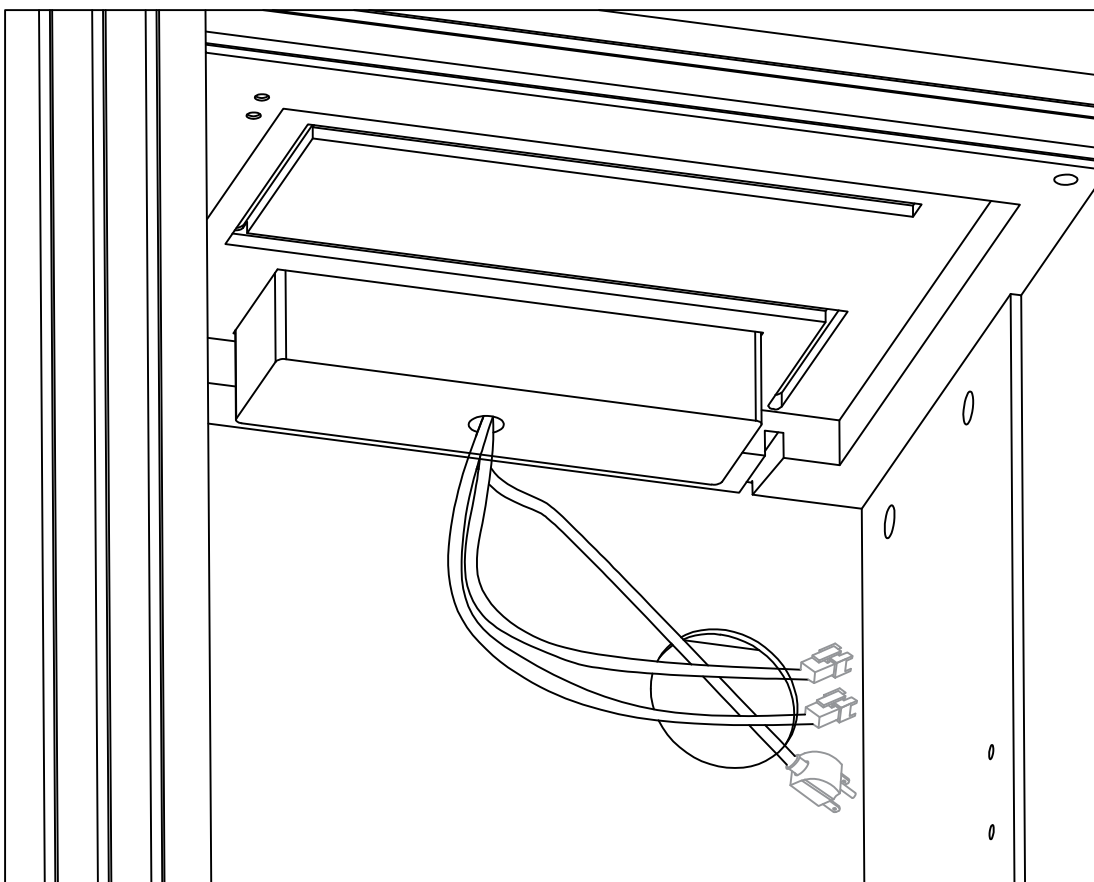


Step 45

G  x8

N  x8

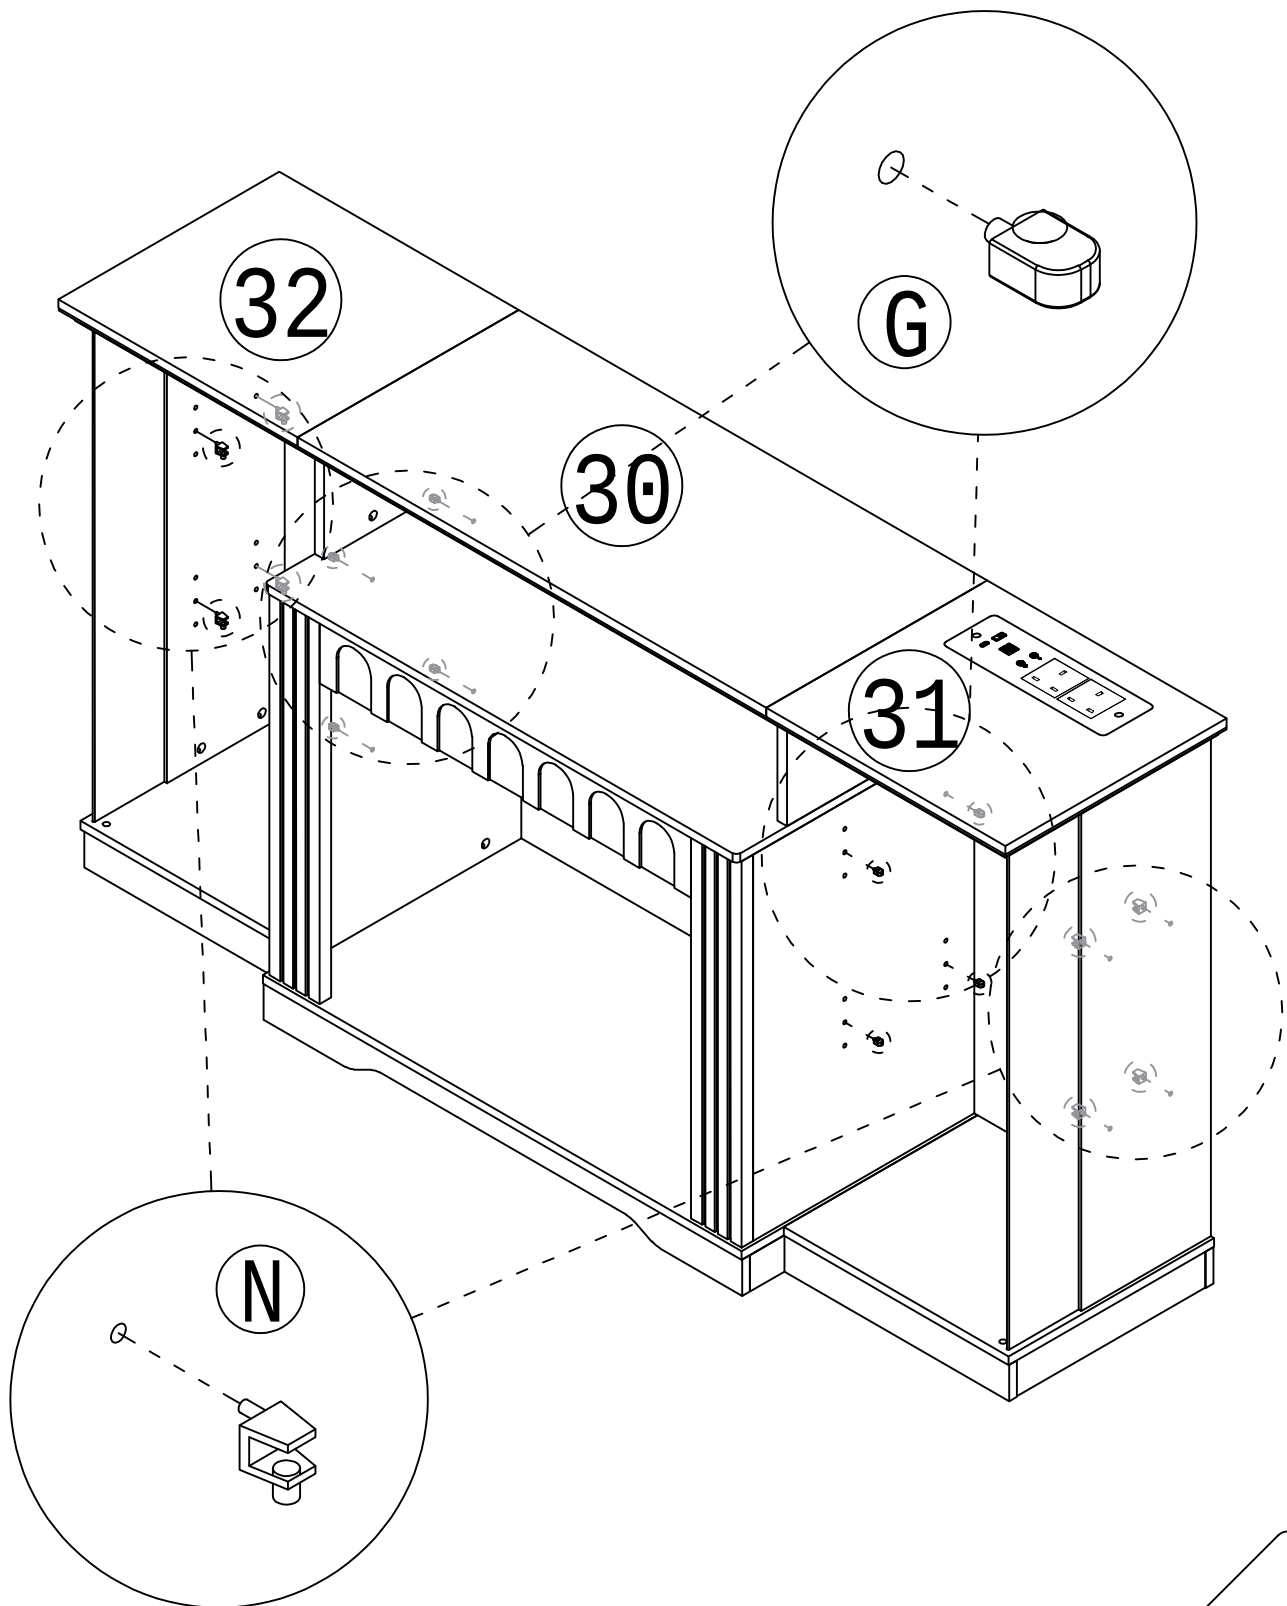

Step 46

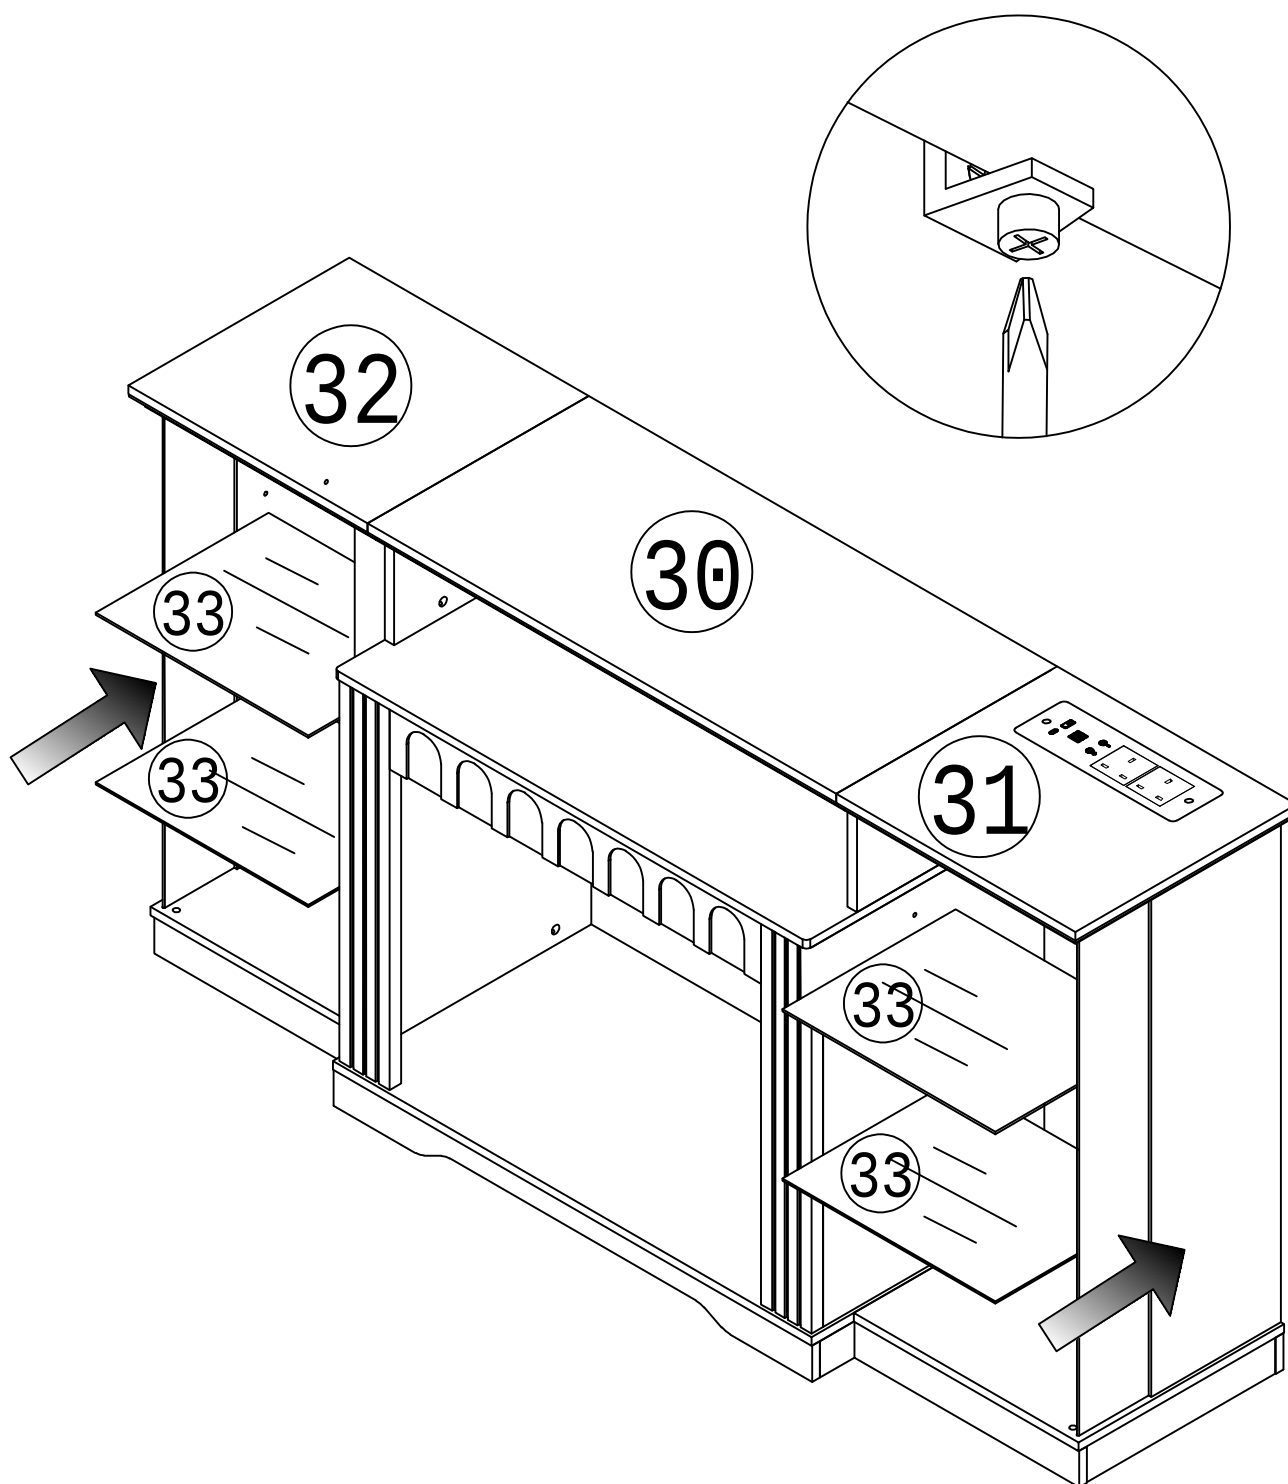


Step 47


(E)






x2



x1




x1

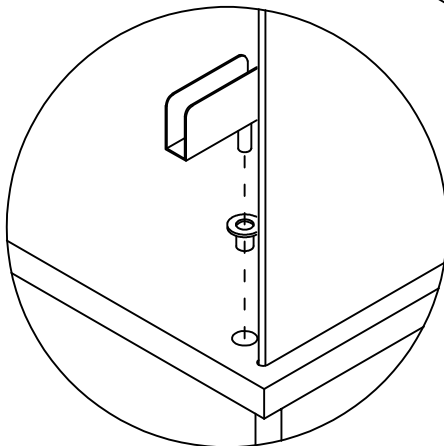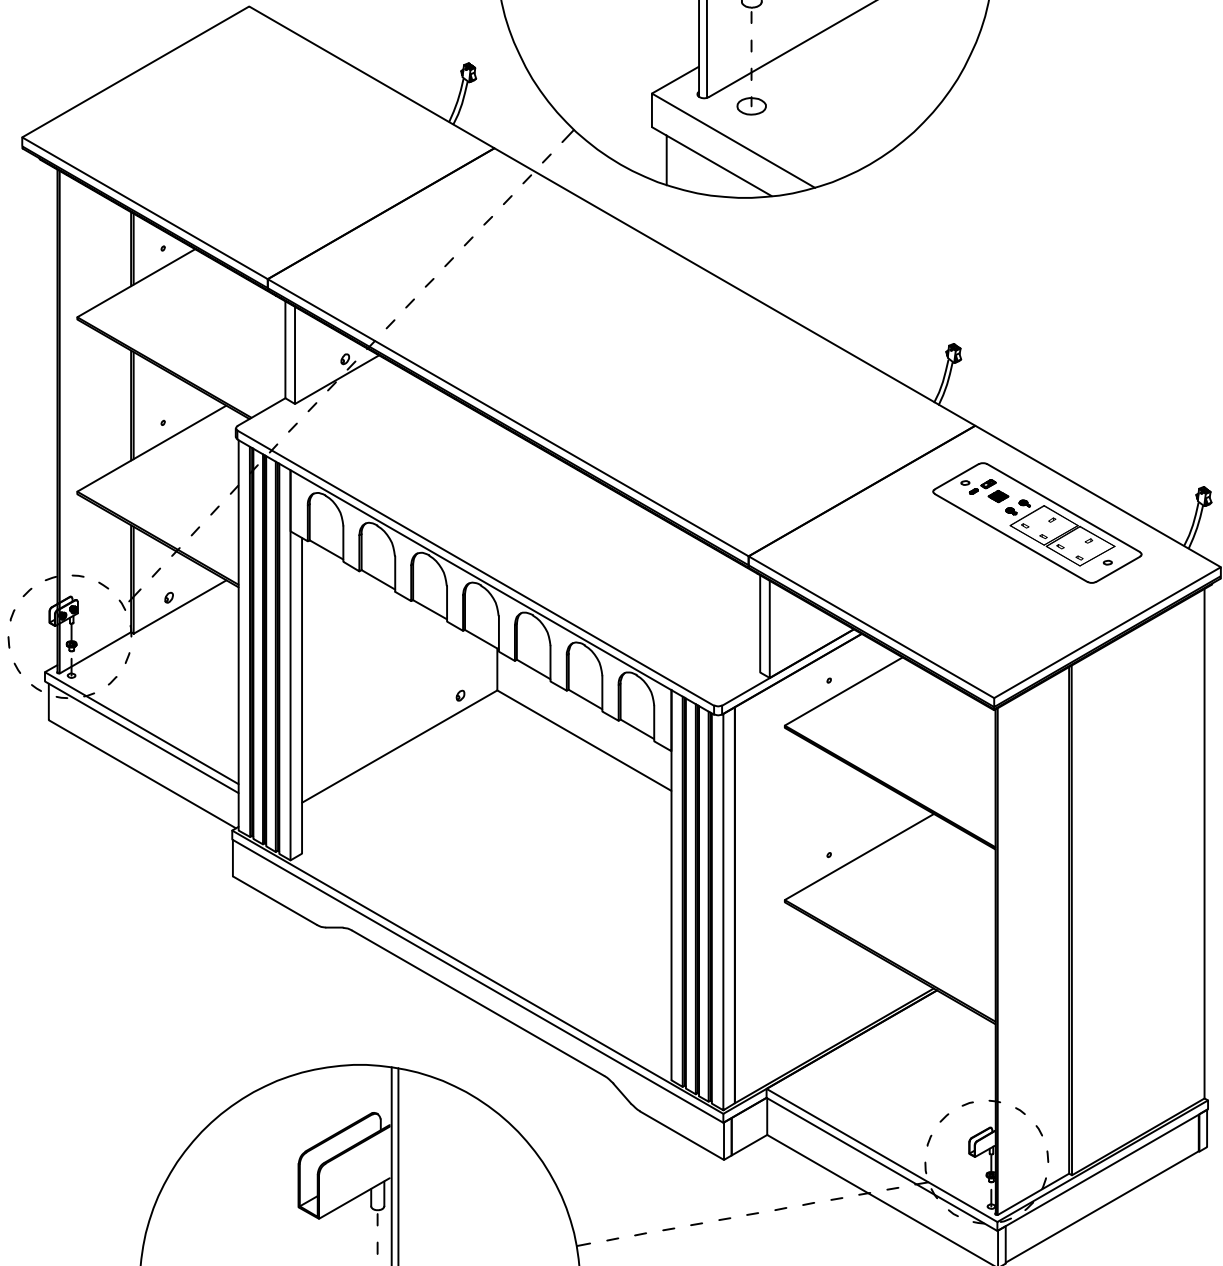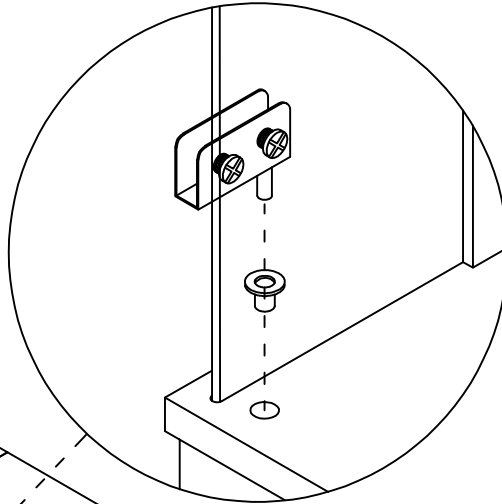


Step 48

First, completely unscrew the screws on the parts

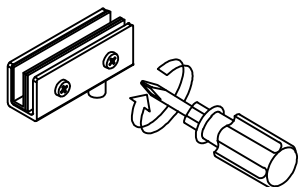

Then take out the black rubberpad from the inside of the part, and the white sponge remains unchanged inside the part.

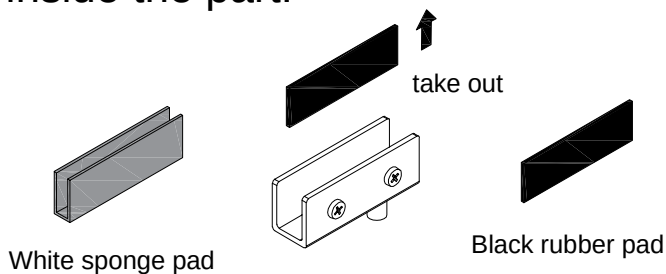

E




x1



x1

The distance between the mounting piece and the glass should be 2 mm, which can be adjusted left and right and fixed as needed.

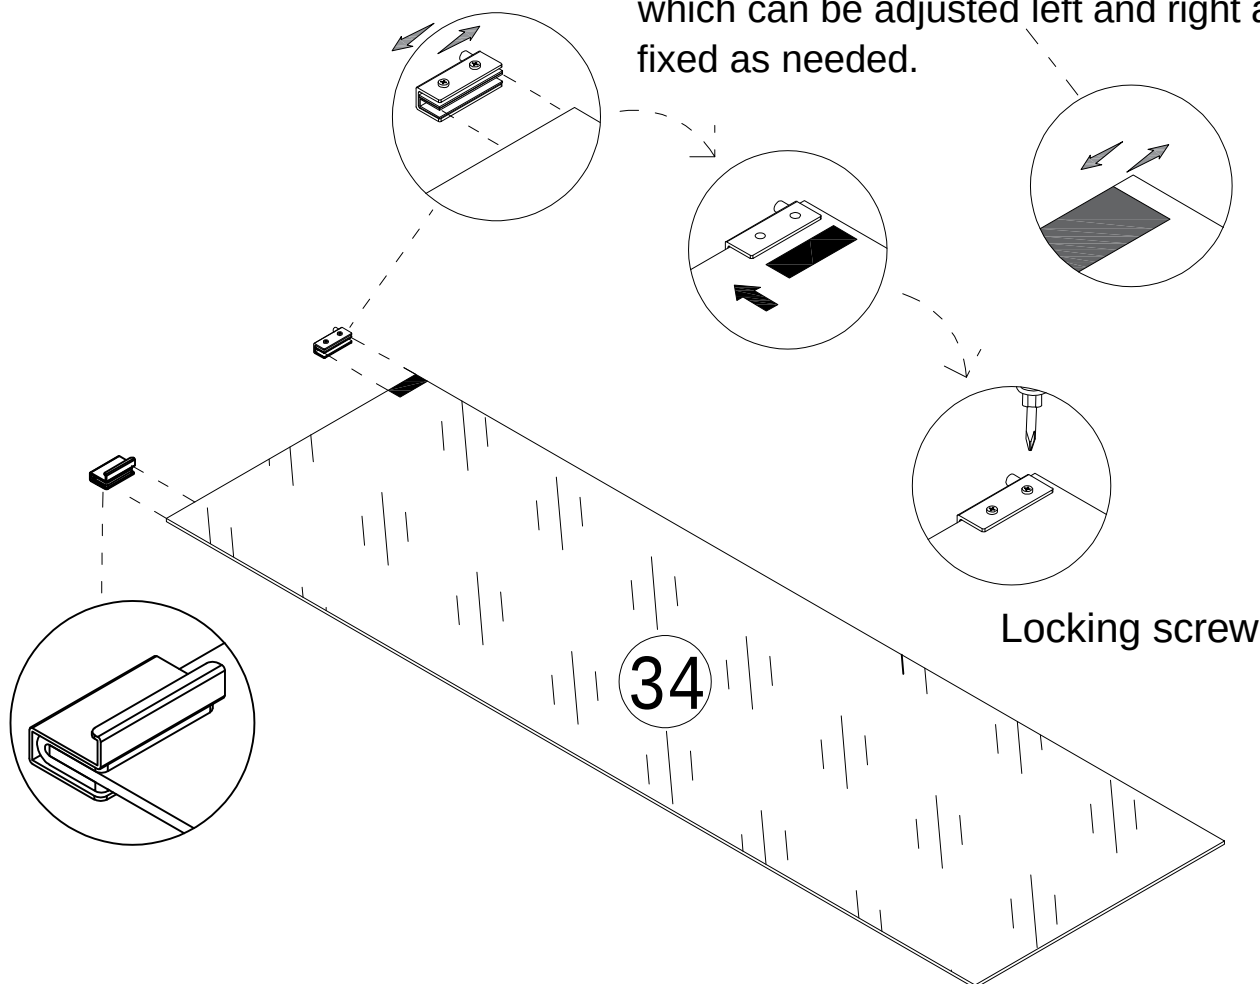


Locking screw

Pay attention to the direction of the door hinge rotate the screws to compress the black gasket. and do not place it in the opposite direction


Place the black gasket on the side where the screws are installed

Step 49

First, completely unscrew the screws on the parts

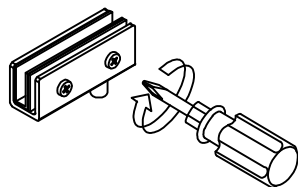

Then take out the black rubberpad from the inside of the part, and the white sponge remains unchanged inside the part.

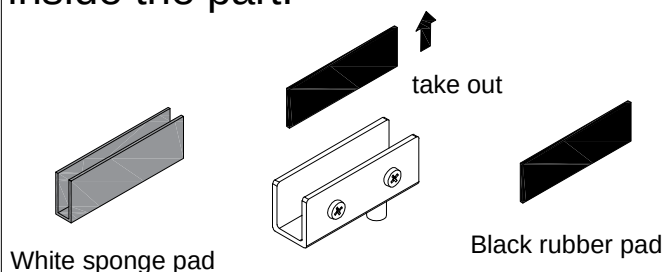

E




x1



x1

The distance between the mounting piece and the glass should be 2 mm, which can be adjusted left and right and fixed as needed.

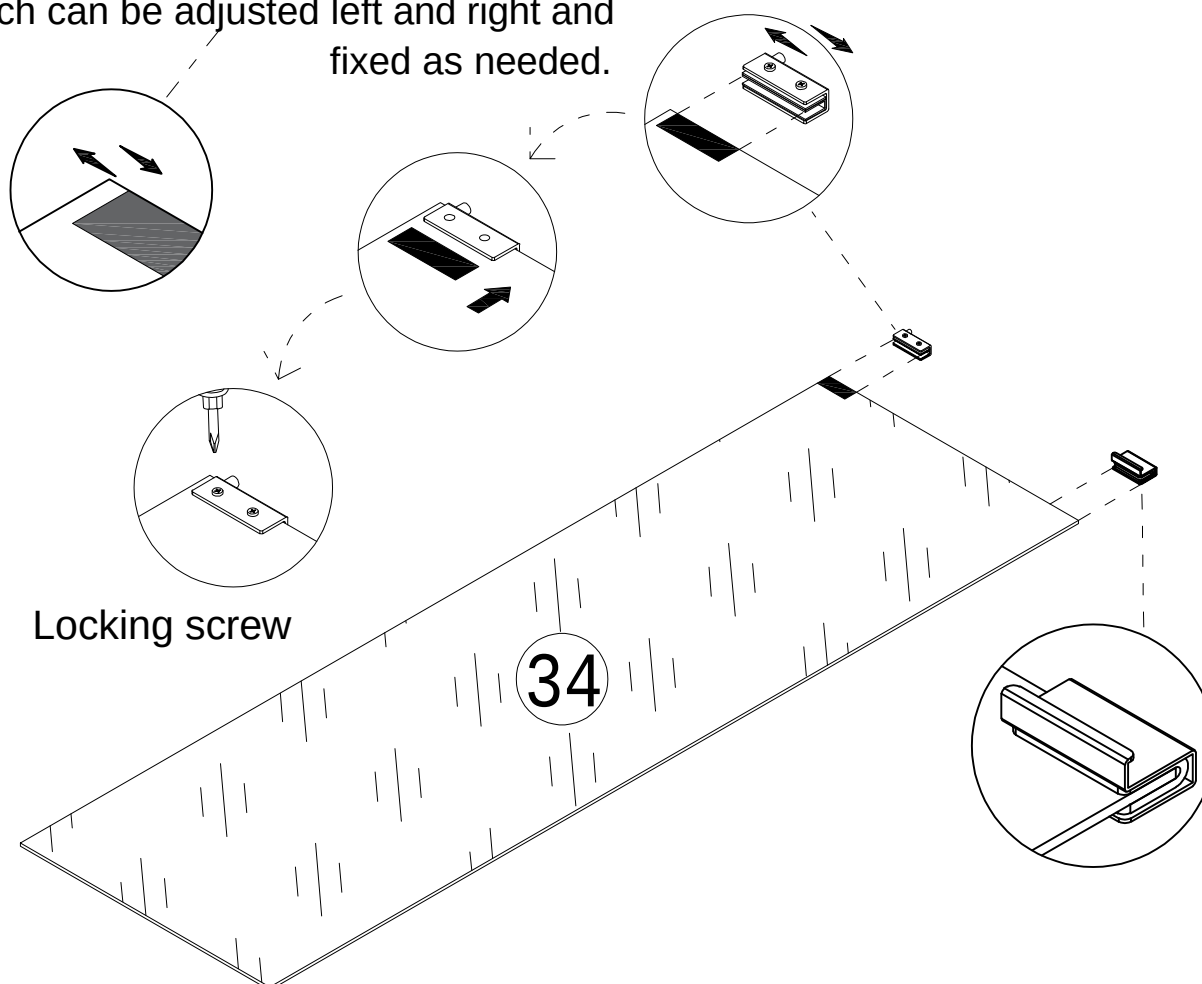

Locking screw

Pay attention to the direction of the door hinge rotate the screws to compress the black gasket. and do not place it in the opposite direction

Place the black gasket on the sidewhere the screws are installed

34

Step 50


Pay attention to the direction of the door hinge during installation

(E)





x2



When installing a glass door, it is recommended to have two people install it to avoid the glass door colliding or hitting oneself.

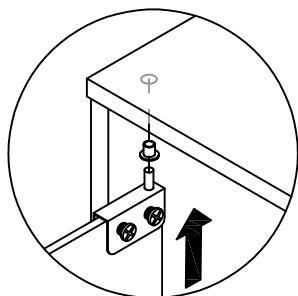

first

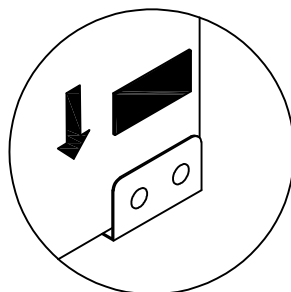


second

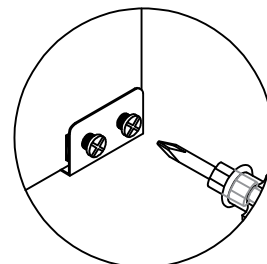

third

Locking screw

After aligning the glass door, tighten the screws to secure it.

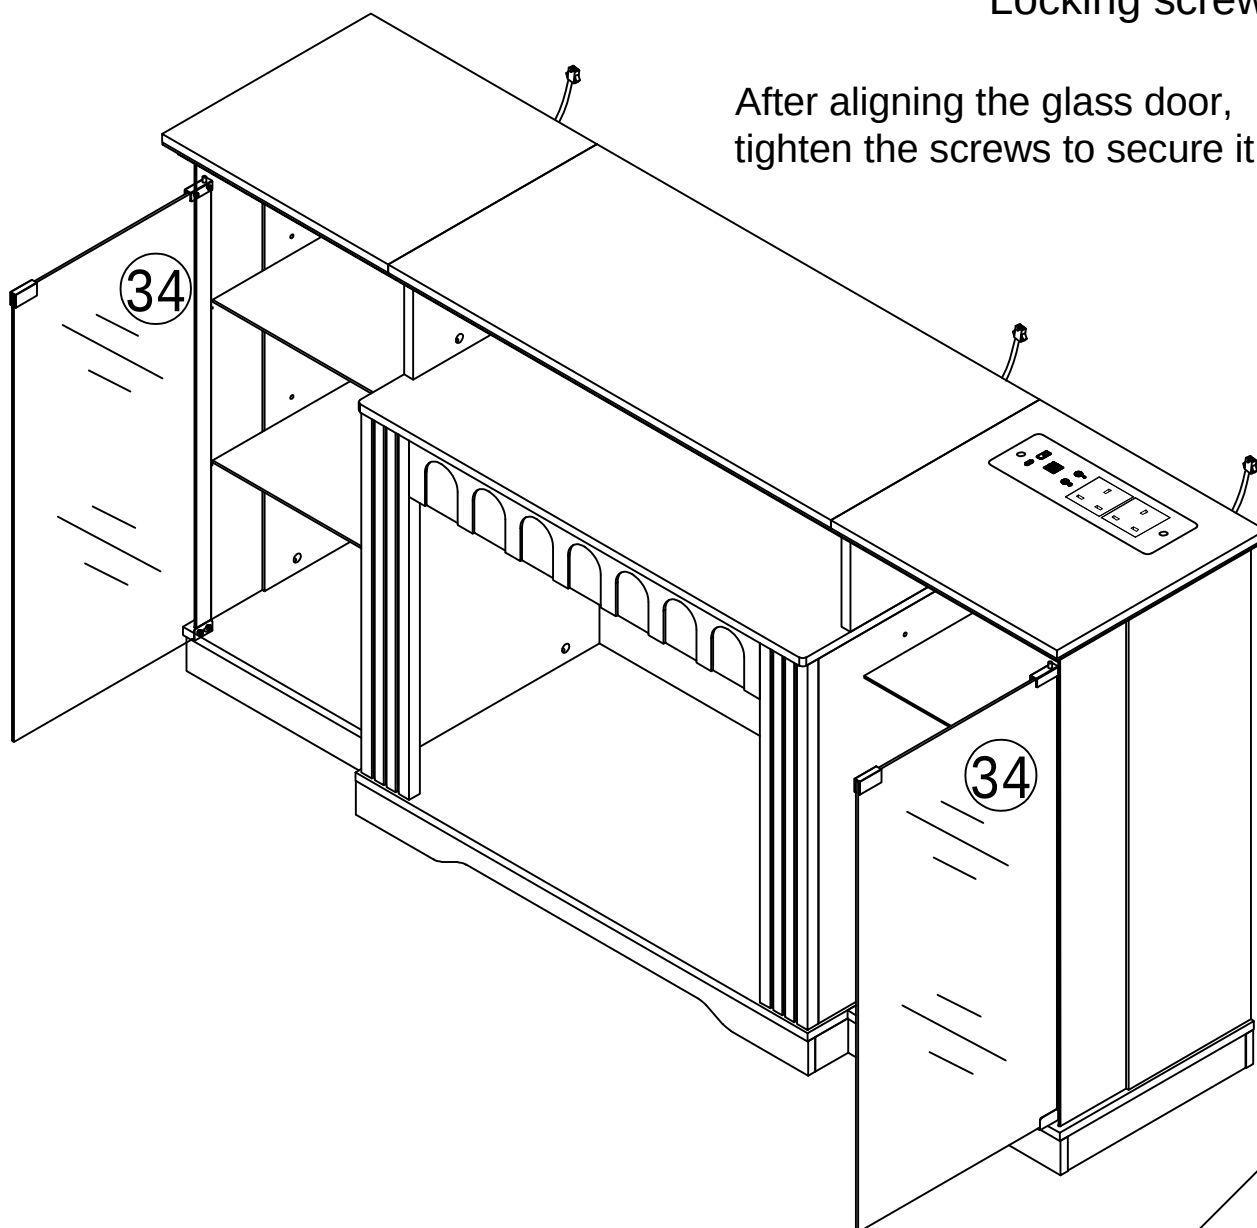

Step 51



(H)



x6




x6

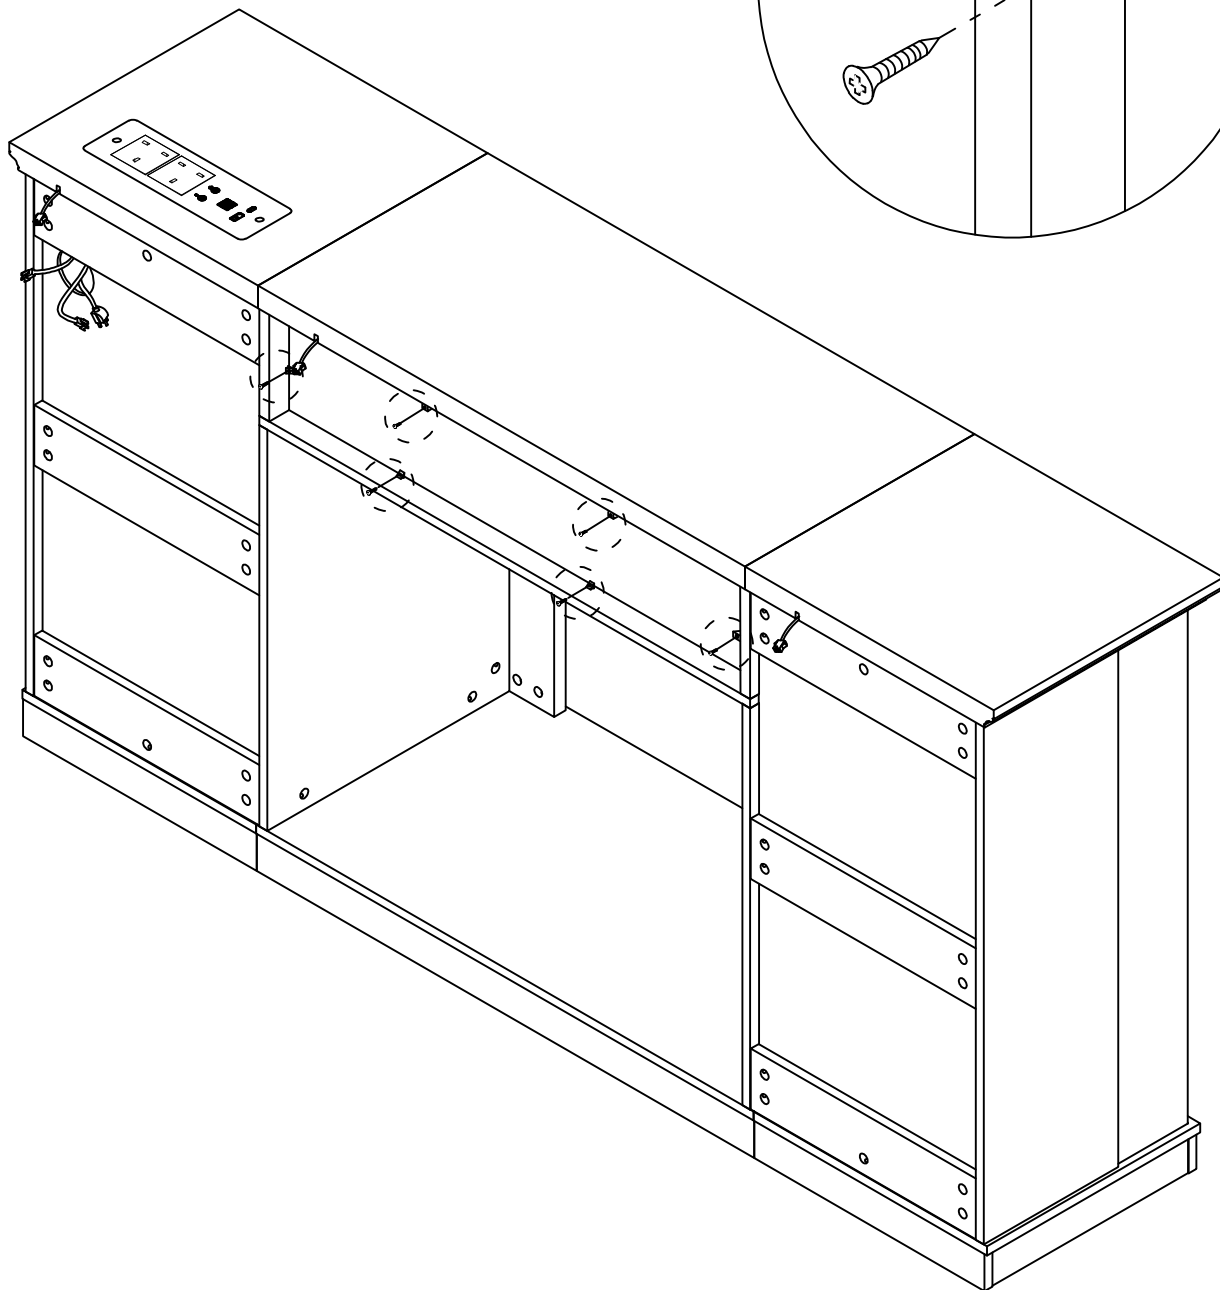
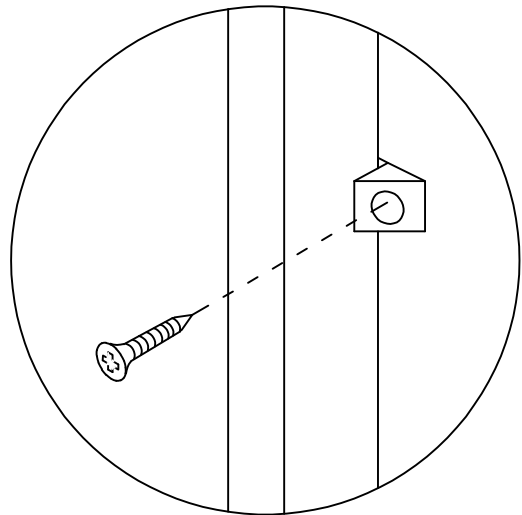


Step 52

ⓐ



x1

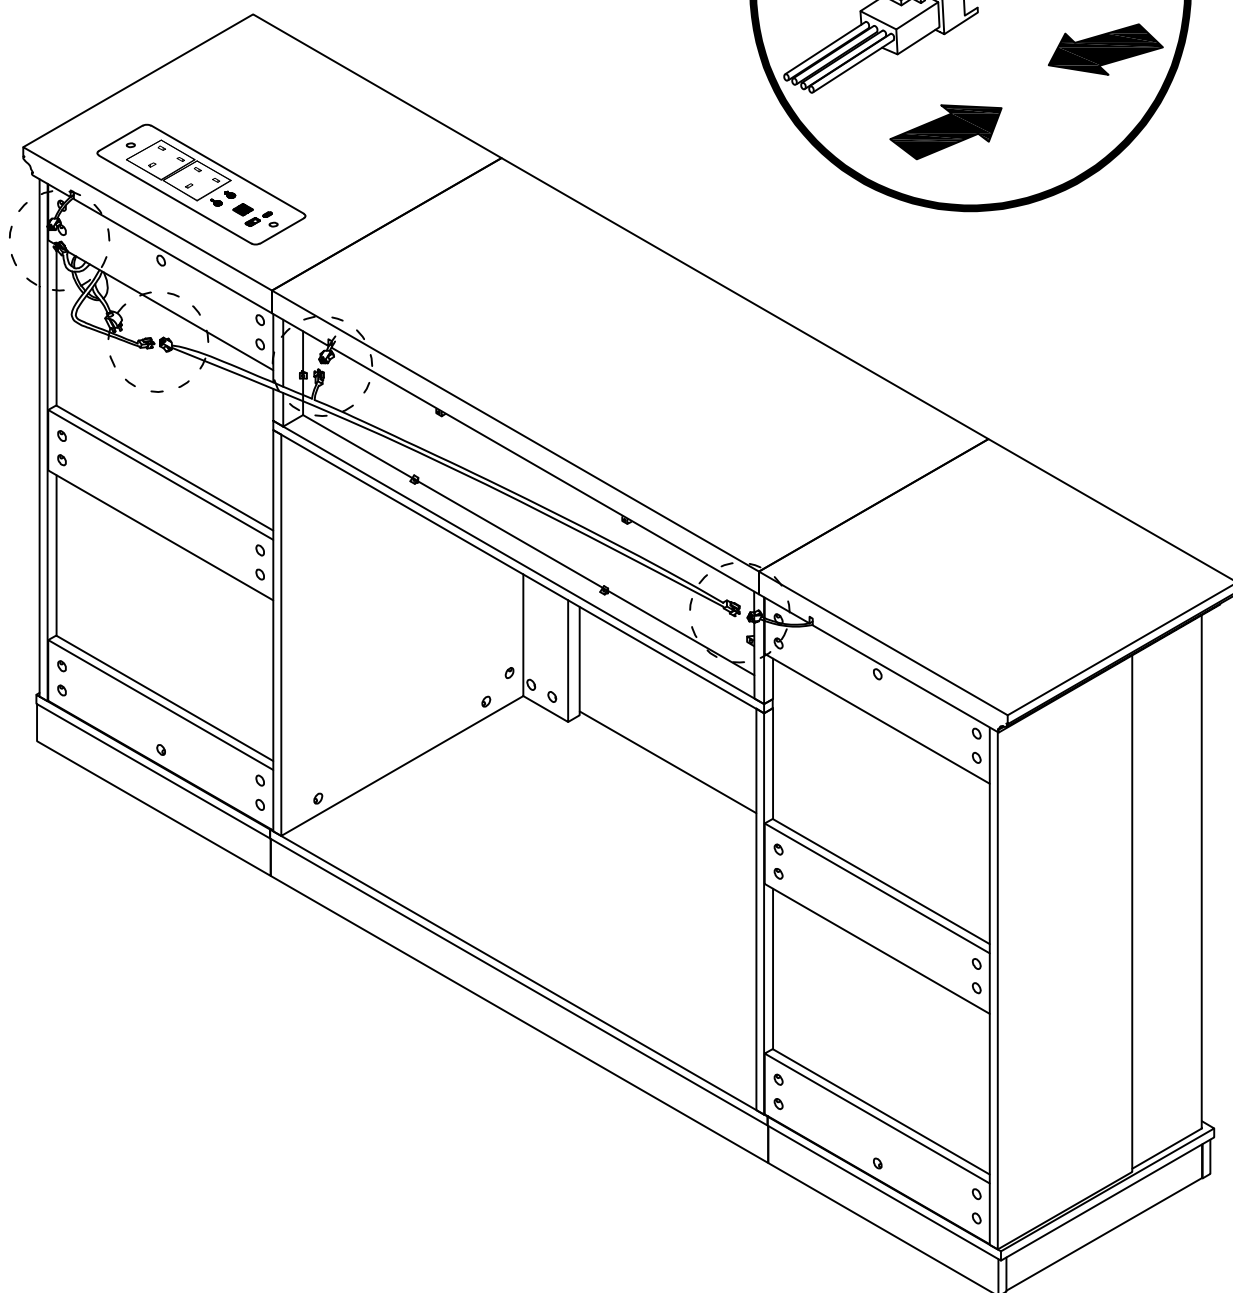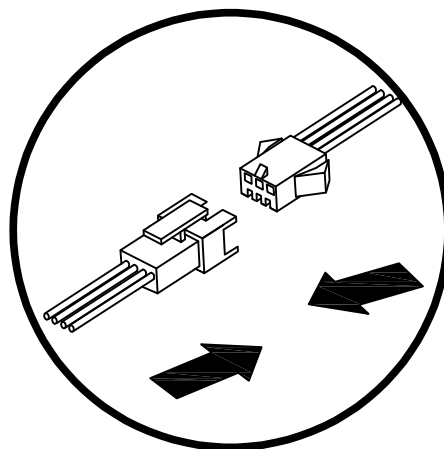


Step 53

F



x3

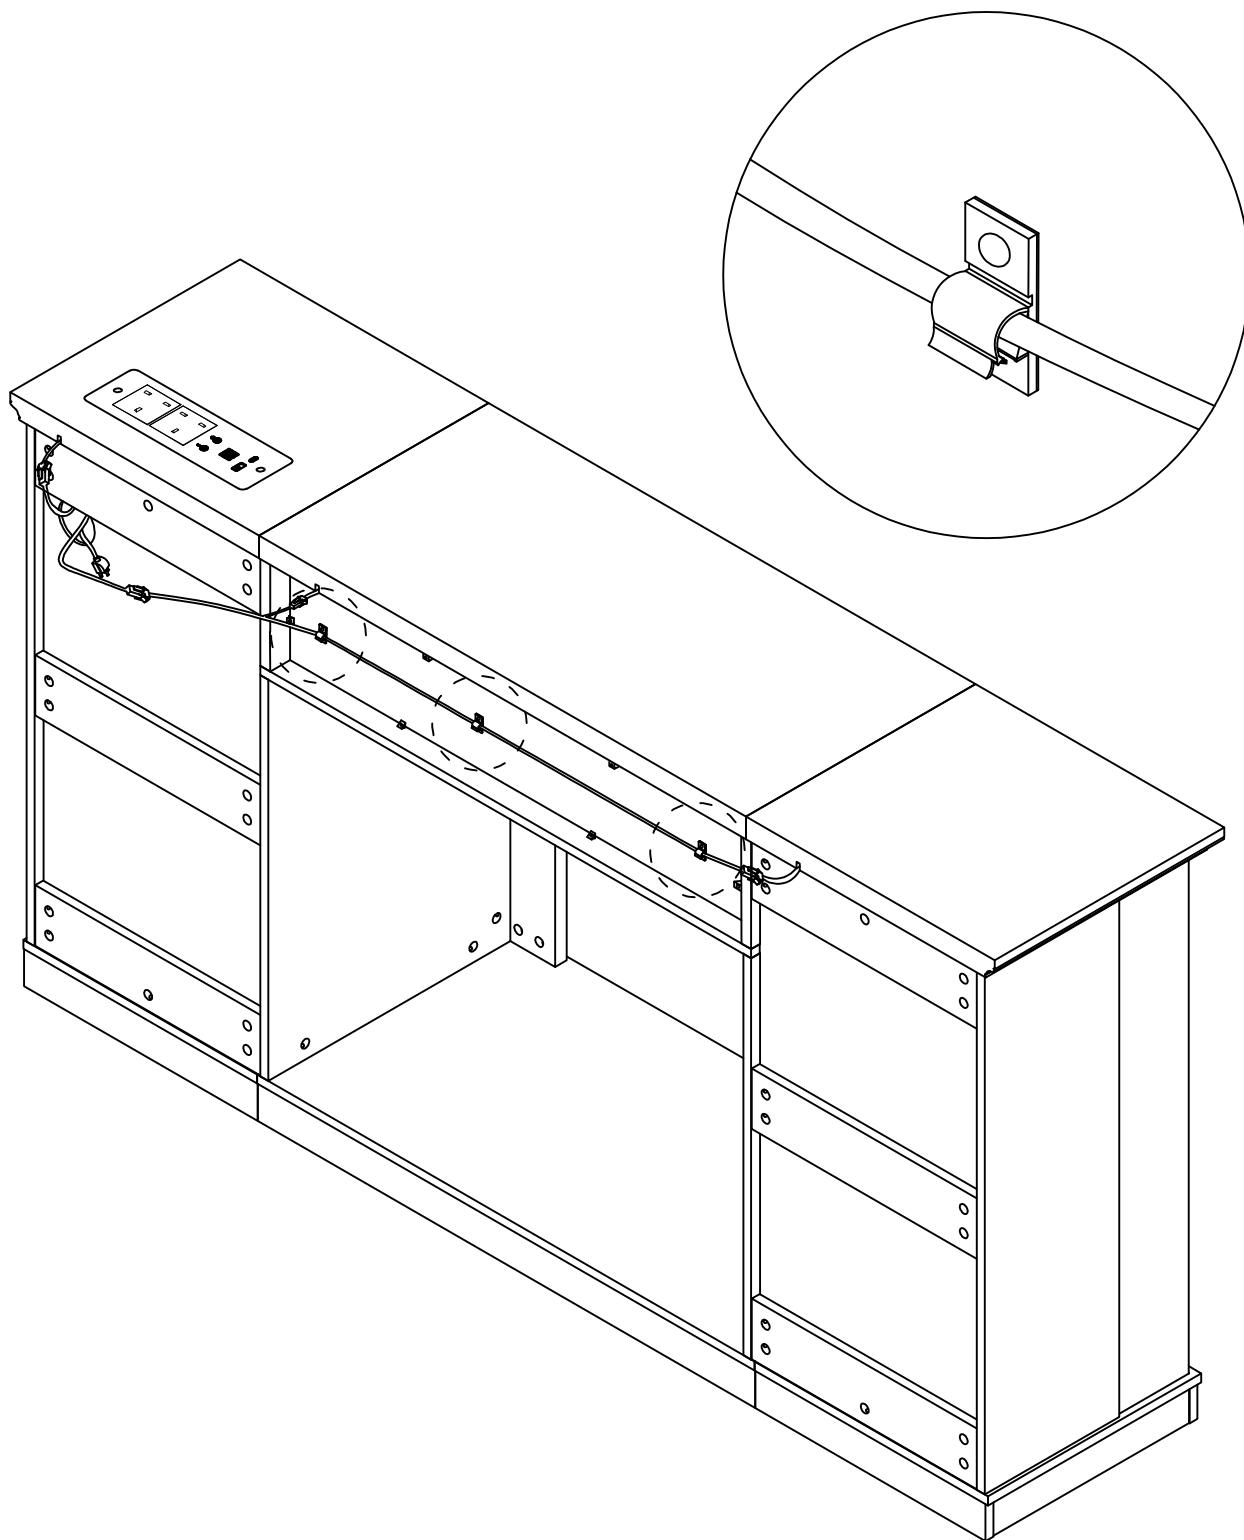

Step 54




● STEP 1

Take out the unit from the box and layout all the spare parts for easy assembly. Make sure all small items are not left in packaging materials.

● STEP 2

Carefully set the unit from the back of the mantel and center it in the opening.



Check the alignment and attach the unit of the mantel by inserting screws through the drilled holes on the trim of the mantel.

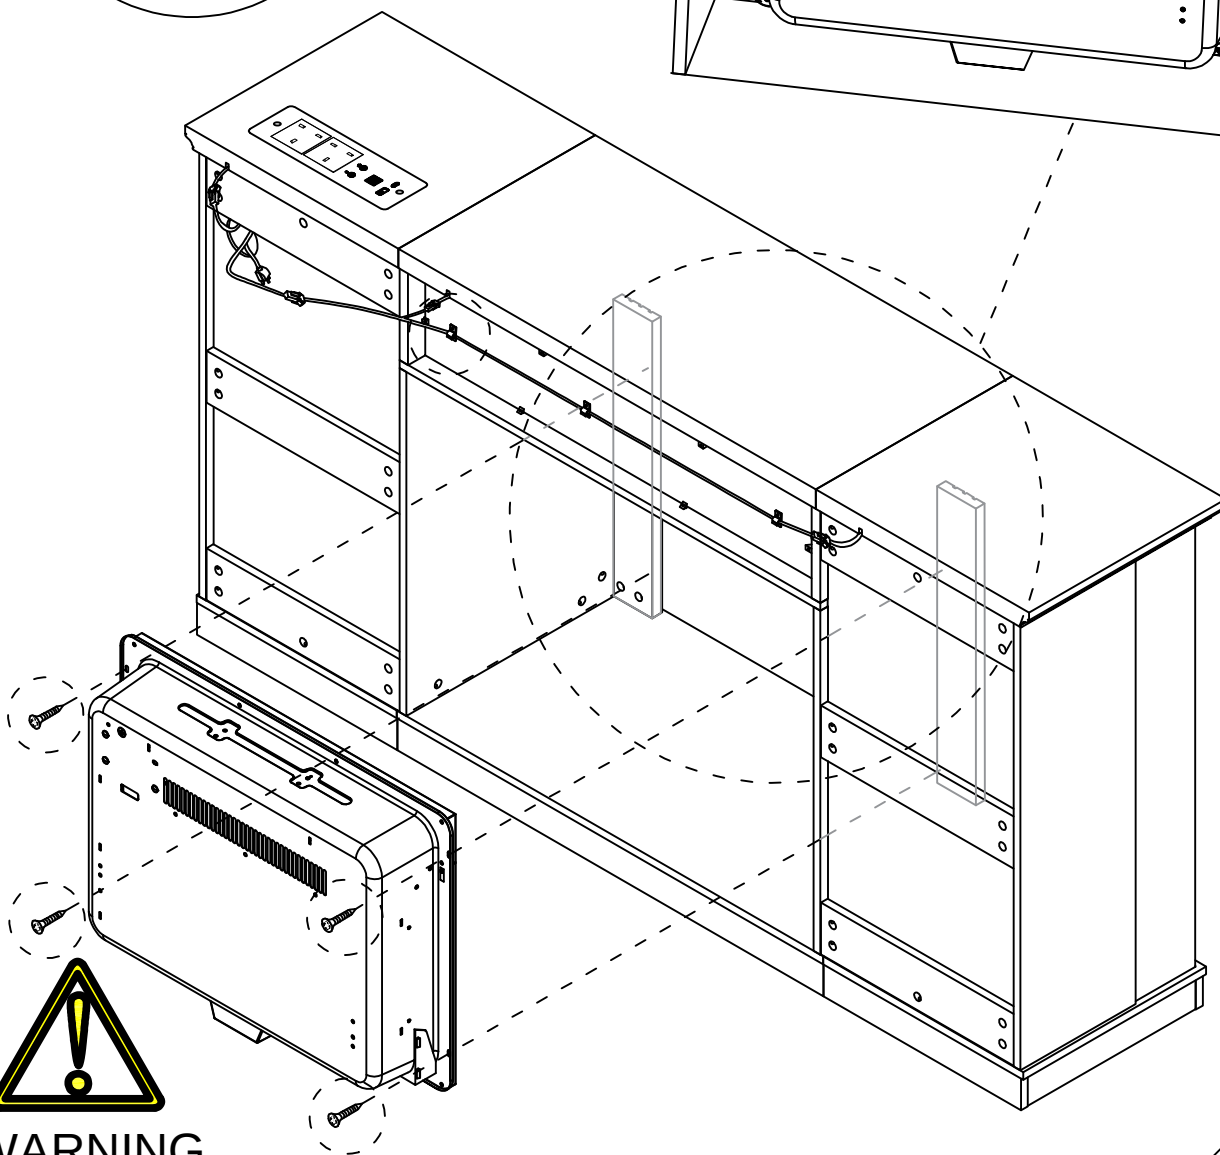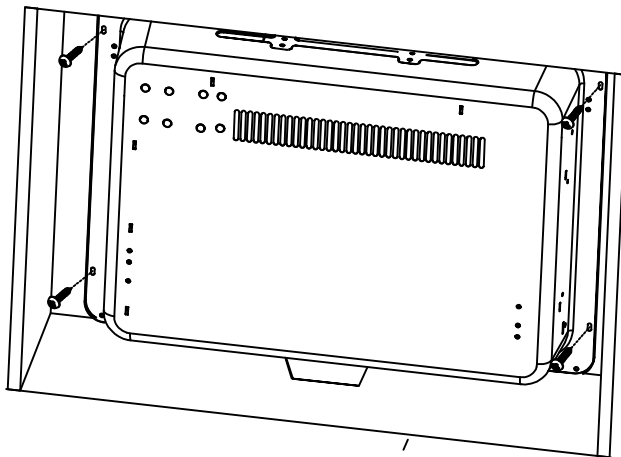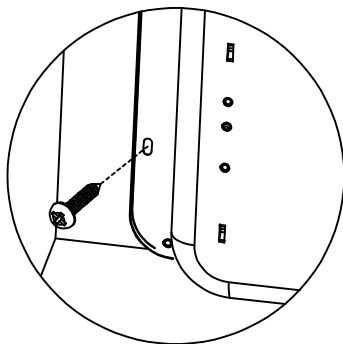

WARNING


Do not attempt to install the unit from the front of the mantel. It will not fit.

Step 55

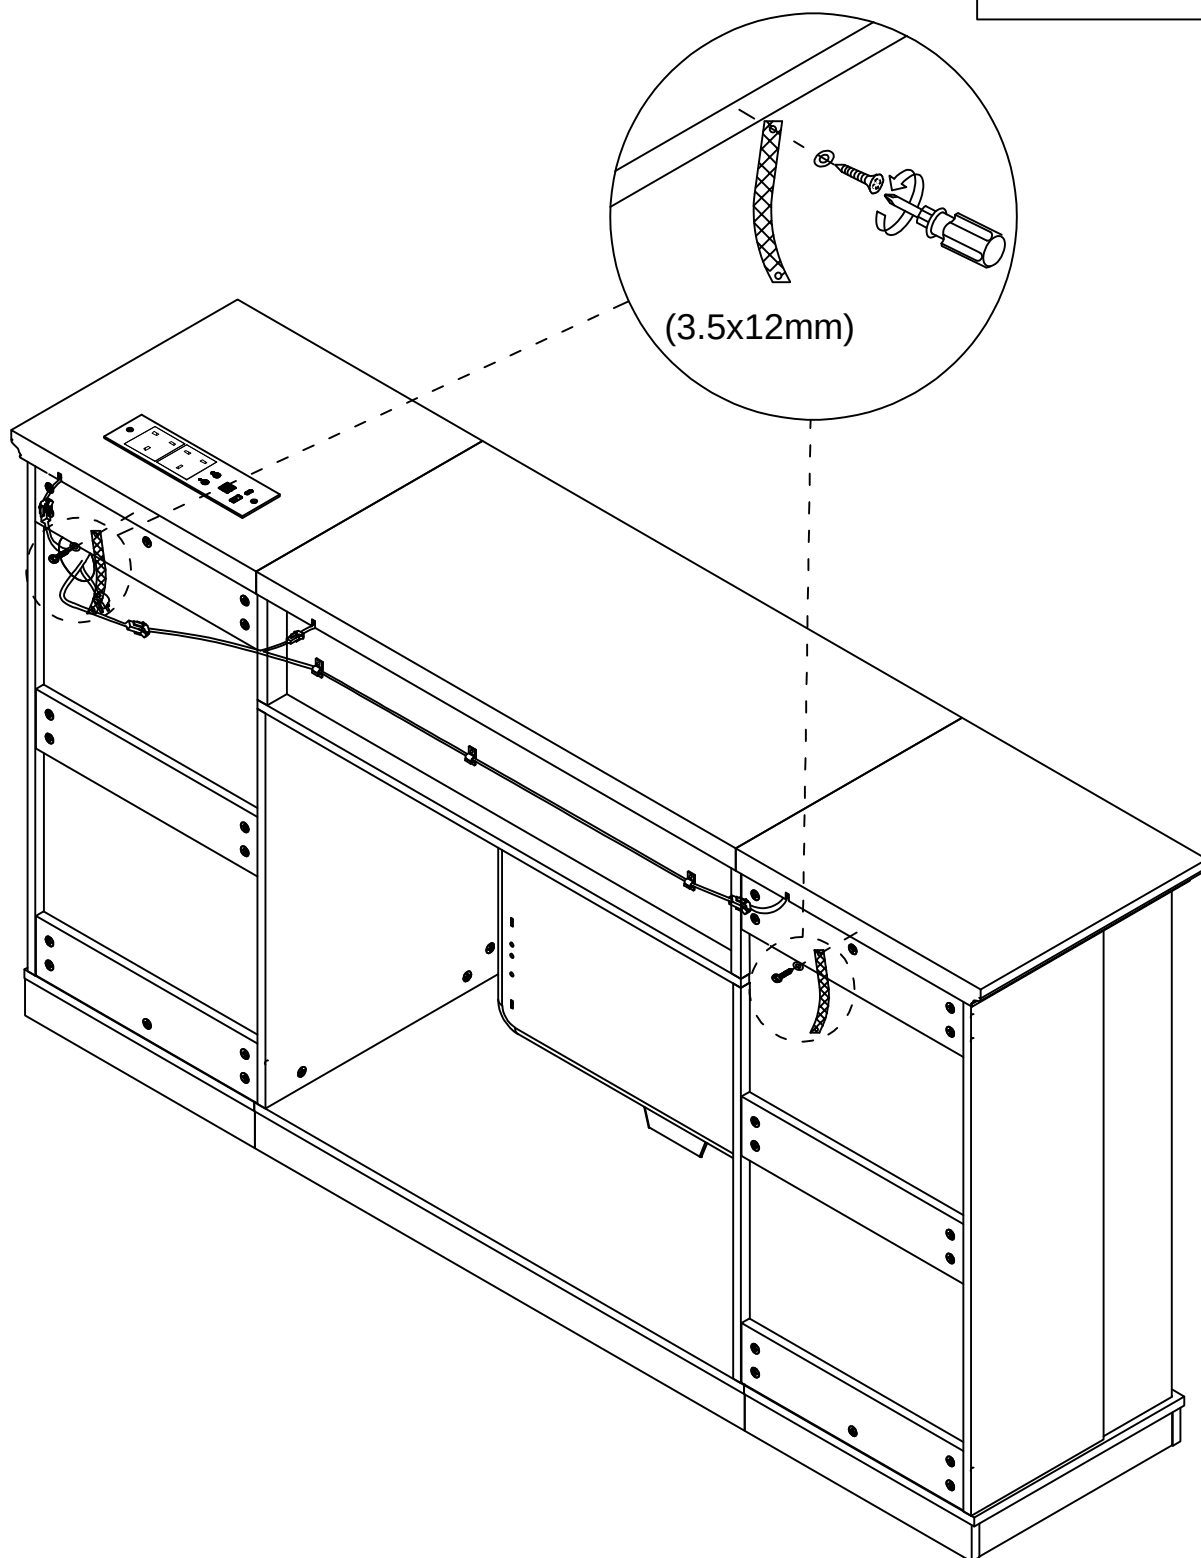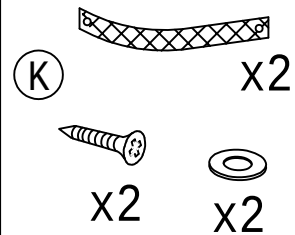


Step 56

use a ruler to measure the approximate height of the product on the wall and then mark it with a pencil.

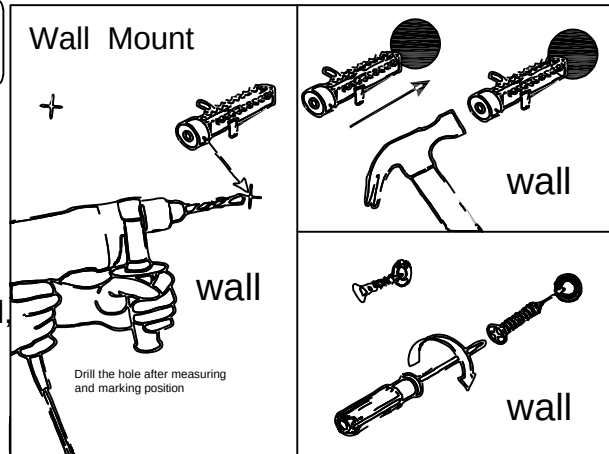


Use a tape drill to make hole sin the wall that are suitable for the product screws.

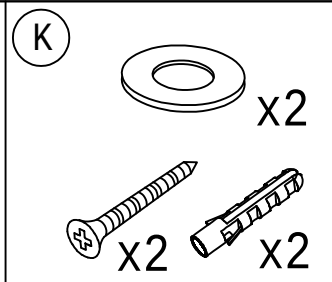


Put the expansion bolt into the hole.

Pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

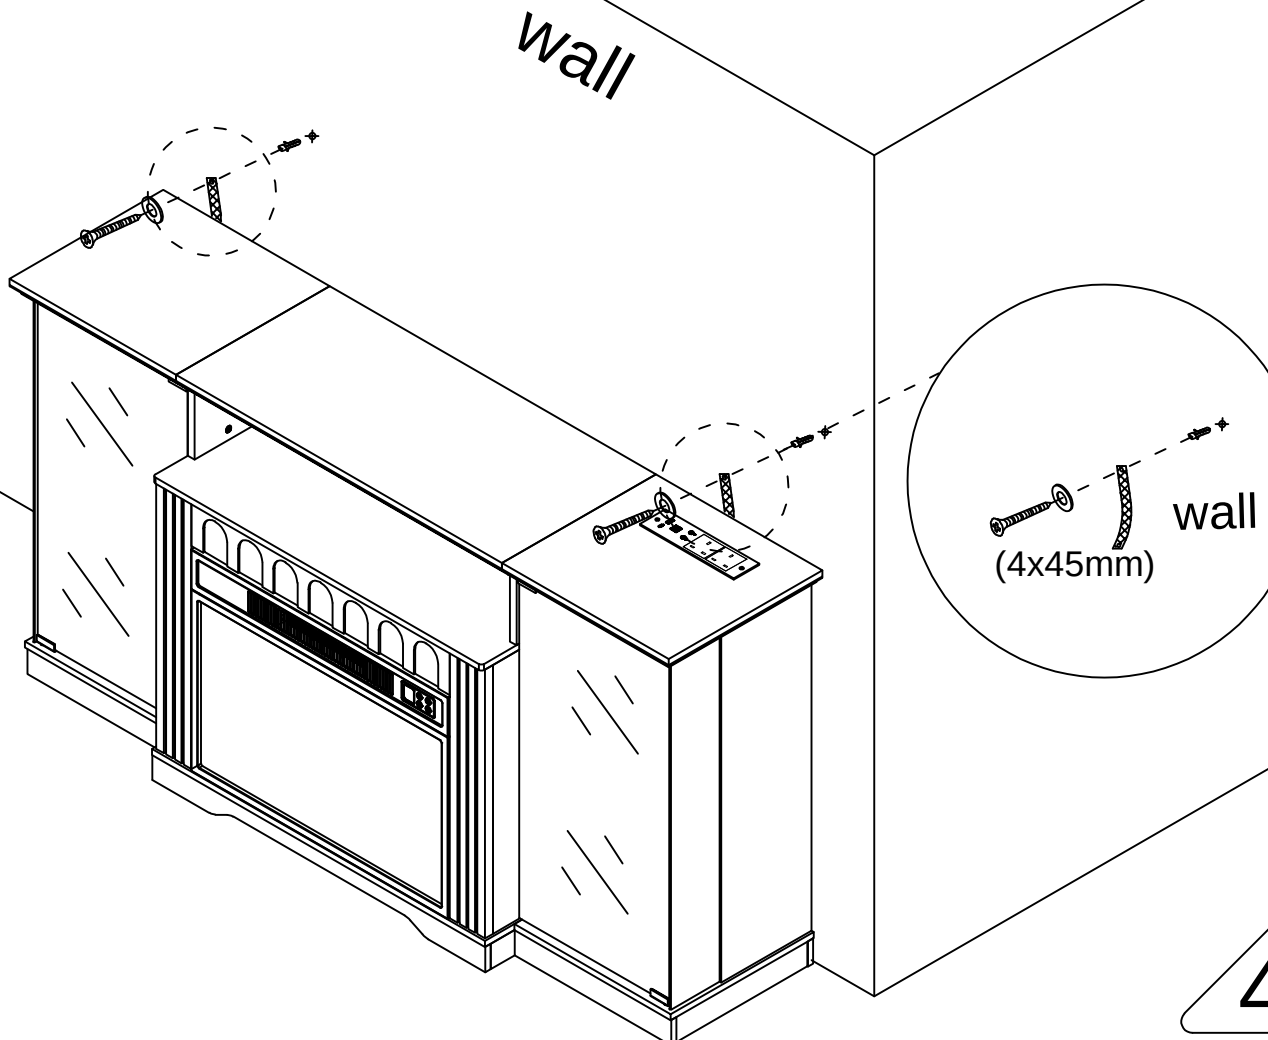


Smart Box Plug Power Off

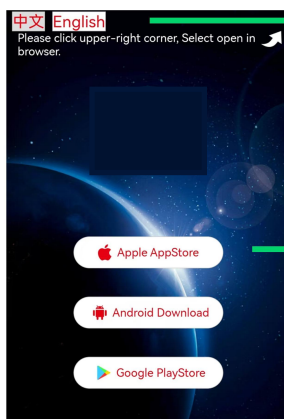


Select English Language

Select the corresponding device to download.
Note: If the download fails,
please turn off the "Enhanced Protection"
in the Pure Mode settings of the device.

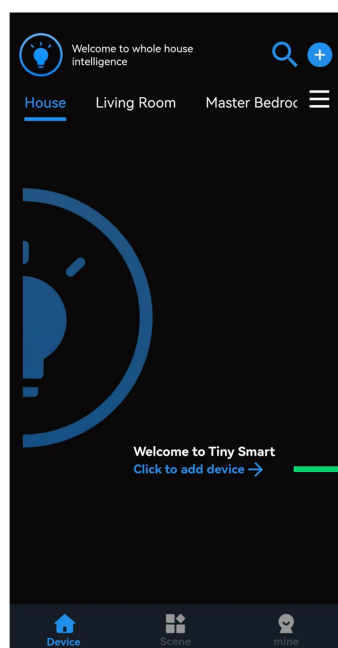


1

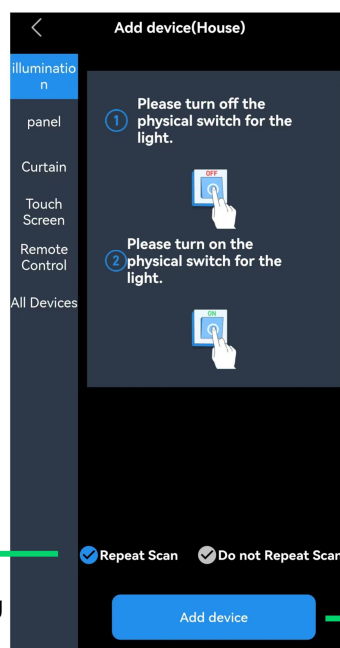

3

It turns blue after clicking

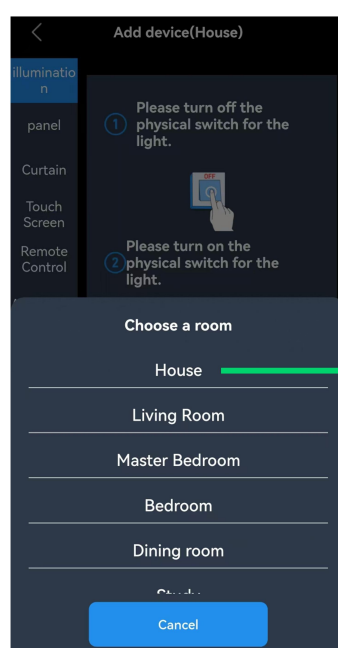


4



5

Unplug the smart box

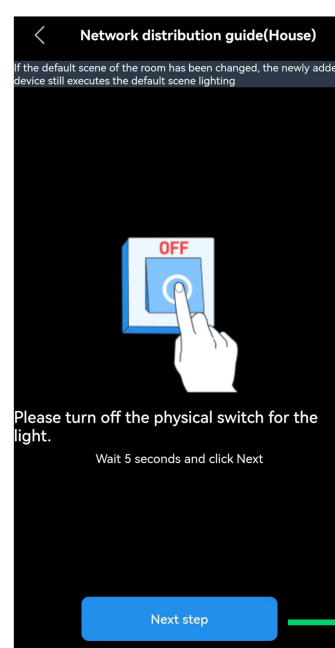


6


⑦ Plug in the smart box power plug.




The appearance of this program icon indicates that the matching is complete

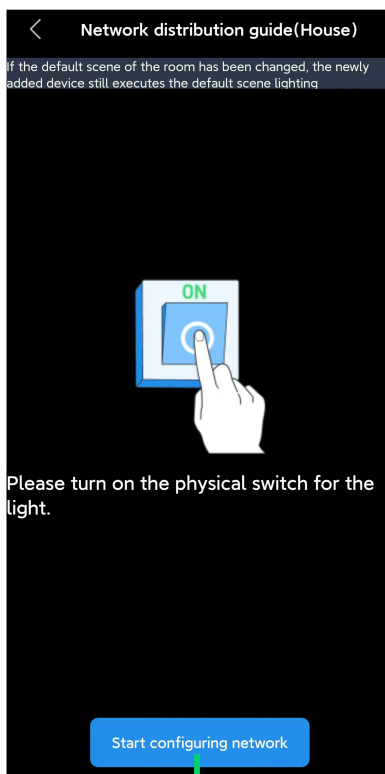


⑧

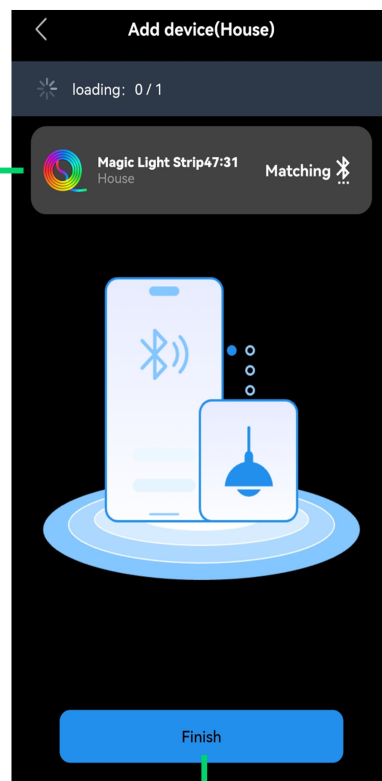

⑨

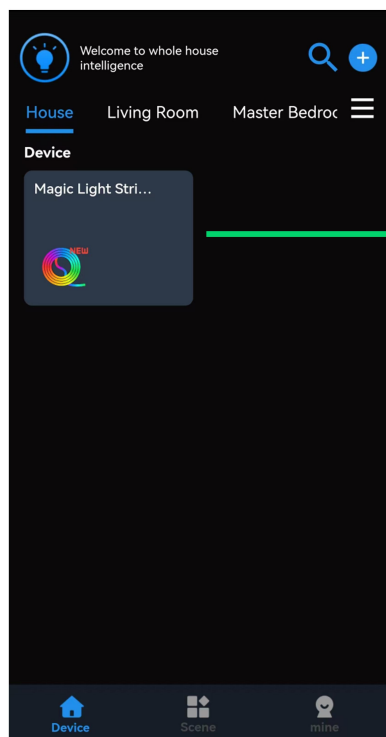

⑩

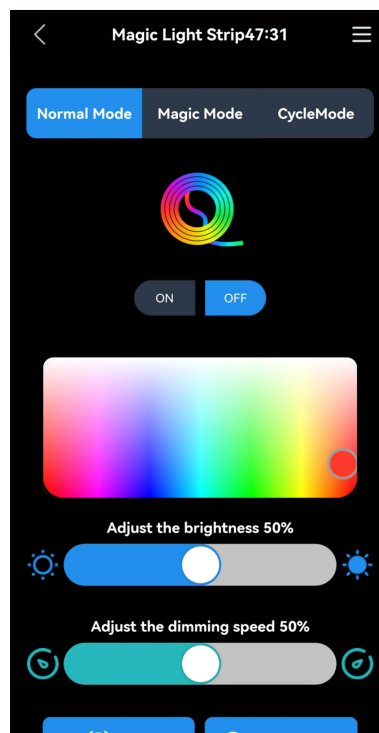

Now you can freely adjust the lighting according to your preferences



User's Guide

Thank you for purchasing this product.

To use this product, please connect it to a power source.

Please use if the product works normally after connecting to power.

Introduction

The box is an intelligent controller.

It has 1 USB output port 1 Type-c port, and 2 socket outlets.

With 2 touch buttons, it can and turn ON/OFF the induction function, turn ON/OFF the light, adjust the light luminance, and change light colors.

The lights can be controlled through both the touch buttons and a dedicated app.

Operation



This touch button is used to turn the light on/off, adjust brightness, and switch the color of the lights.


- i. Single Click: Turn the light on/off.
- ii. Quick Double-Click: Switch between 7 static RGB colors.
- iii. Long Press (2+ seconds): Adjust the light luminance.



This touch button is used to switch dynamic phantom colors and turn ON/OFF the induction function.

- i. Single Click: Switch to Phantom Mode, with 5 magical color transformations available.
- ii. Human Body Sensing Control: Long Press (3+ seconds): Turn on The key press indicator light is on.)
Long Press (3+ seconds): Turn off (The key press indicator light is off.)

By default, the human body sensing is enabled upon initial power-on, and the indicator light is on.

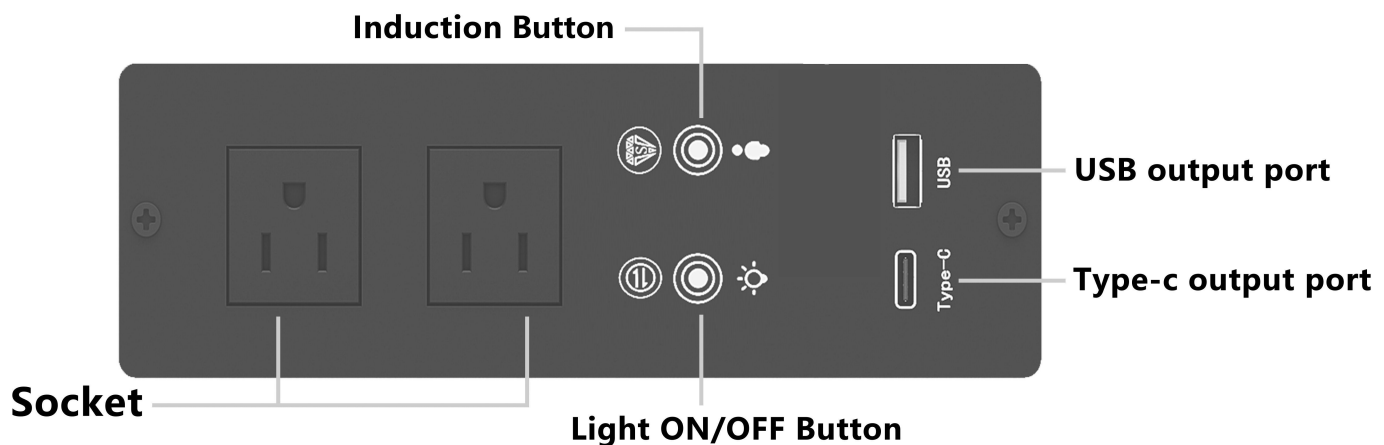


⚠ ATTENTION PLEASE

1. If there is no touch response suddenly, Re-plug the power to reset the touch static electricity.
2. If you have any questions when installing, please feel free to contact us. Thank you.

Socket styles differ by region,
but their overall functions remain unchanged.


American socket

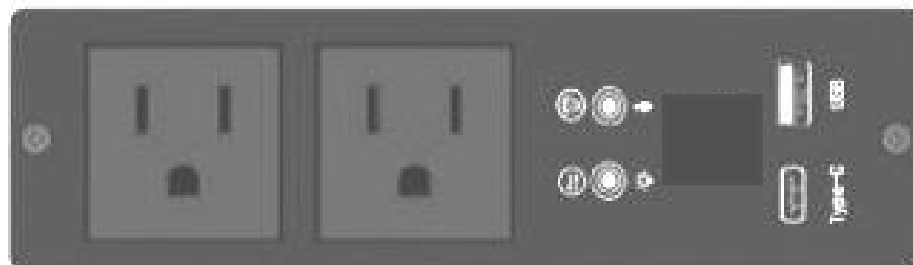

British Socket



European socket

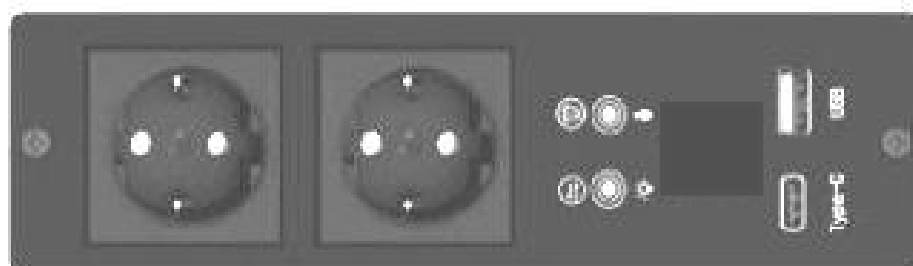

Australian socket

