


Installation & Assembly



V4.0

Coffee Table

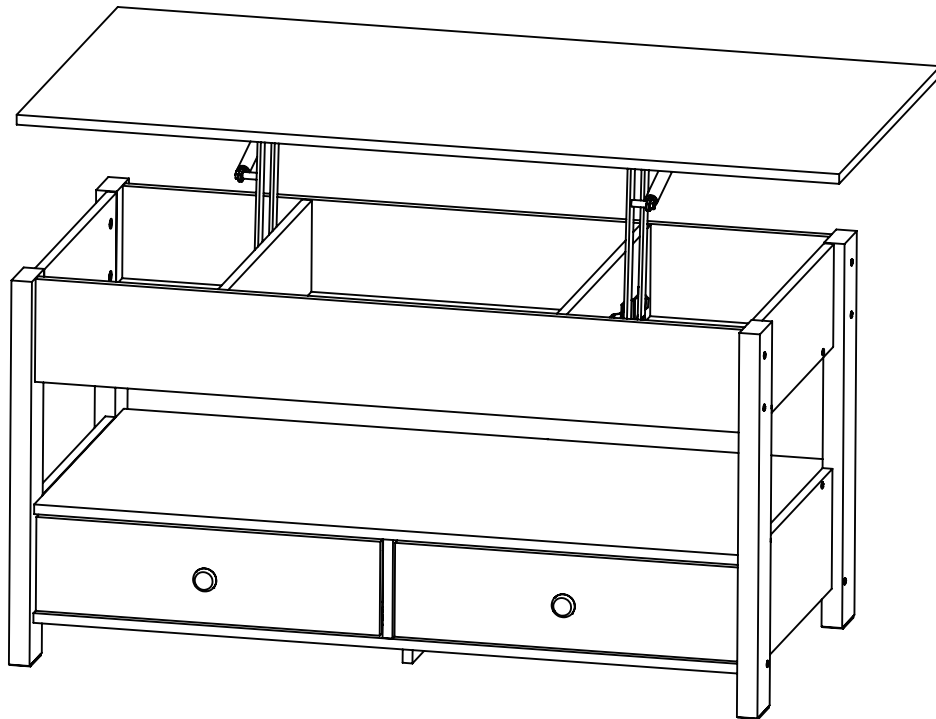



**IMPORTANT INFORMATION
READ CAREFULLY.**

KEEP THIS INFORMATION FOR FURTHER REFERENCE.

GENERAL GUIDELINES

Please read the following instruction carefully and use the product accordingly.

Please keep this manual and hand it over when you transfer the product.

This summary may not include every detail of all variations and considered steps.

Please contact us when further information and help are needed.



NOTES

Please follow the assembly instructions precisely and only use the product as intended.

If an odor is present when first opening the package, please leave the unwrapped product in a shaded and ventilated area for a few days to air out. Please follow the assembly instructions precisely and only use the product as intended.

Prior to assembly, please check the product for defects or missing accessories. If any defects are found or accessories are missing, do not use product as damage or injury may occur; Please contact us for assistance and replacement.

It is suggested you regularly check the products bolts and connections to ensure safe use.

Assemble the item on a soft flat and clean surface to avoid scratches and damage.


It is recommended that two people assemble this product. During assembly, please only slightly tighten all screws in their correct position first, then fully tighten them. A Philips screwdriver is recommended but not included.

WARNINGS

During assembly, keep parts and packaging materials away from children and pets as there could cause injury and are a potential choking hazard.







Avoid sharp objects or corrosive chemicals to prevent damage to the product.

Please open the item slowly and cautiously to avoid pinching your hands by metal joints, especially children.


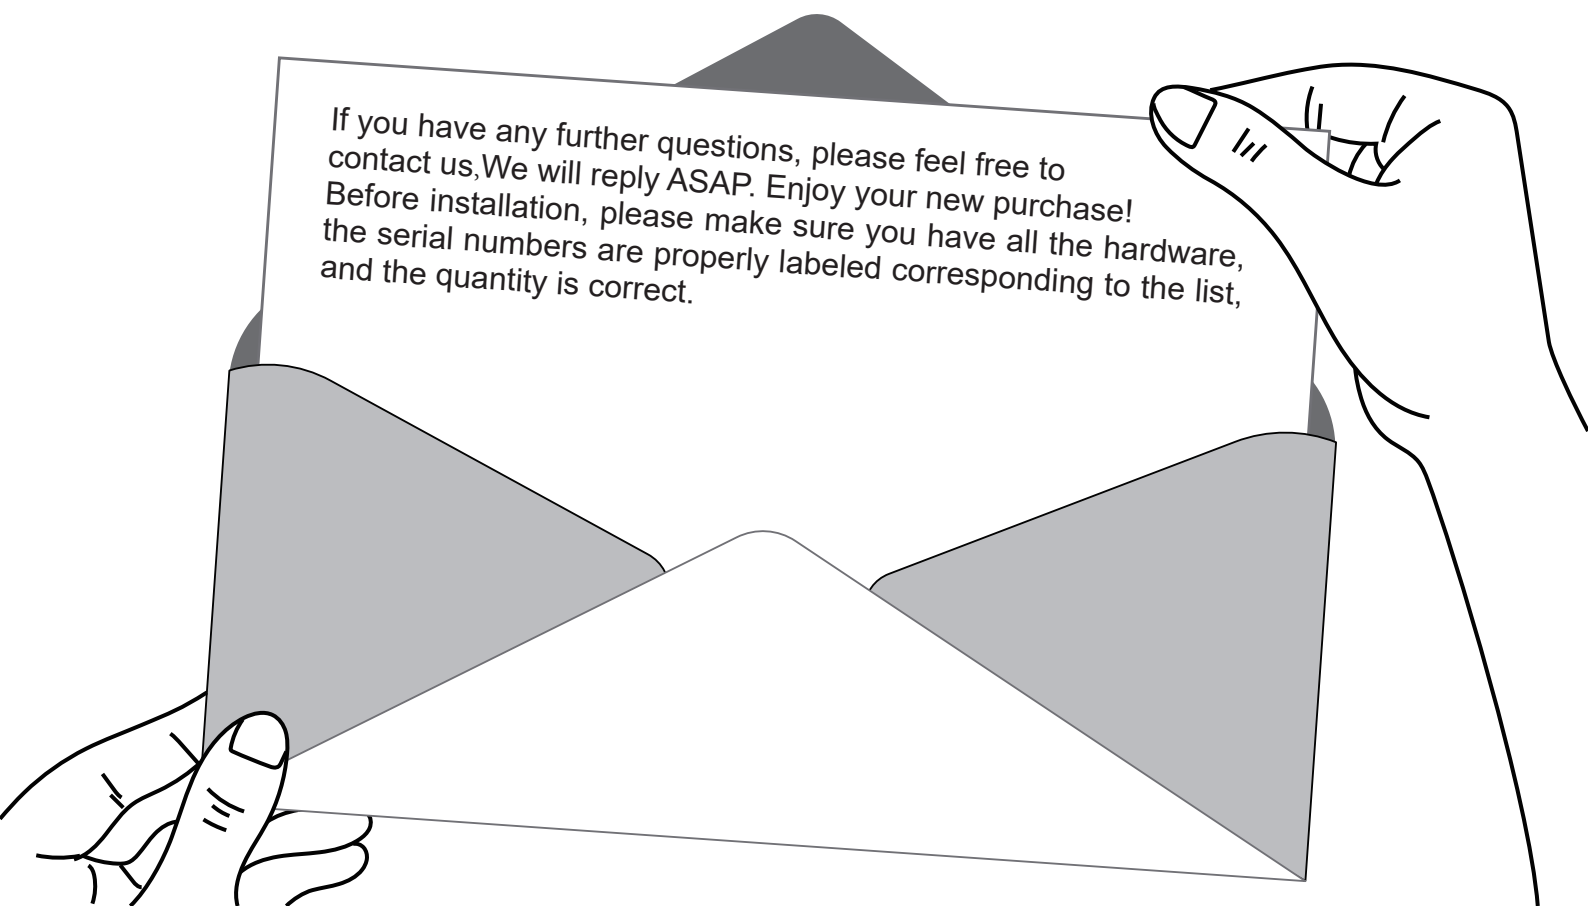



If you have any further questions, please feel free to contact us, We will reply ASAP. Enjoy your new purchase! Before installation, please make sure you have all the hardware, the serial numbers are properly labeled corresponding to the list, and the quantity is correct.

INSTRUCTIONS

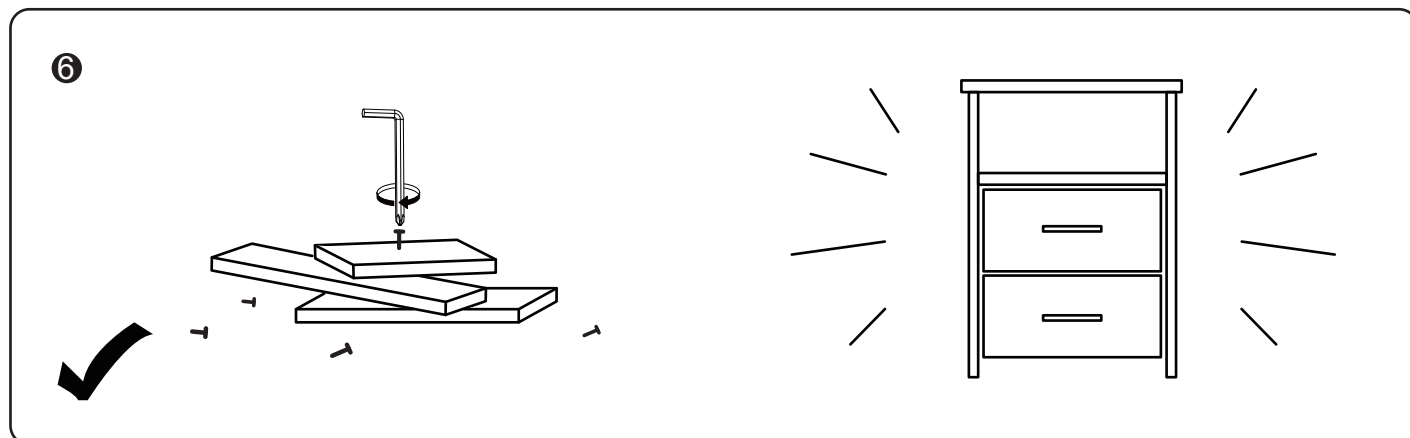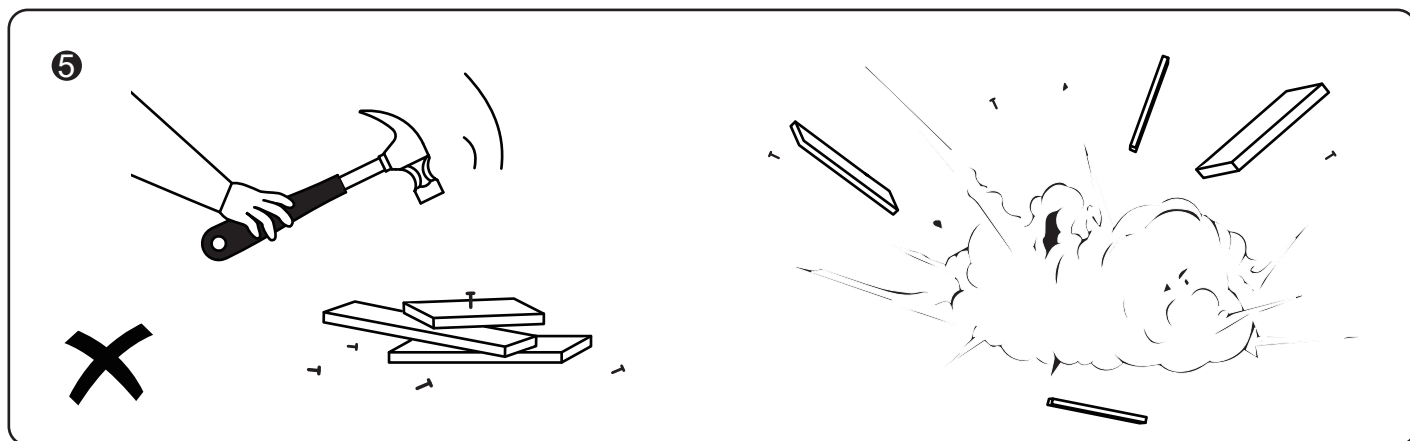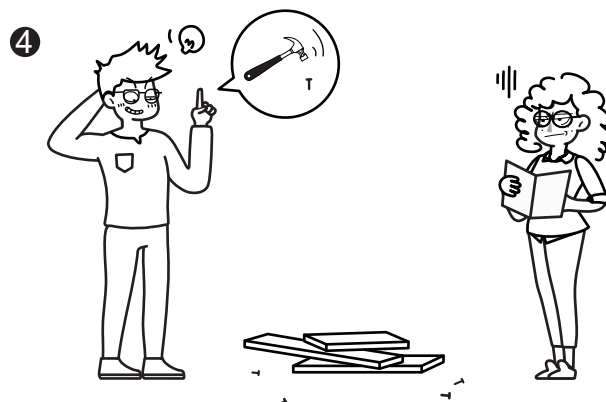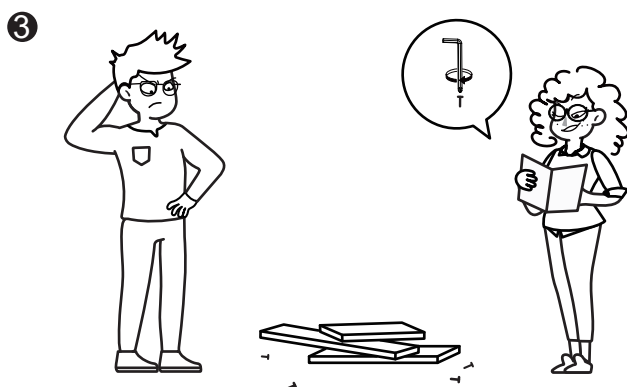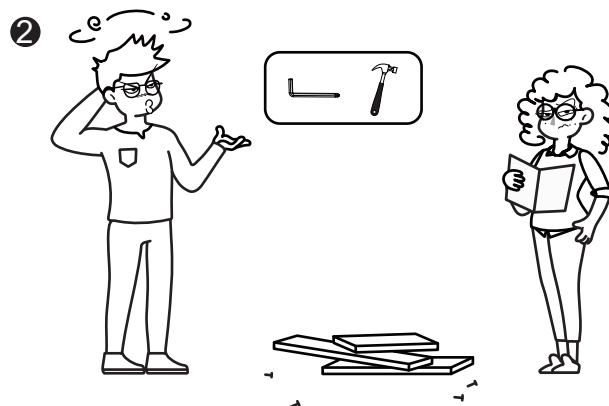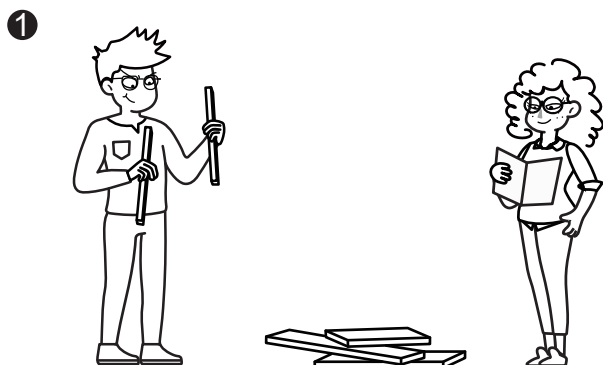

EXPLODED DRAWING

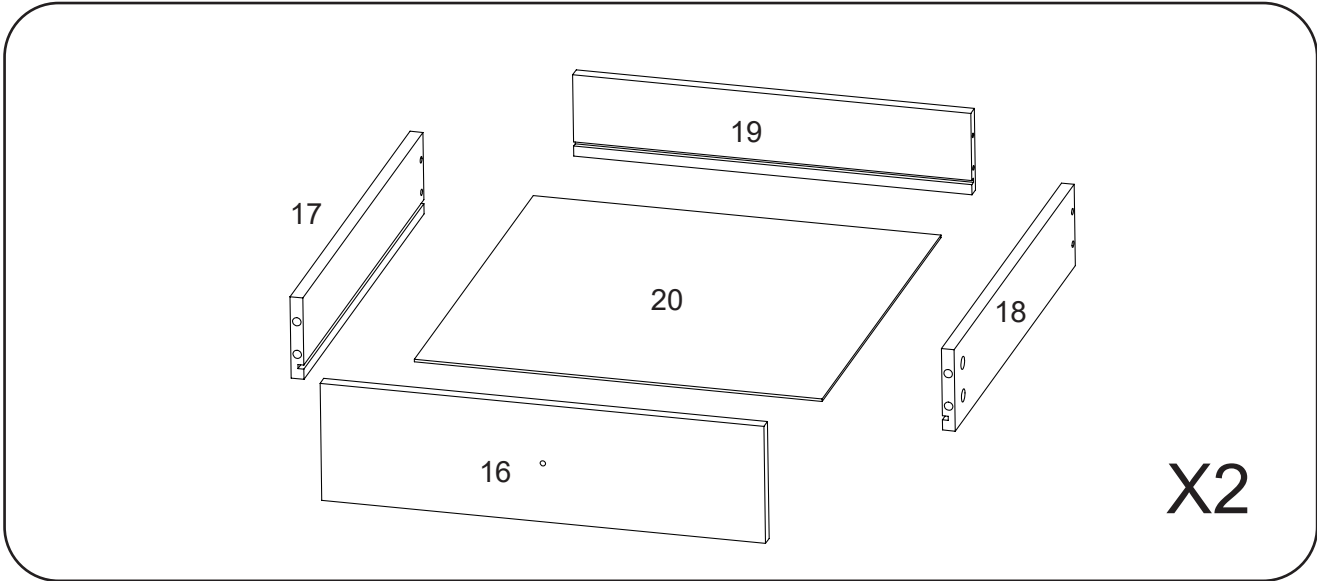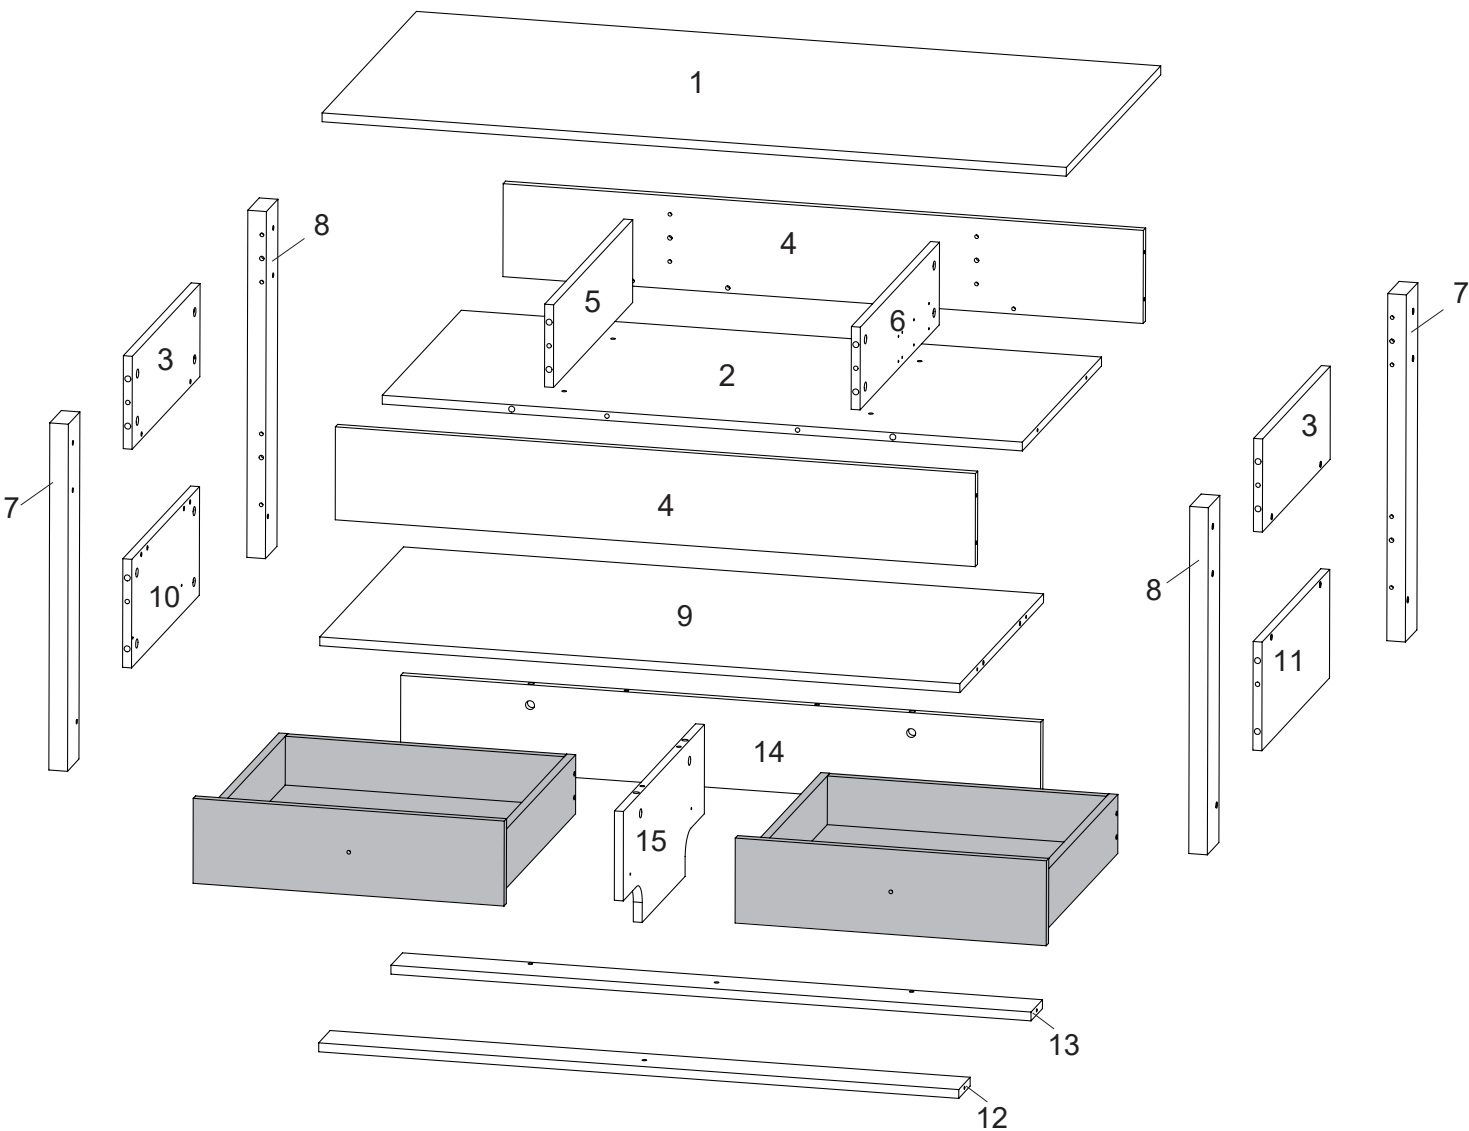




A X40



B X24




C X40

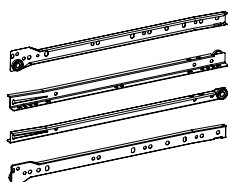

D X2

||




CL

+




DL

+



DR


+



CR




E X36
M5x50



F X28
M4x11




G X16
M4x10




H X2
M4x16




I X2

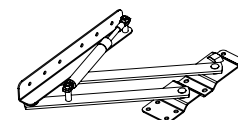

N X1

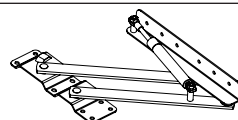

O X1



P X8



Q X44




R X1





S X1


REMARK

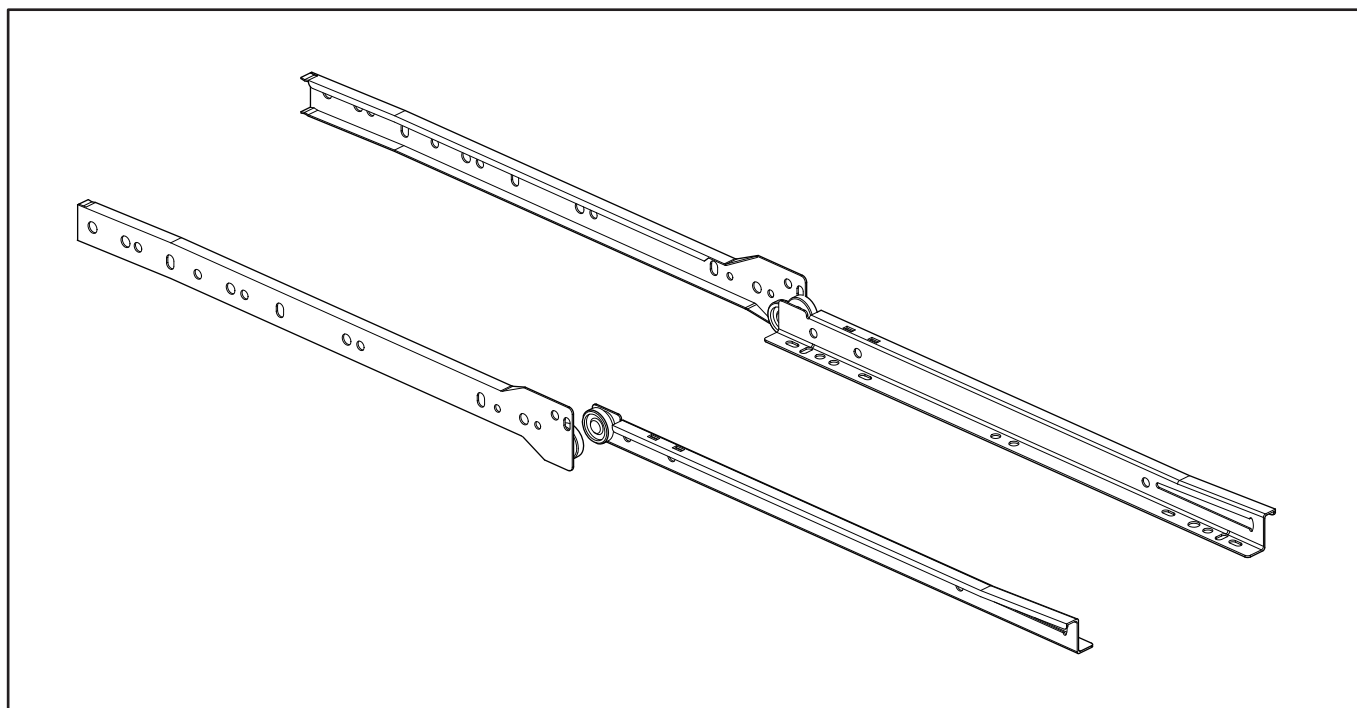





MINIFIX POSITION

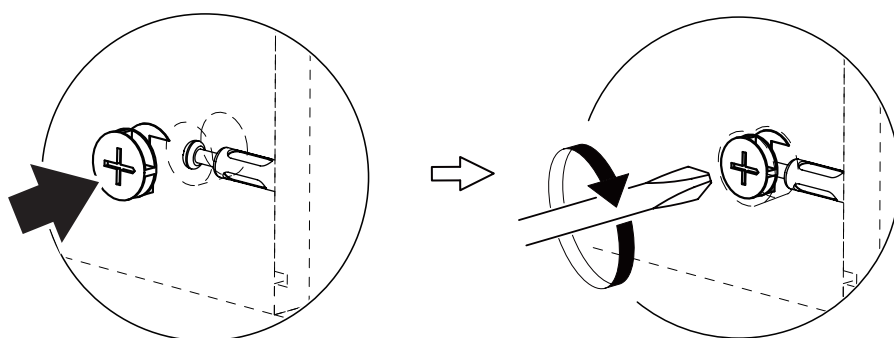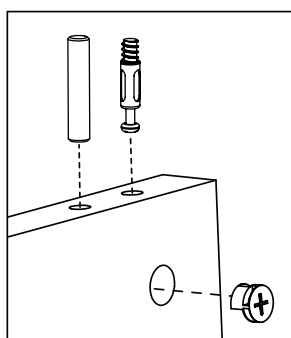

Step 1





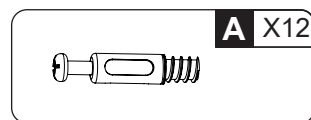


1. Put a blanket under the board to avoid scratch or damage.
2. Please do not screw **A** too deep or too shallow.

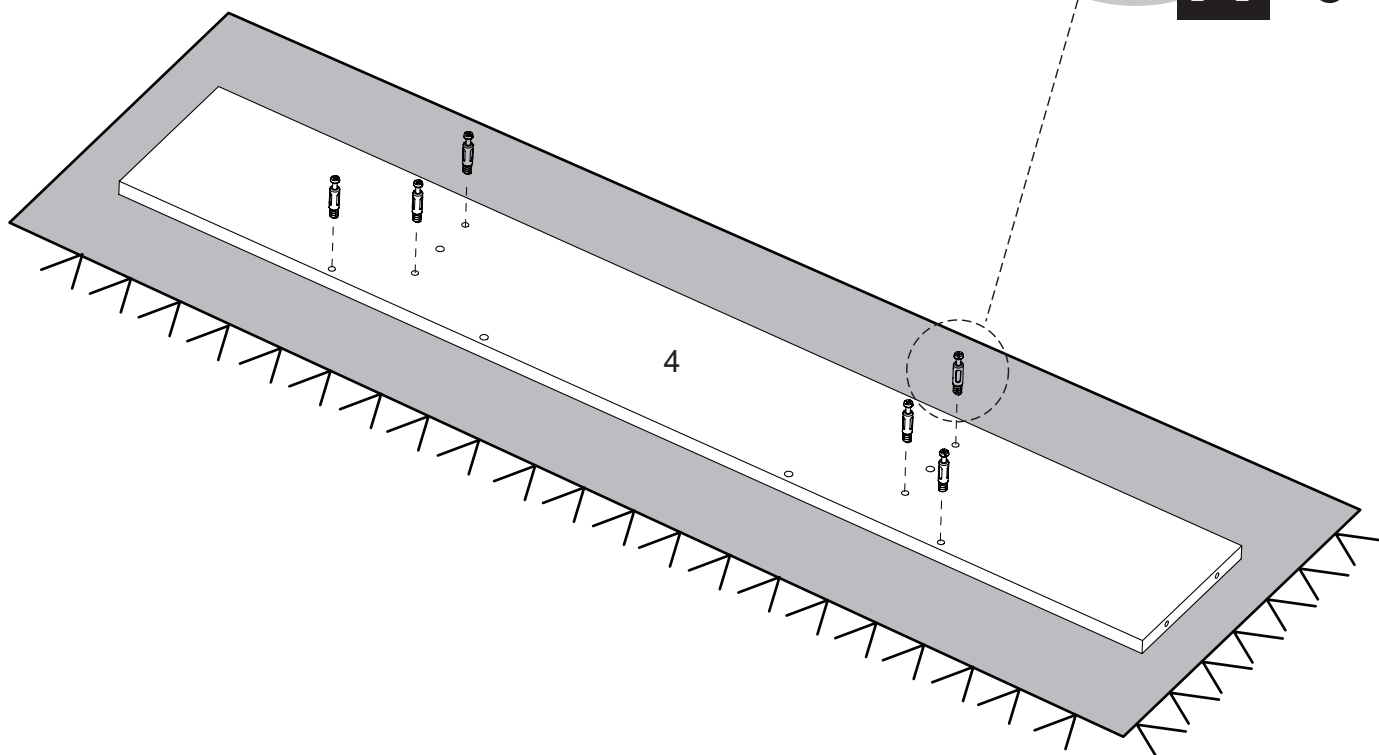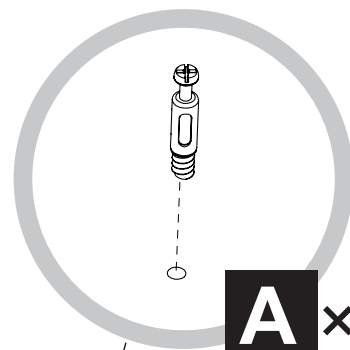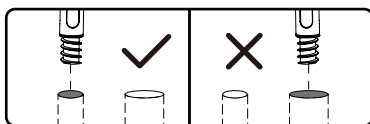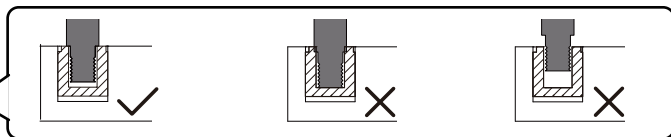

x2

Step 2

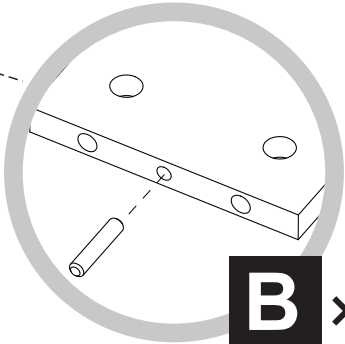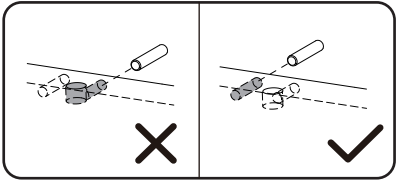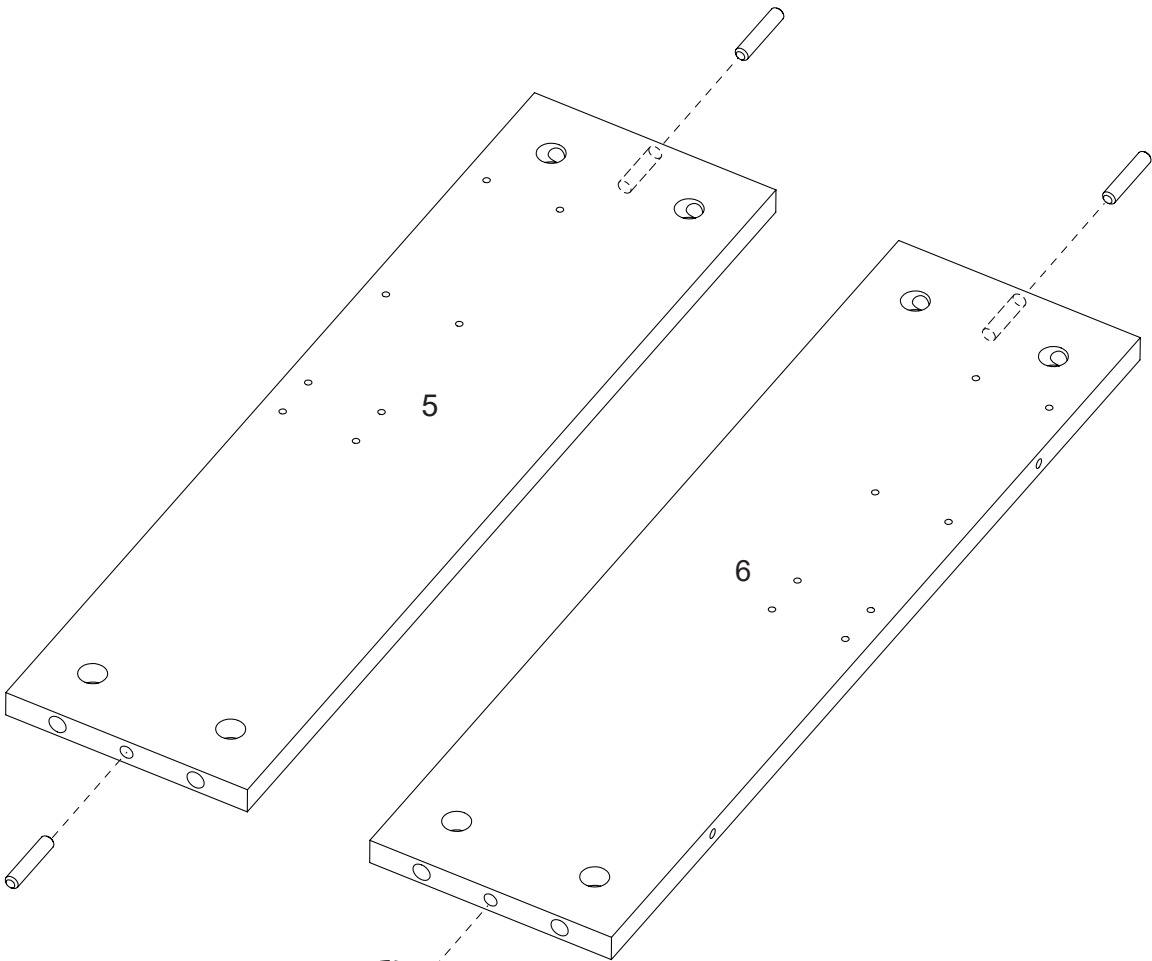


B x4

Step 3





C X4


i) Please note that the holes indicated by your fingers should face in the same direction.

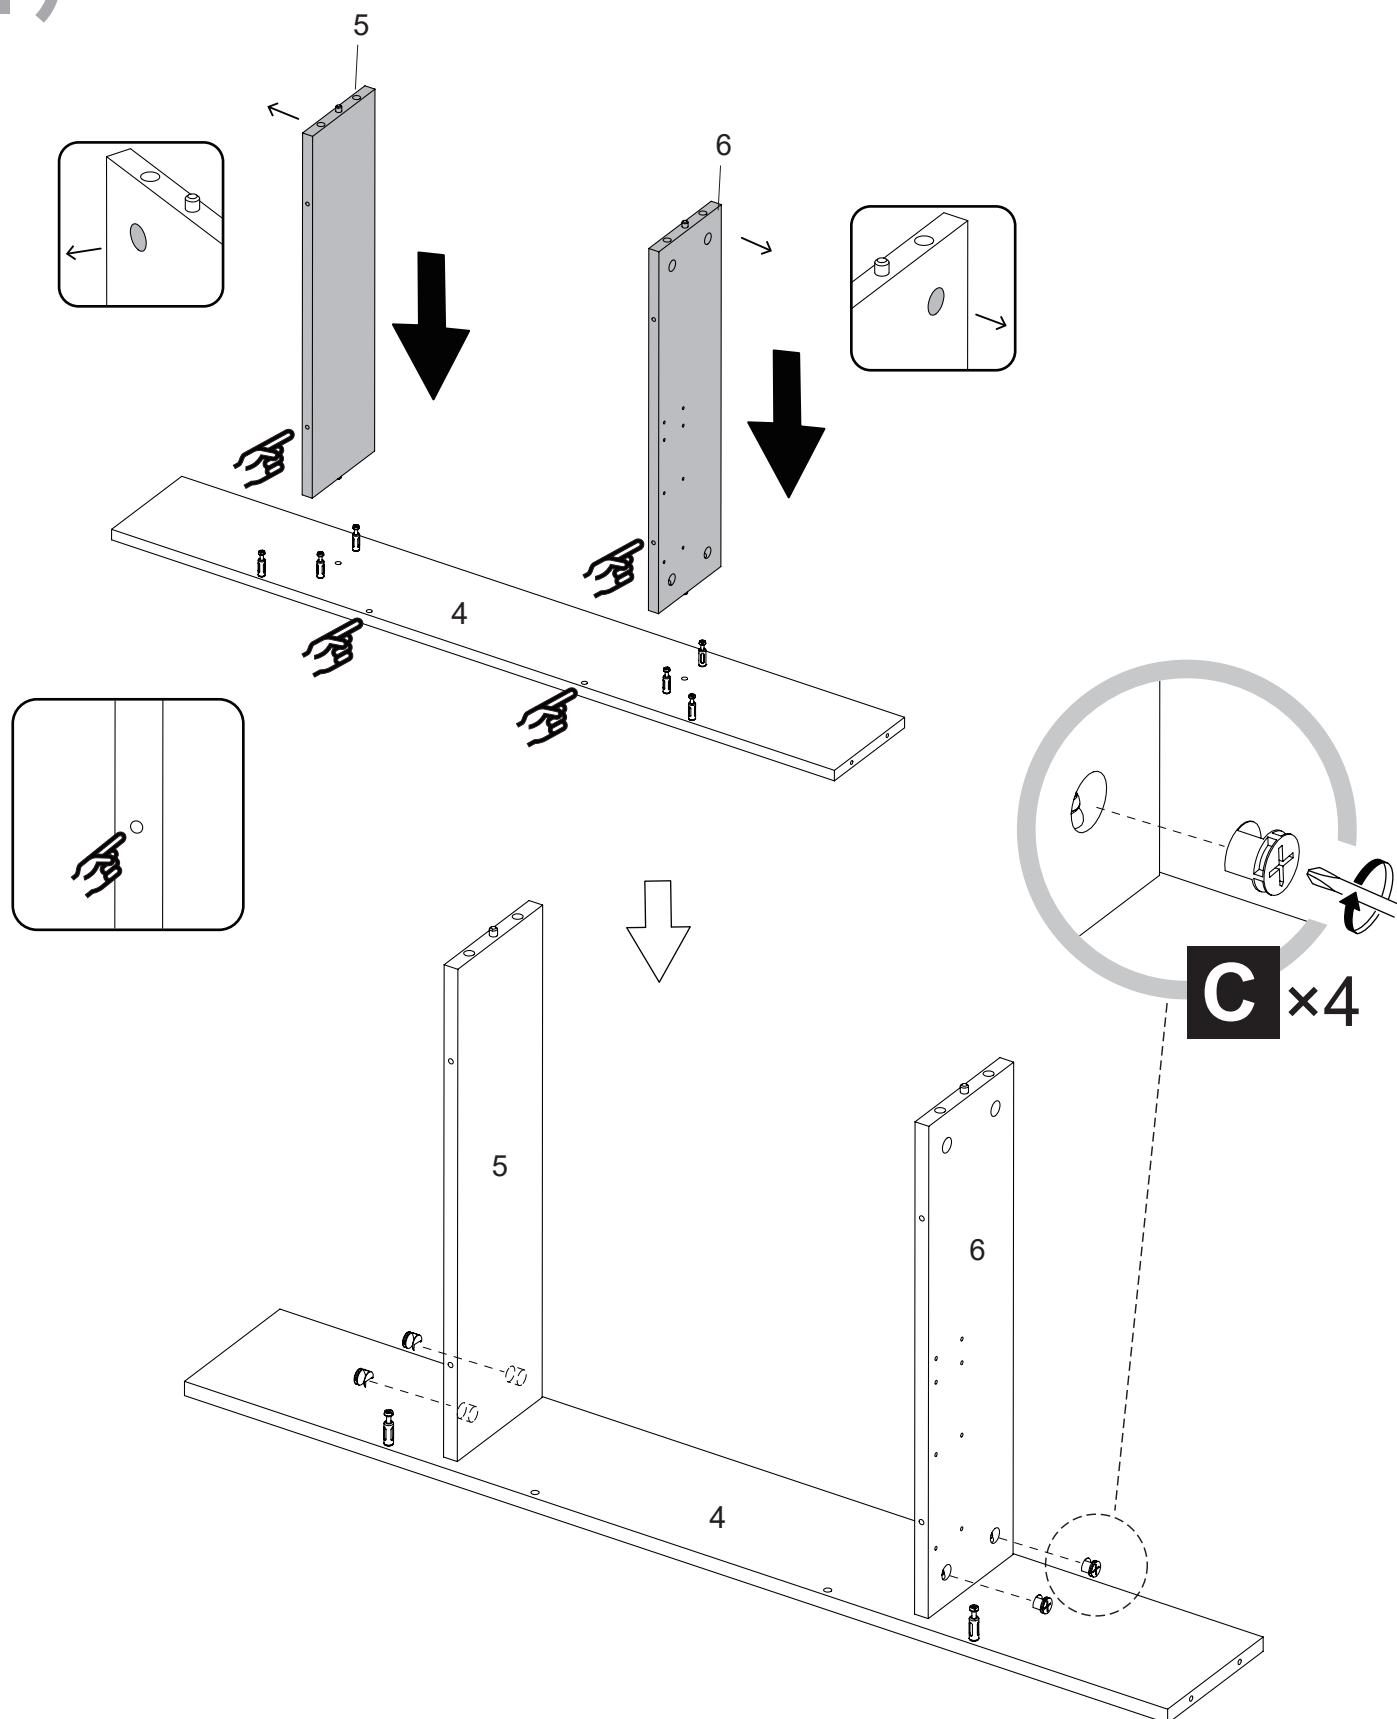


Step 4

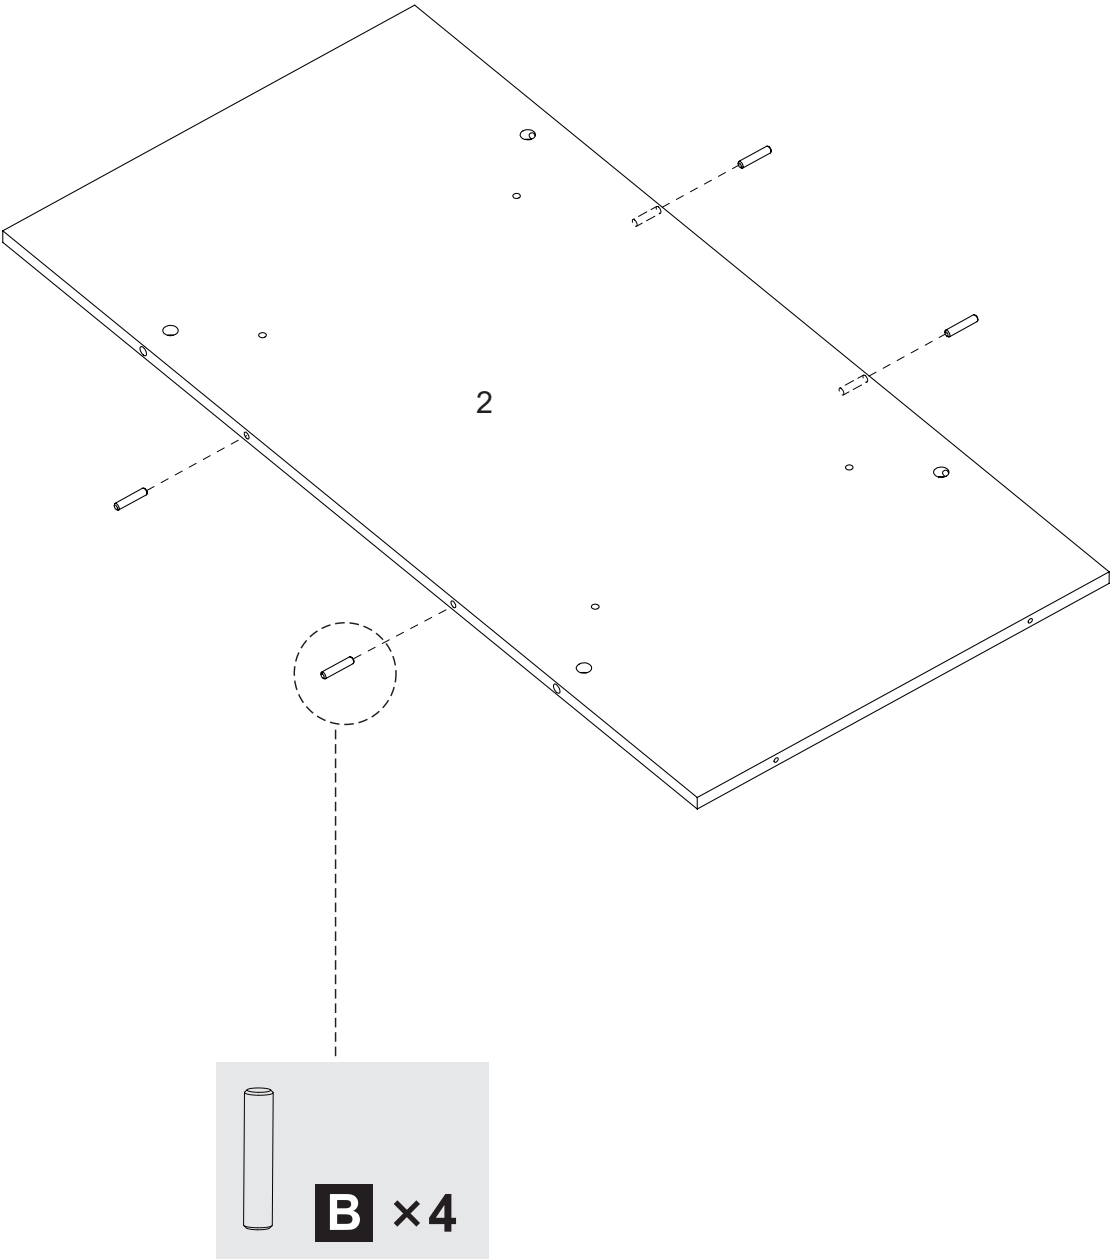

Step 5




i) Please do not fully tighten screws until all screws are in place.

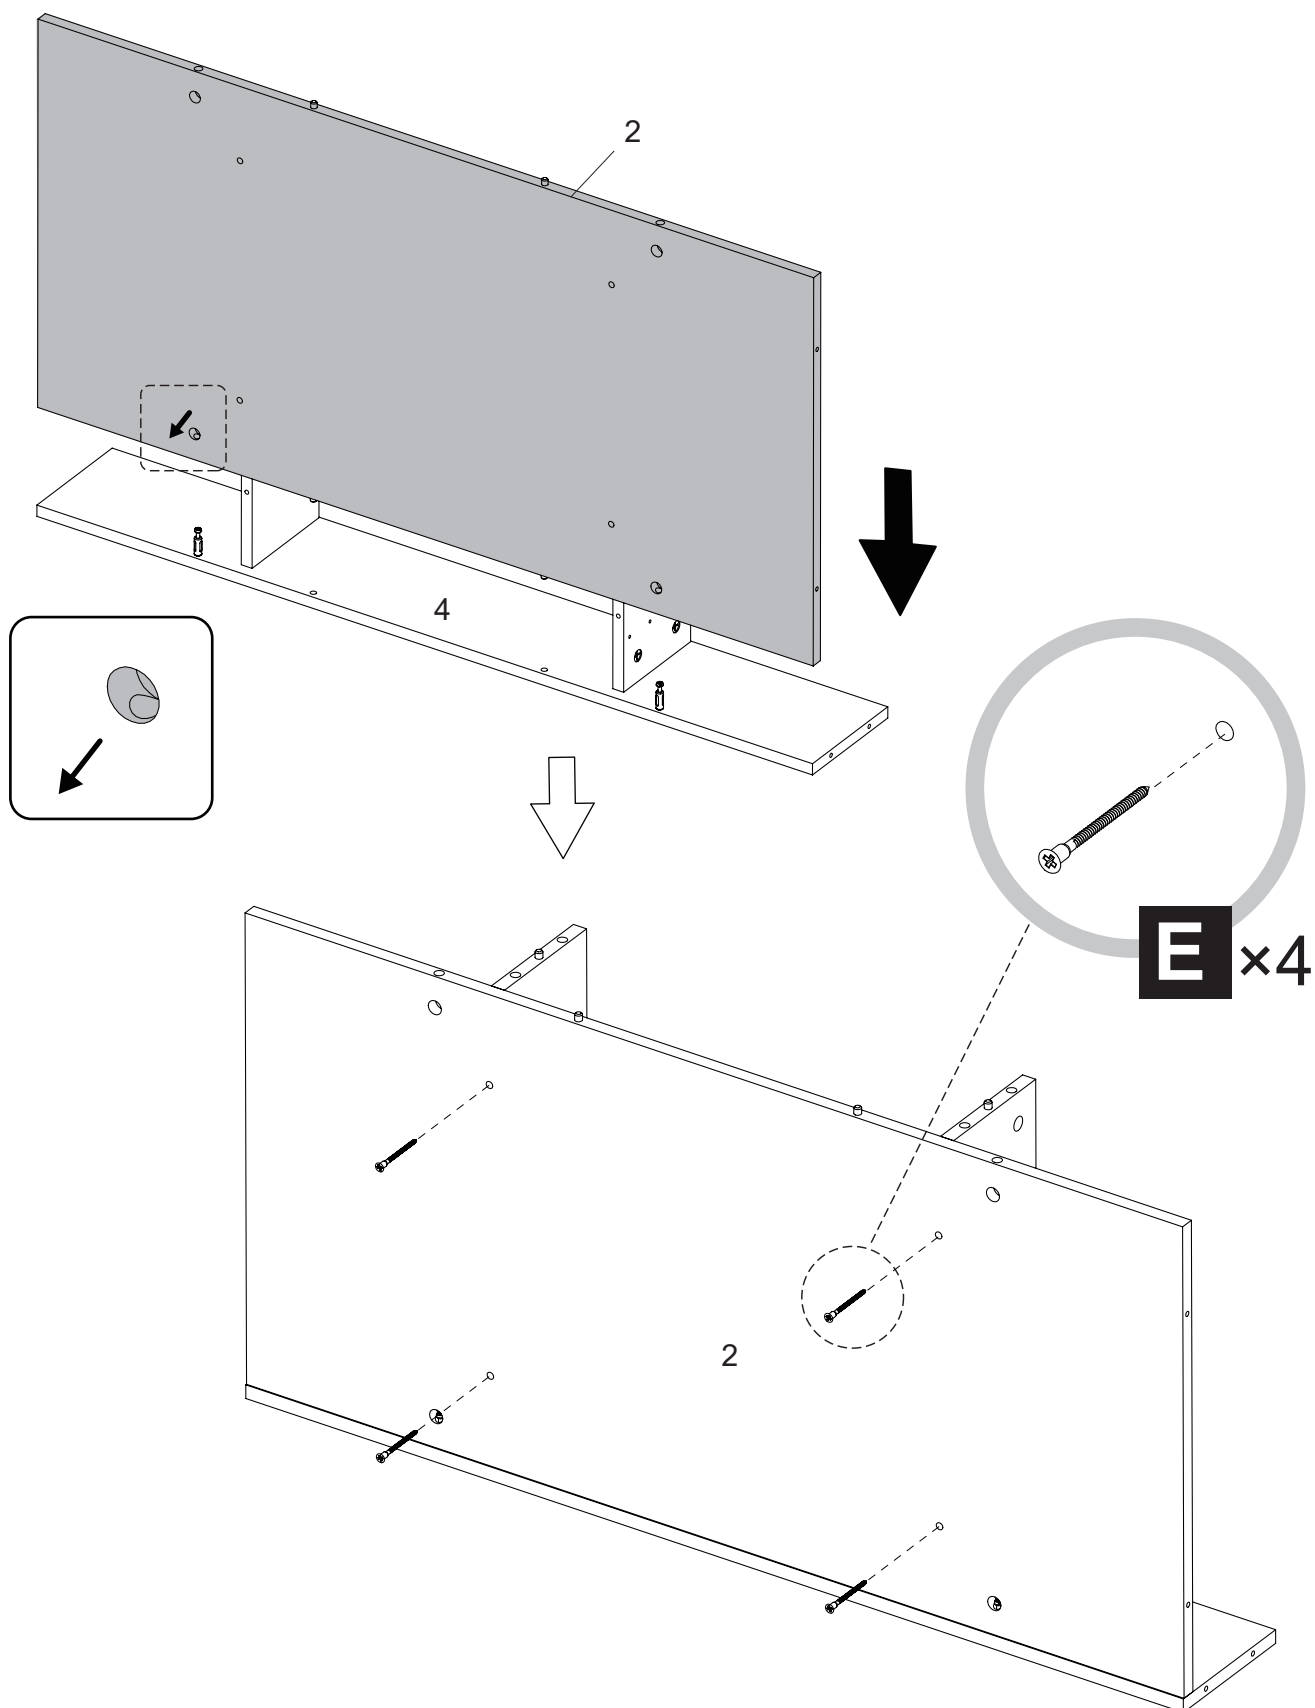

Step 6






C X2

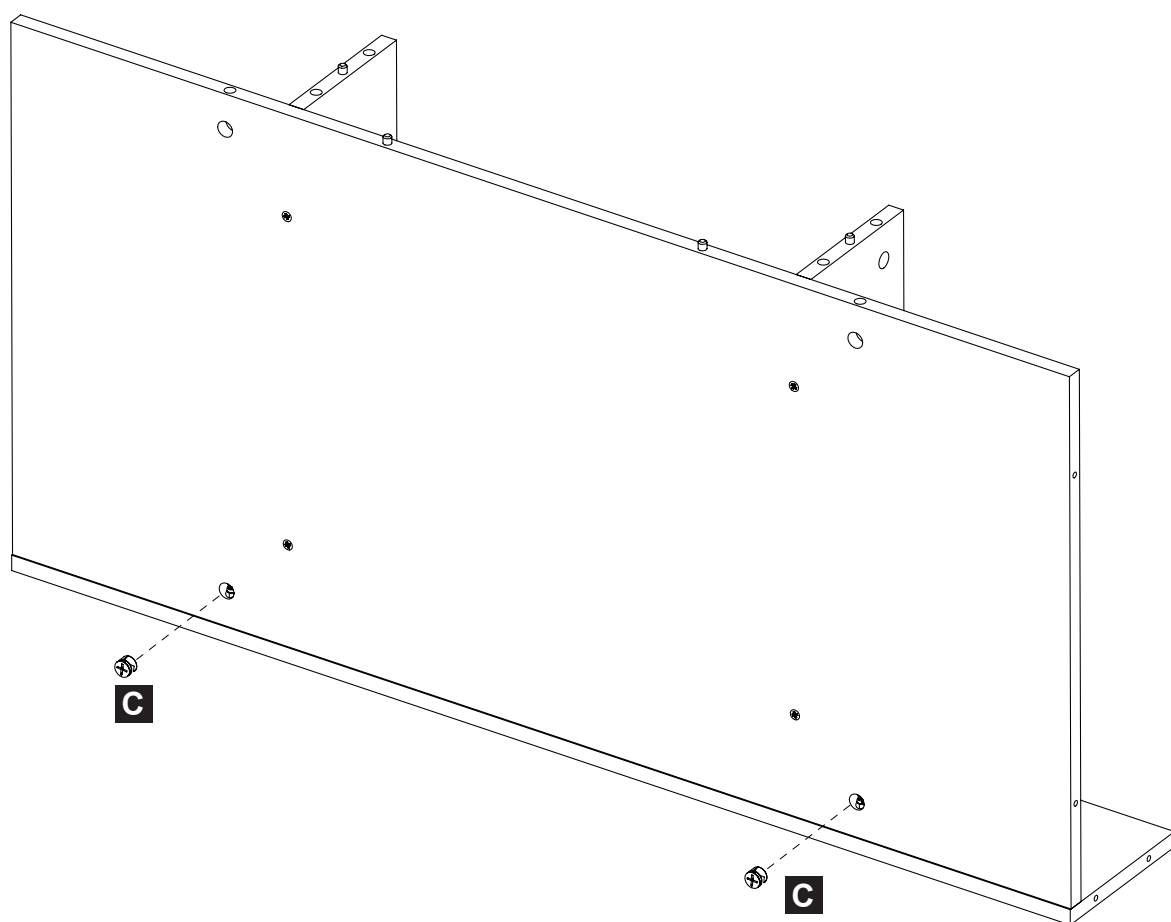

Step 7






C X2

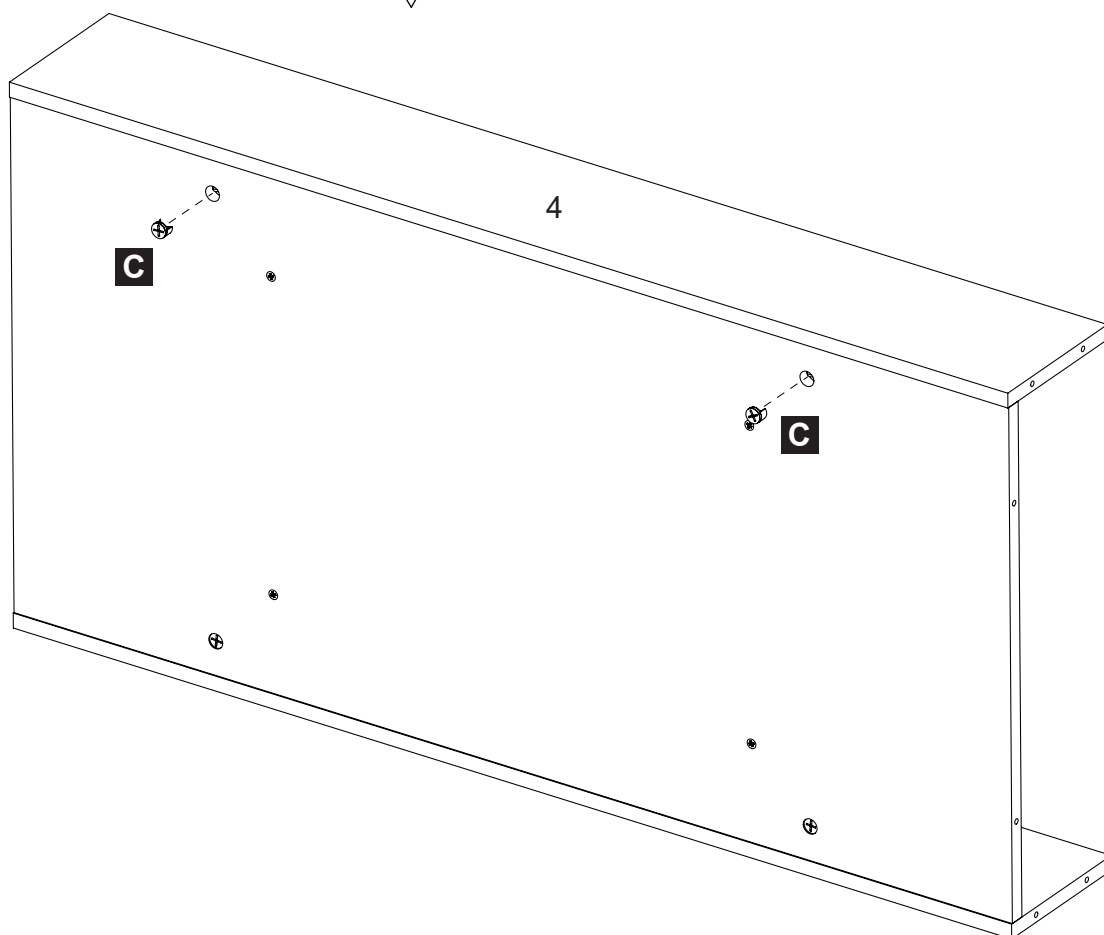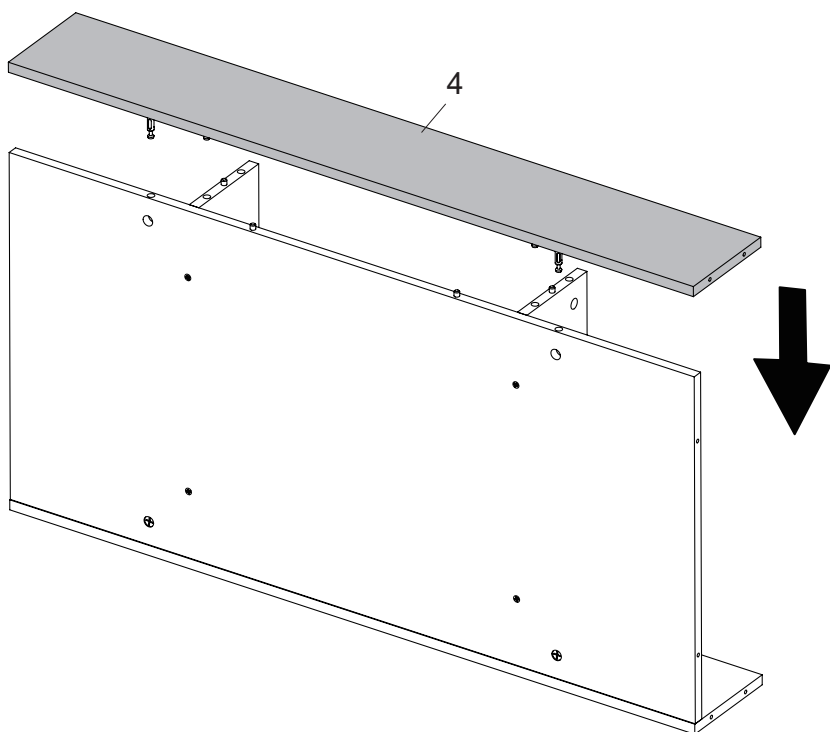

Step 8







C X4

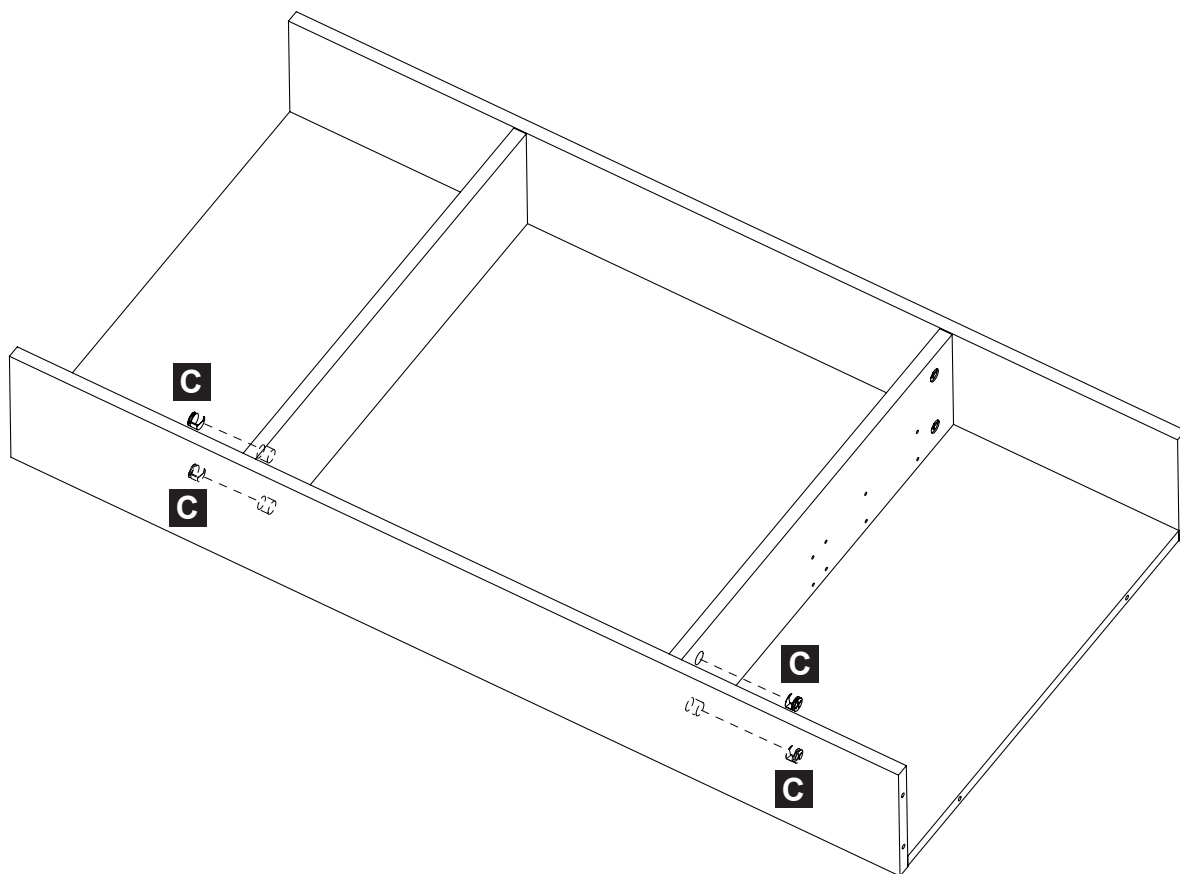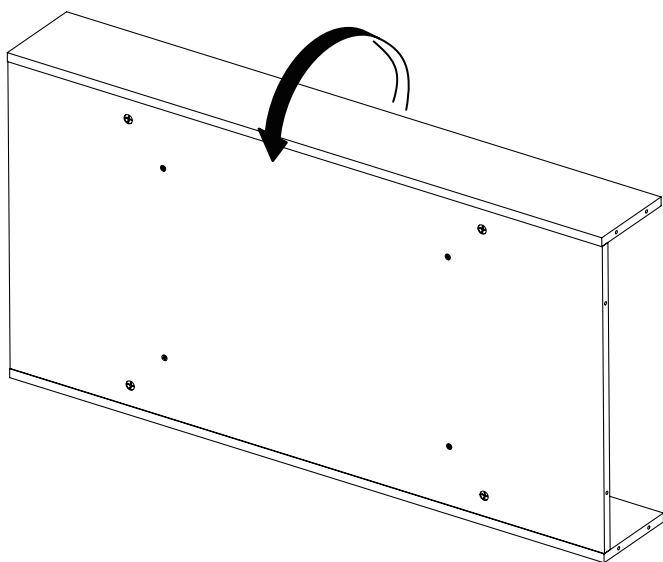

Step 9

1. Fully tighten all the screws after all the screws are in right place.
2. Please install the hydraulic lifter in the correct position.

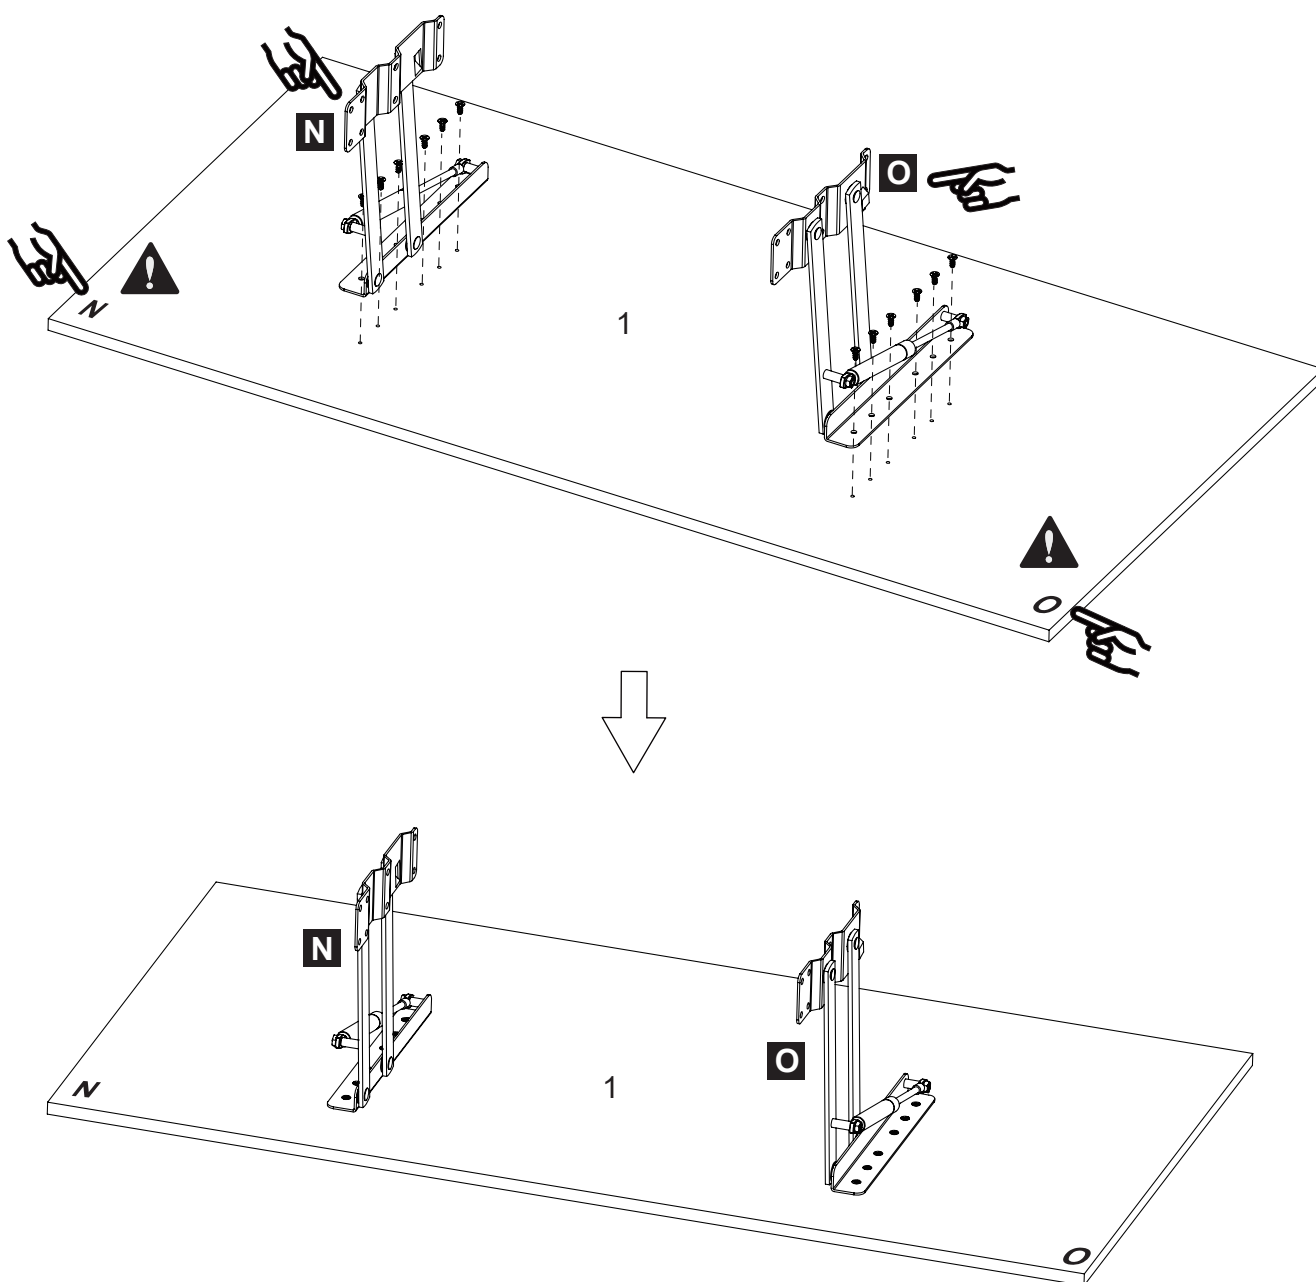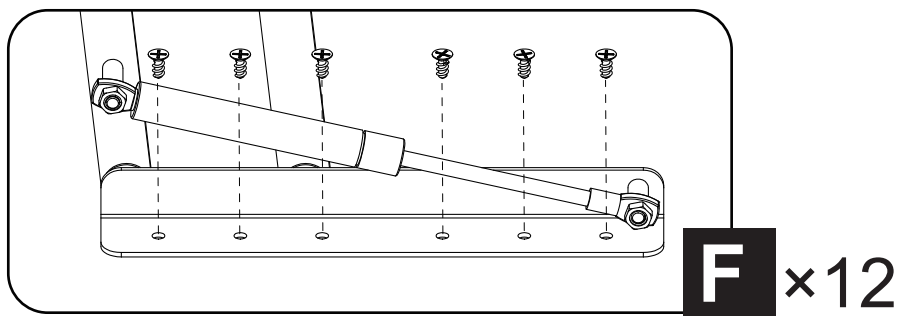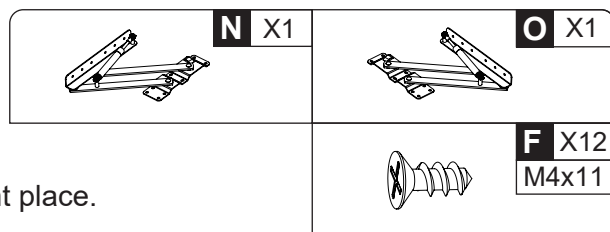


Step 10





F X16
M4x11






1. Please install this step with your partner.
2. Fully tighten all the screws after all the screws are in right place.

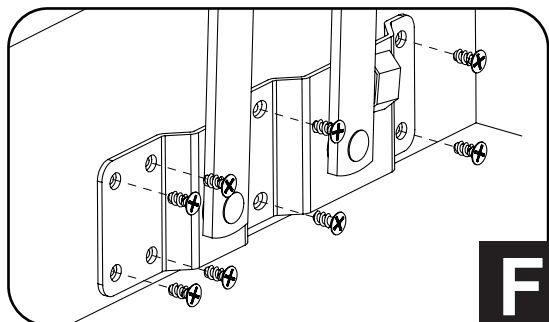


F x16

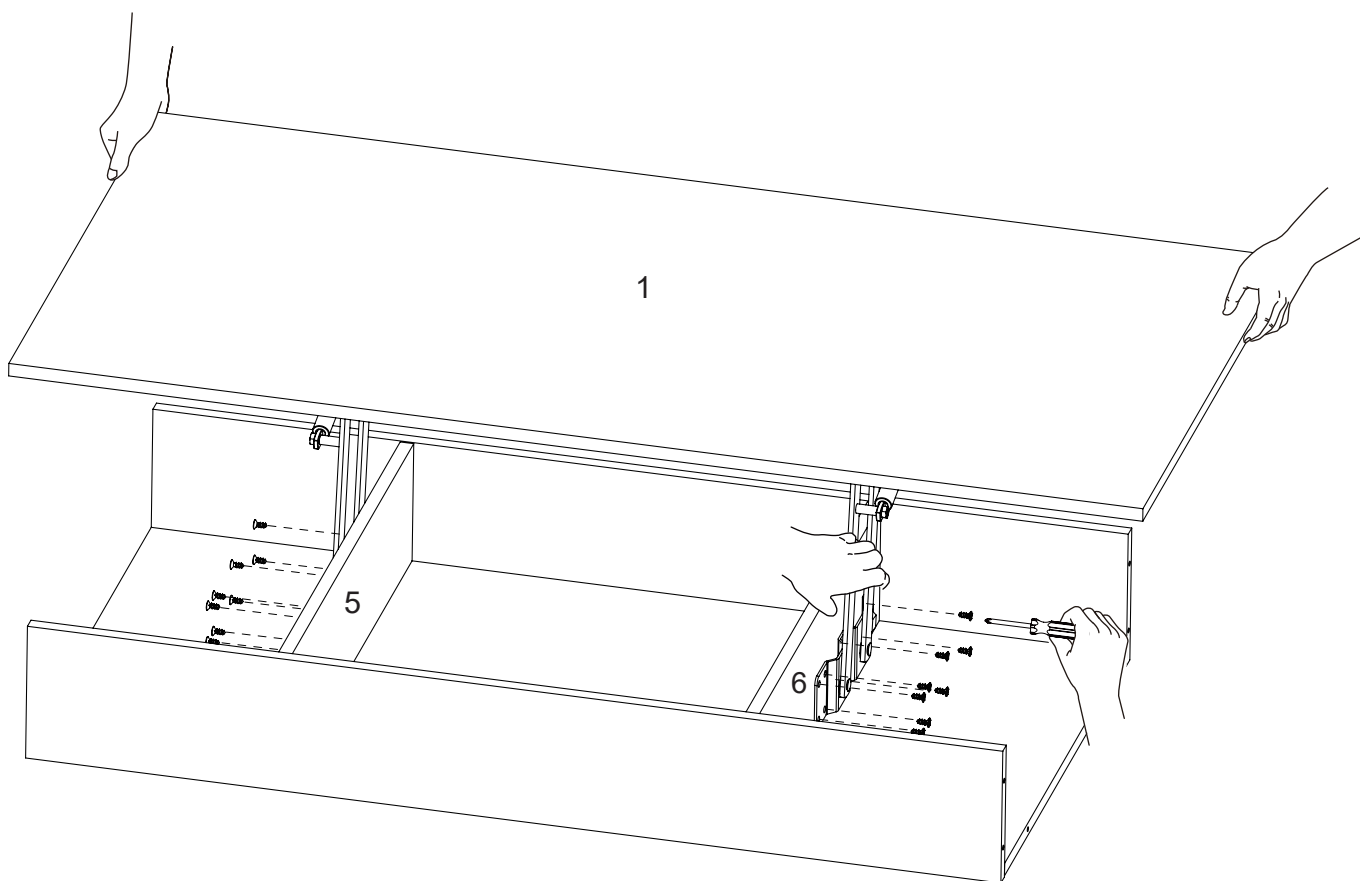


Step 11

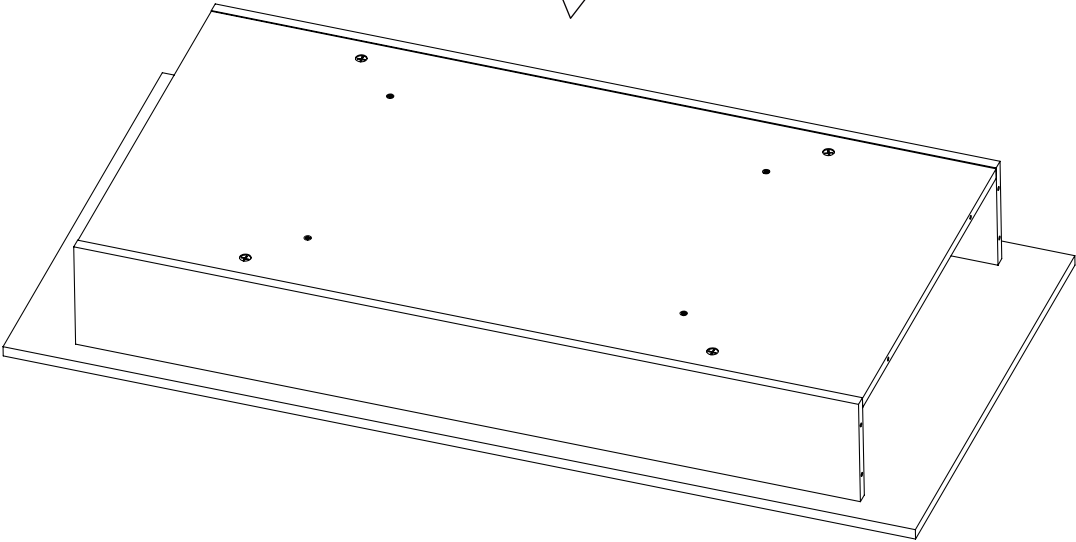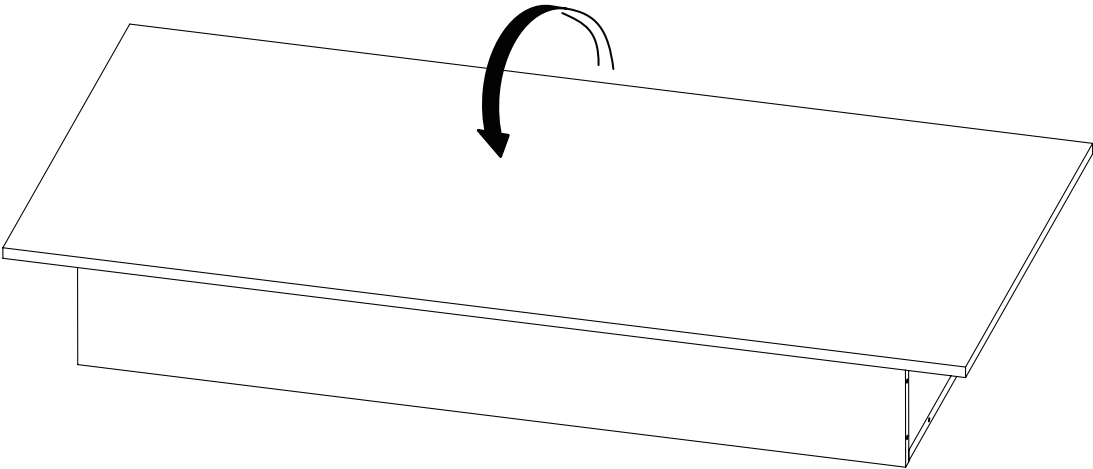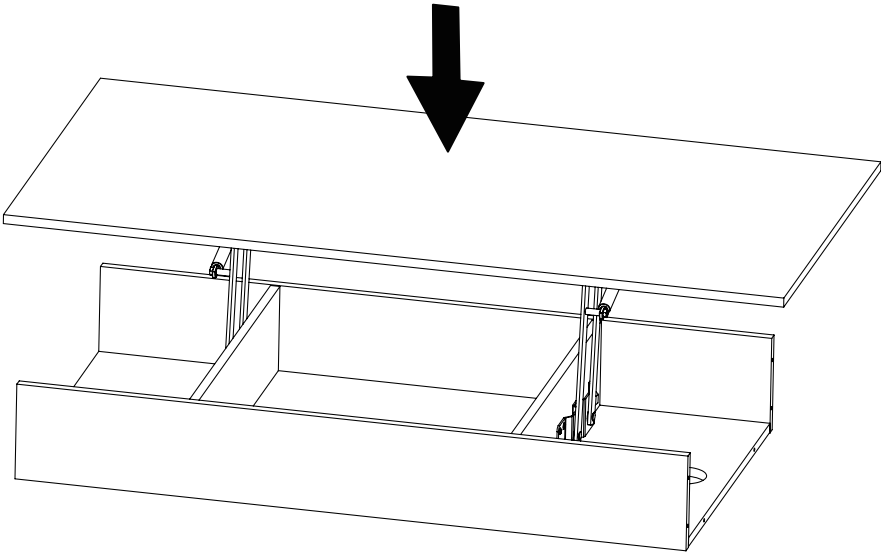



Step 12

 A X16	 P X8
---	--

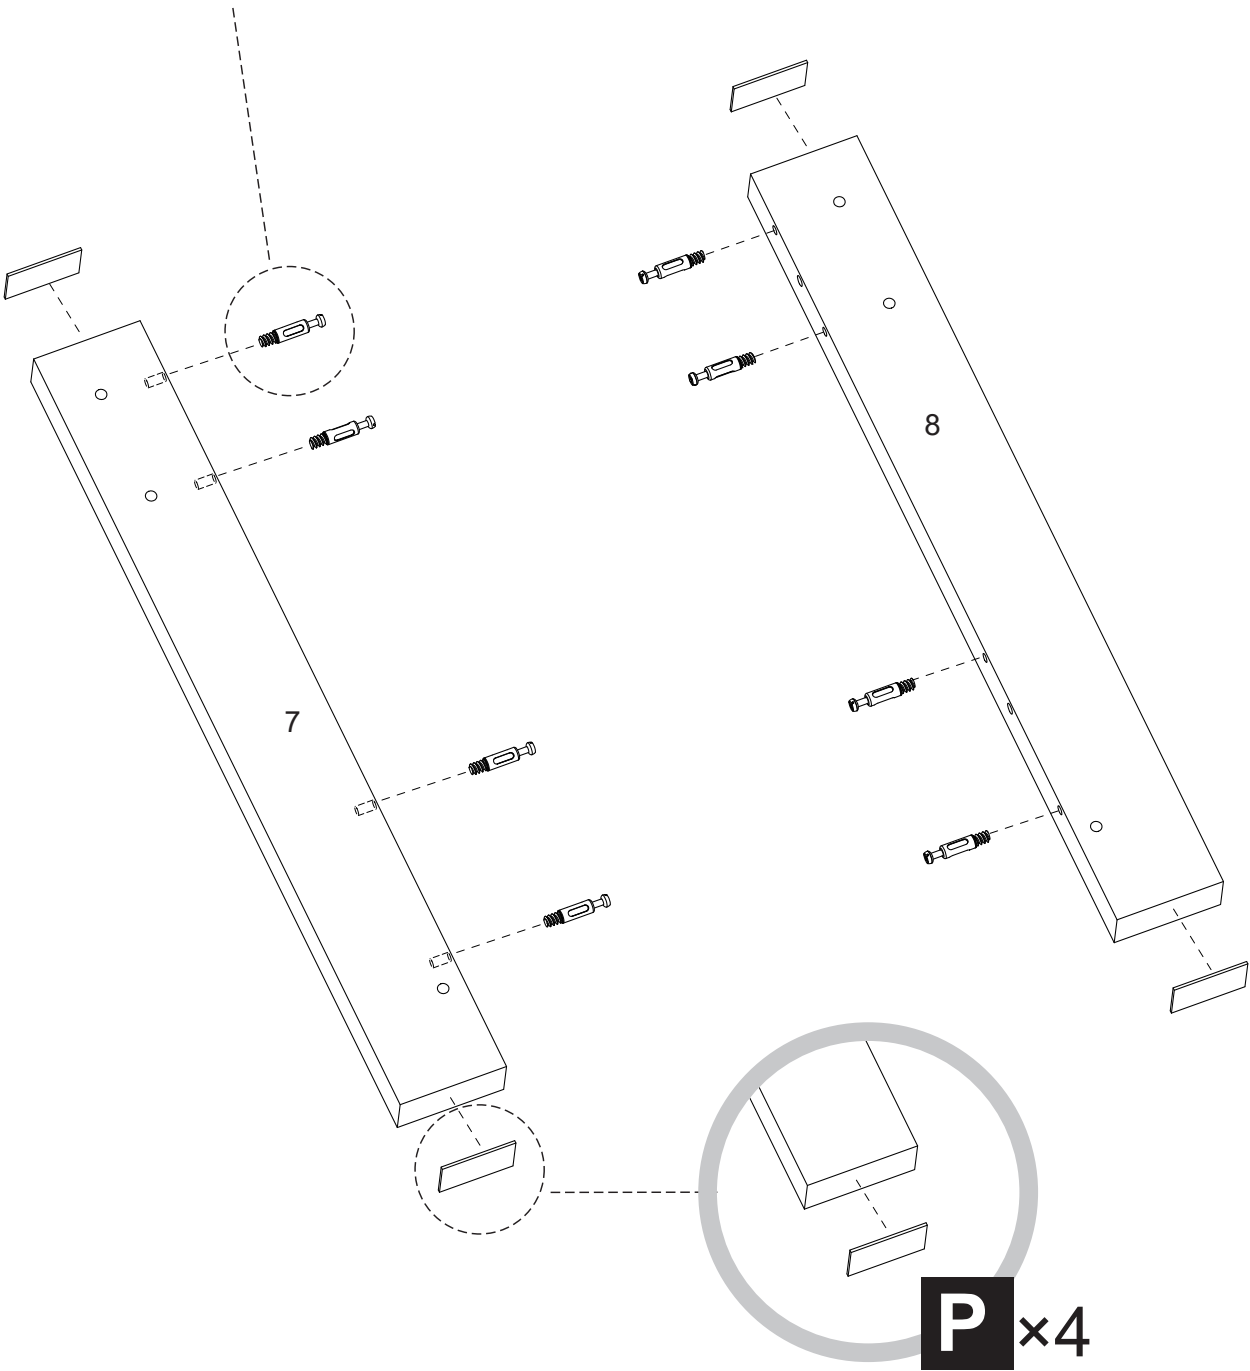 **A** x8

x2

Step 13

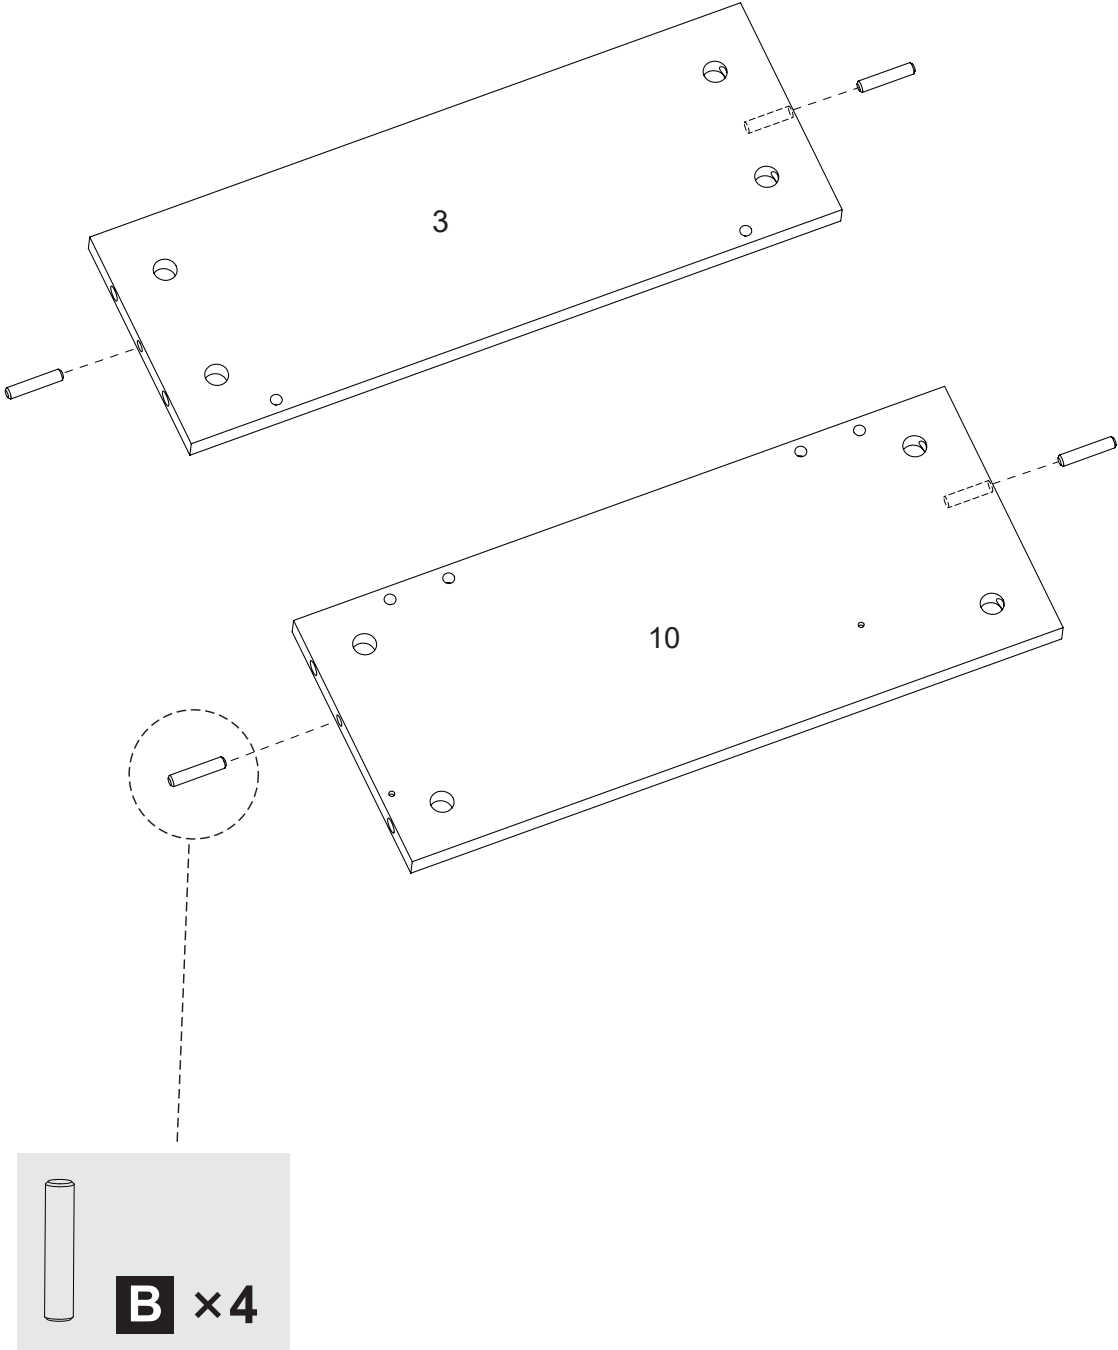


Step 14





C X8

i) Please note that the holes indicated by your fingers should face in the same direction.

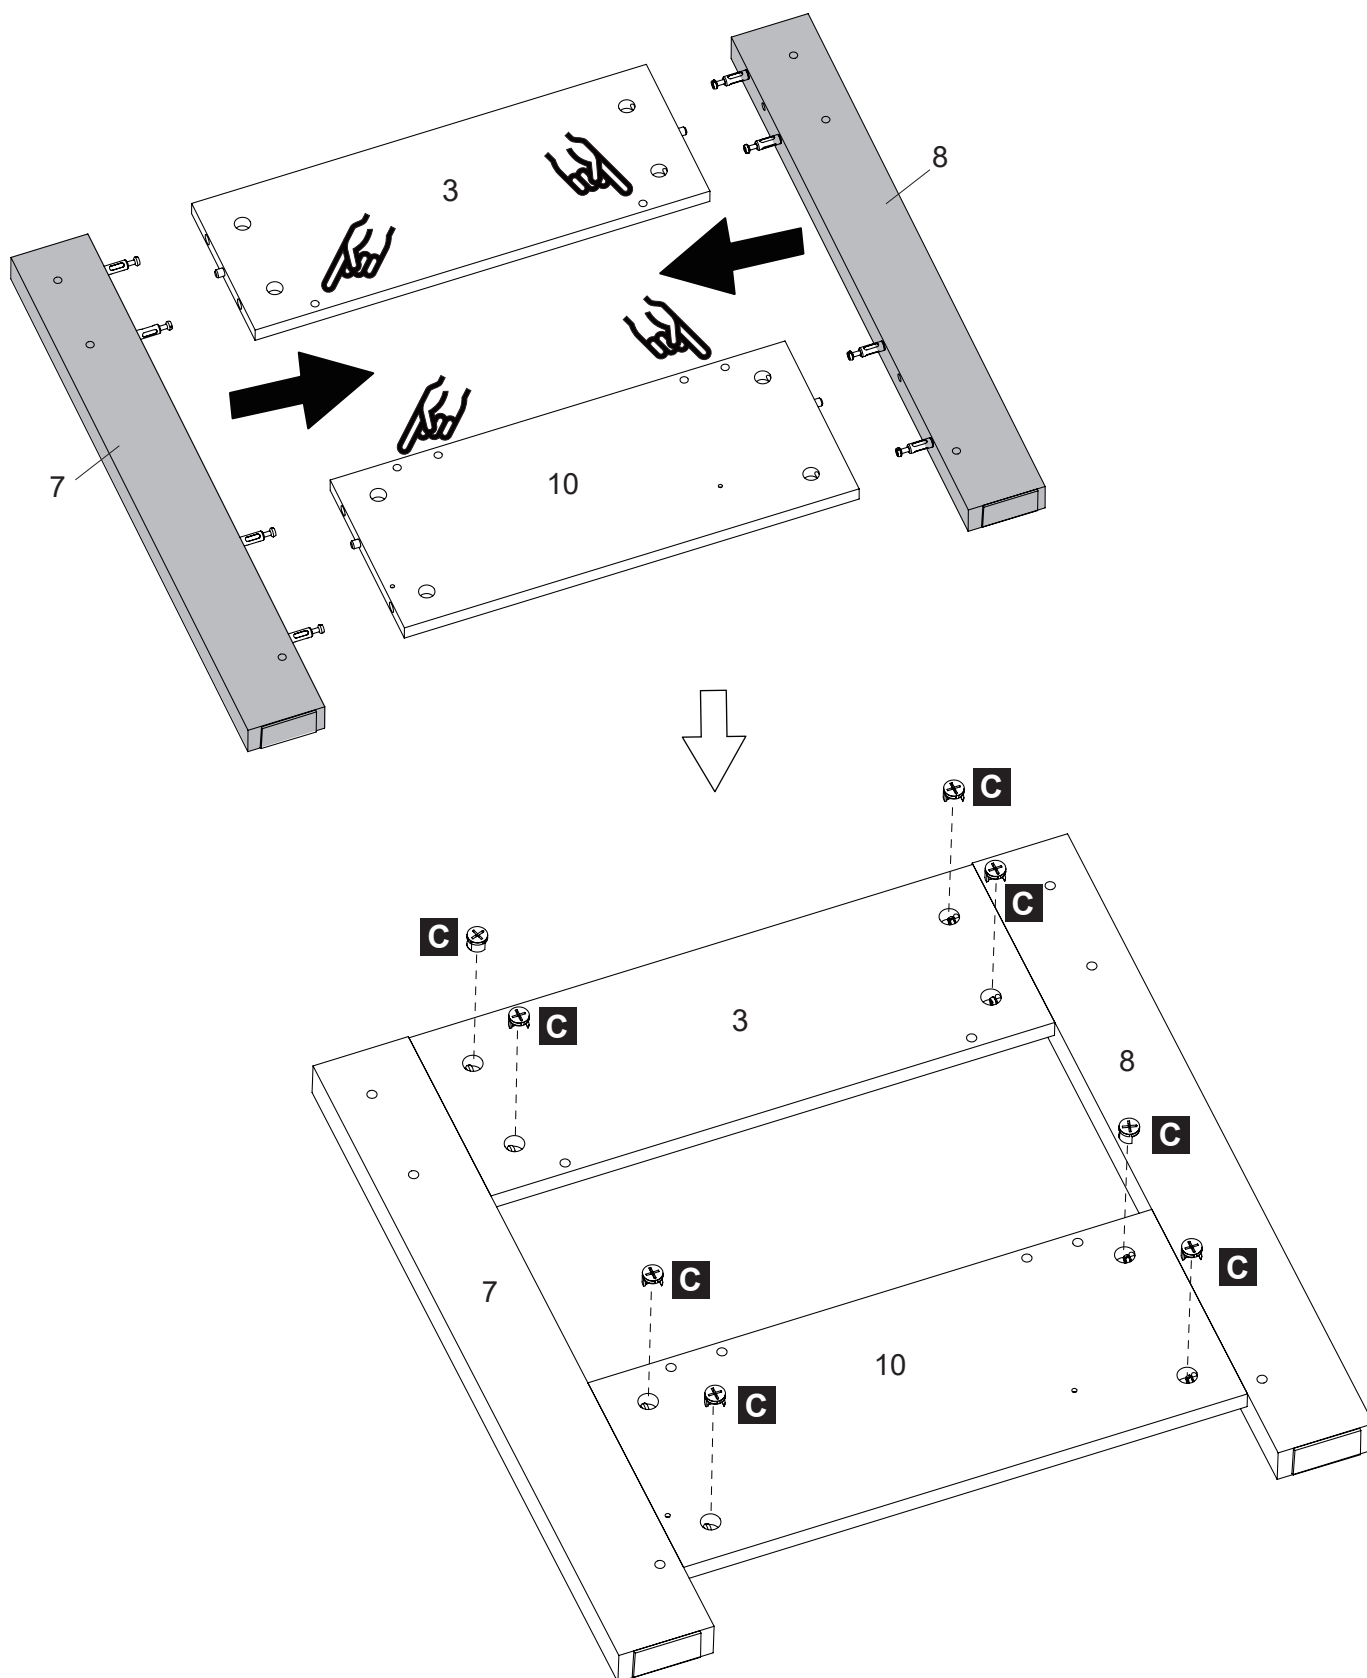

Step 15

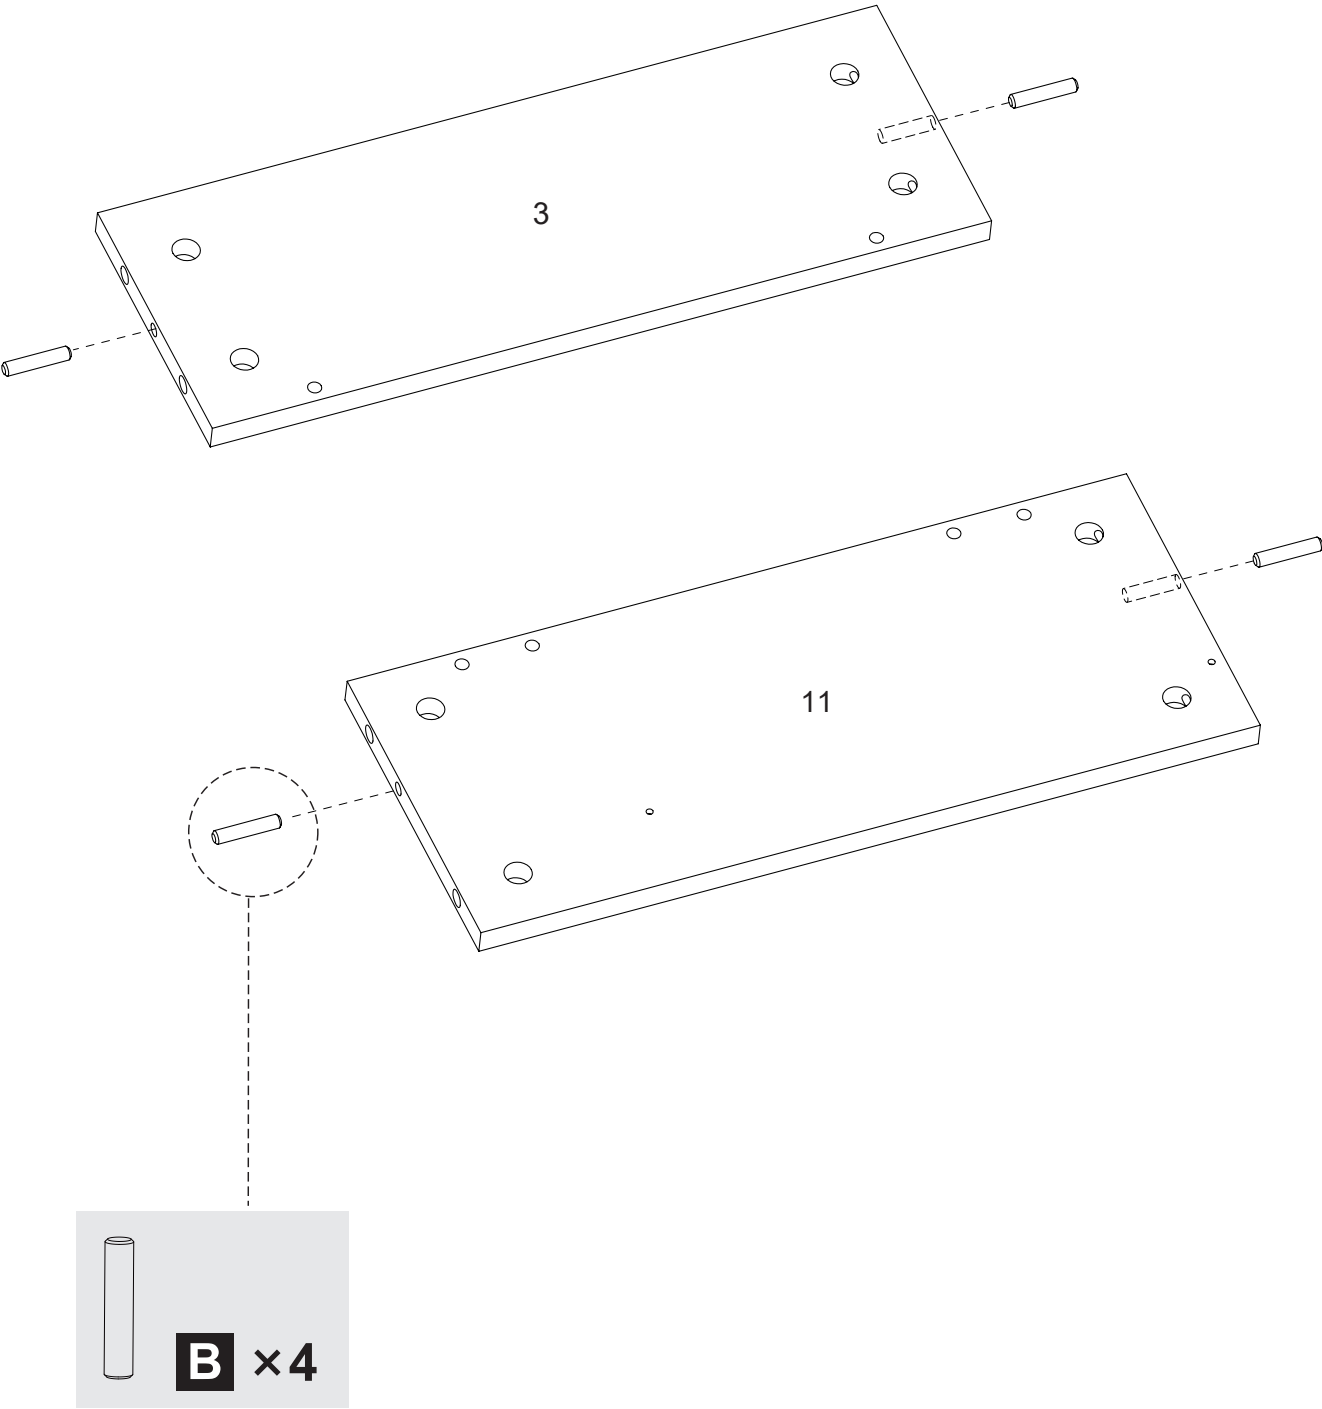


Step 16





C X8


i) Please note that the holes indicated by your fingers should face in the same direction.

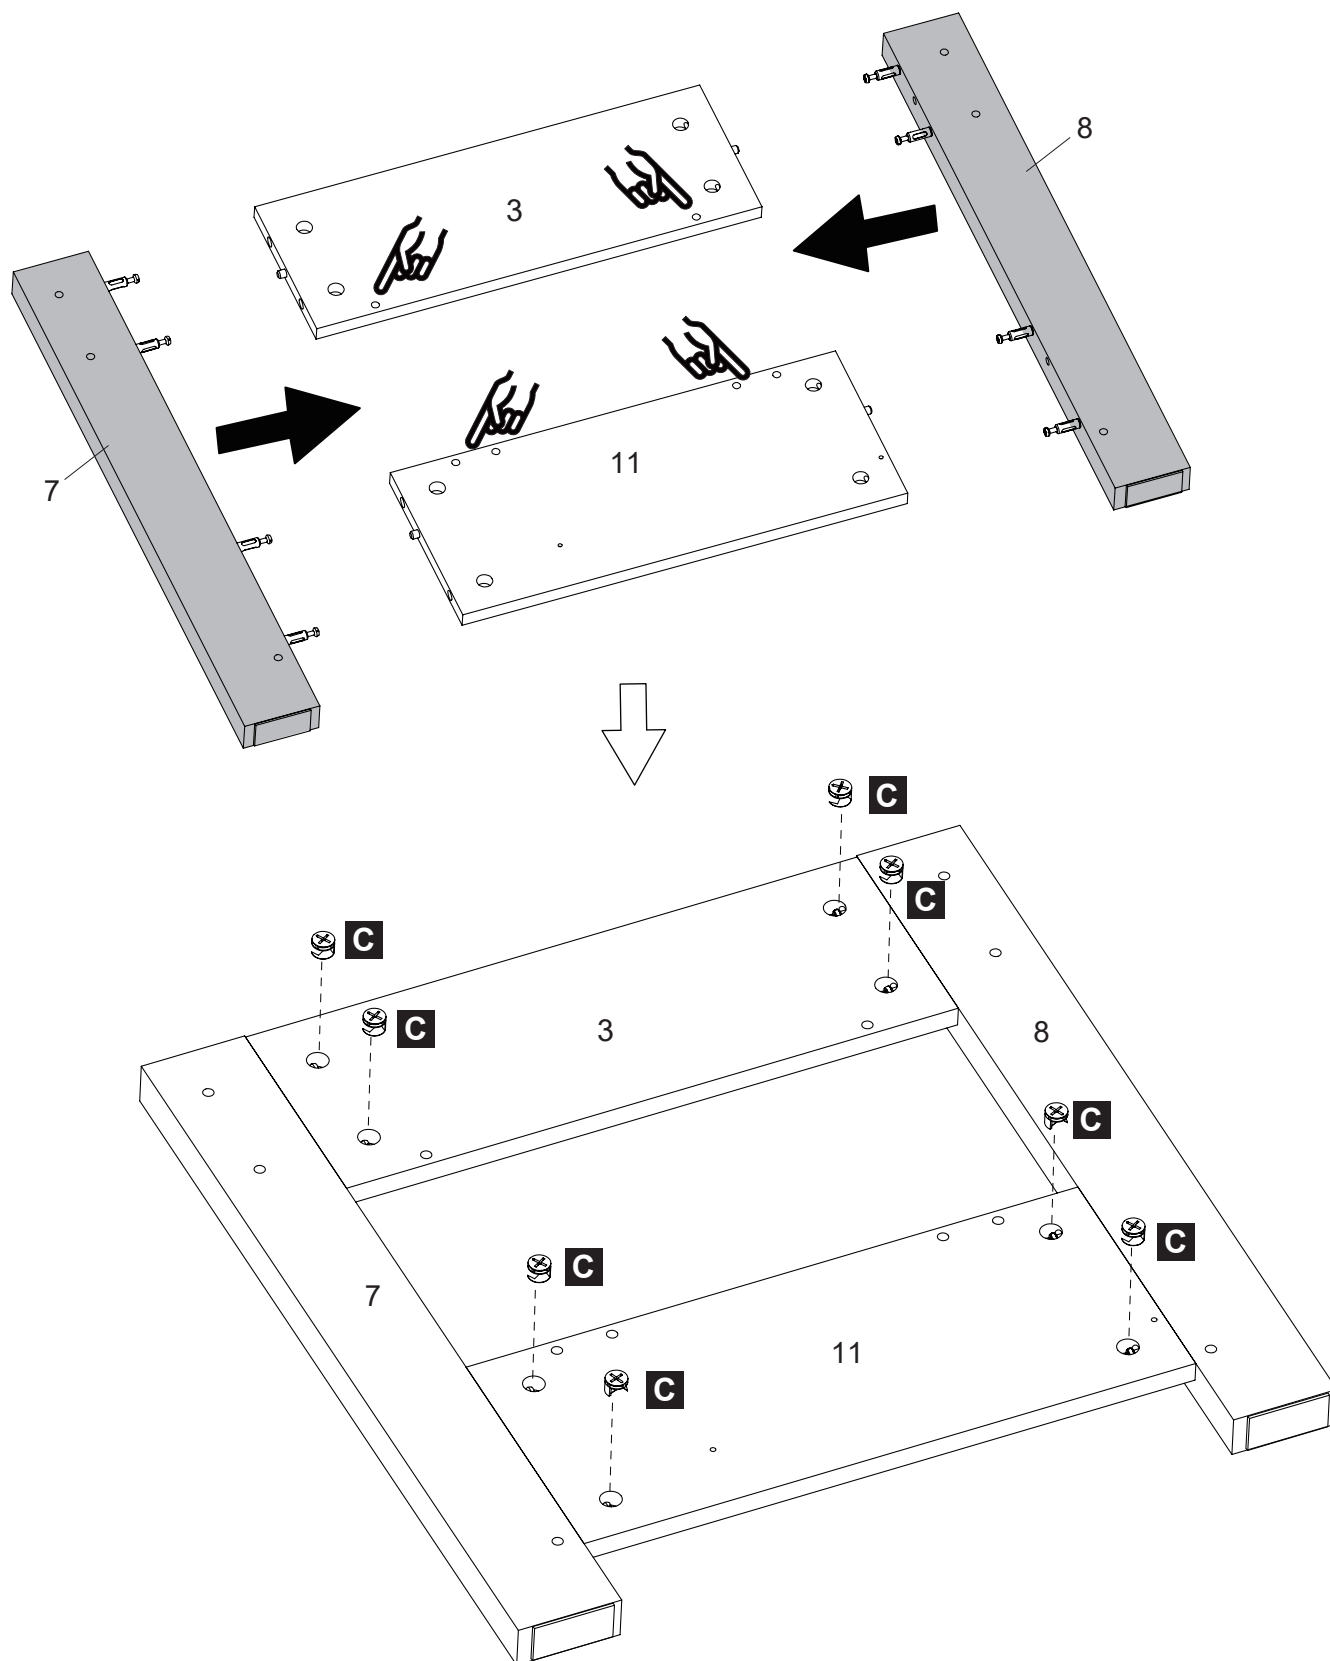


Step 17

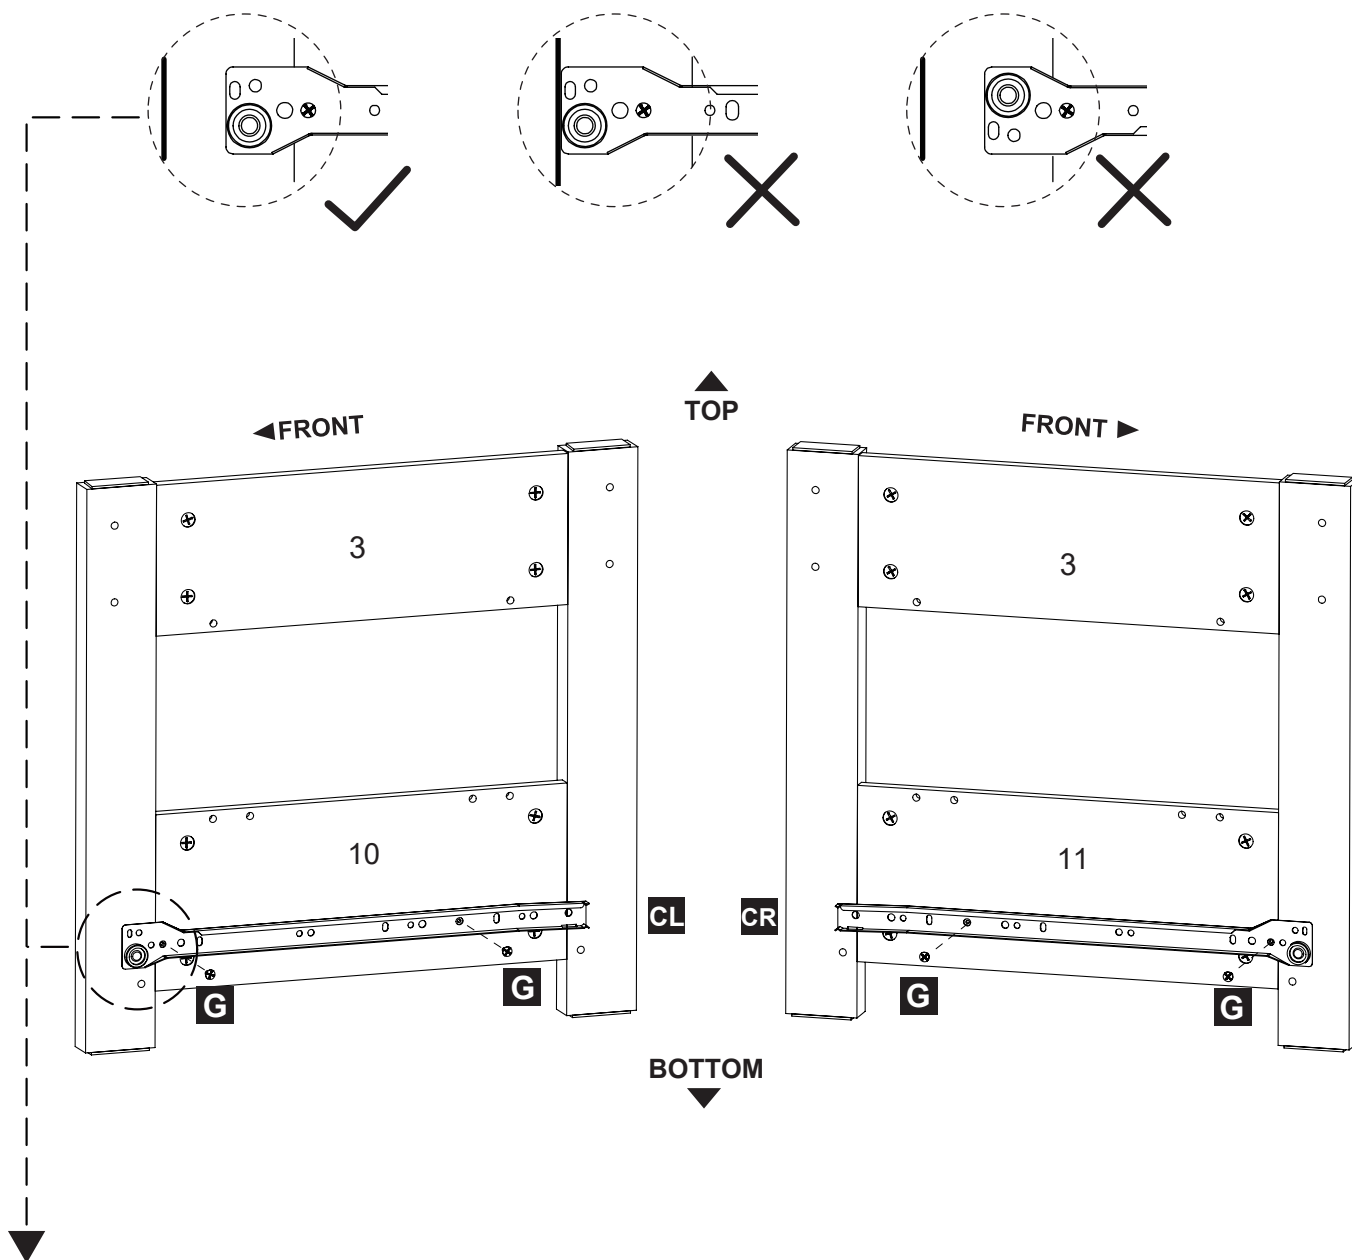
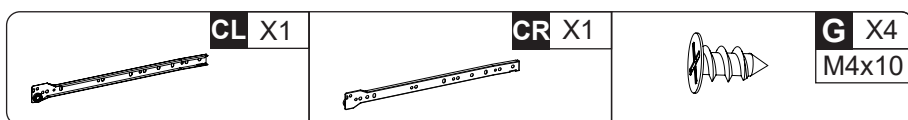


i When installing, please make sure the screws are flattened, not crooked; Otherwise the drawers will not be installed perfectly.


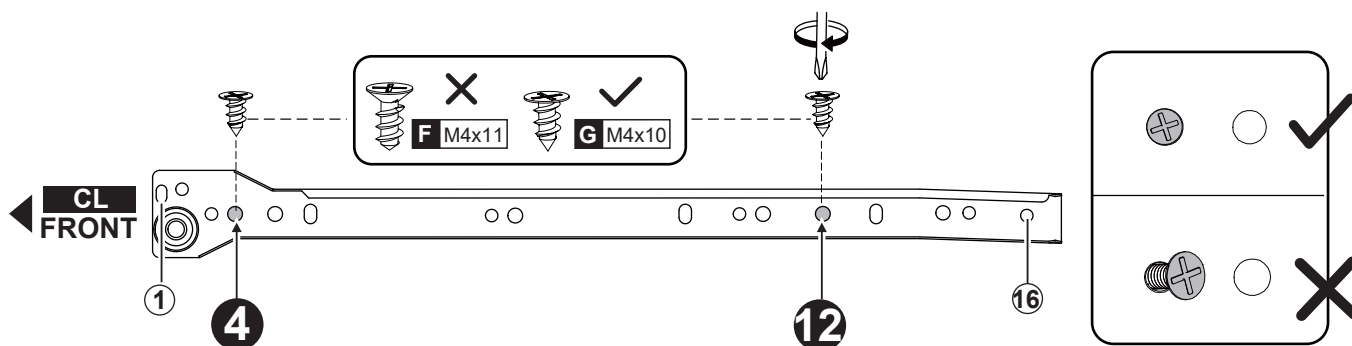


Step 18


**B** X2

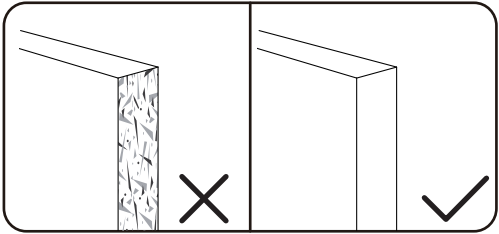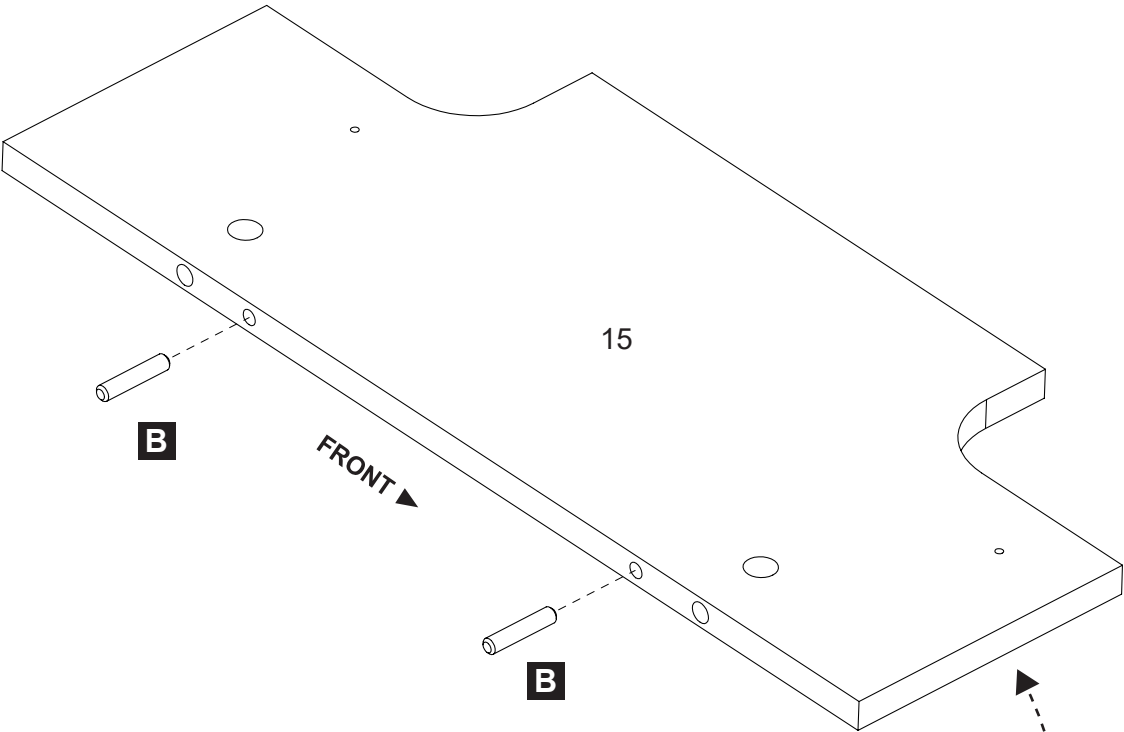



Step 19

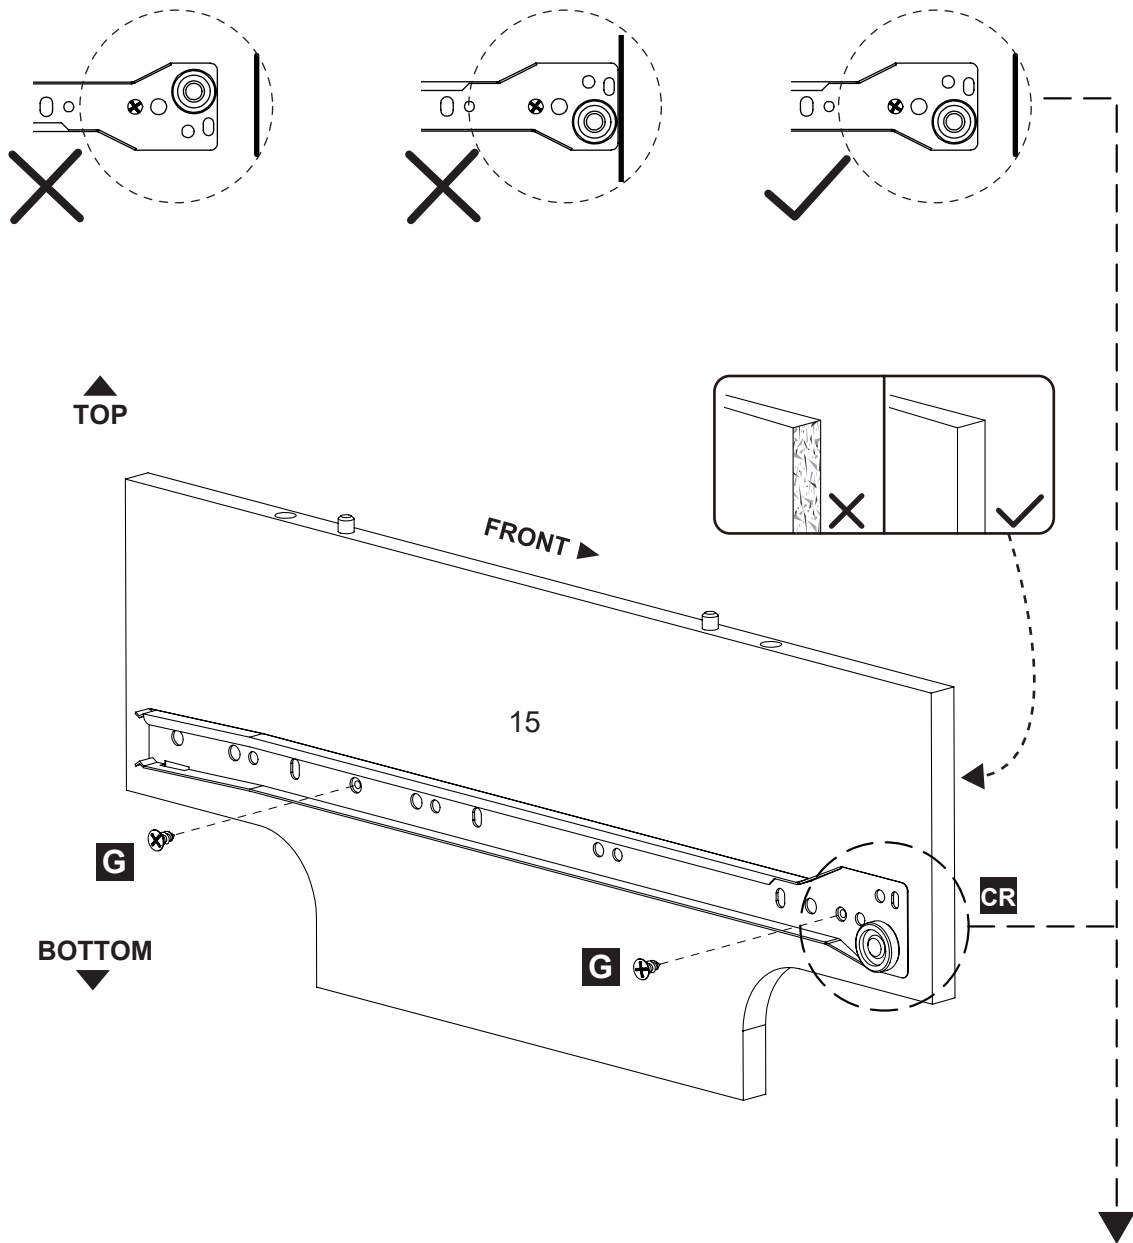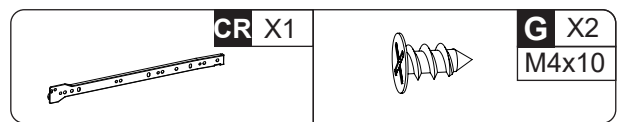

i When installing, please make sure the screws are flattened, not crooked; Otherwise the drawers will not be installed perfectly.

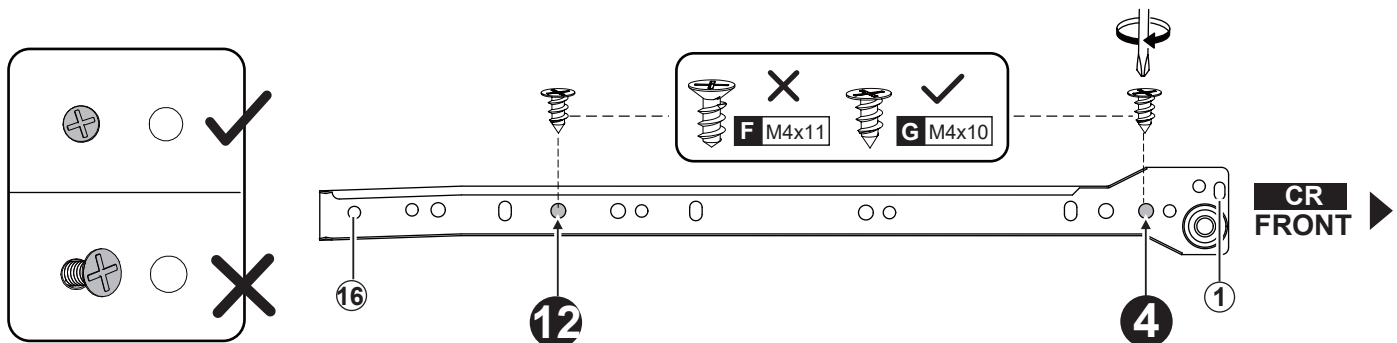


Step 20

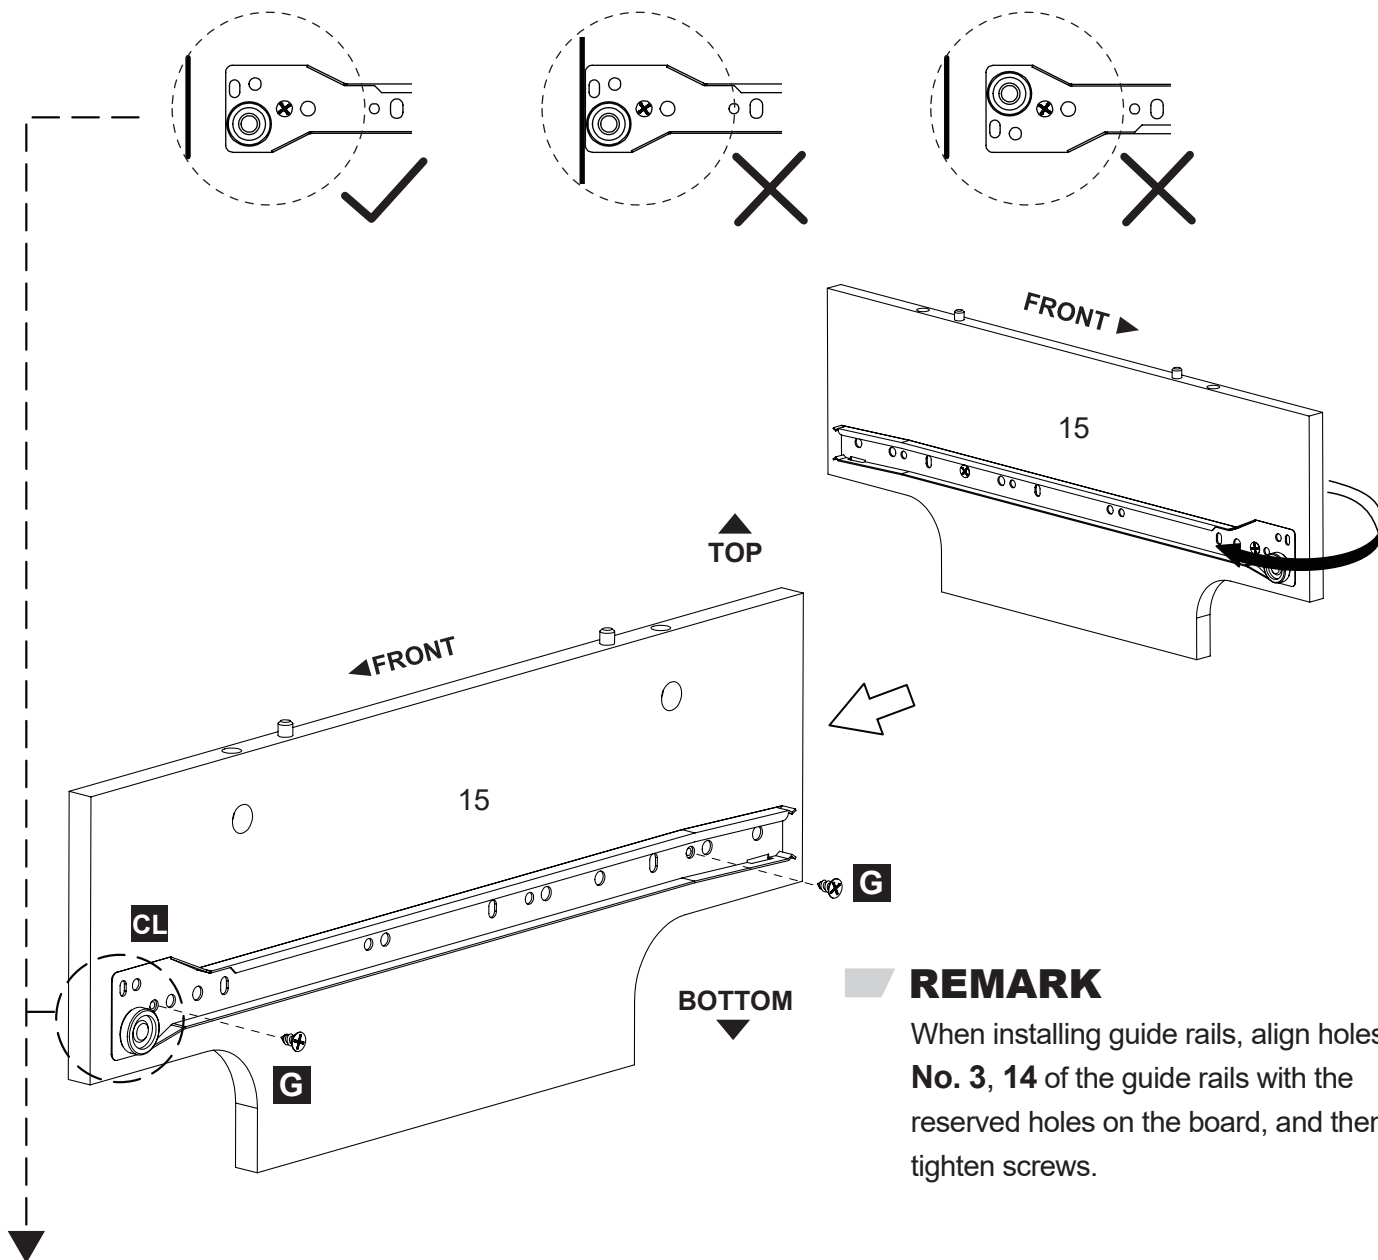



REMARK

When installing guide rails, align holes **No. 3, 14** of the guide rails with the reserved holes on the board, and then tighten screws.


i When installing, please make sure the screws are flattened, not crooked; Otherwise the drawers will not be installed perfectly.

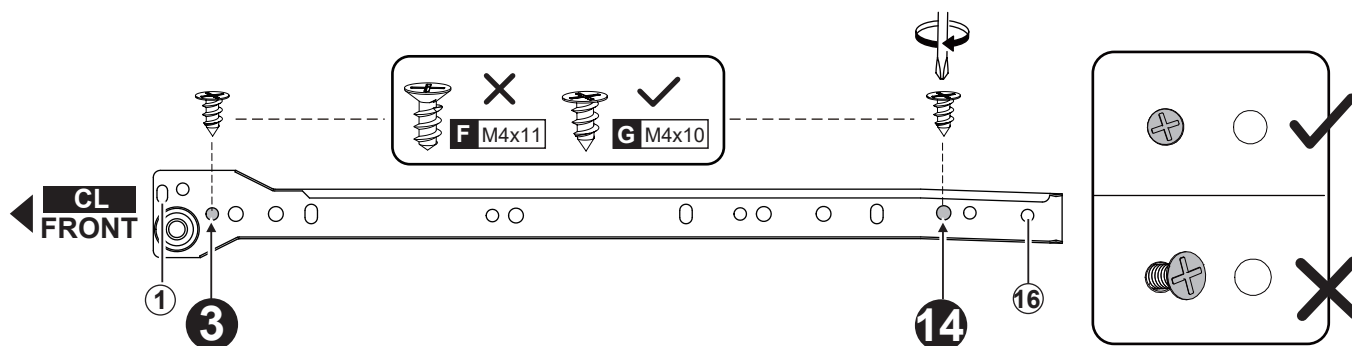

Step 21



 A X4	 B X6
---	--

 **B** x6

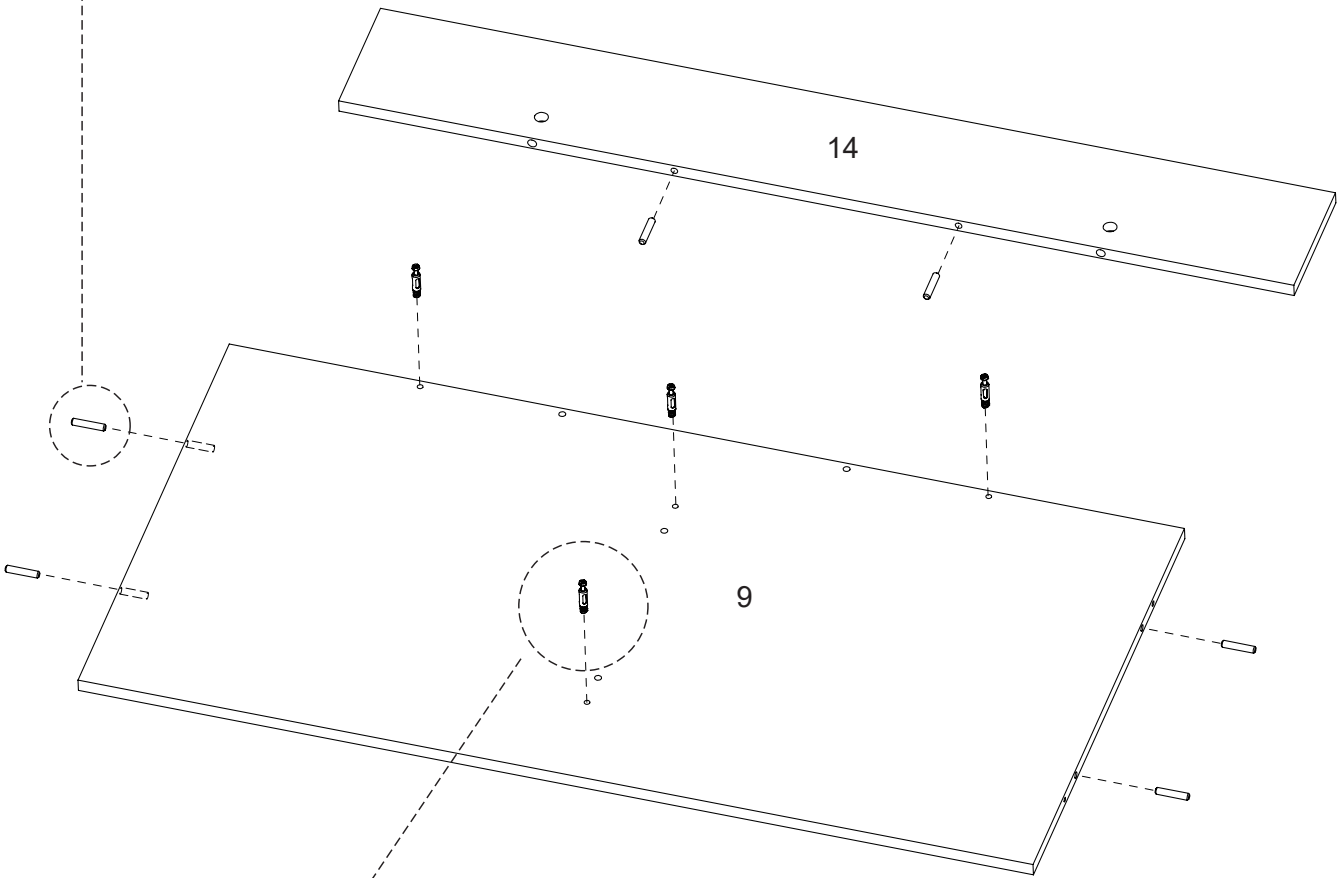

 **A** x4





Step 22

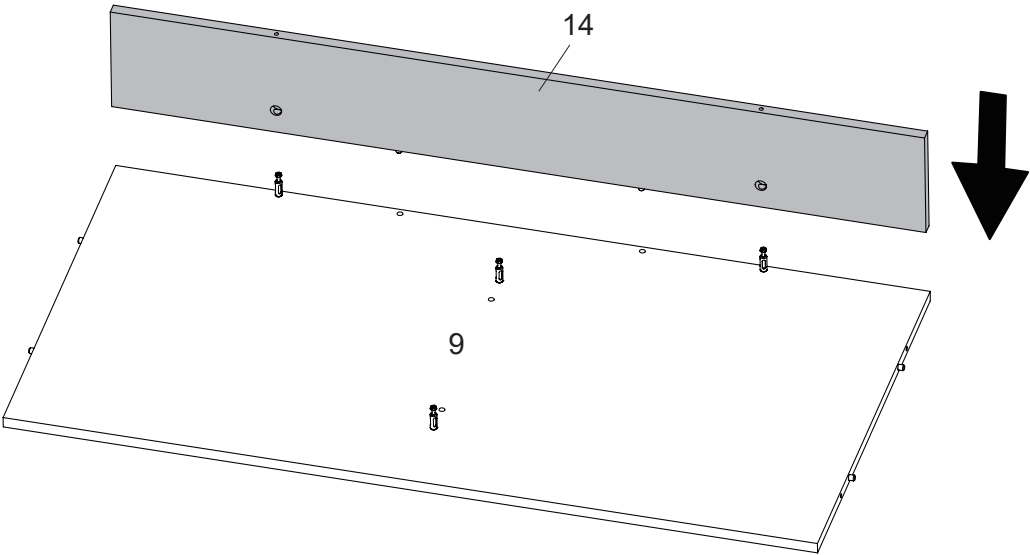


Step 23




C X2

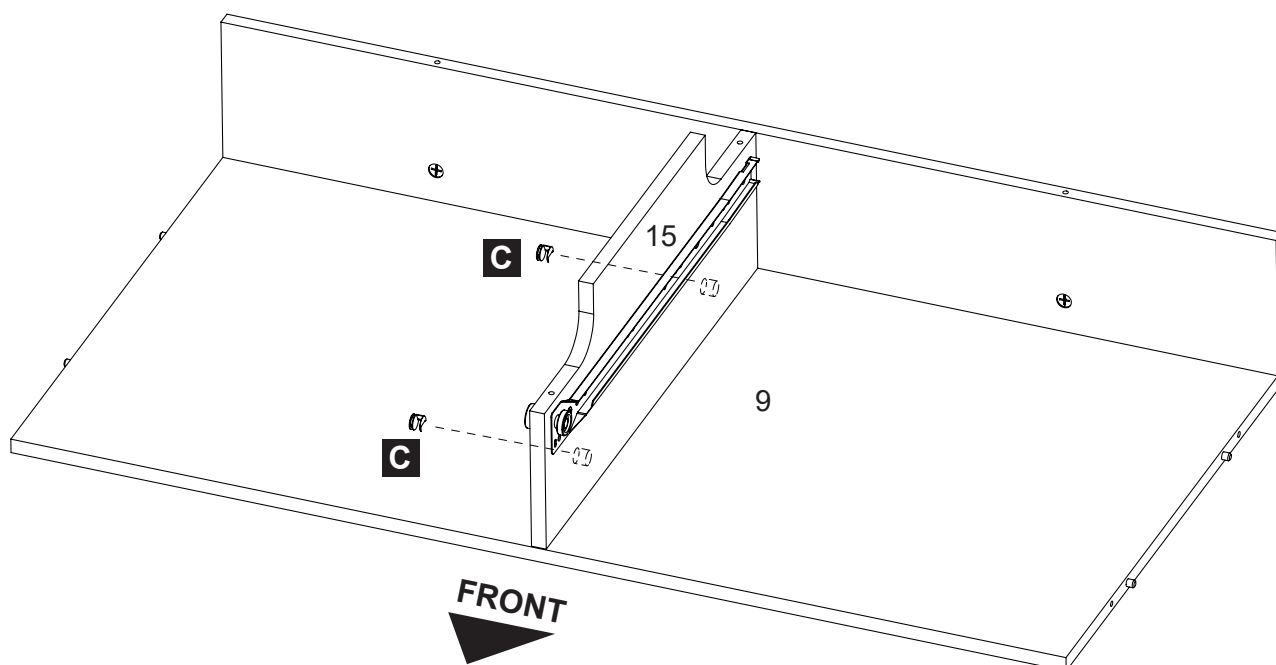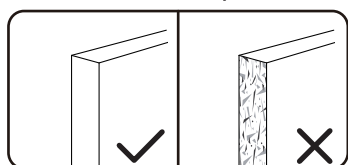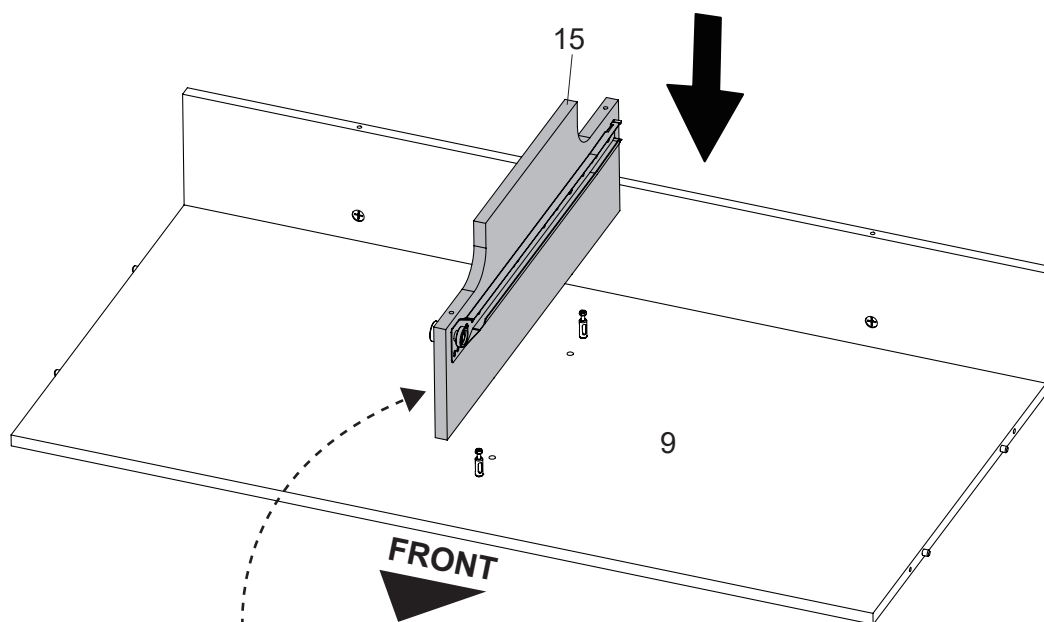


Step 24





i) Fully tighten all the screws after all the screws are in right place.

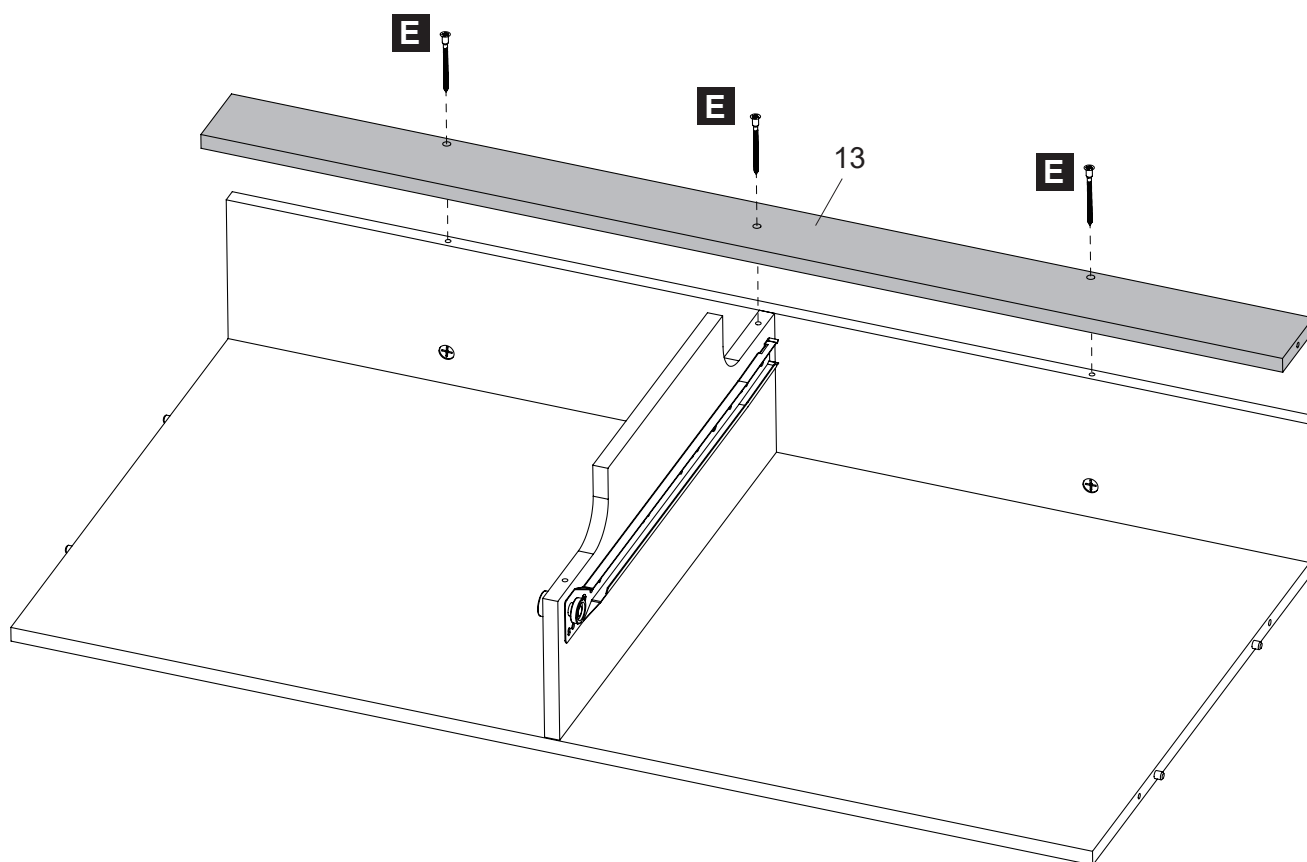



Step 25




i) Fully tighten all the screws after all the screws are in right place.

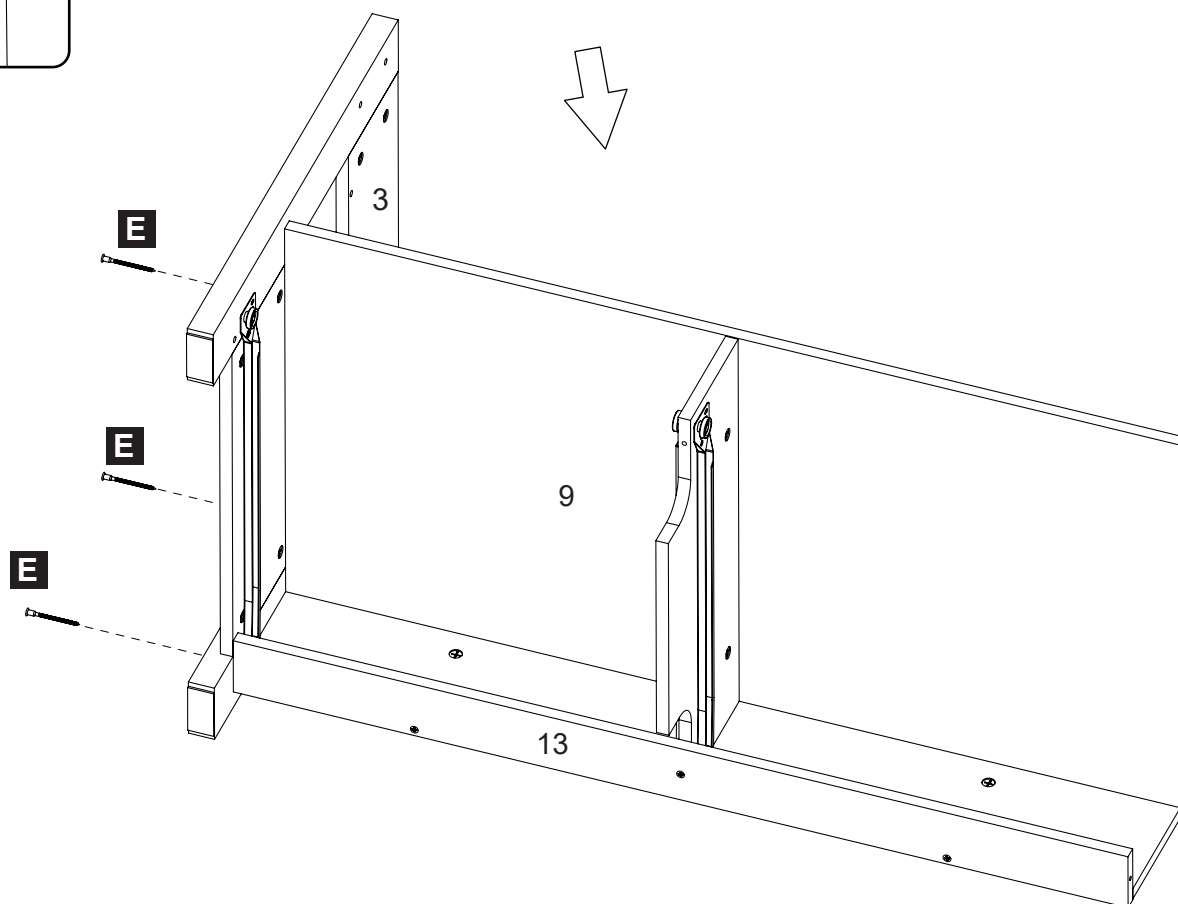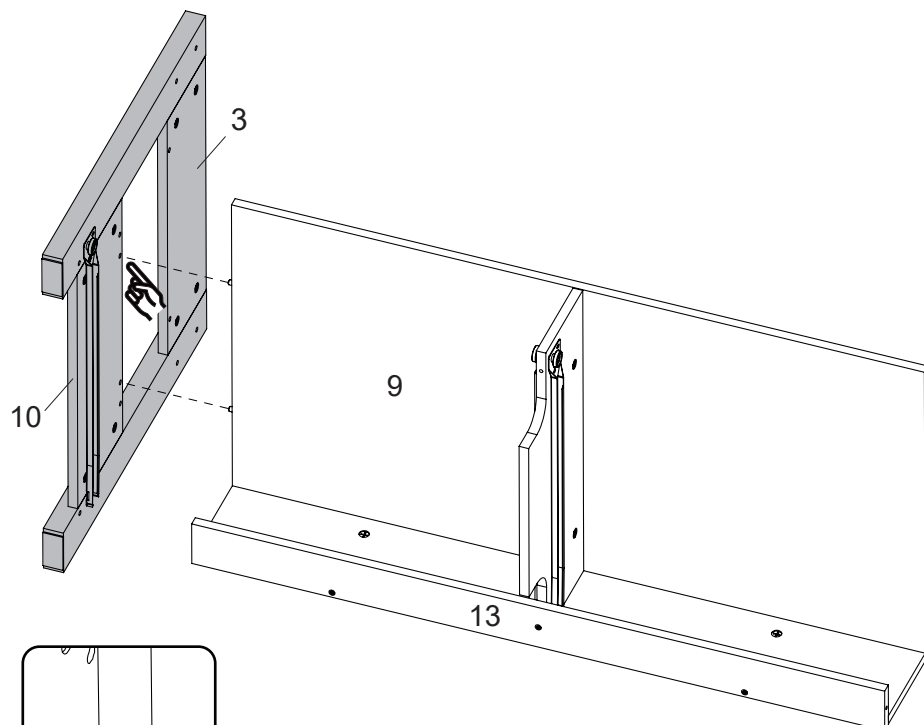


Step 26

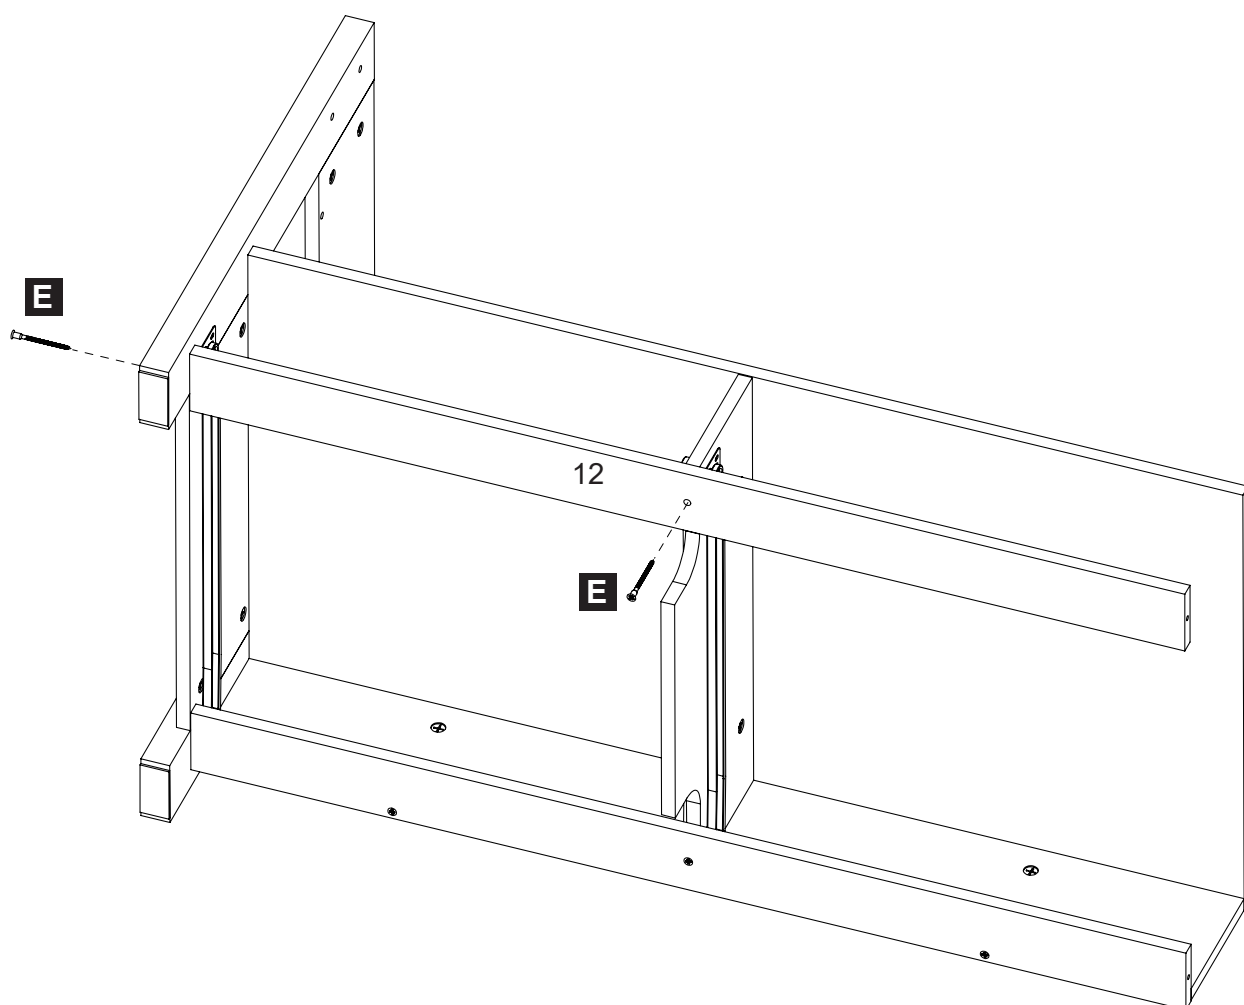


Step 27







i) Fully tighten all the screws after all the screws are in right place.

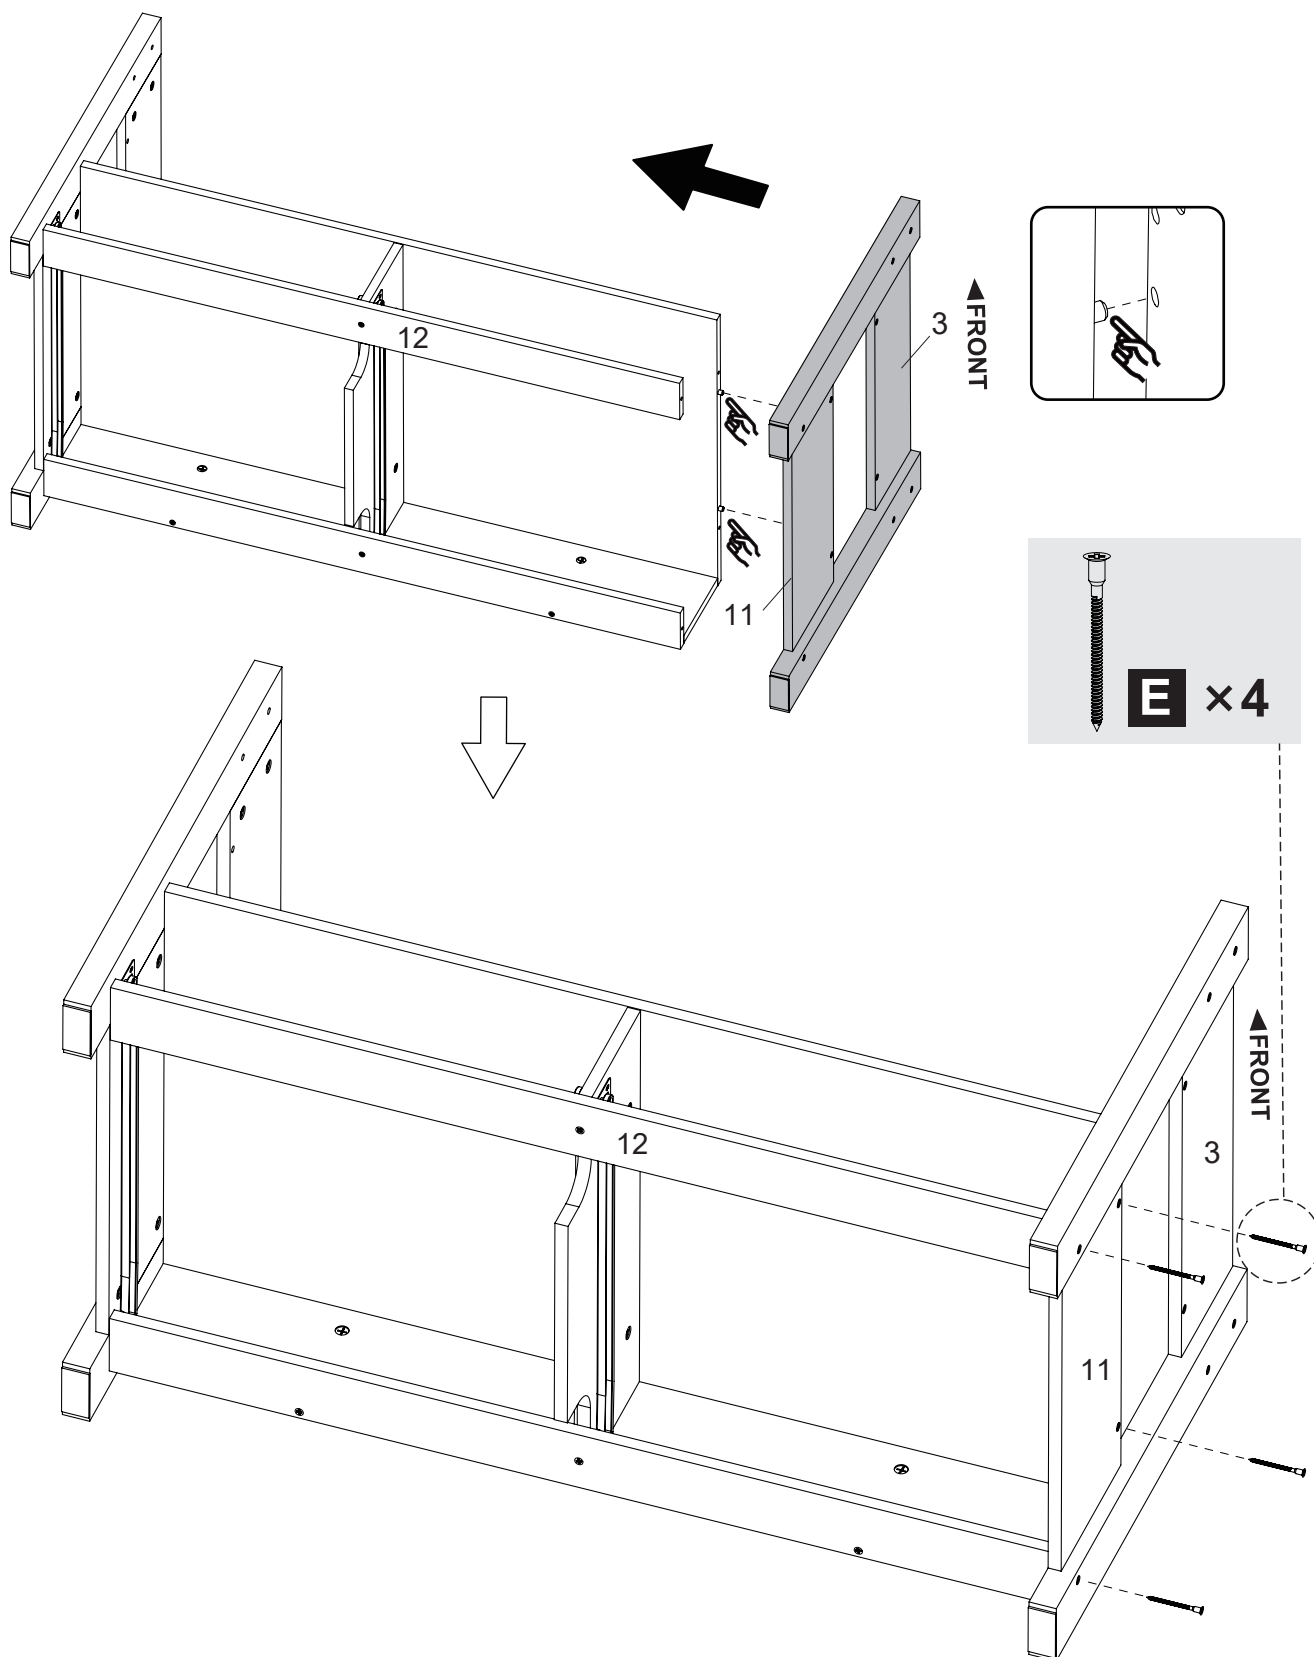




Step 28



i) Fully tighten all the screws after all the screws are in right place.

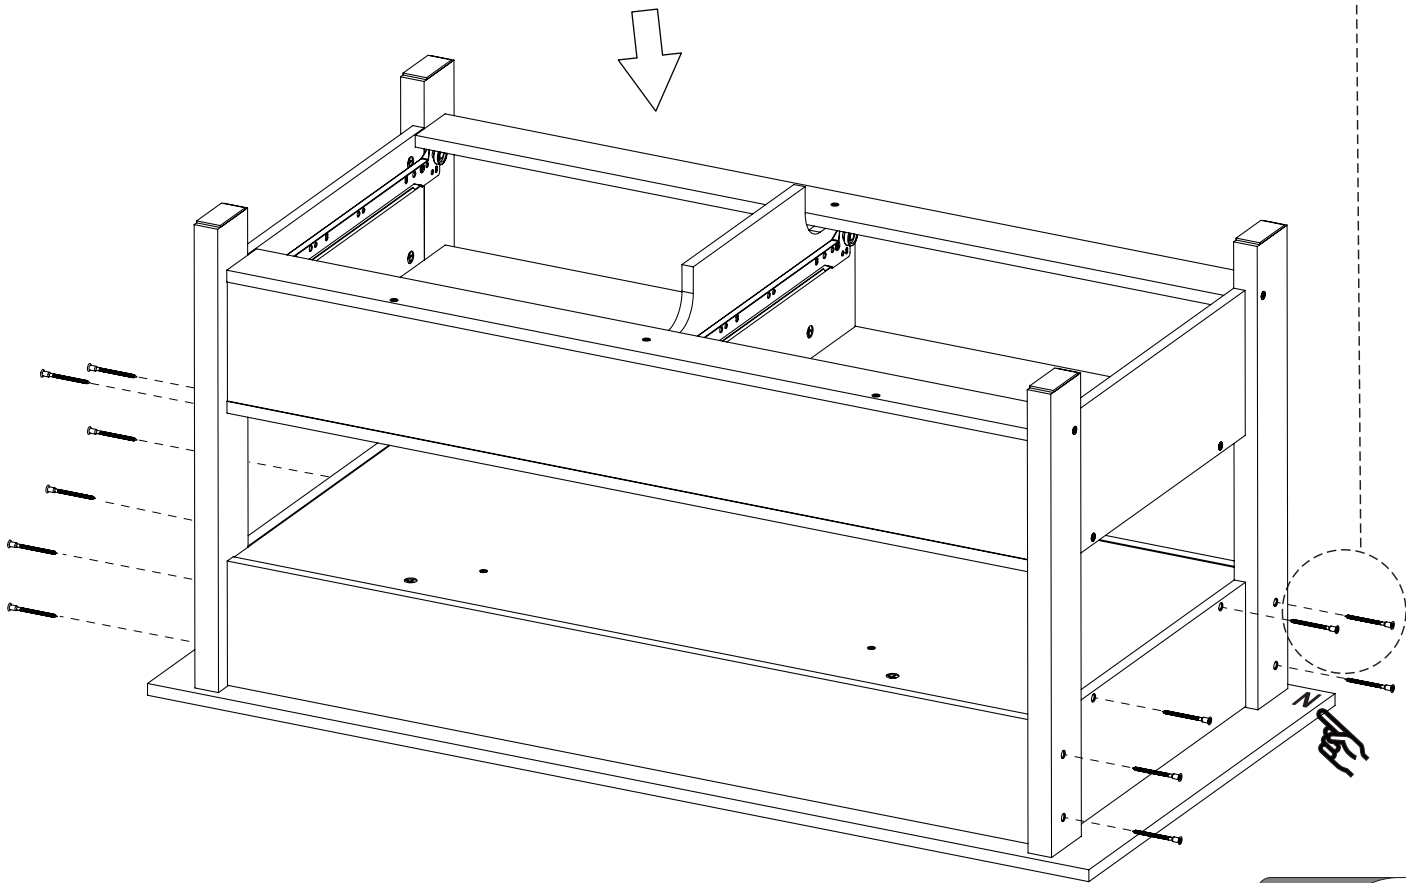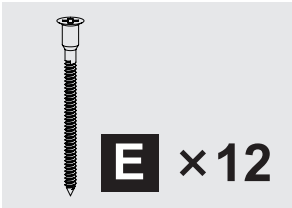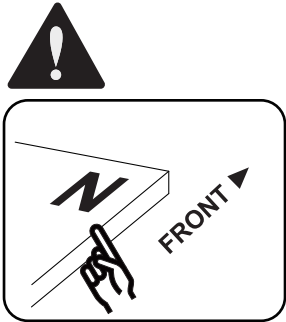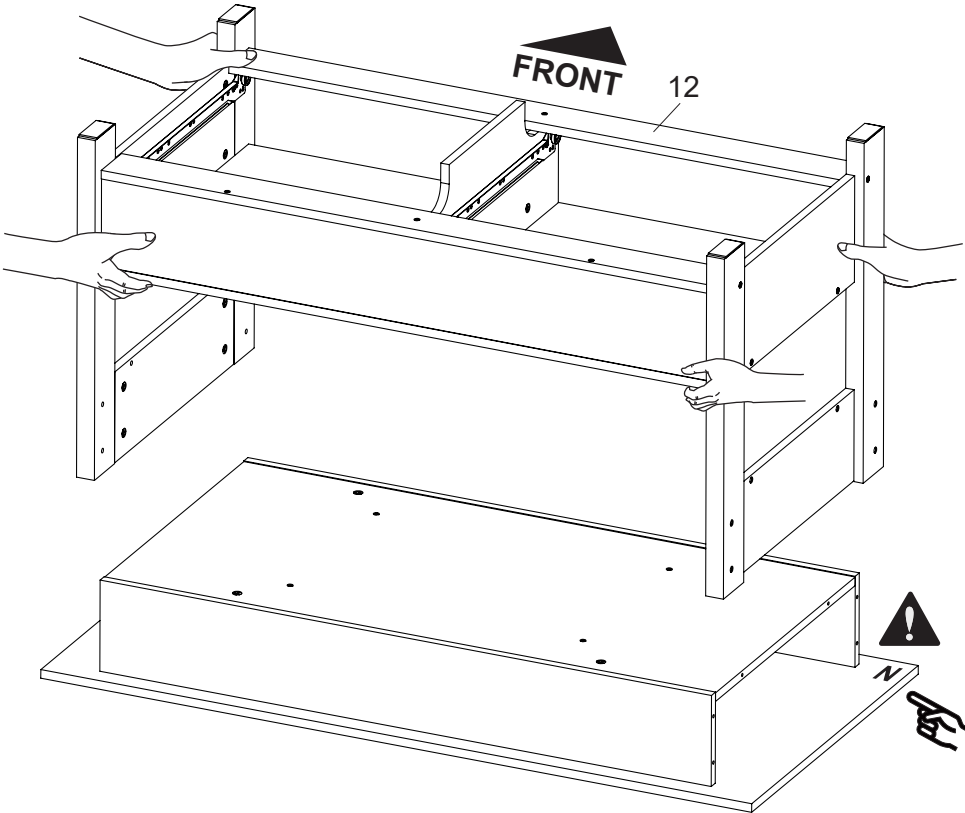

Step 29

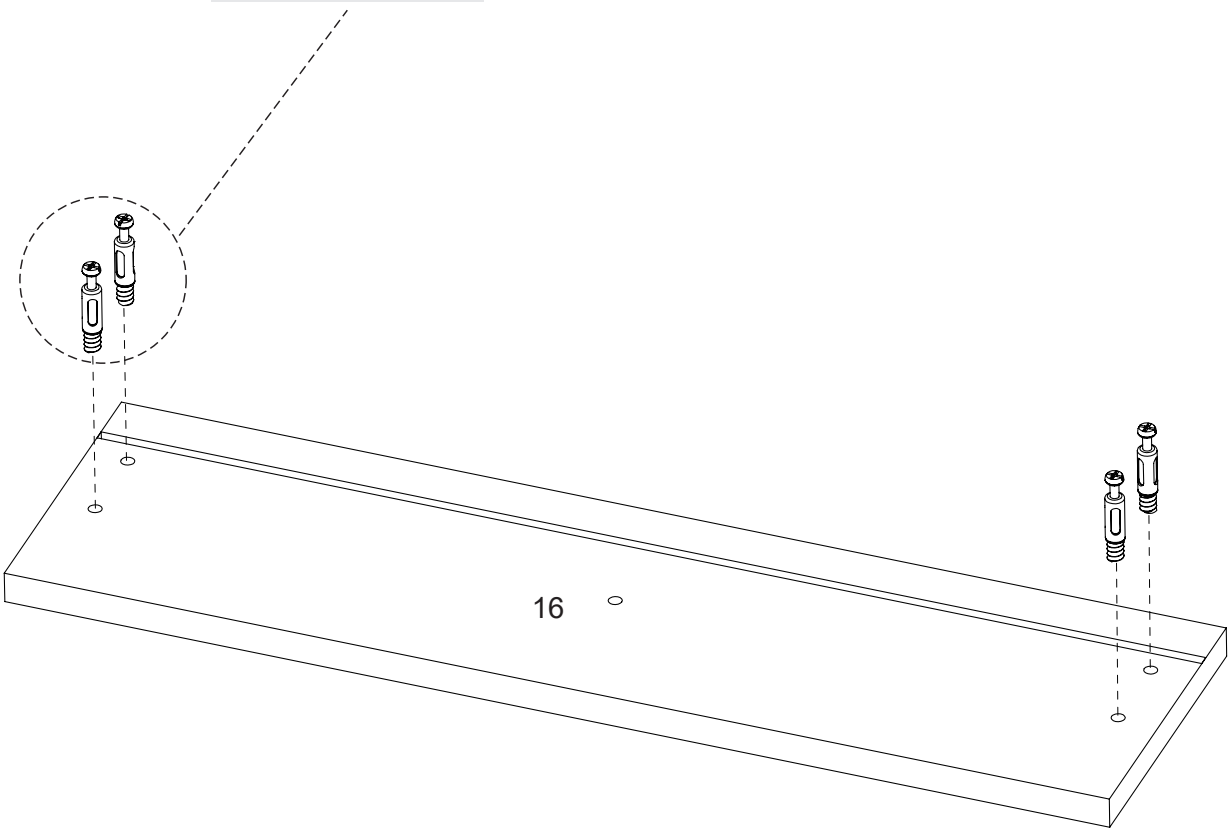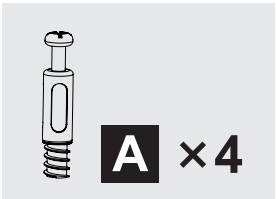



x2

Step 30




C X8

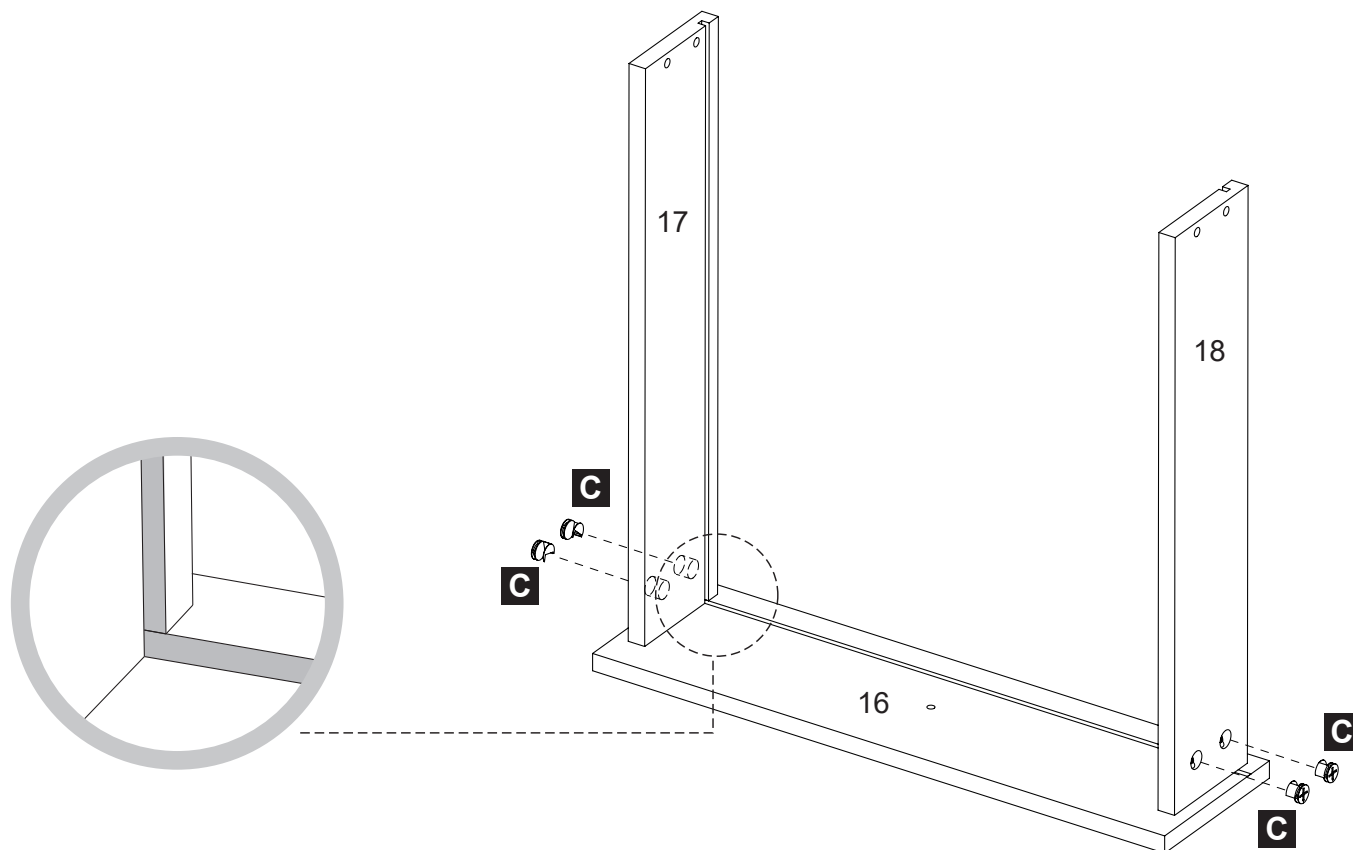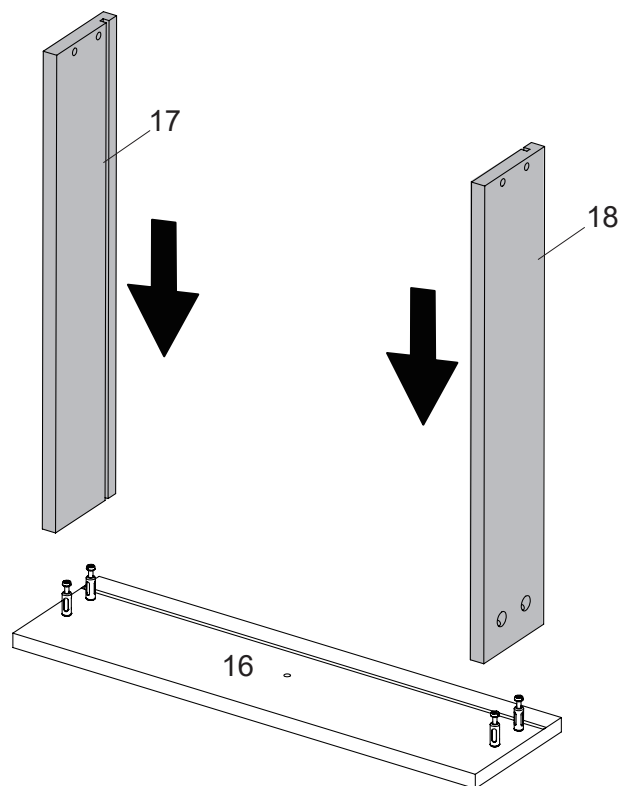

i) Let the grooves on part **17 18** be connected to the groove on part **16** .

x2

Step 31

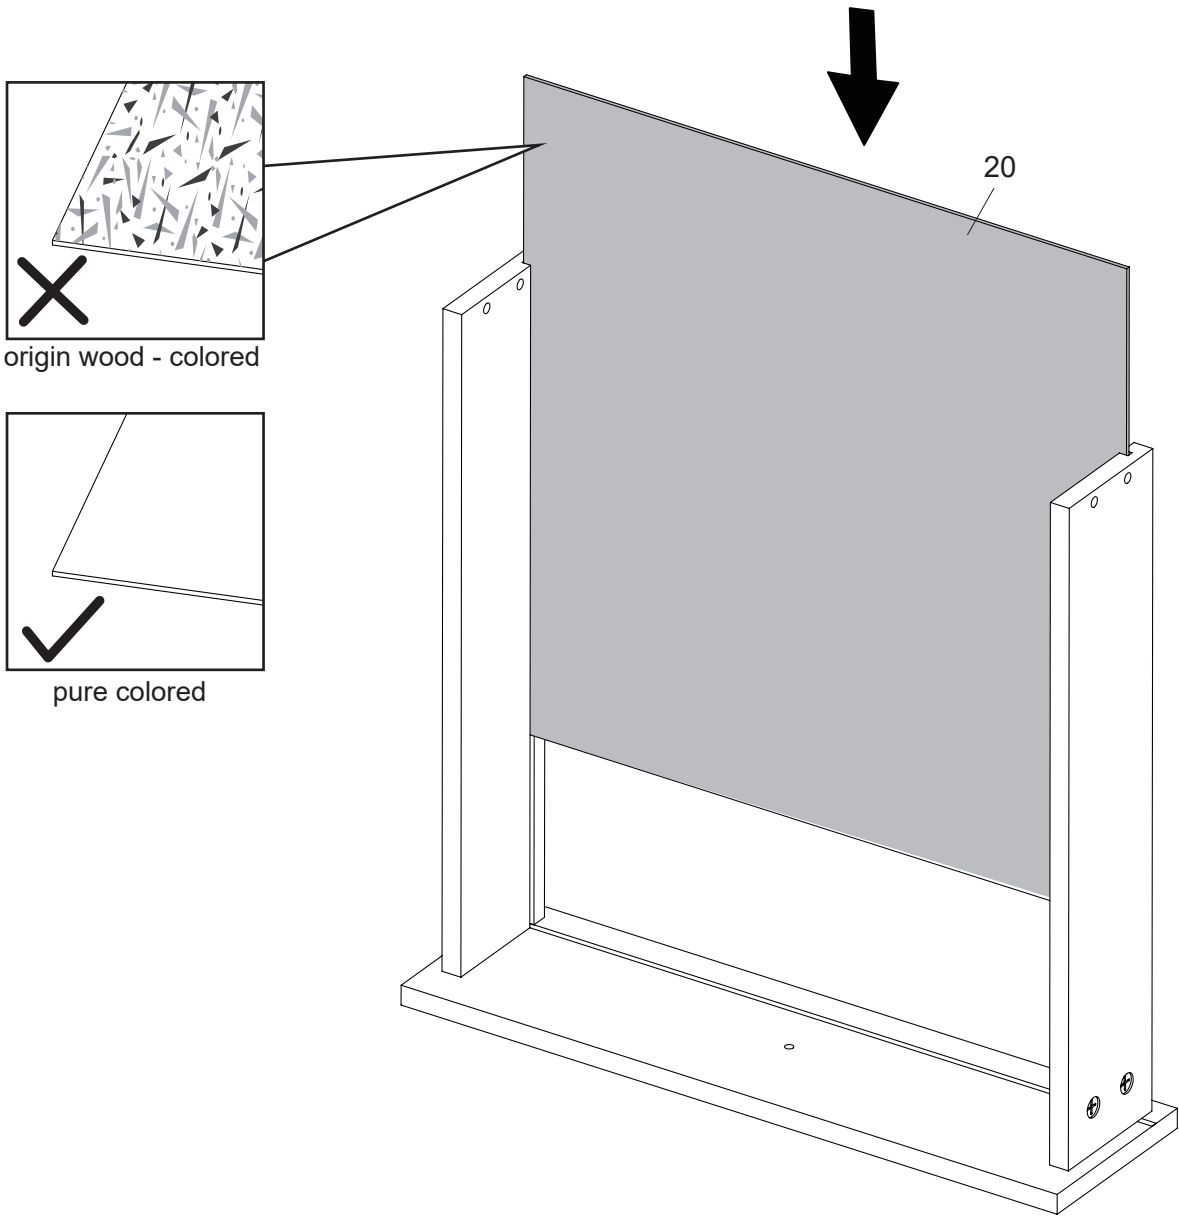

x2



Step 32



E


X8




M5x50

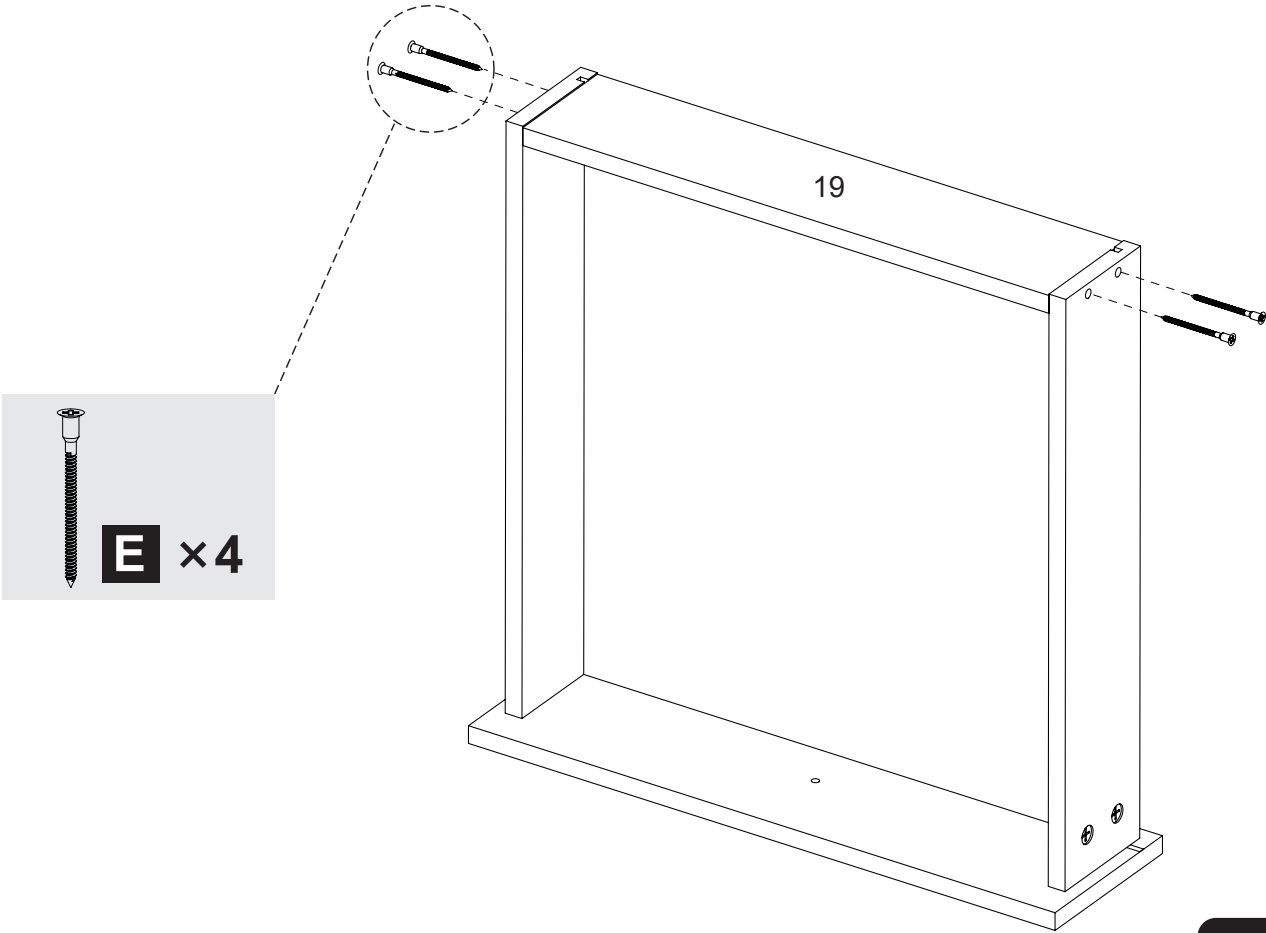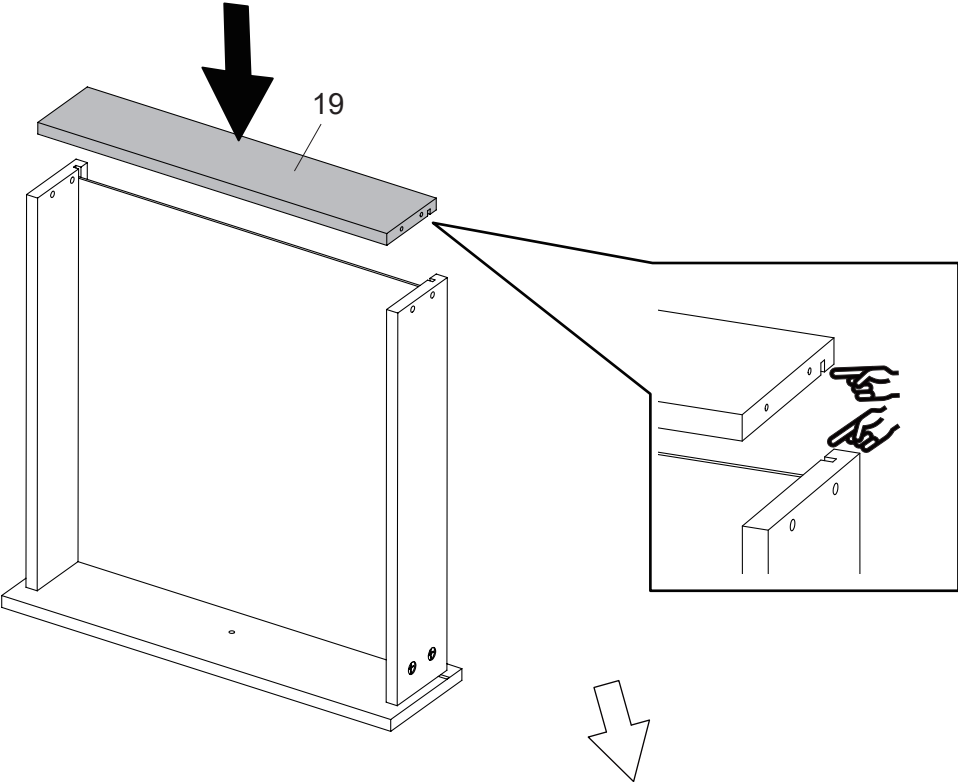

x2


Step 33

 DL X2	 DR X2
	 G X8 M4x10

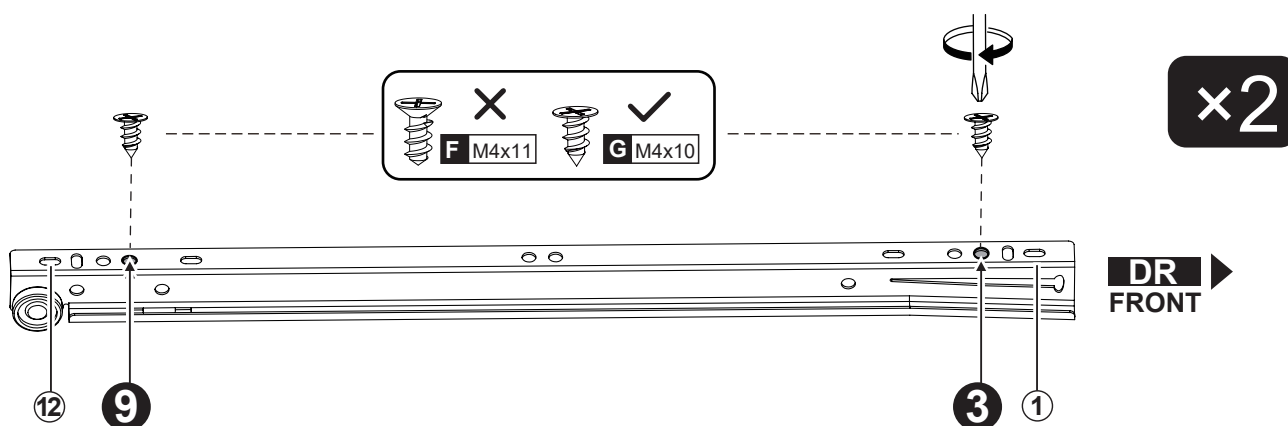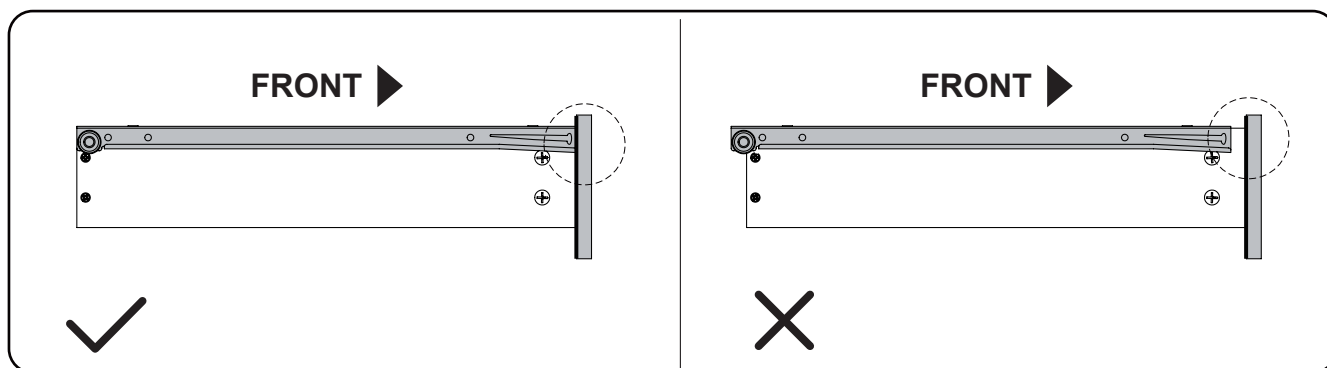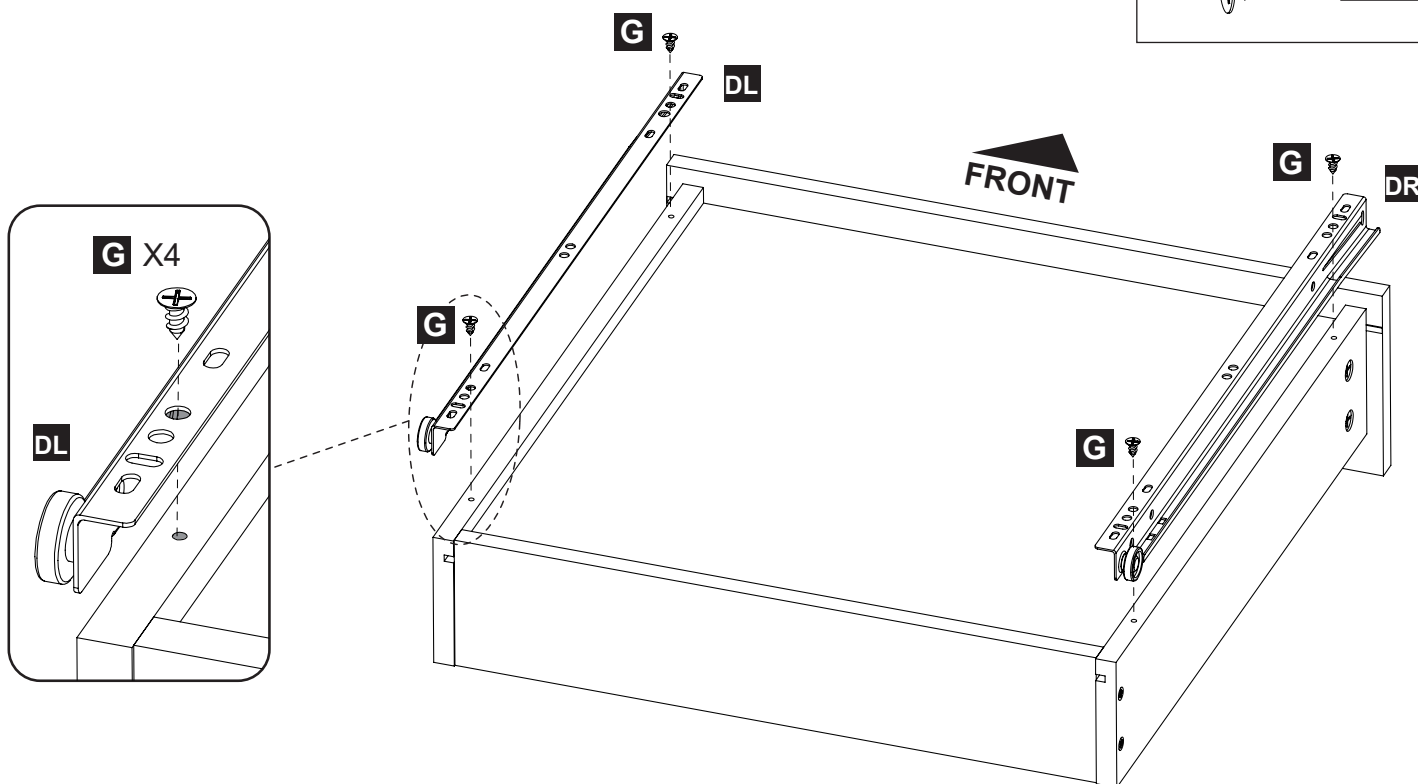





Step 34

	H X2		I X2
	M4x16		

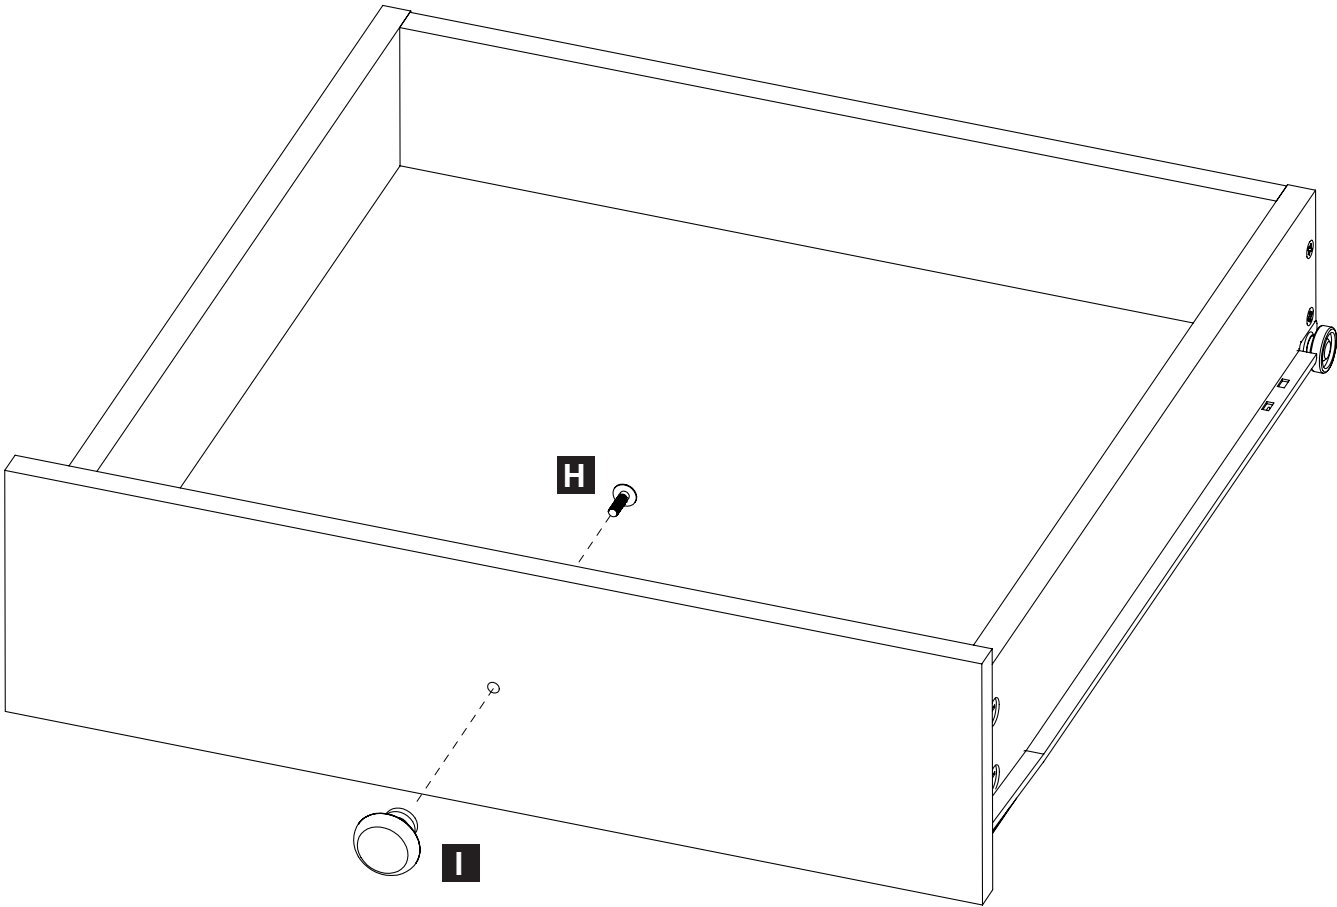

×2

Step 35

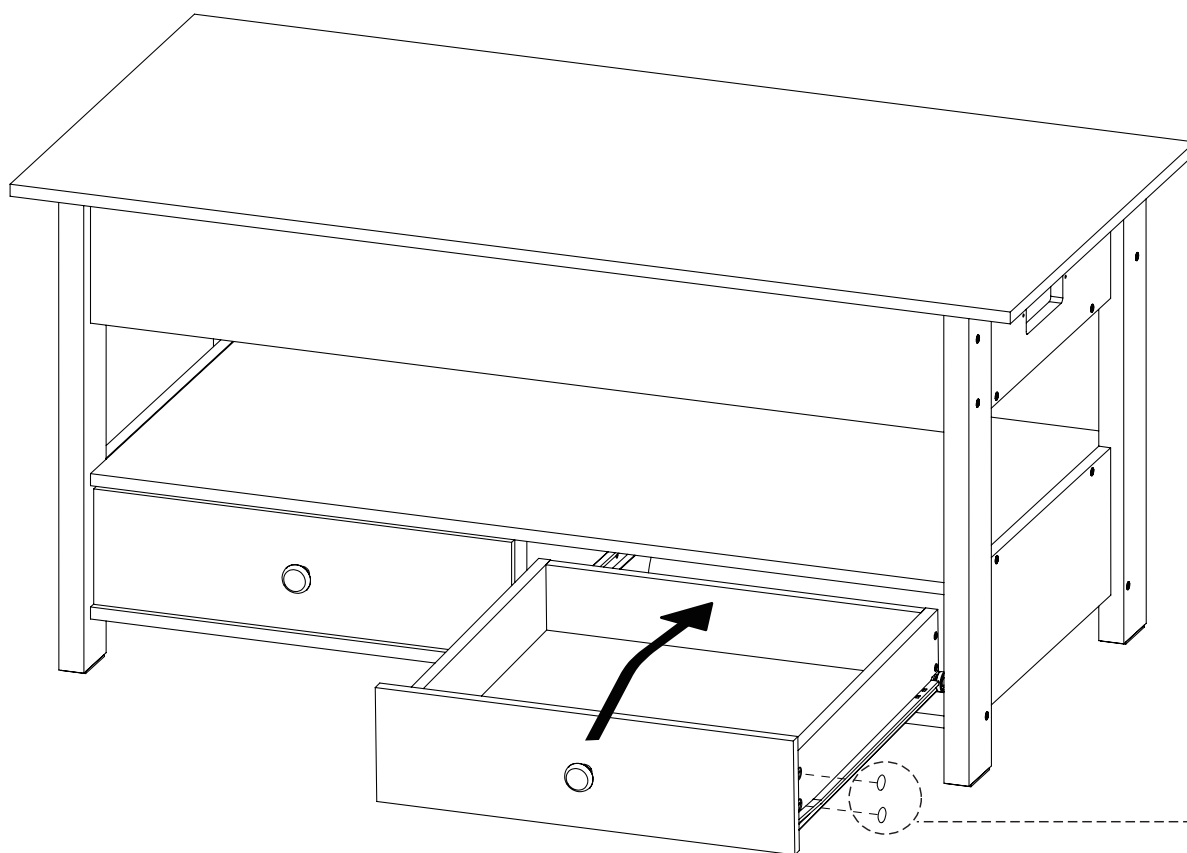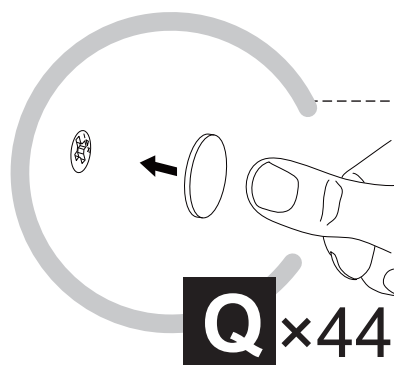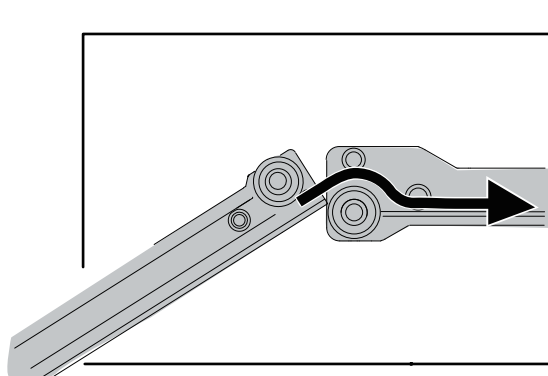

DESIGN IS IN THE DETAILS

Find 5 differences between the 2 images.

