

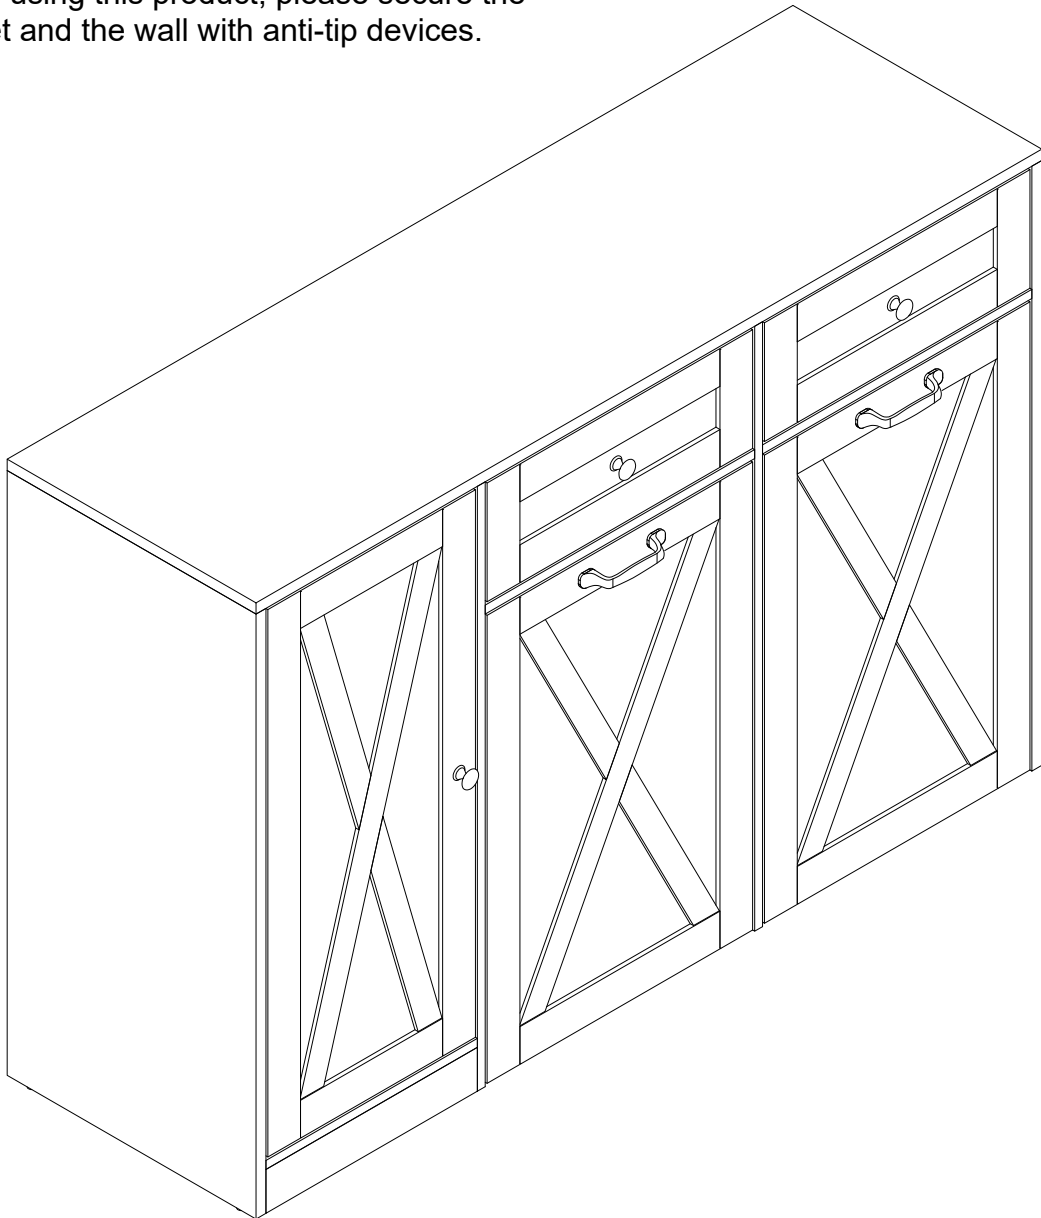
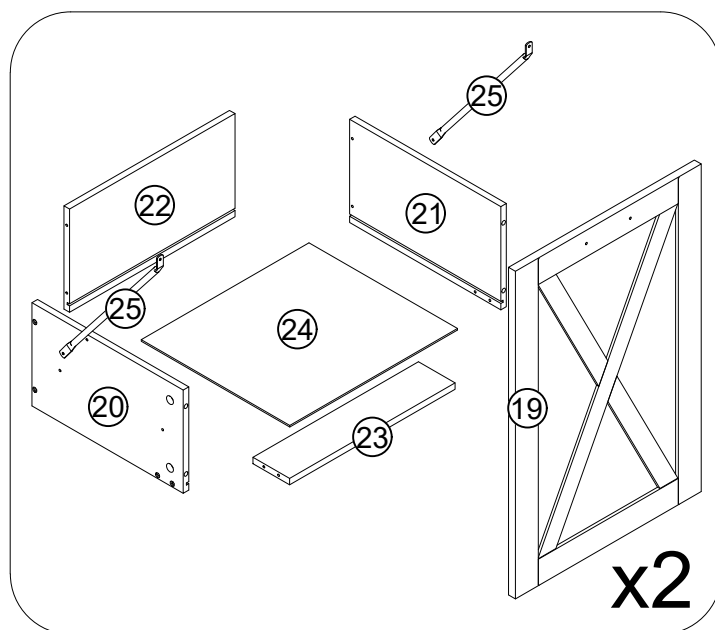


Assembly Instruction
















ATTENTION!

Before using this product, please secure the cabinet and the wall with anti-tip devices.












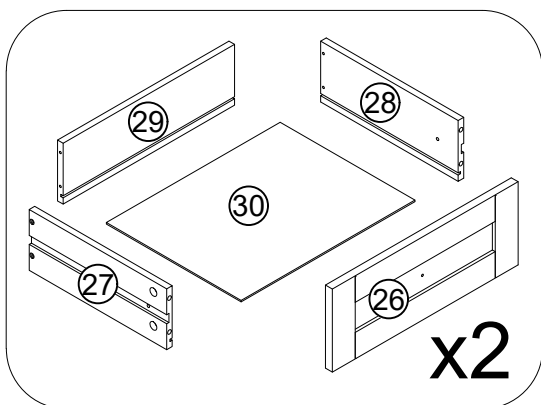


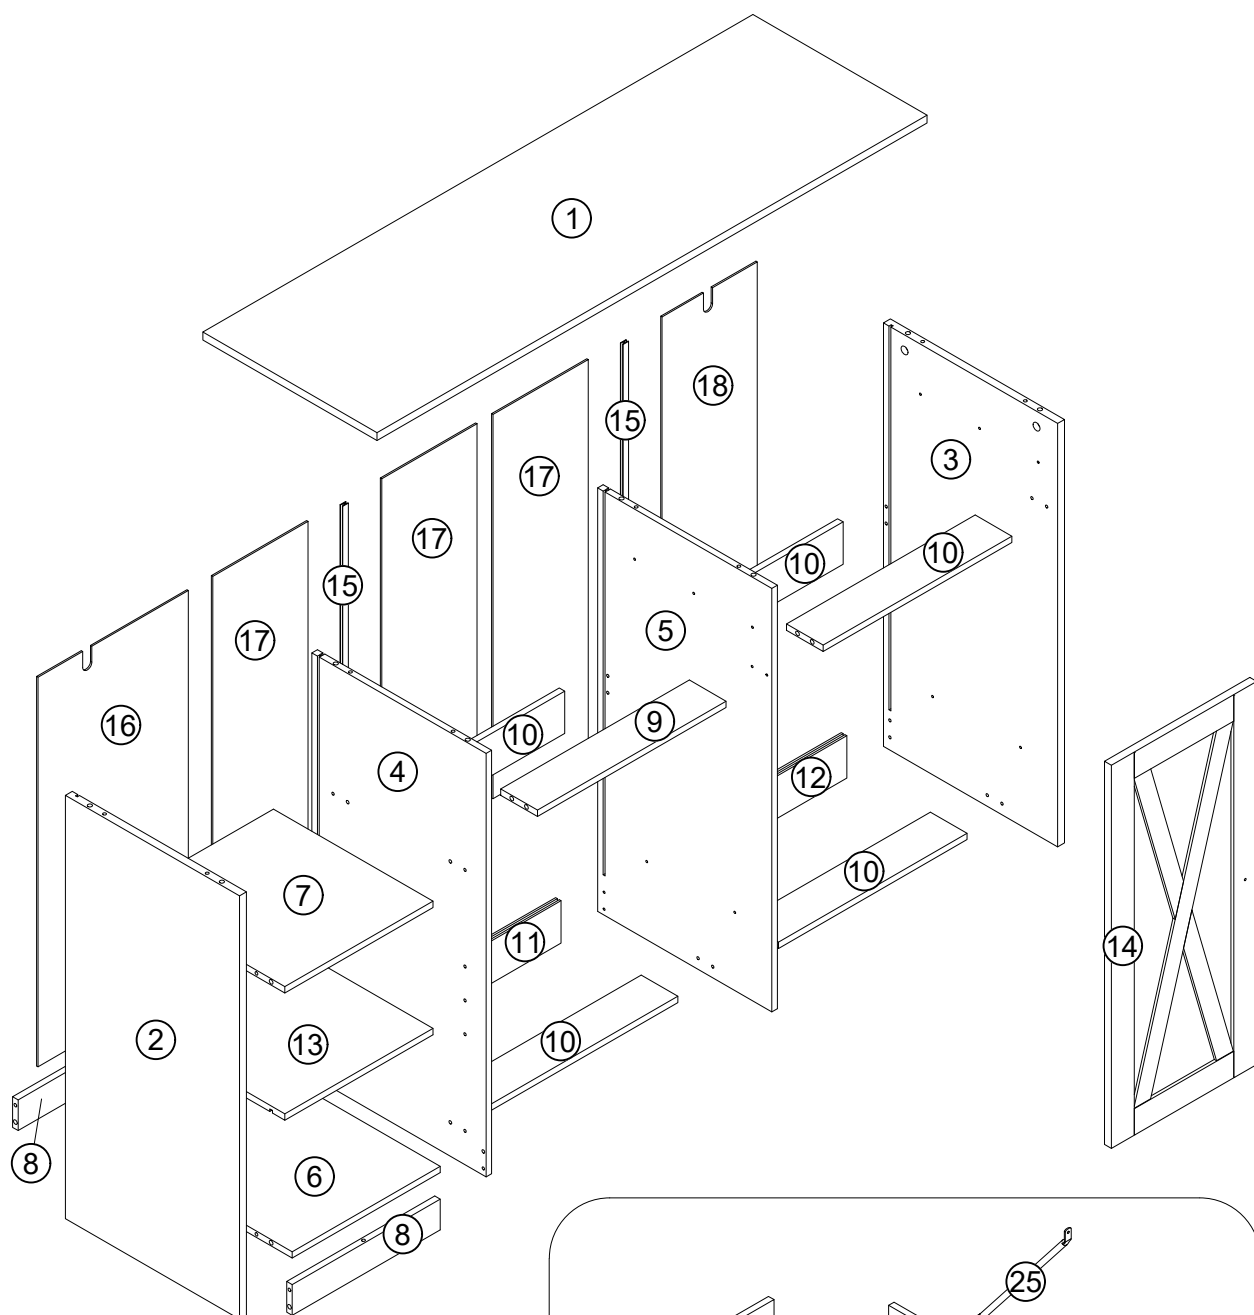












HARDWARE LIST

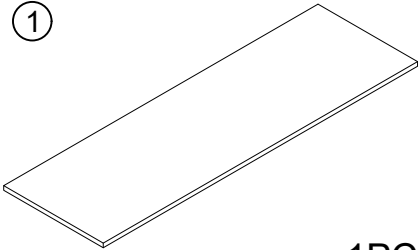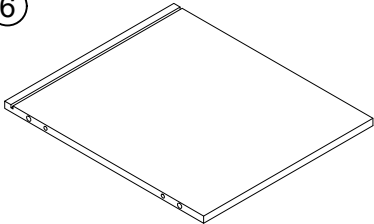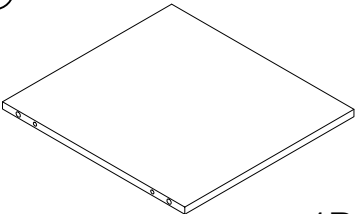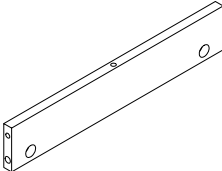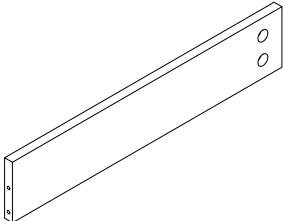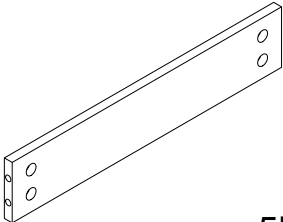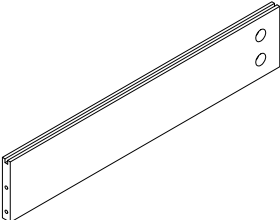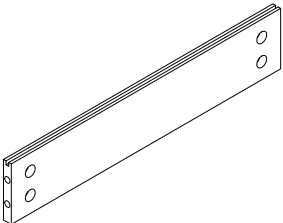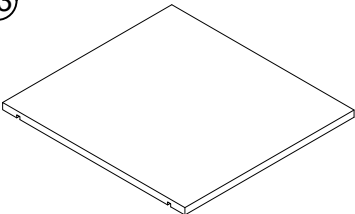①  1PC	②  1PC	③  1PC
④  1PC	⑤  1PC	⑥  1PC
⑦  1PC	⑧  2PCS	⑨  1PC
⑩  5PCS	⑪  1PC	⑫  1PC
⑬  1PC	⑭  1PC	⑮  2PCS
⑯  1PC	⑰  3PCS	⑱  1PC






HARDWARE LIST

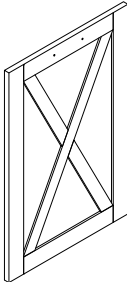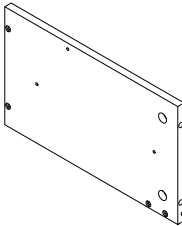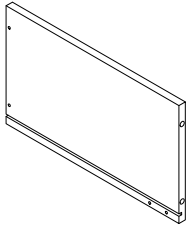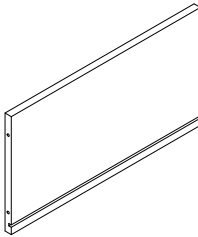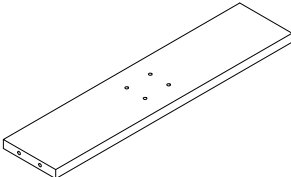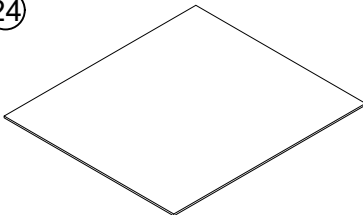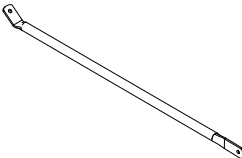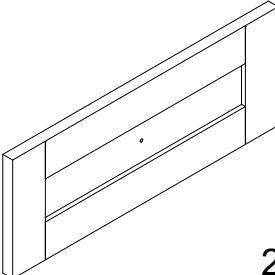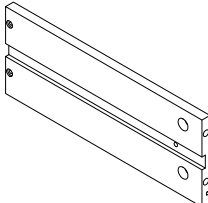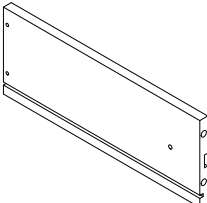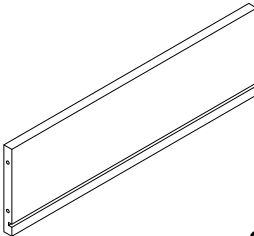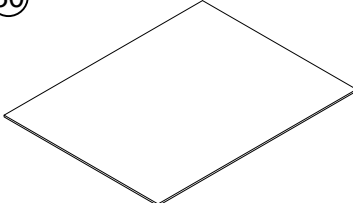①9  2PCS	②0  2PCS	②1  2PCS
②2  2PCS	②3  2PCS	②4  2PCS
②5  4PCS	②6  2PCS	②7  2PCS
②8  2PCS	②9  2PCS	③0  2PCS


HARDWARE LIST

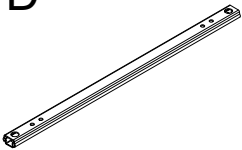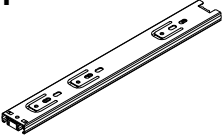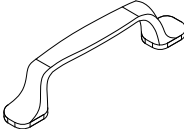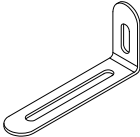A  M6x35mm 64PCS	B  M15x10mm 64PCS	C  M6x30mm 22PCS	D  4PCS	E  M3x12mm 28PCS
F  4PCS	G  8PCS	H  M4x35mm 22PCS	I  4PCS	J  2PCS
K  M4x14mm 12PCS	L  3PCS	M  2PCS	N  M4x18mm 5PCS	O  2PCS
P  2PCS	Q  M4x12mm 10PCS	R  M4x12mm 8PCS	S  M4x30mm 8PCS	T  12PCS
U  M3x16mm 12PCS	V  M4x10mm 6PCS	W  2PCS		

HARDWARE SPARE LIST

A  M6x35mm 3PCS	B  M15x10mm 3PCS	C  M6x30mm 2PCS	E  M3x12mm 2PCS	H  M4x35mm 2PCS
K  M4x14mm 1PC	Q  M4x12mm 1PC	R  M4x12mm 1PC	S  M4x30mm 1PC	T  1PC
U  M3x16mm 1PC				

This furniture requires two people to assemble and move.
Make sure no parts missing or damaged before assembly.

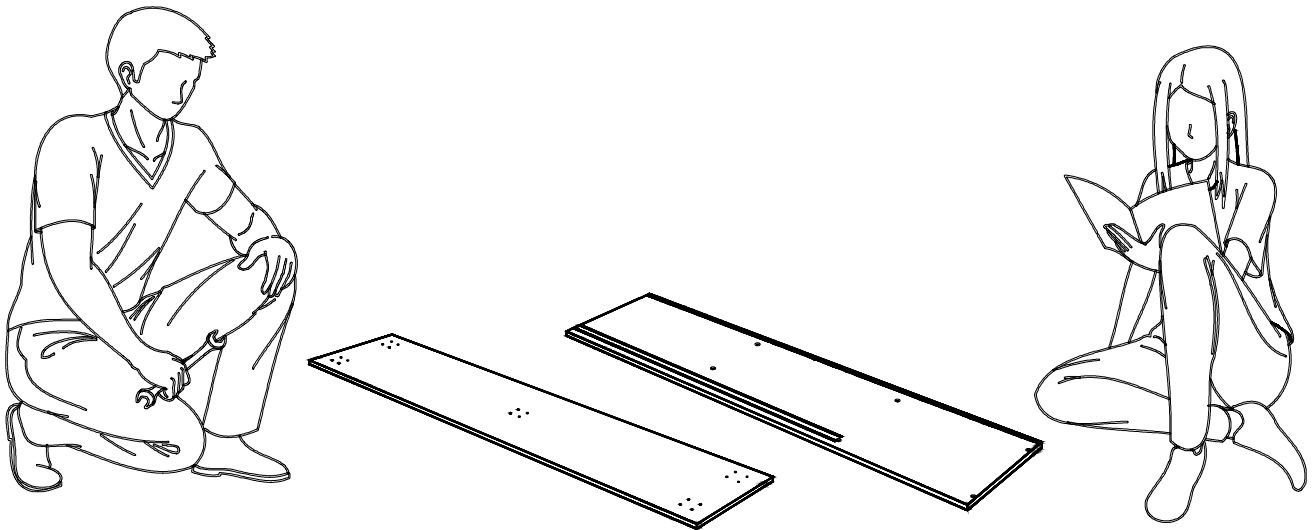


CAM BOLT INSTALLATION AS BELOW



Cam bolt




Connecting piece

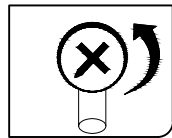



X

Rotate connecting piece if
found in position illustrated
above

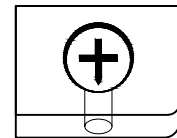


✓

Correct orientation to
receive bolts




No gap


A1.

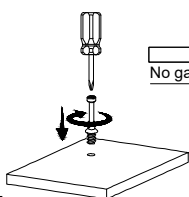


A2.

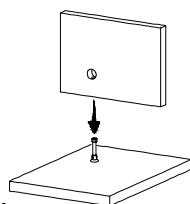

A3.

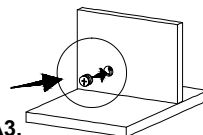


A4.

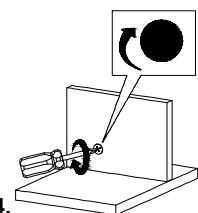

STEPS


STEP-1

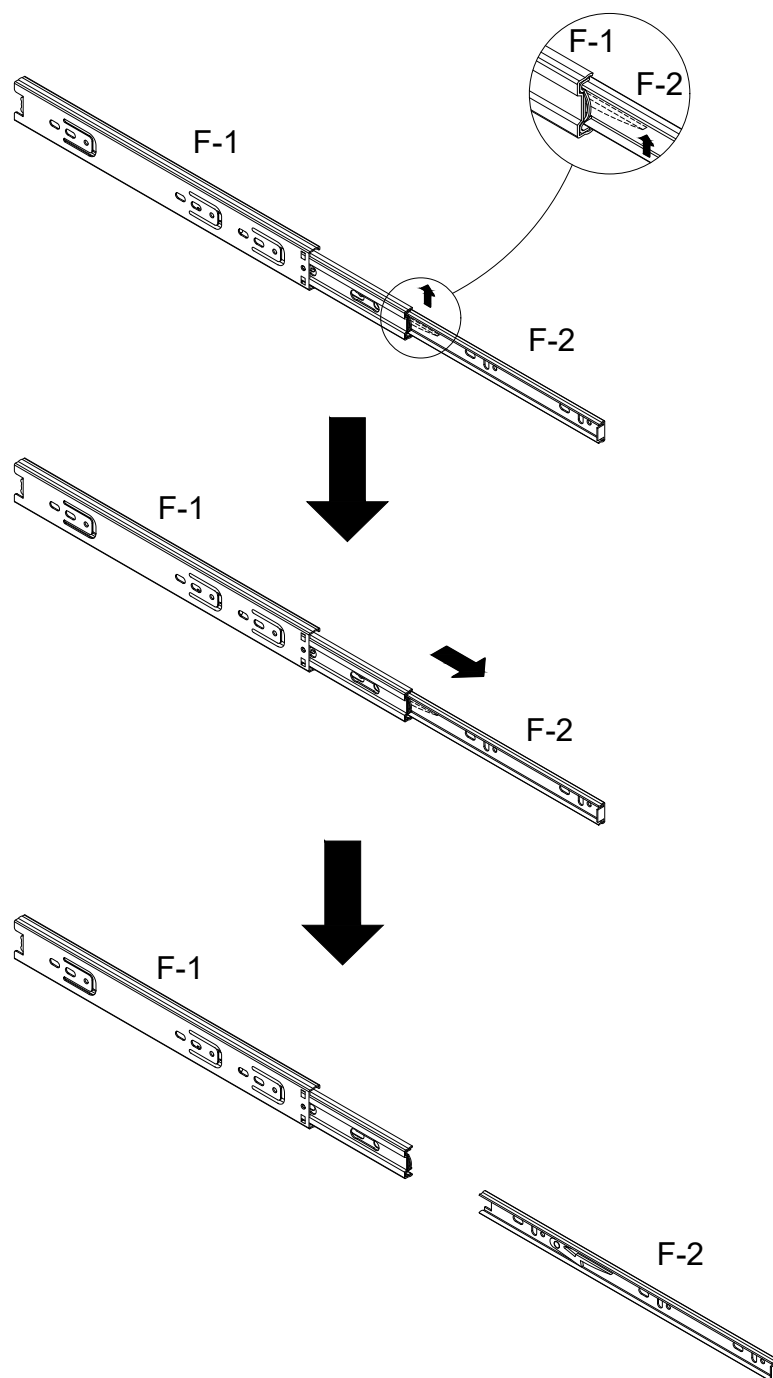

STEPS


STEP-2

	A x14PCS		G x4PCS
---	----------	---	---------

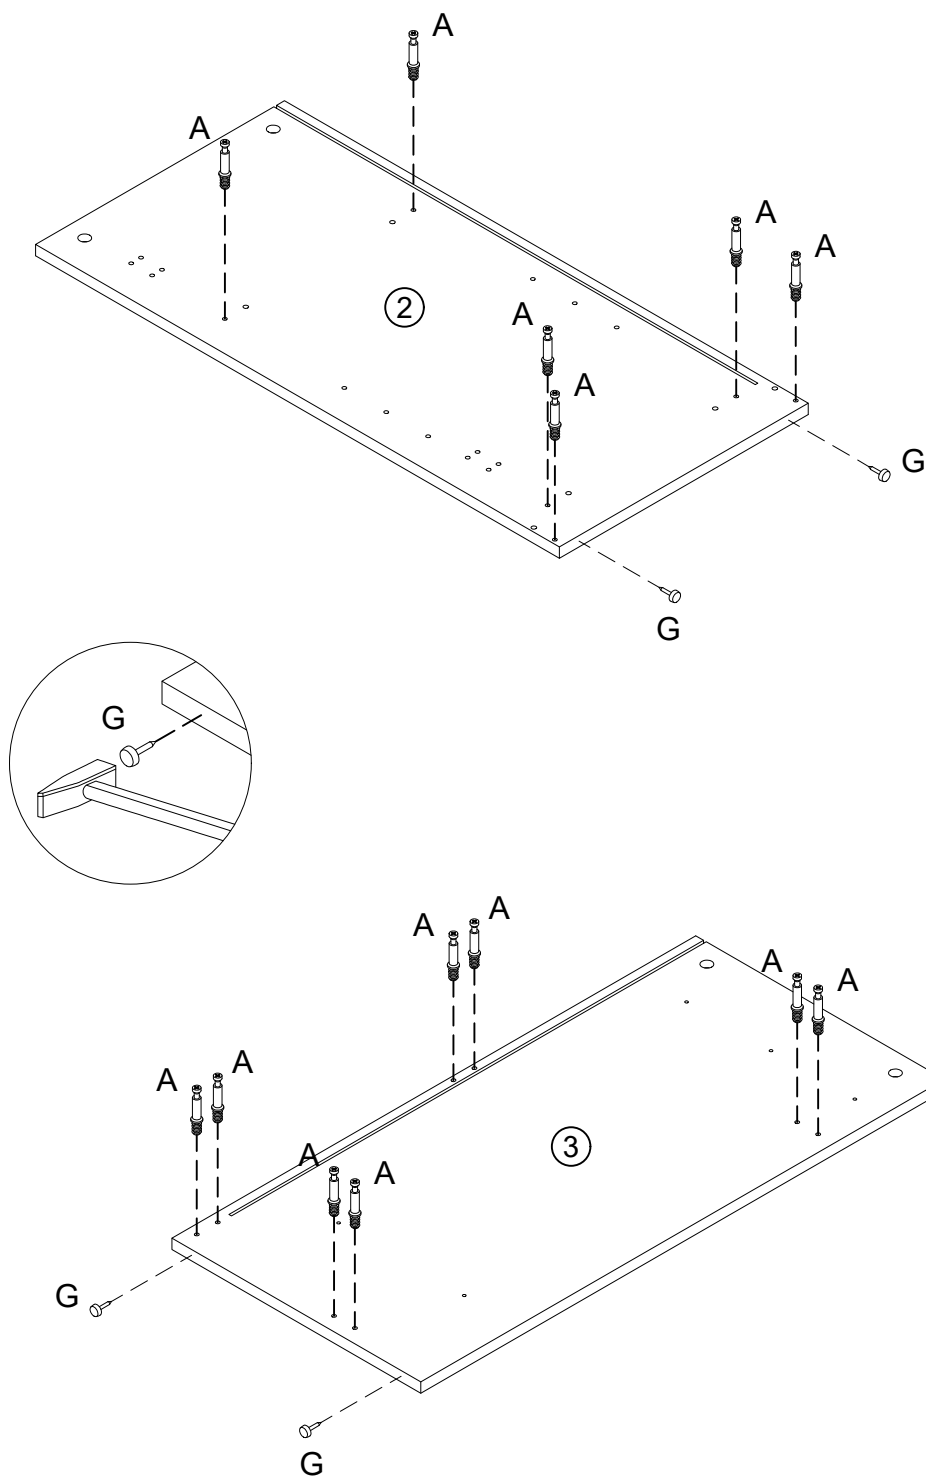


STEPS

STEP-3





	D x1PC		E x5PCS		F x1PC
---	--------	---	---------	---	--------

Please carefully check the enlarged drawing and install the screws into the correct holes on the slide rail.

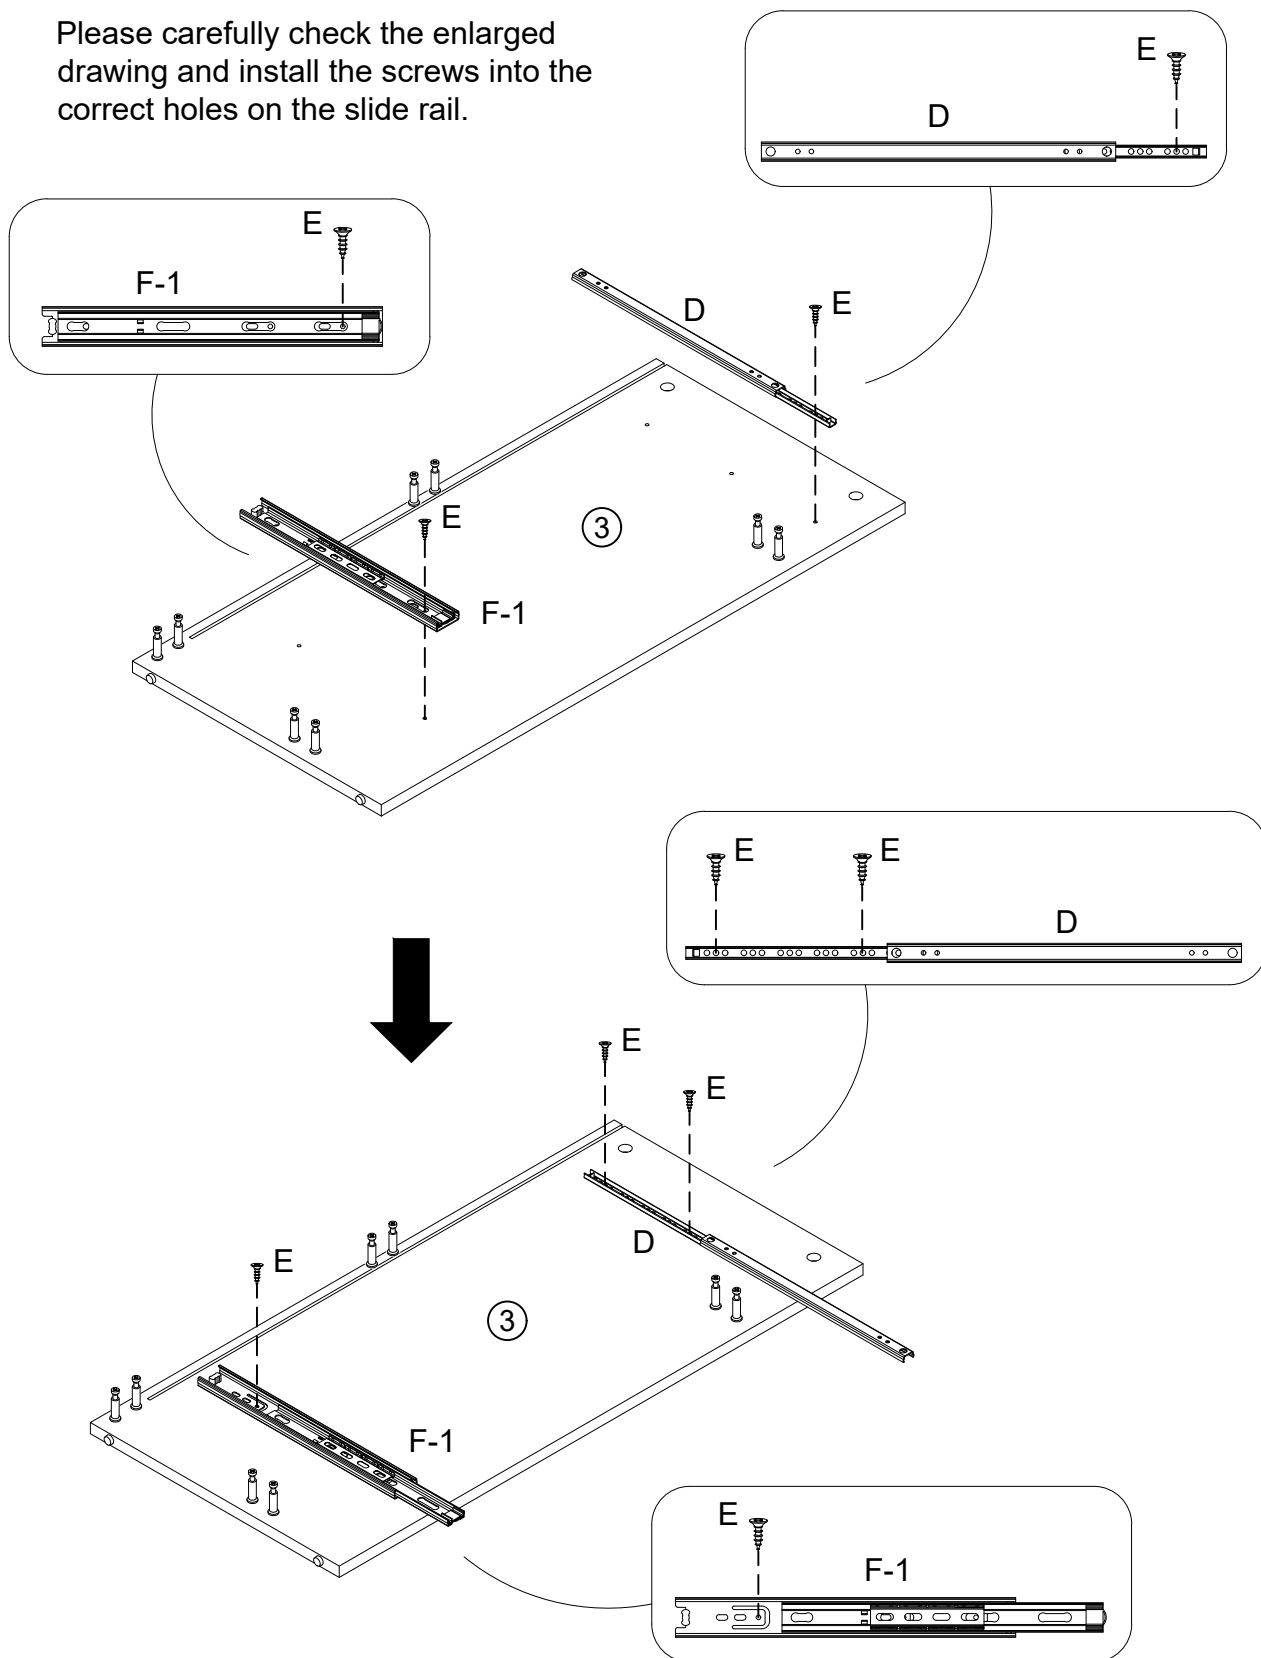

STEPS

STEP-4



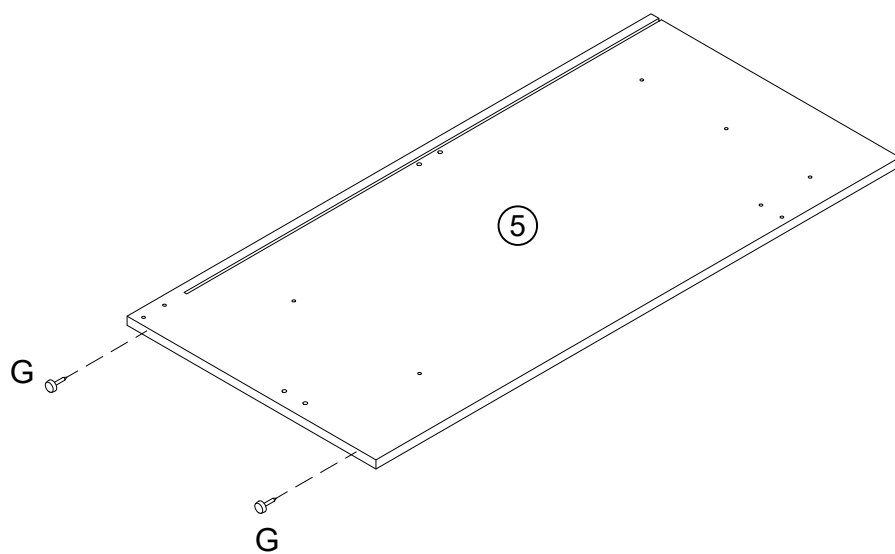
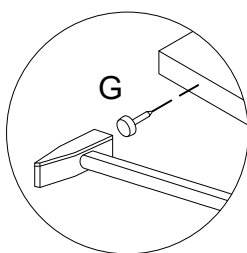
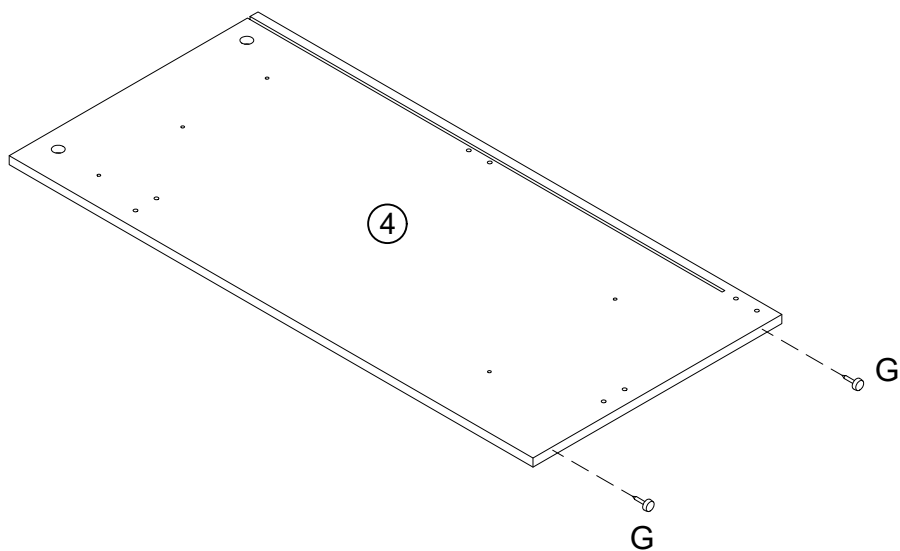



STEPS

STEP-5

	D x1PC		E x5PCS		F x1PC
---	--------	---	---------	--	--------

Please carefully check the enlarged drawing and install the screws into the correct holes on the slide rail.

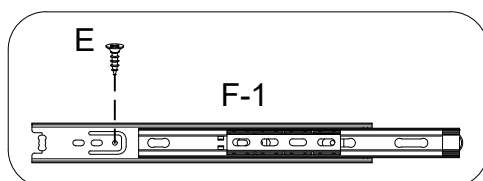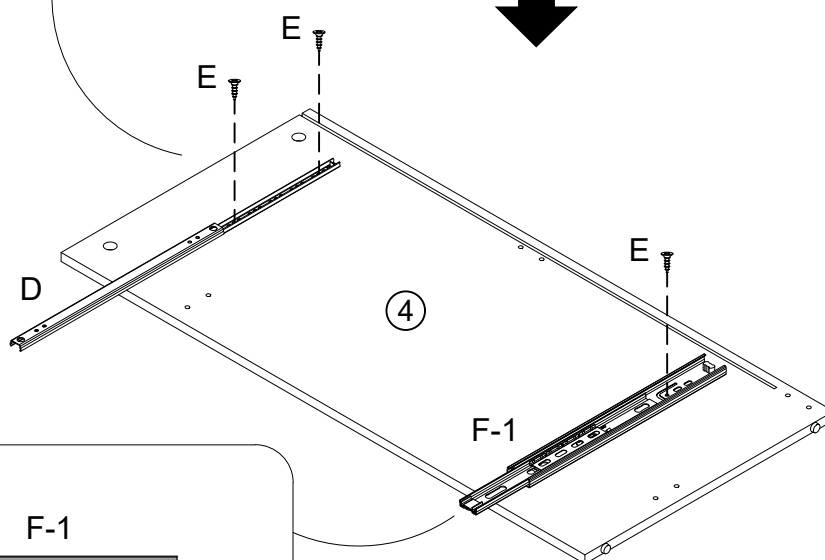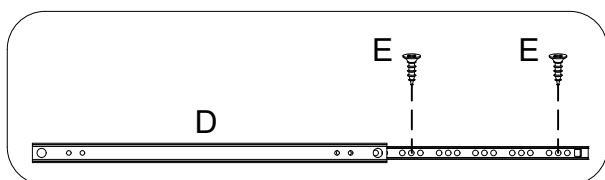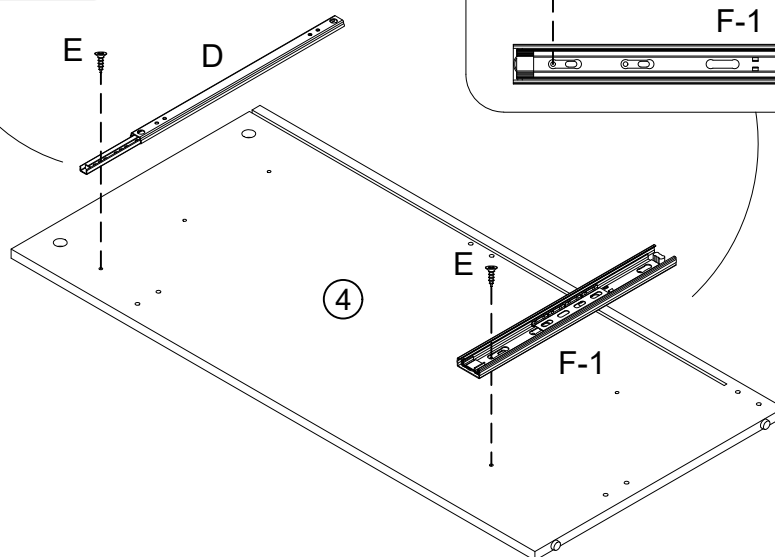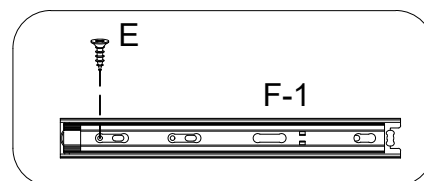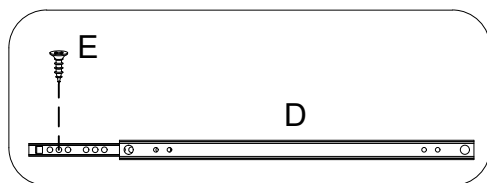


STEPS


STEP-6



A x14PCS

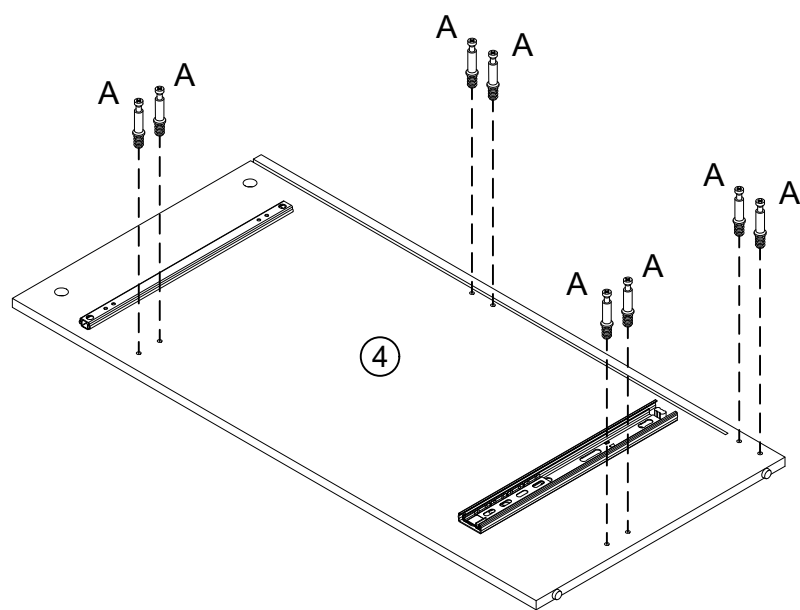


180°

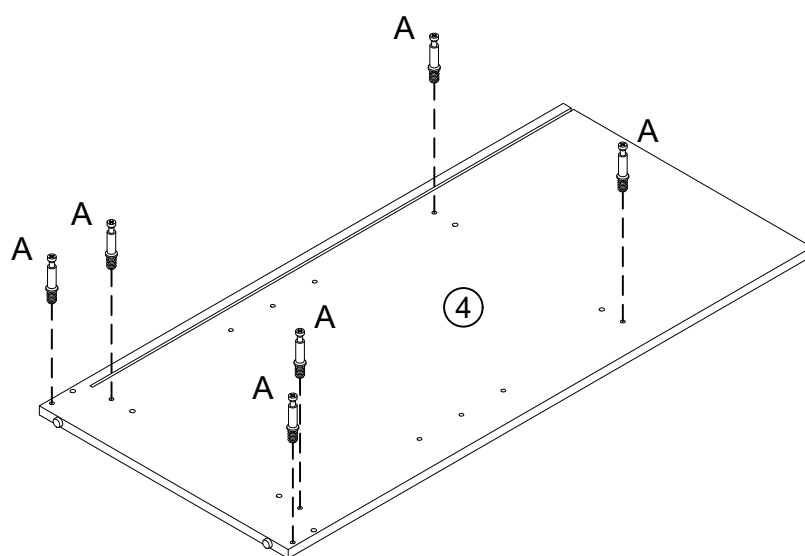


STEPS

STEP-7

	D x1PC		E x5PCS		F x1PC
---	--------	---	---------	---	--------

Please carefully check the enlarged drawing and install the screws into the correct holes on the slide rail.

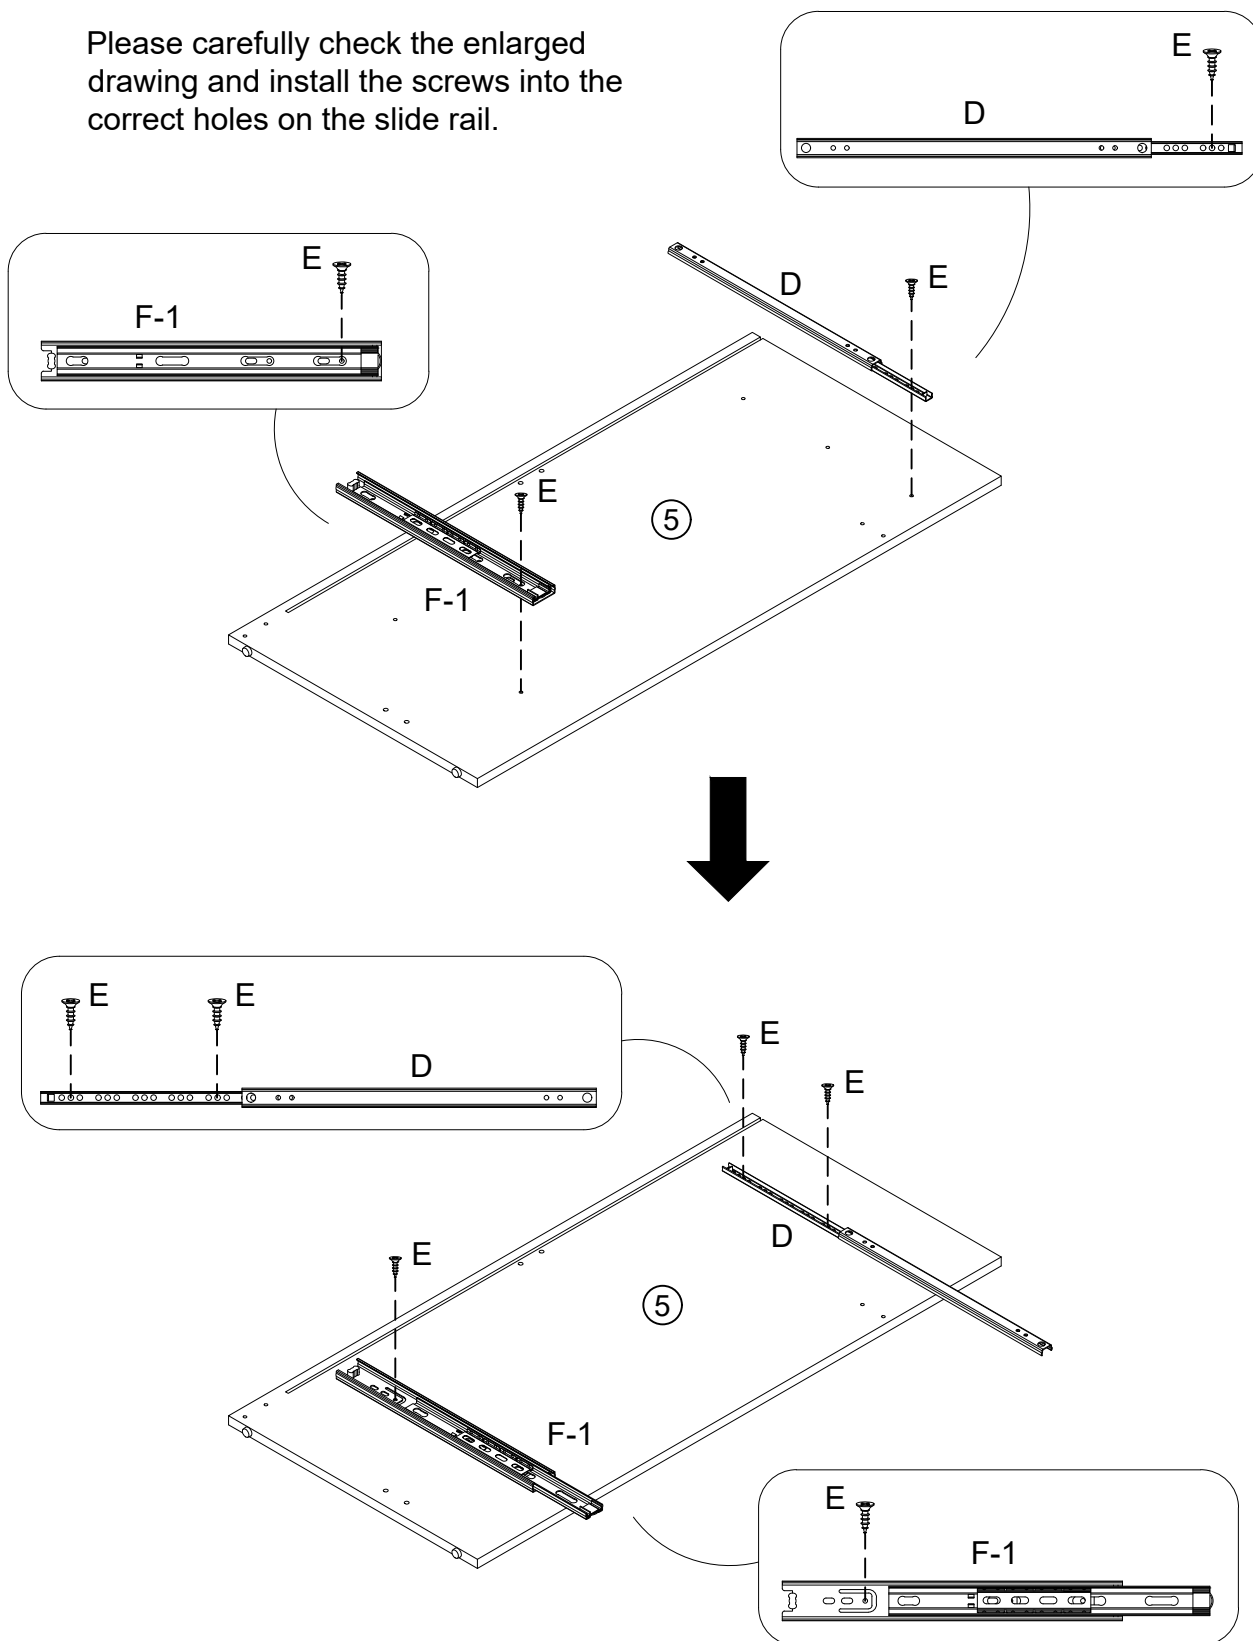


STEPS

STEP-8

	D x1PC		E x5PCS		F x1PC
---	--------	---	---------	--	--------

Please carefully check the enlarged drawing and install the screws into the correct holes on the slide rail.

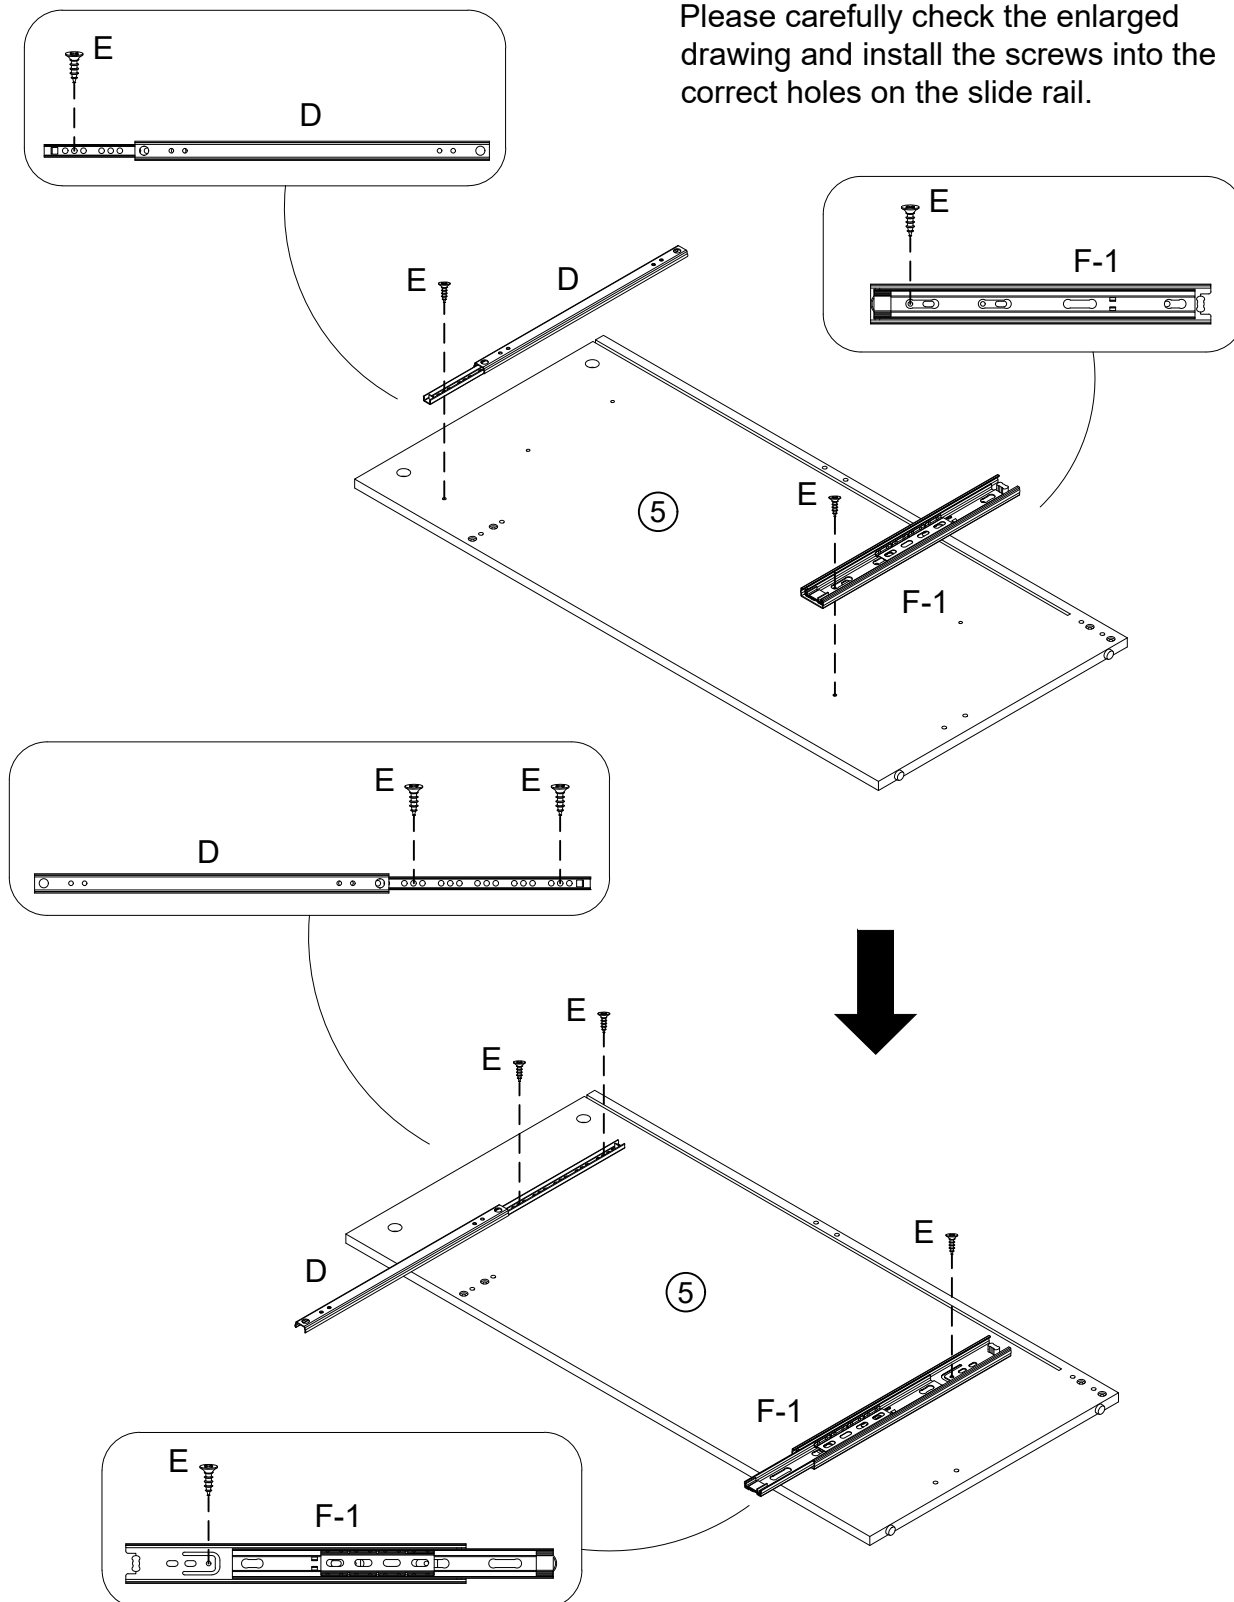


STEPS

STEP-9




A x12PCS

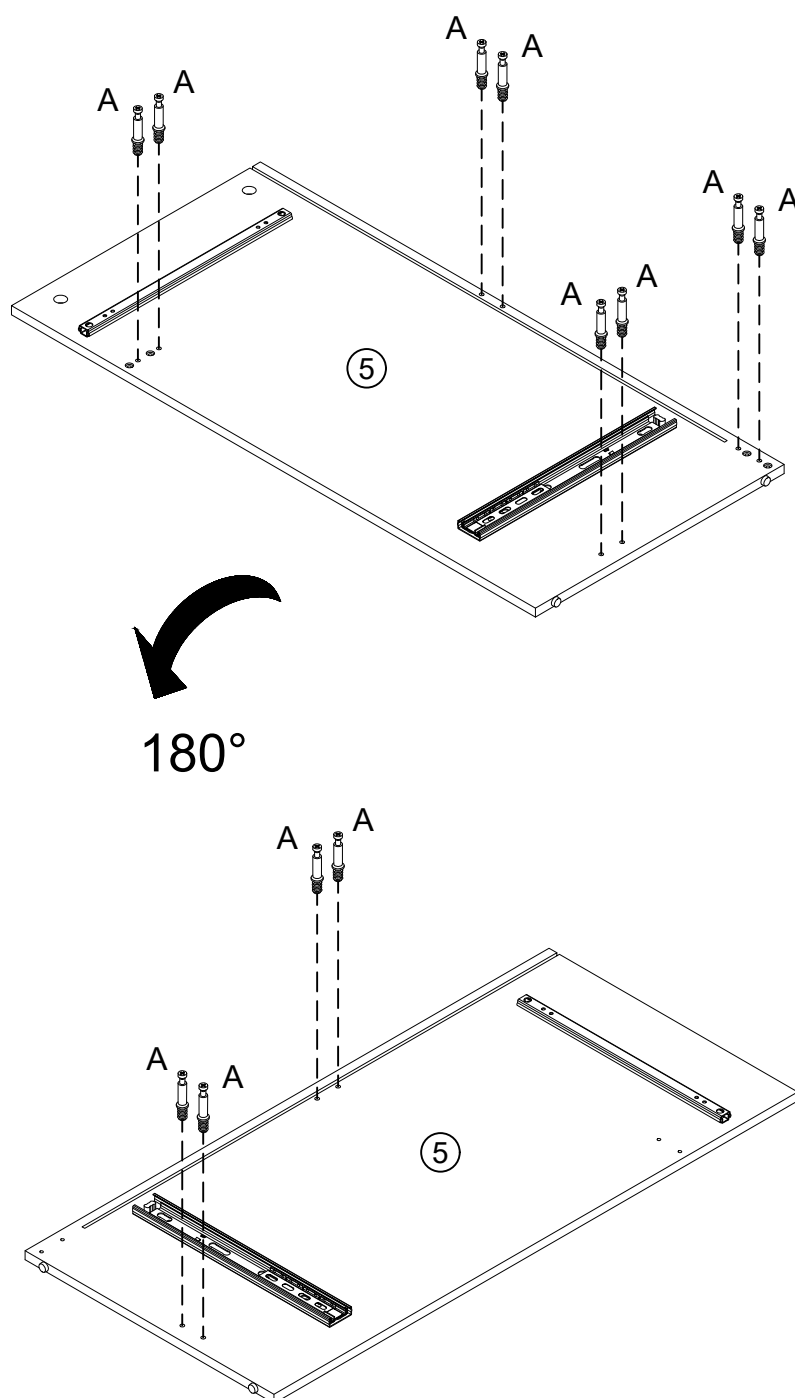

STEPS


STEP-10

	C x2PCS
---	---------

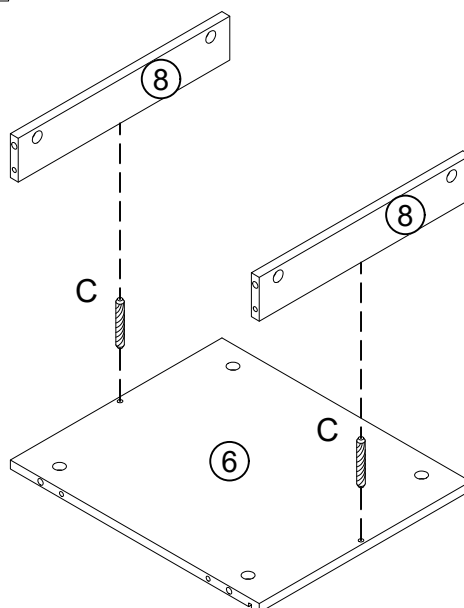

STEP-11


	B x6PCS
	C x6PCS

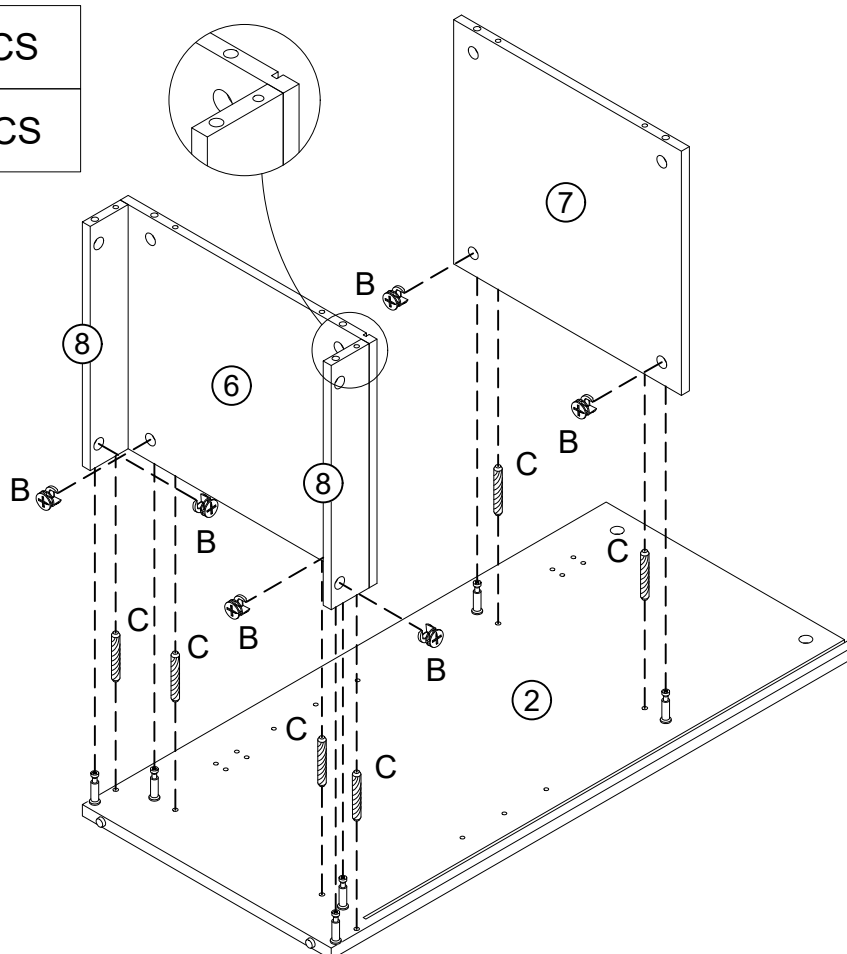

STEPS

STEP-12

	B x6PCS		C x6PCS
---	---------	---	---------

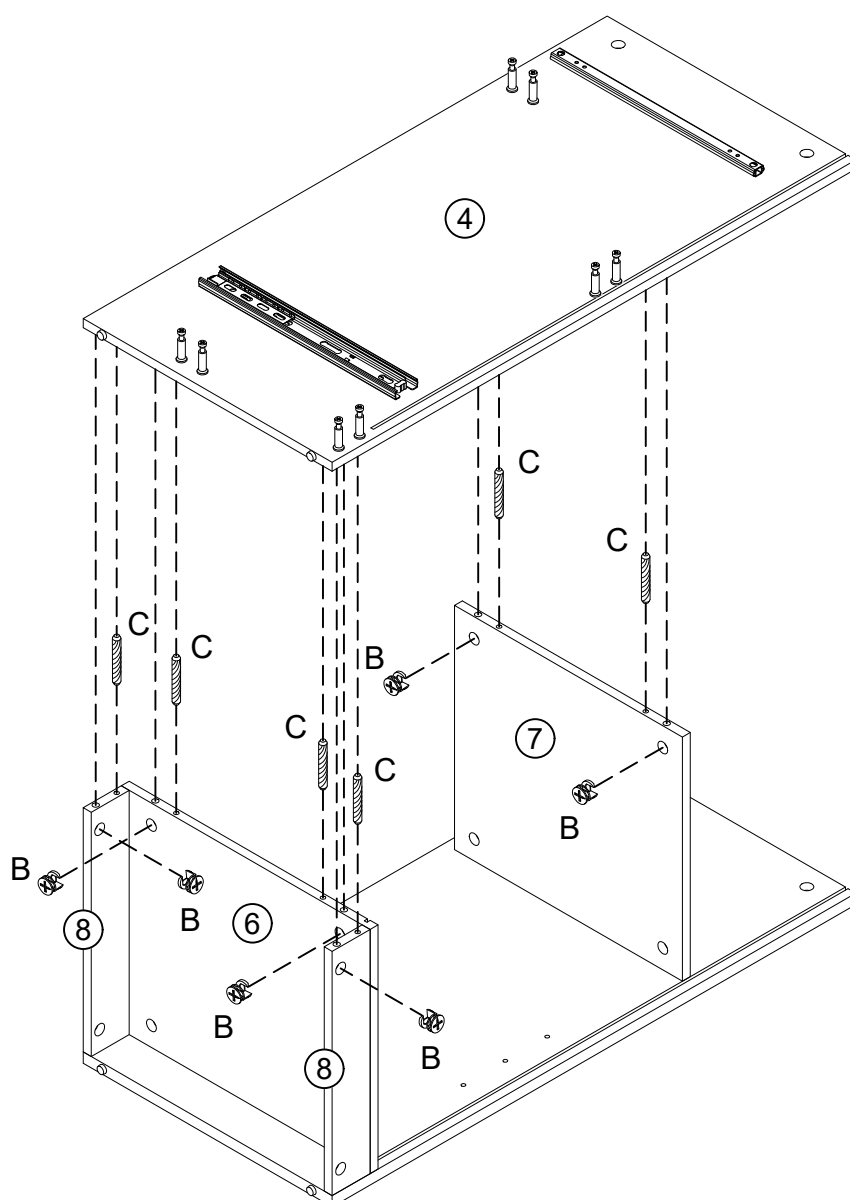


STEPS

STEP-13




B x8PCS

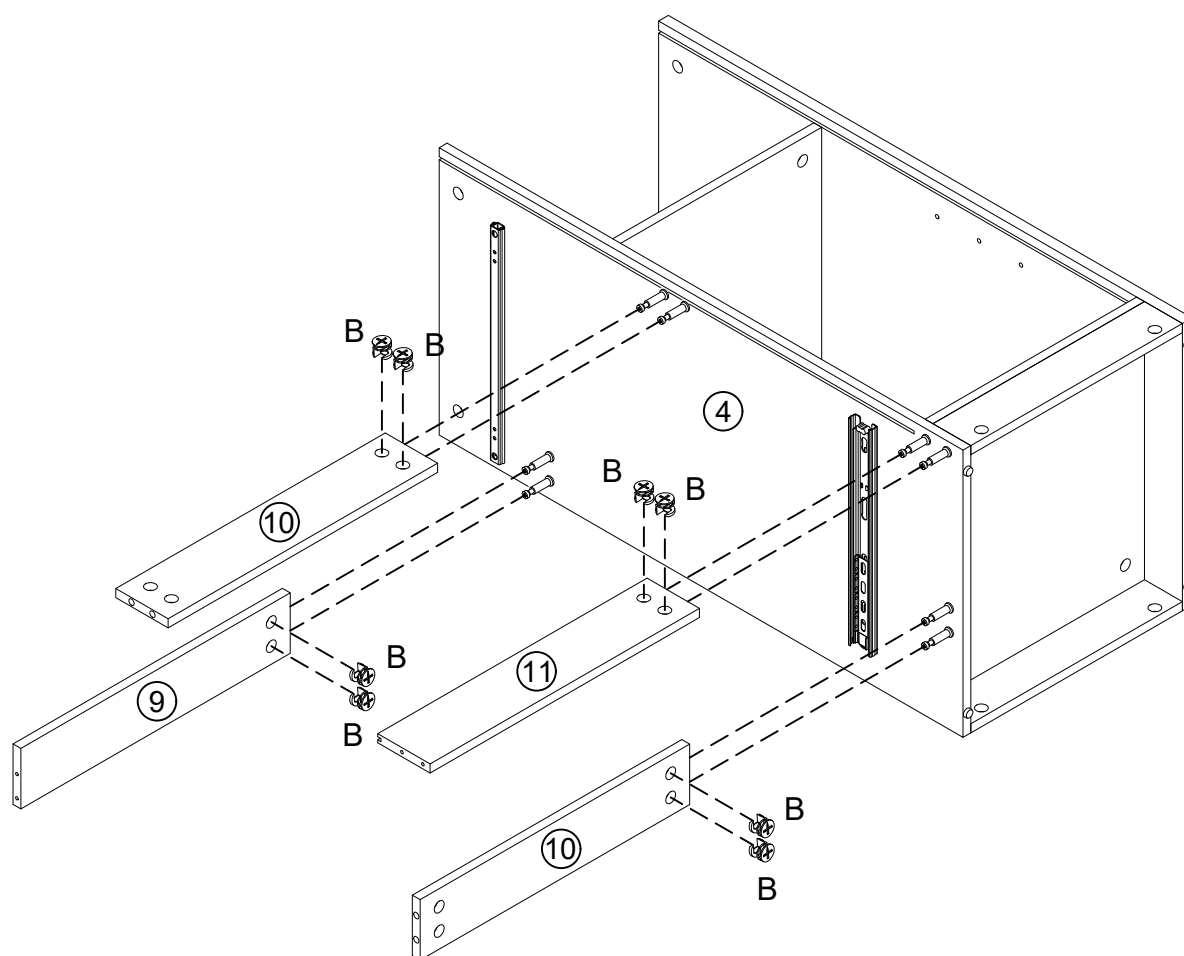

STEPS


STEP-14

	B x4PCS		H x4PCS
---	---------	---	---------

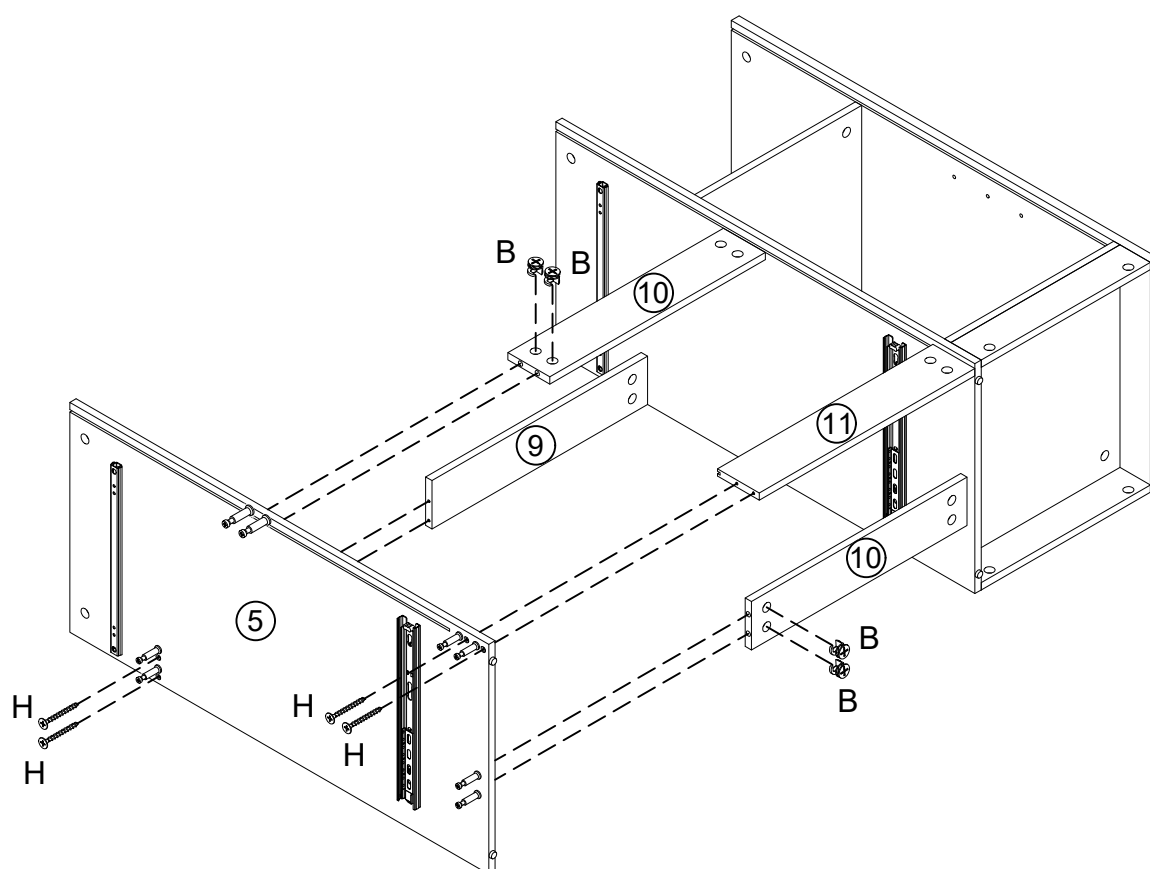


STEPS

STEP-15




B x8PCS

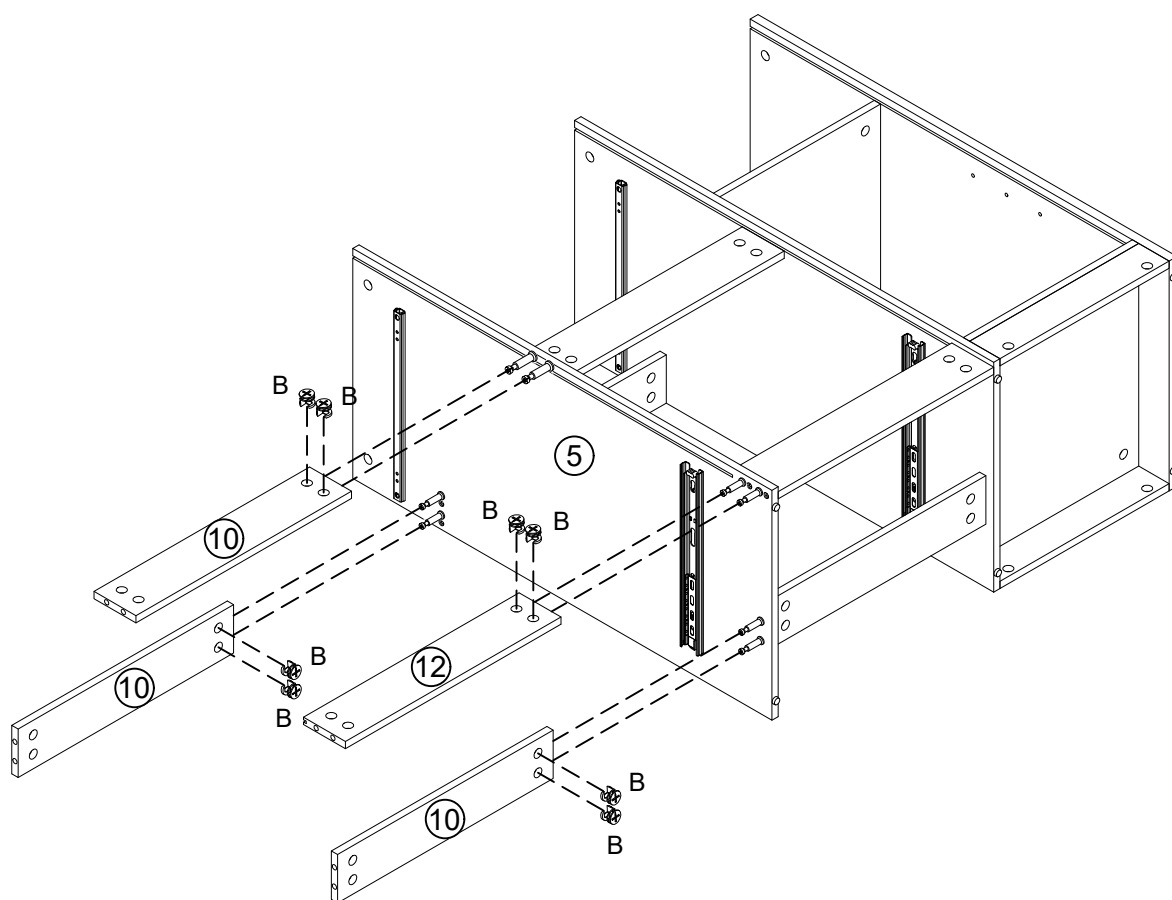


STEPS

STEP-16




B x8PCS

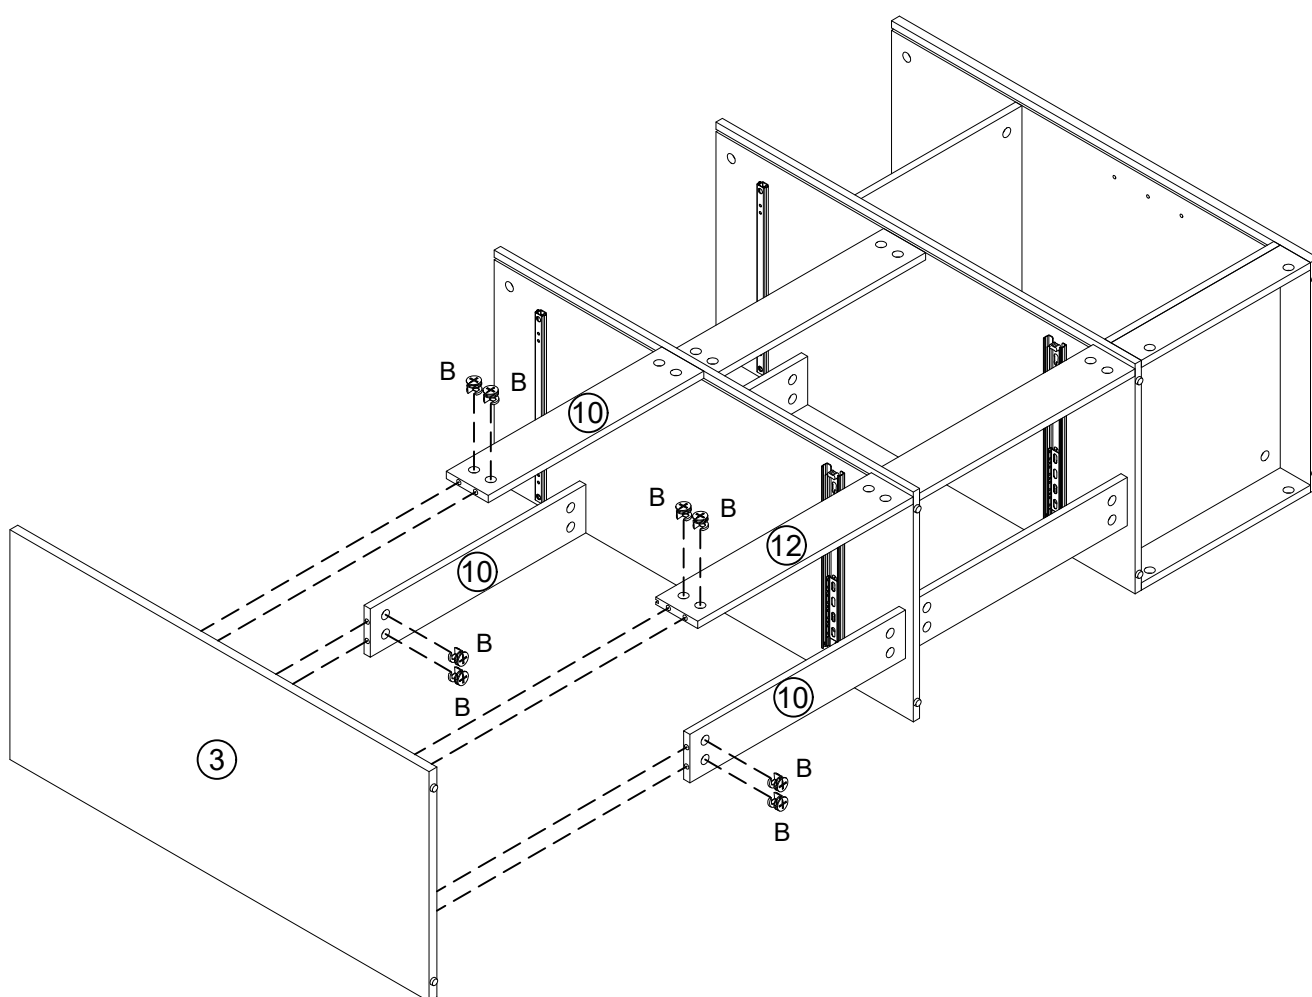

STEPS

STEP-17

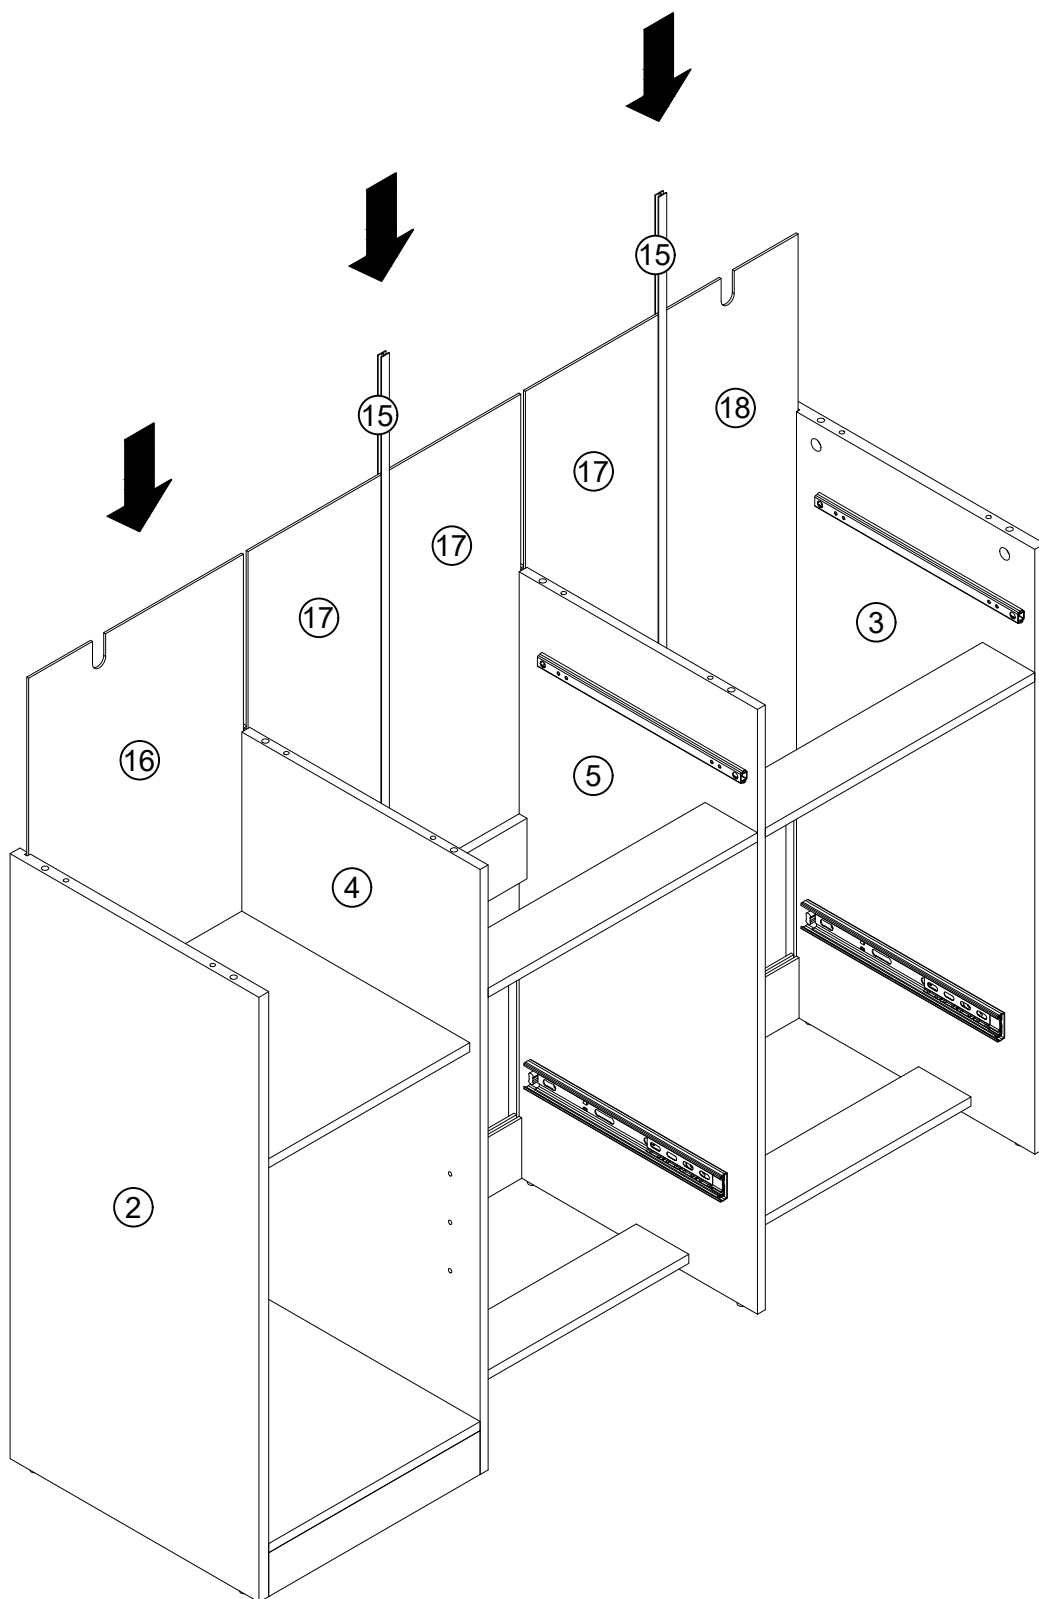


STEPS

STEP-18



A x8PCS

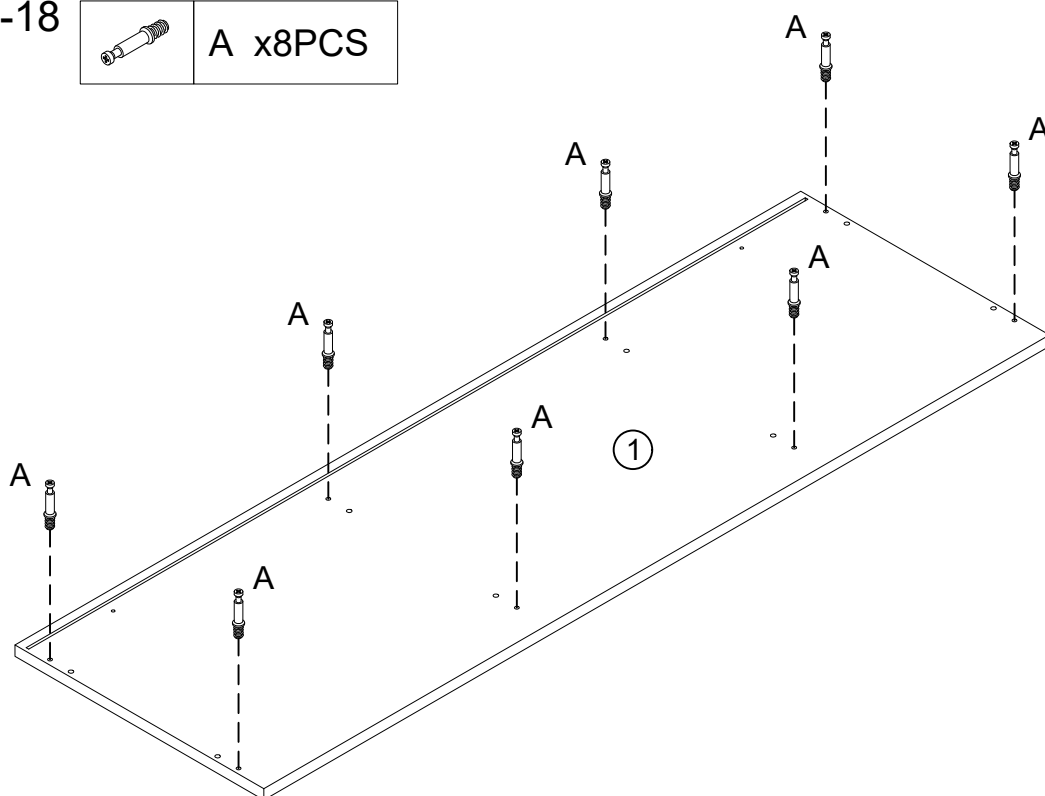


STEP-19



Q x2PCS




W x2PCS

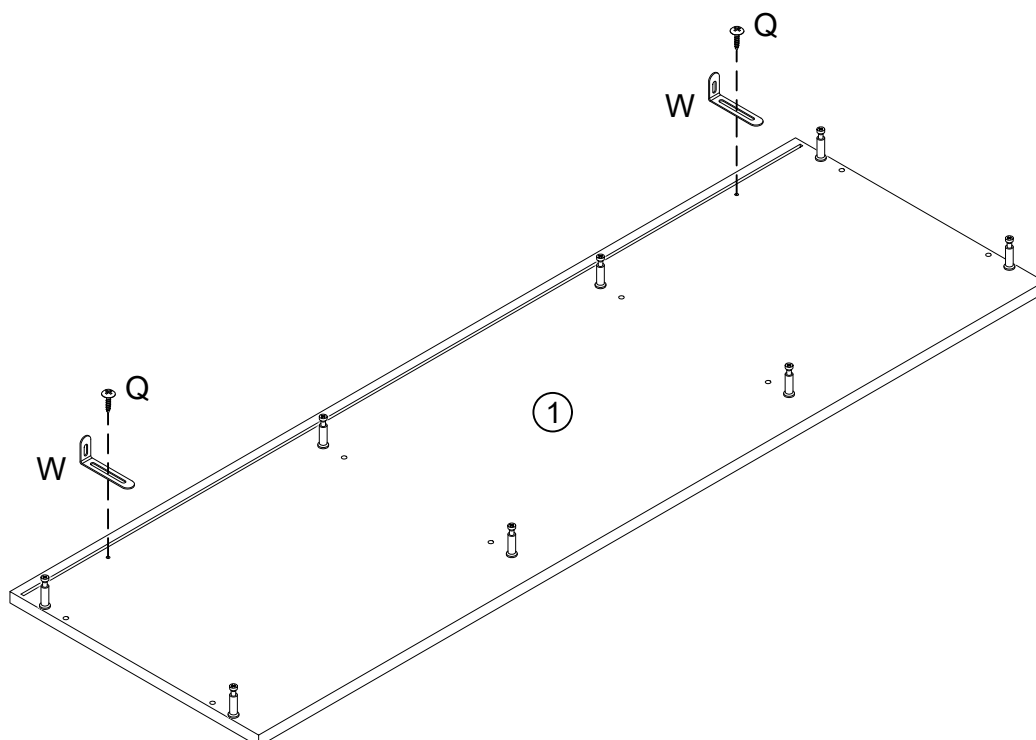

STEPS



STEP-20

	B x8PCS		C x8PCS
---	---------	---	---------

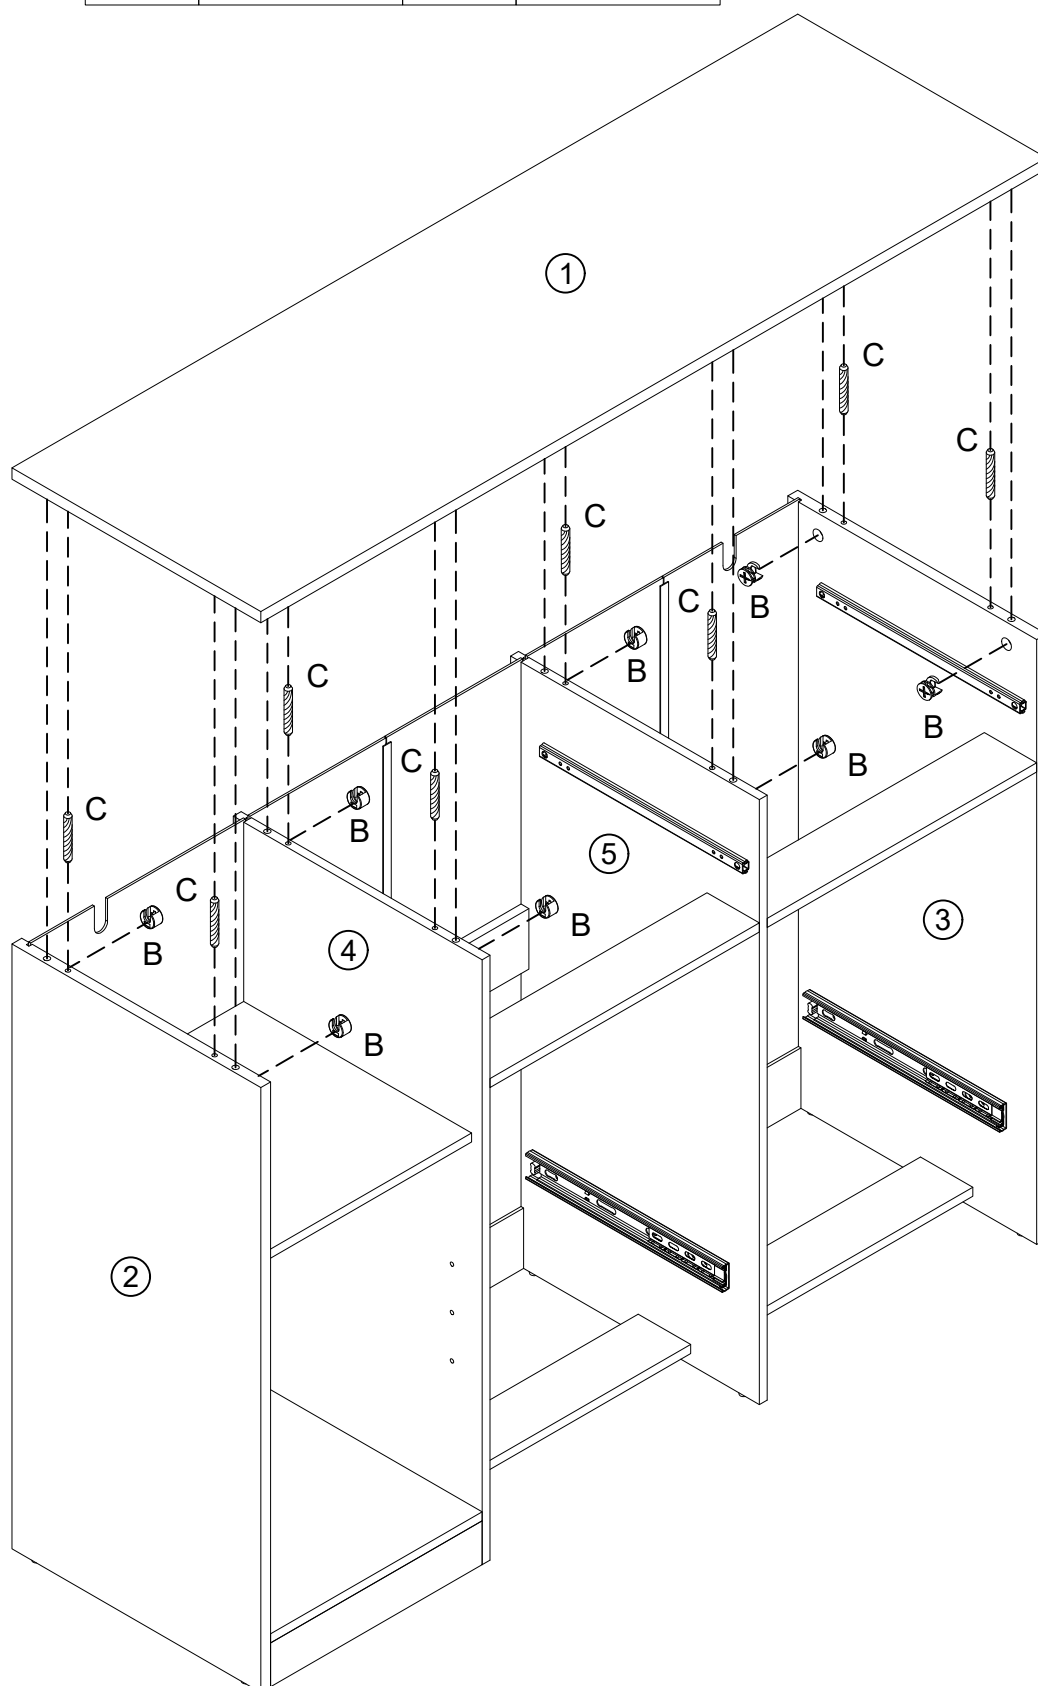

STEPS


STEP-21

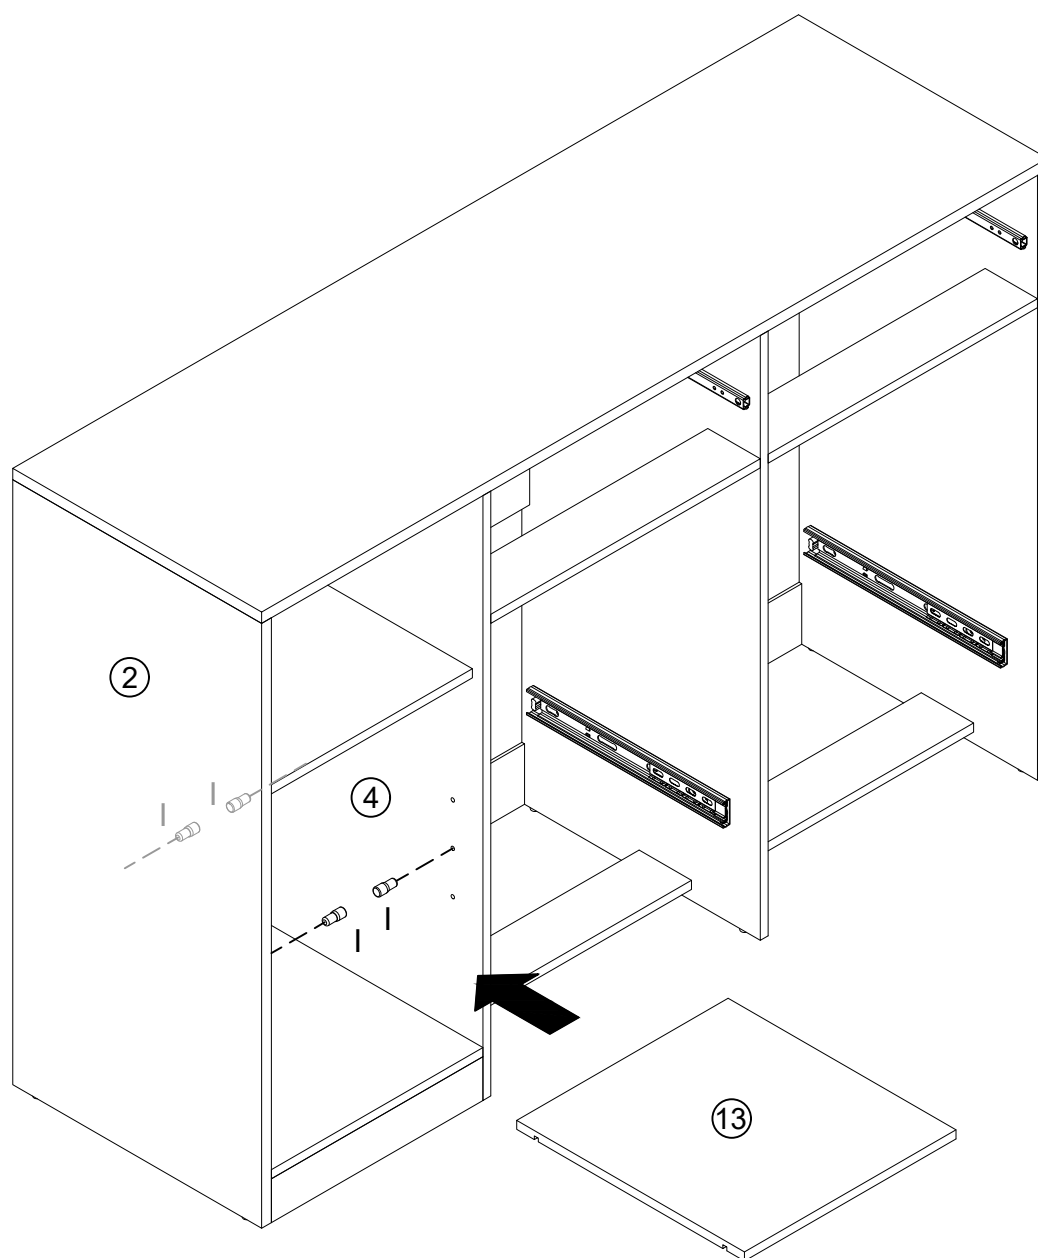

STEPS


STEP-22

	J x2PCS		K x4PCS
---	---------	---	---------

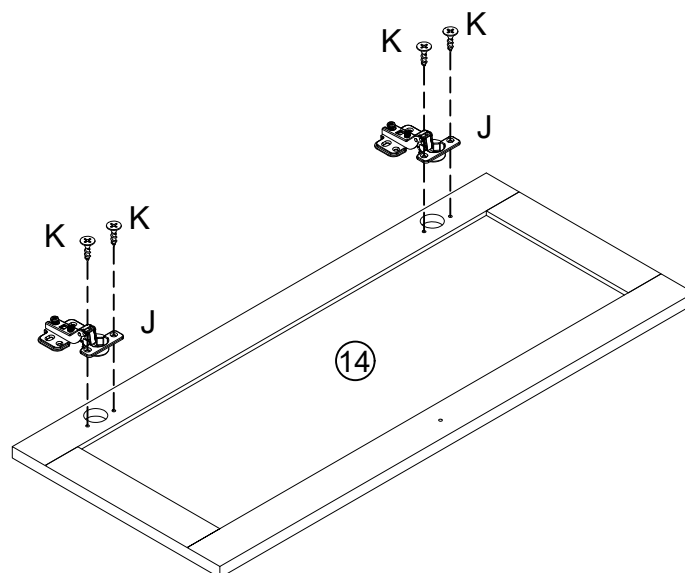



STEP-23

	L x1PC		N x1PC
---	--------	---	--------

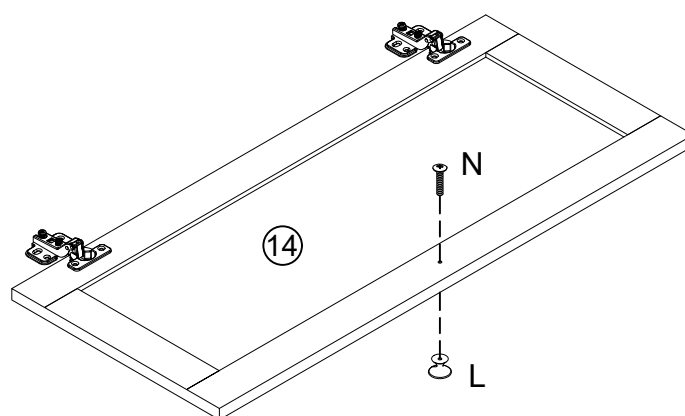

STEPS



STEP-24

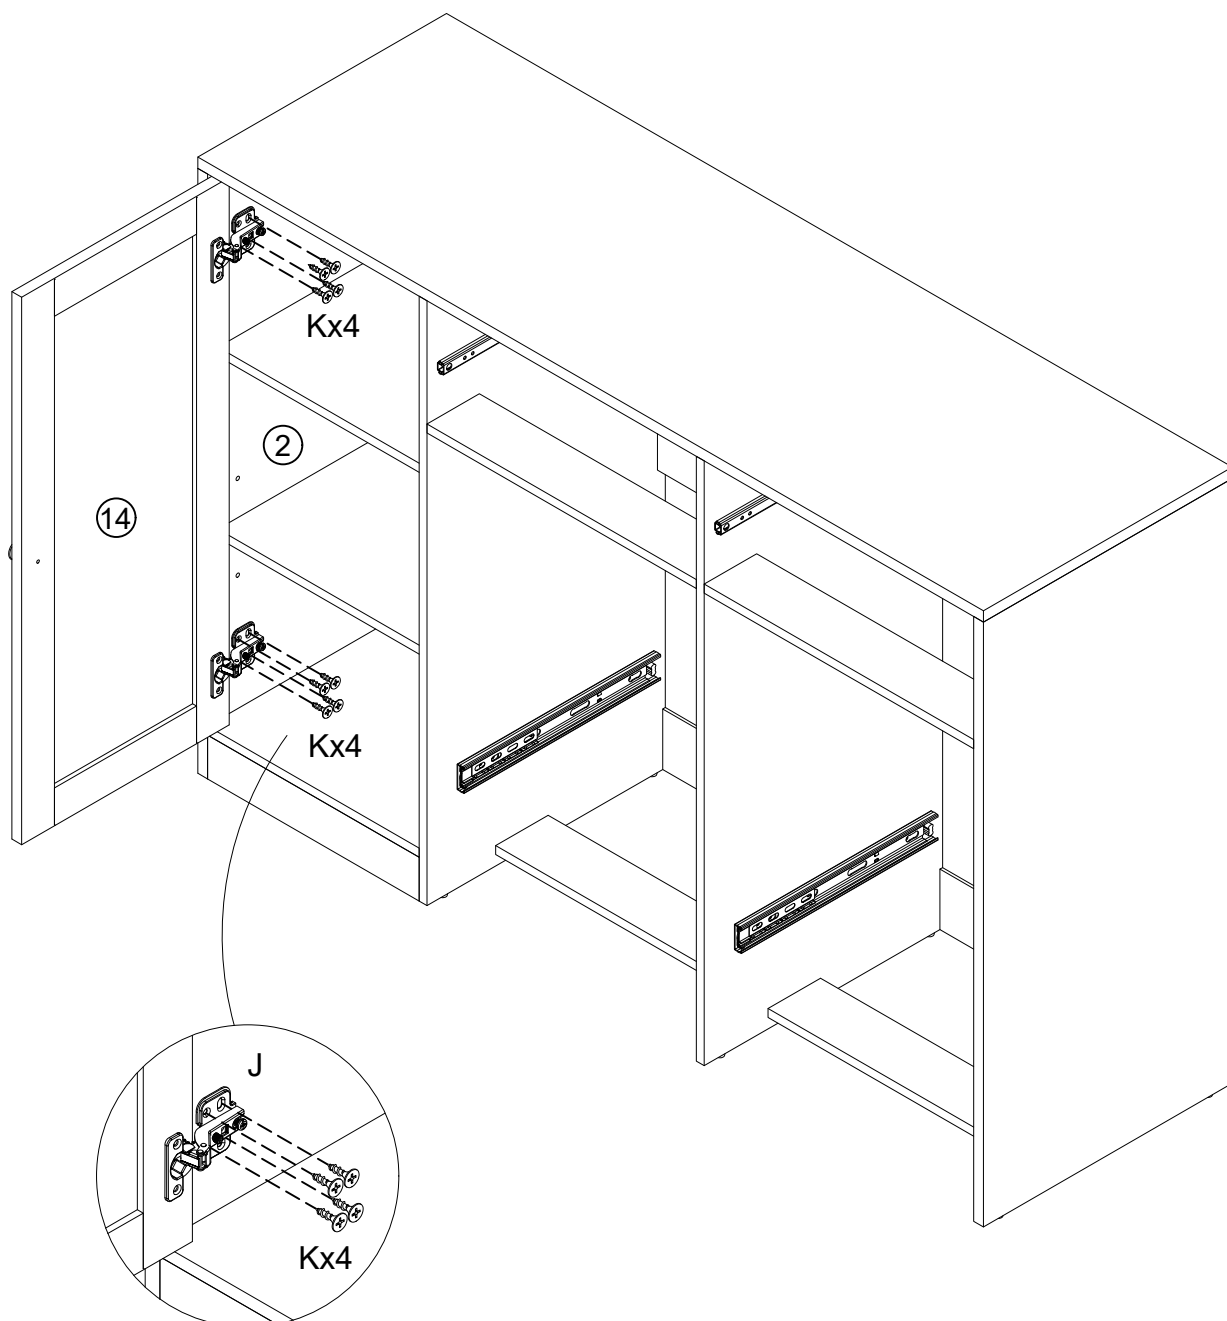

STEPS




1. First adjust the hinges to ensure the door panel gaps are evenly spaced before fitting the back panel clips.
2. Should hinge adjustment prove difficult, please refer to the installation video via the provided link.

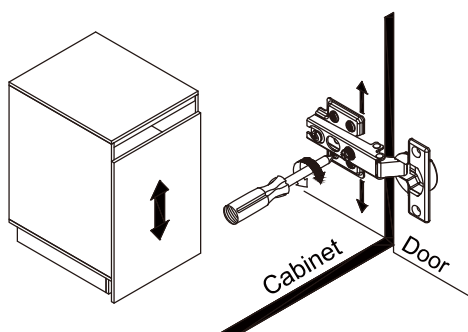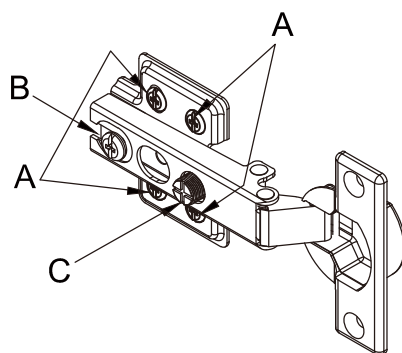


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

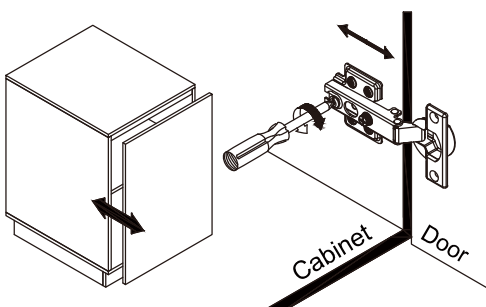

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

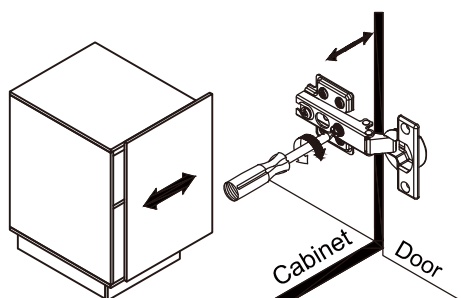



To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.



STEPS

STEP-25

	E x8PCS		F x4PCS
---	---------	---	---------

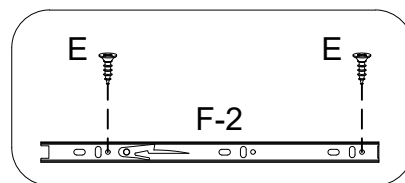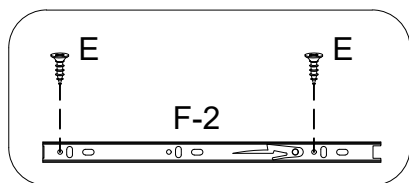


x2

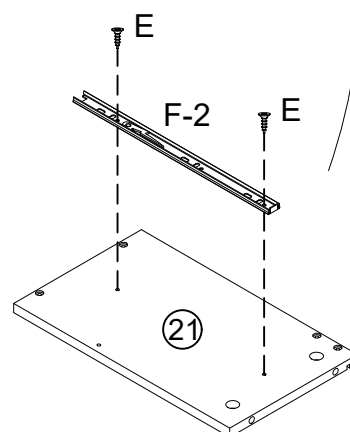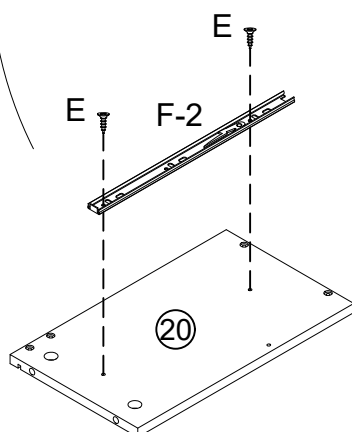


x2

STEP-26

	H x8PCS		P x2PCS		Q x8PCS
---	---------	---	---------	---	---------

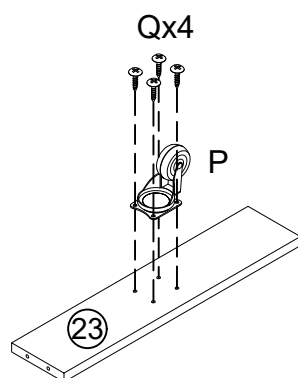


x2

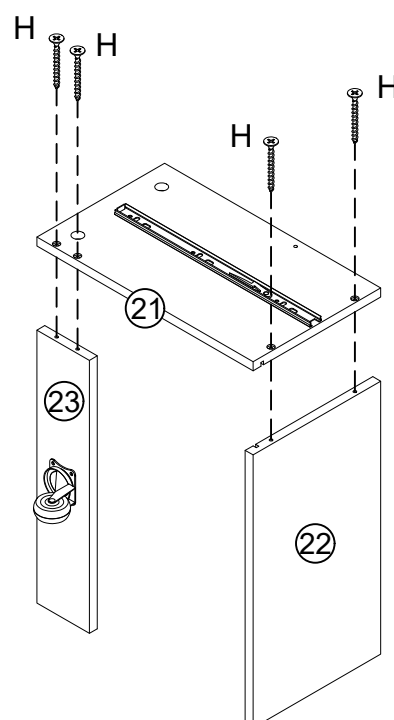


x2

STEPS

STEP-27




H x8PCS

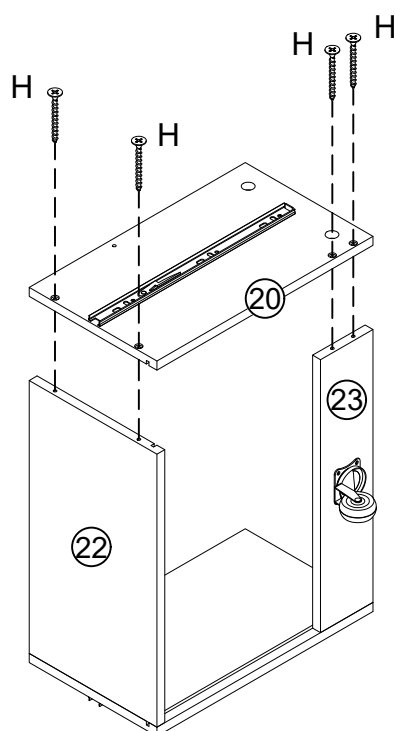

x2

STEP-28

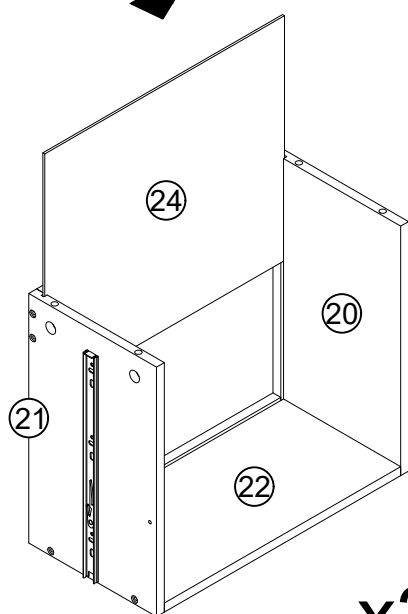


x2

STEPS

STEP-29




A x8PCS

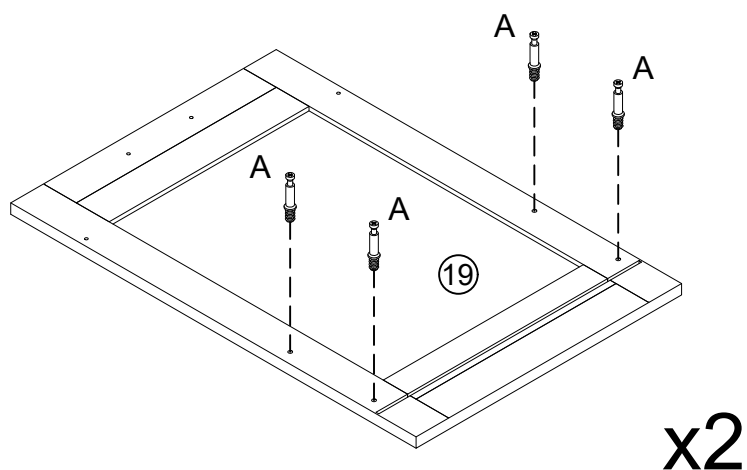

STEP-30




B x8PCS

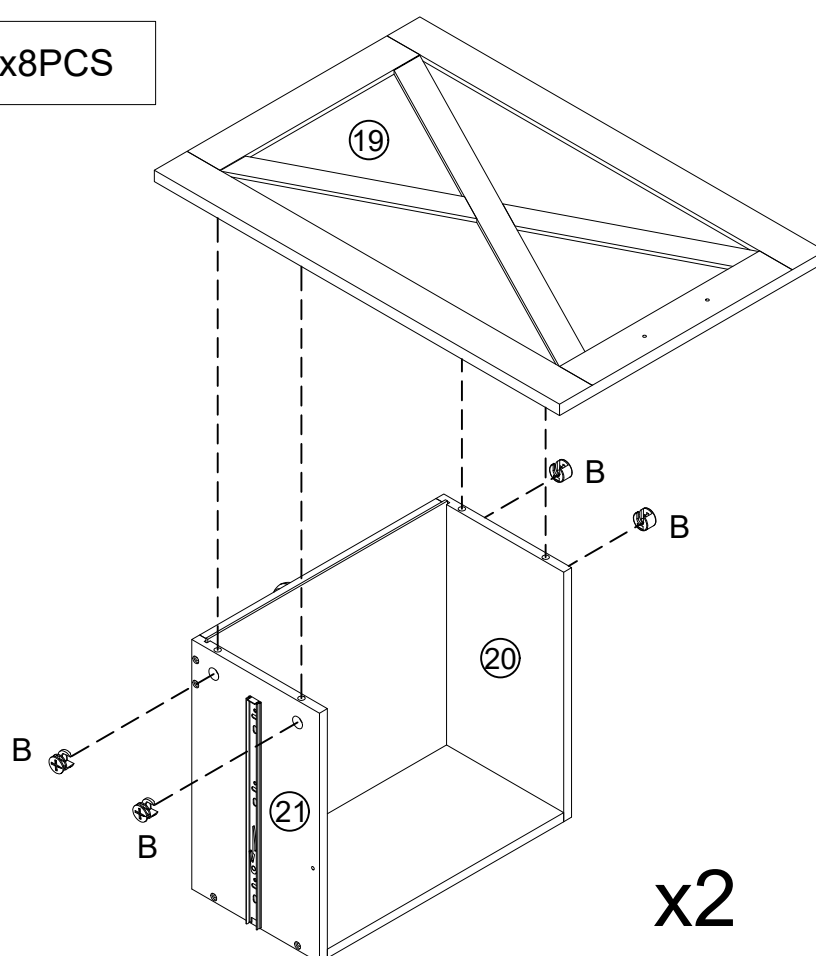

STEPS

STEP-31


	R x8PCS
---	---------

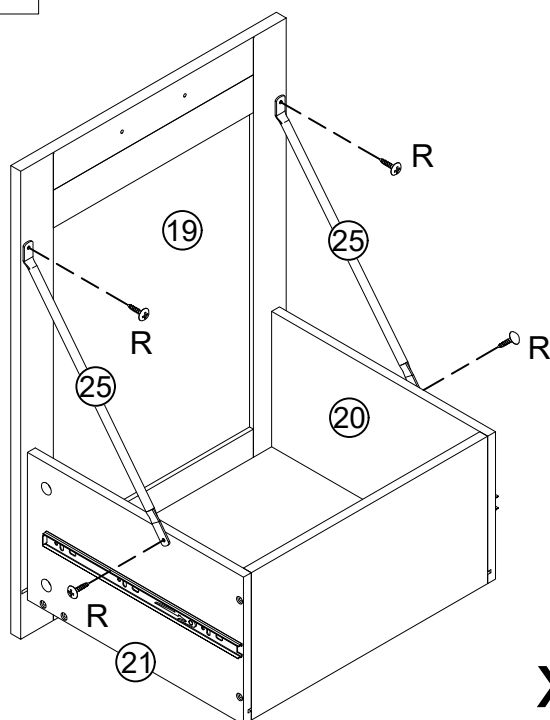

x2

STEP-32



	M x2PCS
	N x4PCS

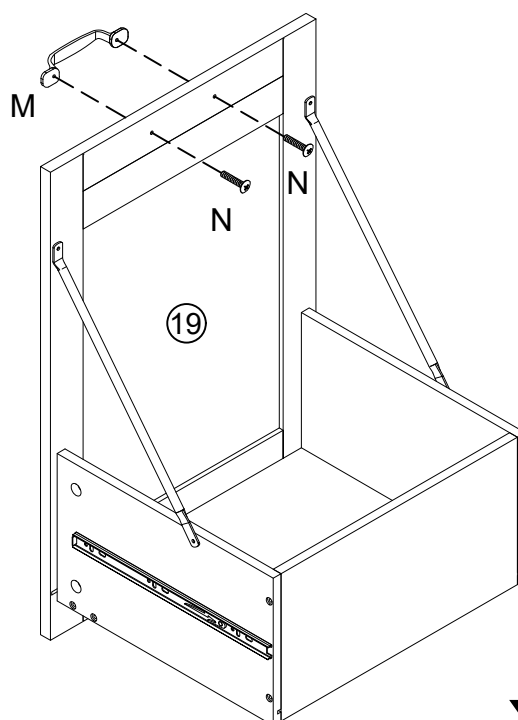

x2



STEPS

STEP-33

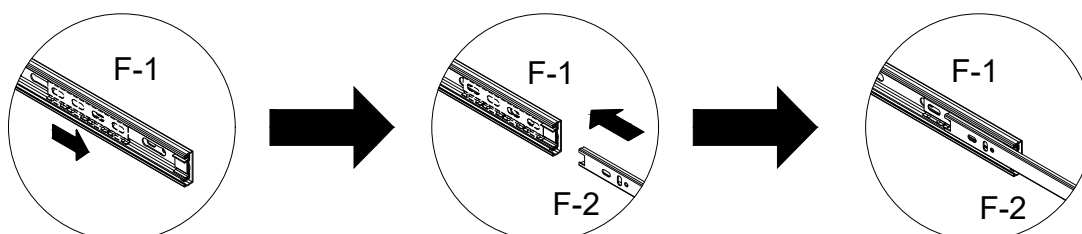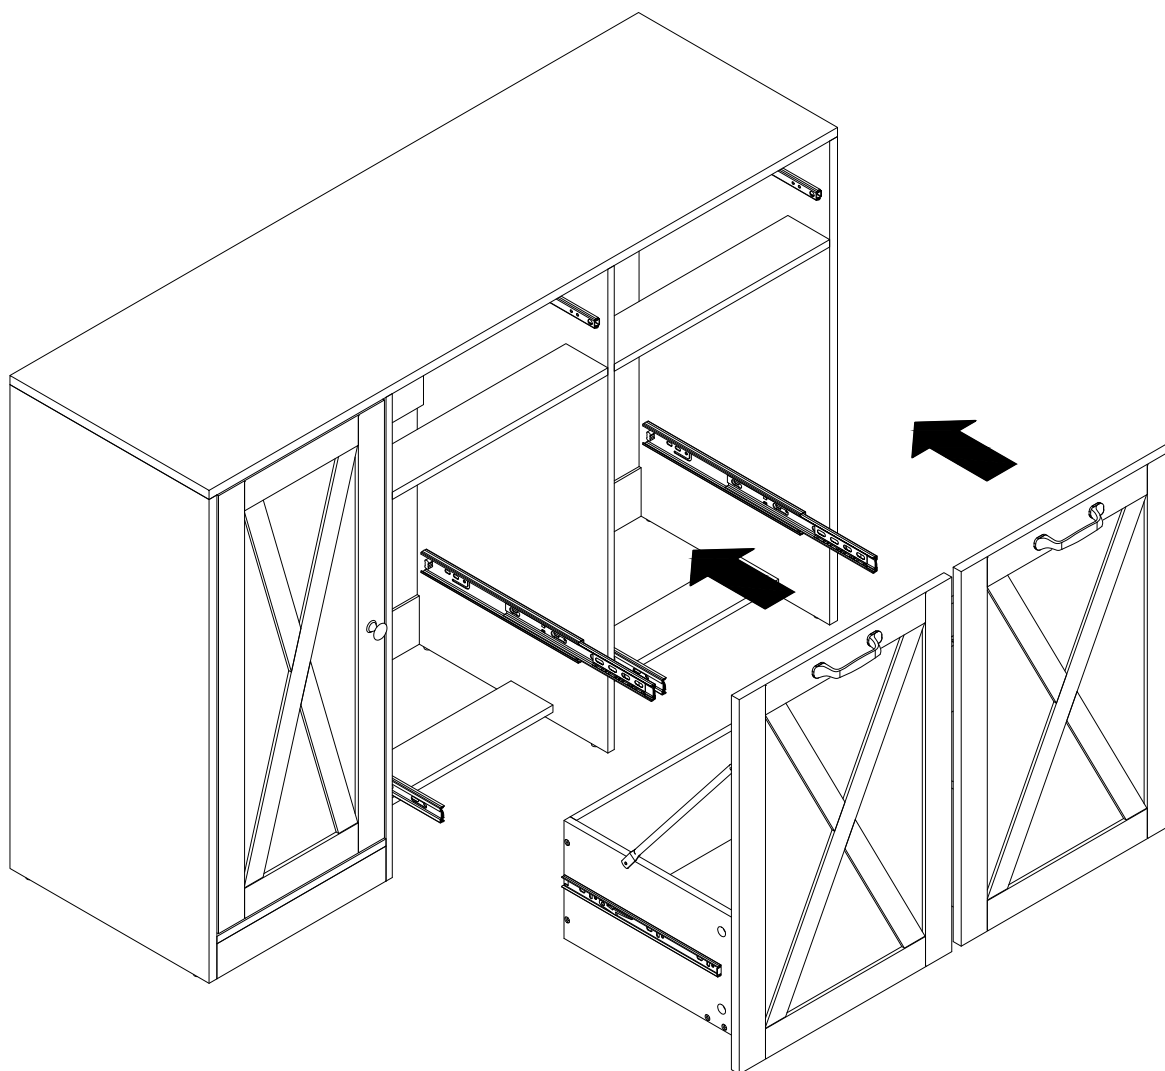


STEPS

STEP-34

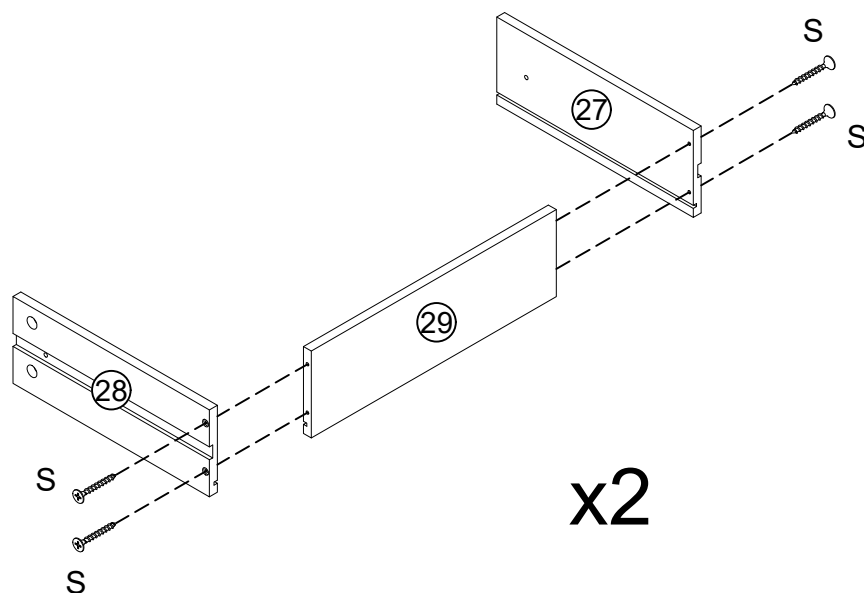


STEP-35

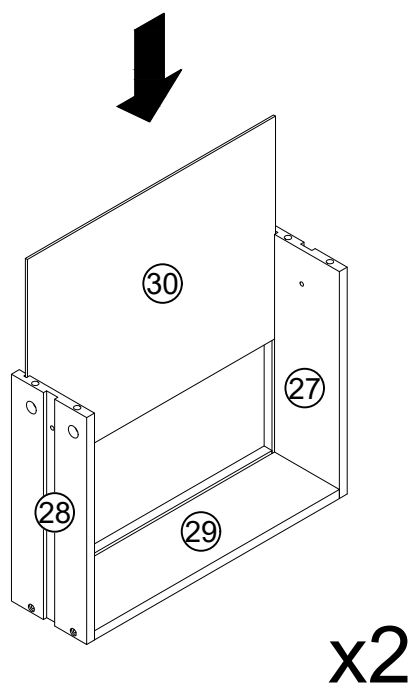

STEPS


STEP-36

	A x8PCS		L x2PCS		V x2PCS
---	---------	---	---------	---	---------

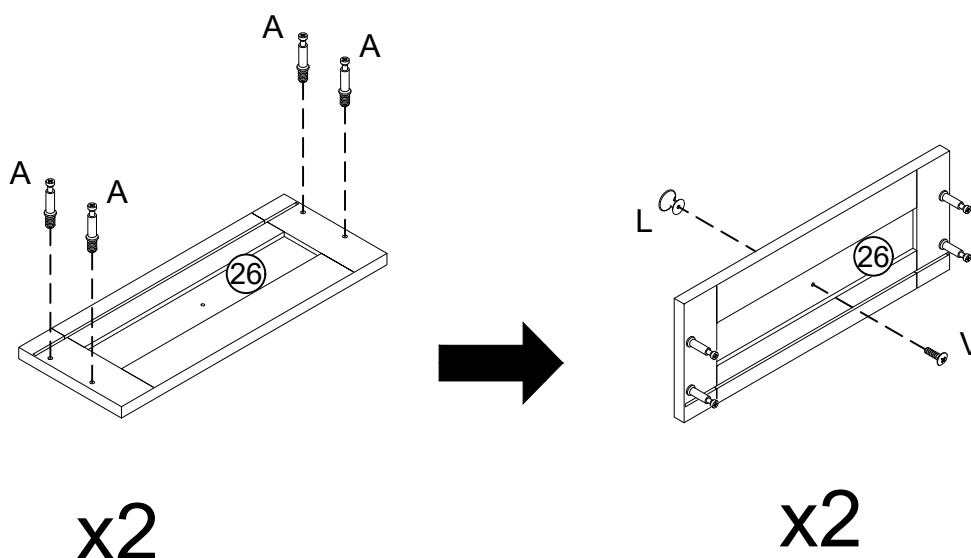

STEP-37


	B x8PCS
---	---------

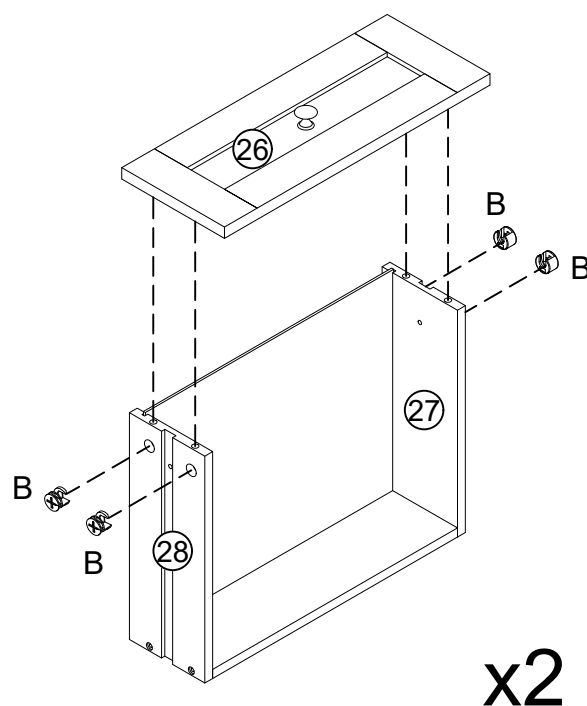

STEPS

STEP-38




	T x12PCS		U x12PCS
---	----------	---	----------

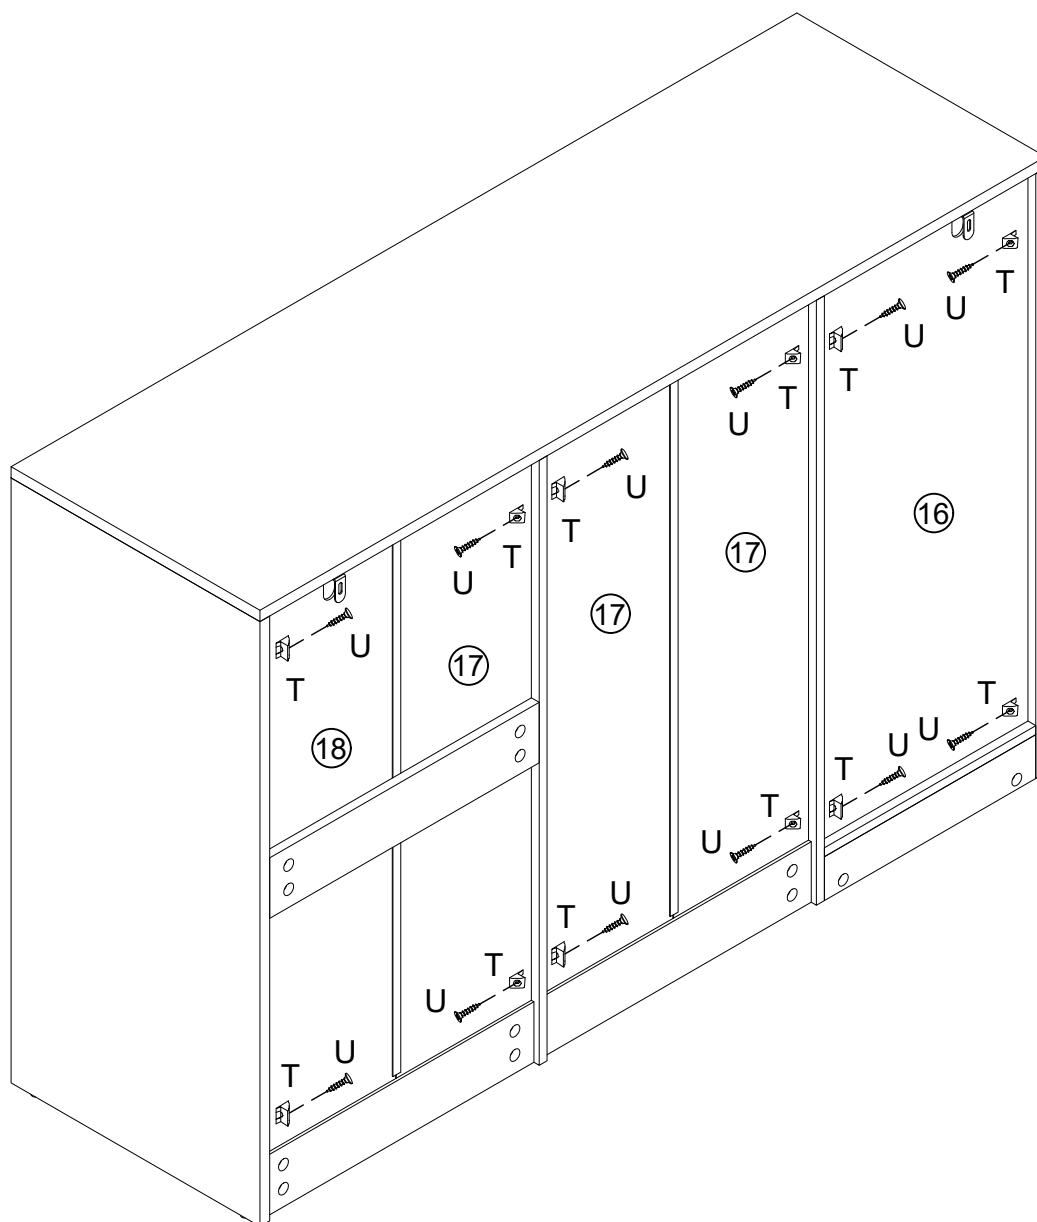

STEPS


STEP-39

	H x2PCS		O x2PCS
---	---------	---	---------

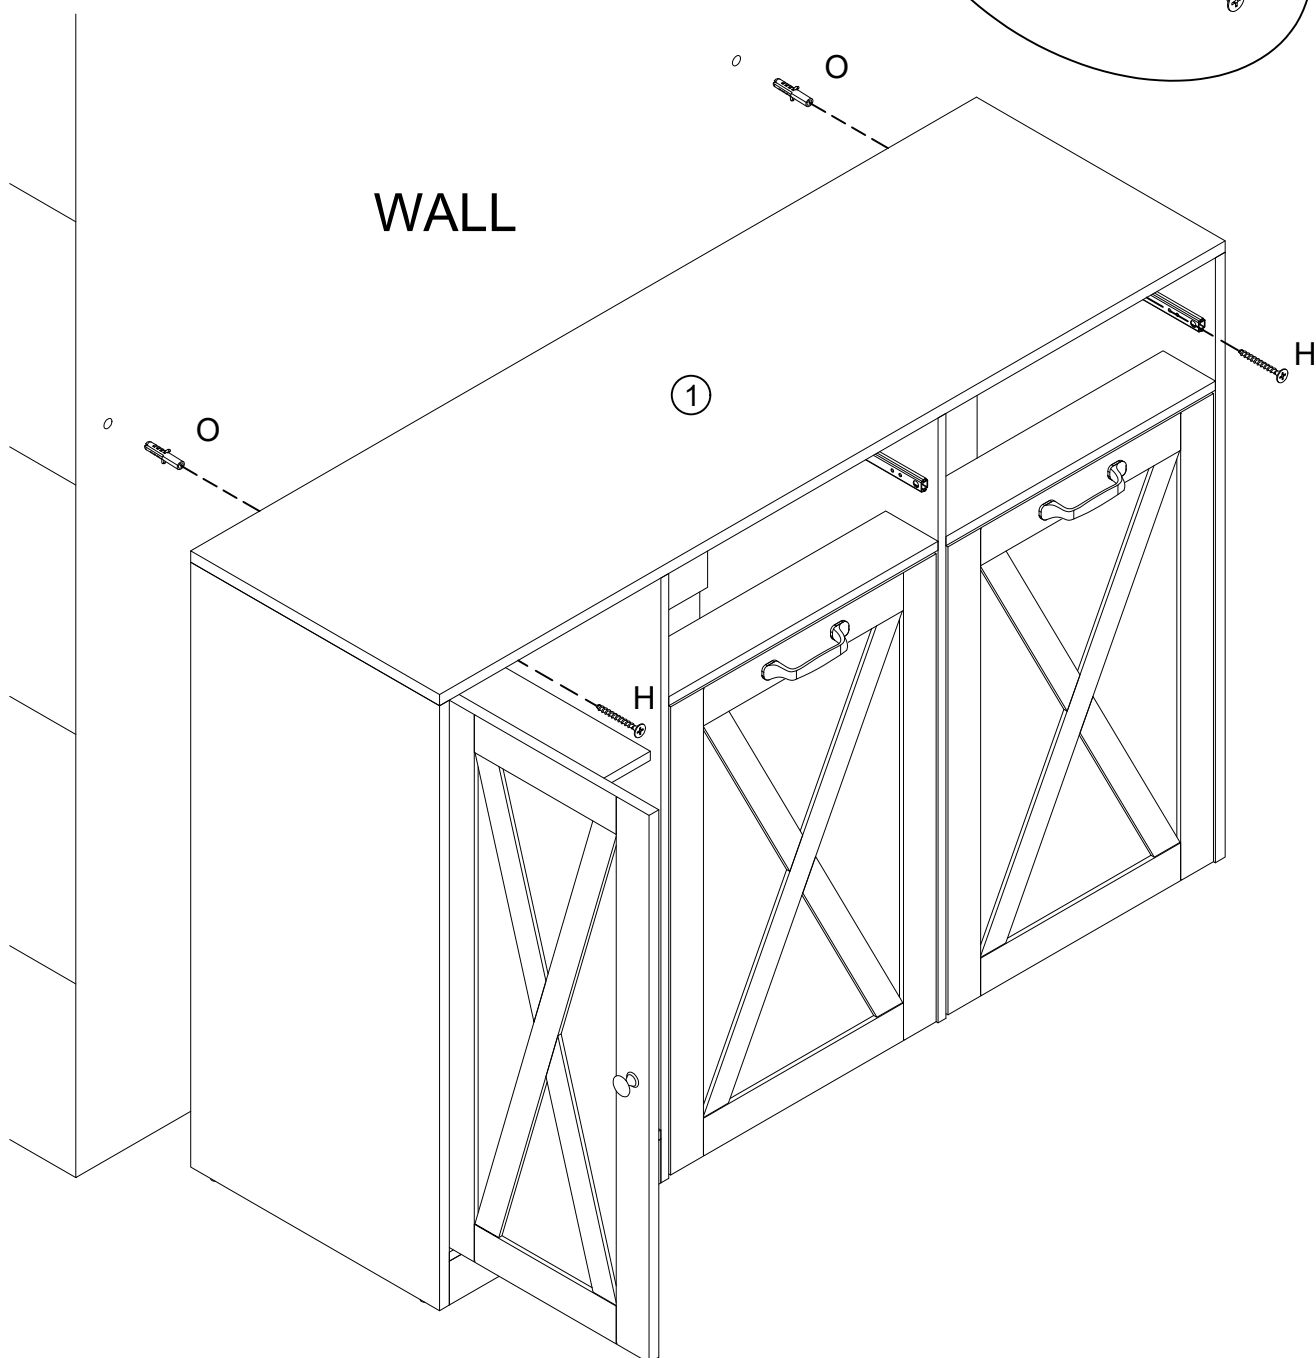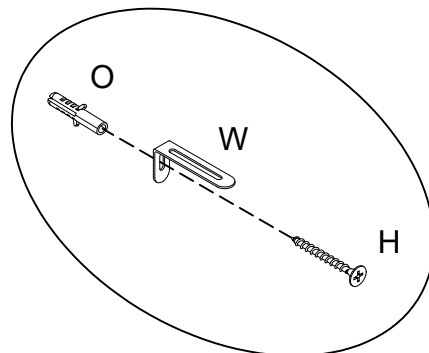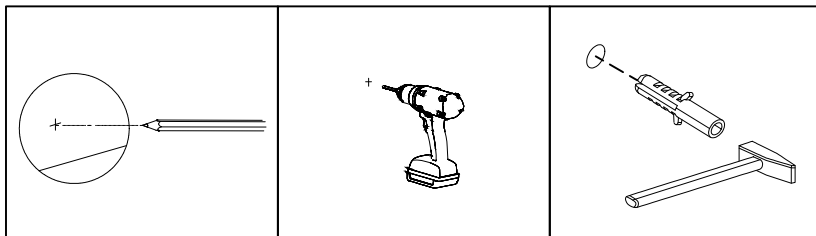

STEPS

STEP-40

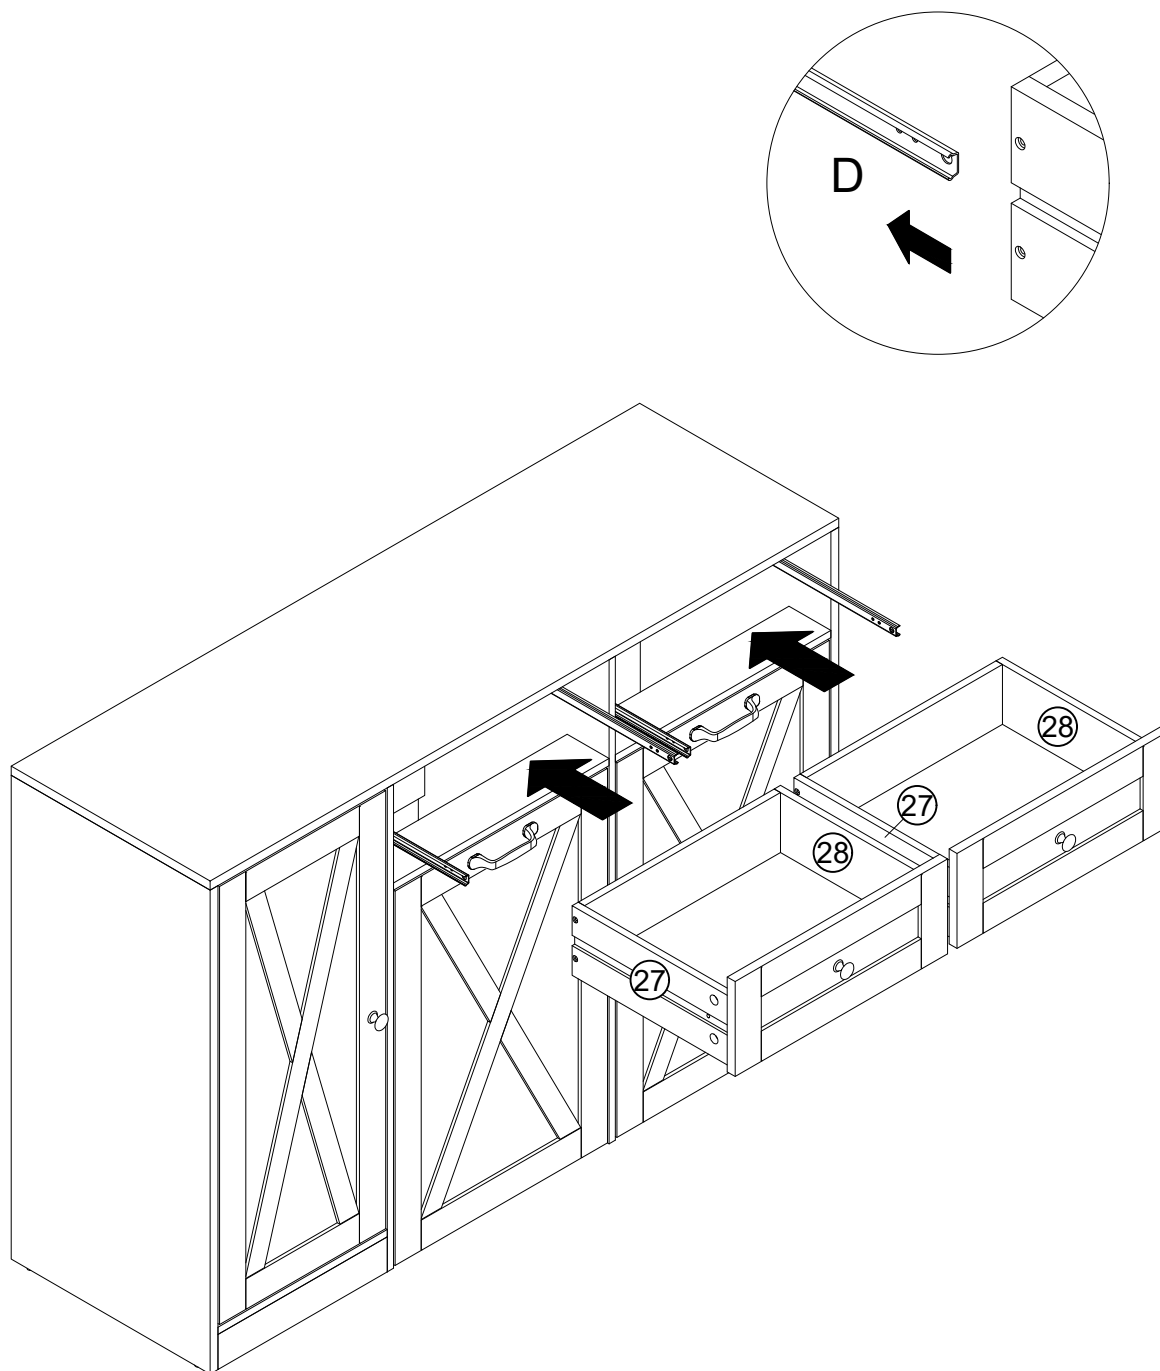


STEPS

STEP-41




V x4PCS

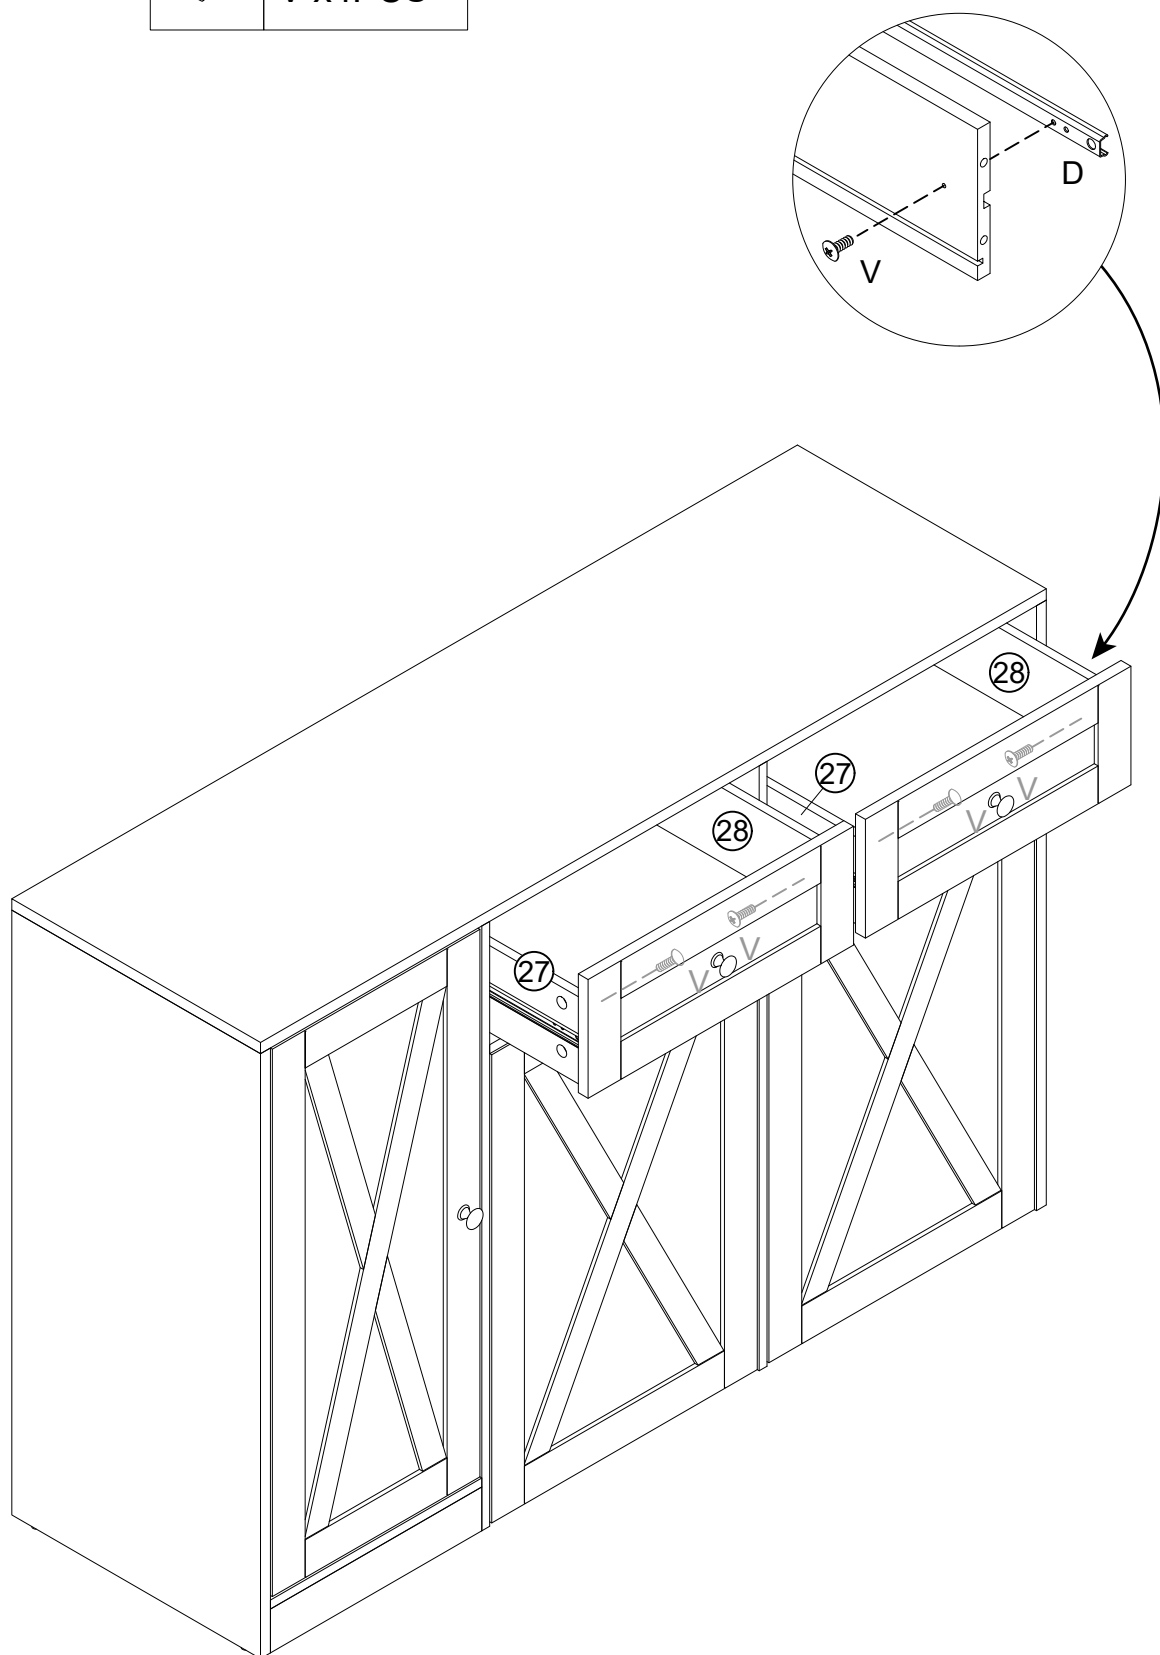


STEPS


You may need patience to get a perfect smooth slide of drawer experience, and we appreciate your patience. Asking for a second person to assist you will simplify the process.

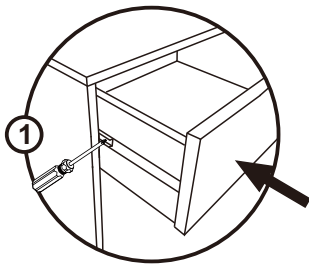


1.Align Components: Position the groove on the drawer side to match the rail profile. Insert a precision tool (e.g., screwdriver tip) into the outermost hole of the slide rail. Ensure both sides are aligned symmetrically.

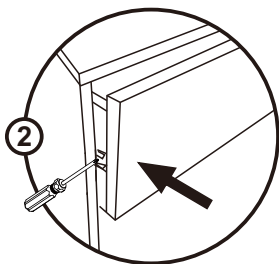

2.Slide Drawer Inward: Gently push the drawer into the cabinet until slide come up against drawer front. This step needs to be done simultaneously for both sides.

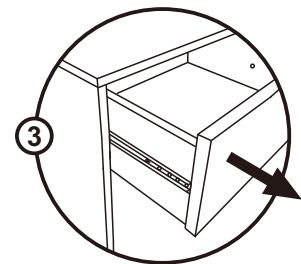

3.Secure & Adjust: While maintaining pressure on the tool, slowly pull the drawer outward until slide can not be moved.

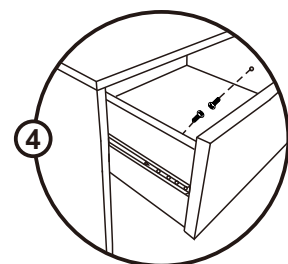

4.Finalize Installation: Locate the pre-drilled mounting holes where the rails meet the drawer sides. Securely tighten all screws on both sides.