




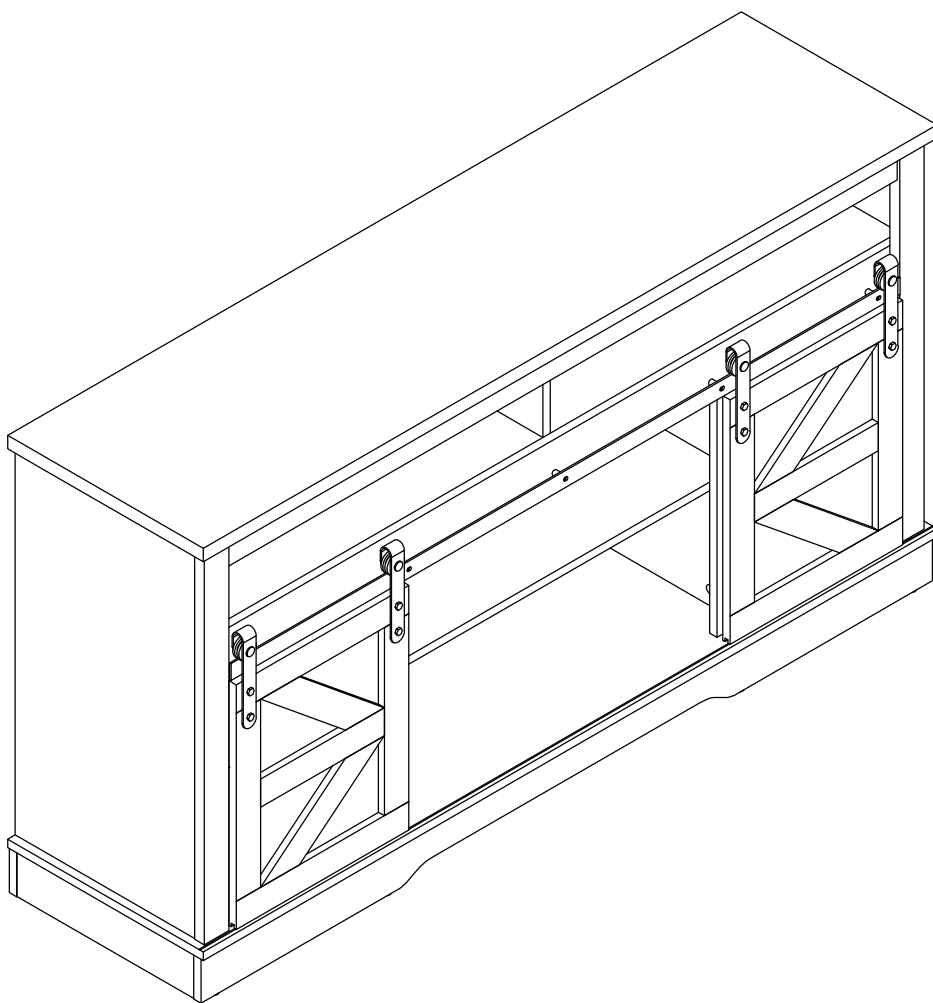

WARNING!



MAXIMUM LOAD
220 lb/100kg

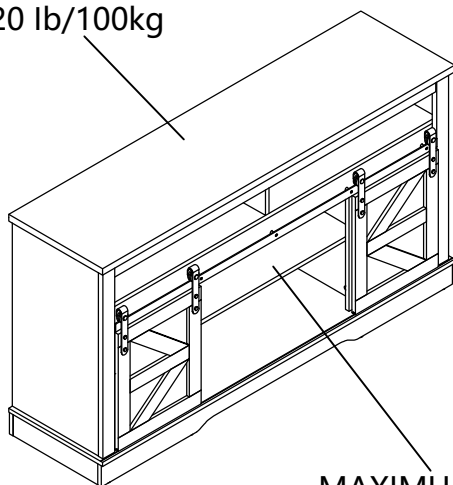


MAXIMUM LOAD
20 lb/9.1kg




Estimated Time for Assembly

45 mins

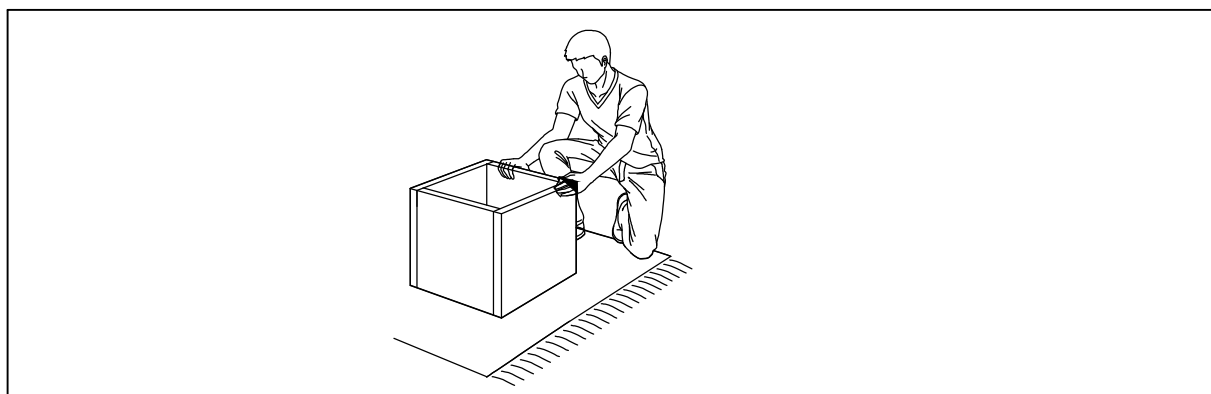

Assemble the furniture on empty carton, carpet, or rug to prevent scratches or damage.

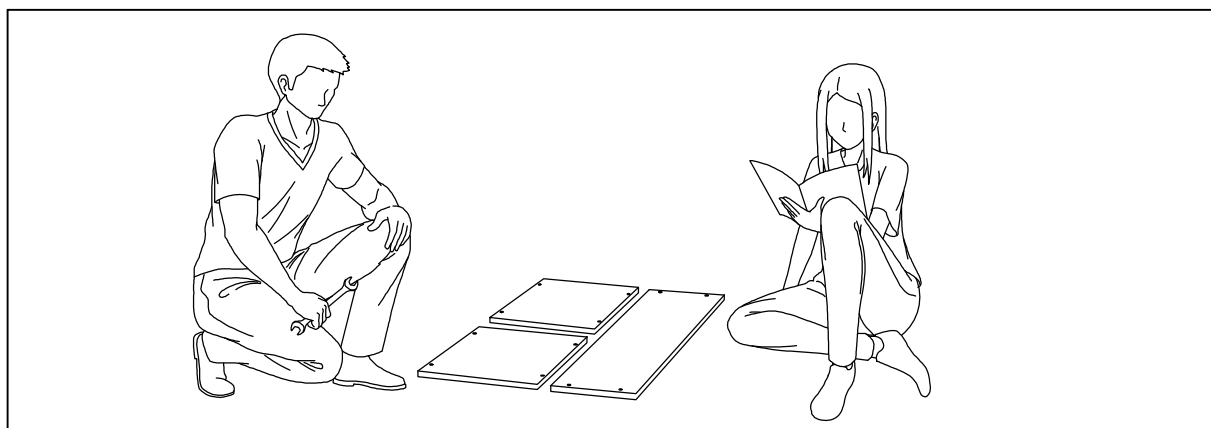


This furniture requires 2 people to assembly.
Make sure no parts are missing or damaged before assembly.




BOARD IDENTIFICATION


Not actual size

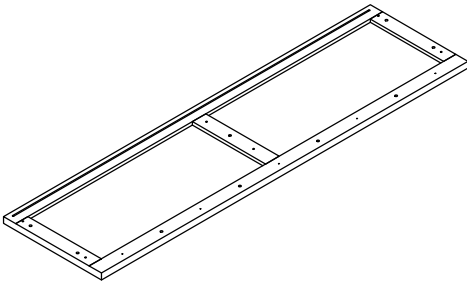


①X1

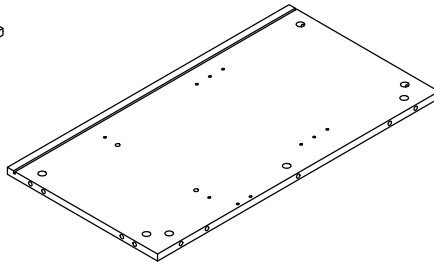


②X1

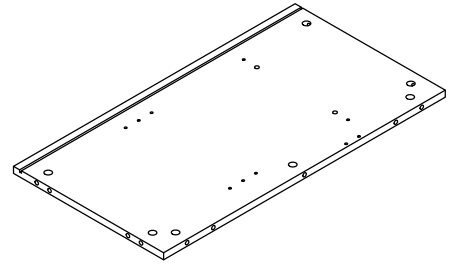


③X1

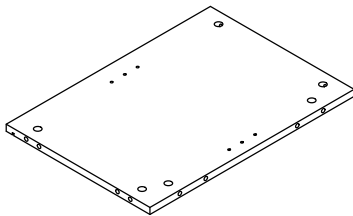


④X2

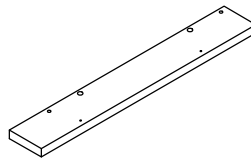


⑤X1

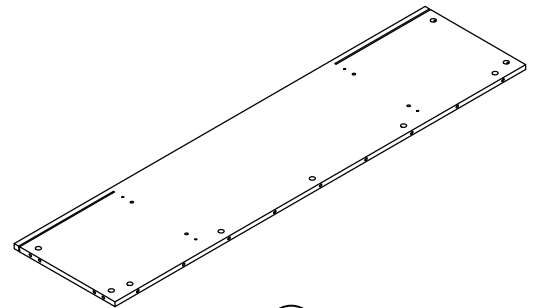


⑥X1

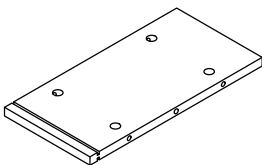


⑦X1

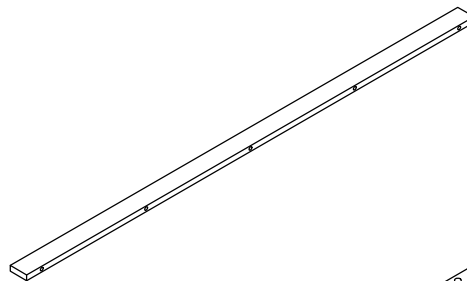


⑧X1

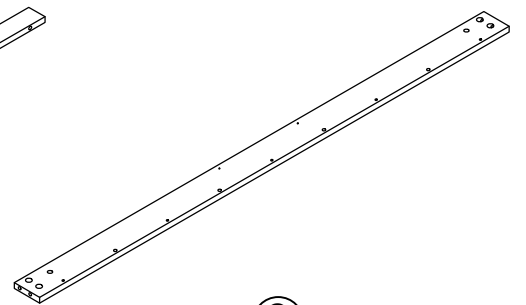


⑨X1

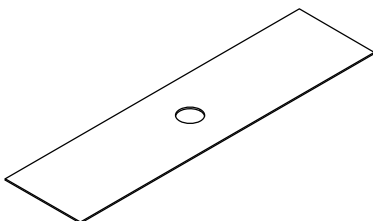

⑩X2

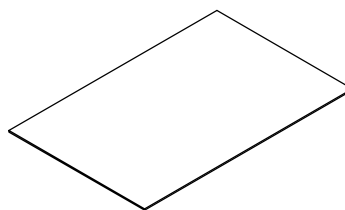


⑪X2

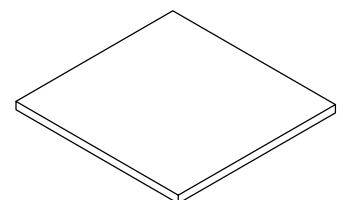


⑫X2

BOARD IDENTIFICATION


Not actual size

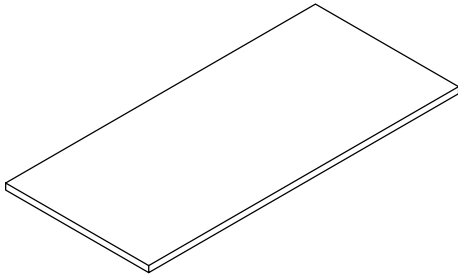


⑬X1

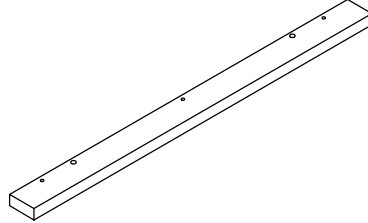


⑭X2

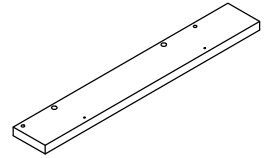


⑮X1

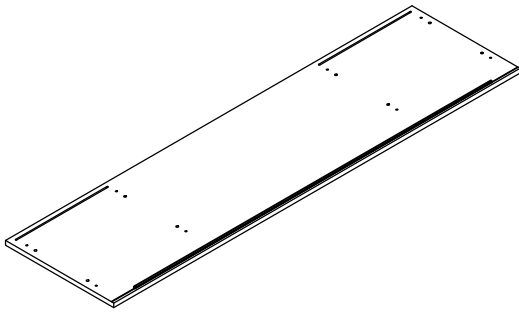


⑯X1

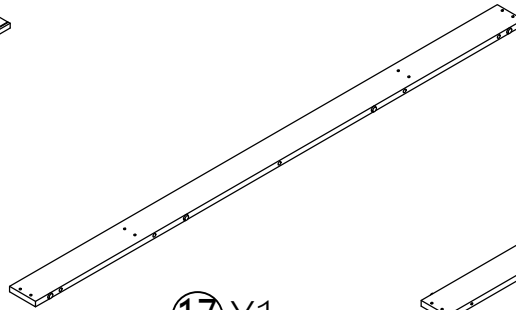


⑰X1

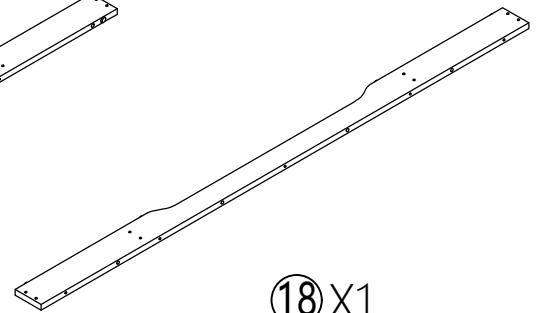


⑱X1

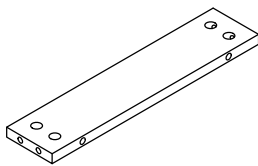

⑲X4

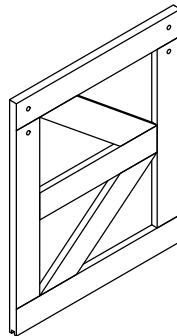


⑳X1

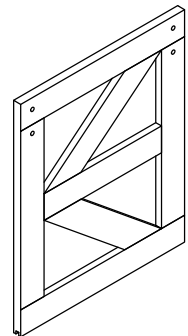

㉑X1




㉒X4




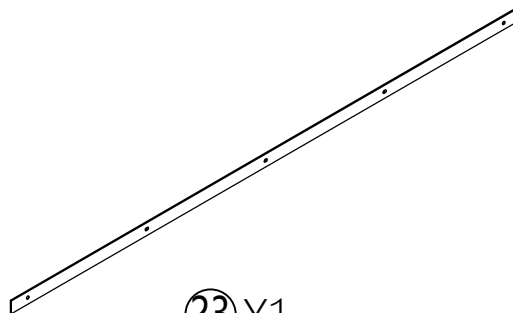


㉓X1

PACKAGE CONTENT

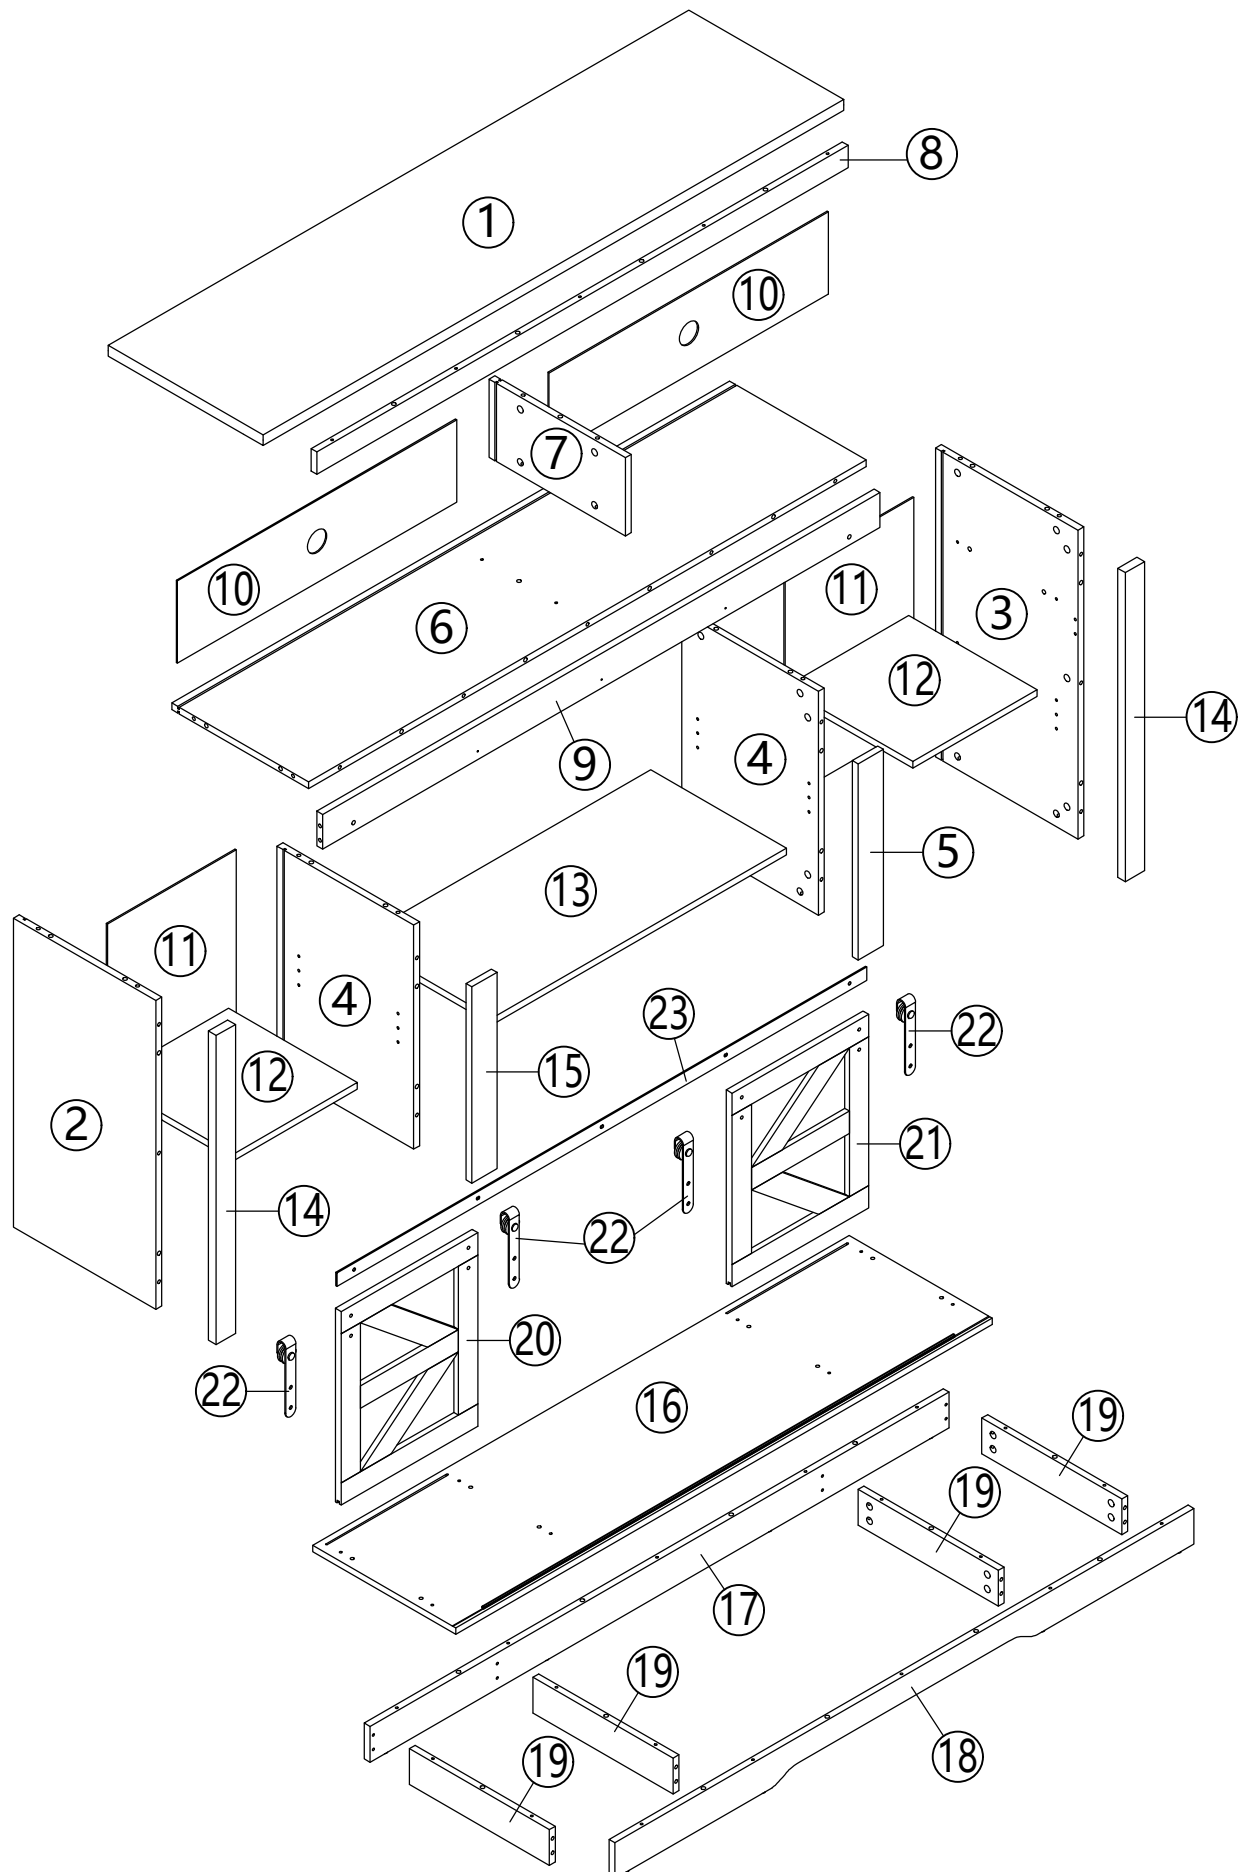


HARDWARE PART LIST






(A) X59+3  $\phi 6 \times 35$	(B) X59+3  $\phi 15 \times 11.5$	(C) X50+3  $\phi 8 \times 30$	(D) X23+2  $\phi 4 \times 50$
(E) X3+1  $\phi 4 \times 35$	(F) X8  $M6 \times 25$	(G) X8  $M6 \times 10$	(H) X2 
(I) X5  $\phi 10 \times 19.5$	(J) X12+1  $\phi 5 \times 16$	(K) X2+1  $M6 \times 35$	(L) X16+1  $\phi 3 \times 14$
(M) X1  $\phi 4 \times 100(60)$			

Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

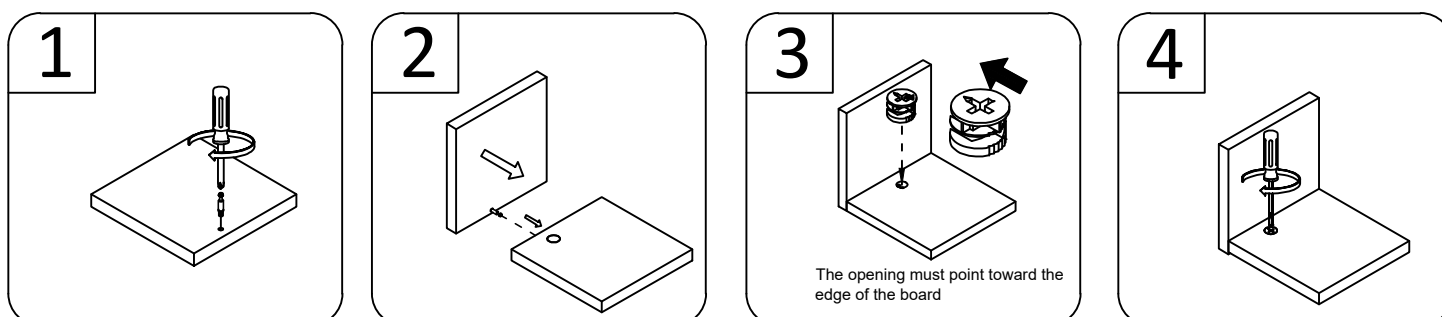

STEP 1

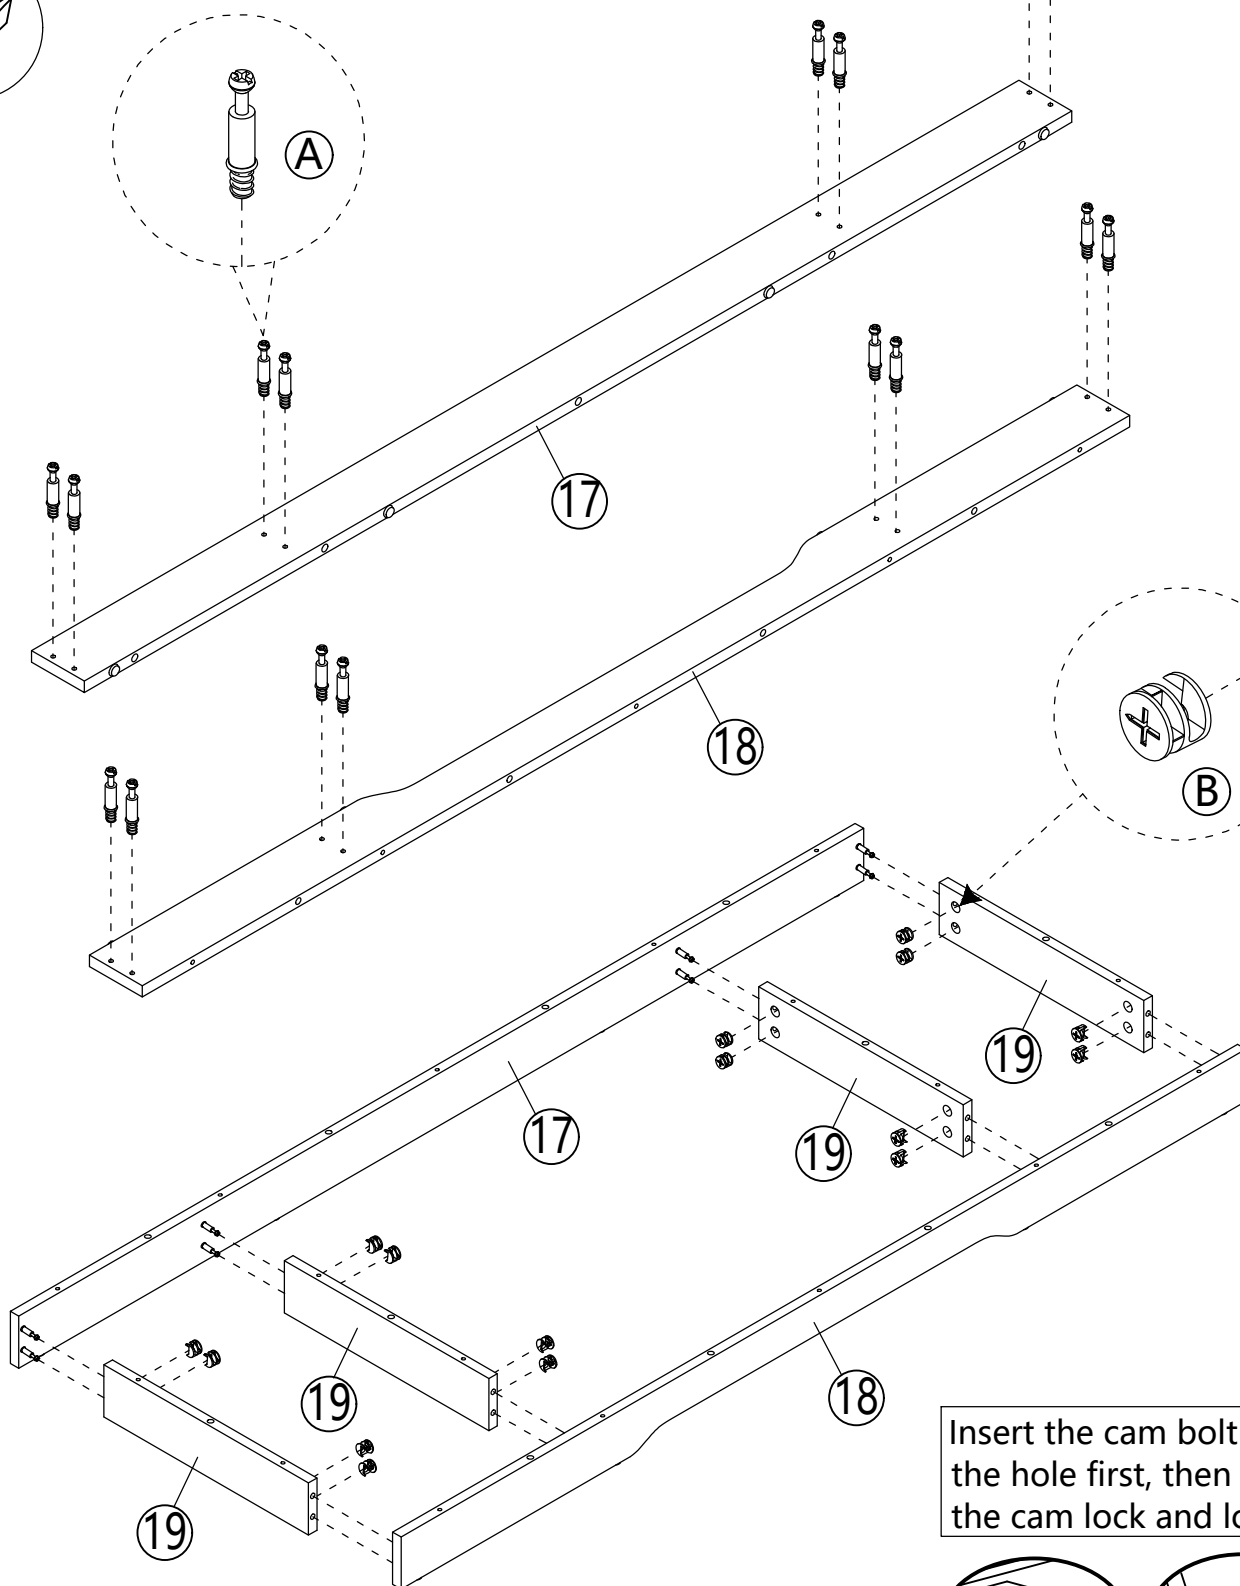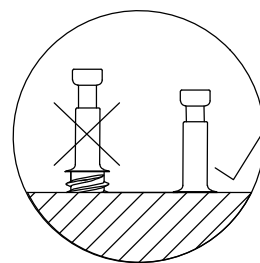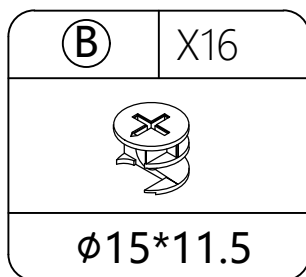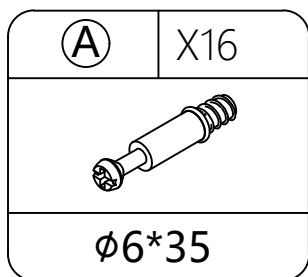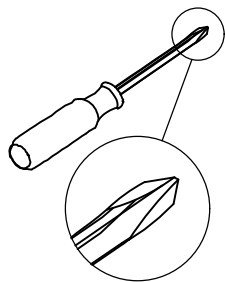



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

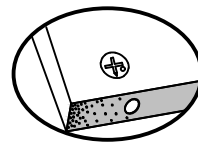


Proper orientation of CAM LOCK

STEP 2



Ⓒ	X12
	
ø8*30	

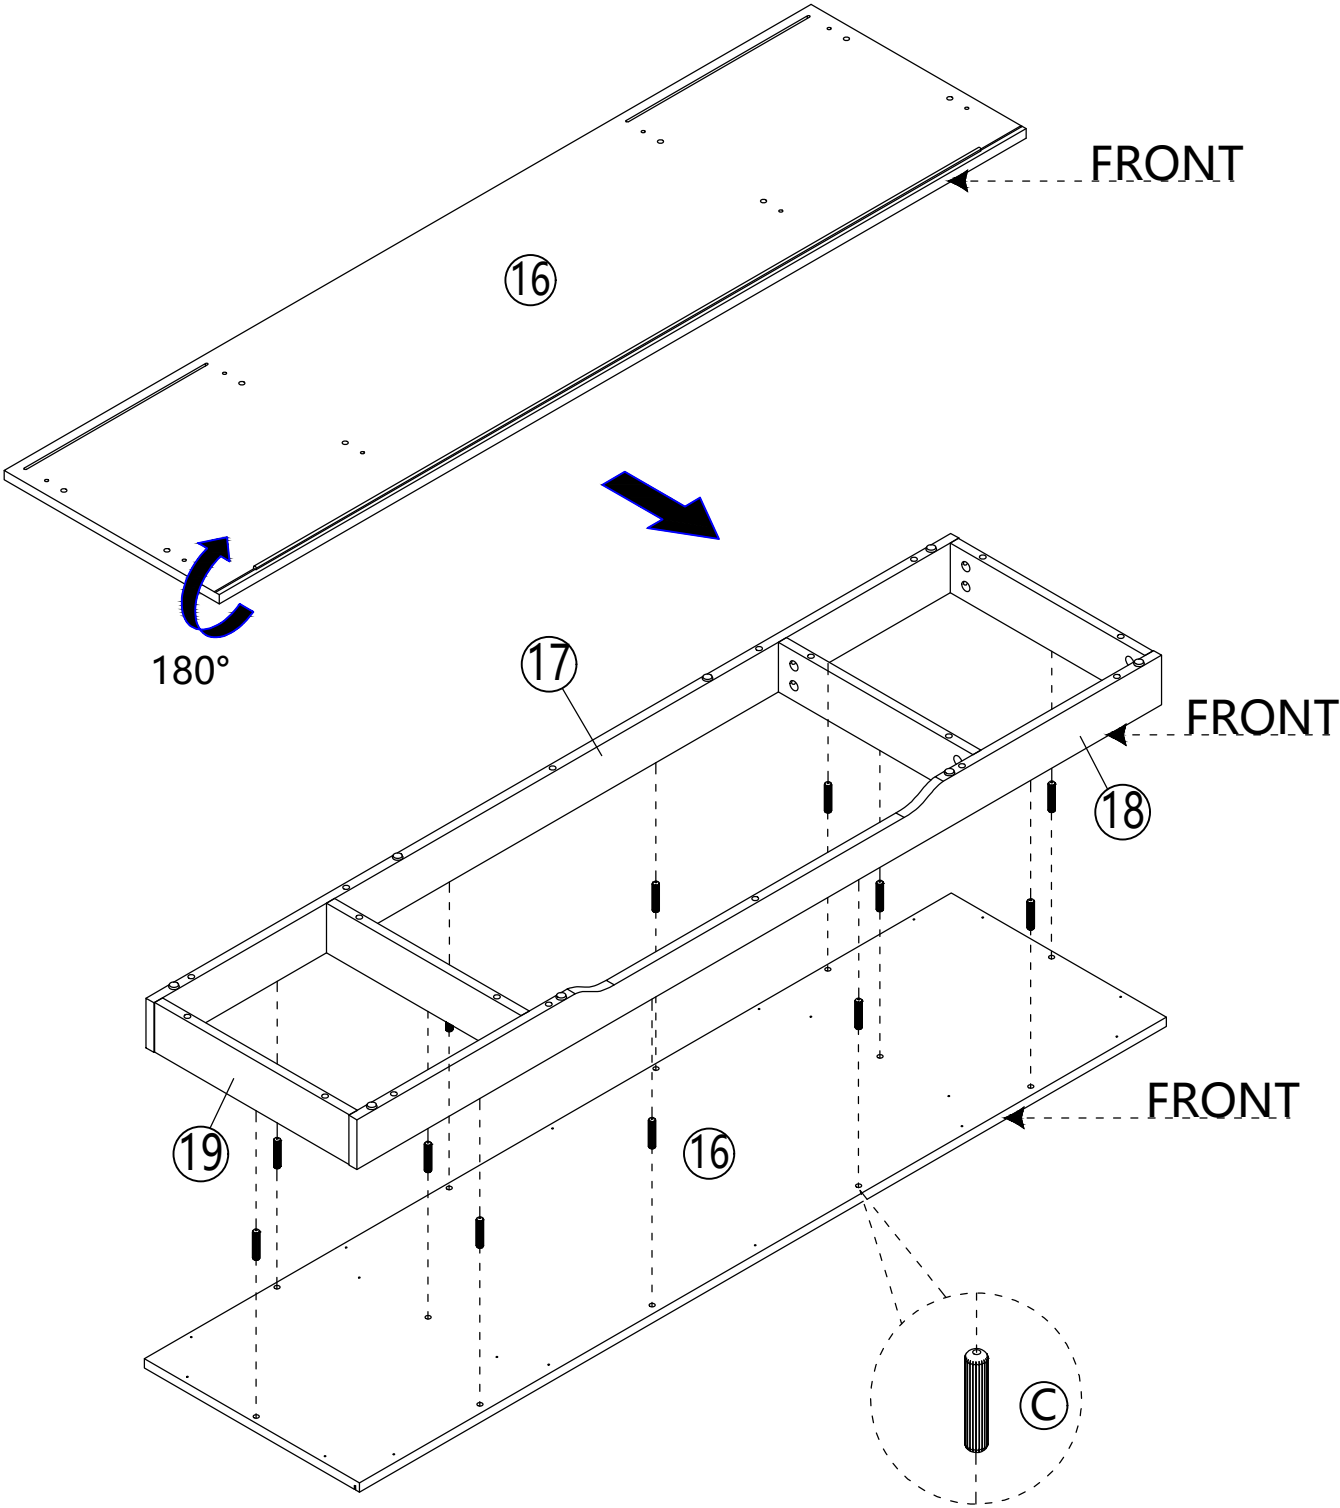


STEP 3


(A)	X8
	
ø6*35	



(D)	X18
	
ø4*50	

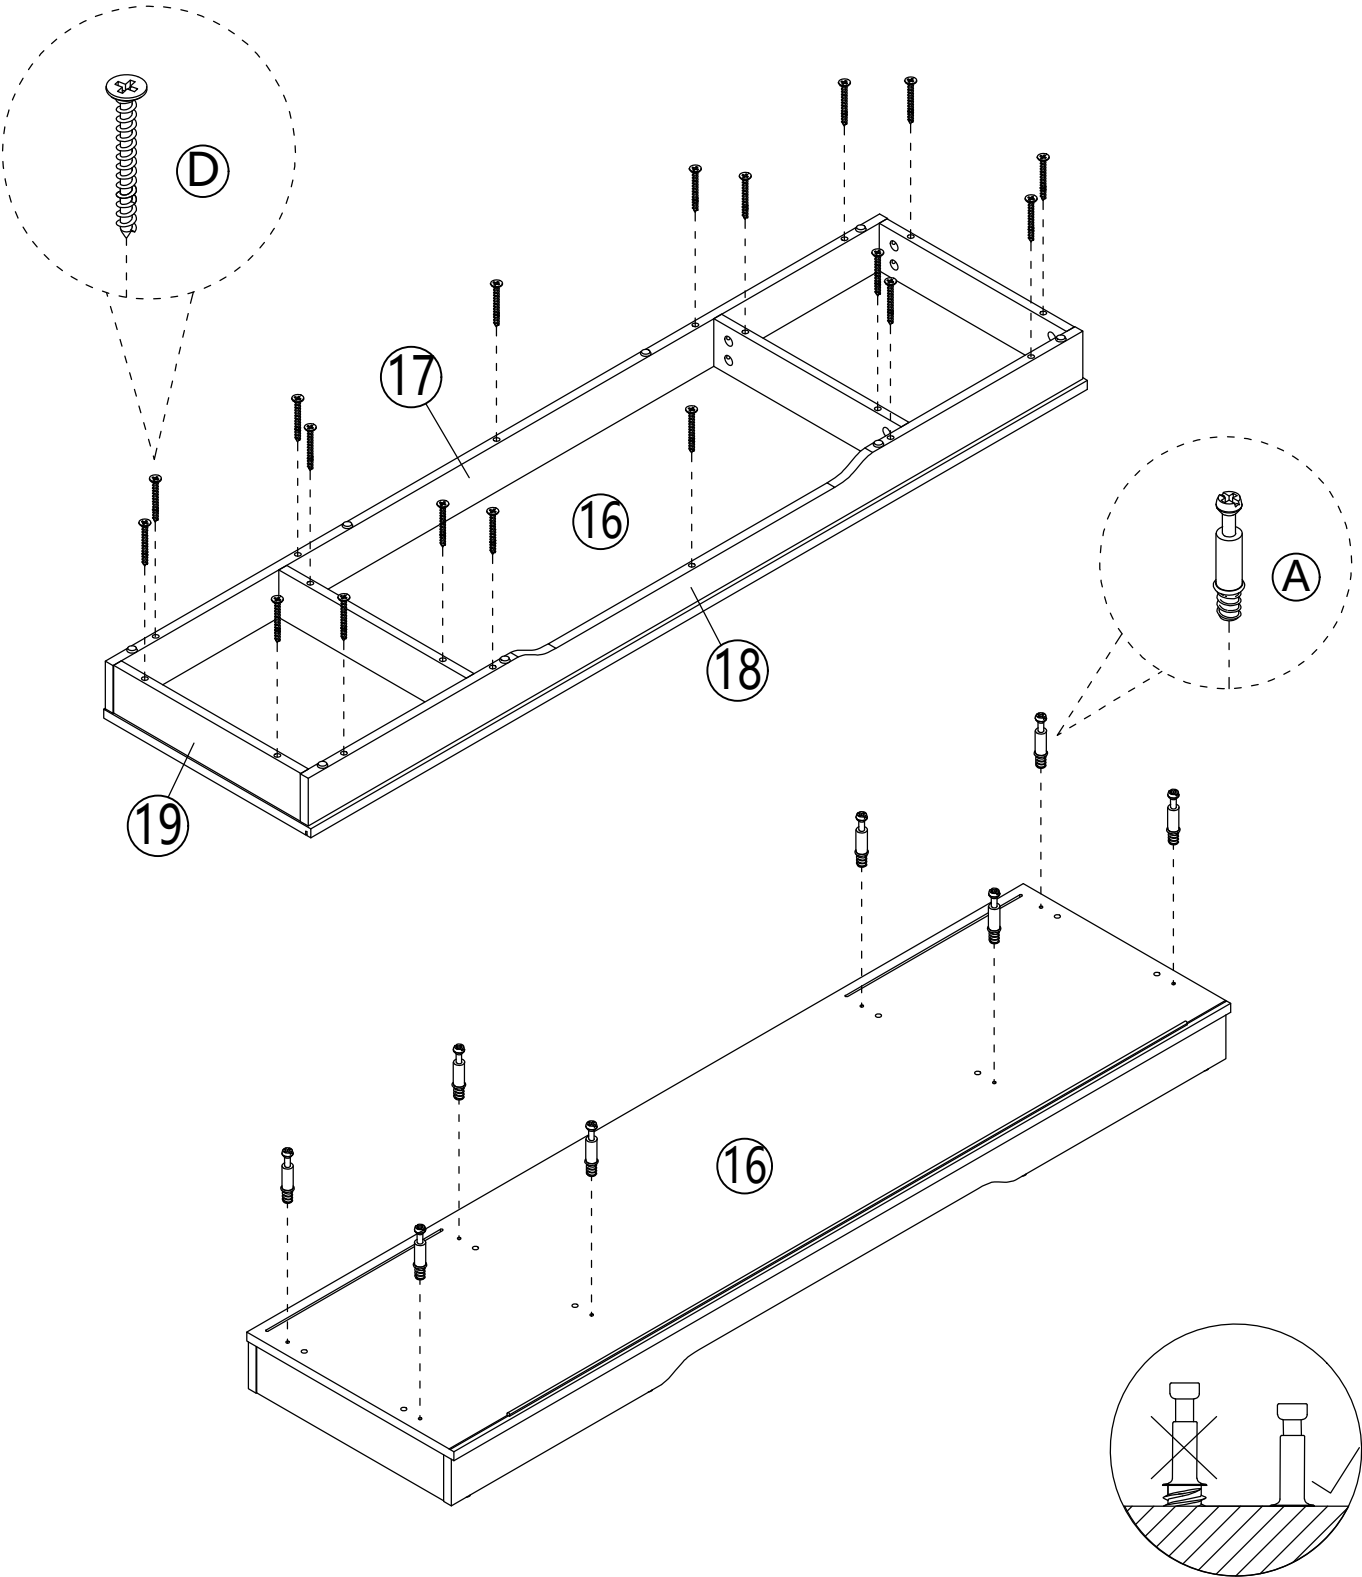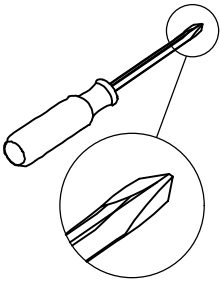


STEP 4

(A)	X6
	
ø6*35	


(C)	X8
	
ø8*30	

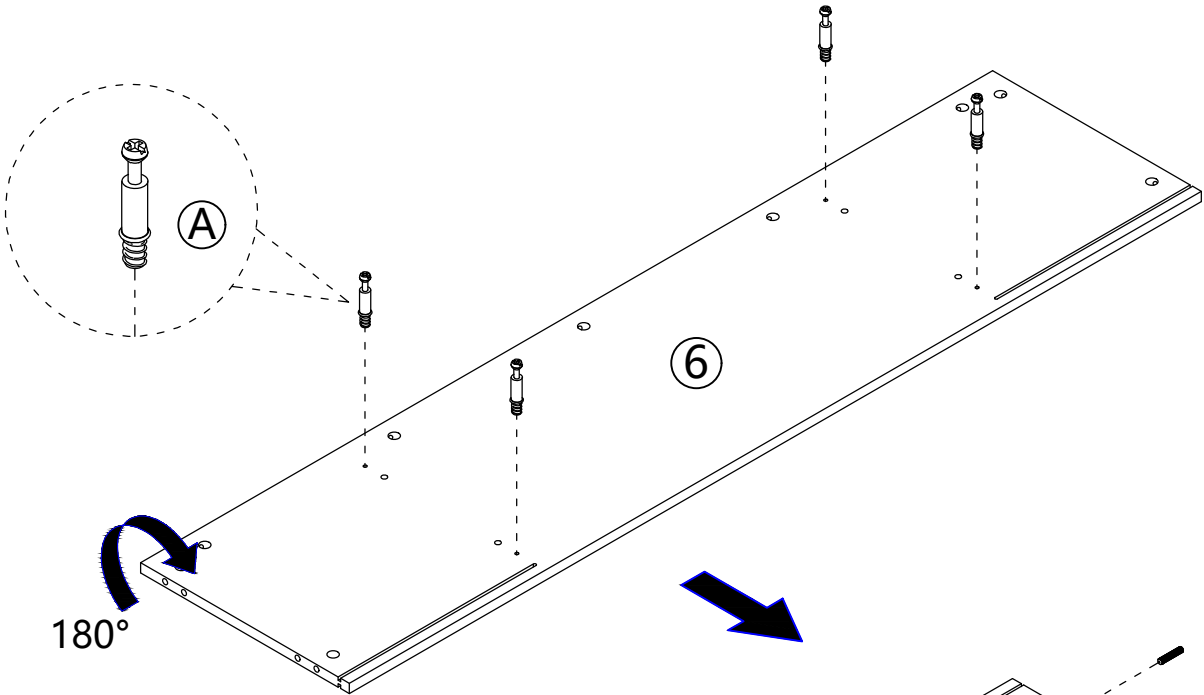
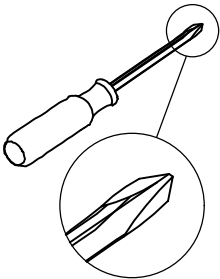


180°

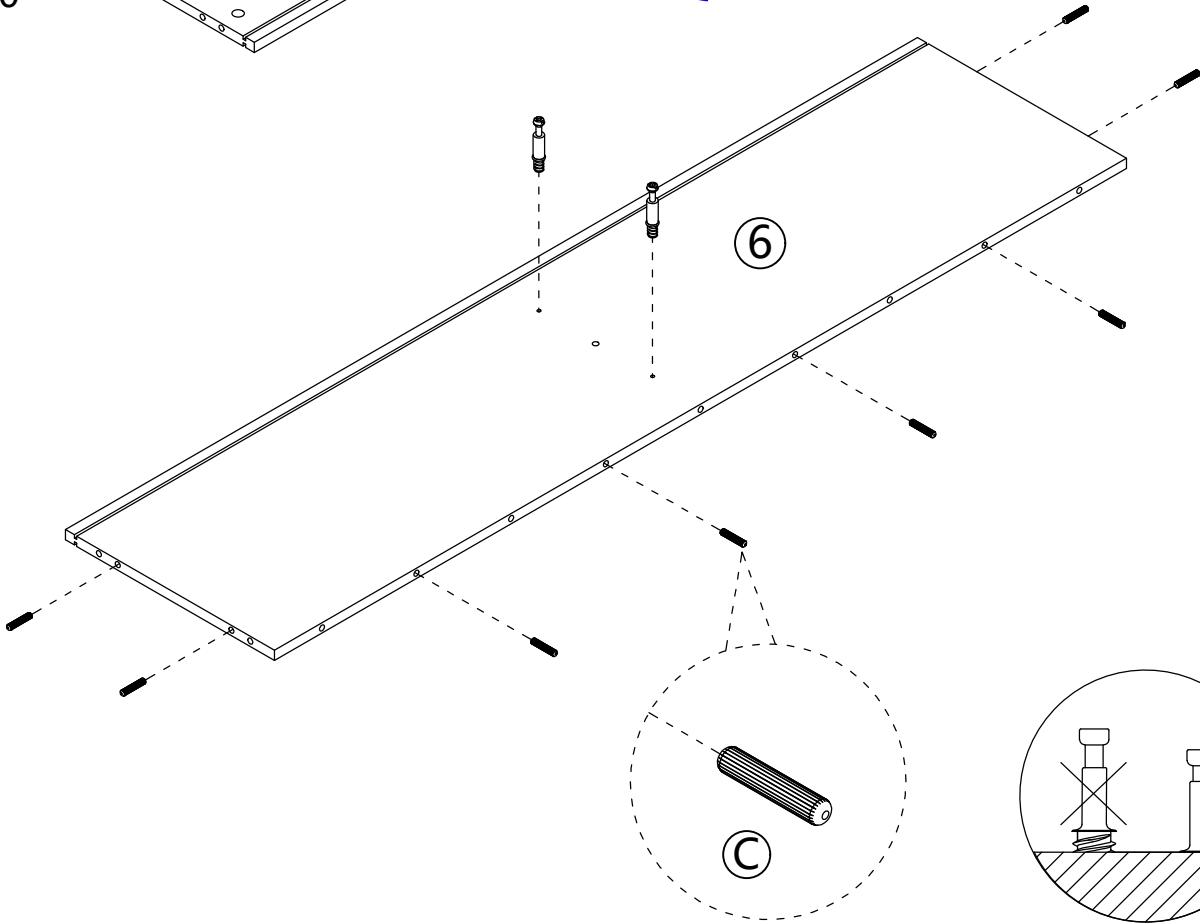





STEP 5

Ⓒ	X14
	
ø8*30	


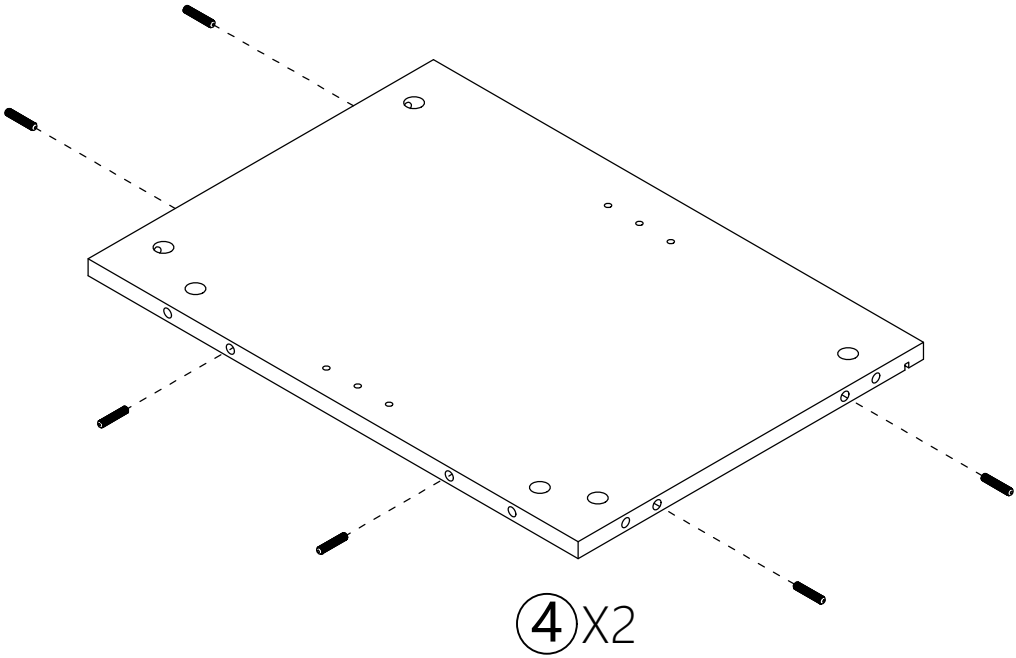
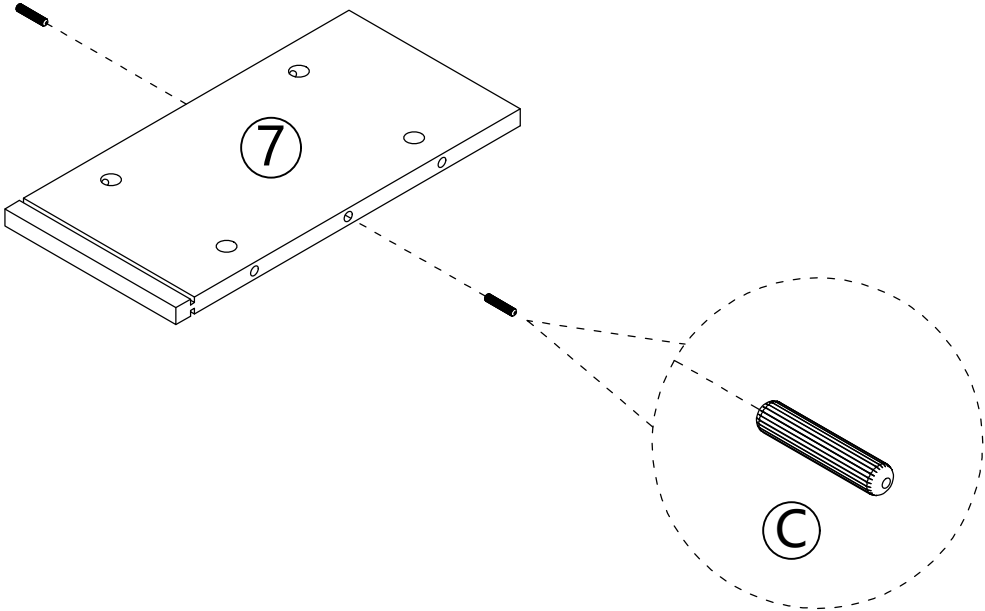


STEP 6


(A)	X9
	
ø6*35	

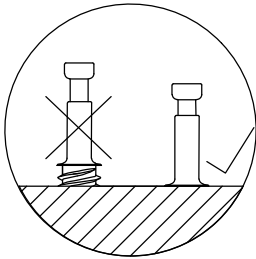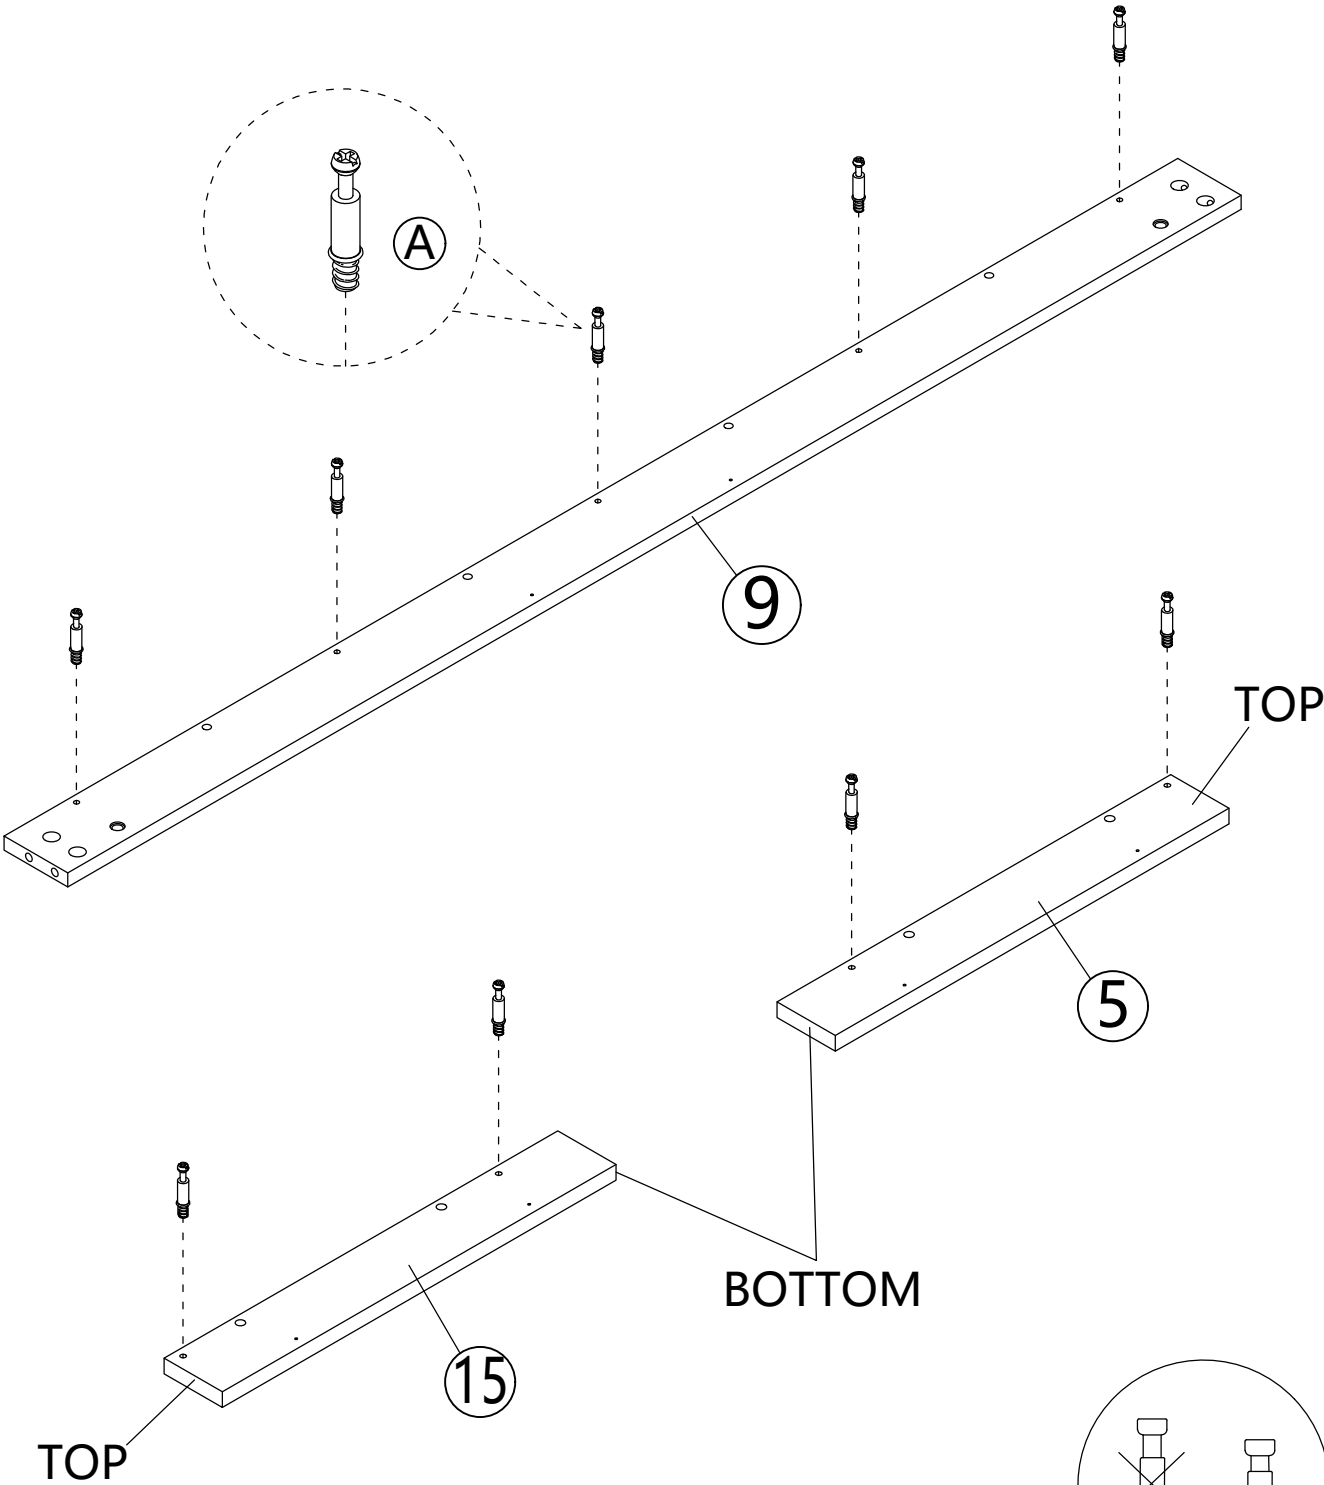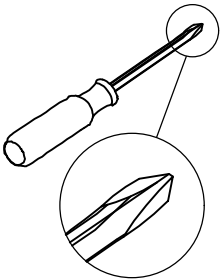

STEP 7

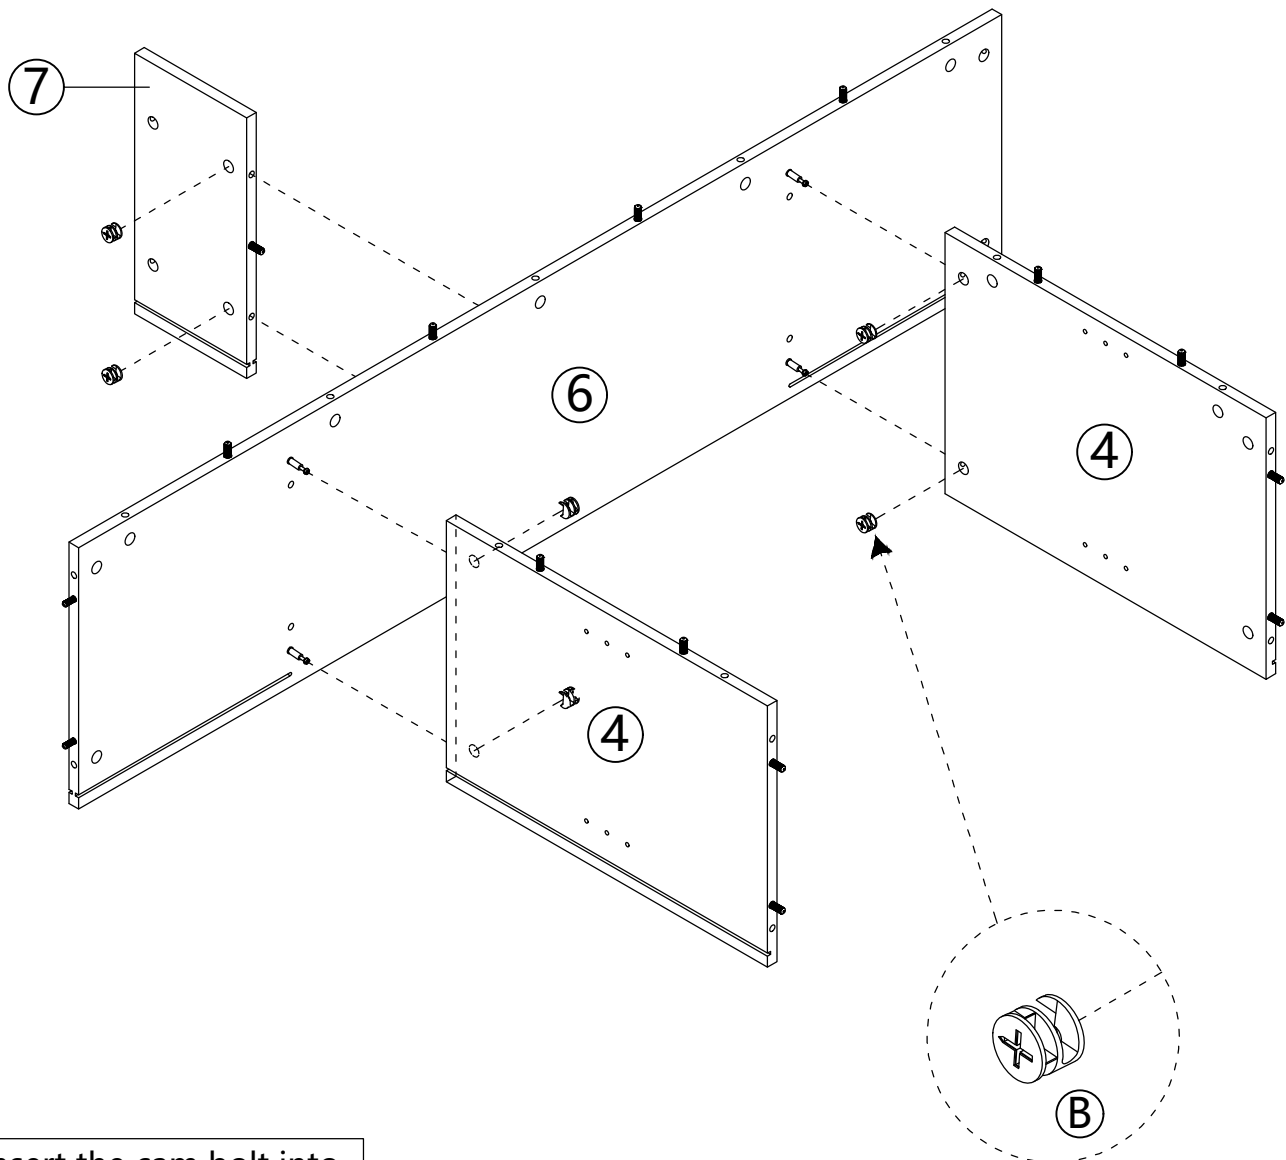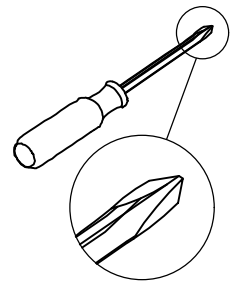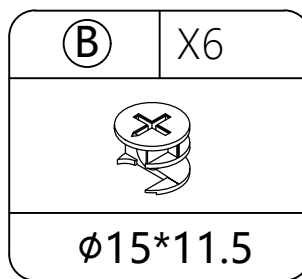



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

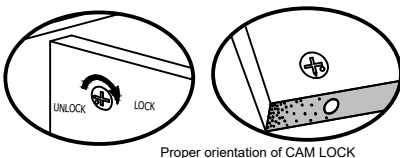


Proper orientation of CAM LOCK

STEP 8

(B)	X9
	
ø15*11.5	

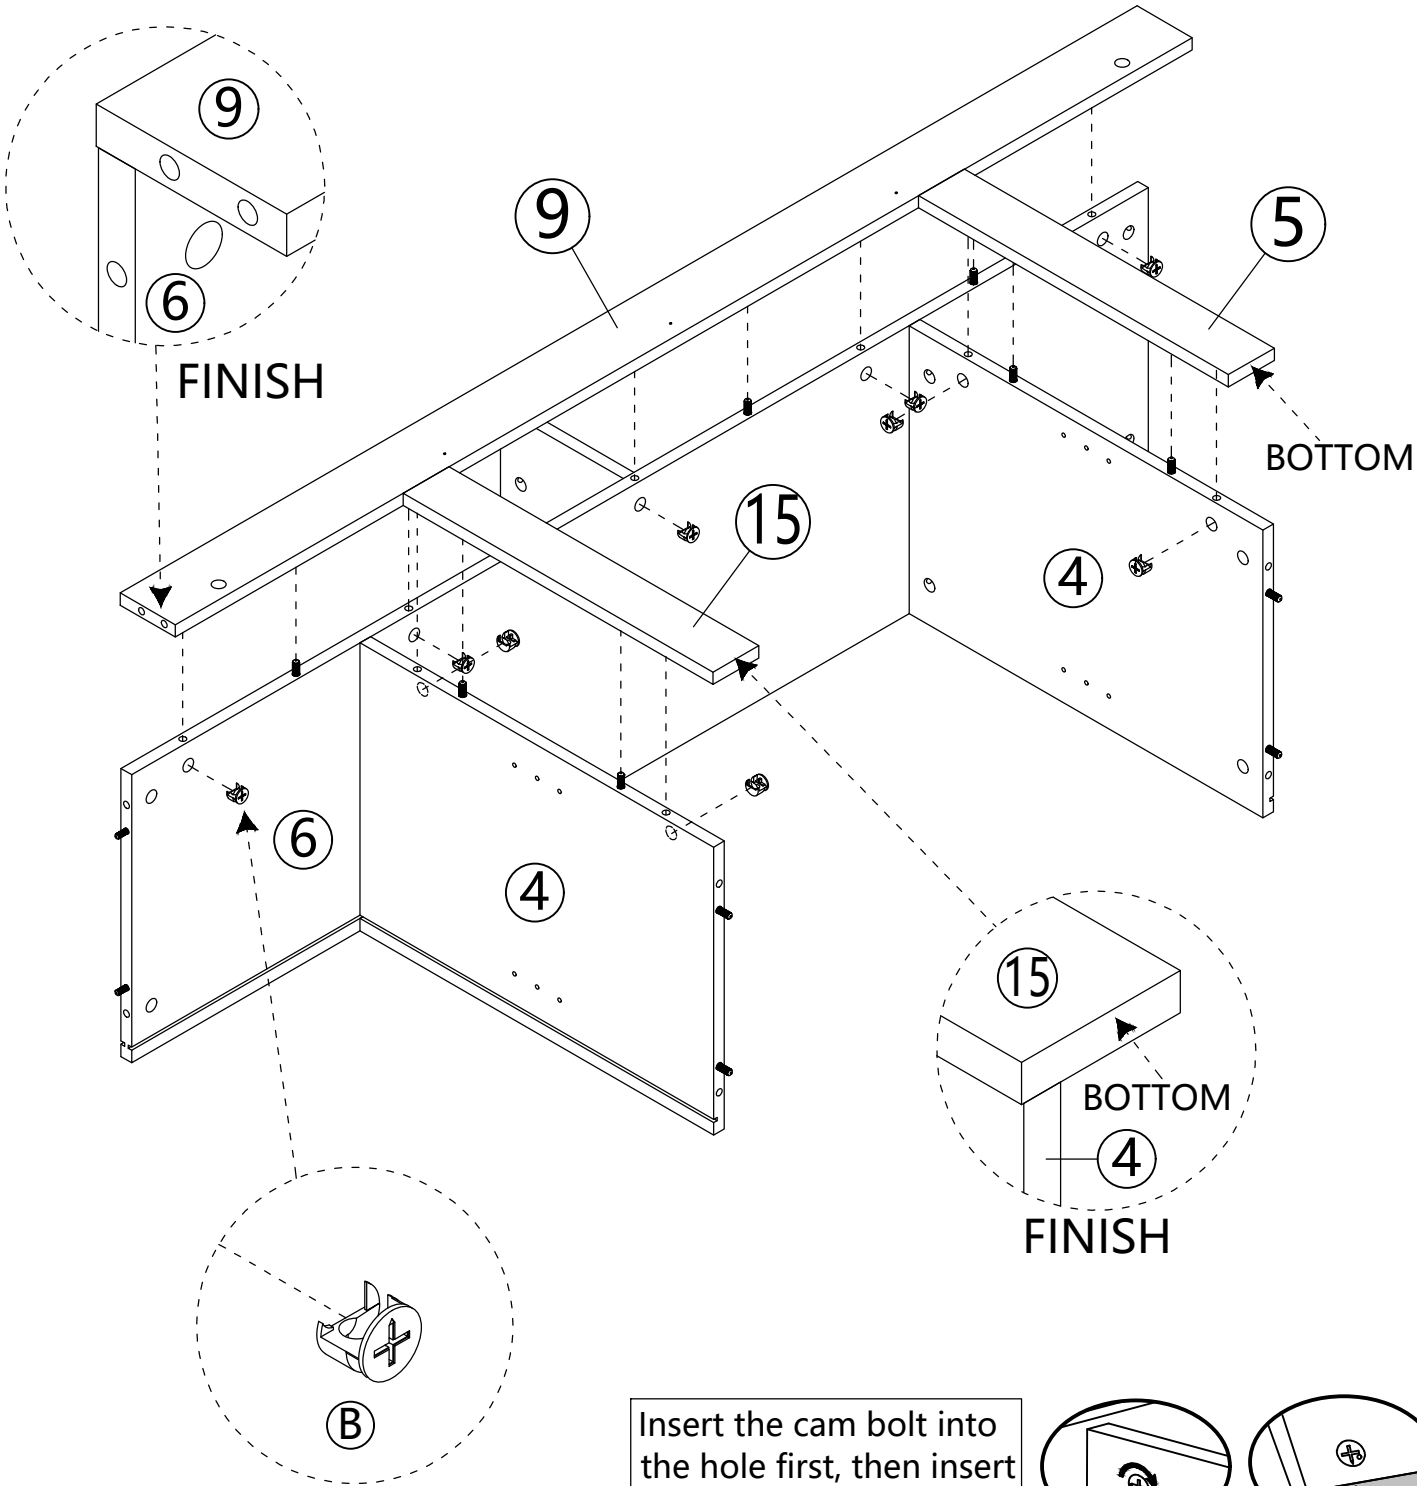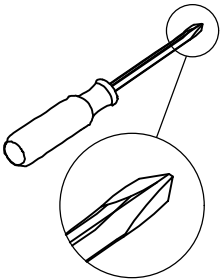



Insert the cam bolt into the hole first, then insert the cam lock and lock it.


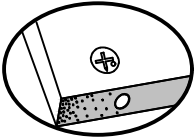


Proper orientation of CAM LOCK

STEP 9




A	X14
	
ø6*35	

C	X12
	
ø8*30	

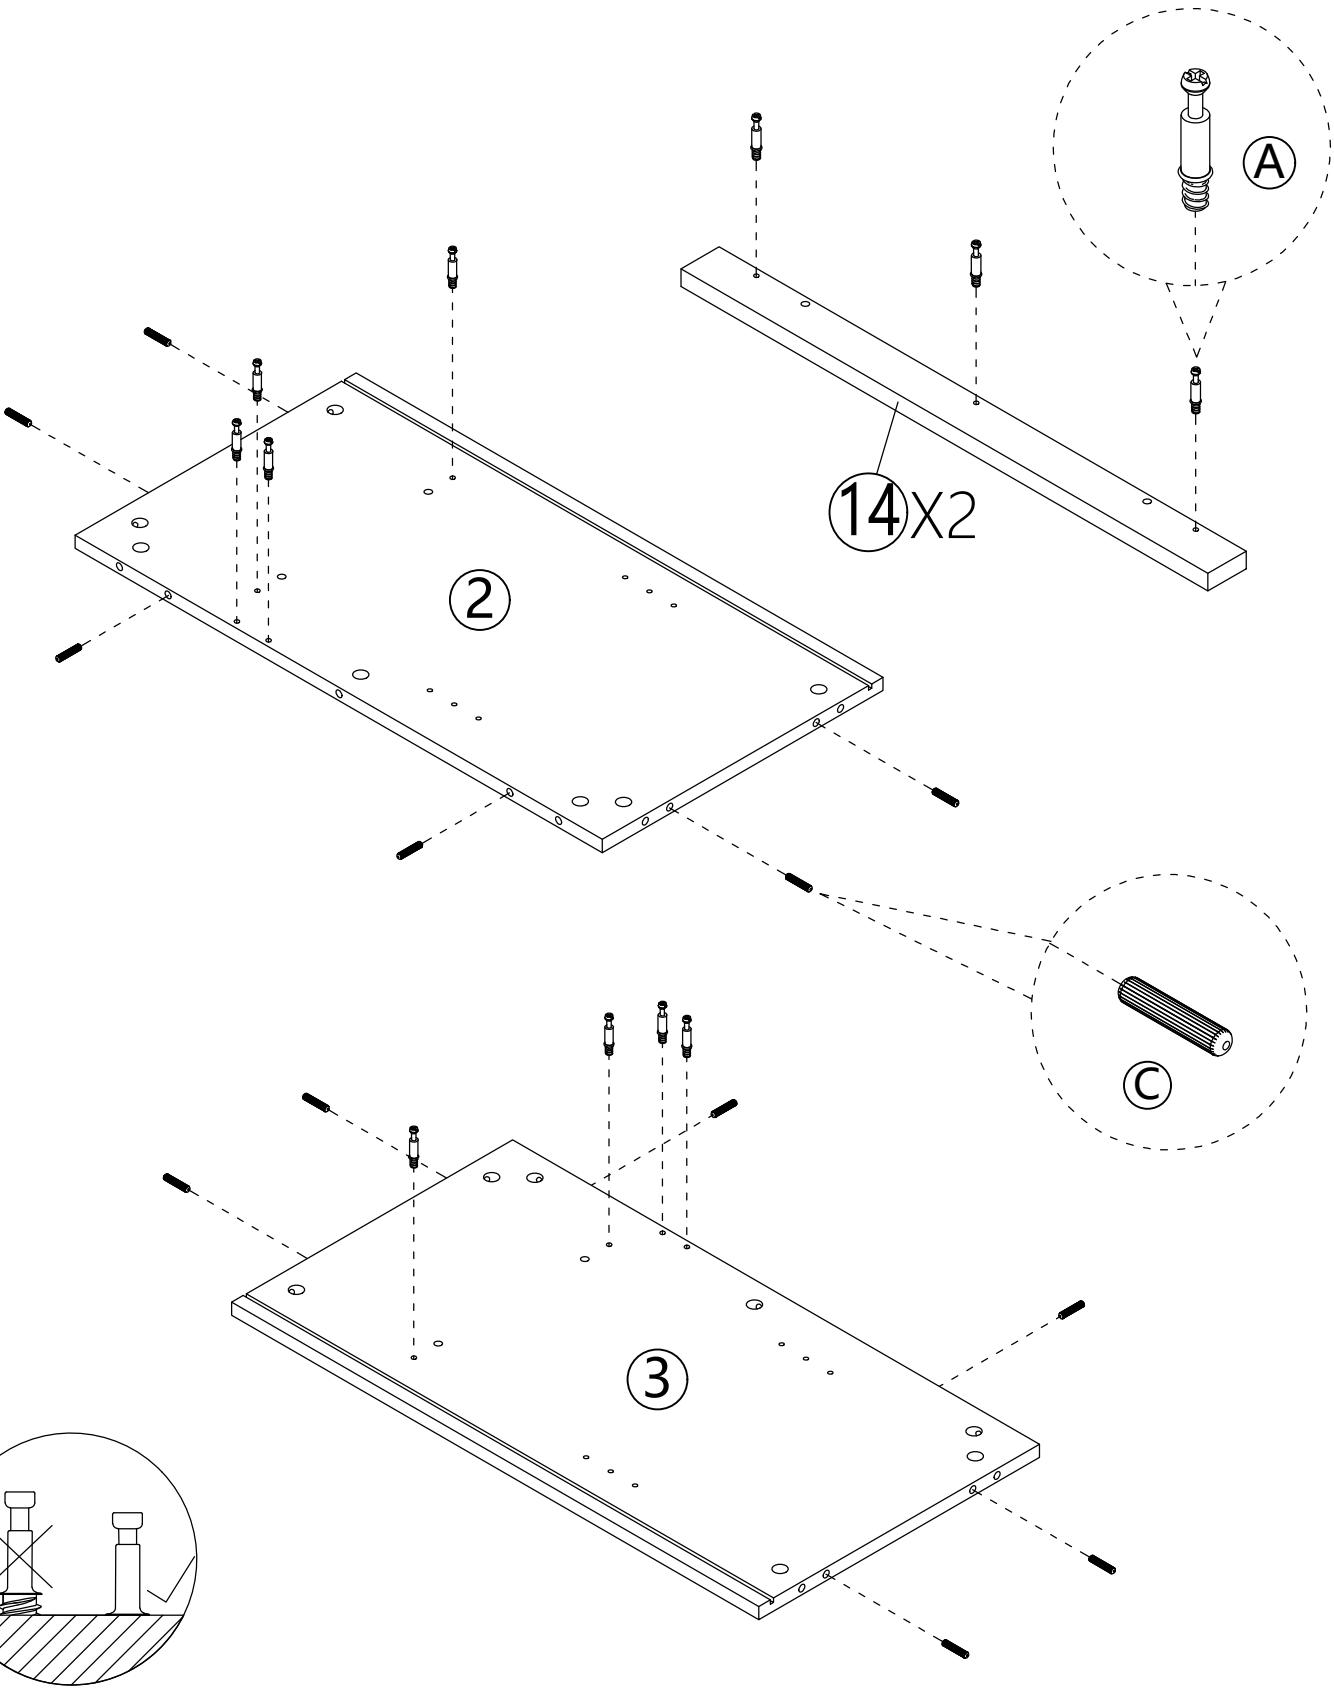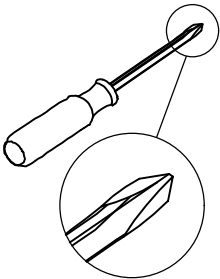


STEP 10

Ⓑ	X6
	
ø15*11.5	

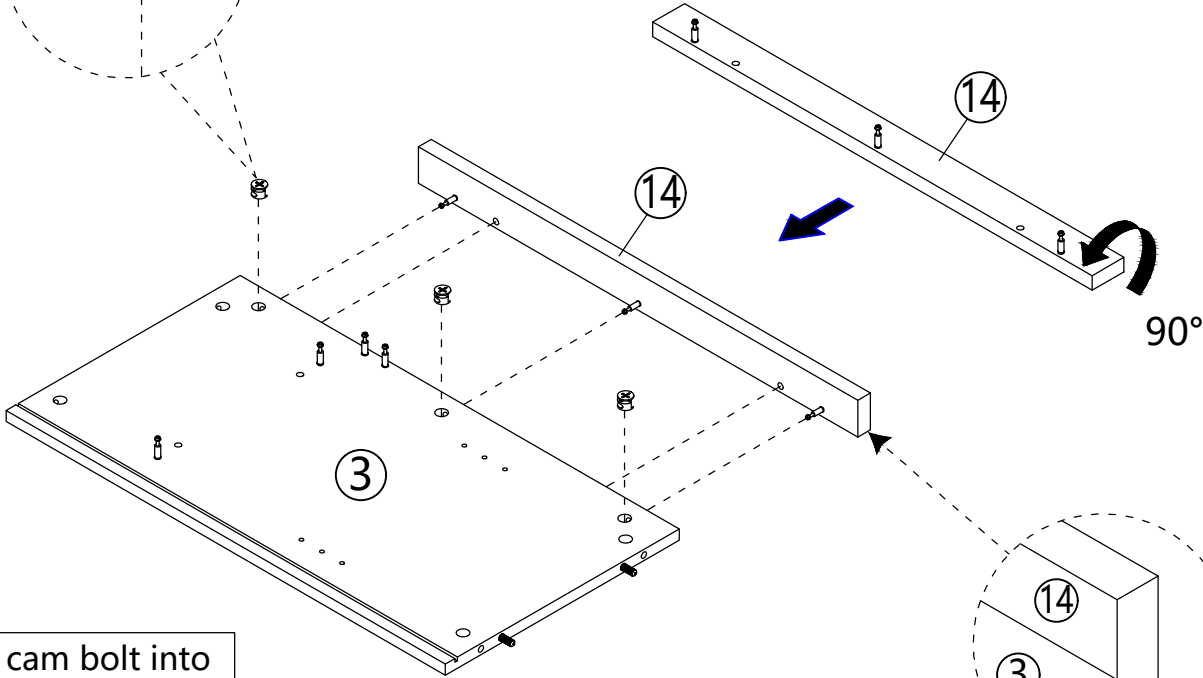
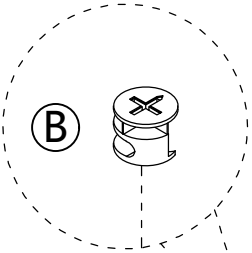
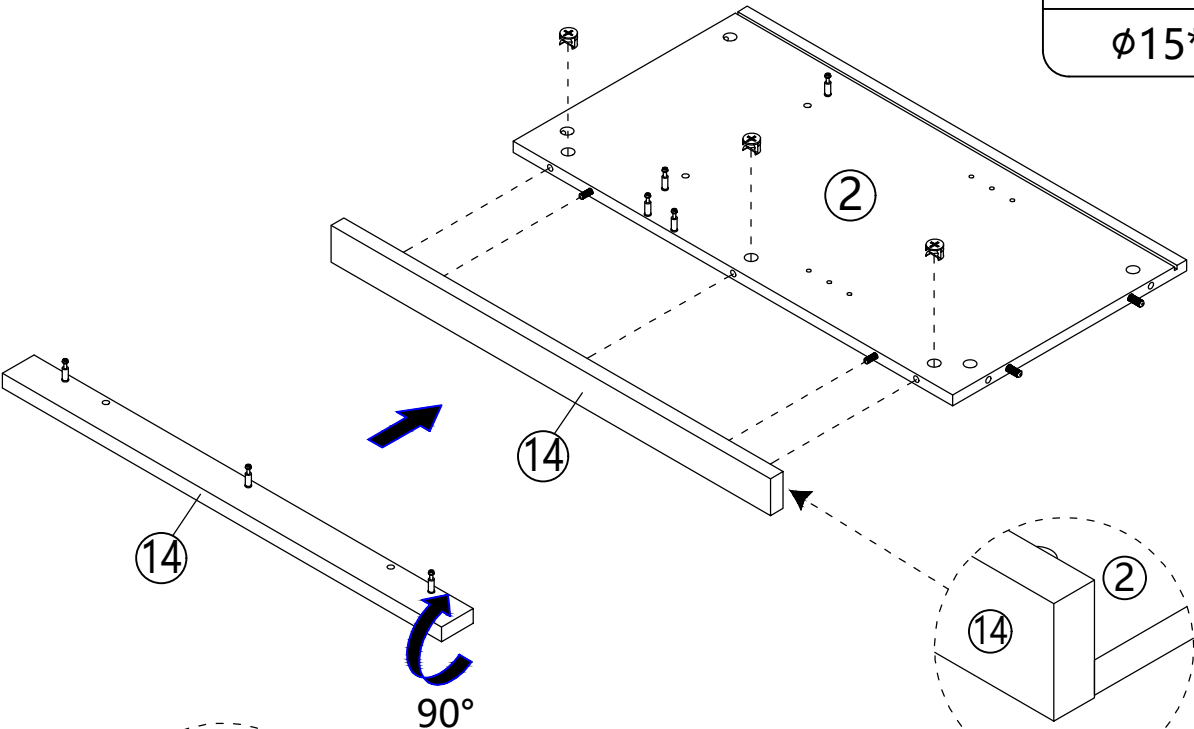


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

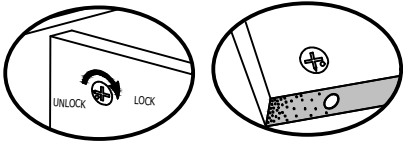


Proper orientation of CAM LOCK

STEP 11

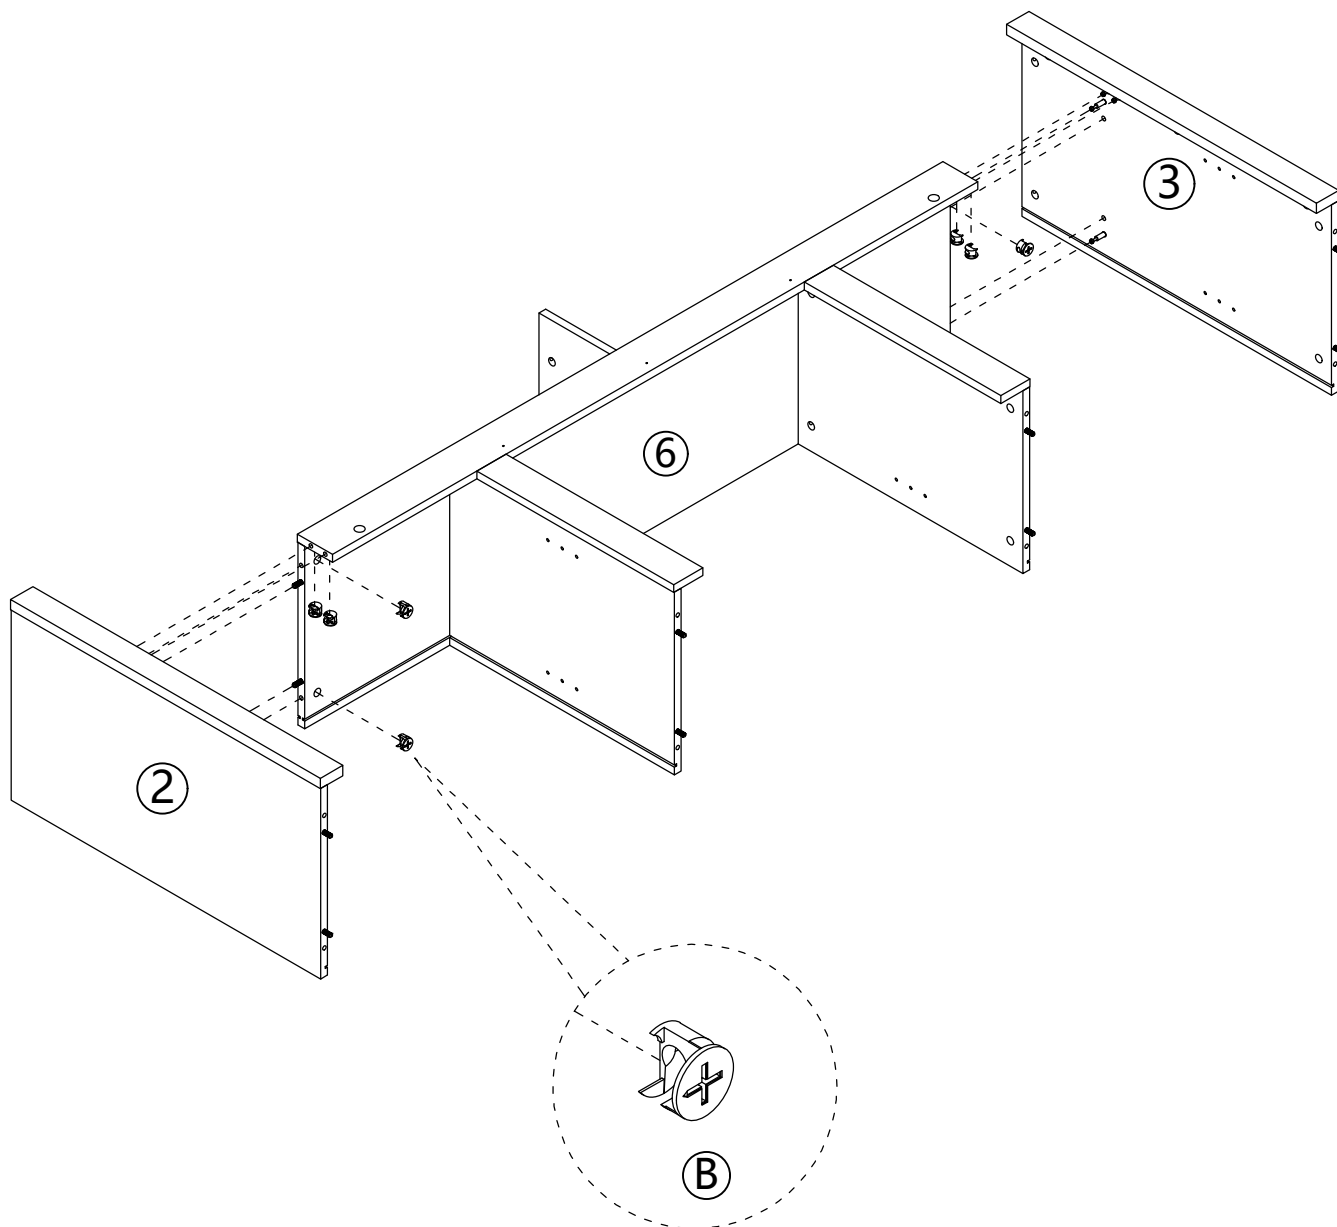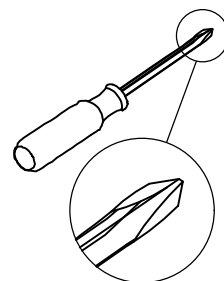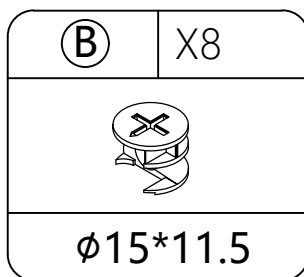


Insert the cam bolt into the hole first, then insert the cam lock and lock it.


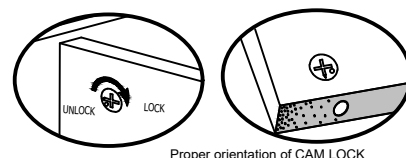


Proper orientation of CAM LOCK


STEP 12

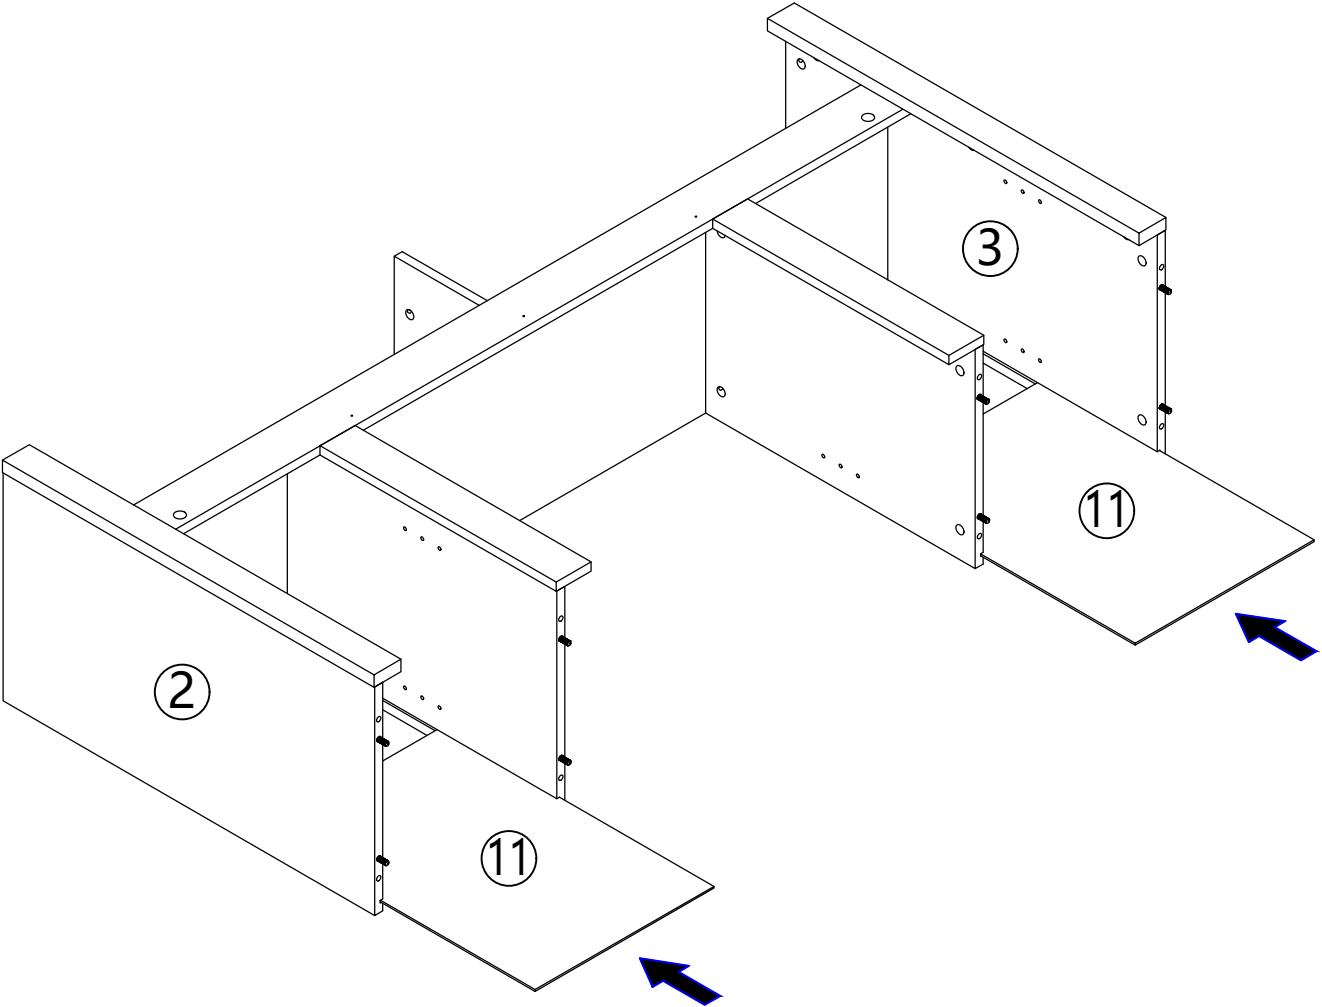


STEP 13

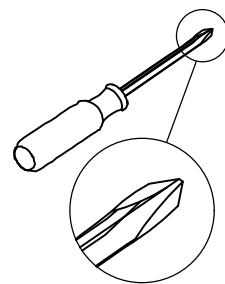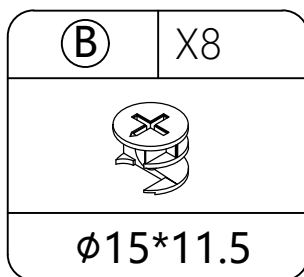

Place one item underneath the product to make the product stable and easy to install

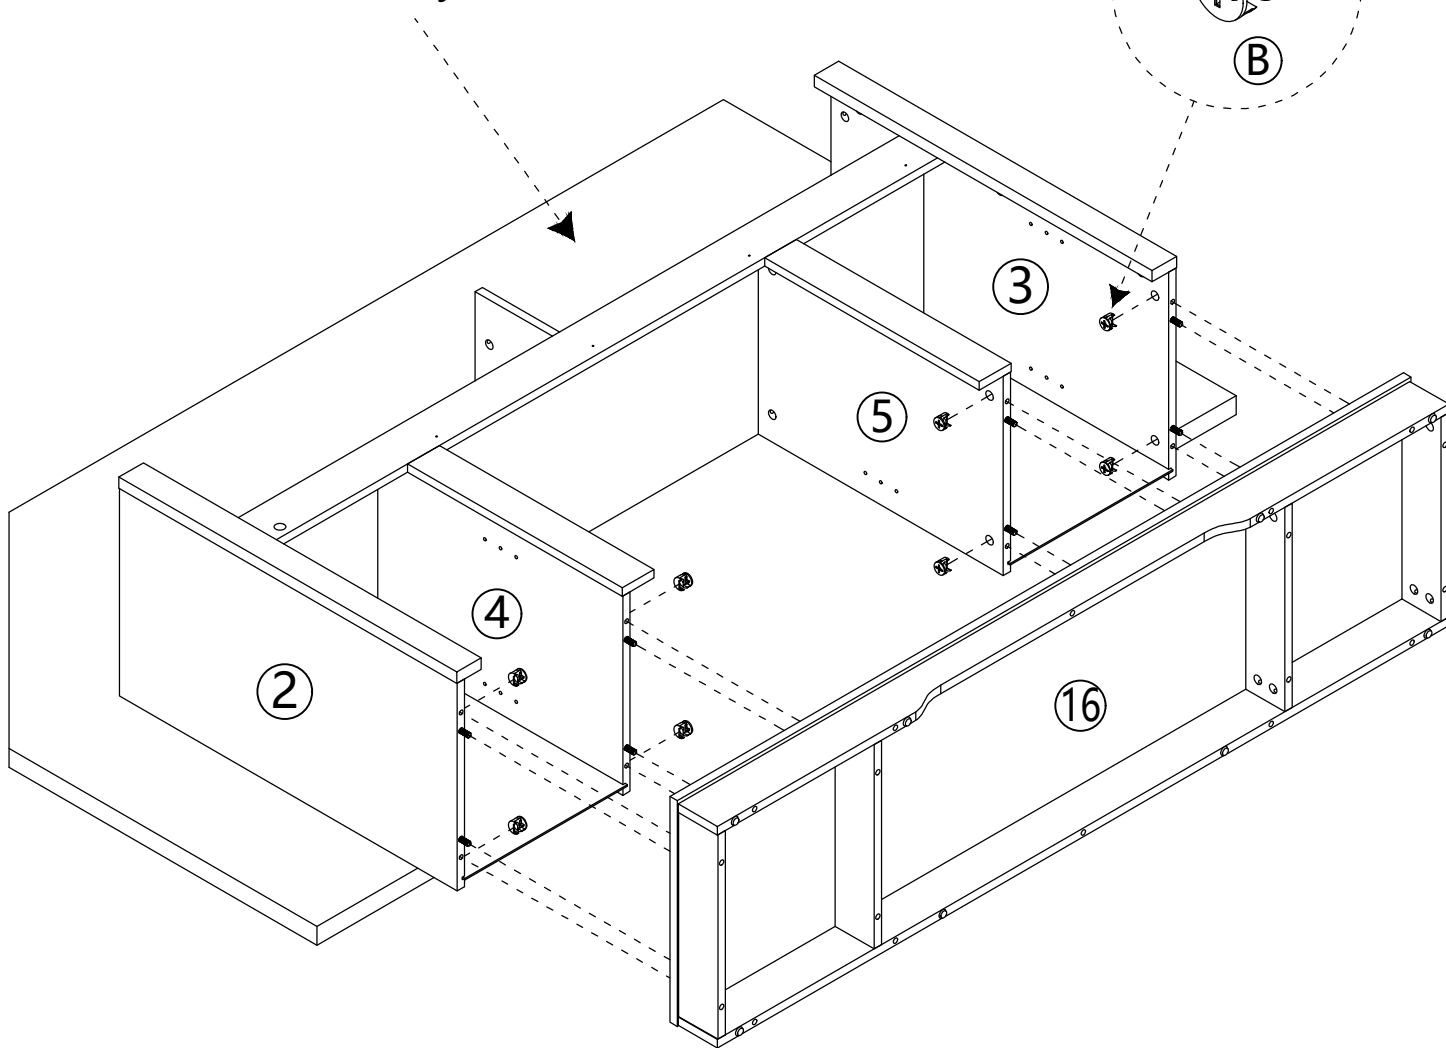


Insert the cam bolt into the hole first, then insert the cam lock and lock it.


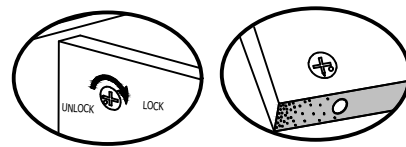




Proper orientation of CAM LOCK

STEP 14



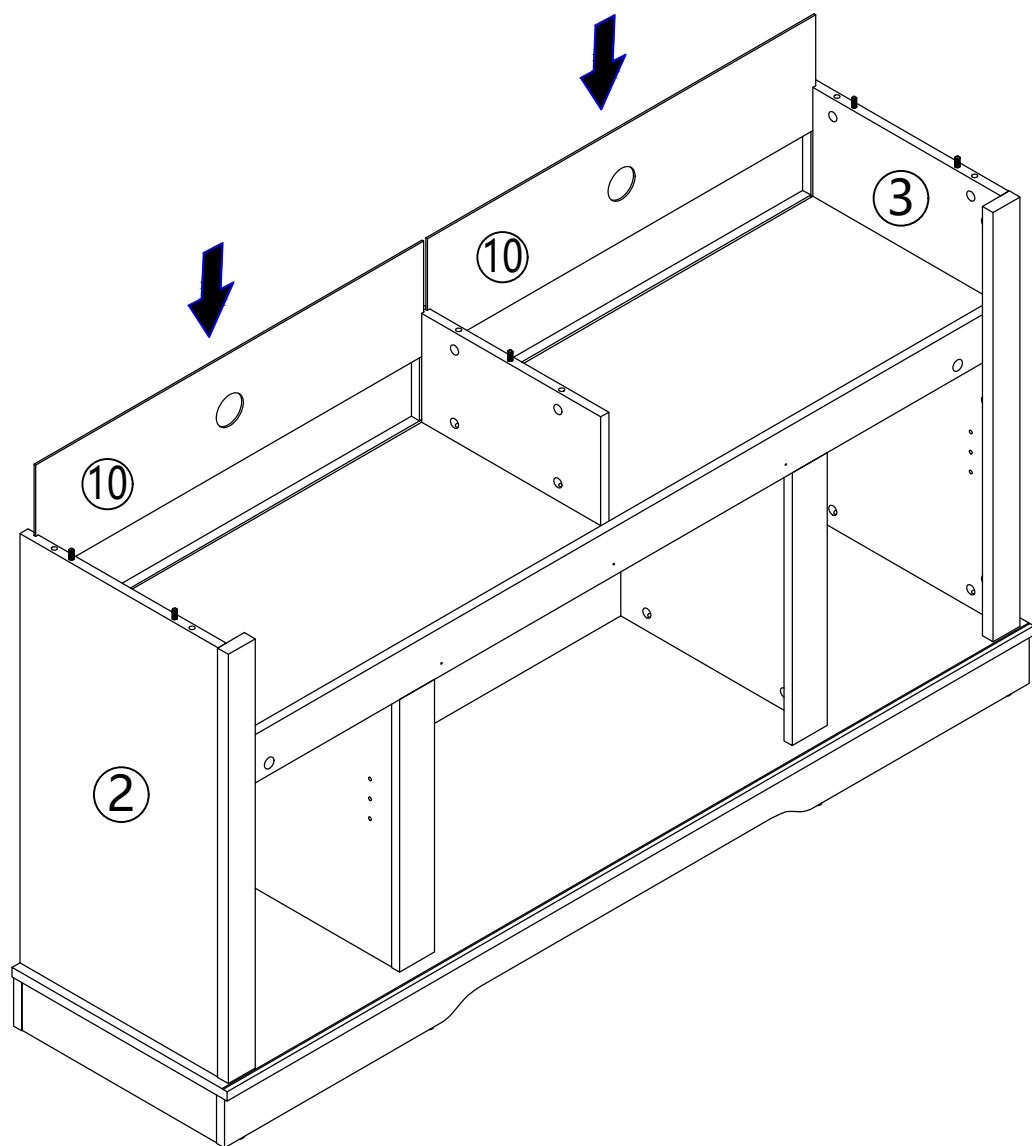


STEP 15


(A)	X6	(C)	X4	(D)	X5
					
ø6*35		ø8*30		ø4*50	

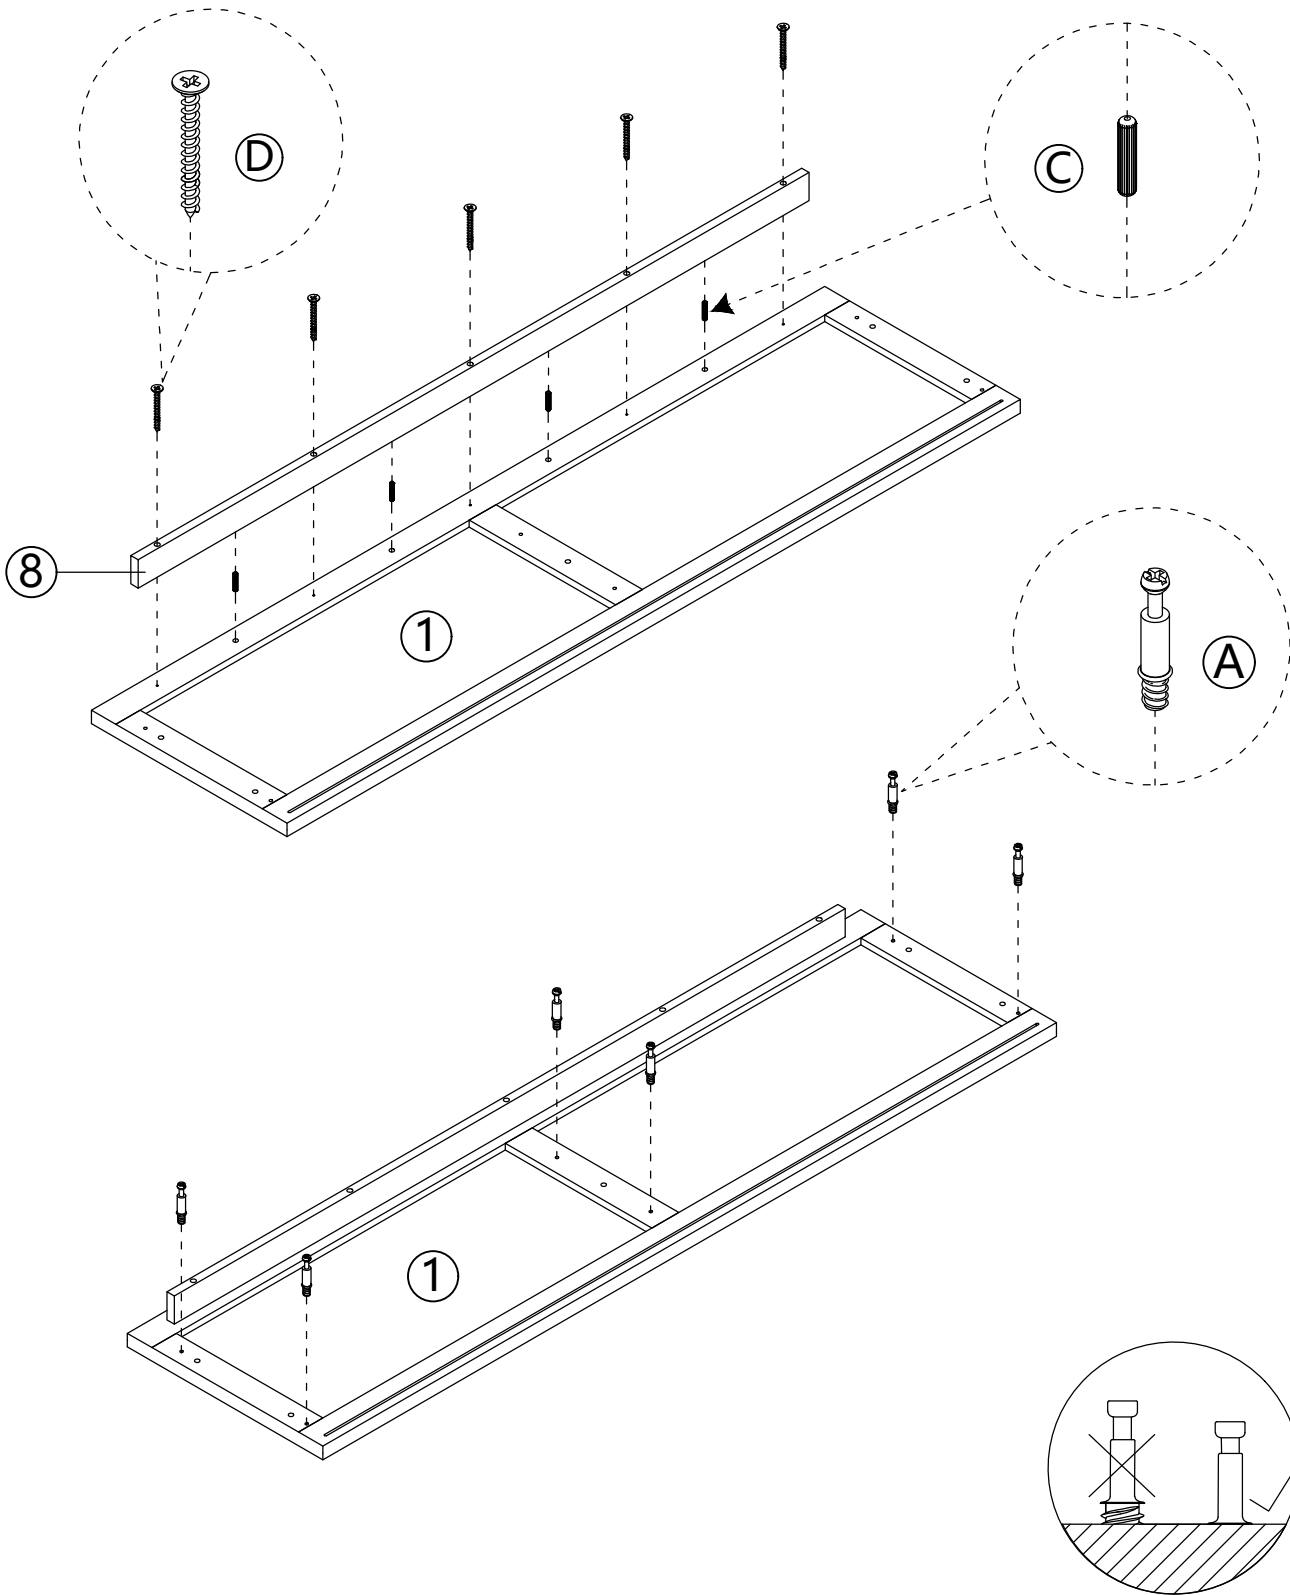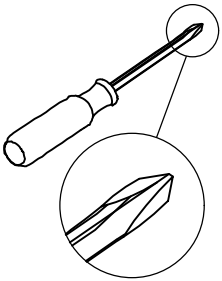

STEP 16

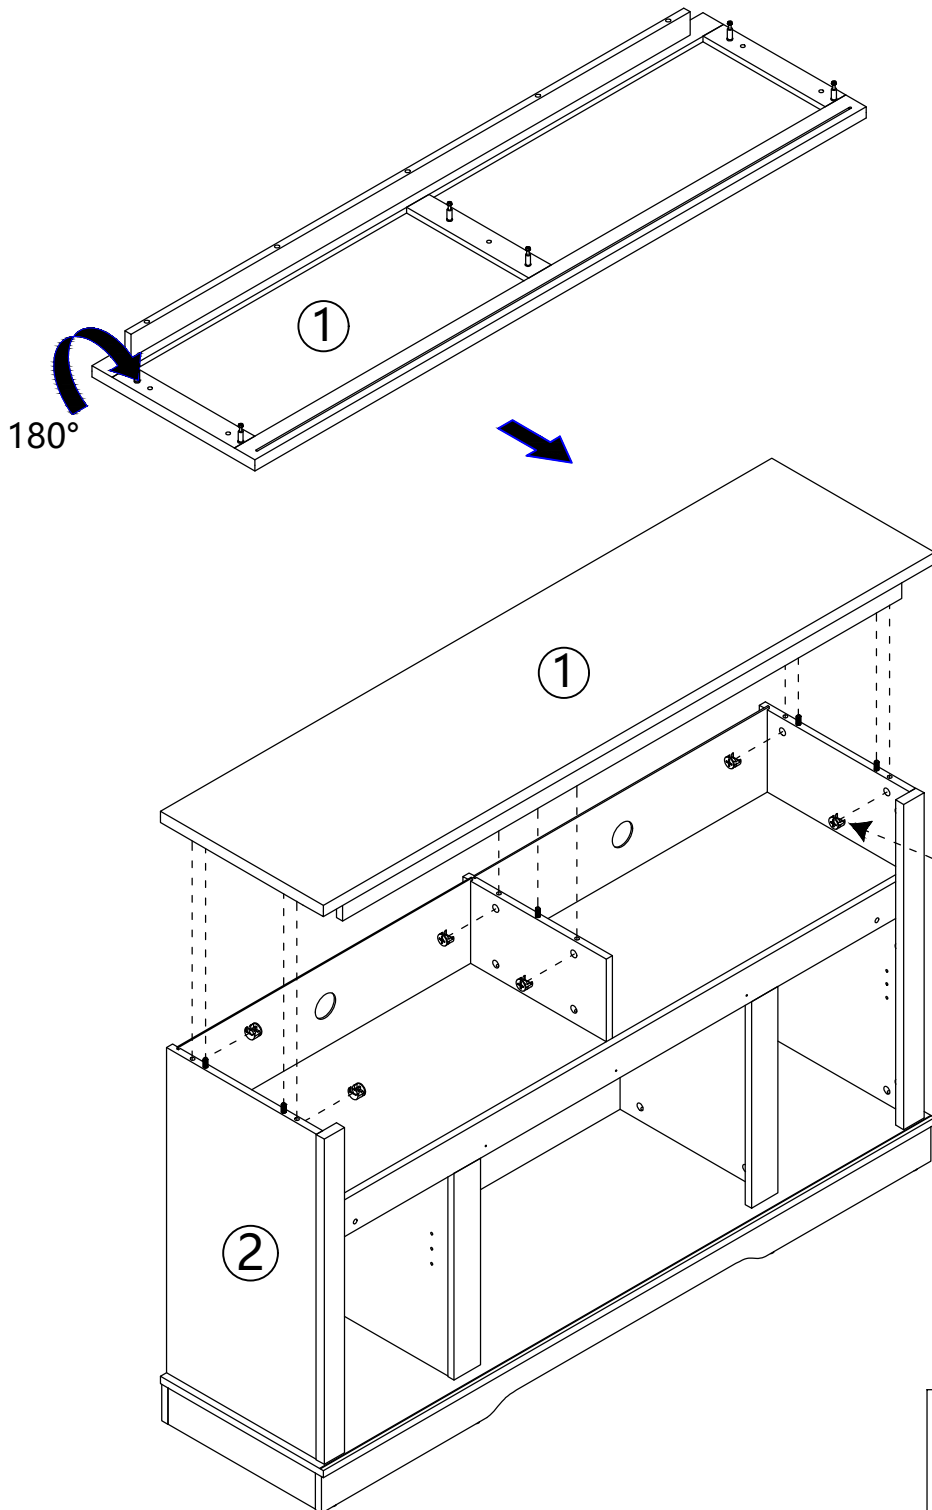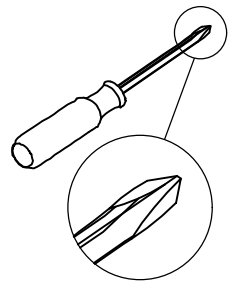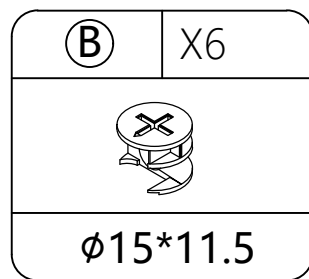

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

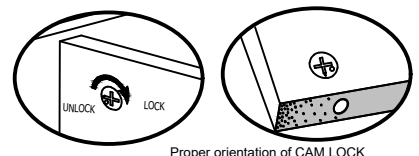


STEP 17





Ⓔ	X3
	
ø4*35	

Ⓛ	X5
	
ø10*19.5	

Ⓚ	X2
	
M6*35	


Ⓜ	X1
	
ø4*100(60)	

Ⓜ

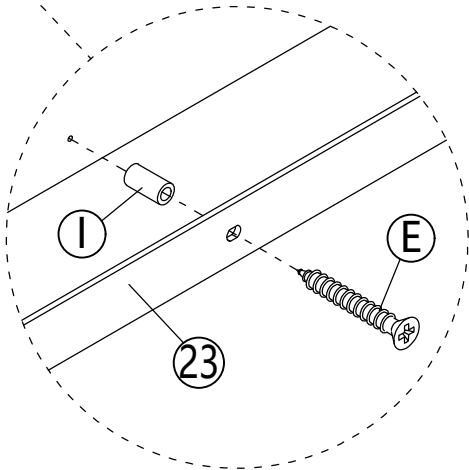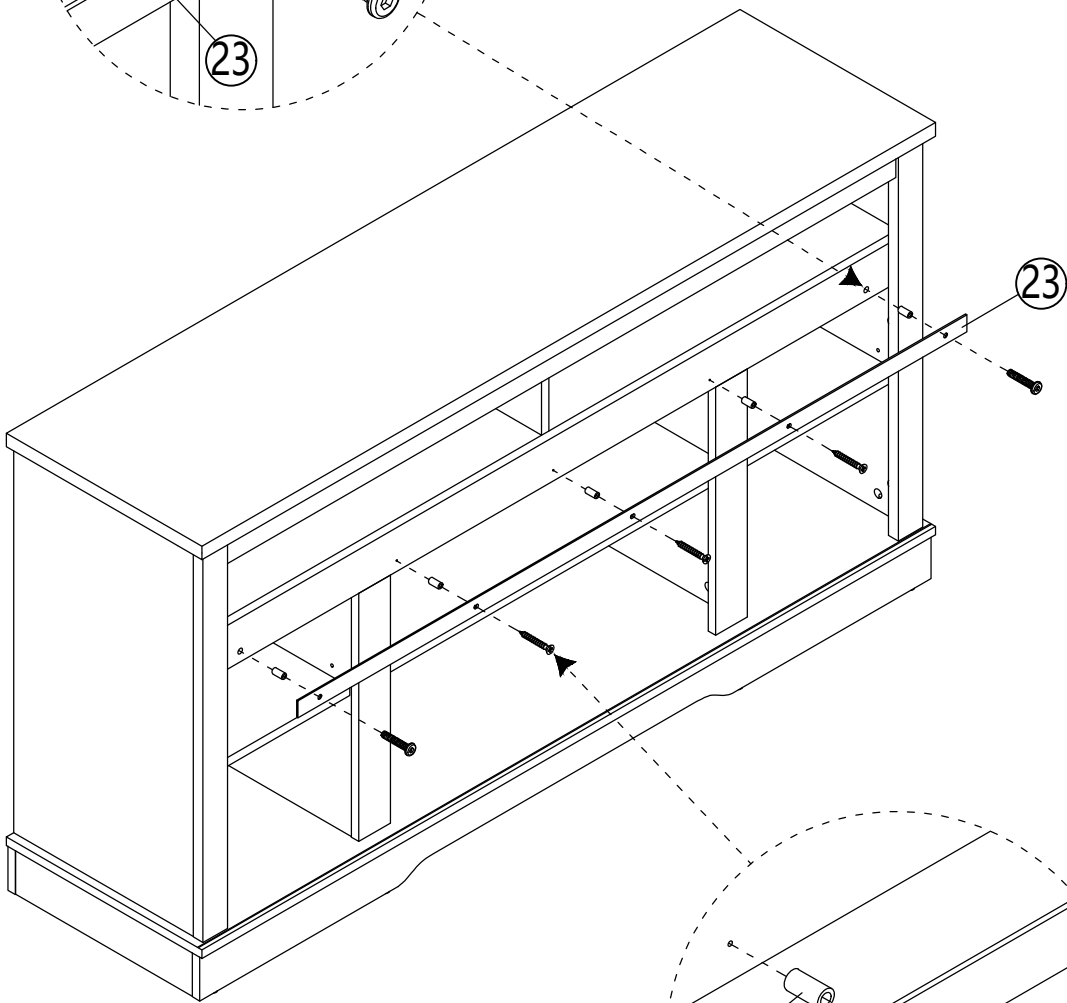
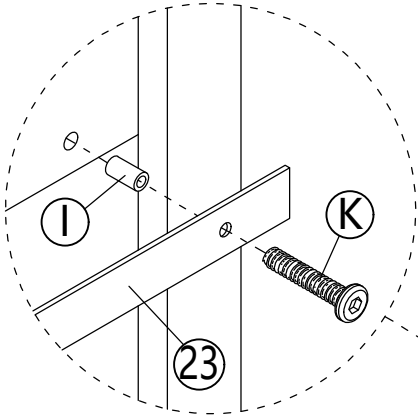
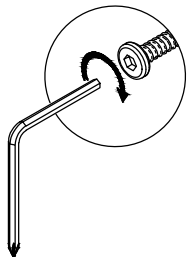


STEP 18

ⓐ	X12
	
ø5*16	

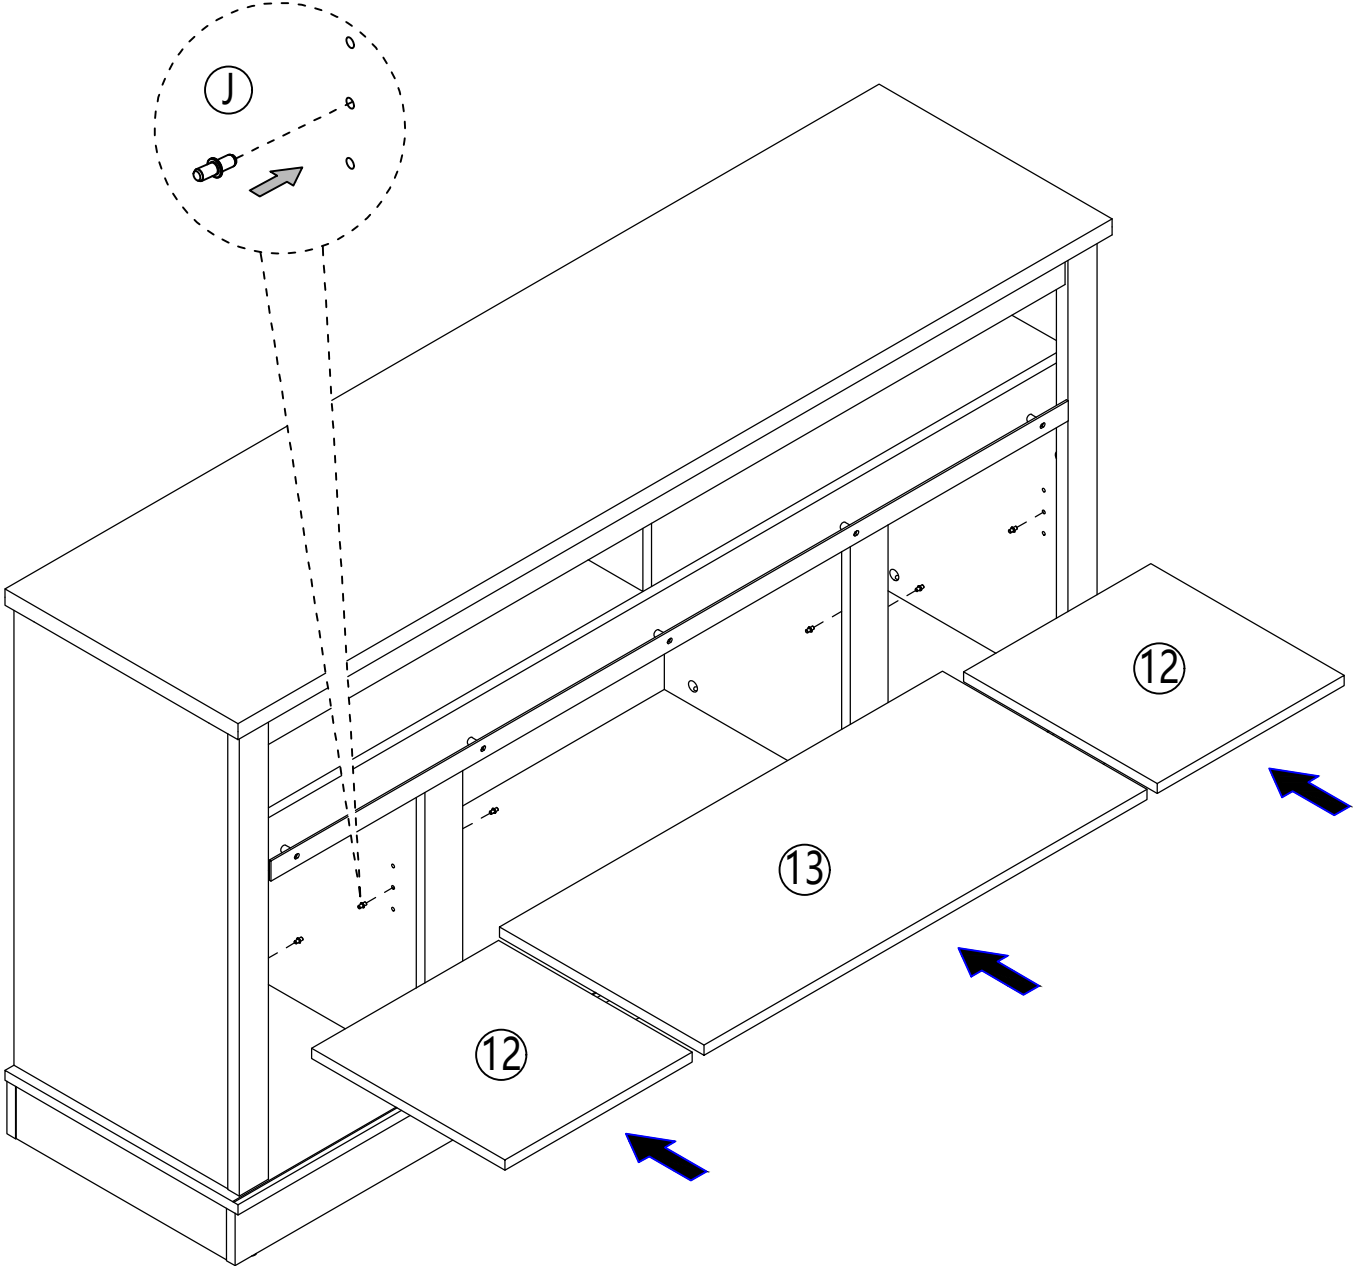


STEP 19

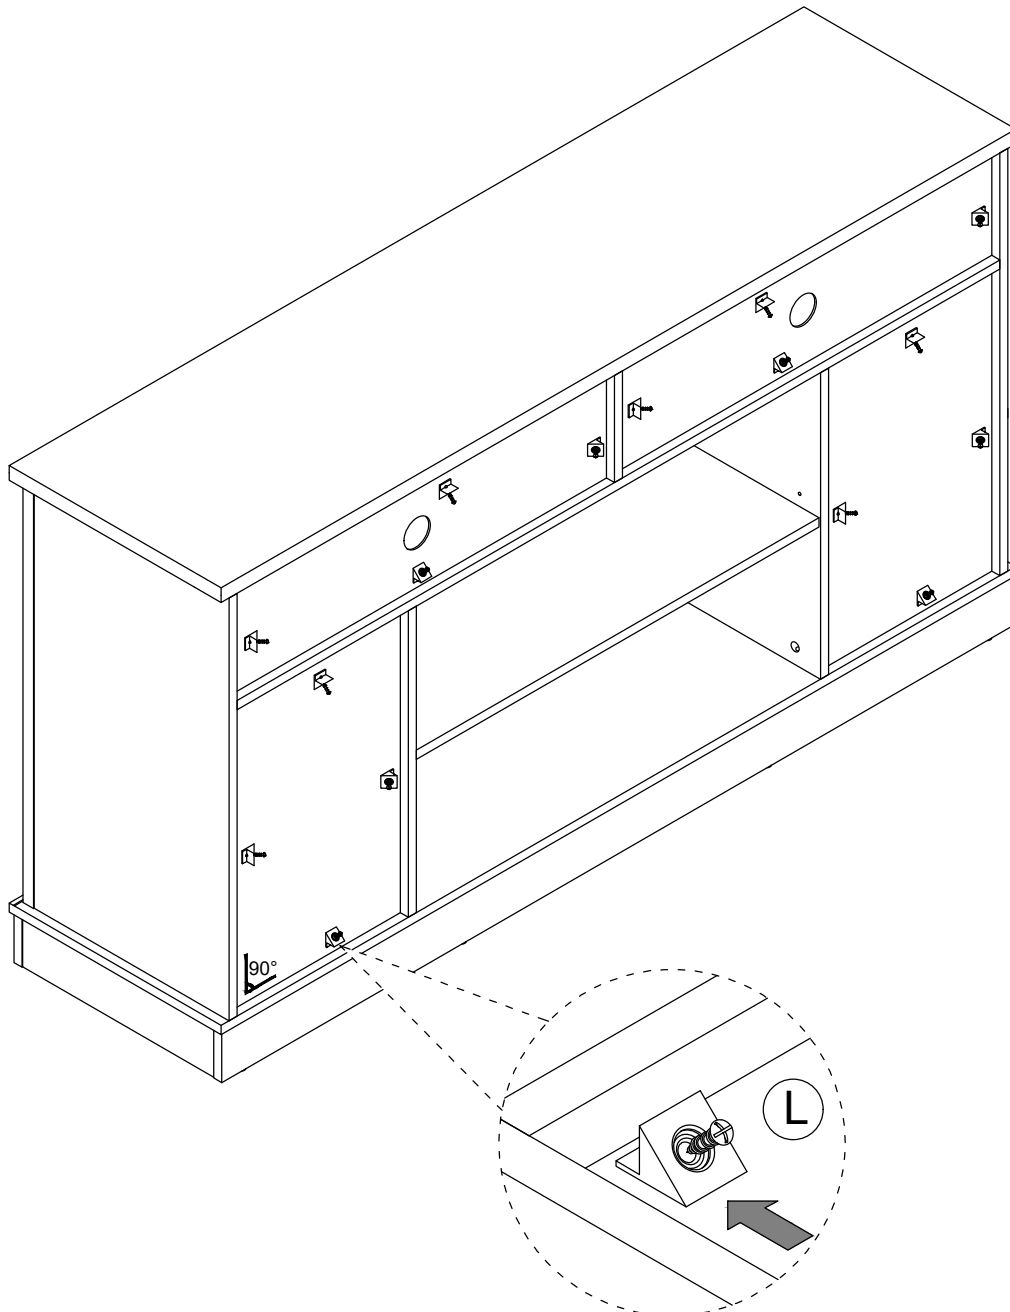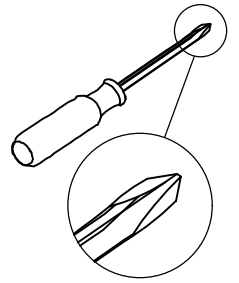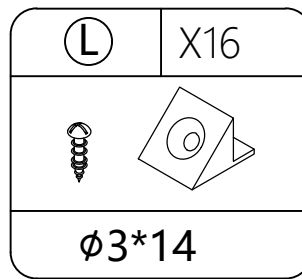

Insert the plastic buckle into the back plate slot, screw through the hole in the plastic buckle and lock it in place.



STEP 20

(F)	X8
	
M6*25	

(G)	X8
	
M6*10	



(H)	X2
	

The screws F on the door can be adjusted up and down

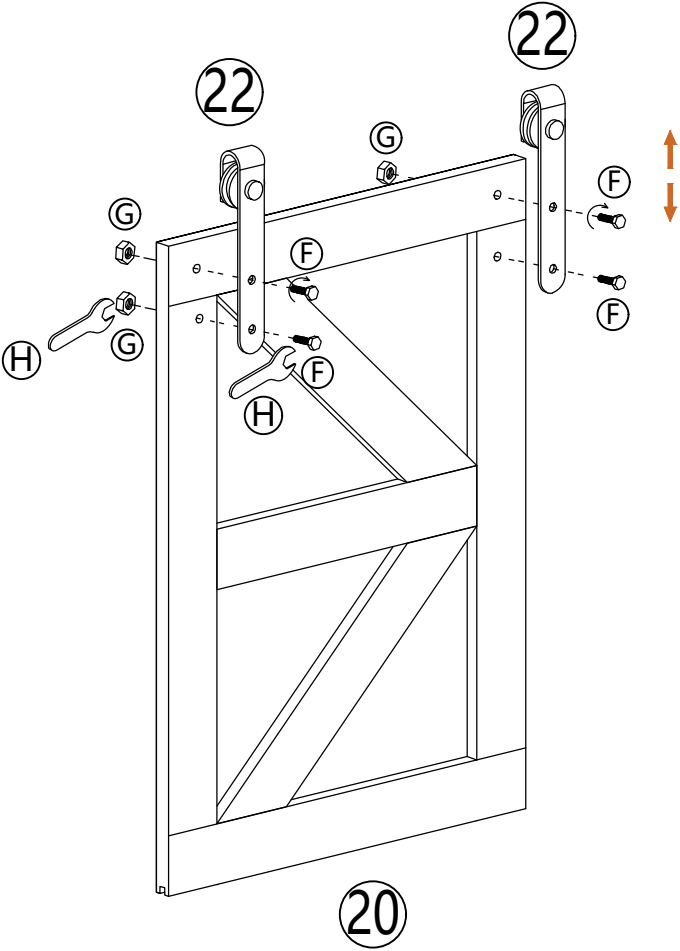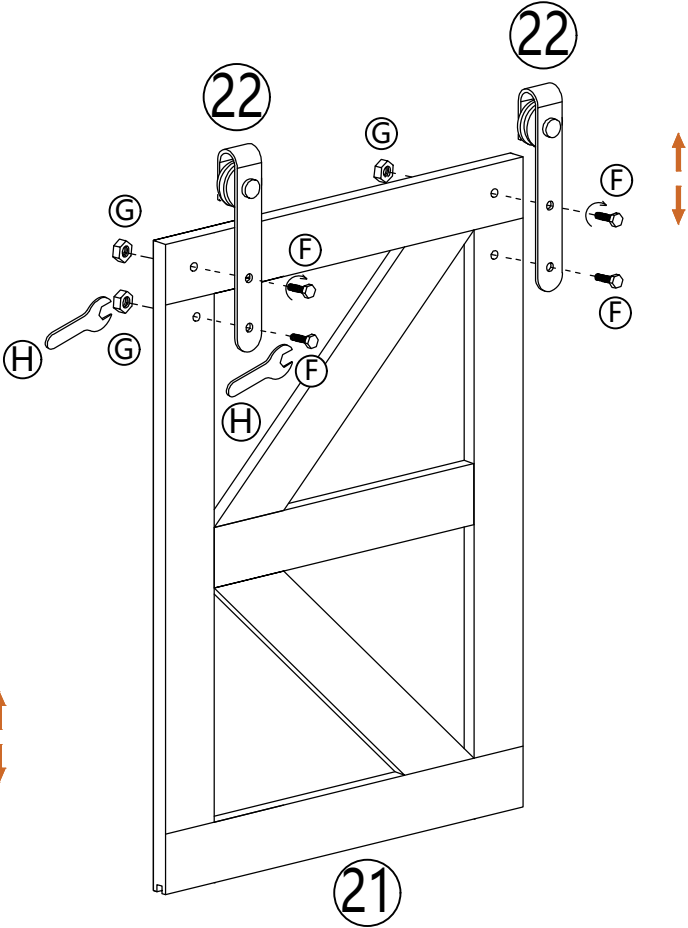


STEP 21


The screws F on the door can be adjusted up and down

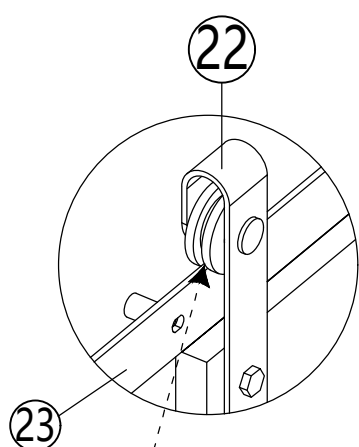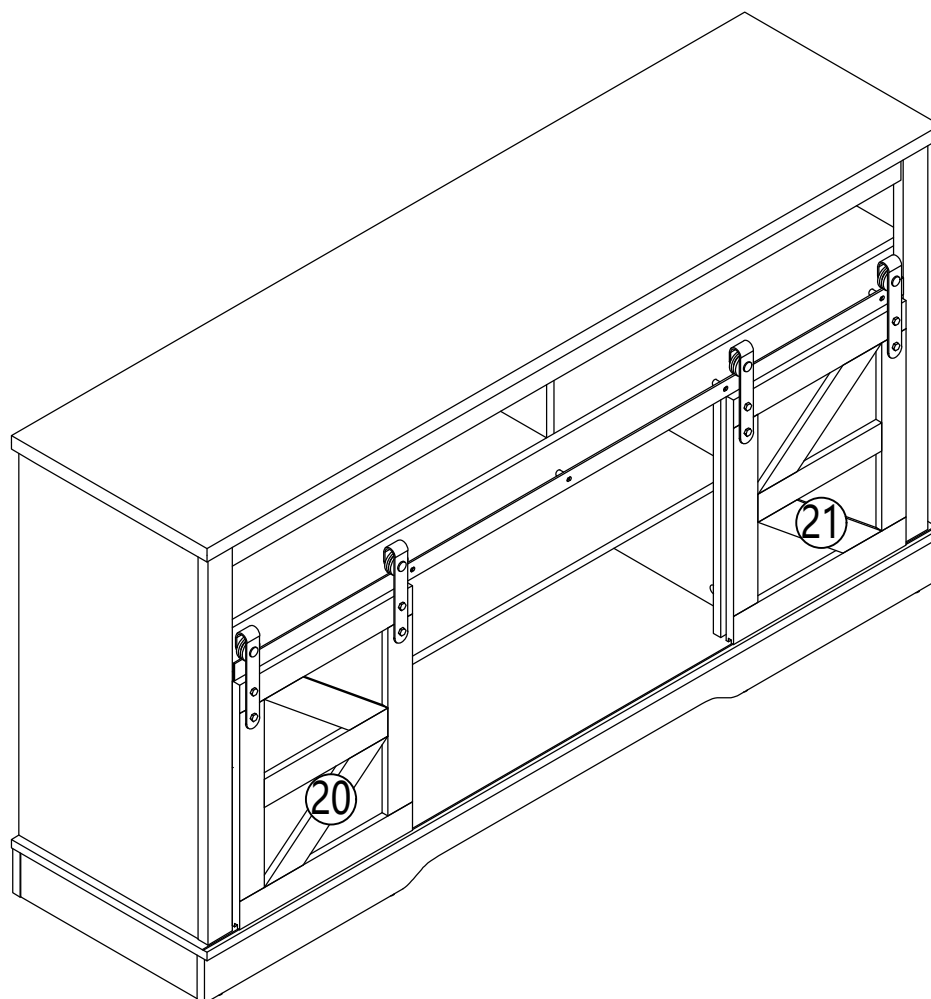

Align the No.22 part notch with the No.23 part upper port

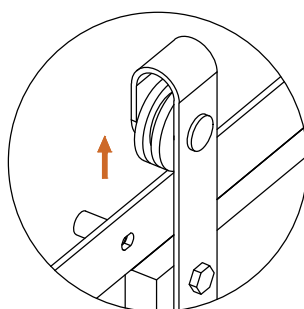


Part 20 moves up a bit overall

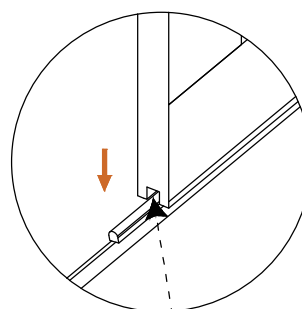

Make the No.20 component go down to Caokou and align it with the track

STEP 22

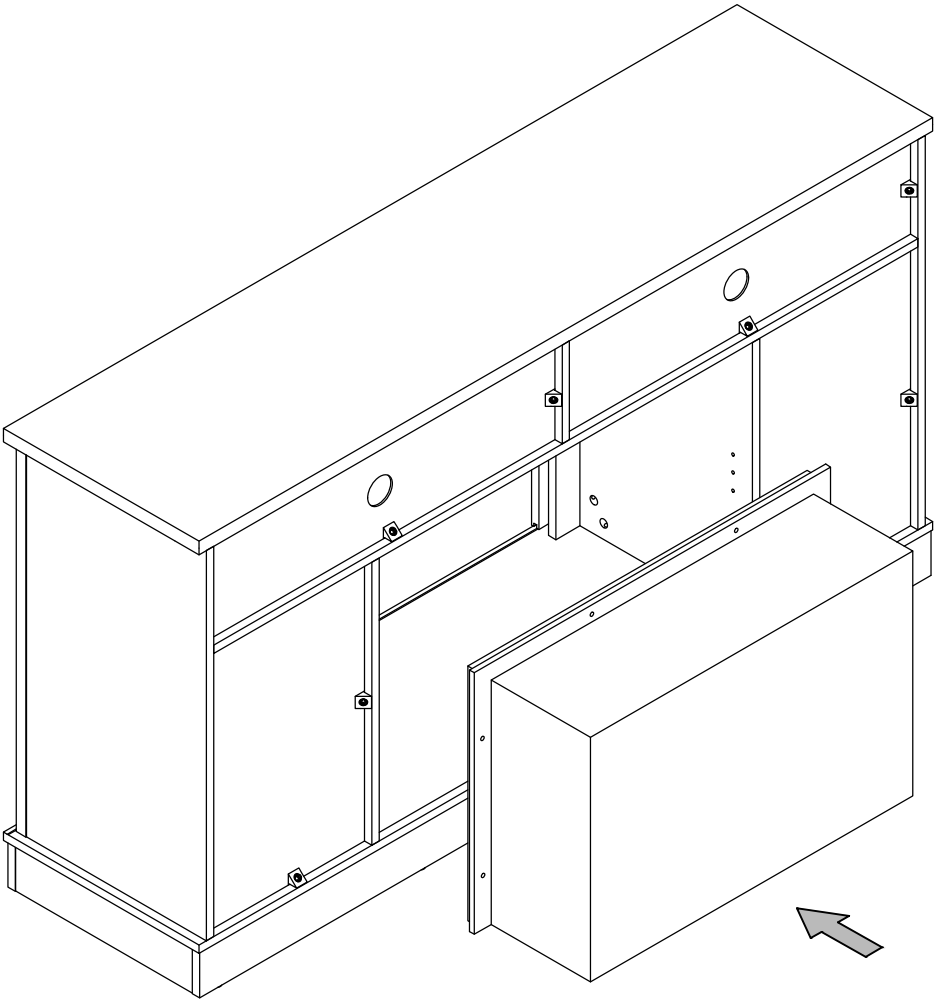

FURNITURE CARE AND MAINTENANCE

Particleboard

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

- . Tighten all bolts and screws again within the first 2 weeks of assembly
- . Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

- . Clean the surface of the particleboard with a lightly dampened cloth
- . Small amount of mild soap can be used if necessary
- . Dry the surface immediately after cleaning.
- . DO NOT use bleach or alcohol detergent to clean the surface.
- . DO NOT apply wood treatment on parts made with particleboard.

Particleboard will swell and distort when suffer damage.
Make sure to dry the furniture immediately after cleaning